# **Processor IP Reference Guide**

August 2004







"Xilinx" and the Xilinx logo shown above are registered trademarks of Xilinx, Inc. Any rights not expressly granted herein are reserved. CoolRunner, RocketChips, Rocket IP, Spartan, StateBENCH, StateCAD, Virtex, XACT, XC2064, XC3090, XC4005, and XC5210 are registered trademarks of Xilinx, Inc.



The shadow X shown above is a trademark of Xilinx, Inc.

ACE Controller, ACE Flash, A.K.A. Speed, Alliance Series, AllianceCORE, Bencher, ChipScope, Configurable Logic Cell, CORE Generator, CoreLINX, Dual Block, EZTag, Fast CLK, Fast CONNECT, Fast FLASH, FastMap, Fast Zero Power, Foundation, Gigabit Speeds...and Beyond!, HardWire, HDL Bencher, IRL, J Drive, JBits, LCA, LogiBLOX, Logic Cell, LogicORE, LogicProfessor, MicroBlaze, MicroVia, MultiLINX, NanoBlaze, PicoBlaze, PLUSASM, PowerGuide, PowerMaze, QPro, Real-PCI, RocketIO, SelectIO, SelectRAM, SelectRAM+, Silicon Xpresso, Smartguide, Smart-IP, SmartSearch, SMARTswitch, System ACE, Testbench In A Minute, TrueMap, UIM, VectorMaze, VersaBlock, VersaRing, Virtex-II Pro, Virtex-II EasyPath, Wave Table, WebFITTER, WebPACK, WebPOWERED, XABEL, XACT-Floorplanner, XACT-Performance, XACTstep Advanced, XACTstep Foundry, XAM, XAPP, X-BLOX +, XC designated products, XChecker, XDM, XEPLD, Xilinx Foundation Series, Xilinx XDTV, Xinfo, XSI, XtremeDSP and ZERO+ are trademarks of Xilinx, Inc.

The Programmable Logic Company is a service mark of Xilinx, Inc.

All other trademarks are the property of their respective owners.

Xilinx, Inc. does not assume any liability arising out of the application or use of any product described or shown herein; nor does it convey any license under its patents, copyrights, or maskwork rights or any rights of others. Xilinx, Inc. reserves the right to make changes, at any time, in order to improve reliability, function or design and to supply the best product possible. Xilinx, Inc. will not assume responsibility for the use of any circuitry described herein other than circuitry entirely embodied in its products. Xilinx provides any design, code, or information shown or described herein "as is." By providing the design, code, or information as one possible implementation of a feature, application, or standard, Xilinx makes no representation that such implementation is free from any claims of infringement. You are responsible for obtaining any rights you may require for your implementation. Xilinx expressly disclaims any warranty whatsoever with respect to the adequacy of any such implementation, including but not limited to any warranties or representations that the implementation is free from claims of infringement, as well as any implied warranties of merchantability or fitness for a particular purpose. Xilinx, Inc. devices and products are protected under U.S. Patents. Other U.S. and foreign patents pending. Xilinx, Inc. does not represent that devices shown or products described herein are free from patent infringement or from any other third party right. Xilinx, Inc. assumes no obligation to correct any errors contained herein or to advise any user of this text of any correction if such be made. Xilinx, Inc. will not assume any liability for the accuracy or correctness of any engineering or software support or assistance provided to a user.

Xilinx products are not intended for use in life support appliances, devices, or systems. Use of a Xilinx product in such applications without the written consent of the appropriate Xilinx officer is prohibited.

The contents of this manual are owned and copyrighted by Xilinx. Copyright 1994-2004 Xilinx, Inc. All Rights Reserved. Except as stated herein, none of the material may be copied, reproduced, distributed, republished, downloaded, displayed, posted, or transmitted in any form or by any means including, but not limited to, electronic, mechanical, photocopying, recording, or otherwise, without the prior written consent of Xilinx. Any unauthorized use of any material contained in this manual may violate copyright laws, trademark laws, the laws of privacy and publicity, and communications regulations and statutes.

# **Processor IP Reference Guide August 2004**

The following table shows the revision history for this document..

	Version	Revision
August 2002	1.0	Initial Xilinx release for EDK 3.1
October 2002	1.1	Add memory and peripheral cores
November 2002	1.2	Release for EDK 3.1 Service Pack 2
January 2003	1.3	Release for EDK 3.1 Service Pack 3
March 2003	1.4	Release for EDK 3.2
June 2003	1.5	Release for EDK 3.2 Service Pack 2
August 2003	1.6	Release for EDK 6.1
September 2003	1.7	Release for EDK 6.1 Service Pack 1
November 2003	1.8	Release for EDK 6.1 Service Pack 2
January 2004	1.9	Release for EDK 6.2 Service Pack 2
March 2004	2.0	Release for EDK 6.2 Service Pack 2 Gms1
June 2004	2.1	Release for EDK 6.2.2
August 2004	3.0	Release for EDK 6.3



# **Contents**

The *Processor IP Reference Guide* supports the Embedded Systems Design Kit (EDK) for MicroBlaze<sup>TM</sup> and Virtex-II Pro<sup>TM</sup>. For additional information, see the *Embedded Software Tools Guide* and the *PowerPC 405 Processor Reference Guide*.

#### Part I: Embedded Processor IP

**Chapter 1: OPB Usage in Xilinx FPGAs** 

Chapter 2: PLB Usage in Xilinx FPGAs

**Chapter 3: Processor Cores** 

- MicroBlaze (v2.10a)
- MicroBlaze (v3.00a)
- PPC405 Top (Wrapper) (v2.00b)
- PPC405 (Wrapper) (v2.00c)
- PPC405 Virtex-4 (Wrapper) (v1.00a)

#### **Chapter 4: Bus, Bridge, and Arbiter Infrastructure Cores**

- On-Chip Peripheral Bus v2.0 with OPB Arbiter (v1.10a)
- On-Chip Peripheral Bus v2.0 with OPB Arbiter (v1.10b)
- OPB PCI Arbiter
- OPB to PLB Bridge (v1.00c)
- OPB to OPB Bridge (Lite Version)
- OPB to DCR Bridge
- Processor Local Bus (PLB) v3.4
- Processor Local Bus (PLB) v3.4 (v1.02a)
- PLB to OPB Bridge (v1.00b)
- PLB to OPB Bridge (v1.01a)
- Device Control Register Bus (DCR) v2.9 (v1.00a)
- Processor System Reset Module
- Local Memory Bus (LMB) v1.0
- OPB Arbiter (v1.02c)
- Fast Simplex Link Channel (v1.00b)
- Fast Simplex Link (FSL) Bus (v2.00a)



- Digital Clock Manager (DCM) Module (v1.00a)
- Data Side OCM Bus V1.0 (v1.00b)
- Data Side OCM Bus (v2.00a)
- Instruction Side OCM Bus v1.0 (v1.00b)
- Instruction Side OCM Bus v1.0 (v2.00a)

#### Chapter 5: IPIF

- OPB IPIF Architecture (v1.23e)
  - OPB IPIF Interrupt (v1.23e)
  - OPB IPIF Packet FIFO (v1.23e)
  - Direct Memory Access and Scatter Gather (v1.23e) (v1.23e)
- OPB IPIF (v2.00h)
- OPB IPIF (v3.01a)
- PLB IPIF (v1.00e)
- PLB IPIF (v2.00a)
- PLB IPIF (v2.01a)
- Channelized Direct Memory Access and Scatter Gather

#### **Chapter 6: Memory Interface Cores**

- LMB Block RAM (BRAM) Interface Controller
- OPB External Memory Controller (EMC) (v1.10b)
- OPB Synchronous DRAM (SDRAM) Controller (v1.00c)
- OPB Synchronous DRAM (SDRAM) Controller (v1.00d)
- OPB Block RAM (BRAM) Interface Controller (v1.00a)
- OPB Double Data Rate (DDR) Synchronous DRAM (SDRAM) Controller (v1.00b)
- OPB Double Data Rate (DDR) Synchronous DRAM (SDRAM) Controller (v1.10a)
- OPB SYSACE (System ACE) Interface Controller (v1.00b)
- PLB External Memory Controller (EMC) (v1.10b)
- PLB External Memory Controller (EMC) (v2.00.a)
- PLB Synchronous DRAM (SDRAM) Controller (v1.00c)
- PLB Synchronous DRAM (SDRAM) Controller (v1.00d)
- PLB Block RAM (BRAM) Interface Controller (v1.00a)
- PLB Block RAM (BRAM) Interface Controller (v1.00b)
- PLB Double Data Rate (DDR) Synchronous DRAM (SDRAM) Controller (v1.00c)
- PLB Double Data Rate (DDR) Synchronous DRAM (SDRAM) Controller (v1.10a)
- PLB Double Data Rate (DDR) Synchronous DRAM (SDRAM) Controller (v1.11a)
- Data Side Block RAM (DSBRAM) Interface Controller (v2.00a)



- Data-Side BRAM Interface Controller (v3.00a)
- Instruction Side Block RAM (ISBRAM) Interface Controller (v2.00a)
- Instruction Side Block RAM (ISBRAM) Interface Controller (v3.00a)
- Block RAM (BRAM) Block (v1.00a)

#### **Chapter 7: Peripheral Cores**

- OPB Interrupt Controller (v1.00c)
- OPB 16550 UART
- OPB 16450 UART
- OPB UART Lite
- OPB JTAG\_UART
- OPB IIC Bus Interface (v1.01b)
- OPB IIC Bus Interface (v1.01c)
- OPB Serial Peripheral Interface (SPI)
- OPB IPIF/LogiCore v3 PCI Core Bridge (v1.00b)
- OPB IPIF/LogiCore v3 PCI Core Bridge (v1.00c)
- OPB Ethernet Media Access Controller (EMAC) (v1.00m)
- OPB Ethernet Media Access Controller (EMAC) (v1.01a)
- OPB Ethernet Lite Media Access Controller (v1.00a)
- OPB Ethernet Lite Media Access Controller (v1.01a)
- OPB Asynchronous Transfer Mode Controller (OPB\_ATMC) (v1.00b)
- OPB Asynchronous Transfer Mode Controller (OPB\_ATMC) (v2.00a)
- OPB Single Channel HDLC Interface (v1.00b)
- OPB Multi Channel HDLC Interface (v2.00a) (v2.00a)
- OPB Multi Channel HDLC Interface (v2.01a)
- OPB Timebase WDT (v1.00a)
- OPB Timer/Counter
- OPB General Purpose Input/Output (GPIO) (v1.00a)
- OPB General Purpose Input/Output (GPIO) (v2.00a)
- OPB General Purpose Input/Output (GPIO) (v3.01a)
- OPB Central DMA Controller (v1.00a)
- OPB Central DMA Controller (v1.00b)
- OPB Central DMA Controller (v1.00c)
- OPB Delta-Sigma Digital to Analog Converter (DAC) (v1.00a)
- OPB Delta-Sigma Analog to Digital Converter (ADC) (v1.00a)
- OPB System Monitor/ADC (v1.00.a)
- Channel FIFO (v1.00a)
- Fixed Interval Timer (FIT)
- MII to RMII (v1.00a)
- MII to RMII (v1.00b)



- PLB 1-Gigabit Ethernet Media Access Controller (MAC) with DMA (v1.00b)
- PLB 1-Gigabit Ethernet Media Access Controller (MAC) with DMA (v1.01a)
- PLB Ethernet Media Access Controller (PLB\_EMAC) (v1.00a)
- PLB Ethernet Media Access Controller (PLB\_EMAC) (v1.01a)
- PLB 16550 UART (v1.00c)
- PLB 16450 UART (v1.00c)
- PLB RapidIO LVDS (v1.00a) (v1.00a)
- PLB RapidIO LVDS (v1.00c)
- PLB Asynchronous Transfer Mode Controller (PLB\_ATMC) (v1.00a)
- PLB General Purpose Input/Output (GPIO) (v1.00b)
- DCR Interrupt Controller (v1.00b)

#### **Chapter 8: Utility Peripherals**

- Util Bus Split Operation
- Util Flip-Flop
- Util Reduced Logic (v1.00a)
- Util Vector Logic

#### Chapter 9: Debug and Verification

- Chipscope ICON
- Chipscope OPB IBA (Bus Analyzer) (v1.00a)
- Chipscope PLB IBA (Bus Analyzer) (v1.00a)
- Chipscope VIO (Virtual IO) (v1.00a)
- Chipscope Integrated Logic Analyzer (ILA) (v1.00a)
- OPB HWICAP
- Microprocessor Debug Module (MDM) (v1.00c)
- Microprocessor Debug Module (v2.00a)
- JTAG PPC Controller (v1.00b)
- JTAGPPC Controller (v2.00a)

#### Part II: Software

**Chapter 10: Device Driver Programmer Guide** 

Chapter 11: Tornado 2.x BSP User Guide

**Chapter 12: Device Driver Summary** 

Chapter 13: Automatic Generation of Tornado 2.x (VxWorks 5.x) Board Support Packages



# Part I: Embedded Processor IP

Part I of the *Processor IP Reference Guide* includes the following chapters:

Chapter 1, "OPB Usage in Xilinx FPGAs"

Chapter 2, "PLB Usage in Xilinx FPGAs"

Chapter 3, "Processor Cores"

Chapter 4, "Bus, Bridge, and Arbiter Infrastructure Cores"

Chapter 5, "IPIF"

Chapter 6, "Memory Interface Cores"

Chapter 7, "Peripheral Cores"

Chapter 8, "Utility Peripherals"

Chapter 9, "Debug and Verification"



# OPB Usage in Xilinx FPGAs

#### **Overview**

This chapter includes the following sections:

Xilinx OPB Usage

**Legacy OPB Devices** 

**OPB Usage Notes** 

**OPB** Comparison

For detailed information about the IBM OPB, you may register for the <a href="IBM CoreConnect Lounge">IBM CoreConnect Lounge</a> on the Xilinx web site to get access the the IBM CoreConnect documentation, or you may view the CoreConnect content on the <a href="IBM web site">IBM web site</a>.

The OPB is one element of IBM's CoreConnect architecture, and is a general-purpose synchronous bus designed for easy connection of on-chip peripheral devices. The OPB includes the following features:

- 32-bit or 64-bit data bus
- Up to 64-bit address
- Supports 8-bit, 16-bit, 32-bit, and 64-bit slaves
- Supports 32-bit and 64-bit masters
- Dynamic bus sizing with byte, halfword, fullword, and doubleword transfers
- Optional Byte Enable support
- Distributed multiplexer bus instead of 3-state drivers
- Single cycle transfers between OPB master and OPB slaves (not including arbitration)
- Support for sequential address protocol
- 16-cycle bus time-out (provided by arbiter)
- Slave time-out suppress capability
- Support for multiple OPB bus masters
- Support for bus parking
- Support for bus locking
- Support for slave-requested retry
- Bus arbitration overlapped with last cycle of bus transfers

The OPB is a full-featured bus architecture with many features that increase bus performance. You can use most of these features effectively in the FPGA architecture. However, some features can result in the inefficient use of FPGA resources or can lower system clock rates. Consequently, Xilinx uses an efficient *subset* of the OPB for Xilinx-developed OPB devices. However, because of the flexible nature of FPGAs, you can also implement systems utilizing OPB devices that are fully OPB V2.1 compliant.



# Xilinx OPB Usage

## **OPB Options**

## **Legacy Devices**

Previous to OPB V2.0, there was a single signaling protocol for OPB data transfers. This protocol (which is also present in OPB V2.0 and later specifications) supports dynamic bus sizing through the use of transfer qualifiers and acknowledge signals. The transfer qualifiers denote the size of the transfer initiated by the master, and the acknowledge signals indicate the size of the transfer from the slave. Devices that support this type of dynamic bus sizing are called *legacy devices*.

#### Byte-enable Devices

Starting with OPB V2.0, IBM introduced an optional, alternate transfer protocol based on Byte Enables. In the byte-enable architecture, each byte lane of the data bus has an associated byte enable signal. For each transfer, the byte enable signals indicate which byte lanes have valid data. This eliminates the need for separate transfer qualifiers that indicate the transfer size since all size information is contained in the byte enable signals. The byte-enable architecture does not permit dynamic bus sizing, since there is only one acknowledge signal for each transfer. The OPB V2.0 specification (and later) allows you to build systems that are legacy-only, byte-enable only, or mixed. Devices that only support the byte-enable signaling are called *byte-enable devices*.

#### **OPB V2.0 Devices**

Devices that support both byte-enable signaling and legacy signaling are called *OPB V2.0 devices*. Systems that have both legacy signaling and byte-enable signaling can perform dynamic bus sizing. Note that legacy devices do not support byte-enable transfers.

#### Xilinx OPB Devices

These various transfer protocols have several implications for Xilinx OPB device implementations.

#### Conversion Cycles

Dynamic bus sizing (as supported by legacy devices) results in *conversion cycles*, which are extra transfer cycles that re-transfer data when the master-initiated transfer is larger than the slave response. For example, in a legacy system, if a master writes a 32-bit word to a slave, and the 8-bit device slave responds that it only accepted 8-bits of the transfer, then the master must perform three additional conversion cycles to transfer all of the data to the slave. Generating conversion cycles requires more logic, increases the complexity of the master, and is not an efficient use of FPGA resources. The byte-enable architecture provides a simple alternative to this problem, and is easier to implement in an FPGA.

## Write Mirroring and Read Steering

Another consequence of supporting devices smaller than the bus size is *write mirroring* and *read steering*. In the OPB specification, devices smaller than the bus size are always left-justified (aligned toward the most significant side of the bus) so that the byte lanes associated with the smaller devices are easily determined. For example, a byte-wide peripheral is always located on the most-significant byte of the bus. The peripheral writes and reads data using this byte-lane. You can simplify the design of OPB masters by using a byte-enable only, no-write-mirroring architecture. A small degree of added complexity is required for peripherals that are smaller than the bus size if OPB masters do not mirror data.



#### Ideal FPGA Implementation of OPB-based System

The ideal FPGA implementation of an OPB-based system has the following features:

- Requires no conversion cycles
- Uses only the byte-enable architecture as specified in the OPB specification
- Does not require masters to mirror write data

These characteristics help determine how Xilinx-developed OPB devices are implemented. The detailed specifications that describe how the OPB is used in Xilinx intellectual property are provided in the next section.

## Specifications for OPB Usage in Xilinx-developed OPB Devices

Xilinx-developed OPB devices adhere to the following OPB usage rules:

- The width of the OPB data buses and address buses is 32 bits. Note that some peripherals may parameterize these widths, but currently only 32-bit buses are supported. Peripherals that are smaller than 32-bits can be attached to the OPB with a corresponding restriction in addressing. For example, an 8-bit peripheral at base address A can be attached to byte lane 0, but can only be addressed at A, A+4, A+8, and so on.
- All OPB devices (masters and slaves) are byte-enable devices. These devices do not support the legacy data transfer signals and therefore do not support dynamic bus sizing. OPB masters do not mirror data to unused byte lanes. See Figure 1-1 for the byte lane usage for aligned transfers.
- All OPB devices (masters and slaves) are required to output logic zero when they are
  inactive. This eliminates the need for the Mn\_DBusEn and Sln\_DBusEn signals
  external to the master or slave. The enable function is still implemented within the
  device.
- To obtain better timing in the FPGA implementation of the OPB, the OPB\_timeout signal is registered. This means that all slaves must assert Sl\_xferAck or Sl\_retry on or before the rising edge of the 16th clock cycle after the assertion of OPB\_select. If an OPB slave wishes to assert Sl\_toutSup, Sl\_toutSup must be asserted on or before the rising edge of the 15th clock after the assertion of OPB\_select.



• The byte-enables and the least-significant address bits are driven by all masters and contain consistent information. Examples of byte lane usage for aligned transfers are shown in the following figure:

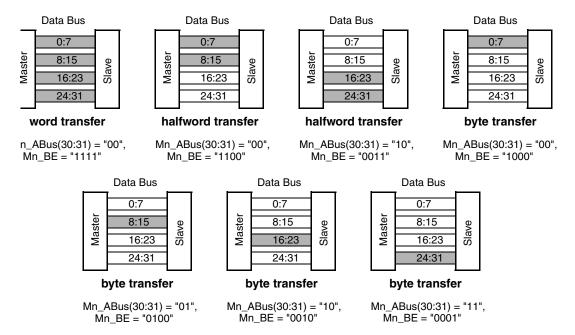


Figure 1-1: Byte lane usage for aligned transfers

All OPB slave devices that require a continuous address space (use of all byte lanes)
will implement an attachment to the OPB bus that is as wide as the OPB data width,
regardless of device width. This eliminates the need for left justification on the OPB
bus and eliminates the need for masters to mirror write data.

As an example, consider an 8-bit memory device that must be addressed at consecutive byte addresses being attached to a 32-bit OPB. The 8-bit memory device must implement a 32-bit wide attachment to the OPB; in the bus attachment, data is steered from the proper byte lane into the 8-bit device for writes, and from the 8-bit device onto the proper byte lane for reads.

The simplest way to accomplish this is with a multiplexer for steering the writes, and a connection from the 8-bit device to all byte lanes (essentially mirroring to all byte lanes) for reads.

- By convention, registers in all OPB slave devices are aligned to word boundaries (lowest two address bits are "00"), regardless of the size of the data in the register or the size of the peripheral.
- Master and Slave I/O: OPB masters adhere to the signal set shown in Table 1-1. OPB slaves adhere to the signal set shown in Table 1-2. Devices that are both master and slave adhere to the signal set shown in Table 1-3. Page numbers referenced in the tables apply to both the OPB V2.0 specification and the OPB V2.1 specification, both from IBM. All signals shown must be present, except for the one signal shown as optional (<Master>\_DBus[0:31] for devices that are both master and slave). No additional signals for OPB interconnection may be added. The naming convention is as follows: <Master> represents a master name or acronym that starts with an uppercase letter, <Slave> represents a slave name or acronym that starts with an upper-case letter. <nOPB> represents an OPB identifier (for masters or slaves with more than OPB attachment) and must start with an uppercase letter and end with upper-case



"OPB". For devices with a single OPB attachment, the <nOPB> identifier should default to "OPB" (for example, OPB\_ABus). All other parts of the signal name must be referenced exactly as shown (including case).

Table 1-1: Summary of OPB master-only I/O

Signal	I/O	Description	Page (in Ref. 1)
<nopb>_Clk</nopb>	I	OPB Clock	
<nopb>_Rst</nopb>	I	OPB Reset	
<master>_ABus[0:31]</master>	О	Master address bus	OPB-11
<master>_BE[0:3]</master>	О	Master byte enables	OPB-16
<master>_busLock</master>	О	Master buslock	OPB-9
<master>_DBus[0:31]</master>	О	Master write data bus	OPB-13
<master>_request</master>	О	Master bus request	OPB-8
<master>_RNW</master>	О	Master read, not write	OPB-12
<master>_select</master>	О	Master select	OPB-12
<master>_seqAddr</master>	О	Master sequential address	OPB-13
<nopb>_DBus[0:31]</nopb>	I	OPB read data bus	OPB-13
<nopb>_errAck</nopb>	I	OPB error acknowledge	OPB-15
<nopb>_MGrant</nopb>	I	OPB bus grant	OPB-9
<nopb>_retry</nopb>	I	OPB bus cycle retry	OPB-10
<nopb>_timeout</nopb>	I	OPB timeout error	OPB-10
<nopb>_xferAck</nopb>	I	OPB transfer acknowledge	OPB-14

Table 1-2: Summary of OPB Slave-only I/O

Signal	I/O	Description	Page (in Ref. 1)
<nopb>_Clk</nopb>	I	OPB Clock	
<nopb>_Rst</nopb>	I	OPB Reset	
<slave>_DBus[0:31]</slave>	О	Slave data bus	OPB-11
<slave>_errAck</slave>	О	Slave error acknowledge	OPB-15
<slave>_retry</slave>	О	Slave retry	OPB-10
<slave>_toutSup</slave>	О	Slave timeout suppress	OPB-15
<slave>_xferAck</slave>	О	Slave transfer acknowledge	OPB-14
<nopb>_ABus[0:31]</nopb>	I	OPB address bus	OPB-11
<nopb>_BE</nopb>	I	OPB byte enable	OPB-16
<nopb>_DBus[0:31]</nopb>	I	OPB data bus	OPB-13



Table 1-2: Summary of OPB Slave-only I/O (Continued)

Signal	I/O	Description	Page (in Ref. 1)
<nopb>_RNW</nopb>	I	OPB read/not write	OPB-12
<nopb>_select</nopb>	I	OPB select	OPB-12
<nopb>_seqAddr</nopb>	I	OPB sequential address	OPB-13

Table 1-3: Summary of OPB Master/Slave Device I/O

Signal	I/O	Description	Page (in Ref. 1)
<nopb>_Clk</nopb>	I	OPB Clock	
<nopb>_Rst</nopb>	I	OPB Reset	
<master>_ABus[0:31]</master>	О	Master address bus	OPB-11
<master>_BE[0:3]</master>	О	Master byte enables	OPB-16
<master>_busLock</master>	О	Master buslock	OPB-9
<master>_DBus[0:31]</master>	О	Master write data bus (optional)	OPB-13
<master>_request</master>	О	Master bus request	OPB-8
<master>_RNW</master>	О	Master read, not write	OPB-12
<master>_select</master>	О	Master select	OPB-12
<master>_seqAddr</master>	О	Master sequential address	OPB-13
<nopb>_DBus[0:31]</nopb>	I	OPB read data bus	OPB-13
<nopb>_errAck</nopb>	I	OPB error acknowledge	OPB-15
<nopb>_MGrant</nopb>	I	OPB bus grant	OPB-9
<nopb>_retry</nopb>	I	OPB bus cycle retry	OPB-10
<nopb>_timeout</nopb>	I	OPB timeout error	OPB-10
<nopb>_xferAck</nopb>	I	OPB transfer acknowledge	OPB-14
<slave>_DBus[0:31]</slave>	O	Slave data bus (may optionally function as master write data bus if <master>_DBus not present)</master>	OPB-11
<slave>_errAck</slave>	О	Slave error acknowledge	OPB-15
<slave>_retry</slave>	О	Slave retry	OPB-10
<slave>_toutSup</slave>	О	Slave timeout suppress	OPB-15
<slave>_xferAck</slave>	О	Slave transfer acknowledge	OPB-14
<nopb>_ABus[0:31]</nopb>	I	OPB address bus	OPB-11
<nopb>_BE</nopb>	I	OPB byte enable	OPB-16
<nopb>_RNW</nopb>	I	OPB read/not write	OPB-12
<nopb>_select</nopb>	I	OPB select	OPB-12
<nopb>_seqAddr</nopb>	I	OPB sequential address	OPB-13
	1	·	



#### Additional Notes on Signal Sets

- Xilinx-developed OPB devices do not support dynamic bus sizing and consequently do not use the following legacy signals: Mn\_dwXfer, Mn\_fwXfer, Mn\_hwXfer, Sln\_dwAck, Sln\_fwAck, and Sln\_hwAck.
- Since Xilinx-developed OPB devices are byte-enable only, the Mn\_beXfer and Sln\_beAck signals are not required and so are not used.
- The signals required for masters and slaves are separate from the signals present in the OPB interconnect. The OPB interconnect (the OR gates and other logic required to connect OPB devices) supports the full OPB V2.1 specification (i.e. all signals are present). Thus the OPB interconnect does not limit a design to byte-enable devices and supports designs in which a mix of byte-enable, legacy, and OPB V2.0 devices are present. The bus interconnect does not limit the use of any feature of the V2.1 specification.

# **Legacy OPB Devices**

Although byte-enable devices are the preferred and most efficient OPB devices in Xilinx devices, some designs may also use legacy OPB devices or fully V2.0 compliant devices. However, a legacy device cannot communicate directly with a byte-enable device because they use different signal sets. An interface layer between the byte-enable device and the legacy device is required. This interface is called the Byte Enable Interface (BEIF) device.



## Mixed Systems

The system shown in the following figure represents a design with a mix of byte-enable, legacy, and OPB V2.0 devices. The BEIF device converts the legacy-type signals to byte-enable-type signals and vice versa.

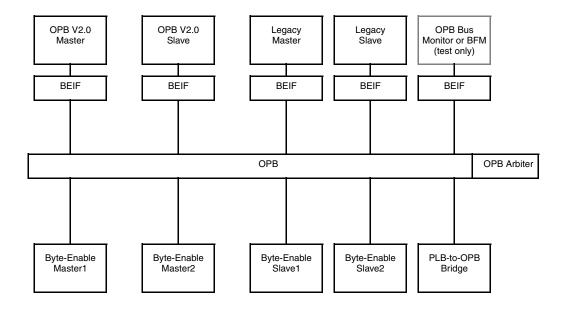


Figure 1-2: OPB Interconnect with Mixed Device Types

The BEIF device contains the following logic, not all of which must be used in all situations:

- Signal translation for byte-enable device to legacy device transfers: <Master>\_BE is translated to the appropriate <Master>\_hwXfer, <Master>\_fwXfer, and <Master>\_dwXfer. <nOPB>\_BE is translated to the appropriate <nOPB>\_hwXfer, <nOPB>\_fwXfer, and <nOPB>\_dwXfer. <Slave>\_hwXfer, <Slave>\_fwXfer, and <Slave>\_dwXfer are translated to <Slave>\_xferAck. <nOPB>\_hwXfer, <nOPB>\_fwXfer, and <nOPB>\_dwXfer are translated to <nOPB>\_xferAck. The correct lower address bits are also generated.
- Signal translation for legacy device to byte-enable device transfers: <Master>\_hwXfer, <Master>\_fwXfer, and <Master>\_dwXfer are translated to <Master>\_BE .
   <nOPB>\_hwXfer, <nOPB>\_fwXfer, and <nOPB>\_dwXfer are translated to <nOPB>\_BE . <Slave>\_xferAck is translated to <Slave>\_hwXfer, <Slave>\_fwXfer, and <Slave>\_dwXfer. <nOPB>\_xferAck is translated to <nOPB>\_hwXfer, <nOPB>\_fwXfer, <nOPB>\_fwXfer.
- Mirroring and steering logic.
- Conversion cycle generator for byte-enable device to legacy device transfers.

With this architecture, systems that do not require full V2.1 features (for example, systems that contain only Xilinx IP) do not need to instantiate the BEIF and hence optimally use the available FPGA resources. Systems that require legacy or OPB V2.0 devices must instantiate the BEIF, although the most costly part of the BEIF (the conversion cycle generator) only needs to be instantiated if conversion cycles are possible (not all slaves will cause generation of conversion cycles).



# **OPB Usage Notes**

The following are general notes on OPB usage that apply primarily to mixed systems:

- Conversion cycles are only required when a master generates a transfer request to a slave that is larger than the slave's width and the slave is capable of indicating that it accepted a smaller transfer than the master requested hence requiring with a conversion cycle.
- Byte-enable masters cannot directly generate conversion cycles. They require a conversion cycle generator in the Byte Enable Interface (BEIF) device. This is because byte-enable masters do not receive any size information in the acknowledge from the slave.
- Byte-enable slaves cannot cause generation of conversion cycles. A consequence of this is that any master accessing a byte-enable slave can only transfer data up to the size of the slave. Transfers larger than the slave size will result in either 1) no response from the slave (time-out), 2) an errAck from the slave, or 3) lost data; the actual result depends on how the decode and acknowledge logic is implemented in the slave.
- Conversion cycle generator logic in the BEIF is required only for byte-enable device to legacy/OPB V2.0 device transfers.
- Write mirroring and read steering in the V2.1 specification is based on left-justified peripherals. A more complex slave attachment can be used instead of left justification.

# **OPB Comparison**

Table 1-4 illustrates the major embedded processor bus architectures used in Xilinx FPGAs and lists some of their characteristics. Each bus has different capabilities in terms of data transfer rates, multi-master capability, and data bursting. The use of a particular bus is dictated by the processor used, the data bandwidth required in the application, and availability of peripherals. The OPB is a general-purpose peripheral bus that can be effectively used in many design situations.

PLB - Processor Local Bus (IBM). PLB Reference

OPB - On-chip Peripheral Bus (IBM). OPB Reference

OCM - On-chip Memory interface (IBM). OCM Reference

LMB - Local Memory Bus (Xilinx). MicroBlaze Processor Reference Guide

DCR - Device Control Register bus (IBM). DCR Reference

Table 1-4: Comparison of buses used in Xilinx Embedded Processor Systems

Feature	Core	eConnect Bu	Other Buses		
reature	PLB	ОРВ	DCR	ОСМ	LMB
Processor family	PPC405	PPC405, MicroBlaze	PPC405	PPC405	MicroBlaze
Data bus width	64	32	32	32	32
Address bus width	32	32	10	32	32
Clock rate, MHz (max) <sup>1</sup>	100	125	125	375	125
Masters (max)	16	16	1	1	1
Masters (typical)	2-8	2-8	1	1	1
Slaves (max) <sup>2</sup>	16	16	16	1	1
Slaves (typical)	2-6	2-8	1-8	1	1
Data rate (peak) <sup>3</sup>	1600 MB/s	500 MB/s	500 MB/s	500 MB/s	500 MB/s



Table 1-4: Comparison of buses used in Xilinx Embedded Processor Systems (Continued)

Feature	Cor	eConnect Bu	Other Buses		
reature	PLB	ОРВ	DCR	ОСМ	LMB
Data rate (typical) <sup>4</sup>	533 MB/s <sup>5</sup>	167 MB/s <sup>6</sup>	$100 \mathrm{MB/s^8}$	$333 \mathrm{MB/s^7}$	333 MB/s <sup>8</sup>
Concurrent read/write	Yes	No	No	No	No
Address pipelining	Yes	No	No	No	No
Bus locking	Yes	Yes	No	No	No
Retry	Yes	Yes	No	No	No
Timeout	Yes	Yes	No	No	No
Fixed burst	Yes	No	No	No	No
Variable burst	Yes	No	No	No	No
Cache fill	Yes	No	No	No	No
Target word first	Yes	No	No	No	No
FPGA resource usage	High	Medium	Low	Low	Low
Compiler support for load/store	Yes	Yes	No	Yes	Yes

#### Notes:

- Maximum clock rates are estimates and are presented for comparison only. The actual maximum clock rate for each bus
  is dependent on device family, device speed grade, design complexity, and other factors.
- 2. Max value set by maximum allowed parameter value specified in the core. Actual bus specification does not limit this value.
- 3. Peak data rate is the maximum theoretical data transfer rate at the clock rate shown for each bus.
- 4. The typical data rates are intended to illustrate data rates that are representative of actual system configurations. The typical data is highly dependent on the application software and system hardware configuration.
- 5. Assumes primarily cache-line fills, minimal read/write concurrency (66.7% bus utilization).
- 6. Assumes minimal use of sequential address capabilities and 3 clock cycles per OPB transfer.
- 7. The OCM controller operates at the PPC405 core clock rate, but its data transfer rate is limited by the access time of the on-chip memory. The typical data rate assumes 66.7% bus utilization.
- 8. Assumes 66.7% bus utilization.
- 9. Assumes DCR operates at same clock rate as PLB and each DCR access requires 5 clock cycles. The number of clock cycles per DCR transfer is dependent on how many DCR devices are present in the system. Each additional DCR device adds latency to all DCR transfers.

# **Document Revision History**

Date	Version	Revision
10/17/01	1.0	Initial Xilinx version.
10/19/01	1.1	Minor editorial changes. Added links to bus references.
12/10/01	1.2	Changed Figure 2 and other minor edits.
3/20/02	1.3	Updated for MDK 2.2
01/26/04	1.4	Updated copyright.



# PLB Usage in Xilinx FPGAs

# **Summary**

This chapter describes how to use the IBM Processor Local Bus (PLB) in Xilinx FPGAs, and provides guidelines and simplifications for efficient FPGA implementations, and the set of signals used in Xilinx-developed PLB devices. The following sections are included:

This chapter includes the following sections:

Xilinx PLB Usage

**PLB Comparison** 

#### **Overview**

For detailed information on the IBM PLB, you may register for the <u>IBM CoreConnect</u> <u>Lounge</u> on the Xilinx web site to get access the the IBM CoreConnect documentation, or you may view the CoreConnect content on the <u>IBM web site</u>.

The PLB is one element of IBM's CoreConnect architecture, and is a high-performance synchronous bus designed for connection of processors to high-performance peripheral devices. The PLB includes the following features (from 64-bit Processor Local Bus, Architecture Specifications):

- Overlapping of read and write transfers allows two data transfers per clock cycle for maximum bus utilization.
- Decoupled address and data buses support split-bus transaction capability for improved bandwidth.
- Address pipelining reduces overall bus latency by allowing the latency associated with a new request to be overlapped with an ongoing data transfer in the same direction.
- Late master request abort capability reduces latency associated with aborted requests.
- Hidden (overlapped) bus request/grant protocol reduces arbitration latency.
- Bus architecture supports sixteen masters and any number of slave devices.
- Four levels of request priority for each master allow PLB implementations with various arbitration schemes.
- Bus arbitration-locking mechanism allows for master-driven atomic operations.
- Support for 16-, 32-, and 64-byte line data transfers.
- Read word address capability allows slave devices to fetch line data in any order (that is, target word-first or sequential).
- Sequential burst protocol allows byte, halfword, and word burst data transfers in either direction.
- Guarded and unguarded memory transfers allow a slave device to enable or disable



the pre-fetching of instructions or data.

The PLB is a full-featured bus architecture with many features that increase bus performance. Most of these features map well to the FPGA architecture, however, some can result in the inefficient use of FPGA resources or can lower system clock rates. Consequently, Xilinx uses an efficient *subset* of the PLB for Xilinx-developed PLB devices. However, because of the flexible nature of FPGAs, you can also implement systems utilizing PLB devices that are fully PLB V3.5 compliant.

# Xilinx PLB Usage

# **Dynamic Bus Sizing**

Dynamic bus sizing is a PLB architectural feature that allows a designer to mix 32 and 64-bit devices on the same 64-bit PLB. A master provides a master size signal, <Master>\_MSize[0:1], that describes the data width of the master initiating a transaction. Slaves provide a similar signal, Sl\_Mn\_SSize(0:1), with the address acknowledge that describes the data width of the slave that is responding to the transaction. While dynamic bus sizing is a useful architectural feature, its use in FPGAs can result in inefficient implementations of PLB masters.

## Conversion Cycles

Dynamic bus sizing results in *conversion cycles*, which are extra transfer cycles that retransfer data when the master-initiated transfer is larger than the slave response. For example, if a master writes a 64-bit word to a slave, and the 32-bit device slave responds with a slave size of 32-bits, then the master must perform an additional conversion cycle to transfer all of the data to the slave. Generating conversion cycles requires more logic, increases the complexity of the master, and is typically not an efficient use of FPGA resources.

## Write Mirroring and Read Steering

Another consequence of supporting devices smaller than the bus size is *write mirroring* and *read steering*. In the PLB specification, devices smaller than the bus size are always left-justified (aligned toward the most significant side of the bus) so that the byte lanes associated with the smaller devices are easily determined. For example, a word-wide peripheral is always located on the most-significant word of the 64-bit bus. The peripheral writes and reads data using only the four most significant byte lanes. You can simplify the design of PLB masters by using an architecture that requires no write mirroring and transfers data based on which byte enables are active. A small degree of added complexity is required in the bus attachment for peripherals that are smaller than the bus size if PLB masters do not mirror data. This additional logic is built into the parameterizable slave attachment in each Xilinx peripheral.

#### Xilinx PLB Devices

#### Ideal FPGA Implementation of PLB-based System

The ideal FPGA implementation of a PLB-based system has the following features:

- Requires no conversion cycles
- Does not require masters to mirror write data

These characteristics help determine how Xilinx-developed PLB devices are implemented. The detailed specifications that describe how the PLB is used in Xilinx intellectual property are provided in the next section.



# Specifications for PLB Usage in Xilinx-developed PLB Devices

Xilinx-developed PLB devices adhere to the following PLB usage rules:

- The width of the PLB data buses is 64 bits and the width of address buses is 32 bits. Note that some peripherals may parameterize these widths, but currently only 64-bit data buses are supported. Peripherals that are smaller than 64-bits can be attached to the PLB with a corresponding restriction in addressing. For example, a 32-bit peripheral at base address A can be attached to byte lanes 0 4, but word-wide accesses can only be addressed at A, A+8, A+16, etc.
- PLB masters are not required to support dynamic bus sizing. PLB masters are not required to mirror data to unused byte lanes. See Figure 2-1 and Figure 2-2 for the byte lane usage for aligned transfers. PLB Masters are required to correctly drive the <Master>\_MSize[0:1] signals. PLB slaves are required to correctly drive the <Slave>\_SSize[0:1] signals for PLB masters that do provide conversion cycles (such as the PowerPC 405).
- All PLB slaves are required to output logic zero when they are inactive.
- The byte-enables and the least-significant address bits are driven by all masters and contain consistent information. Examples of byte lane usage for aligned transfers are shown in Figure 2-1 and Figure 2-2.

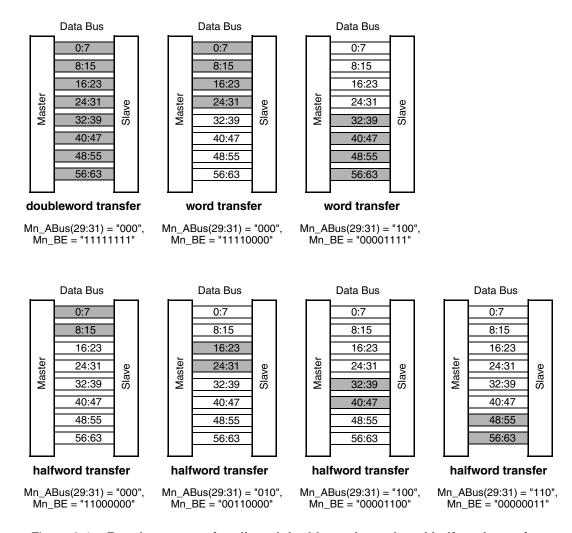


Figure 2-1: Byte lane usage for aligned doubleword, word, and halfword transfers



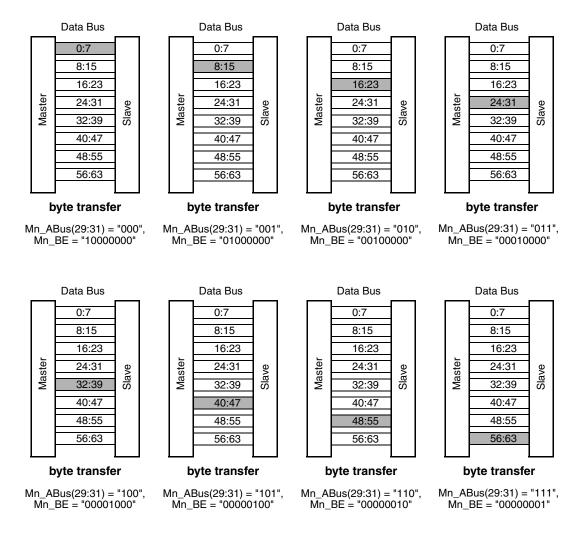


Figure 2-2: Byte lane usage for byte transfers

- All PLB slave devices that require a continuous address space (i.e. use of all byte lanes) will implement an attachment to the PLB bus that is as wide as the PLB data width, regardless of device width. This eliminates the need for left justification on the PLB bus and eliminates the need for masters to mirror write data. As an example, consider a 32-bit memory device that must be addressed at consecutive byte addresses being attached to a 64-bit PLB. The 32-bit memory device must implement a 64-bit wide attachment to the PLB; in the bus attachment, data is steered from the proper byte lanes into the 32-bit device for writes, and from the 32-bit device onto the proper byte lanes for reads.
- By convention, registers in all PLB slave devices are aligned to word boundaries (lowest two address bits are "00"), regardless of the size of the data in the register or the size of the peripheral.
- Master and Slave I/O: PLB masters adhere to the signal set shown in Table 2-1. PLB slaves adhere to the signal set shown in Table 2-2. Page numbers referenced in the tables apply to the PLB V3.5 specification from IBM. All signals shown must be present. No additional signals for PLB interconnection may be added. The naming convention is as follows: <Master> represents a master name or acronym that starts with an upper-case letter, <Slave> represents a slave name or acronym that starts with an upper-case letter. <nPLB> represents an PLB identifier (for masters or slaves with more than one PLB attachment) and must start with an uppercase letter and end with upper-case "PLB". For devices with a single PLB attachment, the <nPLB> identifier



should default to "PLB" (for example, PLB\_ABus). All other parts of the signal name must be referenced exactly as shown (including case).

Table 2-1: Summary of PLB Master-only I/O

Signal		Description	Page (in Ref. 1)
<nplb>_Clk</nplb>	I	PLB Clock (SYS_plbClk)	PLB-11
<nplb>_Rst</nplb>	I	PLB Reset (SYS_plbReset)	PLB-11
<master>_abort</master>	О	Master abort bus request indicator	PLB-19
<master>_ABus[0:31]</master>	О	Master address bus	PLB-27
<master>_BE[0:7]</master>	О	Master byte enables	PLB-21
<master>_busLock</master>	О	Master buslock	PLB-13
<master>_compress</master>	О	Master compressed data transfer indicator	PLB-25
<master>_guarded</master>	О	Master guarded transfer indicator	PLB-26
<master>_lockErr</master>	О	Master lock error indicator	PLB-27
<master>_MSize[0:1]</master>	О	Master data bus size	PLB-40
<master>_ordered</master>	О	Master synchronize transfer indicator	PLB-26
<master>_priority[0:1]</master>	О	Master request priority	PLB-12
<master>_rdBurst</master>	О	Master burst read transfer indicator	PLB-34
<master>_request</master>	О	Master request	PLB-12
<master>_RNW</master>	О	Master read/not write	PLB-21
<master>_size[0:3]</master>	О	Master transfer size	PLB-24
<master>_type[0:2]</master>	О	Master transfer type	PLB-25
<master>_wrBurst</master>	О	Master burst write transfer indicator	PLB-29
<master>_wrDBus[0:63]</master>	О	Master write data bus	PLB-28
<nplb>_<master>_Busy</master></nplb>	I	PLB master slave busy indicator	PLB-36
<nplb>_<master>_Err</master></nplb>	I	PLB master slave error indicator	PLB-37
<nplb>_<master>_WrBTerm</master></nplb>	I	PLB master terminate write burst indicator	PLB-30
<nplb>_<master>_WrDAck</master></nplb>	I	PLB master write data acknowledge	PLB-29
<nplb>_<master>AddrAck</master></nplb>	I	PLB master address acknowledge	PLB-18
<nplb>_<master>RdBTerm</master></nplb>	I	PLB master terminate read burst indicator	PLB-36
<nplb>_<master>RdDAck</master></nplb>	I	PLB master read data acknowledge	PLB-33



Table 2-1: Summary of PLB Master-only I/O (Continued)

Signal	I/O	Description	Page (in Ref. 1)
<nplb>_<master>RdDBus[0:63]</master></nplb>	I	PLB master read data bus	PLB-31
<nplb>_<master>RdWdAddr[0:3]</master></nplb>	I	PLB master read word address	PLB-32
<nplb>_<master>Rearbitrate</master></nplb>	I	PLB master bus re-arbitrate indicator	PLB-19
<nplb>_<master>SSize[0:1]</master></nplb>	I	PLB slave data bus size	PLB-40

Table 2-2: Summary of PLB Slave-only I/O

Signal	I/O	Description	Page (in Ref. 1)
<nplb>_Clk</nplb>	I	PLB Clock (SYS_plbClk)	PLB-11
<nplb>_Reset</nplb>	I	PLB Reset (SYS_plbReset)	PLB-11
<slave>_addrAck</slave>	О	Slave address acknowledge	PLB-18
<slave>_MBusy[0:N-1]<sup>(1)</sup></slave>	О	Slave busy indicator	PLB-36
<slave>_MErr[0:N-1]<sup>(1)</sup></slave>	О	Slave error indicator	PLB-37
<slave>_rdBTerm</slave>	О	Slave terminate read burst transfer	PLB-36
<slave>_rdComp</slave>	О	Slave read transfer complete indicator	PLB-34
<slave>_rdDAck</slave>	О	Slave read data acknowledge	PLB-33
<slave>_rdDBus[0:63]</slave>	О	Slave read data bus	PLB-31
<slave>_rdWdAddr[0:3]</slave>	О	Slave read word address	PLB-32
<slave>_rearbitrate</slave>	О	Slave re-arbitrate bus indicator	PLB-19
<slave>_SSize[0:1]</slave>	О	Slave data bus size	PLB-40
<slave>_wait</slave>	О	Slave wait indicator	PLB-18
<slave>_wrBTerm</slave>	О	Slave terminate write burst transfer	PLB-30
<slave>_wrComp</slave>	О	Slave write transfer complete indicator	PLB-29
<slave>_wrDAck</slave>	О	Slave write data acknowledge	PLB-29
<nplb>_abort</nplb>	I	PLB abort request indicator	PLB-19
<nplb>_ABus[0:31]</nplb>	I	PLB address bus	PLB-27
<nplb>_BE[0:7]</nplb>	I	PLB byte enables	PLB-21
<nplb>_busLock</nplb>	I	PLB bus lock	PLB-13
<nplb>_compress</nplb>	I	PLB compressed data transfer indicator	PLB-25
<nplb>_guarded</nplb>	I	PLB guarded transfer indicator	PLB-26
<nplb>_lockErr</nplb>	I	PLB lock error indicator	PLB-27
<nplb>_masterID[0:log2(N-1)]<sup>(1)</sup></nplb>	I	PLB current master identifier	PLB-20



Table 2-2: Summary of PLB Slave-only I/O (Continued)

Signal	I/O	Description	Page (in Ref. 1)
<nplb>_MSize[0:1]</nplb>	I	PLB master data bus size	PLB-40
<nplb>_ordered</nplb>	I	PLB synchronize transfer indicator	PLB-26
<nplb>_PAValid</nplb>	Ι	PLB primary address valid indicator	PLB-13
<nplb>_pendPri[0:1]</nplb>	Ι	PLB pending request priority	PLB-20
<nplb>_pendReq</nplb>	I	PLB pending bus request indicator	PLB-20
<nplb>_rdBurst</nplb>	I	PLB burst read transfer indicator	PLB-34
<nplb>_rdPrim</nplb>	I	PLB secondary to primary read request indicator	PLB-36
<nplb>_reqPri[0:1]</nplb>	I	PLB current request priority	PLB-20
<nplb>_RNW</nplb>	I	PLB read/not write	PLB-21
<nplb>_SAValid</nplb>	I	PLB secondary address valid indicator	PLB-16
<nplb>_size[0:3]</nplb>	I	PLB transfer size	PLB-24
<nplb>_type[0:2]</nplb>	I	PLB transfer type	PLB-25
<nplb>_wrBurst</nplb>	I	PLB burst write transfer indicator	PLB-29
<nplb>_wrDBus[0:63]</nplb>	I	PLB write data bus	PLB-28
<nplb>_wrPrim</nplb>	I	PLB secondary to primary write request indicator	PLB-31

#### Notes:

1. N= number of PLB Masters

# **PLB Comparison**

Table 2-3 illustrates the major embedded processor bus architectures used in Xilinx FPGAs and lists some of their characteristics. Each bus has different capabilities in terms of data transfer rates, multi-master capability, and data bursting. The use of a particular bus is dictated by the processor used, the data bandwidth required in the application, and availability of peripherals. The PLB is a high-performance local bus that can be effectively used in many design situations.

PLB - Processor Local Bus (IBM). PLB Reference

OPB - On-chip Peripheral Bus (IBM). OPB Reference

OCM - On-chip Memory interface (IBM). OCM Reference

DCR - Device Control Register bus (IBM). DCR Reference



Table 2-3: Comparison of buses used in Xilinx embedded processor systems

Factoria	CoreConnect Buses			Other Buses	
Feature	PLB	ОРВ	DCR	ОСМ	LMB
Processor family	PPC405	PPC405, MicroBlaze	PPC405	PPC405	MicroBlaze
Data bus width	64	32	32	32	32
Address bus width	32	32	10	32	32
Clock rate, MHz (max) <sup>1</sup>	100	125	125	375	125
Masters (max)	16	16	1	1	1
Masters (typical)	2-8	2-8	1	1	1
Slaves (max) <sup>2</sup>	16	16	16	1	1
Slaves (typical)	2-6	2-8	1-8	1	1
Data rate (MB/s, peak) <sup>3</sup>	1600	500	500	500	500
Data rate (MB/s, typical) <sup>4</sup>	533 <sup>5</sup>	167 <sup>6</sup>	1009	3337	3338
Concurrent read/write	Yes	No	No	No	No
Address pipelining	Yes	No	No	No	No
Bus locking	Yes	Yes	No	No	No
Retry	Yes	Yes	No	No	No
Timeout	Yes	Yes	No	No	No
Fixed burst	Yes	No	No	No	No
Variable burst	Yes	No	No	No	No
Cache fill	Yes	No	No	No	No
Target word first	Yes	No	No	No	No
FPGA resource usage	High	Medium	Low	Low	Low
Compiler support for load/store	Yes	Yes	No	Yes	Yes

#### Notes:

- 1. Maximum clock rates are estimates and are presented for comparison only. The actual maximum clock rate for each bus is dependent on device family, device speed grade, design complexity, and other factors.
- 2. Max value set by maximum allowed parameter value specified in the core. Actual bus specification does not limit this value.
- 3. Peak data rate is the maximum theoretical data transfer rate at the clock rate shown for each bus.
- 4. The typical data rates are intended to illustrate data rates that are representative of actual system configurations. The typical data is highly dependent on the application software and system hardware configuration.
- 5. Assumes primarily cache-line fills, minimal read/write concurrency (66.7% bus utilization).
- 6. Assumes minimal use of sequential address capabilities and 3 clock cycles per OPB transfer.
- 7. The OCM controller operates at the PPC405 core clock rate, but its data transfer rate is limited by the access time of the on-chip memory. The typical data rate assumes 66.7% bus utilization.
- 8. Assumes 66.7% bus utilization.
- Assumes DCR operates at same clock rate as PLB and each DCR access requires 5 clock cycles. The number of clock cycles
  per DCR transfer is dependent on how many DCR devices are present in the system. Each additional DCR device adds
  latency to all DCR transfers.



# **Document Revision History**

Date	Version	Revision
5/8/02	1.0	Initial Xilinx version.



# **Processor Cores**

This section of the *Processor IP Reference Guide* includes the following topics:

- MicroBlaze (v2.10a) v2.10a
- MicroBlaze (v3.00a)
- PPC405 Top (Wrapper) (v2.00b)
- PPC405 (Wrapper) (v2.00c)
- PPC405 Virtex-4 (Wrapper) (v1.00a)



# MicroBlaze (v2.10a)

View this data sheet

#### **Product Overview**

#### Introduction

The MicroBlaze 32-bit RISC soft processor is a true 32-bit processor that supports 32-bit bus widths. The core is a RISC-based engine with a 32-bit LUT RAM-based register file with separate instructions for data and memory access. MicroBlaze processor supports both on-chip Block-RAM and/or external memory. All peripherals use the same CoreConnect OPB bus as the IBM PowerPC, making the processor peripherals compatible with PowerPC on Virtex-II Pro devices.

#### **Features**

- Thirty-two 32-bit general-purpose registers
- 32-bit instruction word with three operands and two addressing modes
- Separate 32-bit instruction and data buses that conform to IBM's OPB (On-chip Peripheral Bus) specification
- Separate 32-bit instruction and data buses with direct connection to on-chip block RAM through a LMB (Local Memory Bus)
- 32-bit address bus
- Single issue pipeline
- Instruction and data cache
- Hardware debug logic
- FSL (Fast Simplex Link) support
- Hardware multiplier (in Virtex-II and subsequent devices)

LogiCORE™ Facts			
(	Core Specifics		
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Virtex-II Pro <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II, Virtex-4 <sup>™</sup> , Virtex-E, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup>		
Version	microblaze v2.10a		
R	esources Used		
	Min	Max	
Slices	731	N/A	
LUTs	923	TBD	
FFs	552	TBD	
Block RAMs	0	0	
Pro	ovided with Core		
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	N/A		
Design Tool Requirements			
Xilinx Implementation Tools	ISE 6.2i or higher		
Verification	N/A		
Simulation	ModelSim SE/EE 5.6e or higher		
Synthesis XST			
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at http://www.xilinx.com/legal.htm. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# MicroBlaze (v3.00a)

**Product Overview** 

View this data sheet

#### Introduction

The MicroBlaze 32-bit RISC soft processor is a true 32-bit processor that supports 32-bit bus widths. The core is a RISC-based engine with a 32-bit LUT RAM-based register file with separate instructions for data and memory access. MicroBlaze processor supports both on-chip Block-RAM and/or external memory. All peripherals use the same CoreConnect OPB bus as the IBM PowerPC, making the processor peripherals compatible with PowerPC on Virtex-II Pro devices.

#### **Features**

- Thirty-two 32-bit general-purpose registers
- 32-bit instruction word with three operands and two addressing modes
- Separate 32-bit instruction and data buses that conform to IBM's OPB (On-chip Peripheral Bus) specification
- Separate 32-bit instruction and data buses with direct connection to on-chip block RAM through a LMB (Local Memory Bus)
- 32-bit address bus
- Single issue pipeline
- Instruction and data cache
- Hardware debug logic
- FSL (Fast Simplex Link) support
- Hardware multiplier (in Virtex-II and subsequent devices)

Log	LogiCORE™ Facts		
(	Core Specifics		
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Virtex-II Pro <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II, Virtex-4 <sup>™</sup> , Virtex-E, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup>		
Version	microblaze	v3.00a	
R	esources Used		
	Min	Max	
Slices	731	N/A	
LUTs	923	TBD	
FFs	552	TBD	
Block RAMs	0	0	
Pro	ovided with Core		
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	N/A		
Design Tool Requirements			
Xilinx Implementation Tools	ISE 6.2i or higher		
Verification	N/A		
Simulation	ModelSim SE/EE 5.6e or higher		
Synthesis	Synthesis XST		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at http://www.xilinx.com/legal.htm. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# PPC405 Top (Wrapper) (v2.00b)

View this data sheet

## Introduction

This document describes the specifications for the PPC405 top level wrapper, PPC405 Top.

PPC405 Top is used as a wrapper to instantiate the *PowerPC* 405 Processor Block primitive. The PPC405\_Top core delivered with EDK is designed to be used with the Platform Generator to manage the memory map in the same style as the PLB and OPB memory maps, and to support future expansion. A Microprocessor Peripheral Definition (MPD) file associated with this module is also included. Users can utilize the Xilinx Platform Studio (XPS) to incorporate this module into a Microprocessor Hardware Specification (MHS). This module does not contain any other logic aside from the PPC405.

The functionality and input/output signal definitions are the same as for the *PowerPC* 405 Processor Block with the following exceptions:

- TIEDSOCMDCRADDR[0:7] input is driven by the first 8 bits of parameter C\_DSOCM\_DCR\_BASEADDR[0:9]
- TIEISOCMDCRADDR[0:7] input is driven by the first 8 bits of parameter C ISOCM DCR BASEADDR[0:9]
- TIEC405DETERMINISTICMULT input is driven by the parameter C\_DETERMINISTIC\_MULT
- TIEC405DISOPERANDFWD input is driven by the parameter C\_DISABLE\_OPERAND\_FORWARDING
- TIEC405MMUEN input is driven by the parameter C\_MMU\_ENABLE

#### **Product Overview**

LogiCORE™ Facts				
С	ore Specifics			
Supported Device Family	Virtex-II Pro™			
Version of Core	ppc405_top	v2.00b		
Re	Resources Used			
	Min	Max		
Slices	0	0		
LUTs	0	0		
FFs	0	0		
Block RAMs	0	0		
Provided with Core				
Documentation	<u>View</u> this data sheet			
Design File Formats	VHDL			
Constraints File	N/A			
Verification	N/A			
Instantiation Template	N/A			
Reference Designs	None			
Design Tool Requirements				
Xilinx Implementation Tools	ISE 6.1i or higher			
Verification	N/A			
Simulation	ModelSim SE/EE 5.6e or later			
Synthesis	XST			
Support				
Support provided by Xilinx, Inc.				

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# PPC405 (Wrapper) (v2.00c)

View this data sheet

#### Introduction

This document describes the specifications for the PPC405 top level wrapper.

#### **Features**

- Instantiate PowerPC<sup>™</sup> 405 Processor Block primitive
- Parameter controlled TIE ports
- Parameter controlled DCR interface resynchronization

#### **Product Overview**

Log	iCORE™ Facts	
Core Specifics		
Supported Device Family	Virtex-II Pro™	
Version	ppc405 v2.00c	
R	esources Used	
	Min	Max
Slices	N/A	N/A
LUTs	0	0
FFs	0	77
Block RAMs	0	0
Pro	ovided with Core	
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Desigr	Tool Requirements	
Xilinx Implementation Tools	ISE 6.2i or higher	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e or higher	
Synthesis	nesis XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# PPC405 Virtex-4 (Wrapper) (v1.00a)

View this data sheet

#### **Product Overview**

#### Introduction

The PPC405\_Virtex4 is a wrapper around the Virtex-4 *PowerPC*<sup>™</sup> 405 Processor Block primitive. For details about the PowerPC 405, see the *PowerPC 405 Processor Block Reference Guide*.

This core contains no logic.

#### **Features**

- PowerPC 405 Auxiliary Processor Unit (APU) controller interface exposed
- Built in resynchronization of Device Control Register (DCR) bus control interface
- Debug read-access to Instruction-Side On-Chip Memory (ISOCM) via DCR
- Read data valid handshake added to the Data-Side On-Chip Memory (DSOCM) controller
- New synchronization mode for the Processor Local Bus interface.
- Easy configuration of User-Defined Instructions (UDI)

Log	LogiCORE™ Facts		
C	ore Specifics		
Supported Device Family	Virtex-4™		
Version of Core	ppc405_virtex4 v1.00a		
Re	sources Used		
	Min	Max	
Slices	0	0	
LUTs	0	0	
FFs	0	0	
Block RAMs	0	0	
Pro	vided with Core		
Documentation	<u>View</u> this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	N/A		
Design Tool Requirements			
Xilinx Implementation Tools	ISE 6.2i or higher		
Verification	N/A		
Simulation	ModelSim SE/PE 5.7f or higher		
Synthesis	XST		
Support			
Support provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# Bus, Bridge, and Arbiter Infrastructure Cores

This section of the *Processor IP Reference Guide* includes the following topics:

- On-Chip Peripheral Bus v2.0 with OPB Arbiter (v1.10a)
- On-Chip Peripheral Bus v2.0 with OPB Arbiter (v1.10b)
- OPB PCI Arbiter
- OPB to PLB Bridge (v1.00c)
- OPB to OPB Bridge (Lite Version)
- OPB to DCR Bridge
- Processor Local Bus (PLB) v3.4
- Processor Local Bus (PLB) v3.4 (v1.02a)
- PLB to OPB Bridge (v1.00b)
- PLB to OPB Bridge (v1.01a)
- Device Control Register Bus (DCR) v2.9 (v1.00a)
- Processor System Reset Module
- Local Memory Bus (LMB) v1.0
- OPB Arbiter (v1.02c)
- Fast Simplex Link Channel (v1.00b)
- Fast Simplex Link (FSL) Bus (v2.00a)
- Digital Clock Manager (DCM) Module (v1.00a)
- Data Side OCM Bus V1.0 (v1.00b)
- Data Side OCM Bus (v2.00a)
- Instruction Side OCM Bus v1.0 (v1.00b)
- Instruction Side OCM Bus v1.0 (v2.00a)



# On-Chip Peripheral Bus v2.0 with OPB Arbiter (v1.10a)

View this data sheet

#### **Product Overview**

#### Introduction

The OPB\_V20 module is used as the OPB interconnect for Xilinx FPGA based embedded processor systems. The bus interconnect in the OPB v2.0 specification is a distributed multiplexer implemented as an *AND* function in the master or slave driving the bus, and as an *OR* function to combine the drivers into a single bus.

The OPB\_V20 module assumes the AND (or enable function) is within the master or slave and provides the OR function to combine the various bus signals.

#### **Features**

- Includes parameterized OPB Arbiter
- Includes parameterized I/O signals to support and number of masters or slaves
- Includes all signals present in the OPB v2.0 Specification except the DMA handshake signals
- The OR structure can be implemented using only LUTs or a combination of LUTs and fast carry to reduce the number of LUTs in the OR interconnect
- Includes a 16-clock Power-on OPB Bus Reset and parameter for high or low external bus reset
- Includes input for reset from Watchdog Timer
- Option to split the read and write OPB date busses for optimal FPGA routing and resource utilization.

The OPB\_V20 includes an OPB Arbiter that incorporates the features contained in the IBM On-chip Peripheral Bus Arbiter Core manual (version 1.5) for 32-bit implementation. This manual is referenced throughout this document and is considered the authoritative specification. Any differences between the IBM OPB Arbiter implementation and the Xilinx OPB Arbiter implementation are explained in the Specification Exceptions section of the data sheet.

The Xilinx OPB Arbiter design allows tailoring the OPB Arbiter to suit an application by setting certain parameters to enable/disable features.

In some cases, setting these parameters may cause the Xilinx OPB Arbiter design to deviate slightly from the IBM OPB Arbiter specification. These parameters are described in the OPB\_V20 Design Parameters section of the datasheet.

LogiCORE™ Facts			
C	Core Specifics		
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex <sup>™</sup> , Virtex-E, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup>		
Version of Core	opb_v20 v1.10a		
Re	esources Used		
	Min	Max	
I/O	46	432	
LUTs	80	666	
FFs	5	145	
Block RAMs	0	0	
Provided with Core			
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design Tool Requirements			
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	ModelSim SE/EE 5.6e or later		
Synthesis	XST		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# On-Chip Peripheral Bus v2.0 with OPB Arbiter (v1.10b)

View this data sheet

#### **Product Overview**

### Introduction

The OPB\_V20 module is used as the OPB interconnect for Xilinx FPGA based embedded processor systems. The bus interconnect in the OPB v2.0 specification is a distributed multiplexer implemented as an *AND* function in the master or slave driving the bus, and as an *OR* function to combine the drivers into a single bus.

The OPB\_V20 module assumes the AND (enable function) is within the master or slave and provides the OR function to combine the various bus signals.

### **Features**

- Includes parameterized OPB Arbiter
- Includes parameterized I/O signals to support and number of masters or slaves
- Includes all signals present in the OPB v2.0 Specification except the DMA handshake signals
- The OR structure can be implemented using only LUTs or a combination of LUTs and fast carry to reduce the number of LUTs in the OR interconnect
- Includes a 16-clock Power-on OPB Bus Reset and parameter for high or low external bus reset
- Includes input for reset from Watchdog Timer
- Option to split the read and write OPB date busses for optimal FPGA routing and resource utilization.

The OPB\_V20 includes an OPB Arbiter that incorporates the features contained in the IBM On-chip Peripheral Bus Arbiter Core manual (version 1.5) for 32-bit implementation. This manual is referenced throughout this document and is considered the authoritative specification. Any differences between the IBM OPB Arbiter implementation and the Xilinx OPB Arbiter implementation are explained in the Specification Exceptions section of the datasheet.

The Xilinx OPB Arbiter design allows tailoring the OPB Arbiter to suit an application by setting certain parameters to enable/disable features.

In some cases, setting these parameters may cause the Xilinx OPB Arbiter design to deviate slightly from the IBM OPB Arbiter specification. These parameters are described in the OPB\_V20 Design Parameters section of the datasheet.

LogiCORE™ Facts		
C	ore Specifics	
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-4 <sup>™</sup> , QPro <sup>™</sup> -R Virtex-II, QPro Virtex-II, Virtex-E, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup>	
Version of Core	opb_v20	v1.10b
Re	esources Used	
	Min	Max
Slices	46	436
LUTs	81	668
FFs	5	145
Block RAMs	0	0
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	ns None	
Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e or later	
Synthesis XST		
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



### **OPB PCI Arbiter**

View this data sheet

#### **Product Overview**

### Introduction

The OPB PCI Arbiter provides arbitration among several PCI Master devices. Parametric selection determines the number of masters competing for PCI bus control. Both fixed and rotating arbitration schemes may be selected by programing a control register. Bus parking occurs in the case that no master requests PCI control. The particular master designated for parking is selected either with a programed register or by parametric selection. Register programming is accomplished through a slave interface to the OPB using the OPB\_IPIF.

An alternate use mode provides a PCI arbiter without an OPB interface. Achieved through appropriate parameter settings, this mode completely removes the program registers and the OPB\_IPIF leaving open the outputs to the OPB and connecting inputs from the OPB to logic zero. Without an OPB interface the PCI arbiter operates with rotating arbitration and the park master is set directly by parameter selection.

### **Features**

- Variable number of PCI masters set by parameter
- Fixed arbitration
- Rotating arbitration
- Control bit selection of arbitration scheme
- Bus parking
- Park master program register
- Alternative park master set by parameter
- Control bit selection of park master
- Removable processor interface, OPB\_IPIF
- Removable pipeline registers for PCI requests
- Removable pipeline registers for PCI grants
- · OPB interface for register reads and writes

LogiCORE™ Facts		
Co	ore Specifics	
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex <sup>™</sup> , Virtex-E, Virtex-4 <sup>™</sup> , QPro <sup>™</sup> -R Virtex-II, QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , and Spartan-3 <sup>™</sup>	
Version	opb_pci_arbiter	v1.00a
Res	sources Used	
	Min	Max
I/O	4 + 2 * C_NUM_PCI_M STRS	114 + 2 * C_NUM_PCI_ MSTRS
LUTs	23	205
FFs	19	132
Block RAMs	0	0
Prov	rided with Core	
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs & application notes	N/A	
Additional Items	Additional Items None	
Design Tool Requirements		
Xilinx Implementation Tools	ISE 6.1.01i or later	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e or later	
Synthesis	XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



### **OPB to PLB Bridge (v1.00c)**

View this data sheet

### **Product Overview**

### Introduction

The On-Chip Peripheral Bus (OPB) to Processor Local Bus (PLB) Bridge module translates OPB transactions into PLB transactions. It functions as a slave on the OPB side and a master on the PLB side. Access to the control register and bus error status registers is user selectable from either the OPB or an optional DCR interface. The OPB to PLB Bridge is necessary in systems where an OPB master device, such as a DMA engine or an OPB based coprocessor, that requires access to PLB devices (that is, high speed memory devices, and so forth.).

The Xilinx OPB to PLB Bridge design allows customers to tailor the bridge to suit their application by setting certain parameters to enable / disable features. The parameterizable features of the design are discussed in the full data sheet. Differences between the IBM OPB to PLB Bridge implementation and the Xilinx OPB to PLB Bridge implementation are also highlighted and explained.

In subsequent sections, the OPB to PLB Bridge, when convenient, is referred to as the Bridge In (BGI), and the PLB to OPB Bridge is referred to as the Bridge Out (BGO). This terminology reflects a PLB centric convention of data flowing *in from* and *out to* the peripheral bus, respectively. However, this is only a naming convention and in no way restricts the use of these bridges in alternative processor / bus configurations.

### **Features**

- 64-bit PLB Master interface
  - Communicates with 32- or 64-bit PLB slaves
  - Non-burst transfers of 1 to 8 bytes
  - Burst transfers, including word and double-word bursts of fixed lengths, up to 16 words of data
  - Cacheline transactions of 4, 8, and 16 words
- Translates OPB sequential accesses (bursts) to either cacheline or fixed length PLB burst transfers
  - Performing only single beat and cacheline transactions reduces system logic utilization and improves timing through PLB slave IP simplification
    - Target word first order supported when cacheline transactions selected

LogiCORE™ Facts		
Core Specifics		
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup>	
Version of Core	opb2plb_bridge v1.00c	
Re	esources Used	
	Min	Max
I/O	390	390
LUTs	467	898
FFs	630	720
Block RAMs	0	0
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e or later	
Synthesis	XST	
Support		
Provided by Xilinx, Inc.		

- PLB burst transfers yield better bus cycle efficiency but may increase logic utilization and degrade timing in the system
- 32-bit OPB Slave interface with byte enable transfer
   Note: Does not support dynamic bus sizing or non-byte

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



### enable transactions

- Decodes up to four separate address ranges
- PLB and OPB clocks can have a 1:1, 2:1, 3:1, or 4:1 synchronous relationship (OPB clock frequency must be less than or equal to the PLB clock frequency)
- Asserts BGI\_opbRetry if bridge is busy with a PLB transaction and a new OPB request is received.
- Bus Error Status Register (BESR) and Bus Error Address Register (BEAR) provide bus error status, and Bridge Control Register (BCR) provides bridge control functions
  - Parameterizable selection between DCR or OPB Slave interface, which provides access to BESR, BEAR, and BCR
- Posted write buffer and read prefetch buffer 16 words deep
- Edge-type interrupt generated when bus error detected



## **OPB to OPB Bridge (Lite Version)**

**Product Overview** 

View this data sheet

### Introduction

This document provides the design specification for the OPB to OPB Lite Bridge. The OPB to OPB Lite Bridge is used to connect two OPB buses. The bridge has one master port and one slave port. Two bridges may be used together to support full bus mastership in both directions.

### **Features**

- Provides a bridge between two OPB V2.0 buses
- Connections for one master-side bus and one slave-side bus
- · Parameterized data bus widths
- Simple transaction forwarding reduces LUT count
- Requires the two OPB buses to be on the same clock and the same size
- · No support for data buffering or posted writes.

LogiCORE™ Facts			
С	ore Specifics		
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-II Pro <sup>™</sup> , Virtex-E, and Virtex-4		
Version of Core	opb_opb_lite	v1.00a	
Re	esources Used		
	Min	Max	
Slices	21	26	
LUTs	22	30	
FFs	27	27	
Block RAMs	0	0	
Pro	Provided with Core		
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	Reference Designs None		
Design Tool Requirements			
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	ModelSim SE/EE 5.6e or later		
Synthesis	XST		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



## **OPB to DCR Bridge**

View this data sheet

### Introduction

The OPB to DCR Bridge translates transactions received on its OPB slave interface into DCR master operations. Its design utilizes an Intellectual Property InterFace (IPIF) module to abstract OPB transactions into a simple SRAM style protocol that is easier to design with.

The main advantage of using the bridge instead of the CPU to control the DCR bus is that it provides a memory mapped interface that may be preferable to the use of special move to/move from DCR instructions.

Since the bridge typically runs at a slower clock frequency than the CPU, its timing requirements are also less stringent. The OPB to DCR Bridge implements a simple and flexible method for communicating with DCR devices.

### **Features**

- 32-bit DCR master with a 10-bit DCR address bus
- Memory-mapped interface from OPB to DCR, no special instructions required
- Increased timing flexibility in typical systems where the OPB clock is slower than the CPU clock
- Allows master devices other than the CPU to access the DCR bus
- Provides a mechanism where CoreConnect systems without a CPU can support DCR devices

#### **Product Overview**

	iCORE™ Facts	
C	Core Specifics	
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Virrtex-II Pro <sup>™</sup>	
Version of Core	opb2dcr_bridge	v1.00a
Re	esources Used	
	Min	Max
Slices	87	89
LUTs	42	44
FFs	131	131
Block RAMs	0	0
Provided with Core		
Documentation	View this data she	eet
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design	Tool Requirements	S
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	ModelSim SE/EE	5.6e or later
Synthesis	XST	
	Support	
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



### Processor Local Bus (PLB) v3.4

View this data sheet

#### **Product Overview**

### Introduction

The Xilinx 64-bit Processor Local Bus (PLB) consists of a bus control unit, a watchdog timer, and separate address, write, and read data path units with a a three-cylcle only arbitration feature. It contains a DCR slave interface to provide access to its bus error status registers. It also contains a power-up reset circuit to ensure a PLB reset is generated if no external reset has been provided.

The IBM Processor Local Bus (PLB) 64-Bit Architecture Specification and the IBM Processor Local Bus (PLB) 64-Bit Arbiter Core User's Manual are referenced throughout this document. Differences between the IBM PLB Arbiter and the Xilinx PLB are highlighted and explained in Specification Exceptions.

### **Features**

- PLB arbitration support for up to 16 masters
  - Number of PLB masters is configurable via a design parameter
- PLB address and data steering support for up to 16 masters
- 64-bit and/or 32-bit support for masters and slaves
- PLB address pipelining
- Three-cycle arbitration
- Four levels of dynamic master request priority
- PLB watchdog timer
- · PLB architecture compliant
- Complete PLB Bus structure provided
  - Up to 16 slaves supported (Number of PLB slaves configurable via a design parameter)
  - No external or gates required for PLB slave input signals
- PLB Reset circuit
  - PLB Reset generated synchronously to the PLB clock upon power up if no external reset is provided
  - PLB Reset generated synchronously from external reset when external reset provided
    - Active state of external reset selectable via a design parameter

LogiCORE™ Facts			
С	Core Specifics		
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup>		
Version of Core	plb_v34	v1.01a	
Re	esources Used		
	Min	Max	
Slice	194	1616	
LUTs	263	2533	
FFs	57	482	
Block RAMs	0	0	
Provided with Core			
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design Tool Requirements			
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	imulation ModelSim SE/EE 5.6e or later		
Synthesis	XST		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



## Processor Local Bus (PLB) v3.4 (v1.02a)

View this data sheet

### **Product Specification**

### Introduction

The Xilinx 64-bit Processor Local Bus (PLB) consists of a bus control unit, a watchdog timer, and separate address, write, and read data path units with a a three-cylcle only arbitration feature. It contains a DCR slave interface to provide access to its bus error status registers and a power-up reset circuit to ensure a PLB reset is generated if no external reset has been provided. The IBM Processor Local Bus (PLB) 64-Bit Architecture Specification and the IBM Processor Local Bus (PLB) 64-Bit Arbiter Core User's Manual are referenced throughout this document. The differences between IBM PLB Arbiter and Xilinx PLB are highlighted and explained in the Specification Exceptions section.

### **Features**

- PLB arbitration support for up to 16 masters
  - Number of PLB masters is configurable via a design parameter
- PLB address and data steering support for up to 16 masters
- 64-bit and/or 32-bit support for masters and slaves
- PLB address pipelining
- Three-cycle arbitration
- Four levels of dynamic master request priority
- PLB watchdog timer
- PLB architecture compliant
- Complete PLB Bus structure provided
  - Up to 16 slaves supported
    - Number of PLB slaves configurable via a design parameter
  - No external or gates required for PLB slave input signals
- PLB Reset circuit
  - PLB Reset generated synchronously to the PLB clock upon power up if no external reset is provided
  - PLB Reset generated synchronously from external reset when external reset provided
  - Active state of external reset selectable via a design parameter

LogiCORE™ Facts		
C	ore Specifics	
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup>	
Version of Core	plb_v34	v1.02a
Re	esources Used	
	Min	Max
Slice	223	1645
LUTs	270	2540
FFs	59	484
Block RAMs	0	0
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e or later	
Synthesis	Synthesis XST	
Support		
Support provided by Xilinx, Inc.		

 System compatibility with Xilinx's OPB Master/Slave IPIF architecture when utilized with PLB2OPB bridge core version 1.01a

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



### PLB to OPB Bridge (v1.00b)

View this data sheet

### Introduction

The Processor Local Bus (PLB) to On-chip Peripheral Bus (OPB) Bridge translates PLB transactions into OPB transactions. It functions as a slave on the PLB side and a master on the OPB side. It contains a DCR slave interface to provide access to its bus error status registers. The PLB to OPB bridge is necessary in systems where a PLB master device requires access to OPB peripherals.

The Xilinx PLB to OPB Bridge design allows customers to tailor the bridge to suit their application by setting certain parameters to enable/disable features.

The parameterizable features of the design are discussed in the datasheet. Differences between the IBM PLB to OPB Bridge implementation and the Xilinx PLB to OPB Bridge implementation are also highlighted and explained.

### **Features**

- PLB Slave interface
  - 32-bit or 64-bit PLB (configurable via the C\_PLB\_DWIDTH design parameter)
  - PLB slave width same as PLB bus width
  - Decodes up to four separate address ranges
  - Programmable lower and upper address boundaries for each range
  - Communicates with 32- or 64-bit PLB masters
  - Non-burst transfers of 1-8 bytes
  - Burst transfers, including word and double-word bursts of fixed or variable lengths, up to depth of burst buffer (16)
  - Limited support for byte, half-word, quad-word and octal-word bursts to maintain PLB compliance
  - Cacheline transactions of 4, 8, and 16 words
  - Support for burst transactions can be eliminated via a design parameter
    - Save device resources by only supporting single beat, 4, 8, or 16 word line transfers
  - Supports up to 16 PLB masters (number of PLB masters configurable via a design parameter)
- OPB Master interface with byte enable transfers
   Note: Does not support dynamic bus sizing without additional glue logic
  - Data width configurable via a design parameter

#### **Product Overview**

LogiCORE™ Facts			
C	Core Specifics		
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup>		
Version of Core	plb2opb_bridge	v1.00b	
Re	sources Used		
	Min	Max	
Slices	412	662	
LUTs	499	787	
FFs	355	620	
Block RAMs	0	0	
Pro	Provided with Core		
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design	Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	ModelSim SE/EE 5.6e or later		
Synthesis	Synthesis XST		
Support			
Provided by Xilinx, Inc.			

- Bus Error Address Registers (BEAR) and Bus Error Status Registers (BESR) to report errors
  - DCR Slave interface provides access to BEAR/BESR
  - BEAR, BESR, and DCR interface can be removed from the design via a design parameter
- 16-deep posted write buffer and read pre-fetch buffer
- Edge-type interrupt generated when bus error detected

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



### PLB to OPB Bridge (v1.01a)

View this data sheet

### **Product Overview**

### Introduction

The Processor Local Bus (PLB) to On-chip Peripheral Bus (OPB) Bridge translates PLB transactions into OPB transactions. It functions as a slave on the PLB side and a master on the OPB side and contains a DCR slave interface to provide access to its bus error status registers. The PLB to OPB bridge is necessary in systems where a PLB master device requires access to OPB peripherals. The Xilinx PLB to OPB Bridge design allows customers to tailor the bridge to suit their application by setting certain parameters to enable/disable features. The parameterizable features of the design are discussed in the PLB to OPB Bridge Design Parameters section. The differences between the IBM PLB to OPB Bridge implementation and the Xilinx PLB to OPB Bridge implementation are also highlighted and explained.

### **Features**

- PLB Slave interface
  - 32-bit or 64-bit PLB (configurable via the C\_PLB\_DWIDTH design parameter)
  - PLB slave width same as PLB bus width
  - Decodes up to four separate address ranges
  - Programmable lower and upper address boundaries for each range
  - Communicates with 32- or 64-bit PLB masters
  - Non-burst transfers of 1-8 bytes
  - Burst transfers, including word and double-word bursts of fixed or variable lengths, up to depth of burst buffer (16)
  - Limited support for byte, half-word, quad-word and octal-word bursts to maintain PLB compliance
  - Cacheline transactions of 4, 8, and 16 words
  - Support for burst transactions can be eliminated via a design parameter
    - save device resources by only supporting single beat, 4, 8, or 16 word line transfers
  - Supports up to 16 PLB masters (number of PLB masters configurable via a design parameter)
- OPB Master interface with byte enable transfers Note: Does not support dynamic bus sizing without additional glue logic
  - Data width configurable via a design parameter

LogiCORE™ Facts			
Co	Core Specifics		
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup>		
Version of Core	plb2opb_bridge	v1.01a	
Re	sources Used		
	Min	Max	
Slices	595	836	
LUTs	535	823	
FFs	547	812	
Block RAMs	0	0	
Prov	Provided with Core		
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design Tool Requirements			
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	ModelSim SE/EE 5.6e or later		
Synthesis XST			
Support			
Support provided by Xilinx, Inc.			

- PLB and OPB clocks can have a 1:1, 1:2, 1:3, 1:4 synchronous relationship
- Bus Error Address Registers (BEAR) and Bus Error Status Registers (BESR) to report errors
  - DCR Slave interface provides access to BEAR/BESR
  - BEAR, BESR, and DCR interface can be removed from design via a design parameter
- 16-deep posted write buffer and read pre-fetch buffer

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# Device Control Register Bus (DCR) v2.9 (v1.00a)

View this data sheet

### **Product Overview**

### Introduction

The Xilinx 32-Bit Device Control Register (DCR) Bus soft core provides the DCR bus structure (as described in the IBM 32-Bit Device Control Register Bus (DCR) Architecture Specification) with the ability to easily connect the DCR Master to DCR slaves. It provides the daisy-chain for the DCR data bus and the OR gate for the DCR acknowledge signals from the DCR slaves.

### **Features**

- DCR connections for one DCR master and a variable number of DCR slaves, which are configurable via design parameter
- · Daisy-chain connections for the DCR data bus
- Required OR function of the DCR slaves' acknowledge signal

LogiCORE™ Facts		
Core Specifics		
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup>	
Version of Core	dcr_v29	v1.00a
Re	esources Used	
	Min	Max
Slices	0	4
LUTs	0	5
FFs	0	0
Block RAMs	0	0
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e or later	
Synthesis	XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



### **Processor System Reset Module**

View this data sheet

#### **Product Overview**

### Introduction

The Xilinx Processor System Reset Module lets users customize their application by setting parameters to enable/disable specific features. The parameterizable features of the design are discussed in the affiliated datashheet.

### **Features**

- Asynchronous external reset input is synchronized with clock
- Asynchronous auxiliary external reset input is synchronized with clock
- Both the external and auxiliary reset inputs are selectable active high or active low
- Selectable minimum pulse width for reset inputs to be recognized
- Selectable load equalizing
- DCM Locked input
- Power On Reset generation
- Sequencing of reset signals coming out of reset:
  - First: Bus structures come out of reset
    - PLB and OPB Arbiter and bridges, for example
  - Second: Peripheral(s) come out of reset 16 clocks later
    - UART, SPI, IIC for example
  - Third: CPU(s) come out of reset 16 clocks after the peripherals

LogiCORE™ Facts		
С	ore Specifics	
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-4 <sup>™</sup> , QPro <sup>™</sup> -R Virtex-II, QPro Virtex-II, Virtex-E, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup>	
Version of Core	proc_sys_reset	v1.00a
Re	esources Used	
	Min	Max
I/O	1	2
LUTs	37	57
FFs	52	82
Block RAMs	0	0
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	Alliance Tool Suite	
Verification	N/A	
Simulation	N/A	
Synthesis	XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



## Local Memory Bus (LMB) v1.0

View this data sheet

### Introduction

The LMB\_V10 module is used as the LMB interconnect for Xilinx FPGA-based embedded processor systems. The LMB is a fast, local bus for connecting MicroBlaze™ instruction and data ports to high-speed peripherals, primarily on-chip block RAM (BRAM).

### **Features**

- Efficient, single master bus (requires no arbiter)
- · Separate read and write data buses
- Low FPGA resource utilization
- 125 MHz operation

#### **Product Overview**

LogiCORE™ Facts			
С	ore Specifics		
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II, Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E		
Version of Core	lmb_v10	v1.00a	
Re	esources Used		
	Min	Max	
I/O	N/A	N/A	
LUTs			
FFs			
Block RAMs			
Pro	vided with Core		
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design	Design Tool Requirements		
Xilinx Implementation Tools	ISE 6.3i or higher		
Verification	N/A		
Simulation	ModelSim SE/PE 5.7b or later		
Synthesis	XST		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



### **OPB Arbiter (v1.02c)**

View this data sheet

#### **Product Overview**

### Introduction

The On-Chip Peripheral Bus (OPB) Arbiter design described in this document incorporates the features contained in the IBM On-chip Peripheral Bus Arbiter Core manual (version 1.5) for 32-bit implementation, which is referenced throughout this document and is considered the authoritative specification. Any differences between the IBM OPB Arbiter implementation and the Xilinx OPB Arbiter implementation are defined in the Specification Exceptions section of the datasheet.

The Xilinx OPB Arbiter design lets you tailor the OPB Arbiter to suit your application by setting certain parameters to enable/disable features. In some cases, setting these parameters may cause the Xilinx OPB Arbiter design to deviate slightly from the IBM OPB Arbiter specification. These parameters are described in the OPB Arbiter Design Parameters section.

### **Features**

The OPB Arbiter is a soft IP core designed for Xilinx FPGAs and contains the following features:

- Optional OPB slave interface (included in design via a design parameter)
- OPB Arbitration
  - Arbitrates between 1–16 OPB Masters (the number of masters is parameterizable)
  - Arbitration priorities among masters programmable via register write
  - Priority arbitration mode configurable via a design parameter
    - Fixed priority arbitration with processor access to read/write Priority Registers
    - Dynamic priority arbitration implementing a true least recent used (LRU) algorithm
- Two bus parking modes selectable via Control Register write:
  - park on selected OPB master (specified in Control Register)
  - park on last OPB master granted OPB access
- Watchdog timer asserts the OPB time-out signal if a slave response is not detected within 16 clock cycles

Logi	LogiCORE™ Facts		
С	ore Specifics		
Supported Device Family	Spartan-II™, Spartan-IIE™, Spartan-3™, Virtex™, Virtex-II™, Virtex-II Pro™, Virtex-E		
Version of Core	opb_arbiter	v1.02c	
Re	esources Used		
	Min	Max	
I/O	4	904	
LUTs	6	252	
FFs	4	1477	
Block RAMs	0	0	
Provided with Core			
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design Tool Requirements			
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	ModelSim SE/EE 5.6e or later		
Synthesis	XST		
Support			
Provided by Xilinx, Inc.			

 Registered or combinational Grant outputs configurable via a design parameter

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



Fast Simplex Link Channel (v1.00b)

View this data sheet

### **Product Overview**

### Introduction

This document provides the design specification for the Fast Simplex Link (FSL) Channel. The FSL\_V20 module is used as the FSL interconnect for Xilinx FPGA based embedded processor systems. The FSL is a fast uni-directional point-to-point communication channel.

### **Features**

- Uni-directional point-to-point communication
- · Unshared non-arbitrated communication mechanism
- Control and Data communication support FIFO based communication
- Configurable depth FIFO
- Configurable data path size
- 600 MHz standalone operation

LogiCORE <sup>™</sup> Facts		
С	ore Specifics	
Supported Device Family	Spartan-II™, Spartan-IIE™, Spartan-3™, Virtex™, Virtex-II™, Virtex-II Pro™, Virtex-E™	
Version of Core	fsl_v20	v1.00.b
Re	esources Used	
	Min	Max
Slices	26	26
LUTs	43	43
FFs	6	6
Block RAMs	0	0
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Design Tool Requirements		
Xilinx Implementation Tools	ISE 6.1i or higher	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e or higher	
Synthesis	XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



## Fast Simplex Link (FSL) Bus (v2.00a)

View this data sheet

#### **Product Overview**

### Introduction

FSL\_V20 is a uni-directional point-to-point communication channel. This bus is used to perform fast communication between any two design elements on the FPGA that implement an interface to the FSL bus. Up to 8 master and slave FSL interfaces are available on the Xilinx MicroBlaze™ soft processor. The interfaces could be used to transfer data in 2 clock cycles to and from the register file on the processor to hardware running on the FPGA.

### **Features**

- Implements a uni-directional point to point FIFO-based communication
- Provides mechanism for unshared and non-arbitrated communication mechanism that can be used for fast transfer of data words between master and slave implementing the FSL interface
- Provides an extra control bit for annotating data being tranmitted. The control bit can be used by the slave side interface for multiple purposes, for example, to decode the word being tranmitted as a control word or to indicate start or end of transmission of a frame.
- FIFO depths as low as 1 or as high as 8K
- Supports synchronous and asynchronous FIFO modes to allow the master and slave side of the FSL to clock at different rates <sup>1</sup>
- Supports SRL16 and dual port LutRam or Block RAM based FIFO implementation.

Log	LogiCORE™ Facts		
C	ore Specifics		
Supported Device Family	QPro™-R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE™, Spartan-3™, Virtex™, Virtex-II™, Virtex-E™ Virtex-II Pro™, Virtex-4™		
Version of Core	fsl_v20	v2.00a	
Re	esources Used		
	Min	Max	
Slices	21	451	
LUTs	3	362	
FFs	36	34	
Block RAMs	0	17	
Provided with Core			
Documentation	<u>View</u> this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	N/A		
Design Tool Requirements			
Xilinx Implementation Tools	ISE 6.2i or higher		
Verification	N/A		
Simulation	Simulation ModelSim SE/EE 5.6e or higher		
Synthesis XST			
Support			
Support provided by Xilinx, Inc.			

<sup>1.</sup> Maximum size in slices, FFs and LUTs is obtained using parameter options C\_ASYNC\_FIFO=1, C\_FSL\_DEPTH=128, and C\_USE\_CONTROL =1. Maximum BRAM size is obtained for parameter options C\_SYNC\_FIFO =1, C\_FSL\_DEPTH=8192, and C\_USE\_CONTROL=1.

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



## Digital Clock Manager (DCM) Module (v1.00a)

View this data sheet

#### **Product Overview**

### Introduction

The DCM Module is designed to be used with Platform Generator to perform simple logical operations. An Microprocessor Peripheral Definition (MPD) file associated with this module is also included. Users can utilize Xilinx Platform Studio (XPS) to incorporate this module into Microprocessor Hardware Specification (MHS). This module can serve as glue logic among peripherals and is not associated with any system bus

The Digital Clock Manager in Xilinx FPGAs provides multiple functions. It can implement a clock delay locked loop, a digital frequency synthesizer, digital phase shifter and a digital spread spectrum. This DCM Module provides a very basic, simple template in order to utilize the DCM feature in Xilinx FPGAs Users can also refer to this template to create custom-made, precise clock management, or multiple DCM instantiation for specific applications, manually or use Architecture Wizard for DCM in ISE tools.

For more information regarding DCM features, please refer to the Data Sheet and Users Guides for various FPGA device families at http://support.xilinx.com.

### **Features**

The DCM Module has the following features

- All DCM I/Os are accessible from MPD port list
- All DCM attributes are accessible from MPD parameters
- Support both active high and active low reset
- Configurable BUFG insertion

LogiCORE™ Facts		
C	ore Specifics	
Supported Device Family	QPro™-R Virtex-II™, QPro Virtex-II, Spartan-3™, Virtex-II, Virtex-II Pro™, Virtex-4™	
Version of Core	dcm_module	v1.00a
Re	sources Used	
	N/A	N/A
Slices	88	108
LUTs	48	57
FFs	0	0
Block RAMs	N/A	N/A
Pro	vided with Core	
Documentation	View this data shee	et
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Design	Tool Requirements	
Xilinx Implementation Tools	ion ISE 6.1i or higher	
Verification	N/A	
Simulation	Simulation ModelSim SE/EE 5.6e or higher	
Synthesis	XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



### Data Side OCM Bus V1.0 (v1.00b)

**Product Overview** 

View this data sheet

### Introduction

The DSOCM\_V10 Bus is used as the instruction side OCM Bus interconnect for Virtex-II Pro *PowerPC™* 405 based embedded systems. A typical usage is to connect PowerPC405 and DSBRAM\_IF\_CNTRL modules (both can be found in EDK Infrastructure Library) to the DSOCM\_V10 Bus. For more information regarding the OCM (On-Chip Memory) controller interface in PowerPC 405 Processor, please refer to PowerPC 405 Processor Block Reference Guide.

This DSOCM\_V10 Bus in EDK Infrastructure Library is designed to be used with Platform Generator to manage memory map with consistent style as managing PLB and OPB memory map and to support future expansion. An Microprocessor Peripheral Definition (MPD) file associated with this module is also included. Users can utilize Xilinx Platform Studio (XPS) to incorporate this module into Microprocessor Hardware Specification (MHS). This module does not contain any logic.

### **Features**

- Used in conjunction with dsbram\_if\_cntrl peripheral to provide a deterministic DSBRAM memory solution for PowerPC405
- This module does not contain logic

LogiCORE™ Facts		
Core Specifics		
Supported Device Family	Virtex-II Pro™	
Version of Core	dsocm_v10	v1.00b
Re	esources Used	
	Min	Max
Slices	0	0
LUTs	0	0
FFs	0	0
Block RAMs	0	0
Provided with Core		
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Design Tool Requirements		
Xilinx Implementation Tools	ISE 6.1i or higher	
Verification	N/A	
Simulation	Simulation ModelSim SE/EE 5.6e or higher	
Synthesis	XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



### Data Side OCM Bus (v2.00a)

View this data sheet

### Introduction

DSOCM\_V10 is a data-side On-Chip Memory (OCM) bus interconnect core. The core connects the PowerPC 405 data-side OCM interface to OCM peripherals, e.g data-side BRAM controllers (DSBRAM\_IF\_CNTRL). For information about the PowerPC 405 OCM controller interface, see the *PowerPC 405 Processor Block Reference Guide*.

### **Features**

- Designed for use with the DSBRAM\_IF\_CNTRL peripheral to provide a deterministic data-side BRAM memory solution for PowerPC 405 based embedded systems
- Single master no bus arbitration logic
- Configurable multiple slave capability contains read-data multiplexing when used with 2 or more slaves

#### **Product Overview**

LogiCORE™ Facts			
C	ore Specifics		
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup>		
Version of Core	dsocm_v10	v2.00a	
Re	sources Used		
	Min	Max	
Slices	N/A	N/A	
LUTs	0	64 <sup>1</sup>	
FFs	0	0	
Block RAMs	0	0	
Provided with Core			
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	N/A		
Design Tool Requirements			
Xilinx Implementation Tools	•		
Verification	N/A		
Simulation	ModelSim SE/PE 5.7f or higher		
Synthesis XST			
Support			
Support provided by Xilinx, Inc.			

<sup>1.</sup>Example for 3 slaves. Size increases with number of slaves

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# Instruction Side OCM Bus v1.0 (v1.00b)

View this data sheet

#### **Product Overview**

### Introduction

The ISOCM\_V10 Bus is used as the instruction side OCM Bus interconnect for Virtex-II Pro PowerPC<sup>™</sup> 405 based embedded systems. A typical usage is to connect PowerPC405 and ISBRAM\_IF\_CNTRL modules (both can be found in EDK Infrastructure Library) to the ISOCM\_V10 Bus. For more information regarding the OCM (On-Chip Memory) controller interface in PowerPC 405 Processor, please refer to PowerPC 405 Processor Block Reference Guide.

This ISOCM\_V10 Bus in EDK Infrastructure Library is designed to be used with Platform Generator to manage memory map with consistent style as managing PLB and OPB memory map and to support future expansion. An Microprocessor Peripheral Definition (MPD) file associated with this module is also included. Users can utilize Xilinx Platform Studio (XPS) to incorporate this module into Microprocessor Hardware Specification (MHS). This module does not contain any logic.

### **Features**

- Used in conjunction with isbram\_if\_cntrl peripheral to provide a deterministic ISBRAM memory solution for PowerPC405.
- This module does not contain logic

LogiCORE™ Facts		
С	ore Specifics	
Supported Device Family	Virtex-II Pro™	
Version of Core	isocm_v10	v1.00b
Re	esources Used	
	Min	Max
Slices	TBD	TBD
LUTs	TBD	TBD
FFs	TBD	TBD
Block RAMs	0	0
Provided with Core		
Documentation	View this data shee	et
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Design Tool Requirements		
Xilinx Implementation Tools	ISE 6.1i or higher	
Verification	N/A	
Simulation	imulation ModelSim SE/EE 5.6e or higher	
Synthesis	XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# Instruction Side OCM Bus v1.0 (v2.00a)

View this data sheet

### **Product Overview**

### Introduction

ISOCM\_V10 is an instruction-side On-Chip Memory (OCM) bus interconnect core. The core connects the *PowerPC*405 instruction-side OCM interface to OCM peripherals, such as the instruction-side BRAM controller (ISBRAM\_IF\_CNTRL). For information about the *PowerPC*405 OCM controller interface, see the *PowerPC*405 Processor Block Reference Guide.

### **Features**

- Designed for use with the ISBRAM\_IF\_CNTRL peripheral to provide a deterministic instruction-side BRAM memory solution for *PowerPC*405 based embedded systems
- Single master no bus arbitration logic
- Configurable multiple slave capability contains read-data multiplexing when used with 2 or more slaves

LogiCORE™ Facts		
С	ore Specifics	
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup>	
Version of Core	isocm_v10	v2.00a
Re	sources Used	
	Min	Max
Slices	N/A	N/A
LUTs	0	64 <sup>1</sup>
FFs	0	0
Block RAMs	0	0
Provided with Core		
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Design Tool Requirements		
Xilinx Implementation Tools	ISE 6.2i or higher	
Verification	N/A	
Simulation	Simulation ModelSim SE/PE 5.7f or higher	
Synthesis XST		
Support		
Support provided by Xilinx, Inc.		

<sup>1.</sup>Example for 2 slaves. Size increases with number of slaves

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.





## *IPIF*

This section of the *Processor IP Reference Guide* includes the following topics:

- OPB IPIF Architecture (v1.23e)
  - OPB IPIF Interrupt (v1.23e)
  - OPB IPIF Packet FIFO (v1.23e)
  - Direct Memory Access and Scatter Gather (v1.23e) (v1.23e)
- OPB IPIF (v2.00h)
- OPB IPIF (v3.01a)
- PLB IPIF (v1.00e)
- PLB IPIF (v2.00a)
- PLB IPIF (v2.01a)
- Channelized Direct Memory Access and Scatter Gather



### **OPB IPIF Architecture**

View this data sheet

#### **Product Overview**

### Introduction

This document provides the architecture for the OPB IPIF, a module that facilitates the connection of Xilinx or customer IP modules to the IBM On-Chip Peripheral Bus (OPB). The OPB is part of IBM's CoreConnect<sup>TM</sup> family of data buses and associated infrastructure. CoreConnect is intended for use in system-on-a-chip environments, including Xilinx Virtex<sup>TM</sup>-II Pro FPGAs with embedded PowerPC hard processors and FPGAs using the MicroBlaze soft processor.

An Intellectual Property solution, referred to herein as an *IP*, is a function targeted for implementation in a Xilinx FPGA. The interface seen by the IP is called the *IP Interconnect* (IPIC for short). The combination of the IPIF and the IP is called a *device* (or in some circles, a *peripheral*).

In addition to facilitating OPB attachment, the IPIF provides additional optional services. These services, FIFOs, DMA, Scatter Gather (automated DMA), software reset, interrupt support and OPB bus-master access, are placed in the IPIF to standardize functionality that is common to many IPs and to reduce IP development effort. Figure 1 is a device which uses all IPIF protocols and services.

In most of the IPIF modules, the Read and Write FIFOs, DMA/SG, Interrupt Control and the Reset block, attach to the IPIC inside the IPIF and utilize the register and/or SRAM interfaces and take advantage of the centralized address decoding.

These modules are essentially on the same footing as the IP in terms of how they are interfaced to the OPB. The "glue" in the figure represents a small number of non-IPIC connections between modules.

### **Features**

The IPIF is a parametric soft IP core designed for Xilinx FPGAs and contains the capabilities and features summarized below.

- Synchronous operation
- Hardware and optional software reset

Freeze signal (requests graceful stop of IP and IPIF to facilitate debug under serious system failure; keeps interrupts from "piling up")

LogiCORE™ Facts		
	ore Specifics	
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-E, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup>	
Version of Core	opb_ipif_arch	v1.23e
Re	esources Used	
	Min	Max
I/O	N/A	N/A
LUTs	N/A	N/A
FFs	N/A	N/A
Block RAMs	N/A	N/A
Pro	vided with Core	
Documentation	View this data sh	eet
Design File Formats	N/A	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Design Tool Requirements		
Xilinx Implementation Tools	N/A	
Verification	N/A	
Simulation	N/A	
Synthesis	N/A	
Support		
Provided by Xilinx, Inc		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



#### Slave Interface:

- FPGA friendly protocol meeting requirements of most new and legacy IP
  - · Separate Address, Data-In, and Data-Out Buses
  - · Transaction Qualification: Read Reg, Write Reg, Byte Enable, Burst
  - · Transaction Response: Read Ack, Write Ack, Error, Retry, Timeout Suppression
- Register Interface (optional)
  - · Per register address decodes
  - Separate read and write enables for decoded register addresses
  - Doesn't need the address
- SRAM Interface—for IP with SRAM-like interface (optional)
  - · Block-address decode
  - · Single enable (read or write) for the decoded block address
  - · Uses the address
- Support for burst transactions (optional)
- Interrupt Support (optional):
  - Parameterizeable: Select the required features
  - Captures up to 32 interrupt events from the IP
  - Device Interrupt Source Controller (ISC) in the IPIF is at top of a hierarchy of ISCs
    - · Optional
    - · Hierarchical structure can be eliminated by user parameter when all interrupt events are from the IP, leaving only the device-global interrupt enable function of the device ISC
  - IP ISC
    - IP may pass in one or more interrupt events which are latched, enabled, and cleared in the IP ISC, which passes its interrupt-active condition to the device ISC
  - IP Interrupt condition option
    - When the IPIF is configured without interrupt support, the IP may latch, enable and clear interrupts itself and
      pass the interrupt condition directly to the system interrupt controller
  - IPIF ISCs, as needed, feed additional interrupt-active conditions to the device ISC
    - E.g., one ISC for each DMA channel
- Master Interface (optional):
  - Parameterizeable: Select the required features
  - Bus Address
  - Local Address (allows master general access to local resources)
    - · In lieu of dedicated in and out master data paths, the local address allows the slave-mode data paths and address decoding to be leveraged for master operations
    - · Advantageous for devices with addresses that are accessed by remote OPB masters and by a local master
    - · Cooperation between the Slave Attachment and the Master Attachment used to complete master operations
  - Single and burst transactions
  - Transaction Qualification: Read Req, Write Req, Byte Enable, Burst, Bus Lock
  - Transaction Response: separate Read and Write Acks, Transaction ack, Error, Retry, Timeout
- Write Packet FIFO (optional)
  - Parameterizeable: Select the required features
  - BRAM based
  - Packet support: Data reads by IP can be provisional until explicitly committed:
    - · Mark command sets a a reference point for uncommitted reads
    - · Restore command discards uncommitted reads; data is reread starting at the mark
    - · Release command commits uncommitted reads
    - · Useful, for example, in protocols that require retransmission
    - Interrupt when uncommitted reads empty the entire contents of the FIFO (indicates that the FIFO is too small for the application)
  - Written from the OPB via IPIF-internal connection to the IPIC



- Status can be read from the OPB
- Read by IP via request/acknowledge protocol
- Dedicated Data Path to the IP
- IP Status flags: Empty, Almost Empty (one occupied), Occupancy Count
- Optional Module Identification Register
- Read FIFO (optional):
  - Parameterizeable: Select the required features
  - BRAM based
  - Packet support: Data writes by IP can be provisional until explicitly committed:
    - · Mark command sets a a reference point for uncommitted writes
    - · Restore command discards uncommitted writes; data is re-written starting at the mark
    - · Release command commits uncommitted writes
    - · Useful, for example, in protocols that discard data on error conditions or address misses
    - · Interrupt when uncommitted writes fill the entire contents of the FIFO (indicates that the FIFO is too small for the application)
  - Read from the OPB via IPIF-internal connection to the IPIC
  - Status can be read from the OPB
  - Written by IP via request/acknowledge protocol
  - Dedicated Data Path from the IP
  - IP Status flags: Full, Almost Full (one vacant), Vacancy Count
    - · Mark command sets a a reference point for uncommitted writes
    - · Restore command discards uncommitted writes; data is re-written starting at the mark
    - · Release command commits uncommitted writes
    - Useful, for example, in protocols that discard data on error conditions or address misses
    - · Interrupt when uncommitted writes fill the entire contents of the FIFO (indicates that the FIFO is too small for the application)
  - Optional Module Identification Register
- DMA/Scatter Gather (optional):
  - Parameterizeable: Select the required features
  - Up to Two DMA channels may be included
  - Optional scatter gather capability for channels
  - Optional packet capability for SG channels
  - Optional interrupt coalescing for packet SG channels (number of packets per interrupt is software selectable; time wait bound gives packets guaranteed timely visibility)
  - Optional Module Identification Register
  - Attaches to IPIC internal to the IPIF
  - Uses an IPIF-internal master interface



### **OPB IPIF Interrupt**

View this data sheet

#### **Product Overview**

### Introduction

The OPB IPIF function has a requirement to collect all internal interrupts within a peripheral device and coalesce those interrupts through masking and 'ORing' into a single interrupt output that is sent to the microprocessor system Interrupt Controller (ITNC).

The IPIF Interrupt module, therefore, provides interrupt support logic for a user IP (connected to the IPIF) and internal IPIF interrupt source functions (DMA/SG, PFIFOs, etc.).

The IPIF Interrupt module incorporates two main functions: the Device Interrupt Source Controller (ISC) and the IP ISC. Each ISC function collects multiple interrupt inputs and outputs a single interrupt.

### **Features**

The IPIF Interrupt module is incorporated in the standard OPB IPIF block designed for Xilinx FPGAs and contains these features:

- IP Interrupt Source Controller Function
  - Parameterized number of interrupts needed by IP
  - Provides both Interrupt Status Register (ISR) and Interrupt Enable Register (IER) functions for the user IP connecting to the IPIF
    - Registers are OPB accessible via the IPIF Local Bus Interface
- Device Interrupt Source Controller Function
  - Device ISC omission through input parameter programming
  - Parameterized number of local IPIF generated interrupt sources
  - Provides both Interrupt Status Register (ISR) and Interrupt Enable Register (IER) functions for the Device level interrupts
    - Registers are OPB accessible via the IPIF Local Bus Interface.
  - Selectable Priority Encoder function on asserted and enabled interrupts
    - Global Enable/Disable for final interrupt output to the System Interrupt Controller.

LogiCORE™ Facts		
C	ore Specifics	
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-E, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup>	
Version of Core	opb_ipif_interrupt	v1.23e
Re	esources Used	
	Min	Max
I/O	N/A	N/A
LUTs	N/A	N/A
FFs	N/A	N/A
Block RAMs	N/A	N/A
Provided with Core		
Documentation	View this data sheet	
Design File Formats	N/A	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Design Tool Requirements		
Xilinx Implementation Tools	N/A	
Verification	N/A	
Simulation	N/A	
Synthesis	N/A	
Support		
Provided by Xilinx, Inc		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



### **OPB IPIF Packet FIFO**

View this data sheet

#### **Product Overview**

### Introduction

This specification defines the First In First Out memory design incorporating packet data support (PFIFO). The PFIFO resides within the Xilinx Intellectual Property Interface (IPIF) module which interfaces to a host bus structure such as the IBM OPB. The FIFOs primarily utilize Virtex BRAM elements as the basic data storage medium.

FIFO depths of 16 words or less may optionally utilize SRL16 elements as the memory medium. The memory is coupled with surrounding counters and logic that are necessary for the functional requirements.

These requirements include interfaces to the IP, interfaces to the Direct Memory Access/ Scatter Gather (DMA/SG) interface, and to the IPIF Local Bus protocol.

The PFIFO is used as a data buffering agent between the IP function and a Bus Master such as a DMA/SG Engine. The basic operation of the module is a FIFO buffer. Data can be shuttled in and out of the module without the need for the accessing agent to provide successive memory addresses. Data is stored and read in a First In First Out (FIFO) sequence. However, the PFIFO to IP interface has been enhanced with additional packet management controls that facilitate packet retransmission or receive packet discard functionality necessary for efficient operation of some IP protocols (such as Ethernet).

The IPIF accesses the PFIFO module as a simple memory mapped "FIFO" interface and memory mapped registers.

A PFIFO module is instantiated within the IPIF framework and consists of two different types: a Write PFIFO (WrPFIFO) and a Read PFIFO (RdPFIFO). The WrPFIFO is the intermediate storage medium for data from the Host Bus to the IP.

The RdPFIFO is used to buffer data from the IP that needs to be sent to the Host Bus. Both Packet FIFO designs utilize a single synchronous clock domain for the input and output sides of the modules. This simplifies the design and reduces LUT count as compared to an asynchronous dual clock implementation.

LogiCORE™ Facts		
С	ore Specifics	
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-E, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup>	
Version of Core	opb_pfifo	v1.23e
Re	esources Used	
	Min	Max
I/O	N/A	N/A
LUTs	N/A	N/A
FFs	N/A	N/A
Block RAMs	N/A	N/A
Provided with Core		
Documentation	View this data sheet	
Design File Formats	N/A	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Design Tool Requirements		
Xilinx Implementation Tools	N/A	
Verification	N/A	
Simulation	N/A	
Synthesis	N/A	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



### **Features**

- Two independent functions are provided: the Read PFIFO (for host bus receive data buffering) and the Write PFIFO (for host bus transmit data buffering).
- The PFIFO design adheres to IPSPEC035 OPB IPIF Architectural Specification.
- User controlled features that include parameters for:
  - Setting FIFO data width
  - Setting FIFO data depth (words)
  - Inclusion/Omission of Packet mode support
  - Setting IPIF Data Bus width
  - Inclusion/Omission of Vacancy calculation for write port
  - Selecting Target FPGA family type
  - Inclusion/Omission of Module Identification Register
- "FIFO like" status outputs of AlmostFull, Full, AlmostEmpty, and Empty in addition to true 'Occupancy' and 'Vacancy' outputs. Host bus interface provides applicable status as a read accessible Status Register
- Write and Read Ports synchronized to a common clock source (synchronous operation)
- IPIF Local Bus Read access to Occupancy count on the Read PFIFO and the Vacancy count of the Write FIFO

The PFIFO modules can be reset from either an external reset input signal or a software initiated write to the Reset Register port.



## Direct Memory Access and Scatter Gather (v1.23e)

View this data sheet

#### **Product Overview**

### Introduction

Many soft IP input/output peripheral devices in Xilinx products with embedded or attached processors require the automation facilities of Direct Memory Access and Scatter Gather. This is a specification for such facilities.

### **DMA[SG] Controller Overview**

### **Definitions**

Direct memory access (DMA) allows for a bounded number of sequential data transfers to take place between regions in the address space (typically between memory and an I/O device) without processor management of individual transfers. The processor sets up the *DMA operation* by specifying the number accesses and the source and destination addresses.

Scatter gather (SG) allows a sequence of DMA operations to be pre-specified by software and performed automatically without further processor intervention. The processor prepares the DMA operations in a system of buffers and their associated *Buffer Descriptors*. The SG automation hardware processes the Buffer Descriptors and performs the DMA operations specified therein through activation of the DMA hardware.

Often it is useful to consider that one or more DMA operations combine to compose a higher-level unit of data. An example of such a unit is a packet or frame of data in a communications protocol. This specification addresses issues associated with the handling of packets and allows packets to be distributed across one or more buffers.

LogiCORE™s Facts		
C	ore Specifics	
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-E, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup>	
Version of Core	opb_ipif_dma_sg v1.23e	
Re	esources Used	
	Min	Max
I/O	N/A	N/A
LUTs	N/A	N/A
FFs	N/A	N/A
Block RAMs	N/A	N/A
Pro	vided with Core	
Documentation	View this data shee	et
Design File Formats	N/A	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Design Tool Requirements		
Xilinx Implementation Tools	N/A	
Verification	N/A	
Simulation	N/A	
Synthesis	N/A	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



### OPB IPIF (v2.00h)

View this data sheet

### **Product Overview**

### Introduction

The OPB IPIF is a continuation of the Xilinx family of IBM CoreConnect compatible LogiCORE products. It provides a bi-directional interface between a User IP core and the OPB 32-bit bus standard. The OPB is a peripheral bus for the Embedded PPC405 processor featured in the Xilinx Virtex-II Pro product line and for the MicroBlaze™ processor, a soft core that can be implemented in many Xilinx FPGA families.

### **Features**

- Compatible with IBM CoreConnect 32-bit OPB.
- Supports User IP data widths from 8 bits to 32 bits with automatic byte steering.
- Extensive User customizing support via HDL parameterization. User optioned services include:
  - Local IP Interrupt collection with User S/W programmable enables/disables.
  - User S/W triggered reset generator for localized reset of User's core.
  - Burst transfer support.
  - DMA function with optional Scatter/Gather mechanization.
  - User configured WrFIFO with optional IP packet support.
  - User configured RdFIFO with optional IP packet support.

LogiCORE™ Facts			
C	ore Specifics		
Supported Device Family	Spartan-II™, Spartan-IIE™, Spartan-3™, Virtex™, Virtex-II™, Virtex-II Pro™, Virtex-E		
Version of Core	opb_ipif	v2.00h	
Resources Used			
	Min	Max	
Slices			
LUTs			
FFs			
Block RAMs			
Provided with Core			
Documentation	<u>View</u> this data sheet		
Design File Formats	VHDL		
Constraints File	None		
Verification	EDK Simulation Support		
Instantiation Template	N/A		
Reference Designs	N/A		
Design Tool Requirements			
Xilinx	Xilinx EDK 6.1 SP2		
Implementation Tools	Xilinx ISE 6.1		
Verification	ModelSim SE 5.6d or later		
Simulation	ModelSim SE 5.6d or later		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



### **OPB IPIF (v3.01a)**

View this data sheet

### **Product Overview**

### Introduction

The OPB IPIF is a continuation of the Xilinx family of IBM CoreConnect<sup>™</sup> compatible LogiCORE<sup>™</sup> products. It provides a bidirectional interface between a user IP core and the OPB 32-bit bus standard. The Xilinx OPB IPIF is available for use with various FPGA device families that support embedded hard or soft processors.

### **Features**

- Compatible with IBM CoreConnect 32-bit OPB
- Supports User IP data widths from 8 bits to 32 bits with automatic byte steering
- Extensive User customizing support via HDL parameterization. User optioned services include:
  - Local IP Interrupt collection with User S/W programmable enables/disables
  - User S/W triggered reset generator for localized reset of User's core
  - Sequential-Address transfer support
  - User configured WrFIFO with optional IP packet support
  - User configured RdFIFO with optional IP packet support

LogiCORE™ Facts				
C	Core Specifics			
Supported Device Family	Spartan-II™, Spartan-IIE™, Spartan-3™, Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-II Pro™, Virtex-E			
Version of Core	opb_ipif	v3.01a		
Re	Resources Used			
	Min	Max		
Slices	20	567		
LUTs	31	817		
FFs	10	511		
Block RAMs	0	4		
Provided with Core				
Documentation	<u>View</u> this data sheet			
Design File Formats	VHDL			
Constraints File	None			
Verification	EDK Simulation Support			
Instantiation Template	N/A			
Reference Designs	N/A			
Design Tool Requirements				
Xilinx Implementation Tools	Xilinx EDK 6.1 SP2 Xilinx ISE 6.1			
Verification	ModelSim SE 5.6d or later			
Simulation	ModelSim SE 5.6d or later			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



### PLB IPIF (v1.00e)

View this data sheet

### Introduction

The PLB IPIF V1\_00\_e is a continuation of Xilinx's family of IBM CoreConnect compatible LogiCORE<sup>™</sup> products. It provides a bi-directional interface between a User IP core and the PLB 64-bit bus standard. The PLB is the local bus for the Embedded PPC405 processor featured in the Xilinx Virtex-II Pro<sup>™</sup> product line. This version of the PLB IPIF has been optimized for PLB Slave operation. It does not provide support for DMA and IP Master Services.

### **Features**

- Compatible with IBM CoreConnect 64-bit PLB.
- Supports User IP data widths from 8 bits to 64 bits with automatic byte steering.
- Extensive User customizing support via HDL parameterization. User optioned services include:
  - Local IP Interrupt Service with User S/W programmable enables/disables.
  - User S/W triggered reset generator for localized reset of User's core.
  - PLB Single, Cacheline, Fixed Length Burst, and Indeterminate Length Burst support.
  - Optional WrFIFO Service with optional IP packet support.
  - Optional RdFIFO Service with optional IP packet support.
  - Optional PLB SESR/SEAR Service.

#### **Product Overview**

LogiCORE™ Facts		
Core Specifics		
Supported Device Family	Virtex-II Pro	
Version of Core	plb_ipif	v1.00e
Resources Used		
	Min	Max
Slices	161	763
LUTs	62	1255
FFs	259	828
Block RAMs	0	128
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	None	
Verification	EDK Simulation Support	
Instantiation Template	Provided by EDK IP Wizard tool	
Reference Designs	EDK PLB IPIF Template Reference Designs	
Design Tool Requirements		
Xilinx Implementation Tools	Xilinx EDK 6.x Xilinx ISE 6.x	
Verification	ModelSim SE 5.6d or later	
Simulation	ModelSim SE 5.6d or later	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



### PLB IPIF (v2.00a)

View this data sheet

### **Product Overview**

### Introduction

The PLB IPIF is a continuation of Xilinx's family of IBM CoreConnect™ compatible LogiCORE products. It provides a bi-directional interface between a User IP core and the PLB 64-bit bus standard. The PLB is the local bus for the Embedded PPC405 processor featured in the Xilinx Virtex-II Pro product line.

### **Features**

- Compatible with IBM CoreConnect 64-bit PLB.
- Supports User IP data widths from 8 bits to 64 bits with automatic byte steering.
- Extensive User customizing support via HDL parameterization. User optioned services include:
  - Local IP Interrupt collection with User S/W programmable enables/disables
  - User S/W triggered reset generator for localized reset of User's core
  - PLB Fixed Length Burst transfer support.
  - DMA function with optional Scatter/Gather mechanization
  - User configured WrFIFO with optional IP packet support
  - User configured RdFIFO with optional IP packet support
  - PLB SESR/SEAR support

LogiCORE™ Facts			
Core Specifics			
Supported Device Family	Virtex-II Pro™		
Version of Core	V2.00a		
Resources Used			
	Min	Max	
Slices	176	2487	
LUTs	138	3947	
FFss	286	1947	
Block RAMs	0	128	
Provided with Core			
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	None		
Verification	EDK Simulation Support		
Instantiation Template	EDK PLB IPIF User Templates		
Reference Designs	EDK PLB IPIF Template Reference Designs		
Design Tool Requirements			
Xilinx Implementation Tools	Xilinx EDK 3.2 SP3 Xilinx ISE 5.2		
Verification	ModelSim SE 5.6d or later		
Simulation	ModelSim SE 5.6d or later		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



### PLB IPIF (v2.01a)

**Product Overview** 

View this data sheet

### Introduction

The PLB IPIF is a continuation of the Xilinx family of IBM CoreConnect compatible LogiCORE<sup>™</sup> products. It provides a bi-directional interface between a User IP core and the PLB 64-bit bus standard. The PLB is the local bus for the Embedded PPC405 processor featured in the Xilinx Virtex-II Pro<sup>™</sup> product line.

### **Features**

- Compatible with IBM CoreConnect 64-bit PLB.
- Supports User IP data widths from 8 bits to 64 bits with automatic byte steering.
- Extensive User customizing support via HDL parameterization. User optioned services include:
  - Local IP Interrupt collection with User S/W programmable enables/disables.
  - User S/W triggered reset generator for localized reset of User's core.
  - PLB Fixed Length Burst transfer support.
  - User configured WrFIFO with optional IP packet support.
    - WrFIFO frontend is now enhanced with a Data Realignment Engine(Patent Applied For) which improves DMA throughput when source data buffers are unaligned with 64-bit addressing.
  - User configured RdFIFO with optional IP packet support.
  - DMA function with optional Scatter/Gather mechanization.
    - Now enhanced to Leverage the WrFIFO Data Realignment Engine technology.
  - PLB SESR/SEAR support.
  - PLB Master support.

LogiCORE™ Facts		
Core Specifics		
Supported Device Family	Virtex-II Pro™	
Version of Core	plb_ipif	v2.01a
Resources Used		
	Min	Max
Slices	180	2593
LUTs	135	4546
FFs	287	2211
Block RAMs	0	128
Provided with Core		
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	None	
Verification	EDK Simulation Support	
Instantiation Template	None	
Reference Designs	None	
Design Tool Requirements		
Xilinx	Xilinx EDK	
Implementation Tools	Xilinx ISE	
Verification	ModelSim SE 5.6d or later	
Simulation	ModelSim SE 5.6d or later	

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



### **Channelized Direct Memory Access and Scatter Gather**

View this data sheet

#### **Product Overview**

### Introduction

This specification is for a DMA Scatter Gather controller which can scale up to a relatively large number of channels (hundreds). Many concepts from an earlier Xilinx<sup>™</sup> DMA Scatter Gather controller are retained and some are dropped or altered to cater to the needs of a channelized implementation and the use of BRAM to store channel state.

An example of a communications controller that needs a high number of DMASG channels is an HDLC controller with multiple physical channels and multiple TDM (time-division multiplexed) sub-channels per physical channel. The present DMASG controller is specified with such a system, or similar, in mind.

The Channelized Direct Memory Access and Scatter Gather controller is packaged as a service within a Xilinx IPIF bus-connection block.

### **Features**

- Available as a service in selected IPIFs
- Supports up to 16 physical channels
- Supports up to 64 subchannels per physical channel
- BRAM implementation limits resource usage as number of channels scales up
- Supports packet SG, simple SG and simple DMA
- Status FIFO interface for synchronization with communications controller
- Event FIFO for reporting interrupts
- Supports optional Interrupt coalescing.

LogiCORE™ Facts		
С	ore Specifics	
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II, Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E	
Version of Core	chan_dma_sg	v1.00a
Resources Used		
	Min	Max
I/O	N/A	N/A
LUTs	830	960
FFs	330	370
Block RAMs	1	8
Pro	vided with Core	
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	UCF	
Verification	VHDL Test bench	
Instantiation Template	VHDL Wrapper	
Reference Designs	N/A	
Design Tool Requirements		
Xilinx Implementation Tools	ISE 5.1 or later	
Verification	ModelSim PE 5.6d	
Simulation	ModelSim PE 5.6d	
Synthesis	XST	
Support		
Support provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at http://www.xilinx.com/legal.htm. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



## Memory Interface Cores

This section of the *Processor IP Reference Guide* includes the following topics:

- LMB Block RAM (BRAM) Interface Controller
- OPB External Memory Controller (EMC) (v1.10b)
- OPB Synchronous DRAM (SDRAM) Controller (v1.00c)
- OPB Synchronous DRAM (SDRAM) Controller (v1.00d)
- OPB Block RAM (BRAM) Interface Controller (v1.00a)
- OPB Double Data Rate (DDR) Synchronous DRAM (SDRAM) Controller (v1.10a)
- OPB SYSACE (System ACE) Interface Controller (v1.00b)
- PLB External Memory Controller (EMC) (v1.10b)
- PLB External Memory Controller (EMC) (v2.00.a)
- PLB Synchronous DRAM (SDRAM) Controller (v1.00c)
- PLB Synchronous DRAM (SDRAM) Controller (v1.00d)
- PLB Block RAM (BRAM) Interface Controller (v1.00a)
- PLB Block RAM (BRAM) Interface Controller (v1.00b)
- PLB Double Data Rate (DDR) Synchronous DRAM (SDRAM) Controller (v1.00c)
- PLB Double Data Rate (DDR) Synchronous DRAM (SDRAM) Controller (v1.10a)
- PLB Double Data Rate (DDR) Synchronous DRAM (SDRAM) Controller (v1.11a)
- Data Side Block RAM (DSBRAM) Interface Controller (v2.00a)
- Data-Side BRAM Interface Controller (v3.00a)
- Instruction Side Block RAM (ISBRAM) Interface Controller (v2.00a)
- Instruction Side Block RAM (ISBRAM) Interface Controller (v3.00a)
- Block RAM (BRAM) Block (v1.00a)



# LMB Block RAM (BRAM) Interface Controller

View this data sheet

#### **Product Overview**

### Introduction

This document provides the design specification for the Local Memory Bus (LMB) Block Ram (BRAM) Interface Controller, a module that attaches to one LMB.

This controller supports the LMB v1.0 bus protocol and byte-enable architecture. Any access size up to the width of the LMB data bus is permitted. The LMB BRAM Interface Controller is the interface between the LMB and the bram\_block peripheral. A BRAM memory subsystem consists of the controller along with the actual BRAM components that are included in the bram\_block peripheral.

## **Features**

- LMB v1.0 bus interfaces with byte enable support
- Used in conjunction with bram\_block peripheral to provide fast BRAM memory solution for MicroBlaze<sup>™</sup> ILMB and DLMB ports.
- Supports byte, half-word, and word transfers.

LogiCORE™ Facts		
С	ore Specifics	
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E	
Version of Core	lmb_bram_if_cntlr	v1.00b
Re	esources Used	
	Min	Max
Slices	N/A	N/A
LUTs	6	6
FFs	2	2
Block RAMs	0	0
Pro	vided with Core	
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design	Tool Requirements	
Xilinx Implementation Tools	ISE 6.3i or higher	
Verification	N/A	
Simulation	Simulation ModelSim SE/PE 5.7b or later	
Synthesis XST		
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# **OPB External Memory Controller** (EMC) (v1.10b)

View this data sheet

#### **Product Overview**

### Introduction

This specification defines the architecture and interface requirements for the EMC module, which supports data transfers between the On-Chip Peripheral Bus (OPB) and external synchronous and asynchronous memory devices.

Example synchronous devices for use with this controller are the synchronous Integrated Device Technology, Inc. IDT71V546 SRAM with ZBT<sup>™</sup> Feature. Example asynchronous devices include the IDT71V416S SRAM and Intel 28F128J3A StrataFlash Memory.

The Xilinx EMC design allows the customer to tailor the EMC to suit their application by setting certain parameters to enable/disable features.

#### **Features**

The EMC is a soft IP core designed for Xilinx FPGAs:

- Parameterized for up to a total of eight memory (Synchronous/Asynchronous) banks
  - Separate base addresses and address range for each bank of memory
  - Separate Control Register for each bank of memory to control memory mode
- OPB V2.0 bus interface with byte-enable support
- Memory width is independent of OPB bus width (memory width must be less than or equal to OPB bus width)
  - Supports memory widths of 32 bits, 16 bits, or 8 bits
  - Memory width can vary by bank
- Parameterizable memory data-width/bus data-width matching
  - Multiple memory cycles will be performed when the memory width is less than the OPB bus width to provide full utilization of the OPB bus
  - Data-width matching can be enabled separately for each memory bank
- Configurable wait states for read, write, read in page, read recovery before write, and write recovery before read
  - Optional faster access for in-page read accesses (page size 8 bytes)

Log	LogiCORE™ Facts		
С	ore Specifics		
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II, Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E		
Version of Core	opb_emc	v1.10b	
Re	esources Used		
	Min	Max	
Slices	163	310	
LUTs	157	254	
FFs	215	445	
Block RAMs	0	0	
Pro	vided with Core		
Documentation	<u>View</u> this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design	Tool Requiremen	its	
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	ulation ModelSim SE/EE 5.6e or later		
Synthesis	XST		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# **OPB Synchronous DRAM** (SDRAM) Controller (v1.00c)

View this data sheet

#### **Product Overview**

### Introduction

The Xilinx OPB SDRAM controller soft IP core provides a SDRAM controller that connects to the OPB bus and provides the control interface for SDRAMs. It is assumed that the reader is familiar with SDRAMs and the IBM PowerPC $^{\text{TM}}$ .

### **Features**

- OPB interface
- Performs device initialization sequence upon power-up and reset conditions
- · Performs auto-refresh cycles
- Supports single-beat and burst transactions
- Supports target-word first cache-line transactions
- Supports cacheline latencies of 2 or 3 set by a design parameter
- Supports various SDRAM data widths set by a design parameter

Log	LogiCORE™ Facts		
С	ore Specifics		
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-E, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup>		
Version of Core	SDRAM	v1.00c	
Re	esources Used		
	Min	Max	
Slices	228	252	
LUTs	246	285	
FFs	214	287	
Block RAMs	0	0	
Provided with Core			
Documentation	<u>View</u> this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design	Tool Requiremen	its	
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	ModelSim SE/EE 5.6e or later		
Synthesis	Synthesis XST		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# **OPB Synchronous DRAM** (SDRAM) Controller (v1.00d)

View this data sheet

#### **Product Overview**

### Introduction

The Xilinx OPB SDRAM Controller provides a SDRAM Controller that connects to the OPB and provides the control interface for SDRAMs. It is assumed that the reader is familiar with SDRAMs and the IBM  $PowerPC^{TM}$ .

#### **Features**

The OPB SDRAM Controller is a soft IP core designed for Xilinx FPGAs and contains the following features:

- OPB interface
- Performs device initialization sequence upon power-up and reset conditions
- · Performs auto-refresh cycles
- Supports single-beat and burst transactions
- Supports various SDRAM data widths (8, 16 and 32 bits) set by a design parameter
- Operating frequency >=100MHz

LogiCORE™ Facts		
C	Core Specifics	
Supported Device Family	QPro™-R Virtex-II™, QPro Virtex-II, Spartan-II™, Spartan-IIE™, Spartan-3™, Virtex™, Virtex-II, Virtex-II Pro™, Virtex-4™, Virtex-E	
Version of Core	SDRAM	v1.00d
R	esources Used	
	Min	Max
Slices	207	370
LUTs	223	475
FFs	207	345
Block RAMs	N/A	N/A
Provided with Core		
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N	I/A
Reference Designs	No	one
Design	Tool Requirement	nts
Xilinx Implementation Tools	ISE 6.1i or later	
Verification	N/A	
Simulation	ModelSim SE/EE 5.8e or later	
Synthesis XST/Synplify Pro 7.5 or later		
Support		
Support provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# OPB Block RAM (BRAM) Interface Controller (v1.00a)

View this data sheet

#### **Product Overview**

### Introduction

The OPB BRAM Interface Controller module attaches to the OPB (On-chip Peripheral Bus) and supports the OPB v2.0 byte enable architecture. Any access size up to the width of the OPB data bus is permitted. The OPB BRAM Interface Controller is the interface between the OPB and the bram\_block peripheral. A BRAM memory subsystem consists of the controller along with the actual BRAM components that are included in the bram\_block peripheral. System Generator for Processors automatically adds the bram\_block when a bram interface controller is instantiated. If the text-based Microprocessor Hardware Specification (MHS) file is used for design entry, then the bram controller and bram\_block must both be explicitly instantiated.

#### **Features**

- OPB v2.0 bus interface with byte-enable support
- Used in conjunction with bram\_block peripheral to provide total BRAM memory solution
- · Supports a wide rangebbb of memory sizes
- Handles byte, half-word, word and double word transfers
  - Single cacheline bursts

Logi	LogiCORE™ Facts		
С	ore Specifics		
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II, Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E		
Version of Core	opb_bram_if_cntlr	v1.00a	
Re	esources Used		
	Min	Max	
Slices	25	34	
LUTs	16	30	
FFs	33	55	
Block RAMs	0	0	
Pro	vided with Core		
Documentation	View this data shee	et	
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design	Tool Requirements		
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	Simulation ModelSim SE/EE 5.6e or later		
Synthesis	XST		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



OPB Double Data Rate (DDR)
Synchronous DRAM (SDRAM)
Controller (v1.00b)

View this data sheet

**Product Overview** 

### Introduction

The Xilinx OPB DDR SDRAM controller for Virtex-II™ and Virtex-II Pro™ FPGAs provides a DDR SDRAM controller thta connects to the OPB bus and provides the control interface for DDR SDRAMs. It is assumed that the reader is familiar with DDR SDRAMs and the IBM PowerPC™.

### **Features**

The Xilinx DDR SDRAM Controller is a soft IP core designed for Xilinx FPGAs and contains the following features:

- OPB interface
- Performs device initialization sequence upon power-up and reset conditions
- Performs auto-refresh cycles
- Supports single-beat and burst transactions
- Supports target-word first cache-line transactions
- Supports cacheline latencies of 2 or 3 set by a design parameter
- Supports various DDR data widths set by a design parameter

LogiCORE™ Facts		
С	ore Specifics	
Supported Device Family	Virtex-II Pro™, Virtex-II™, Spartan-3™	
Version of Core	DDR	v1.00b
Re	esources Used	
	Min	Max
Slices	278	314
LUTs	352	371
FFs	250	307
Block RAMs	0	0
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	imulation ModelSim SE/EE 5.6e or later	
Synthesis	XST	
Support		
Provided by Xilinx, Inc	-	

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



OPB Double Data Rate (DDR)
Synchronous DRAM (SDRAM)
Controller (v1.10a)

View this data sheet

**Product Overview** 

### Introduction

The Xilinx On-Chip Peripheral Bus Double Data Rate (OPB DDR) Synchronous DRAM (SDRAM) controller for Xilinx FPGAs provides a DDR SDRAM controller which connects to the OPB bus and provides the control interface for DDR SDRAMs. It is assumed that the reader is familiar with DDR SDRAMs and the IBM *PowerPC*.

#### **Features**

The Xilinx DDR SDRAM Controller is a soft IP core designed for Xilinx FPGAs with the following features:

- OPB interface
- Performs device initialization sequence upon power-up and reset conditions for ~200uS
- Performs auto-refresh cycles
- Supports CAS latencies of 2 or 3 set by a design parameter
- Supports various DDR data widths set by a design parameter
- Provides big-endian connections to memory devices.
   See the Connecting to Memory section in this document for details on memory connections
- Supports multiple (up to 4) DDR memory banks

LogiCORE™ Facts		
С	ore Specifics	
Supported Device Family	QPro™-R Virtex-II™, QPro Virtex-II, Spartan-3™, Virtex-II, Virtex-II Pro™, Virtex-4™	
Version of Core	opb_ddr	v1.10a
Re	esources Used	
	Min	Max
Slices	332	563
LUTs	353	637
FFs	314	444
Block RAMs	0	0
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	Simulation ModelSim SE/EE 5.6e or later	
Synthesis XST		
Support		
Support provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# **OPB SYSACE (System ACE) Interface Controller (v1.00b)**

View this data sheet

#### **Product Overview**

### Introduction

The OPB System ACE™ Interface Controller is a module that attaches to the OPB (On-chip Peripheral Bus).

This controller supports the OPB v2.0 byte enable architecture. Any access size up to the width of the OPB data bus is permitted. The OPB System ACE Interface Controller is the interface between the OPB and the System ACE Compact-Flash solution peripheral.

#### **Features**

- OPB v2.0 bus interface with byte-enable support
- Used in conjunction with System ACE CompactFlash Solution to provide a System ACE memory solution
- System ACE Microprocessor Interface (MPU)
  - Read/Write from or to a CompactFlash device
  - MPU provides a clock for proper synchronization
  - Must comply with System ACE timing
- ACE Flash (Xilinx-supplied Flash Cards)
  - Densities of 128 MBits and 256 MBits
  - CompactFlash Type 1 form factor
    - Supports any standard CompactFlash module, or IBM mlcrodrives up to 8 Gbits, all with the same form factor.
- · Handles byte, half-word, and word transfers

LogiCORE™ Facts		
С	ore Specifics	
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II, Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E	
Version of Core	opb_sysace	v1.00b
Re	esources Used	
	Min	Max
Slices	83	90
LUTs	70	78
FFs	112	135
Block RAMs	0	0
Provided with Core		
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e or later	
Synthesis	XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# PLB External Memory Controller (EMC) (v1.10b)

View this data sheet

#### **Product Overview**

### Introduction

This specification defines the architecture and interface requirements for the EMC module, which supports data transfers between the Processor Local Bus (PLB) and external synchronous and asynchronous memory devices.

Example synchronous devices for use with this controller are the synchronous Integrated Device Technology, Inc. IDT71V546 SRAM with ZBT™ Feature. Example asynchronous devices include the IDT71V416S SRAM and Intel 28F128J3A StrataFlash Memory. The Xilinx EMC design allows the customer to tailor the EMC to suit their application by setting certain parameters to enable/disable features.

#### **Features**

The EMC is a soft IP core designed for Xilinx FPGAs:

- Parameterized for up to a total of eight memory (Synchronous/Asynchronous) banks
  - Separate base addresses and address range for each bank of memory
- Separate Control Register for each bank of memory to control memory mode
- Supports the following PLB transactions:
  - Single beat read/write transfers
  - In-line burst for 4,8,16 word cacheline read/write transfers
- Memory width independent of PLB bus width (memory width must be less than or equal to PLB bus width)
  - Supports memory widths of 64 bits, 32 bits, 16 bits, or 8 bits, which can vary by bank
- Parameterizable memory data-width/bus data-width matching
  - Multiple memory cycles are performed when the memory width is less than thePLB bus width to provide full utilization of the PLB bus
  - Data-width matching can be enabled separately for each memory bank
- Configurable wait states for read, write, read in page, read recovery before write, and write recovery before read
  - Optional faster access for in-page read accesses (page size 8 bytes)

LogiCORE™ Facts		
Core Specifics		
Supported Device Family	Virtex-II Pro™	
Version of Core	plb_emc	v1.10b
Re	esources Used	
	Min	Max
Slices	322	718
LUTs	337	823
FFs	389	898
Block RAMs	0	0
Provided with Core		
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design	Tool Requiremen	ts
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e or later	
Synthesis	XST	
Support		
Provided by Xilinx, Inc		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# PLB External Memory Controller (EMC) (v2.00.a)

View this data sheet

#### **Product Overview**

### Introduction

This specification defines the architecture and interface requirements for the EMC. This module supports data transfers between the Processor Local Bus (PLB) and external synchronous and asynchronous memory devices.

Example synchronous devices for use with this controller are the synchronous Integrated Device Technology, Inc. IDT71V546 SRAM with ZBT<sup>™</sup> feature. Example asynchronous devices include the IDT71V416S SRAM and Intel 28F128J3A StrataFlash Memory.

The Xilinx EMC design allows the customer to tailor the EMC to suit their application by setting certain parameters to enable/disable features.

#### **Features**

The EMC is a soft IP core designed for Xilinx FPGAs and has the following features:

- Parameterized for up to a total of four memory (Synchronous/Asynchronous) banks
  - Separate base addresses and address range for each bank of memory
- Separate Control Register for each bank of memory to control memory mode
- Supports the following PLB transactions:
  - single beat read/write transfers
  - In-line burst for 4,8,16 word cacheline read/write transfers
  - Determinate/Indeterminate burst
- Memory width is independent of PLB bus width (memory width must be less than or equal to PLB bus width)
  - Supports memory widths of 64 bits, 32 bits, 16 bits, or 8 bits
  - Memory width can vary by bank
- Parameterizable memory data-width/bus data-width matching
  - Multiple memory cycles will be performed when the memory width is less than the PLB bus width to provide full utilization of the PLB bus

LogiCORE™ Facts		
С	ore Specifics	
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup>	
Version of Core	plb_emc	v2.00a
Re	esources Used	
	Min	Max
Slices	307	850
LUTs	275	1163
FFs	393	858
Block RAMs	0	0
Provided with Core		
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design	Tool Requiremen	its
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e or later	
Synthesis XST		
Support		
Support provided by Xilinx, Inc.		

 Data-width matching can be enabled separately for each memory bank

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# PLB Synchronous DRAM (SDRAM) Controller (v1.00c)

View this data sheet

#### **Product Overview**

### Introduction

The Xilinx PLB SDRAM controller provides a SDRAM controller which connects to the PLB bus and provides the control interface for SDRAMs. It is assumed that the reader is familiar with SDRAMs and the IBM PowerPC<sup>™</sup>.

#### **Features**

The Xilinx SDRAM Controller is a soft IP core designed for Xilinx FPGAs and contains the following features:

- PLB interface
- Performs device initialization sequence upon power-up and reset conditions
- · Performs auto-refresh cycles
- Supports single-beat and burst transactions
- Supports target-word first cache-line transactions
- Supports cacheline latencies of 2 or 3 set by a design parameter
- Supports various SDRAM data widths set by a design parameter

LogiCORE™ Facts		
	ore Specifics	
Supported Device Family	Virtex-II Pro™	
Version of Core	SDRAM	v1.00c
Re	esources Used	
	Min	Max
Slices	375	620
LUTs	338	671
FFs	416	659
Block RAMs	0	0
Provided with Core		
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later	
Verification	N/a	
Simulation	ModelSim SE/EE 5.6e or later	
Synthesis	XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# PLB Synchronous DRAM (SDRAM) Controller (v1.00d)

View this data sheet

#### **Product Overview**

### Introduction

The Xilinx PLB SDRAM controller provides a SDRAM controller that connects to the PLB bus and provides the control interface for SDRAMs. It is assumed that the reader is familiar with SDRAMs and the IBM PowerPC<sup>™</sup>.

#### **Features**

The Xilinx SDRAM Controller is a soft IP core designed for Xilinx FPGAs and contains the following features:

- PLB interface
- Performs device initialization sequence upon power-up and reset conditions
- · Performs auto-refresh cycles
- Supports single-beat and burst transactions
- Supports target-word first cache-line transactions
- Supports cacheline latencies of 2 or 3 set by a design parameter
- Supports various SDRAM data widths set by a design parameter

## **SDRAM Controller Design Parameters**

To allow the user to obtain a SDRAM Controller that is uniquely tailored for their system, certain features are parameterizable in the Xilinx SDRAM Controller design. This allows the user to have a design that only utilizes the resources required by their system and runs at the best possible performance. The features that are parameterizable in the Xilinx SDRAM Controller are shown in Table 1.

LogiCORE™ Facts		
С	ore Specifics	
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup>	
Version of Core	SDRAM	v1.00d
Re	esources Used	
	Min	Max
Slices	384	597
LUTs	390	696
FFs	423	567
Block RAMs	0	0
Provided with Core		
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design	Tool Requiremen	nts
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	Simulation ModelSim SE/EE 5.6e or later	
Synthesis	Synthesis XST	
Support		
Support provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# PLB Block RAM (BRAM) Interface Controller (v1.00a)

View this data sheet

#### **Product Overview**

## Introduction

The PLB BRAM Interface Controller module attaches to the PLB (Processor Local Bus) and supports the PLB v3.4 byte enable architecture. Any access size up to the width of the PLB data bus is permitted. The PLB BRAM Interface Controller is the interface between the PLB and the bram\_block peripheral. A BRAM memory subsystem consists of the controller along with the actual BRAM components that are included in the bram\_block peripheral. System Generator for Processors automatically adds the bram\_block when a bram interface controller is instantiated. If the text-based Microprocessor Hardware Specification (MHS) file is used for design entry, then the bram controller and bram\_block must both be explicitly instantiated.

#### **Features**

- PLB v3.4 bus interface with byte\_enable support
- Used in conjunction with bram\_block peripheral to provide total BRAM memory solution
- Supports a wide range of memory sizes
- Handles byte, half-word, word and double word transfers
  - Single cacheline bursts

LogiCORE™ Facts			
Core Specifics			
Supported Device Family	Virtex-II Pro™		
Version of Core	plb_bram_if_cntlr	v1.00a	
Re	esources Used		
	Min	Max	
Slices	139	265	
LUTs	182	347	
FFs	150	261	
Block RAMs	0	0	
Pro	Provided with Core		
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design Tool Requirements			
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	ModelSim SE/EE 5.6e or later		
Synthesis	Synthesis XST		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# PLB Block RAM (BRAM) **Interface Controller (v1.00b)**

View this data sheet

#### **Product Overview**

### Introduction

The PLB BRAM Interface Controller is a module that attaches to the PLB (Processor Local Bus).

This controller supports the PLB V3.4 byte enable architecture. Any access size up to the width of the PLB data bus is permitted. The PLB BRAM Interface Controller is the interface between the PLB and the bram\_block peripheral. A BRAM memory subsystem consists of the controller along with the actual BRAM components that are included in the bram\_block peripheral. If the text-based Microprocessor Hardware Specification (MHS) file is used for design entry. then the bram controller and bram\_block must both be explicitly instantiated.

#### **Features**

- PLB V3.4 bus interface with byte enable support
- Used in conjunction with bram\_block peripheral to provide total BRAM memory solution
- Supports a wide range of memory sizes
- Handles Virtex, Virtex-E, Spartan-II, Virtex-II and Virtex-II Pro BRAM
- Handles byte, half-word, word and double word single transfers
- Burst and cacheline support enabled by a design parameter

LogiCORE™ Facts		
С	ore Specifics	
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup>	
Version of Core	opb_bram_if_cntlr	v1.00b
Re	esources Used	
	Min	Max
Slices	119	171
LUTs	148	234
FFs	106	133
Block RAMs	0	0
Pro	vided with Core	
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	·	
Verification	N/A	
Simulation ModelSim SE/EE 5.6e or later		
Synthesis XST		
Support		
Support provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at http://www.xilinx.com/legal.htm. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# PLB Double Data Rate (DDR) Synchronous DRAM (SDRAM) Controller

View this data sheet

**Product Overview** 

### Introduction

The Xilinx PLB DDR SDRAM controller for Virtex-II  $Pro^{TM}$  FPGAs provides a DDR SDRAM controller that connects to the PLB bus and provides the control interface for DDR SDRAMs. It is assumed that the reader is familiar with DDR SDRAMs and the IBM  $PowerPC^{TM}$ .

### **Features**

he Xilinx DDR SDRAM Controller is a soft IP core designed for Xilinx FPGAs and contains the following features:

- PLB interface
- Performs device initialization sequence upon power-up and reset conditions
- · Performs auto-refresh cycles
- Supports single-beat and burst transactions
- · Supports target-word first cache-line transactions
- Supports cacheline latencies of 2 or 3 set by a design parameter

LogiCORE™ Facts		
Core Specifics		
Supported Device Family	Virtex-II Pro™	
Version of Core	DDR	v1.00c
Re	esources Used	
	Min	Max
Slices	509	861
LUTs	602	977
FFs	477	919
Block RAMs	0	0
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	Simulation ModelSim SE/EE 5.6e or later	
Synthesis	XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



PLB Double Data Rate (DDR)
Synchronous DRAM (SDRAM)
Controller (v1.10a)

View this data sheet

**Product Overview** 

### Introduction

The Xilinx Processor Local Bus Double Data Rate (PLB DDR) Synchronous DRAM (SDRAM) controller for Virtex-II and Virtex-II Pro FPGAs provides a DDR SDRAM controller which connects to the PLBbus and provides the control interface for DDR SDRAMs. It is assumed that the reader is familiar with DDR SDRAMs and the IBM *PowerPC*<sup>TM</sup>.

#### **Features**

The Xilinx DDR SDRAM Controller is a soft IP core designed for Xilinx FPGAs and contains the following features:

- PLB interface
- Performs device initialization sequence upon power-up and reset conditions for ~200uS. Provides a parameter to adjust this time for simulation purposes only.
- Performs auto-refresh cycles
- Supports single-beat and burst transactions
- · Supports target-word first cache-line transactions
- Supports CAS latencies of 2 or 3 set by a design parameter
- Supports various DDR data widths set by a design parameter
- Provides big-endian connections to memory devices.
- Supports an error correction code (ECC) set by design parameters
- Supports multiple (up to 4) DDR memory banks

LogiCORE™ Facts			
Core Specifics			
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup>		
Version of Core	plb_ddr	v1.10a	
Resources Used			
	Min	Max	
Slices	733	1943	
LUTs	672	2531	
FFs	847	2049	
Block RAMs	0	0	
Pro	Provided with Core		
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N	I/A	
Reference Designs	No	one	
Design	Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	ModelSim SE/EE 5.6e or later		
Synthesis	XST		
Support			
Support provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



PLB Double Data Rate (DDR)
Synchronous DRAM (SDRAM)
Controller (v1.11a)

View this data sheet

**Product Overview** 

### Introduction

The Xilinx Processor Local Bus Double Data Rate (PLB DDR) Synchronous DRAM (SDRAM) controller for Virtex-II Pro and Virtex-4 FPGAs provides a DDR SDRAM controller which connects to the PLB and provides the control interface for DDR SDRAMs. It is assumed that the reader is familiar with DDR SDRAMs and the IBM PowerPC.

### **Features**

The Xilinx PLB DDR SDRAM Controller is a soft IP core designed for Xilinx FPGAs and contains the following features:

- PLB interface
- Performs device initialization sequence upon power-up and reset conditions for ~200uS. Provides a parameter to adjust this time for simulation purposes only
- · Performs auto-refresh cycles
- Supports single-beat and burst transactions
- Supports target-word first cache-line transactions
- Supports CAS latencies of 2 or 3 set by a design parameter
- Supports 32 and 64 DDR data widths set by a design parameter
- Supports indeterminate burst length
- Provides big-endian connections to memory devices.
   See the Connecting to Memory section for details on memory connections
- Supports an error correction code (ECC) for 32 bit DDR data width only, set by design parameters
- Supports multiple (up to 4) DDR memory banks

LogiCORE™ Facts			
Core Specifics			
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup>		
Version of Core	plb_ddr	v1.11a	
Resources Used			
	Min	Max	
Slices	712	1970	
LUTs	507	2261	
FFs	651	1841	
Block RAMs			
Provided with Core			
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	No	one	
Design	Tool Requiremer	nts	
Xilinx Implementation Tools	ISE 6.1i or later		
Verification	N/A		
Simulation	ModelSim SE/EE 5.8 or later		
Synthesis	Synthesis XST, Synplify Pro 7.5 or later		
Support			
Support provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# Data Side Block RAM (DSBRAM) Interface Controller (v2.00a)

View this data sheet

#### **Product Overview**

### Introduction

The DSBRAM\_IF\_CNTLR is a module that connects the BRAM\_Block to the DSOCM V10 Bus for Virtex-II Pro PowerPC 405 based embedded systems. For more information regarding the OCM (On-Chip Memory) controller interface in PowerPC 405 Processor, please refer to *PowerPC* 405 Processor Block Reference Guide.

This v2.00a DSBRAM\_IF\_CNTRL module in EDK Infrastructure Library should be used in conjunction with the DSOCM\_V10 Bus (also available in EDK Infrastructure Library) as well as BRAM\_Block in order to manage OCM memory map with consistent style as managing PLB and OPB space by Platform Generator. An Microprocessor Peripheral Definition (MPD) file associated with this module is also included. Users can utilize Xilinx Platform Studio (XPS) to incorporate this module into Microprocessor Hardware Specification (MHS). This module does not contain any logic

### **Features**

- Used in conjunction with bram\_block peripheral to provide a deterministic DSBRAM memory solution for PowerPC 405.
- Utilizes dual port features of BRAM.
- Supports byte, half-word, and word transfers.
- Supports Virtex-II PRO BRAM

Core Facts		
C	ore Specifics	
Supported Device Family	Virtex-II Pro™	
Version of Core	dsbram_if_cntlr	v.200a
Re	sources Used	
	Min	Max
Slices	TBD	TBD
LUTs	TBD	TBD
FFs	TBD	TBD
Block RAMs	0	0
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Design Tool Requirements		
Xilinx Implementation Tools	mplementation ISE 6.1i or higher	
Verification	N/A	
Simulation ModelSim SE/EE 5.6e or higher		
Synthesis XST		
Support		
Support provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# Data-Side BRAM Interface Controller (v3.00a)

View this data sheet

#### **Product Overview**

### Introduction

The DSBRAM\_IF\_CNTLR connects a BRAM\_Block to the data-side on-chip memory (DSOCM) bus in PowerPC<sup>™</sup> 405 based embedded systems. For information about the DSOCM controller interface, see the *PowerPC 405 Processor Block Reference Guide*.

The v3.00a DSBRAM\_IF\_CNTRL core is used with the v2.00a DSOCM\_V10 bus.

#### **Features**

- Used with bram\_block peripheral to provide a deterministic DSBRAM memory solution for PowerPC405
- Utilizes dual port features of BRAM
- Supports byte, half-word, and word transfers
- Configurable address decoding for use on multi-slave DSOCM busses
- Configurable permanent BRAM enable for improved performance

LogiCORE™ Facts		
Core Specifics		
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup>	
Version of Core	dsbram_if_cntlr	v3.00a
Re	sources Used	
	Min	Max
Slices	N.A.	N.A.
LUTs	0	91
FFs	0	0
Block RAMs	0	0
Provided with Core		
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Design Tool Requirements		
Xilinx Implementation Tools	ISE 6.2i or higher	
Verification	N/A	
Simulation	Simulation ModelSim SE/PE 5.7for higher	
Synthesis	XST	
Support		
Support provided by Xilinx, Inc.		

<sup>1.</sup>Address decoding logic when configured for multi-slave use. Less logic required for larger address range

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



Instruction Side Block RAM (ISBRAM) Interface Controller (v2.00a)

View this data sheet

**Product Overview** 

### Introduction

The ISBRAM\_IF\_CNTLR module connects the BRAM\_Block to the ISOCM V10 Bus for Virtex-II Pro PowerPC™ 405-based embedded systems. For information on the OCM (On-Chip Memory) controller interface in the PowerPC 405 Processor, see the *PowerPC 405 Processor Block Reference Guide*.

This v2.00a ISBRAM\_IF\_CNTRL module inshould be used in conjunction with the ISOCM\_V10 Bus, as well as the BRAM\_Block to manage the OCM memory map with the consistent style as PLB and OPB space by Platform Generator is managed. A Microprocessor Peripheral Definition (MPD) file associated with this module is included. Users can use the Xilinx Platform Studio (XPS) to incorporate this module into the Microprocessor Hardware Specification (MHS). This module does not contain any logic

#### **Features**

- Used in conjunction with bram\_block peripheral to provide a deterministic ISBRAM memory solution for PowerPC405.
- Utilizes dual port features of BRAM.
- Supports double-word instruction fetch.
- Supports Virtex-II PRO BRAM

Core Facts		
С	ore Specifics	
Supported Device Family	Virtex-II Pro™	
Version of Core	isbram_if_cntlr	v2.00a
Re	sources Used	
	Min	Max
Slices	TBD	TBD
LUTs	TBD	TBD
FFs	TBD	TBD
Block RAMs	0	0
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Design Tool Requirements		
Xilinx Implementation Tools	ISE 6.1i or higher	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e or higher	
Synthesis	XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



Instruction Side Block RAM (ISBRAM) Interface Controller (v3.00a)

View this data sheet

**Product Overview** 

### Introduction

The ISBRAM\_IF\_CNTLR is a module that connects the BRAM\_Block to the ISOCM V10 Bus for *PowerPC™* 405 based embedded systems. For information about the OCM (On-Chip Memory) controller interface in *PowerPC* 405 Processor, see the *PowerPC 405 Processor Block Reference Guide*.

#### **Features**

- Used with bram\_block peripheral to provide a deterministic ISBRAM memory solution for PowerPC405
- Utilizes dual port features of BRAM
- Debug access via DCR
- Configurable permanent BRAM enable for improved performance

LogiCORE Facts		
Core Specifics		
Supported Device Family	Virtex⁻II Pro <sup>™</sup> , Virtex⁻4 <sup>™</sup>	
Version of Core	isbram_if_cntlr	v3.00a
Re	sources Used	
	Min	Max
Slices	N/A	N/A
LUTs	0	91
FFs	0	0
Block RAMs	0	0
Pro	vided with Core	
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Design Tool Requirements		
Xilinx Implementation Tools	ISE 6.2i or higher	
Verification	N/A	
Simulation	ModelSim SE/PE 5.7f or higher	
Synthesis	Synthesis XST	
Support		
Support provided by Xilinx, Inc.		

<sup>1.</sup>Address decoding logic when configured for multi-slave use. Less logic required for larger address range

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# Block RAM (BRAM) Block (v1.00a)

View this data sheet

#### **Product Overview**

### Introduction

The BRAM Block is a parameterizable memory module that attaches to a variety of BRAM Interface Controllers.

#### **Features**

- Fully automated generation and configuration of HDL through EDK Platgen/Simgen tools.
- Number of BRAM primitives utilized is a function of the configuration parameters for: memory address range, number of byte-write enables, the data width, and the targeted architecture
- Both Port A and Port B of the memory block can be connected to independent BRAM Interface Controllers: LMB (Local Memory Bus), OPB (On-chip Peripheral Bus), PLB (Processor Local Bus), and OCM (On-Chip Memory).
- Supports byte, half-word, word, and doubleword transfers provided the correct number of byte-write enables have been configured

LogiCORE™ Facts		
C	ore Specifics	
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E	
Version of Core	bram_block	v1.00a
Re	esources Used	
	Min	Max
I/O	N/A	N/A
LUTs	0	0
FFs	0	0
Block RAMs	1	64
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e or later	
Synthesis	Synthesis XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# Peripheral Cores

This section of the *Processor IP Reference Guide* includes the following topics:

- OPB Interrupt Controller (v1.00c)
- OPB 16550 UART
- OPB 16450 UART
- OPB UART Lite
- OPB JTAG\_UART
- OPB IIC Bus Interface (v1.01b)
- OPB IIC Bus Interface (v1.01c)
- OPB Serial Peripheral Interface (SPI)
- OPB IPIF/LogiCore v3 PCI Core Bridge (v1.00b)
- OPB IPIF/LogiCore v3 PCI Core Bridge (v1.00c)
- OPB Ethernet Media Access Controller (EMAC) (v1.00m)
- OPB Ethernet Media Access Controller (EMAC) (v1.01a)
- OPB Ethernet Lite Media Access Controller (v1.00a)
- OPB Ethernet Lite Media Access Controller (v1.01a)
- OPB Asynchronous Transfer Mode Controller (OPB\_ATMC) (v1.00b)
- OPB Asynchronous Transfer Mode Controller (OPB\_ATMC) (v2.00a)
- OPB Single Channel HDLC Interface (v1.00b)
- OPB Multi Channel HDLC Interface (v2.00a) (2.00a)
- OPB Multi Channel HDLC Interface (v2.01a)
- OPB Timebase WDT (v1.00a)
- OPB Timer/Counter
- OPB General Purpose Input/Output (GPIO) (v1.00a)
- OPB General Purpose Input/Output (GPIO) (v2.00a)
- OPB General Purpose Input/Output (GPIO) (v3.01a)
- OPB Central DMA Controller (v1.00a)
- OPB Central DMA Controller (v1.00b)
- OPB Central DMA Controller (v1.00c)
- OPB Delta-Sigma Digital to Analog Converter (DAC) (v1.00a)
- OPB Delta-Sigma Analog to Digital Converter (ADC) (v1.00a)



- OPB System Monitor/ADC (v1.00.a)
- Channel FIFO (v1.00a)
- Fixed Interval Timer (FIT)
- MII to RMII (v1.00a)
- MII to RMII (v1.00b)
- PLB 1-Gigabit Ethernet Media Access Controller (MAC) with DMA (v1.00b)
- PLB 1-Gigabit Ethernet Media Access Controller (MAC) with DMA (v1.01a)
- PLB Ethernet Media Access Controller (PLB\_EMAC) (v1.00a)
- PLB Ethernet Media Access Controller (PLB\_EMAC) (v1.01a)
- PLB 16550 UART (v1.00c)
- PLB 16450 UART (v1.00c)
- PLB RapidIO LVDS (v1.00a) (v1.00a)
- PLB RapidIO LVDS (v1.00c)
- PLB Asynchronous Transfer Mode Controller (PLB\_ATMC) (v1.00a)
- PLB General Purpose Input/Output (GPIO) (v1.00b)
- DCR Interrupt Controller (v1.00b)



# **OPB Interrupt Controller (v1.00c)**

View this data sheet

#### **Product Overview**

### Introduction

An Interrupt Controller is composed of a bus-centric wrapper containing the IntC core and a bus interface. The IntC core is a simple, parameterized interrupt controller that, along with the appropriate bus interface, attaches to either the OPB (On-chip Peripheral Bus) or DCR (Device Control Register) Bus. It can be used in embedded PowerPC systems, and in MicroBlaze<sup>™</sup> soft processor systems. There are two versions of the Simple Interrupt Controller:

- OPB IntC (OPB interface)
- DCR IntC (DCR interface)

In this document, IntC and Simple IntC are used interchangeably to refer to functionality or interface signals common to all variations of the Simple Interrupt Controller. However, when it is necessary to make a distinction, the interrupt controller is referred to as OPB IntC or DCR IntC.

### **Features**

- Modular design provides a core interrupt controller functionality instantiated within a bus interface design (currently OPB and DCR buses are supported)
- OPB v2.0 bus interface with byte-enable support (IBM SA-14-2528-01 64-bit On-chip Peripheral Bus Architecture Specifications, Version 2.0)
- Supports data bus widths of 8-bits, 16-bits, or 32-bits for OPB interface
- Number of interrupt inputs configurable up to the width of data bus
- Easily cascaded to provide additional interrupt inputs
- Interrupt Enable Register for selectively disabling individual interrupt inputs
- Master Enable Register for disabling interrupt request output
- Each input is configurable for edge or level sensitivity;
   edge sensitivity can be configured for rising or falling;
   level sensitivity can be active-high or -low
- Automatic edge synchronization when inputs are configured for edge sensitivity
- Output interrupt request pin is configurable for edge or level generation — edge generation configurable for rising or falling; level generation configurable for active-high or -low

LogiCORE™ Facts		
С	ore Specifics	
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E	
Version of Core	opb_intc	v1.00c
Re	esources Used	
	Min	Max
I/O	55	116
LUTs	42	395
FFs	63	342
Block RAMs	0	0
Pro	vided with Core	
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	Designs None	
Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e or later	
Synthesis	XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



## **OPB 16550 UART**

View this data sheet

# Introduction

This document provides the specification for the OPB Universal Asynchronous Receiver/Transmitter (UART) Intellectual Property (IP).

The UART described in this document has been designed incorporating features described in National Semiconductor PC16550D UART with FIFOs data sheet (June, 1995), (http://www.national.com/pf/PC/PC16550D.html).

The National Semiconductor PC16550D data sheet is referenced throughout this document and should be used as the authoritative specification. Differences between the National Semiconductor implementation and the OPB UART Point Design implementation are highlighted and explained in the datasheet.

#### **Features**

- Hardware and software register compatible with all standard 16450 and 16550 UARTs
- Implements all standard serial interface protocols
  - 5, 6, 7, or 8 bits per character
  - Odd, Even, or no parity detection and generation
  - 1, 1.5, or 2 stop bit detection and generation
  - Internal baud rate generator and separate receiver clock input
  - Modem control functions
  - False start bit detection and recovery
  - Prioritized transmit, receive, line status, and modem control interrupts
  - Line break detection and generation
  - Internal loop back diagnostic functionality
  - Independent 16 word transmit and receive FIFOs
- Registers
  - Receiver Buffer Register (Read Only)
  - Transmitter Holding Register (Write Only)
  - Interrupt Enable Register
  - Interrupt Identification Register (Read Only)
  - FIFO Control Register (Read/Write)
  - Line Control and Line Status Registers
  - Modem Control and Modem Status Registers
  - Scratch Register

#### **Product Overview**

LogiCORE™ Facts		
С	ore Specifics	
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E	
Version of Core	opb_uart16550	v1.00c
Re	esources Used	
	Min	Max
Slices	442	442
LUTs	534	534
FFs	401	401
Block RAMs	0	0
Pro	vided with Core	
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design	Tool Requirement	ts
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e or later	
Synthesis	XST	
Support		
Provided by Xilinx, Inc.		

- Divisor Latch (least and more significant byte)
- System clock frequency of 100 MHz

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# **OPB 16450 UART**

View this data sheet

#### **Product Overview**

#### Introduction

This document provides the specification for the OPB Universal Asynchronous Receiver/Transmitter (UART) Intellectual Property (IP), designed to incorporate the features described in *National Semiconductor PC16550D UART with FIFOs* data sheet (June, 1995),

#### (http://www.national.com/pf/PC/PC16550D.html).

The National Semiconductor PC16550D data sheet is referenced throughout this document and should be used as the authoritative specification. Differences between the National Semiconductor implementation and the OPB UART Point Design implementation are highlighted and explained in the datasheet.

#### **Features**

- Hardware and software register compatible with all standard 16450 UARTs
- Implements all standard serial interface protocols
  - 5, 6, 7, or 8 bits per character
  - Odd, Even, or no parity detection and generation
  - 1, 1.5, or 2 stop bit detection and generation
  - Internal baud rate generator and separate receiver clock input
  - Modem control functions
  - False start bit detection and recovery
  - Prioritized transmit, receive, line status, and modem control interrupts
  - Line break detection and generation
  - Internal loop back diagnostic functionality

#### Registers

- Receiver Buffer Register (Read Only)
- Transmitter Holding Register (Write Only)
- Interrupt Enable Register
- Interrupt Identification Register (Read Only)
- Line Control and Line Status Registers
- Modem Control and Modem Status Registers
- Scratch Register
- Divisor Latch (least and more significant byte)
- System clock frequency of 100 MHz

Log	iCORE™ Facts	
C	ore Specifics	
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-4 <sup>™</sup> , QPro <sup>™</sup> -R Virtex-II, QPro Virtex-II, Virtex-E, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup>	
Version of Core	opb_uart16450	v1.00c
Re	esources Used	
	Min	Max
Slices	341	341
LUTs	357	357
FFs	347	347
Block RAMs	0	0
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	ion ModelSim SE/EE 5.6e or later	
Synthesis	XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# **OPB UART Lite**

View this data sheet

#### **Product Overview**

### Introduction

This document describes the specifications for a UART core, a module that attaches to the On-Chip Peripheral Bus (OPB).

#### **Features**

- OPB v2.0 bus interface with byte-enable support
- Supports 8-bit bus interfaces
- One transmit and one receive channel (full duplex)
- 16-character transmit FIFO and 16-character receive FIFO
- Number of databits in a character is configurable (5-8)
- Parity; can be configured for odd or even
- Configurable baud rate

LogiCORE™ Facts		
C	ore Specifics	
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-4 <sup>™</sup> , QPro <sup>™</sup> -R Virtex-II, QPro Virtex-II, Virtex-E, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup>	
Version of Core	opb_uartlite	v1.00b
Resources Used		
	Min	Max
Slices	N/A	N/A
LUTs	88	108
FFs	48	57
Block RAMs	0	0
Provided with Core		
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	Designs None	
Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	ation ModelSim SE/EE 5.6e or later	
Synthesis XST		
Support		
Dravided by Viliny Inc		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.

Provided by Xilinx, Inc.



# **OPB JTAG UART**

View this data sheet

#### **Product Overview**

### Introduction

This document describes the specifications for a JTAG\_UART core, a module that attaches to the On-Chip Peripheral Bus (OPB).

#### **Features**

- Mimics UART functionality to MicroBlaze<sup>™</sup> but sends data over JTAG
- OPB v2.0 bus interface with byte-enable support
- Supports 8-bit bus interfaces
- One transmit and one receive channel (full duplex)
- 16-character transmit FIFO and 16-character receive FIFO
- Requires xmd or xmdterm to run on host for JTAG communication
- Able to reset system and MicroBlaze
- Able to assert break signals to MicroBlaze

LogiCORE™ Facts		
C	ore Specifics	
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E	
Version of Core	opb_jtag_uart	v1.00b
Resources Used		
	Min	Max
Slices	57	57
LUTs	86	86
FFs	70	70
Block RAMs	0	0
Provided with Core		
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation ModelSim SE/EE 5.6e or later		
Synthesis XST		
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# **OPB IIC Bus Interface (v1.01b)**

View this data sheet

## Introduction

This specification defines the architecture and interface requirements for this module, which include registers that must be initialized for proper operation. This module supports all features, except high speed mode, of the Philips I<sup>2</sup>C bus, v2.1, release January 2000.

The Xilinx IIC design lets customers tailor the IIC for their application by setting parameters to enable/disable specific features.

#### **Features**

- Master or Slave operation
- Multi-master operation
- Software selectable acknowledge bit
- Arbitration lost interrupt with automatic mode switching from Master to Slave
- Calling address identification interrupt with automatic mode switching from Master to Slave
- START and STOP signal generation/detection
- Repeated START signal generation
- Acknowledge bit generation/detection
- Bus busy detection
- Fast Mode 400 KHz operation or Standard Mode 100 KHz
- 7 Bit or 10 Bit addressing
- General Call Enable or Disable
- Transmit and Receive FIFOs 16 bytes deep
- Throttling
- General Purpose Output, zero to 8 bits wide

#### **Product Overview**

LogiCORE™ Facts		
С	ore Specifics	
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex <sup>™</sup> , Virtex-E, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup>	
Version of Core	opb_iic v1.01b	
Resources Used		
	Min	Max
I/O	2	2
LUTs	376	398
FFs	220	229
Block RAMs	0	0
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Design Tool Requirements		
Xilinx Implementation Tools	ISE 6.1 or later with latest EDK	
Verification	ModelSim SE 5.7d	
Simulation	ModelSim SE 5.7d	
Synthesis	esis XST - ISE 6.1	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# **OPB IIC Bus Interface (v1.01c)**

View this data sheet

## **Product Specification**

## Introduction

This specification defines the architecture and interface requirements for this module. This includes registers that must be initialized for proper operation. This module supports all features, except high speed mode, of the Philips I<sup>2</sup>C bus, v2.1, release January 2000.

The Xilinx IIC design allows the customer to tailor the IIC to suit their application by setting certain parameters to enable/disable features.

## **Features**

The IIC bus interface is a soft IP core designed for Xilinx FPGAs and contains these features:

- Master or Slave operation
- Multi-master operation
- Software selectable acknowledge bit
- Arbitration lost interrupt with automatic mode switching from Master to Slave
- Calling address identification interrupt with automatic mode switching from Master to Slave
- START and STOP signal generation/detection
- Repeated START signal generation
- Acknowledge bit generation/detection
- · Bus busy detection
- Fast Mode 400 KHz operation or Standard Mode 100 KHz
- 7 Bit or 10 Bit addressing
- General Call Enable or Disable
- Transmit and Receive FIFOs 16 bytes deep
- Throttling
- General Purpose Output, zero to 8 bits wide

LogiCORE™ Facts			
С	ore Specifics		
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E		
Version of Core	opb_iic	v1.01c	
Resources Used			
	Min	Max	
I/O	2	2	
LUTs	376	398	
FFs	220	229	
Block RAMs	0	0	
Provided with Core			
Documentation	<u>View</u> this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	N/A		
Design Tool Requirements			
Xilinx Implementation	ISE 6.1 or later		
Tools	with latest EDK		
Verification	ModelSim SE 5.7d		
Simulation	ModelSim SE 5.7d		
Synthesis	XST - ISE 6.1		
Support			
Support provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# **OPB Serial Peripheral Interface** (SPI)

View this data sheet

#### **Product Overview**

### Introduction

This document presents specifications for the VHDL implementation of the Motorola Serial Peripheral Interface (SPI) in a Xilinx FPGA. The original specifications closely followed the *Motorola M68HC11-Rev. 4.0 Reference Manual*, and this document emphasizes the M68HC-11 specifications. The design, however, was enhanced with a number of exceptions and enhancements as described in this document. The default mode of operation has been changed to a manual slave select operation (not included in the M68HC11 specification).

The Serial Peripheral Interface (SPI) is a full-duplex, synchronous channel that supports a four-wire interface (receive, transmit, clock, and slave select) between one master and one slave. The original specifications followed closely Motorola's M68HC11-Rev. 4.0 Reference Manual.

There are differences from the 68HC11 specification that should be reviewed when utilizing this SPI Assembly, see the Specification Exceptions section of the datasheet.

The v1.00b specification has extended functionality, including a manual slave select mode, which lets you manually control the slave select line directly by the data written to the slave select register.

This allows transfers of an arbitrary number of bytes without toggling the slave select line until all bytes are transferred. In this mode, you must toggle the slave select by writing the appropriate data to the slave select register. The manual slave select mode is the default mode of operation.

This parameterized module permits additional slaves with automatic generation of the required decoding of the individual slave select outputs by the master. Additional masters can be added as well; however, means to detect all possible conflicts are not implemented with this interface standard, but rather require the software to arbitrate bus control in order to eliminate conflicts.

At this time only SPI slave devices are allowed off-chip. This is an artifact of software master control arbitration which can not be guaranteed if off-chip masters were allowed and is due to issues with asynchronous external clocks as well. Essentially any number of internal slave and master SPI devices is allowed. The actual number is limited by the performance that is desired.

Log	LogiCORE™ Facts		
С	ore Specifics		
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E		
Version of Core	opb_spi	v1.00b	
Re	esources Used		
	Min	Max	
I/O	N/A	N/A	
LUTs	N/A	N/A	
FFs	N/A	N/A	
Block RAMs	N/A	N/A	
Provided with Core			
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	None		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design Tool Requirements			
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	ModelSim SE/EE 5.6e or later		
Synthesis	XST		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



#### **Features**

- Four signal interface (MOSI, MISO, SCK, and SS)-- SS bit for each slave on the SPI bus
- Three signal in/out (in, out, 3-state) for implementing 3-state SPI device in/outs to support multi-master configuration within the FPGA
- Full-duplex operation
- Works with N times 8-bit data characters in default configuration. The default mode implements manual control of the SS output via data written to the slave select register which appears directly on the SS output when the master is enabled. This mode can be used only with external slave devices. In addition, an optional operation where the SS output is toggled automatically with each 8-bit character transfer by the master device internal state machine can be selected via a bit in the command register for SPI master devices.
- Supports back-to-back character transmission and reception
- Master and slave SPI modes supported
- Multi-master environment supported (implemented with 3-state drivers and requires software arbitration for possible conflict)
- Multi-slave environment supported (automatic generation of additional master slave select signals)
- Continuous transfer mode for automatic scanning of a peripheral
- Supports maximum clock rates of up to one-half the OPB clock rate in both master and slave modes when both SPI
  devices are in the same FPGA part (routing constraints of SPI bus signals must be incorporated in map/par process).
   In anticipation of remote master operation, slaves operation supports one-fourth the OPB clock rate (artifact of
  asynchronous SCK clock relative to the OPB clock which requires clock synchronization).
- Parameterizable baud rate generator
- Programmable clock phase and polarity
- External ports (selected via a parameter) for off-chip slave interconnects (off-chip masters not supported)
- Optional transmit and receive FIFOs (implemented as a pair only)
- Local loopback capability for testing

The Xilinx SPI design allows you to tailor the SPI Assembly to suit your application by setting certain parameters to enable or disable features. The parameterizable features of the design are discussed in the SPI Configuration Parameters section of the datasheet.

The basic SPI device consists of a register module and the SPI module. Optional FIFOs and support are discussed in a later section. The register block includes all memory mapped registers (as shown in Figure 1) and resides on the Xilinx OPB.

As shown in Figure 3, the SPI module consists of transmitter and receiver sections, a parameterized baud rate generator (BRG) and a control unit. The registers are an 8-bit status register, an 8-bit control register, an N-bit slave select register and a pair of 8-bit transmit/receiver registers.

In the 68HC11 implementation, the transmit register is transparent to the shift register and the receive register is double buffered with the shift register. In this implementation without FIFOs, both the transmit and receive register are double buffered.

Hardware prevents data transfer from the transmit buffer to the shift register while an SPI transfer is in progress, consequently, the write collision error described in the MC68HC11 Reference Manual can not occur and the WCOL flag is not supported.

All registers are accessed directly from the Xilinx OPB which is a subset of IBM's 64-bit OPB utilizing byte enables (see IBM's 64-Bit On-Chip Peripheral Bus document for details). As shown in Figure 1, optional FIFOs can be implemented on both receive and transmit paths.



# OPB IPIF/LogiCore v3 PCI Core Bridge

View this data sheet

#### **Product Overview**

### Introduction

The OPB IPIF/LogiCORE PCI64 v3.0 bridge design described in this document bridges between the OPB IPIF (On-Chip Peripheral Bus Intellectual Property InterFace) and the Xilinx LogiCORE PCI64 Interface v3.0 core to provide full bridge functionality between the Xilinx 32-bit OPB and a 32-bit V2.2 compliant PCI (Peripheral Component Interconnect) bus. This bridge is referred to as the IPIF/V3 bridge in this document.

The Xilinx OPB is a 32-bit bus that is a subset of the IBM OPB that is described in 64-Bit On-Chip Peripheral Bus Architecture Specifications v2.0. Details on the Xilinx OPB, the OPB IPIF, including DMA operation, can be found in the Processor IP Reference Guide. This guide can be accessed via EDK help or the Xilinx website under documents.

Details of bridging between a PCI bus and the V3 protocol that interfaces with the OPB IPIF/V3 bridge described herein is described in detail in the LogiCORE PCI64 Interface v3.0 Interface Data Sheet and Xilinx The Real-PCI Design Guide v3.0.

Host bridge functionality (often called North bridge) is implemented in this release. Configuration read and write PCI commands can be performed from the OPB-side of the bridge. the OPB IPIF/V3PCI core bridge will only support the 32-bit PCI bus.

Not all commands supported by the v3 core are supported. Details of exceptions are explained in the Features section, Full Bridge Functionality.

The Xilinx IPIF/V3 PCI core bridge design has parameters that allow customers to configure the IPIF/V3 PCI core bridge to suit their application. The parameterizable features of the design are discussed in the datasheet.

#### **Features**

- OPB and PCI clocks required to be a global buffer
- 33/66 MHz, 32-bit PCI buses
- Utilizes the SRAM interface of the OPB IPIF for PCI data transfers
- Includes a master IP module for PCI initiator transactions, which follows the protocol for interfacing with the master attachmentt

Log	iCORE™ Facts		
С	ore Specifics		
Supported Device Family	Spartan-II™, Spartan-IIE™, Spartan-3™, Virtex™, Virtex-II™, Virtex-II Pro™, Virtex-E		
Version of Core	opb_pci	v1.00b	
Resources Used			
Virtex-II	Min	Max	
I/O	47	49	
LUTs	925	4200	
FFs	675	2000	
Block RAMs	0	2	
Provided with Core			
Documentation	View this data sheet		
Design File Formats	VDHL		
Constraints File	example UCF-file		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design Tool Requirements			
Xilinx Implementation Tools	6.1i or later		
Verification	N/A		
Simulation	ModelSim SE/EE 5.6e or later		
Synthesis	XST & Synplify (state machines)		
Support			
Provided by Xilinx, Inc.			

- Full bridge functionality
  - OPB Master read and write of a remote PCI target (both single and burst)Full bridge functionality
  - PCI Initiator read and write to a remote OPB slave (both single and multiple) Supports all PCI

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



commands supported by the v3 core with the following exceptions:

- The interrupt acknowledge command will be supported in future releases of the core and will be only for OPB masters to execute the command while being ignored when executed by a remote PCI agent.
- The special cycle command will be supported in future releases of the core.
- I/O read and I/O write commands are supported only for OPB master read and writes of PCI I/O space as designated by its associated memory designator bits of the generics. All memory space on the OPB-side is designated as memory space in the PCI sense, hence, I/O commands can not be used to access memory on the OPB-side.
- Configuration read and writes are supported (including self-configuration transactions) only when upper word
  address lines are utilized for IDSel lines. The configuration read and write commands are automatically executed
  by writing to the configuration data port register. Data in the configuration address port register and the
  configuration bus number/subordinate bus number register is used in execution of the configuration transaction per
  PCI 2.2 specification.
- Memory read line command is not supported mainly because the OPB does not have direct support of this type of line wrapping.
- Memory write invalidate is not supported where the v3 core is a target because the low utility of having memory on the OPB side with a cached counterpart and memory controller on the PCI side of the bridge. The v3 core does not support this command when it is an initiator.
- Programmable enabling of the bridge feature to inhibit one or any number of the four transfer types when an error is detected.
- Supports up to 6 OPB devices with unique memory OPB memory space
  - Each device has the following generics: OPB BAR, length, prefetchability, Big Endian to Little Endian translate, and offset for mapping OPB address space to PCI address space.
- Supports up to 3 PCI devices with unique memory PCI memory space. The v3 core supports up to 3 PCI BAR.
  - Each device has the following generics: PCI BAR, length, prefetchability, memory designator, Little Endian to Big Endian translate, and offset for mapping PCI address space to OPB address space
- Registers include
  - Interrupt and interrupt enable registers at different hierarchal levels
  - Reset
  - Prefetch override
  - Bridge and v3 Core Transaction Status
  - Inhibit Transfers on Error
  - OPB Mst Address Definition
  - OPB Mst Read and Write Addresses
- Address range decode for supported BAR, length, and prefetch operation
- OPB-side Interrupts include
  - OPB Master Read SERR and PERR
  - OPB Master Read Target Abort
  - OPB Master Write SERR and PERR
  - OPB Master Write Target Abort
  - OPB Master Abort Write
  - OPB Master Write Retry and Retry Disconnect
  - OPB Master Write Retry Timeout
  - OPB Master Write Range
  - PCI Initiator Read and Write SERR
- Asynchronous FIFOs with backup capability
- Synchronization circuits for signals that cross time-domain boundaries
- PCI and OPB clocks can be totally independent



- Responding to the PCI latency timer
- Completing posted operations prior to initiating new operations



# OPB IPIF/LogiCore v3 PCI Core Bridge (v1.00c)

View this data sheet

### **Product Overview**

# Introduction

The OPB IPIF/LogiCORE PCI64 v3.0 bridge design described in this document bridges between the OPB IPIF (On-Chip Peripheral Bus Intellectual Property InterFace) and the Xilinx LogiCORE PCI64 Interface v3.0 core to provide full bridge functionality between the Xilinx 32-bit OPB and a 32-bit V2.2 compliant PCI (Peripheral Component Interconnect) bus. This bridge is referred to as the IPIF/V3 bridge in this document.

The Xilinx OPB is a 32-bit bus that is a subset of the IBM OPB that is described in 64-Bit On-Chip Peripheral Bus Architecture Specifications v2.0. Details on the Xilinx OPB, the OPB IPIF, including DMA operation, can be found in the Processor IP Reference Guide. This guide can be accessed via EDK help or the Xilinx website under documents.

Details of bridging between a PCI bus and the V3 protocol that interfaces with the OPB IPIF/V3 bridge described herein is described in detail in the LogiCORE PCI64 Interface v3.0 Interface Data Sheet and Xilinx The Real-PCI Design Guide v3.0.

Host bridge functionality (often called North bridge) is implemented in this release. Configuration read and write PCI commands can be performed from the OPB-side of the bridge. the OPB IPIF/V3PCI core bridge will only support the 32-bit PCI bus.

Not all commands supported by the v3 core are supported. Details of exceptions are explained in the Features section, Full Bridge Functionality.

The Xilinx IPIF/V3 PCI core bridge design has parameters that allow customers to configure the IPIF/V3 PCI core bridge to suit their application. The parameterizable features of the design are discussed in the full datasheet.

## **Features**

- OPB and PCI clocks are required to be a global buffer
- 33/66 MHz. 32-bit PCI buses
- Utilizes the SRAM interface of the OPB IPIF for PCI data transfers
- Includes a master IP module for PCI initiator transactions, which follows the protocol for interfacing with the master attachment

LogiCORE™ Facts			
С	ore Specifics		
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E		
Version of Core	opb_pci	v1.00c	
Re	esources Used		
Virtex <sup>™</sup> II	Min	Max	
I/O (PCI)	47	50	
I/O (OPB-related)	153 155		
LUTs	925 4200		
FFs	675 2000		
Block RAMs	0 2 or more		
Pro	vided with Core		
Documentation	<u>View</u> this data sheet		
Design File Formats	VDHL		
Constraints File	example UCF-file		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design	Tool Requiremen	ts	
Xilinx Implementation Tools	6.1i or later		
Verification	N/A		
Simulation	ModelSim SE/EE 5.6e or later		
Synthesis XST & Synplify (state machines)			
Support			
Provided by Xilinx, Inc.			

- Full bridge functionality
  - OPB Master read and write of a remote PCI target (both single and burst))

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



- PCI Initiator read and write to a remote OPB slave (both single and multiple) Supports all PCI commands supported by the v3 core with the following exceptions:
- The interrupt acknowledge command will be supported in future releases of the core and will be only for OPB masters to execute the command while being ignored when executed by a remote PCI agent.
- The special cycle command will be supported in future releases of the core.
- I/O read and I/O write commands are supported only for OPB master read and writes of PCI I/O space as designated by its associated memory designator bits of the generics. All memory space on the OPB-side is designated as memory space in the PCI sense, hence, I/O commands can not be used to access memory on the OPB-side.
- Configuration read and writes are supported (including self-configuration transactions) only when upper word
  address lines are utilized for IDSel lines. The configuration read and write commands are automatically executed
  by writing to the configuration data port register. Data in the configuration address port register and the
  configuration bus number/subordinate bus number register are used in execution of the configuration transaction
  per PCI 2.2 specification.
- Memory read line command is not supported mainly because the OPB does not have direct support of this type of line wrapping.
- Memory write invalidate is not supported where the v3 core is a target because the low utility of having memory on the OPB side with a cached counterpart and memory controller on the PCI side of the bridge. The v3 core does not support this command when it is an initiator.
- Programmable enabling of the bridge feature to inhibit one or any number of the four transfer types when an error is detected.
- Supports up to 6 OPB devices with unique memory OPB memory space
  - Each device has the following generics: OPB BAR, length, prefetchability, Big Endian to Little Endian translate, and
    offset for mapping OPB address space to PCI address space. Byte addressing integrity is maintained by default in
    all transfers
- Supports up to 3 PCI devices with unique memory PCI memory space. The v3 core supports up to 3 PCI BAR.
  - Each device has the following generics: PCI BAR, length, prefetchability, memory designator, Little Endian to Big Endian translate, and offset for mapping PCI address space to OPB address space Byte addressing integrity is maintained by default in all transfers.
- · Registers that can be included are
  - Interrupt and interrupt enable registers at different hierarchal levels (with FIFOs only)
  - Reset
  - OPB Mst Address Definition (with FIFOs only)
  - OPB Mst Read and Write Addresses (with FIFOs only)
- Address range decode for supported BAR, length, and prefetch operation
- OPB-side Interrupts (with FIFOs only) include
  - OPB Master Read SERR and PERR
  - OPB Master Read Target Abort
  - OPB Master Write SERR and PERR
  - OPB Master Write Target Abort
  - OPB Master Abort Write
  - OPB Master Write Retry and Retry Disconnect
  - OPB Master Write Retry Timeout
  - OPB Master Write Range
  - PCI Initiator Read and Write SERR
- Parameterized with or without FIFOs
  - Without FIFOs yields lower resource utilization, but low data-throuhput due to performing only single transfers independent of type of transfer requested.



- With FIFOs includes asynchronous FIFOs with burst transfer support and backup capability for retrying transfers as needed.
- Synchronization circuits for signals that cross time-domain boundaries
- PCI and OPB clocks can be totally independent
- Responding to the PCI latency timer
- Completing posted write operations prior to initiating new operations
- Signal set required for integrating a PCI bus arbiter in the FPGA with the PLB/PCI bridge is available at the top-level of the PLB/PCI bridge module. The signal set includes PCLK, RST\_N, FRAME\_I and IRDY\_I.
- Supports PCI clock generated in FPGA
- Parameterized control of IO-buffer insertion of INTR\_A and REQ\_N IO-buffers
- Supports all PCI commands supported by the v3 core with the following exceptions:
  - The interrupt acknowledge command will be supported in future releases of the core and will be only for OPB masters to execute the command while being ignored when executed by a remote PCI agent.
  - The special cycle command will be supported in future releases of the core.
  - I/O read and I/O write commands are supported only for OPB master read and writes of PCI I/O space as designated by its associated memory designator bits of the generics. All memory space on the OPB-side is designated as memory space in the PCI sense, hence, I/O commands can not be used to access memory on the OPB-side.
  - Configuration read and writes are supported (including self-configuration transactions) only when upper word
    address lines are utilized for IDSel lines. The configuration read and write commands are automatically executed
    by writing to the configuration data port register. Data in the configuration address port register and the
    configuration bus number/subordinate bus number register is used in execution of the configuration transaction per
    PCI 2.2 specification.
  - Memory read line command is not supported mainly because the OPB does not have direct support of this type of line wrapping.
  - Memory write invalidate is not supported where the v3 core is a target because the low utility of having memory on the OPB side with a cached counterpart and memory controller on the PCI side of the bridge. The v3 core does not support this command when it is an initiator.
- Programmable enabling of the bridge feature to inhibit one or any number of the four transfer types when an error is detected.
- Supports up to 6 OPB devices with unique memory OPB memory space
  - Each device has the following generics: OPB BAR, length, prefetchability, Big Endian to Little Endian translate, and offset for mapping OPB address space to PCI address space.
- Supports up to 3 PCI devices with unique memory PCI memory space. The v3 core supports up to 3 PCI BAR.
  - Each device has the following generics: PCI BAR, length, prefetchability, memory designator, Little Endian to Big Endian translate, and offset for mapping PCI address space to OPB address space
- · Registers include
  - Interrupt and interrupt enable registers at different hierarchal levels
  - Reset
  - Prefetch override
  - Bridge and v3 Core Transaction Status
  - Inhibit Transfers on Error
  - OPB Mst Address Definition
  - OPB Mst Read and Write Addresses
- Address range decode for supported BAR, length, and prefetch operation
- OPB-side Interrupts include
  - OPB Master Read SERR and PERR
  - OPB Master Read Target Abort
  - OPB Master Write SERR and PERR



- OPB Master Write Target Abort
- OPB Master Abort Write
- OPB Master Write Retry and Retry Disconnect
- OPB Master Write Retry Timeout
- OPB Master Write Range
- PCI Initiator Read and Write SERR
- Asynchronous FIFOs with backup capability
- Synchronization circuits for signals that cross time-domain boundaries
- PCI and OPB clocks can be totally independent
- Responding to the PCI latency timer
- Completing posted operations prior to initiating new operations



# OPB Ethernet Media Access Controller (EMAC) (v1.00m)

View this data sheet

### **Product Overview**

# Introduction

This document provides the design specification for the 10/100 Mbs Ethernet Media Access Controller (EMAC). The EMAC incorporates the applicable features described in IEEE Std. 802.3 MII interface specification. The IEEE Std. 802.3 MII interface specification is referenced throughout this document and should be used as the authoritative specification. Differences between the IEEE Std. 802.3 MII interface specification and the Xilinx EMAC implementation are highlighted and explained in the *Specification Exceptions* section of the full datasheet.

The EMAC Interface design is a soft intellectual property (IP) core designed for implementation in a Virtex-II Pro<sup>™</sup>, Virtex-M, Virtex-II, Virtex-E, Spartan-II, Spartan-IIE, Spartan-3, Spartan-3, It supports the IEEE Std. 802.3 Media Independent Interface (MII) to industry standard Physical Layer (PHY) devices and communicates to a processor via an IBM On-Chip Peripheral Bus (OPB) interface. The design provides a 10 Megabits per second (Mbps) and 100 Mbps (also known as Fast Ethernet) EMAC Interface. This design includes many of the functions and the flexibility found in dedicated Ethernet controller devices currently on the market.

The Xilinx EMAC design allows the customer to tailor the EMAC to suit their application by setting certain parameters to enable/disable features. The parameterizable features of the design are discussed in EMAC Design Parameters.

The EMAC is comprised of two IP blocks: The IP Interface (IPIF) block is a subset of OPB bus interface features chosen from the full set of IPIF features to most efficiently couple the second block, the EMAC core, to the OPB processor bus for this packet<sup>1</sup> based interface (this combined entity is referred to as a device). Although there are separate specifications for the IPIF design, this specification addresses the specific implementation required for the EMAC design.

## **EMAC Endianess**

Please note that the EMAC is designed as a big endian device (bit 0 is the most significant bit and is shown on the left of a group of bits).

1. IEEE Std. 802.3 เ	ses the terms Frame and Packet inter-
changeably when	referring to the Ethernet unit of transmission
this specification	does likewise
• .	<u> </u>

LogiCORE™ Facts			
Co	re Specifics		
Supported Device Family	Virtex-II Pro, Virtex, Virtex-II, Virtex-E, Spartan-II, Spartan-IIE, Spartan-3		
Version of Core	opb_ethernet v1.00m		
Res	ources Used		
	Min	Max	
Total Core I/Os	181	181	
Core FPGA IOBs	13	19	
LUTs	2018 3688		
FFs	1557 2228		
Block RAMs	2 16		
Provided with Core			
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design T	ool Requirement	ts	
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	ModelSim SE/EE 5.6e or later		
Synthesis	Synthesis XST		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



The 4-bit transmit and receive data interface to the external PHY is little endian (bit 3 is the most significant bit and appears on the left of the bus). The MII management interface to the PHY is serial with the most significant bit of a field being transmitted first.

### **Features**

The EMAC is a soft IP core designed for Xilinx FPGAs and contains the following features:

- 32-bit OPB master and slave interfaces<sup>1</sup>
- Memory mapped direct I/O interface to registers and FIFOs as well as simple DMA and Scatter/Gather DMA capabilities for low processor and bus utilization
- Media Independent Interface (MII) for connection to external 10/100 Mbps PHY transceivers
  - IEEE 802.3-compliant MII
  - Supports auto-negotiable and non auto-negotiable PHYs
  - Supports 10BASE-T and 100BASE-TX/FX IEEE 802.3 compliant MII PHYs at full or half duplex
- Independent internal 2K, 4K, 8K, 16K, or 32K byte TX and RX FIFOs for holding data for more than one packet. 2K byte depth is sufficient for normal 1518 maximum byte packets but 4K byte depth provides better throughput.
- 16, 32, or 64 entry deep FIFOs for the Transmit Length, Receive Length, and Transmit Status registers to support multiple packet operation.
- CSMA/CD compliant operation at 10 Mbps and 100 Mbps in half duplex mode
- Programmable PHY reset signal
- Internal loop-back capability
- · Supports unicast, multicast, and broadcast transmit and receive modes as well as promiscuous address receive mode
- Supports a "Freeze" (graceful halt) mode based on input signal assertion to assist with emulator based software development
- Provides auto or manual source address field insertion or overwrite for transmission.
- Provides auto or manual pad and Frame Check Sequence (FCS) field insertion
- Provides auto pad and FCS field stripping on receive
- Processes received pause packets
- Supports reception of longer VLAN type frames
- Supports MII management control writes and reads with MII PHYs
- Programmable interframe gap
- Provides counters and interrupts for many error conditions

<sup>1.</sup> The master interface is only used if either simple or scatter gather DMA is included in the core at build time. The core always includes a slave interface.



# **OPB Ethernet Media Access Controller (EMAC) (v1.01a)**

View this data sheet

### **Product Overview**

# Introduction

This document provides the design specification for the 10/100 Mbs Ethernet Media Access Controller (EMAC). The EMAC incorporates the applicable features described in IEEE Std. 802.3 MII interface specification. The IEEE Std. 802.3 MII interface specification is referenced throughout this document and should be used as the authoritative specification. Differences between IEEE Std. 802.3 MII interface specification and the Xilinx EMAC implementation are highlighted and explained in the Specification Exceptions section of the full data sheet.

The EMAC Interface design is a soft intellectual property (IP) core designed for implementation in a Virtex-II Pro<sup>™</sup>, Virtex-II, Virtex-II, Virtex-II, Virtex-II, Virtex-II, Virtex-II, Virtex-II, Virtex-II, Spartan-IIE, Spartan-IIE, Spartan-IIE, Spartan-IIE, Spartan-III, Spart

The Xilinx EMAC design allows the customer to tailor the EMAC to suit their application by setting certain parameters to enable/disable features. The parameterizable features of the design are discussed in EMAC Design Parameters.

The EMAC is comprised of two IP blocks (see the full data sheet for illustration). The IP Interface (IPIF) block is a subset of OPB bus interface features chosen from the full set of IPIF features to most efficiently couple the second block, the EMAC core, to the OPB processor bus for this packet based interface (this combined entity is referred to as a device). Although there are separate specifications for the IPIF design, this specification addresses the specific implementation required for the EMAC design.

LogiCORE™ Facts			
Co	re Specifics		
Supported Device Family	Virtex-II Pro, Virtex, Virtex-II, Virtex-4, QPro-R Virtex-II, QPro Virtex-II, Virtex-E, Spartan-II, Spartan-IIE, Spartan-3		
Version of Core	opb_ethernet v1.01a		
Res	ources Used		
	Min	Max	
Total Core I/Os	181	181	
Core FPGA IOBs	13	19	
LUTs	2018 3688		
FFs	1557 2228		
Block RAMs	2 16		
Provided with Core			
Documentation	View this data sheet		
Design File Formats	NGC netlist and VHDL wrapper		
Constraints File	N/A		
Verification	1	N/A	
Instantiation Template	1	N/A	
Reference Designs	N	one	
Design 1	ool Requiremen	its	
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	ModelSim SE/EE 5.6e or later		
Synthesis XST			
Support			
Support provided by Xilinx, Inc.			

<sup>1.</sup> IEEE Std. 802.3 uses the terms Frame and Packet interchangeably when referring to the Ethernet unit of transmission; this specification does likewise.

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# **OPB Ethernet Lite Media Access Controller (v1.00a)**

View this data sheet

### **Product Overview**

# Introduction

The Ethernet Lite MAC described in this document designed incorporating the applicable features described in IEEE Std. 802.3 MII interface specification, which should be used as the authoritative specification. Differences between the IEEE Std. 802.3 MII interface specification and the Xilinx EMAC Lite implementation are highlighted and explained in the Specification Exceptions section.

The EMAC Interface design is a soft intellectual property (IP) core designed for implementation in selected Xilinx Virtex family and Spartan family FPGAs.

The EMAC Lite supports the IEEE Std. 802.3 Media Independent Interface (MII) to industry standard Physical Layer (PHY) devices and communicates to a processor via an IBM On-Chip Peripheral Bus (OPB) interface. The design provides a 10 Megabits per second (Mbps) and 100 Mbps (also known as Fast Ethernet) Interface. The goal is to provide the minimal functions necessary to provide an Ethernet interface with the least resources used.

The Ethernet Lite MAC is comprised of two IP blocks: The IP Interface (IPIF) block is a subset of OPB bus interface features chosen from the full set of IPIF features to most efficiently couple the second block, the Ethernet Lite MAC core, to the OPB processor bus for this packet based interface (this combined entity is referred to as a device).

Although there are separate specifications for the IPIF design, this specification addresses the implementation required for the Ethernet Lite MAC design.

## **Features**

- 32-bit OPB slave interface
- Memory mapped direct I/O interface to the transmit and receive data dual port memory
- Media Independent Interface (MII) for connection to external 10/100 Mbps PHY transceivers
  - IEEE 802.3-compliant MII
  - Supports auto-negotiable and non auto-negotiable
  - Supports 10BASE-T and 100BASE-TX/FX IEEE 802.3 compliant MII PHYs at full or half duplex
- Independent internal 2K byte TX and RX dual port memory for holding data for one packet each

Logi	iCORE™ Facts		
C	Core Specifics		
Supported Device Family	Spartan-II™, Spartan-IIE™, Spartan-3™, Virtex™, Virtex-II™, Virtex-II Pro™, Virtex-E		
Version of Core	opb_ethernetlite v1.00a		
Re	esources Used		
	Min	Max	
I/O	124	124	
LUTs	494	610	
FFs	293 362		
Block RAMs	2	8	
Provided with Core			
Documentation	View this data sheet		
Design File Formats	N/A		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	N/A		
Design Tool Requirements			
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	Simulation ModelSim SE/EE 5.6e or later		
Synthesis	XST		
Support			
Provided by Xilinx, Inc.			

- CSMA/CD compliant operation at 10 Mbps and 100 Mbps in half duplex mode
- Supports unicast, and broadcast transmit and receive modes
- Provides auto Frame Check Sequence (FCS) field insertion on transmit and validation on receive
- Receive and Transmit Interrupts
  - Individual interrupts enable for Receive and Transmit
  - Global Device interrupt enable

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# **OPB Ethernet Lite Media Access Controller (v1.01a)**

View this data sheet

## **Product Specification**

# Introduction

Ethernet Lite MAC is designed to incorporate the applicable features described in IEEE Std. 802.3 MII interface specification, which should be used as the definitive specification. Differences between the IEEE Std. 802.3 MII interface specification and the Xilinx EMAC Lite implementation are highlighted and explained in the Specification Exceptions section.

The EMAC Interface design is a soft intellectual property (IP) core designed for implementation in selected Xilinx Virtex and Spartan family FPGAs.

The EMAC Lite supports the IEEE Std. 802.3 Media Independent Interface (MII) to industry standard Physical Layer (PHY) devices and communicates to a processor via an IBM On-Chip Peripheral Bus (OPB) interface. The design provides a 10 Megabits per second (Mbps) and 100 Mbps (also known as Fast Ethernet) Interface. The goal is to provide the minimal functions necessary to provide an Ethernet interface with the least resources used.

The Ethernet Lite MAC is comprised of two IP blocks: The IP Interface (IPIF) block is a subset of OPB bus interface features chosen from the full set of IPIF features to most efficiently couple the second block, the Ethernet Lite MAC core, to the OPB processor bus for this packet based interface (this combined entity is referred to as a device).

Although there are separate specifications for the IPIF design, this specification addresses the implementation required for the Ethernet Lite MAC design.

## **Features**

- 32-bit OPB slave interface
- Memory mapped direct I/O interface to the transmit and receive data dual port memory
- Media Independent Interface (MII) for connection to external 10/100 Mbps PHY transceivers
  - IEEE 802.3-compliant MII
  - Supports auto-negotiable and non auto-negotiable PHYs
  - Supports 10BASE-T and 100BASE-TX/FX IEEE 802.3 compliant MII PHYs at full or half duplex

Log	iCORE™ Facts		
C	ore Specifics		
Supported Device Family	QPro™-R Virtex-II™, QPro Virtex-II, Spartan-II™, Spartan-IIE™, Spartan-3™, Virtex™, Virtex-II, Virtex-II Pro™, Virtex-4™, Virtex-E		
Version of Core	opb_ethernetlite v1.01a		
Re	esources Used		
	Min Max		
I/O	124 124		
LUTs	582 760		
FFs	320 383		
Block RAMs	2 8		
Provided with Core			
Documentation	View this data sheet		
Design File Formats	N/A		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	N/A		
Design	Tool Requirements	3	
Xilinx Implementation Tools	6.2i or later		
Verification	N/A		
Simulation ModelSim SE/EE 5.6e or later			
Synthesis XST			
Support			
Provided by Xilinx, Inc.			

- Independent internal 2K byte Tx and Rx dual port memory for holding data for one packet each CSMA/CD com
- Optional dual buffer memories, 4K byte ping-pong, for Tx and Rx

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



OPB Asynchronous Transfer Mode Controller (OPB\_ATMC) (v1.00b)

View this data sheet

**Product Overview** 

# Introduction

The OPB\_ATMC Design described in this document is designed to incorporate the features defined in *UTOPIA Level 2, v1.0, af-phy-0039.000*, written by the ATM Forum Technical Committee, June, 1995.

The UTOPIA Level 2, v1.0 document is referenced throughout this document and is the authoritative specification. Differences between the UTOPIA Level 2, v1.0 document and the Xilinx OPB\_ATMC Design implementation are highlighted and explained in the Specification Exceptions section of the full datasheet.

# **Features**

- UTOPIA Level 2 master or slave interface
- UTOPIA interface data path of 8 or 16 bits
- Interface throughput up to 622 Mbps (OC12)
- Single channel VPI/VCI service and checking in received cells
- Header error check (HEC) generation and checking
- Parity generation and checking
- IP interface frequency of 10 MHz to 40 MHz
- System operating frequency upt to 125 MHz through OPB interface
- OPB interface including register, FIFO, DMA, and scatter gather capabilities
- Statistics gathering of short cells, long cells, unknown VPI/VCI, parity errors, and HEC errors
- Selectively prepend headers to transmit cells
- Selectively pass entire received cells or payloads only
- Selectively transfer 48 byte ATM payloads only
- Loop back test mode
- Auto processing or discard of short received cells, parity errored cells, unknown VPI/VCI, or HEC errored cells

LogiCORE™ Facts			
C	ore Specifics		
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-E		
Version of Core	opb_atmc	v1.00b	
Re	esources Used		
	Min	Max	
I/O	36	52	
LUTs	1700	3300	
FFs	1350 2150		
Block RAMs	2	2	
Provided with Core			
Documentation	<u>View</u> this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design Tool Requirements			
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	Simulation ModelSim SE/EE 5.6e or later		
Synthesis	XST		
Support			
Provided by Xilinx, Inc	•		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



OPB Asynchronous Transfer Mode Controller (OPB\_ATMC) (v2.00a)

View this data sheet

**Product Overview** 

# Introduction

The OPB\_ATMC Design described in this document is designed to incorporate the features defined in *UTOPIA Level 2, v1.0, af-phy-0039.000*, written by the ATM Forum Technical Committee, June, 1995.

The UTOPIA Level 2, v1.0 document is referenced throughout this document and is the authoritative specification. Differences between the UTOPIA Level 2, v1.0 document and the Xilinx OPB\_ATMC Design implementation are highlighted and explained in the Specification Exceptions section of the full datasheet.

# **Features**

- UTOPIA Level 2 master or slave interface
- UTOPIA interface data path of 8 or 16 bits
- Interface throughput up to 622 Mbps (OC12)
- Single channel VPI/VCI service and checking in received cells
- Header error check (HEC) generation and checking
- Parity generation and checking
- IP interface frequency of 10 MHz to 40 MHz
- System operating frequency upt to 125 MHz through OPB interface
- OPB interface including register, FIFO, DMA, and scatter gather capabilities
- Statistics gathering of short cells, long cells, unknown VPI/VCI, parity errors, and HEC errors
- Selectively prepend headers to transmit cells
- Selectively pass entire received cells or payloads only
- Selectively transfer 48 byte ATM payloads only
- Loop back test mode
- Auto processing or discard of short received cells, parity errored cells, unknown VPI/VCI, or HEC errored cells

LogiCORE™ Facts			
	ore Specifics		
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Virtex <sup>™</sup> , Virtex-II, Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E		
Version of Core	opb_atmc v2.00a		
Re	esources Used		
	Min	Max	
I/O	36	52	
LUTs	1500 3000		
FFs	1300	2000	
Block RAMs	2 2		
Provided with Core			
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design	Tool Requiremen	its	
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	Simulation ModelSim SE/EE 5.6e or later		
Synthesis	XST		
Support			
Provided by Xilinx, Inc	-		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# OPB Single Channel HDLC Interface (v1.00b)

View this data sheet

#### **Product Overview**

# Introduction

This document provides the design specification for the OPB High Level Data Link Control (HDLC) Interface Intellectual Property (IP) solution. It defines the architecture and interface requirements to this module. This includes registers the user must initialize for proper operation. This module is compatible with {ITU Q.921}. See the Specification Exceptions of the full datasheet.

The Xilinx HDLC design allows the customer to tailor the HDLC to suit their application by setting certain parameters to enable/disable features. The parameterizable features of the design are discussed in HDLC Design Parameters.

# **Features**

- Support for a single independent full duplex HDLC channel
- Receive memory buffer of selectable depth
- · Transmit FIFO of selectable depth
- Selectable 8/16 bit address receive address detection
- Selectable receive frame address discard
- Selectable receive broadcast address detection.
   Broadcast address = 0xFF
- Selectable 16 bit (CRC-CCITT) or 32 bit (CRC-32) frame check sequence
- 16 bit CRC error counter
- 16 bit Aborted frame counter
- Multiple Interrupts including:
  - Rx FCS error interrupt
  - Rx frame alignment error interrupt
  - FIFO overrun/underrun interrupts
  - Interrupt generated when either error counter rolls over
- Tx frame abort control
- Memory mapped direct I/O interface to registers and FIFOs as well as DMA and Scatter/Gather DMA capabilities for low processor and bus utilization.
- 16 entry deep FIFOs for the Transmit Length, Receive Length, Transmit Status and Receive Status registers to support multiple packet operation.
- Flag sharing between back to back frames

LogiCORE™ Facts				
	ore Specifics			
Supported Device Family	Virtex <sup>™</sup> , Virtex <sup>™</sup> -II, Virtex-II Pro <sup>™</sup>			
Version of Core	opb_hdlc	v1.00b		
Re	esources Used			
	Min Max			
I/O	6	6		
LUTs	472	2388		
FFs	445	1413		
Block RAMs	0	2		
Pro	vided with Core			
Documentation	View this data s	View this data sheet		
Design File Formats	VHDL			
Constraints File	N/A			
Verification	N/A			
Instantiation Template	N/A			
Reference Designs	N/A			
Design	Tool Requiremen	nts		
Xilinx Implementation Tools	Design Manage	r		
Verification	N/A			
Simulation	N/A			
Synthesis	XST			
Support				
Provided by Xilinx, Inc.				

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# OPB Multi Channel HDLC Interface (v2.00a)

View this data sheet

### **Product Overview**

# Introduction

This document provides the design specification for the OPB High Level Data Link Control (HDLC) Interface Intellectual Property (IP) solution. It defines the architecture and interface requirements to this module. This includes registers the user must initialize for proper operation. This module is compatible with {ITU Q.921}. See the Specification Exceptions of the full datasheet.

The Xilinx HDLC design allows the customer to tailor the HDLC to suit their application by setting certain parameters to enable/disable features. The parameterizable features of the design are discussed in HDLC Design Parameters.

# **Features**

The OPB HDLC interface is a soft IP core designed for Xilinx FPGAs and contains the following features:

- Support for one to eight independent full duplex HDLC channels
- Each independent channel may have 1 to 32 TDM sub-channels.
- Receive FIFO buffer of selectable depth
- Transmit FIFO buffer of selectable depth
- Selectable 8/16 bit address receive address detection
- Selectable receive frame address discard
- Selectable receive broadcast address detection.
   Broadcast address = 0xFF.
- Selectable 16 bit (CRC-CCITT) or 32 bit (CRC-32) frame check sequence
- 16-bit CRC error counter and Aborted frame counter
- Multiple Events/Interrupts including:
  - Rx FCS error interrupt
  - Rx frame alignment error interrupt
  - Memory buffer overrun/underrun interrupts
  - Interrupt generated when either error counter rolls over
- Tx frame abort control
- Memory mapped direct I/O interface to registers and memory buffers.
- Flag sharing between back to back frames
- Independent Rx and Tx data rates for each physical channel

Log	LogiCORE™ Facts			
C	ore Spe	cifics		
Supported Device Family	Virtex-I	Virtex-II Pro <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup>		
Resources Used (minimum settings)	I/O	LUTs	FFs	Block RAMs
(minimum settings)	6	1203	604	2
Special Features		RPM	Core	
Pro	vided wi	th Core		
Documentation	2	<u>View</u> this	data she	eet
Design File Formats		VHDL		
Constraints File		N/A		
Verification	N/A			
Instantiation Template	N/A			
Reference Designs & application notes	N/A			
Additional Items	N/A			
Design	Tool Re	quiremer	nts	
Xilinx		ISE 6.1	i or later	
Implementation Tools		with latest EDK		
Verification	ModelSim PE 5.7d			
Simulation	ModelSim PE 5.7d			
Synthesis	XST - ISE 6.1i			
Support				
Support provided by Xilinx, Inc.				

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# OPB Multi Channel HDLC Interface (v2.01a)

View this data sheet

### **Product Overview**

# Introduction

This specification defines the architecture and interface requirements to this module. This includes registers that the user must initialize for proper operation. The Xilinx HDLC design allows the customer to tailor the HDLC to suit their application by setting certain parameters to enable/disable features. The parameterizable features of the design are discussed in the HDLC Design Parameters section in this document.

## **Features**

The OPB HDLC interface is a soft IP core designed for Xilinx FPGAs and contains the following features:

- Support for one to eight independent full duplex HDLC channels
- Each independent channel may have 1 to 32 TDM sub-channels
- Receive FIFO buffer of selectable depth
- Transmit FIFO buffer of selectable depth
- Support for Packets larger than FIFO depth
- Selectable 8/16 bit address receive address detection
- Selectable receive frame address discard
- Selectable receive broadcast address detection.
   Broadcast address = 0xFF
- Selectable FCS 16 bit (CRC-CCITT) or 32 bit (CRC-32)
- CRC error counter, with rollover interrupt
- Aborted frame counter, with rollover interrupt
- Multiple Events/Interrupts including:
  - Rx FCS error interrupt
  - Rx frame alignment error interrupt
  - Memory buffer overrun/underrun interrupts
- Tx frame abort control
- Memory mapped direct I/O interface to registers and memory buffers
- Flag sharing between back to back frames
- Independent Rx and Tx data rates for each physical channel. The OPB\_CLK must be at least 1.1x higher frequency than the Rx or Tx data rate when a single sub channel is selected or 3x higher when more than one sub channel is selected

LogiCORE™ Facts				
C	ore Spe	cifics		
Supported Device Family	QPro™-R Virtex-II™, QPro Virtex-II, Spartan-3™, Virtex™, Virtex-II, Virtex-II Pro™, Virtex-4™			
Resources Used (minimum settings)	I/O	LUTs	FFs	Block RAMs
(minings)	6	1203	604	2
Version of Core	opb_	_hdlc	v2.	01a
Pro	vided wi	th Core		
Documentation	2	View this	data she	et
Design File Formats		VH	IDL	
Constraints File		N/A		
Verification	N/A			
Instantiation Template	N/A			
Reference Designs & application notes	N/A			
Additional Items	N/A			
Design	Tool Re	quiremer	its	
Xilinx	ISE 6.1i or later			
Implementation Tools	with latest EDK			
Verification	ModelSim PE 5.7d			
Simulation		ModelSir	n PE 5.7	d
Synthesis	is XST - ISE 6.1i			
Support				
Support provided by Xilinx, Inc.				

© 2004Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# **OPB Timebase WDT (v1.00a)**

View this data sheet

# **Product Overview**

# Introduction

This document describes the specifications for a 32-bit free-running timebase and watchdog timer core for the On-Chip Peripheral Bus (OPB). The TimeBase WatchDog Timer (TBWDT) is a 32-bit peripheral that attaches to the OPB.

## **Features**

- OPB V2.0 bus interface with byte-enable support
- Supports 32-bit, 16-bit, and 8-bit bus interfaces
- Watchdog timer (WDT) with selectable timeout period and interrupt
- Configurable WDT enable: enable-once or enable-disable
- One 32-bit free-running timebase counter with rollover interrupt

Log	giCORE™ Facts			
	Core Specifics			
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II, Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E			
Version of Core	opb_timebase_wdt	v1.00a		
F	Resources Used			
	Min	Max		
Slices	N/A	N/A		
LUTs	63	63		
FFs	111 111			
Block RAMs	0 0			
Pr	Provided with Core			
Documentation	View this data sheet			
Design File Formats	VHDL			
Constraints File	N/A			
Verification	N/A	N/A		
Instantiation Template	N/A			
Reference Designs	None			
Desig	n Tool Requirements			
Xilinx Implementation Tools	5.1i or later			
Verification	N/A			
Simulation	Simulation ModelSim SE/EE 5.6e or later			
Synthesis	XST			
Support				
Provided by Xilinx, Inc.				

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# **OPB Timer/Counter**

View this data sheet

# **Product Overview**

# Introduction

The TC (Timer/Counter) core is a a 32-bit timer/counter module that attaches to the OPB.

## **Features**

- OPB v2.0 bus interface with byte-enable support
- Supports 32-bit bus interface
- Two programmable interval timers with interrupt, event generation, and event capture capabilities
- · Configurable counter width
- One Pulse Width Modulation (PWM) output
- Freeze input for halting counters during software debug

LogiCORE™ Facts		
C	ore Specifics	
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II, Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E	
Version of Core	opb_timer v1.00b	
Re	esources Used	
	Min	Max
Slices	99	200
LUTs	99	275
FFs	105	266
Block RAMs	0	0
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e or later	
Synthesis	uthesis XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# OPB General Purpose Input/Output (GPIO) (v1.00a)

View this data sheet

## **Product Overview**

# Introduction

This document describes the specifications for the General Purpose Input/Output (GPIO) core, a 32-bit peripheral that attaches to the On-Chip Peripheral Bus (OPB) bus.

## **Features**

- OPB v2.0 bus interface with byte-enable support
- Supports 32-bit, 16-bit, and 8-bit bus interfaces
- Each GPIO bit dynamically programmable as input or output
- Number of GPIO bits configurable up to size of data bus interface
- Can be configured as inputs-only to reduce resource utilization

LogiCORE™ Facts		
C	ore Specifics	
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-4 <sup>™</sup> , QPro <sup>™</sup> -R Virtex-II, QPro Virtex-II, Virtex-E, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup>	
Version of Core	opb_gpio	v1.00a
Re	esources Used	
	Min	Max
Slices	22	104
LUTs	8	49
FFs	31	193
Block RAMs	0	0
Pro	vided with Core	
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e or later	
Synthesis XST		
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# OPB General Purpose Input/Output (GPIO) (v2.00a)

View this data sheet

### **Product Overview**

# Introduction

This document describes the specifications for the General Purpose Input/Output (GPIO) core, a 32-bit peripheral that attaches to the On-Chip Peripheral Bus (OPB) bus.

## **Features**

- Configurable as single or dual GPIO registers
- OPB v2.0 bus interface with byte-enable support
- Supports 32-bit, 16-bit, and 8-bit bus interfaces
- Each GPIO bit dynamically programmable as input or output
- Number of GPIO bits configurable up to size of data bus interface
- Can be configured as inputs-only to reduce resource utilization
- Can be configured as inputs-only to reduce resource utilization
- Ports for both three-state and non-three-state connections
- Independent reset values for each bit of all registers

Log	iCORE™ Facts	
C	ore Specifics	
Supported Device Family	Spartan-II™, Spartan-IIE™, Spartan-3™, Virtex™, Virtex-II™, Virtex-II Pro™, Virtex-E	
Version of Core	opb_gpio	v2.00a
Re	esources Used	
	Min	Max
Slices	6	80
LUTs	9	92
FFs	2	66
Block RAMs	0	0
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e or later	
Synthesis	XST	
Support		
Provided by Xilinx, Inc		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# OPB General Purpose Input/Output (GPIO) (v3.01a)

View this data sheet

## **Product Specification**

# Introduction

This document describes the specifications for the General Purpose Input/Output (GPIO) core for the On Chip Processor Bus (OPB) bus. The GPIO is a 32-bit peripheral that attaches to the OPB.

## **Features**

- Configurable as single or dual GPIO channel(s)
- OPB v2.0 bus interface with byte-enable support
- Each GPIO bit dynamically programmable as input or output
- Number of GPIO bits configurable from 1-32 bits
- Can be configured as inputs-only to reduce resource utilization
- Ports for both three-state and non-three-state connections
- Optional Interrupt request generation
- Independent reset values for each bit of all registers

LogiCORE™ Facts			
Core Specifics			
Supported Device Family	QPro™-R Virtex-II™, QPro Virtex-II, Spartan-II™, Spartan-IIE™, Spartan-3™, Virtex™, Virtex-II™, Virtex-E Virtex-II Pro™, Virtex-4™,		
Version of Core	opb_gpio	v3.01a	
Resources	Used (GPIO_Widt	h = 32)	
	Min	Max	
Slices	130	276	
LUTs	93	139	
FFs	144	340	
Block RAMs	N/A	N/A	
Provided with Core			
Documentation	<u>View</u> this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design	Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	ModelSim SE/EE 5.6e or later		
Synthesis	Synthesis XST		
Support			
Support provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# OPB Central DMA Controller (v1.00a)

View this data sheet

### **Product Overview**

# Introduction

The OPB Central DMA Controller provides simple Direct Memory Access (DMA) services for peripherals and memory devices on the OPB bus. The controller moves a programmable quantity of data from a source address to a destination address without processor intervention.

## **Features**

- Provides a single physical channel of Direct Memory Access between a source address and a destination address.
- Provides programmable registers for transfer length, source address, destination address, and dataword size.
- Addresses may be set up as incrementing or non-incrementing (for supporting keyhole type memory devices)
- Byte, halfword, and word data sizes supported.
- Provides fast internal data buffer to support OPB burst transfers

LogiCORE™ Facts			
	Core Specifics		
Supported Device Family	Spartan-II™, Spartan-IIE™, Spartan-3™, Virtex™, Virtex-II™, Virtex-II Pro™, Virtex-E		
Version of Core	opb_central_dma	v1.00a	
	Resources Used		
	Min	Max	
Slices	180	208	
LUTs	296	346	
FFs	271	282	
Block RAMs	0	0	
	Provided with Core		
Documentation	View this data shee	et	
Design File Formats	N/A		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	N/A		
Design Tool Requirements			
Xilinx Implementation Tools	N/A		
Verification	N/A		
Simulation	N/A		
Synthesis	N/A		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# **OPB Central DMA Controller** (v1.00b)

View this data sheet

### **Product Overview**

# Introduction

The OPB Central DMA Controller provides simple Direct Memory Access (DMA) services for peripherals and memory devices on the OPB bus. The controller moves a programmable quantity of data from a source address to a destination address without processor intervention.

## **Features**

- Provides a single physical channel of Direct Memory Access between a source address and a destination address.
- Provides programmable registers for transfer length, source address, destination address, and dataword size.
- Addresses may be set up as incrementing or non-incrementing (for supporting keyhole type memory
- Byte, halfword, and word data sizes supported.
- Provides fast internal data buffer to support OPB burst transfers.

LogiCORE™ Facts		
C	Core Specifics	
Supported Device Family	Spartan-II™, Spartan-IIE™, Spartan-3™, Virtex™, Virtex-II™, Virtex-II Pro™, Virtex-E	
Version of Core	opb_central_d ma v1.00b	
Re	esources Used	
	Min Max	
Slices	187	215
LUTs	307	357
FFs	271	282
Block RAMs	0	0
Provided with Core		
Documentation	<u>View</u> this data sheet	
Design File Formats	N/A	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Design Tool Requirements		
Xilinx Implementation Tools	N	I/A
Verification	N/A	
Simulation	N/A	

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at http://www.xilinx.com/legal.htm. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# OPB Central DMA Controller (v1.00c)

View this data sheet

### **Product Overview**

# Introduction

The OPB Central DMA Controller provides simple Direct Memory Access (DMA) services for peripherals and memory devices on the OPB bus. The controller moves a programmable quantity of data from a source address to a destination address without processor intervention.

## **Features**

- Provides a single physical channel of Direct Memory Access between a source address and a destination address.
- Provides programmable registers for transfer length, source address, destination address, and dataword size.
- Addresses may be set up as incrementing or non-incrementing (for supporting keyhole type memory devices)
- Byte, halfword, and word data sizes supported.
- Provides fast internal data buffer to support OPB burst transfers

LogiCORE™ Facts		
	Core Specifics	
Supported Device Family	QPro™-R Virtex-II™, QPro Virtex-II, Spartan-II™, Spartan-IIE™, Spartan-3™, Virtex™, Virtex-II, Virtex-II Pro™, Virtex-4™, Virtex-E	
Version of Core	opb_central_dma	v1.00c
	Resources Used	
	Min	Max
Slices	180	208
LUTs	296	346
FFs	271	282
Block RAMs	0	0
Provided with Core		
Documentation	View this data shee	et
Design File Formats	N/A	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Design Tool Requirements		
Xilinx Implementation Tools	N/A	
Verification	N/A	
Simulation	N/A	
Synthesis	N/A	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# OPB Delta-Sigma Digital to Analog Converter (DAC) (v1.00a)

View this data sheet

## **Product Overview**

# Introduction

Digital to analog converters (DACs) convert a binary number into a voltage directly proportional to the value of the binary number. A variety of applications use DACs, including waveform generators and programmable voltage sources. The only external circuitry required is a low pass filter comprised of one resistor and one capacitor.

## **Features**

- Selectable DAC width
- Selectable full scale output
- Programmable interrupt generation
- 16 entry deep data FIFO
- 32 bit OPB slave interface

LogiCORE™ Facts		
C	ore Specifics	
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II, Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E	
Version of Core	opb_deltasigma _dac	v1.00a
Re	esources Used	
	Min	Max
I/O		
LUTs		
FFs		
Block RAMs		
Provided with Core		
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Design Tool Requirements		
Xilinx Implementation Tools	ISE 6.1i or later with latest EDK	
Verification	ModelSim PE 5.7d	
Simulation	ModelSim PE 5.7d	
Synthesis	XST - ISE 6.1i	
Support		
Support provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# OPB Delta-Sigma Analog to Digital Converter (ADC) (v1.00a)

View this data sheet

### **Product Overview**

## Introduction

When digital systems are used in real-world applications, it is often necessary to convert an analog voltage level to a binary number. The value of this number is directly or inversely proportional to the voltage. The analog to digital conversion is realized in the OPB Delta-Sigma ADC using Delta-Sigma conversion techniques. This core is designed to interface with the OPB (On-chip Peripheral Bus).

# **Features**

The Xilinx OPB ADC is a soft IP core designed for Xilinx Virtex/Spartan FPGAs and supports the following features:

- OPB Interface
- Support of single beat transactions
- OPB Latency <= 4 Clock cycles</li>
- Capable of operating at OPB Clock frequency >= 100MHz

LogiCORE™ Facts		
Co	re Specifics	
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II, Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E	
Version of Core	opb_deltasigma _adc	v1.00a
Res	ources Used	
	Min	Max
I/O	130	152
LUTs	142	167
FFs	128	154
Block RAMs	N/A	N/A
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs		
Design Tool Requirements		
Xilinx Implementation Tools	ISE 6.1i or later	
Verification	ModelSim SE/EE 5.8 or later	
Simulation	Simulation ModelSim SE/EE 5.8 or later	
Synthesis XST, Synplify Pro 7.5 or later		Pro 7.5 or later
Support		
Support provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="https://www.xilinx.com/legal.htm">https://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# OPB System Monitor/ADC (v1.00.a)

View this data sheet

### **Product Overview**

# Introduction

This document describes the specifications for the System Monitor core for the On-Chip Peripheral Bus (OPB). The System Monitor/Analog-Digital Converter (ADC) is a 32-bit peripheral that attaches to the OPB.

## **Features**

- Supports on-chip monitoring of supply voltage and temperature, as well as 8 general purpose external analog channels
- OPB v2.0 bus interface provides interface to PPC and MicroBlaze™ processors
- Uses 1-2 dedicated System Monitor/ADC circuits on Virtex-4 LX, SX, and FX devices (except smallest family member)
- System Monitor/ADC includes 10-bit, 200K SPS ADC
- Optional, automatic alarms based on user defined limits
- Configurable to operate in either MONITOR or ADC mode
- Optional Interrupt request generation

LogiCORE™ Facts		
С	ore Specifics	
Supported Device Family	Virtex-4 <sup>™</sup>	
Version of Core	opb_sysmon_ adc	v1.00a
Re	sources Used	
	Min	Max
Slices	136	299
LUTs	114	212
FFs	58	73
Block RAMs		
Provided with Core		
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	Reference Designs None	
Design Tool Requirements		
Xilinx Implementation Tools	7.1i or later	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e or later	
Synthesis	Synthesis XST	
Support		
Support provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# Channel FIFO (v1.00a)

View this data sheet

## **Product Overview**

# Introduction

CFIFO contains separate write (transmit) and read (receive) FIFO designs called WFIFO and RFIFO, respectively. WFIFO and RFIFO can be used together or separately, and both are built from common functional elements such as special low level counter circuitry and compare functions. A CFIFO is intended to reside within other cores which require a multichannel FIFO capability, such as an HDLC transmitter / receiver. CFIFO does not contain a host bus interface, instead relying on core instantiatiation to provide interface. FIFOs utilize Virtex BRAM elements as data storage medium. CFIFO design incorporates special purpose counters, state machines, and logic necessary to implement functional requirements of a channelized FIFO.

## **Features**

- Two independent channel FIFO components provided: Read CFIFO (for host bus receive data buffering) and Write CFIFO (for host bus transmit data buffering).
- User controlled features include parameters for:
  - Setting the number of channels
  - Setting FIFO data depth
  - Setting FIFO data width
  - Setting independent fixed length burst sizes for each side of a CFIFO (Setting size to zero removes burst transfer support logic from side and disables bursts for side of CFIFO)
  - Selecting target FPGA family type
- "FIFO like" status outputs on communications interface side of HalfFull, AlmostFull, and Full for Read Channel FIFO, and HalfEmpty, AlmostEmpty, and Empty for Write Channel FIFO, in addition to true 'Occupancy' (Write Channel FIFO) and 'Vacancy' (Read Channel FIFO) outputs.
- A Tag field input to Write CFIFO is stored in memory array on every write data transfer. This field is user definable and is intended to provide a mechanism for indicating which byte within a word is last valid byte in a packet.
- Write and Read Ports on each CFIFO are synchronized to a common clock source (synchronous operation).

LogiCORE™ Facts		
C	ore Specifics	
Supported Device Family	QPro™-R Virtex-II™, QPro Virtex-II, Spartan-II™, Spartan-IIE™, Spartan-3™, Virtex™, Virtex-II™, Virtex-II Pro™, Virtex-4™, Virtex-E	
Version of Core	channel_fifo v1.00a	
Re	esources Used	
	Min	Max
I/O		
LUTs	199	345
FFs	61	96
Block RAMs	18	36
Provided with Core		
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	UCF	
Verification	VHDL Testbench	
Instantiation Template	VHDL Wrapper	
Reference Designs	N/A	
Design Tool Requirements		
Xilinx Implementation Tools	ISE 5.1 or later	
Verification	ModelSim PE 5.6d	
Simulation	ModelSim PE 5.6d	
Synthesis	Synthesis XST	
Support		
Provided by Xilinx, Inc		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# **Fixed Interval Timer (FIT)**

View this data sheet

# Introduction

The fit\_timer core is a peripheral that generates a strobe (interrupt) signal at fixed intervals and is not attached to any bus. The FIT\_Timer generates an interrupt every C\_NO\_CLOCKS. The interrupt signal is held high for one clock cycle. The core begins operation immediately after FPGA configuration. The core can not be stopped once operation has commenced.

## **Features**

- Configurable number of clock cycles between interrupts
- Configurable inaccuracy in clock intervals between interrupts

### **Product Overview**

LogiCORE™ Facts		
С	ore Specifics	
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E	
Version of Core	fit_timer	v1.00a
Re	esources Used	
	Min	Max
Slices	N/A	N/A
LUTs	6	19
FFs	10	19
Block RAMs	N/A	N/A
Pro	vided with Core	
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N	one
Design	Tool Requiremen	nts
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	ModelSim SE/PE 5.7b or later	
Synthesis	Synthesis XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# MII to RMII (v1.00a)

View this data sheet

# Product Overview

# Introduction

The Media Independent Interface (MII) to Reduced Media Independent Interface (RMII) design described in this document provides the Reduced Media Independent Interface between ethernet PHYs and Xilinx ethernet cores such as the OPB\_Ethernet. The OPB\_Ethernet provides the traditional Media Independent Interface (MII) that requires sixteen signals to communicate with an Ethernet PHY. The MII\_to\_RMII accepts the sixteen signal MII interface and provides a six signal interface to an RMII compliant PHY. Additionally, a fixed 50 MHz reference clock synchronizes the MII\_to\_RMII with both interfaces. This MII\_to\_RMII follows the specification defined by the RMII Consortium found on the internet site:

http://broadband.spirentcom.com/technology/chipsolutions/rmii 1 2.pdf.

The Xilinx MII\_to\_RMII design allows the customer to tailor their application by setting certain parameters to enable or disable features.

## **Features**

The MII\_to\_RMII is a soft IP core designed for Xilinx FPGAs and contains the following features:

- MII Interface
- RMII Interface
- Parameters to select fixed 10 or 100 Mbit per second throughput
- Parameter to allow auto detection of receive throughput (transmit side always fixed)
- A fixed clock frequency of 50 MHz.

LogiCORE™ Facts			
Supported Device Family	Spartan-II™, Spartan-IIE™, Spartan-3™, Virtex™, Virtex-II™, Virtex-II Pro™, Virtex-E		
Version of Core	mmi_to_rmii	v1.00a	
	Resources Used		
	Min	Max	
I/O	25	25	
LUTs	16	145	
FFs	20	146	
Block RAMs	0	0	
Provided with Core			
Documentation	<u>View</u> this data sheet		
Design File Formats	VHDL		
Constraints File	UCF		
Verification	VHDL Testbench		
Instantiation Template	VHDL Wrapper		
Reference Designs	None		
Design Tool Requirements			
Xilinx Implementation Tools	5.2i or later		
Verification	ModelSim PE 5.5e or later		
Simulation	ModelSim PE 5.5e or later		
Synthesis	Synplify Pro 7.1		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# MII to RMII (v1.00b)

View this data sheet

#### **Product Overview**

# Introduction

The Media Independent Interface (MII) to Reduced Media Independent Interface (RMII) design described in this document provides the Reduced Media Independent Interface between ethernet PHYs and Xilinx ethernet cores such as the OPB\_Ethernet. The OPB\_Ethernet provides the traditional Media Independent Interface (MII) that requires sixteen signals to communicate with an Ethernet PHY. The MII\_to\_RMII accepts the sixteen signal MII interface and provides a six signal interface to an RMII compliant PHY. Additionally, a fixed 50 MHz reference clock synchronizes the MII\_to\_RMII with both interfaces. This MII\_to\_RMII follows the specification defined by the RMII Consortium, located at:

http://broadband.spirentcom.com/technology/chipsolutions/rmii 1 2.pdf.

The Xilinx MII\_to\_RMII design lets designers tailor their application by setting parameters to enable or disable features.

## **Features**

The MII\_to\_RMII is a soft IP core designed for Xilinx FPGAs and contains the following features:

- MII Interface
- RMII Interface
- Parameter to allow automatic detection of receive throughput (transmit side always fixed throughput)
- Parameter to select fixed throughput of 10 or 100 Mbits per second
- A fixed clock frequency of 50 MHz

Logi	CORE™ Facts		
Core Specifics			
Supported Device Family	QPro™ Virtex-II™, Spartan-II™, Spartan-IIE™, Spartan-3™, Virtex™, Virtex-II, Virtex-II Pro™, Virtex-4™, Virtex-E		
Version of Core	mmi_to_rmii v1.00b		
Res	sources Used		
	Min	Max	
Core FPGA IOBs	6	8	
Total Core I/O	25	25	
LUTs	36	112	
FFs	59	185	
Block RAMs	0	0	
Provided with Core			
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design Tool Requirements			
Xilinx Implementation Tools	6.2i or later		
Verification	N/A		
Simulation	ModelSim PE/SE 5.7d or later		
Synthesis	XST		
Support			
Support provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



PLB 1-Gigabit Ethernet Media Access Controller (MAC) with DMA (v1.00b)

View this data sheet

**Product Overview** 

# Introduction

This document provides the design specification for the 1 Gigabit Ethernet Media Access Controller (GEMAC) with DMA. The GEMAC described in this document has been designed incorporating the applicable features described in IEEE Std. 802.3-2000. Differences between that specification and the Xilinx GEMAC implementation are highlighted and explained in the Specification Exceptions section.

The GEMAC Interface design is a soft intellectual property (IP) core designed for implementation in a Virtex-II Pro™ FPGA. The GEMAC supports the IEEE Std. 802.3 Gigabit Media Independent Interface (GMII) to industry standard Physical Layer (PHY) devices for full duplex only applications.

For designs in Virtex-II Pro devices, including the optional Physical Coding Sublayer (PCS) function allows the GEMAC to support the standard Ten Bit Interface (TBI) to external PHY devices.

For designs in Virtex-II Pro devices, including the optional Physical Media Attachment (PMA) function with the PCS function allows the GEMAC to take advantage of the built-in Multi-Gigabit Transceivers (MGT) for a greatly reduced signal count SerDes interface to external transceivers. This option greatly reduces routing complexity in the Printed Wiring Board (PWB).

The GEMAC communicates to a processor via a 64-bit IBM Processor Local Bus (PLB) interface, which provides a 1 Gigabit per second full duplex only Ethernet Interface.

The Xilinx GEMAC design allows the customer to tailor the GEMAC to suit their application by setting certain parameters to enable/disable features. The parameterizable features of the design are discussed in this data sheet.

The GEMAC is comprised of two, three, or four IP block.: The IP Interface (IPIF) block is a subset of PLB bus interface features chosen from the full set of IPIF features to most efficiently couple the second block, the GEMAC core, to the PLB processor bus for this packet based interface. The optional third (PCS) and fourth (PMA) blocks provide flexibility for connection to external Ethernet physical layer devices. This combined entity is referred to as a device. Although there are separate specifications for the IPIF design, this specification addresses the specific implementation required for the GEMAC design.

Log	LogiCORE™ Facts			
C	ore Specifics			
Supported Device Family	Virtex-II Pro™			
Version of Core	plb_gemac	v1.00b		
Resources Used				
	Min	Max		
Total Core I/Os	533	533		
Core FPGA IOBs	5	46		
LUTs	2834	5461		
FFs	2286	3421		
Block RAMs	8	38		
Pro	Provided with Core			
Documentation	<u>View</u> this data sheet			
Design File Formats	VHDL			
Constraints File	N/A			
Verification	N/A			
Instantiation Template	N/A			
Reference Designs	None			
Design Tool Requirements				
Xilinx Implementation Tools	5.1i or later			
Verification	N/A			
Simulation	ModelSim SE/EE 5.6e or later			
Synthesis	XST			
Support				
Provided by Xilinx, Inc.				

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



### **GEMAC Endianess**

Please note that the GEMAC is designed as a big endian device (bit 0 is the most significant bit and is shown on the left of a group of bits).

The 8-bit GMII transmit and receive data interface to the external PHY is little endian (bit 7 is the most significant bit and appears on the left of the bus). The MII management interface to the PHY is serial with the most significant bit of a field being transmitted first.

### **Features**

The GEMAC is a soft IP core designed for Xilinx FPGAs and contains the following features:

- 64-bit PLB master and slave interfaces.
- Memory mapped direct I/O interface to registers and FIFOs as well as Simple DMA and Scatter/Gather DMA capabilities for low processor and bus utilization..
- Optional Media Independent Interface Management (MIIM) for access to PHY transceiver registers
- GMII interface to external PHY devices
- Optional PCS function with Ten Bit Interface (TBI) to external PHY devices.
- Option PCS/PMA functions with SerDes interface to external transceiver devices for reduced signal count
- Independent internal 2 K, 4 K, 8 K, 16 K, or 32 K byte TX and RX FIFOs for holding data for more than one packet (2 K byte depth is sufficient for normal 1518 maximum byte packets but 4 K byte depth provides better throughput. 16 K or 32 K byte depth is required for Jumbo frames up to 9 K bytes long)
- 16 entry deep FIFOs for the Transmit Length, Receive Length, and Transmit Status registers to support multiple packet operation
- Filtering of "bad" receive packets to reduce processor bus utilization
- Programmable PHY reset signal
- Auto pad and Frame Check Sequence (FCS) field insertion or pass through on transmit
- Auto pad and FCS field stripping or pass through on receive
- Processes transmission and reception of Pause frames for flow control
- Supports receive and transmit of longer VLAN type frames
- Programmable interframe gap
- Provides interrupts for many error and status conditions
- Optional support of jumbo frames up to 9K bytes in length
- No receive destination address validation. All properly formed packets are accepted.



PLB 1-Gigabit Ethernet Media Access Controller (MAC) with DMA (v1.01a)

View this data sheet

**Product Overview** 

# Introduction

This document provides the design specification for the 1 Gigabit Ethernet Media Access Controller (GEMAC) with DMA. The GEMAC described in this document has been designed incorporating the applicable features described in IEEE Std. 802.3-2000. Differences between that specification and the Xilinx GEMAC implementation are highlighted and explained in the Specification Exceptions section.

The GEMAC Interface design is a soft intellectual property (IP) core designed for implementation in a Virtex-II Pro FPGA. The GEMAC supports the IEEE Std. 802.3 Gigabit Media Independent Interface (GMII) to industry standard Physical Layer (PHY) devices for full duplex only applications.

For designs in Virtex-II Pro devices, including the optional Physical Coding Sublayer (PCS) function allows the GEMAC to support the standard Ten Bit Interface (TBI) to external PHY devices.

For designs in Virtex-II Pro devices, including the optional Physical Media Attachment (PMA) function with the PCS function allows the GEMAC to take advantage of the built-in Multi-Gigabit Transceivers (MGT) for a greatly reduced signal count SerDes interface to external transceivers. This option greatly reduces routing complexity in the Printed Wiring Board (PWB) Note that the MGTs in Virtex-II Pro-X devices do not support GEMAC data rates.

The GEMAC communicates to a processor via a 64-bit IBM Processor Local Bus (PLB) interface, which provides a 1 Gigabit per second full duplex only Ethernet Interface.

The Xilinx GEMAC design allows the customer to tailor the GEMAC to suit their application by setting certain parameters to enable/disable features. The parameterizable features of the design are discussed in this data sheet.

The GEMAC is comprised of two, three, or four IP block.: The IP Interface (IPIF) block is a subset of PLB bus interface features chosen from the full set of IPIF features to most efficiently couple the second block, the GEMAC core, to the PLB processor bus for this packet based interface. The optional third (PCS) and fourth (PMA) blocks provide flexibility for connection to external Ethernet physical layer devices. This combined entity is referred to as a device. Although there are separate specifications for the IPIF design, this specification addresses the specific implementation required for the GEMAC design.

Log	iCORE™ Facts		
C	ore Specifics		
Supported Device Family	Virtex-II Pro™		
Version of Core	plb_gemac	v1.01a	
Resources Used			
	Min	Max	
Total Core I/Os	533	533	
Core FPGA IOBs	5	46	
LUTs	2834	5461	
FFs	2286	3421	
Block RAMs	8	38	
Provided with Core			
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design Tool Requirements			
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	ModelSim SE/EE 5.6e or later		
Synthesis	XST		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



## **GEMAC Endianess**

Please note that the GEMAC is designed as a big endian device (bit 0 is the most significant bit and is shown on the left of a group of bits).

The 8-bit GMII transmit and receive data interface to the external PHY is little endian (bit 7 is the most significant bit and appears on the left of the bus). The MII management interface to the PHY is serial with the most significant bit of a field being transmitted first.

### **Features**

The GEMAC is a soft IP core designed for Xilinx FPGAs and contains the following features:

- 64-bit PLB master and slave interfaces.
- Memory mapped direct I/O interface to registers and FIFOs as well as Simple DMA and Scatter/Gather DMA capabilities for low processor and bus utilization..
- Optional Media Independent Interface Management (MIIM) for access to PHY transceiver registers
- GMII interface to external PHY devices
- Optional PCS function with Ten Bit Interface (TBI) to external PHY devices.
- Option PCS/PMA functions with SerDes interface to external transceiver devices for reduced signal count
- Independent internal 2 K, 4 K, 8 K, 16 K, or 32 K byte TX and RX FIFOs for holding data for more than one packet (2 K byte depth is sufficient for normal 1518 maximum byte packets but 4 K byte depth provides better throughput. 16 K or 32 K byte depth is required for Jumbo frames up to 9 K bytes long)
- 16 entry deep FIFOs for the Transmit Length, Receive Length, and Transmit Status registers to support multiple packet operation
- Filtering of "bad" receive packets to reduce processor bus utilization
- Programmable PHY reset signal
- Auto pad and Frame Check Sequence (FCS) field insertion or pass through on transmit
- Auto pad and FCS field stripping or pass through on receive
- Processes transmission and reception of Pause frames for flow control
- Supports receive and transmit of longer VLAN type frames
- Programmable interframe gap
- Provides interrupts for many error and status conditions
- Optional support of jumbo frames up to 9K bytes in length
- No receive destination address validation. All properly formed packets are accepted.



# PLB Ethernet Media Access Controller (PLB\_EMAC) (v1.00a)

View this data sheet

### **Product Overview**

# Introduction

The Processor Logical Bus Ethernet 10/100 Mbs Media Access Controller (PLB\_EMAC) with interface to the Processor Local Bus (PLB) has been designed incorporating the applicable features described in IEEE Std. 802.3 MII interface specification. The IEEE Std. 802.3 MII interface specification is referenced throughout this document and should be used as the authoritative specification. Differences between the IEEE Std. 802.3 MII interface specification and the Xilinx EMAC implementation are highlighted and explained in the Specifications Exceptions of the full data sheet.

The PLB\_EMAC Interface design is a soft intellectual property (IP) core designed for implementation in a Virtex-II Pro FPGA. The PLB\_EMAC design provides a 10 Megabits per second (Mbps) and 100 Mbps (also known as Fast Ethernet) EMAC Interface. It includes many of the functions and the flexibility found in dedicated Ethernet controller devices currently on the market.

## **Features**

The PLB EMAC is a soft IP core designed for Xilinx FPGAs and contains the following features:

- 64-bit PLB master and slave interfaces.
- Memory mapped direct I/O interface to registers and FIFOs as well as Simple DMA and Scatter/Gather DMA capabilities for low processor and bus utilization.
- Media Independent Interface (MII) for connection to external 10/100 Mbps PHY transceivers
  - IEEE 802.3-compliant MII and management control writes and reads with MII PHYs plus a progreammable PHY reset signal
  - Supports auto-negotiable and non auto-negotiable PHYs for 10BASE-T and 100BASE-TX/FX IEEE 802.3 compliant MII PHYs at full or half duplex
- Independent internal TX and RX FIFOs (2K 32 K) for holding data for more than one packet. 2 K byte depth is sufficient for normal 1518 maximum byte packets but 4 K byte depth provides better throughput.

Log	iCORE™ Facts		
C	ore Specifics		
Supported Device Family	Virtex-II Pro™		
Version of Core	plb_ethernet	v1.00a	
Resources Used			
	Min	Max	
Total Core I/Os	445	460	
Core FPGA IOBs	13	19	
LUTs	2000	37000	
FFs	1500	2300	
Block RAMs	2	2	
Provided with Core			
Documentation	View this data sheet		
Design File Formats	NGC netlists, VHDL wrapper		
Constraints File	UCF		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design Tool Requirements			
Xilinx Implementation Tools	ISE 6.1i or later		
Verification	ModelSim PE 5.7b		
Simulation	ModelSim PE 5.7b		
Synthesis	Synplicity Pro 7.2		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



- 16, 32, or 64 entry deep FIFOs for the Transmit Length, Receive Length, and Transmit Status registers to support multiple packet operation.
- CSMA/CD compliant operation at 10 Mbps and 100 Mbps in half duplex mode
- Test and debug features for internal loop-back and "Freeze" (graceful halt) mode based to assist with emulator based software development
- · Unicast, multicast, and broadcast transmit and receive modes plus promiscuous address receive mode
- Provides auto or manual source address field insertion or overwrite for transmission
- Provides auto or manual pad and Frame Check Sequence (FCS) field insertion for tranmit and auto pad and FCS field stripping on receive
- Processes pause packets and VLAN type frames
- Programmable interframe gap
- Provides counters and interrupts for error conditionsIntroduction



# PLB Ethernet Media Access Controller (PLB\_EMAC) (v1.01a)

View this data sheet

### **Product Overview**

# Introduction

The Processor Logical Bus Ethernet 10/100 Mbs Media Access Controller (PLB\_EMAC) with interface to the Processor Local Bus (PLB) has been designed incorporating the applicable features described in IEEE Std. 802.3 MII interface specification. The IEEE Std. 802.3 MII interface specification is referenced throughout this document and should be used as the authoritative specification. Differences between the IEEE Std. 802.3 MII interface specification and the Xilinx EMAC implementation are highlighted and explained in the Specifications Exceptions of the full data sheet.

The PLB\_EMAC Interface design is a soft intellectual property (IP) core designed for implementation in a Virtex-II Pro<sup>™</sup> and Virtex-4<sup>™</sup> FPGA. The PLB\_EMAC design provides a 10 Megabits per second (Mbps) and 100 Mbps (also known as Fast Ethernet) EMAC Interface. It includes many of the functions and the flexibility found in dedicated Ethernet controller devices currently on the market.

## **Features**

The PLB EMAC is a soft IP core designed for Xilinx FPGAs and contains the following features:

- 64-bit PLB master and slave interfaces.
- Memory mapped direct I/O interface to registers and FIFOs as well as Simple DMA and Scatter/Gather DMA capabilities for low processor and bus utilization.
- Media Independent Interface (MII) for connection to external 10/100 Mbps PHY transceivers
  - IEEE 802.3-compliant MII and management control writes and reads with MII PHYs plus a progreammable PHY reset signal
  - Supports auto-negotiable and non auto-negotiable PHYs for 10BASE-T and 100BASE-TX/FX IEEE 802.3 compliant MII PHYs at full or half duplex
- Independent internal TX and RX FIFOs (2K 32 K) for holding data for more than one packet. 2 K byte depth is sufficient for normal 1518 maximum byte packets but 4 K byte depth provides better throughput.

LogiCORE™ Facts				
С	Core Specifics			
Supported Device Family	Virtex-II Pro, Virtex-4			
Version of Core	plb_ethernet	v1.01a		
Re	Resources Used			
	Min	Max		
Total Core I/Os	445	460		
Core FPGA IOBs	13	19		
LUTs	2000	37000		
FFs	1500	2300		
Block RAMs	2	2		
Provided with Core				
Documentation	View this data sheet			
Design File Formats	NGC netlists, VHDL wrapper			
Constraints File	UCF			
Verification	N/A			
Instantiation Template	N/A			
Reference Designs	None			
Design Tool Requirements				
Xilinx Implementation Tools	ISE 6.1i or later			
Verification	ModelSim PE 5.7b			
Simulation	ModelSim PE 5.7b			
Synthesis	Synplicity Pro 7.2			
Support				
Provided by Xilinx, Inc.				

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



- 16, 32, or 64 entry deep FIFOs for the Transmit Length, Receive Length, and Transmit Status registers to support multiple packet operation.
- CSMA/CD compliant operation at 10 Mbps and 100 Mbps in half duplex mode
- Test and debug features for internal loop-back and "Freeze" (graceful halt) mode based to assist with emulator based software development
- · Unicast, multicast, and broadcast transmit and receive modes plus promiscuous address receive mode
- Provides auto or manual source address field insertion or overwrite for transmission
- Provides auto or manual pad and Frame Check Sequence (FCS) field insertion for tranmit and auto pad and FCS field stripping on receive
- Processes pause packets and VLAN type frames
- Programmable interframe gap
- Provides counters and interrupts for error conditionsIntroduction



# PLB 16550 UART (v1.00c)

View this data sheet

#### Introduction

This document provides the specification for the PLB Universal Asynchronous Receiver/Transmitter (UART) Intellectual Property (IP).

The UART described in this document has been designed incorporating the features described in *National Semiconductor PC16550D UART with FIFOs* data sheet (June, 1995), (http://www.national.com/pf/PC/PC16550D.html).

The National Semiconductor PC16550D data sheet is referenced throughout this document and should be used as the authoritative specification. Differences between the National Semiconductor implementation and the OPB UART Point Design implementation are highlighted and explained in the full datasheet.

#### **Features**

- Hardware and software register compatible with all standard 16450 and 16450 UARTs
- Implements all standard serial interface protocols
  - 5, 6, 7, or 8 bits per character
  - Odd, Even, or no parity detection and generation
  - 1, 1.5, or 2 stop bit detection and generation
  - Internal baud rate generator and separate receiver clock input
  - Modem control functions
  - False start bit detection and recovery
  - Prioritized transmit, receive, line status, and modem control interrupts
  - Line break detection and generation
  - Internal loop back diagnostic functionality
  - Independent 16 word transmit and receive FIFOs
- Registers
  - Receiver Buffer Register (Read Only)
  - Transmitter Holding Register (Write Only)
  - Interrupt Enable Register
  - Interrupt Identification Register (Read Only)
  - FIFO Control Register (Read/Write)
  - Line Control and Line Status Registers
  - Modem Control and Modem Status Registers
  - Scratch Register

#### **Product Overview**

C	Core Specifics	
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup>	
Version of Core	plb_uart16550	v1.00c
Re	esources Used	
	Min	Max
Slices	459	459
LUTs	492	492
FFs	429	429
Block RAMs	0	0
Pro	vided with Core	
Documentation	View this data she	eet
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design	Tool Requirements	•
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	ModelSim SE/EE	5.6e or later
Synthesis	XST	
	Support	

- Divisor Latch (least and more significant byte)
- System clock frequency of 100 MHz

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# PLB 16450 UART (v1.00c)

View this data sheet

#### Introduction

This document provides the specification for the PLB Universal Asynchronous Receiver/Transmitter (UART) Intellectual Property (IP).

The UART described in this document has been designed incorporating the features described in *National Semiconductor PC16550D UART with FIFOs* data sheet (June, 1995), (http://www.national.com/pf/PC/PC16550D.html).

The National Semiconductor PC16550D data sheet is referenced throughout this document and should be used as the authoritative specification. Differences between the National Semiconductor implementation and the OPB UART Point Design implementation are highlighted and explained in the full datasheet.

#### **Features**

- Hardware and software register compatible with all standard 16450 UARTs
- Implements all standard serial interface protocols
  - 5, 6, 7, or 8 bits per character
  - Odd, Even, or no parity detection and generation
  - 1, 1.5, or 2 stop bit detection and generation
  - Internal baud rate generator and separate receiver clock input
  - Modem control functions
  - False start bit detection and recovery
  - Prioritized transmit, receive, line status, and modem control interrupts
  - Line break detection and generation
  - Internal loop back diagnostic functionality

#### Registers

- Receiver Buffer Register (Read Only)
- Transmitter Holding Register (Write Only)
- Interrupt Enable Register
- Interrupt Identification Register (Read Only)
- Line Control and Line Status Registers
- Modem Control and Modem Status Registers
- Scratch Register
- Divisor Latch (least and more significant byte)
- System clock frequency of 100 MHz

#### **Product Overview**

1	OODEIM Faata		
LogiCORE™ Facts			
C	ore Specifics		
Supported Device Family	Virtex-II Pro <sup>™</sup>	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup>	
Version of Core	plb_uart16450	v1.00c	
Re	esources Used		
	Min	Max	
Slices	432	432	
LUTs	487	487	
FFs	410	410	
Block RAMs	0	0	
Pro	vided with Core		
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design Tool Requirements			
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	Simulation ModelSim SE/EE 5.6e or later		
Synthesis	XST		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# PLB RapidIO LVDS (v1.00a)

View this data sheet

#### Introduction

This document presents the design specification for the Xilinx PLB RapidIO<sup>™</sup> LVDS Intellectual Property (IP) solution. This LogiCORE module provides an interface between the IBM<sup>®</sup> CoreConnect<sup>™</sup> Processor Local Bus (PLB) and an LVDS based RapidIO interface standard.

The PLB RapidIO LVDS design provides an interface between the PPC405 (via PLB CoreConnect Bus) and a RapidIO protocol network. The physical interface to the RapidIO bus uses the 8 bit LVDS standard.

#### **Features**

The PLB RapidIO LVDS is a soft IP core designed for Xilinx FPGAs incorporating PPC405 and MicroBlaze™ processing elements. The design provides the following features:

- Front end Interface to the IBM CoreConnect PLB Bus
  - Supports PLB signaling per the IBM *64-Bit*Processor Local Bus, Architectural Specification
  - Integrates easily with the Xilinx Platform Studio for PPC405 System Development.
  - 64 bit wide data transfers
  - 512x64 Tx and Rx Packet Buffers (Up to 8 maximally sized packets can be queued for Tx and Rx)
  - PLB Cacheline and Burst Transfer Interface Support with Packet Buffers.
  - Parameterized System Address Block.
- Back end Interface to RapidIO Bus.
  - Incorporates Xilinx RapidIO Physical Layer
    - Supports RapidIO Physical Layer 8/16 LP-LVDS Interconnect Specification v1.1.
    - 8-bit LVDS PHY (TX and Rx functions)
    - 500 MBytes/sec Peak Transfer Rate at the PHY Tx and Rx ports.
- Processor Accessible Registers
  - Interrupt Enable and Status Registers
  - S/W Reset/MIR Register
  - RapidIO PHY Link Status Register
  - RapidIO PHY Management Register Set
- System Interrupt Support
  - Tx and Rx Flow Control Interrupts

#### **Product Overview**

LogiCORE™ Facts			
(	Core Specifics		
Supported Device Family	Virtex-II Pro™		
Version of Core	plb_rapidio_lvds	v1.00a	
R	esources Used		
	Min	Max	
I/O	40	40	
LUTs	5849	6138	
FFs	2960	3089	
Block RAMs	4	4	
Pro	ovided with Core		
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	Example UCF		
Verification	N/A		
Instantiation Template	None		
Reference Designs	None		
Design Tool Requirements			
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	Simulation ModelSim 5.6e or later		
Synthesis	XST		
Support			
Provided by Xilinx, Inc.			

- Programmable Enables/Disables.
- Interrupt Status Registers can support S/W Polled Mode control flow in place of Interrupt Control Flow
- PLB System clock frequency up to 100 MHz

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# PLB RapidIO LVDS (v1.00c)

View this data sheet

#### Introduction

This document presents the design specification for the Xilinx PLB RapidIO<sup>™</sup> LVDS Intellectual Property (IP) solution. This LogiCORE module provides an interface between the IBM<sup>®</sup> CoreConnect<sup>™</sup> Processor Local Bus (PLB) and an LVDS based RapidIO interface standard.

The PLB RapidIO LVDS design provides an interface between the PPC405 (via PLB CoreConnect Bus) and a RapidIO protocol network. The physical interface to the RapidIO bus uses the 8 bit LVDS standard.

#### **Features**

The PLB RapidIO LVDS is a soft IP core designed for Xilinx FPGAs incorporating PPC405 and MicroBlaze™ processing elements. The design provides the following features:

- Front end Interface to the IBM CoreConnect PLB Bus
  - Supports PLB signaling per the IBM 64-Bit Processor Local Bus, Architectural Specification
  - Integrates easily with the Xilinx Platform Studio for PPC405 System Development.
  - 64 bit wide data transfers
  - 512x64 Tx and Rx Packet Buffers (Up to 8 maximally sized packets can be queued for Tx and Rx)
  - PLB Cacheline and Burst Transfer Interface Support with Packet Buffers.
  - Parameterized System Address Block.
- Back end Interface to RapidIO Bus.
  - Incorporates Xilinx RapidIO Physical Layer
    - Supports RapidIO Physical Layer 8/16 LP-LVDS Interconnect Specification v1.1.
    - 8-bit LVDS PHY (TX and Rx functions)
    - 500 MBytes/sec Peak Transfer Rate at the PHY Tx and Rx ports.
- Processor Accessible Registers
  - Interrupt Enable and Status Registers
  - S/W Reset/MIR Register
  - RapidIO PHY Link Status Register
  - RapidIO PHY Management Register Set
- System Interrupt Support
  - Tx and Rx Flow Control Interrupts

#### **Product Overview**

LogiCORE™ Facts		
(	Core Specifics	
Supported Device Family	Virtex-II Pro™	
Version of Core	plb_rapidio_lvds	v1.00c
R	esources Used	
	Min	Max
I/O	40	40
LUTs	6,077	6,345
FFs	2,907	3,032
Block RAMs	4	4
Pro	ovided with Core	
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	Example UCF	
Verification	N/A	
Instantiation Template	None	
Reference Designs	None	
Desigr	n Tool Requirement	s
Xilinx Implementation Tools	6.2i	
Verification	N/A	
Simulation	ModelSim 5.7e	
Synthesis XST		
Support		
Support provided by Xilinx, Inc.		

- Programmable Enables/Disables.
- Interrupt Status Registers can support S/W Polled Mode control flow in place of Interrupt Control Flow
- PLB System clock frequency up to 100 MHz

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



**PLB Asynchronous Transfer Mode Controller (PLB\_ATMC)** (v1.00a)

**Product Overview** 

View this data sheet

#### Introduction

This document provides the specification for the Processor Logical Bus Asynchronous Tranfers Mode Controller (PLB ATMC) IP, which includes an asynchronous transfer mode controller with a UTOPIA Level 2 or UTOPIA Level 3 interface.

The PLB\_ATMC Design described in this document is designed to incorporate the features defined in UTOPIA Level 2, Version 1.0, af-phy-0039.000, written by the ATM Forum Technical Committee, June, 1995 or in UTOPIA Level 3 Physical Layer Interface, af-phy-0136.000, written by the ATM Forum Technical Committee, November, 1999.

The UTOPIA Level 2 and 3 documents are referenced throughout this document and are the authoritative specifications. Differences between these documents and the Xilinx PLB ATMC Design implementation are highlighted and explained in Specification Exceptions.

#### **Features**

The PLB ATMC Design is a soft IP core designed for Xilinx FPGAs and contains the following features:

- UTOPIA Level 2 or UTOPIA Level 3
- UTOPIA master or slave interface for either level
- UTOPIA interface data path of 8 or 16 bits for level 2: and 8, 16 or 32 bits for level 3
- Interface throughput up to 622 Mbps (OC12) for 16 bit UTOPIA Level 2; and up to 2.4 Gbps (OC48) for 32 bit **UTOPIA Level 3**
- Single channel VPI/VCI service and checking in received cells
- Header error check (HEC) generation and checking
- Parity generation and checking
- IP interface frequency of 10 MHz to 100 MHz
- System operating frequency up to 100 MHz through PLB interface
- PLB interface including register and FIFO capabilities
- Statistics gathering of errored cells
- Selectively prepend headers to transmit cells
- Selectively pass entire received cells or payloads only
- Selectively transfer 48 byte ATM payloads only
- Loop back test mode

LogiCORE™ Facts			
C	Core Specifics		
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup>		
Version of Core	plb_atmc	v1.00a	
Re	esources Used		
	Min	Max	
I/O	36	84	
LUTs	1500	4000	
FFs	1300	2600	
Block RAMs	2	4	
Pro	vided with Core		
Documentation	<u>View</u> this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design Tool Requirements			
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	ModelSim SE/EE 5.6e or later		

**XST** 

Support

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at http://www.xilinx.com/legal.htm. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.

Synthesis

Provided by Xilinx, Inc.



# PLB General Purpose Input/Output (GPIO) (v1.00b)

View this data sheet

#### **Product Overview**

#### Introduction

This document describes the specifications for the General Purpose Input/Output (GPIO) core for the Processor Local Bus (PLB) bus. The GPIO is a 32-bit peripheral that attaches to the PLB.

#### **Features**

- Configurable as single or dual GPIO channel(s)
- PLB v34 bus interface with byte-enable support
- Each GPIO bit dynamically programmable as input or output
- Number of GPIO bits configurable from 1-32 bits
- Can be configured as inputs-only to reduce resource utilization
- Ports for both three-state and non-three-state connections
- Optional Interrupt request generation
- Independent reset values for each bit of all registers

LogiCORE™ Facts		
C	ore Specifics	
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup>	
Version of Core	plb_gpio	v1.00b
Resources	Used (GPIO_Widt	h = 32)
	Min	Max
Slices	100	281
LUTs	46	205
FFs	152	414
Block RAMs		
Provided with Core		
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e or later	
Synthesis	Synthesis XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# **DCR Interrupt Controller (v1.00b)**

**Product Overview** 

View this data sheet

#### Introduction

A DCR Interrupt Controller is composed of a bus-centric wrapper containing the IntC core and a DCR bus interface. The IntC core is a simple, parameterized interrupt controller that, along with the appropriate bus interface, attaches to either the OPB (On-chip Peripheral Bus) or the DCR (Device Control Register) Bus.

The DCR Interrupt Controller can be used in either embedded PowerPC systems or in MicroBlaze<sup>™</sup> soft processor systems. There are two versions of the Interrupt Controller, one with an OPB interface, called OPB IntC, and another with a DCR interface called DCR IntC.

In this document IntC and DCR IntC are used interchangeably to refer to functionality or interface signals that are common to all variations of the Interrupt Controller. When the discussion switches to a bus centric version, then the interrupt controller will be referred to as DCR IntC.

#### **Features**

- Priority between interrupt requests is determined by vector position. The least significant bit (LSB, in this case bit 0) has the highest priority.
- Modular design provides core interrupt controller functionality instantiated within a bus interface design (currently OPB and DCR buses supported)
- DCR v2.0 bus interface (IBM SA-14-2525-00 32-bit DCR Bus Architecture Specifications, v2.9)
- Supports address bus width of 10-bits and data bus width of 32-bits for DCR interface
- Number of interrupt inputs is configurable up to the width of the data bus
- Interrupt controllers can be easily cascaded to provide additional interrupt inputs
- Interrupt Enable Register for selectively disabling individual interrupt inputs
- Master Enable Register for disabling the interrupt request output
- Each input is configurable for edge or level sensitivity;
   edge sensitivity can be configured for rising or falling;
   level sensitivity can be active-high or -low
- Automatic edge synchronization when inputs are configured for edge sensitivityOutput interrupt request pin configurable for edge or level generation—edge generation configurable for rising or falling; level generation configurable for active-high or -low

LogiCORE™ Facts		
С	ore Specifics	
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> ,	
Version of Core	dcr_intc	v1.00b
Resources Used		
	Min	Max
I/O	76	107
LUTs	71	424
FFs	55	334
Block RAMs	0	0
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirem	ents	
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation	ModelSim 5.6e or later	
Synthesis	XST	
Support		
Provided by Xilinx, Inc.		

 Priority between interrupt requests is determined by vector position. The least significant bit, (LSB, in this case bit 0) has the highest priority.

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# **Utility Peripherals**

This section of the *Processor IP Reference Guide* includes the following topcis:

- Util Bus Split Operation
- Util Flip-Flop
- Util Reduced Logic (v1.00a)
- Util Vector Logic



# **Util Bus Split Operation**

View this data sheet

#### **Product Overview**

#### Introduction

The Bus Split operation is designed for use with the Platform Generator to perform simple logical operations. A Microprocessor Peripheral Definition (MPD) file associated with this module is also included. Users can utilize Xilinx Platform Studio (XPS) to incoporate this module into Microprocessor Hardware Specification (MHS).

The Bus Split takes one input bus and splits it into two buses as outputs. This Bus Split operation can serve as glue logic among peripherals. Note that this module is not associated with any system bus.

#### **Features**

· Configurable size of the input and output vectors

LogiCORE™ Facts		
C	ore Specifics	
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E	
Version of Core	bus_split	v1.00a
Re	esources Used	
	Min	Max
Slices	0	0
LUTs	0	0
FFs	0	0
Block RAMs	0	0
Pro	vided with Core	
Documentation	View this data shee	et
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Design Tool Requirements		
Xilinx Implementation ISE 6.1i or higher Tools		
Verification N/A		
Simulation ModelSim SE/EE 5.6e or higher		
Synthesis	XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# **Util Flip-Flop**

View this data sheet

#### **Product Overview**

#### Introduction

The Flip-Flop logic is designed to be used with Platform Generator to perform simple logical operations. An Microprocessor Peripheral Definition (MPD) file associated with this module is also included. Users can utilize Xilinx Platform Studio (XPS) to incorporate this module into Microprocessor Hardware Specification (MHS).

This Flip-Flop logic can serve as glue logic among peripherals. This module is not associated with any system bus.

#### **Features**

The Flip-Flop logic has the following features

- · Configurable size of the vectors
- Supports synchronous set & clear or asynchrnous reset & preset
- · Supports optional clock enable

LogiCORE™ Facts		
С	ore Specifics	
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E	
Version of Core	util_flipflop	v1.00a
Re	sources Used	
	Min	Max
Slices	1	Variable <sup>1</sup>
LUTs	0	0
FFs	1	Variable <sup>1</sup>
Block RAMs	0	0
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation ModelSim SE/PE 5.7b or later		
Synthesis XST		
Support		
Support provided by Xilinx, Inc.		

<sup>1.</sup> The number of slices and flip flops depends on the value of  $\mathsf{C}$  SIZE.

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# **Util Reduced Logic (v1.00a)**

View this data sheet

#### **Product Overview**

#### Introduction

The Reduced Logic module is designed to be used with Platform Generator to perform simple logical operations. A Microprocessor Peripheral Definition (MPD) file associated with this module is also included. Users can utilize Xilinx Platform Studio (XPS) to incorporate this module into Microprocessor Hardware Specification (MHS).

This Reduced Logic takes one input vector, performs reduced logic operation and generates a single bit result. This module can serve as glue logic among peripherals. This module is not associated to any system bus.

#### **Features**

- · Configurable size of the input vector
- Configurable reduced logic operation on an input vector

LogiCORE™ Facts			
C	ore Specifics		
Supported Device Family	QPro <sup>™</sup> -R Virtex-II <sup>™</sup> , QPro Virtex-II, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-E		
Version of Core	util_reduced_ logic	v1.00a	
Re	sources Used		
	Min	Max	
Slices	1	Variable <sup>1</sup>	
LUTs	1	Variable <sup>1</sup>	
FFs	0	0	
Block RAMs	0	0	
Provided with Core			
Documentation	View this data sheet.		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N	I/A	
Instantiation Template	N	I/A	
Reference Designs	No	one	
Design Tool Requirements			
Xilinx Implementation Tools	5.1i or later		
Verification	N/A		
Simulation	ModelSim SE/PE 5.7b or later		
Synthesis	Synthesis XST		
Support			
Support provided by Xilinx, Inc.			

The number of slices and LUTs depends on C\_SIZE.

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# **Util Vector Logic**

View this data sheet

#### **Product Overview**

#### Introduction

The Vector Logic is designed to be used with Platform Generator to perform simple logical operations. An Microprocessor Peripheral Definition (MPD) file associated with this module is also included. Users can utilize Xilinx Platform Studio (XPS) to incoporate this module into Microprocessor Hardware Specification (MHS).

This Vector Logic takes operands to generate a result with the selected operation. This Vector Logic can serve as glue logic among peripherals. This module is not associated to any system bus

#### **Features**

- · Configurable size of the vectors
- Configurable logical operation on vectors

LogiCORE™ Facts		
C	ore Specifics	
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-4 <sup>™</sup> , QPro <sup>™</sup> -R Virtex-II, QPro Virtex-II, Virtex-E, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup>	
Version of Core	util_vector_logic	v1.00a
Re	sources Used	
	Min	Max
Slices	1	Variable <sup>1</sup>
LUTs	1	Variable <sup>1</sup>
FFs	0	0
Block RAMs	0	0
Provided with Core		
Documentation	Product Specification	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	5.1i or later	
Verification	N/A	
Simulation ModelSim SE/PE 5.7b or later		
Synthesis XST		
Support		
Support provided by Xilinx, Inc.		

<sup>1.</sup> The number of slices and LUTs depends on  $C_SIZE$ , where  $C_SIZE$  is the number of LUTs.

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.





# Debug and Verification

This section of the *Processor IP Reference Guide* includes the following topics:

- Chipscope ICON
- Chipscope OPB IBA (Bus Analyzer) (v1.00a)
- Chipscope PLB IBA (Bus Analyzer) (v1.00a)
- Chipscope VIO (Virtual IO) (v1.00a)
- Chipscope Integrated Logic Analyzer (ILA) (v1.00a)
- OPB HWICAP
- Microprocessor Debug Module (MDM) (v1.00c)
- Microprocessor Debug Module (v2.00a)
- JTAG PPC Controller (v1.00b)
- JTAGPPC Controller (v2.00a)



# **Chipscope ICON**

View this data sheet

#### **Product Overview**

#### Introduction

The Chipscope ICON core provides a communication path between the FPGA Boundary Scan port and the other Chipscope Cores—OPB IBA, PLB IBA, VIO, and the ILA. The Chipscope Pro Analyzer communicates through the JTAG download cable to the Chipscope cores via the Chipscope ICON core. The Chipscope ICON core in EDK is based on Tcl script that generates a HDL wrapper to the ICON and calls the Chipscope Core Generator to generate the netlist based on user parameters.

#### **Features**

- Provides communication path to other Chipscope cores
- Supports connections to up to 16 Chipscope cores
- Supports the presence of other cores that instantiate the BSCAN primitive, such as opb\_mdm

For more information, see the *Chipscope Pro Software and Cores User Manual* in the Chipscope installation.

Lo	giCORE™ Facts	
	Core Specifics	
Supported Device Family	Spartan-II™, Spartan-IIE™, Spartan-3™, Virtex™, Virtex-II™, Virtex-II Pro™, Virtex-4™, Virtex-E	
Version	chipscope_icon	v1.00a
ı	Resources Used	
	Min	Max
Slices	N/A	N/A
LUTs	N/A	N/A
FFs	N/A	N/A
Block RAMs	N/A	N/A
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL, EDIF	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	ISE 6.2i or later	
Verification	Chipscope Pro 6.2i or later	
Simulation	N/A	
Synthesis XST, Chipscope Core Generator		
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# Chipscope OPB IBA (Bus Analyzer) (v1.00a)

View this data sheet

#### **Product Overview**

#### Introduction

The Chipscope OPB IBA core is a specialized Bus Analyzer core designed to debug embedded systems containing the IBM CoreConnect On-Chip Peripheral Bus (OPB). The Chipscope OPB IBA core in EDK is based on Tcl script that generates a HDL wrapper to the OPB IBA and calls the Chipscope Core Generator to generate the netlist based on user parameters.

#### **Features**

- Protocol Violation Monitor
- Multiple Match Units for Trigger and Data capture
- Each Match Unit can be enabled and configured independently
- The Match Units for the OPB IBA are
  - OPB Control signals
  - OPB Address Units
  - OPB Data Unit (combined)
  - OPB Read/Write Data Units
  - OPB Protocol Violation Unit
  - OPB Master Units (based on no of masters)
  - OPB Slave Units (based on no of slaves)
- Generic Trigger/Data Unit with selectable width

For more information, see the *Chipscope Pro Software and Cores User Manual* in the Chipscope installation.

LogiCORE™ Facts		
	Core Specifics	
Supported Device Family	Virtex-II Pro™, Virtex-II™, Virtex™, Virtex-E, Spartan-3™, Spartan-IIE™, Spartan-II™	
Version	chipscope_opb_iba	v1.00a
	Resources Used	
	Min	Max
Slices	N/A	N/A
LUTs	N/A	N/A
FFs	N/A	N/A
Block RAMs	N/A	N/A
Provided with Core		
Documentation	View this data sheet	
Design File Formats	VHDL, EDIF	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	None	
Design Tool Requirements		
Xilinx Implementation Tools	ISE 6.2i or later	
Verification	Chipscope Pro 6.2i or later	
Simulation	Not Supported in S	imulation
Synthesis	XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# Chipscope PLB IBA (Bus Analyzer) (v1.00a)

View this data sheet

#### **Product Overview**

#### Introduction

The Chipscope<sup>™</sup> PLB IBA core is a specialized Bus Analyzer core designed to debug embedded systems that contain the IBM CoreConnect<sup>™</sup> Processor Local Bus (PLB). The Chipscope PLB IBA core in EDK is based on Tcl script that generates a HDL wrapper to the PLB IBA and calls the Chipscope Core Generator to generate the netlist based on user parameters.

#### **Features**

- Multiple Match Units for Trigger and Data capture
- Each Match Unit can be enabled and configured independently
- Match Units for the OPB IBA:
  - OPB Control signals
  - OPB Address Units
  - OPB Read Data Unit
  - OPB Write Data Units
  - OPB Master Units (based on no. of masters)
  - OPB Slave Units (based on no. of slaves)
- Generic Trigger/Data Unit with selectable width

For more information, see the *Chipscope Pro Software and Cores User Manual* in the Chipscope installation

LogiCORE™ Facts			
	Core Specifics		
Supported Device Family	Virtex-II Pro, Virtex-4™		
Version	chipscope_plb_iba	v1.00a	
	Resources Used		
	Min	Max	
Slices	219	411	
LUTs	87	112	
FFs	215	320	
Block RAMs	1	187	
Provided with Core			
Documentation	View this data sheet		
Design File Formats	VHDL, EDIF		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design Tool Requirements			
Xilinx Implementation Tools	ISE 6.2i or later		
Verification	Chipscope Pro 6.2i or later		
Simulation	Not Supported in Simulation		
Synthesis	XST		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# Chipscope VIO (Virtual IO) (v1.00a)

View this data sheet

#### **Product Overview**

#### Introduction

Chipscope VIO (Virtual IO) core is a customizable core that can both monitor and drive internal FPGA signals in real time. The Chipscope VIO core in EDK is based on Tcl script that generates a HDL wrapper for the VIO and calls the Chipscope Core Generator to generate the netlist based on user parameters.

#### **Features**

- Asynchronous inputs unit
- Synchronous inputs unit
- Asynchronous outputs unit
- · Synchronous outputs unit
- Each unit can be enabled and the widths configured separately

For more information, see the *Chipscope Pro Software and Cores User Manual* in the Chipscope installation

LogiCORE™ Facts			
Core Specifics			
Supported Device Family	Spartan-II™, Spartan-IIE™, Spartan-3™, Virtex™, Virtex-II™, Virtex-II Pro™, Virtex-4™, Virtex-E		
Version	chipscope_vio	v1.00a	
Re	esources Used		
	Min	Max	
Slices	17	3923	
LUTs	12	2296	
FFs	18	7339	
Block RAMs	0	0	
Pro	vided with Core		
Documentation	View this data sheet		
Design File Formats	VHDL, EDIF		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design Tool Requirements			
Xilinx Implementation Tools	ISE 6.2i or later		
Verification	Chipscope Pro 6.2i or later		
Simulation	N/A		
Synthesis	XST		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# Chipscope Integrated Logic Analyzer (ILA) (v1.00a)

View this data sheet

#### **Product Specification**

#### Introduction

The Chipscope™ Integrated Logic Analyzer (ILA) core is a customizable core that can be used to monitor internal FPGA signals in real time. The Chipscope ILA core in EDK is useful to monitor individual signals in an MHS-based embedded design. This core is based on Tcl script that generates a HDL wrapper for the ILA core and calls the Chipscope core generator to generate the netlist based on user parameters.

#### **Features**

- Multiple configurable ILA trigger units
  - Configurable Trigger input widths
  - Configurable Chipscope match types for use with different input signals types
- Separate Data and Trigger inputs
- Trigger out signal for cross-probing between Chipscope analyzer and processor debug tools, such as XMD/GDB

For more information, see the *Chipscope Pro Software and Cores User Manual* in the Chipscope Installation.

LogiCORE™ Facts			
С	ore Specifics		
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex <sup>™</sup> , Virtex-E, Spartan-3 <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-II <sup>™</sup>		
Version of Core	chipscope_ila	v1.00a	
Re	esources Used		
	Min.	Max	
Slices	N/A	N/A	
LUTs	N/A	N/A	
FFs	N/A	N/A	
Block RAMs	N/A	N/A	
Provided with Core			
Documentation	View this data sheet		
Design File Formats	VHDL/EDIF		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design Tool Requirements			
Xilinx Implementation Tools	ISE 6.3i or later		
Verification	Chipscope Pro 6.3i or later		
Simulation	N/A		
Synthesis	XST		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.





## **OPB HWICAP**

**Product Overview** 

View this data sheet

#### Introduction

The HWICAP core for the On-Chip Peripheral Bus (OPB) enables an embedded microprocessor to read and write the FPGA configuration memory through the Internal Configuration Access Port (ICAP) at run time.

The HWICAP uses 1 Block RAM to store a single frame of configuration data at a time. To modify a circuit resource, the microprocessor identifies the frames corresponding to the resources and instructs the HWICAP to read the frames into the Block RAM. On a per frame basis, the microprocessor modifies the appropriate bits in the Block RAM, and then instructs the HWICAP to download the frame back to configuration memory through the ICAP port.

#### **Features**

- OPB v2.1 bus interface
- Enables Read/Write of CLB LUTs
- Enables Read/Write of CLB Flip-Flop properties
- Enables downloading partial bitstream
- ICAP interface operates at clock rate of OPB

LogiCORE™ Facts		
Core Specifics		
Supported Device Family	Virtex-II <sup>™</sup> , Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup>	
Version	opb_hwicap	v1.00a
Re	esources Used	
	Min	Max
Slices	120	122
LUTs	213	217
FFs	152	154
Block RAMs	1	1
Pro	vided with Core	
Documentation	View this data sheet	
Design File Formats	Verilog	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Design Tool Requirements		
Xilinx Implementation Tools	ISE 6.2i or higher	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e	or higher
Synthesis	XST	
Support		
Provided by Xilinx, Inc.		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# Microprocessor Debug Module (MDM) (v1.00c)

View this data sheet

#### **Product Overview**

#### Introduction

This document provides the design specification for the Microprocessor Debug Module (MDM) core, which enables JTAG based debugging of one or more MicroBlaze  $^{\text{TM}}$  processors.

#### **Features**

- · Support for JTAG based software debug tools
- Support for debugging a configurable number of MicroBlaze processors
- Support for synchronized control of multiple processors- stop and single step
- Support for a JTAG based UART with an OPB interface
- Based on BSCAN logic in Xilinx FPGAs

LogiCORE™ Facts			
С	Core Specifics		
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex <sup>™</sup> , Virtex-II <sup>™</sup> , Virtex-E, Spartan-II <sup>™</sup> , Spartan-IIE <sup>™</sup> , Spartan-3 <sup>™</sup>		
Version of Core	opb_mdm v1.00c		
Re	esources Used		
	Min	Max	
Slices	67	163	
LUTs	45	283	
FFs	79	167	
Block RAMs	0	0	
Provided with Core			
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	N/A		
Design Tool Requirements			
Xilinx Implementation Tools	ISE 6.1i or higher		
Verification	N/A		
Simulation	ModelSim SE/EE 5.6e or higher		
Synthesis	hesis XST		
Support			
Support provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# Microprocessor Debug Module (v2.00a)

View this data sheet

#### **Product Overview**

#### Introduction

The Microprocessor Debug Module (MDM) core enables JTAG-based debugging of one or more MicroBlaze  $^{\text{TM}}$  processors.

#### **Features**

- Support for JTAG-based software debug tools
- Support for debugging a configurable number of MicroBlaze/PowerPC 405 processors
- Support for synchronized control of multiple processors
   stop and single step
- Support for a JTAG based UART with an OPB interface
- Based on BSCAN logic in Xilinx FPGAs
- Supports connection to Chipscope ICON core through unused BSCAN signals
- Support of one master FSL port for fast downloa

LogiCORE™ Facts			
C	Core Specifics		
Supported Device Family	QPro™-R Virtex-II™, QPro Virtex-II, Spartan-II™, Spartan-IIE™, Spartan-3™, Virtex™, Virtex-II™, Virtex-II Pro™, Virtex-E		
Version	opb_mdm	v2.00a	
Re	sources Used		
	Min	Max	
Slices	67	188	
LUTs	45	292	
FFs	79	204	
Block RAMs	0	0	
Prov	vided with Core		
Documentation	View this data sheet		
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	N/A		
Design Tool Requirements			
Xilinx Implementation Tools	ISE 6.2i or higher		
Verification	N/A		
Simulation	ModelSim SE/EE 5.7b or higher		
Synthesis	XST		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# JTAGPPC Controller (v2.00a)

View this data sheet

### Introduction

The JTAGPPC Controller is a wrapper for the JTAGPPC primitive in the Virtex-II Pro FPGA. The JTAGPPC primitive allows the PowerPC<sup>™</sup> in a Virtex-II Pro device to be connected to the JTAG chain of the FPGA. For more information about the JTAGPPC primitive, see the Virtex-II Pro PPC405 JTAG Debug Port section of the *PowerPC 405 Processor Block Reference Guide*.

#### **Features**

- Wrapper for the JTAGPPC primitive
- Enables the debug port of the PowerPC to be connected to the FPGA JTAG chain
- Can connect up to two PowerPC primitives
- · Simplified interface to PowerPC processor JTAG port
- Parameter controlled stitching of multi-PowerPC devices

#### **Product Specification**

LogiCORE™ Facts			
С	ore Specifics		
Supported Device Family	Virtex-II Pro <sup>™</sup> , Virtex-4 <sup>™</sup>		
Version of Core	jtagppc_cntlr	v2.00a	
Resources Used			
	Min	Max	
Slices	N/A	N/A	
LUTs	0	1	
FFs	0	0	
Block RAMs	0	0	
Provided with Core			
Documentation	View this data sl	neet	
Design File Formats	VHDL		
Constraints File	N/A		
Verification	N/A		
Instantiation Template	N/A		
Reference Designs	None		
Design Tool Requirements			
Xilinx Implementation Tools	ISE 6.3i or higher		
Verification	N/A		
Simulation	ModelSim SE/PE 5.7b or later		
Synthesis	Synthesis XST		
Support			
Provided by Xilinx, Inc.			

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.





# JTAG PPC Controller (v2.00a)

View this data sheet

#### Introduction

The JTAGPPC Controller is a wrapper for the JTAGPPC primitive in the Virtex-II Pro<sup>™</sup> FPGA. The JTAGPPC primitive allows the PowerPC in a Virtex-II Pro to be connected to the JTAG chain of the FPGA.

#### **Features**

- Wrapper for the JTAGPPC primitive
- Enables the PowerPC's debug port to be connected to the FPGA JTAG chain
- Can connect upto four PowerPCs

#### **Product Overview**

Core Facts		
C	ore Specifics	
Supported Device Family	Virtex-II Pro, Virtex-4 <sup>™</sup>	
Version of Core	jtagppc	v2.00a
Re	esources Used	
	Min	Max
Slices	N/A	N/A
LUTs	0	1
FFs	0	0
Block RAMs	0	0
Pro	vided with Core	
Documentation	<u>View</u> this data sheet	
Design File Formats	VHDL	
Constraints File	N/A	
Verification	N/A	
Instantiation Template	N/A	
Reference Designs	N/A	
Design	Tool Requirements	
Xilinx Implementation Tools	ISE 6.1i or higher	
Verification	N/A	
Simulation	ModelSim SE/EE 5.6e or higher	
Synthesis	XST	
	Support	
Provided by Xilinx, Inc		

© 2004 Xilinx, Inc. All rights reserved. All Xilinx trademarks, registered trademarks, patents, and further disclaimers are as listed at <a href="http://www.xilinx.com/legal.htm">http://www.xilinx.com/legal.htm</a>. All other trademarks and registered trademarks are the property of their respective owners. All specifications are subject to change without notice.



# Part II: Software

Part II of the *Processor IP Reference Guide* includes the following chapters:

Chapter 10, "Device Driver Programmer Guide"

Chapter 11, "Tornado 2.x BSP User Guide"

Chapter 12, "Device Driver Summary"

Chapter 13, "Automatic Generation of Tornado 2.x (VxWorks 5.x) Board Support Packages"



# Device Driver Programmer Guide

#### **Overview**

This document describes the Xilinx device driver environment, and includes information on the following:

- Design and implementation details for using the drivers
- Device driver architecture
- Application Programmer Interface (API) conventions
- Scheme for configuring the drivers to work with reconfigurable hardware devices
- Infrastructure that is common to all device drivers.

### Goals and Objectives

The Xilinx device drivers are designed to meet the following goals and objectives:

• Provide maximum portability

The device drivers are provided as ANSI C source code. ANSI C was chosen to maximize portability across processors and development tools. Source code is provided both to aid customers in debugging their applications as well as allow customers to modify or optimize the device driver if necessary.

A layered device driver architecture additionally separates device communication from processor and Real Time Operating System (RTOS) dependencies, thus providing portability of core device driver functionality across processors and operating systems.

Support FPGA configurability

Since FPGA-based devices can be parameterized to provide varying functionality, the device drivers must support this varying functionality. The configurability of device drivers should be supported at compile-time and at run-time. Run-time configurability provides the flexibility needed for future dynamic system reconfiguration.

In addition, a device driver supports multiple instances of the device without code duplication for each instance, while at the same time managing unique characteristics on a per instance basis.

Support simple and complex use cases

Device drivers are needed for simple tasks such as board bring-up and testing, as well as complex embedded system applications. A layered device driver architecture provides both simple device drivers with minimal memory footprints and more robust, full-featured device drivers with larger memory footprints.

Ease of use and maintenance

Xilinx makes use of coding standards and provides well-documented source code in order to give developers (i.e., customers and internal development) a consistent view of source code that is easy to understand and maintain. In addition, the API for all device drivers is consistent to provide customers a similar look and feel between drivers.

### **Device Driver Architecture**

The architecture of the device drivers is designed as a layered architecture as shown in the following figure. The layered architecture accommodates the many use cases of device drivers while at the same time providing portability across operating systems, toolsets, and processors. The layered architecture provides seamless integration with an RTOS (Layer 2), high-level device drivers that are full-featured and portable across operating systems and processors (Layer 1), and low-level drivers for simple use cases (Layer 0). The following paragraphs describe each of the layers. The user can choose to use any and all layers.

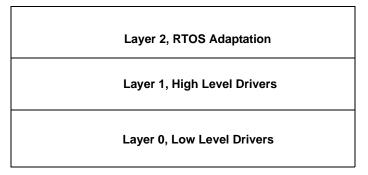


Figure 10-1: Layered Architecture

## Layer 2, RTOS Adaptation

This layer consists of adapters for device drivers. An adapter converts a Layer 1 device driver interface to an interface that matches the requirements of the device driver scheme for an RTOS. Unique adapters may be necessary for each RTOS. Adapters typically have the following characteristics.

- Communicates directly to the RTOS and the Layer 1, high-level driver.
- References functions and identifiers specific to the RTOS. This layer is therefore not
  portable across operating systems.
- Can use memory management
- Can use RTOS services such as threading, inter-task communication, etc.
- Can be simple or complex depending on the RTOS interface and requirements for the device driver

## Layer 1, High Level Drivers

This layer consists of high level device drivers . They are implemented as macros and functions and are designed to allow a developer to utilize all features of a device. These high-level drivers are independent of operating system and processor, making them highly portable. They typically have the following characteristics.

- Consistent and high-level (abstract) API that gives the user an "out-of-the-box" solution
- No RTOS or processor dependencies, making them highly portable



- Run-time error checking such as assertion of input arguments. Also provides the ability to compile away asserts.
- Comprehensive support of device features
- Abstract API that isolates the API from hardware device changes
- Supports device configuration parameters to handle FPGA-based parameterization of hardware devices.
- Supports multiple instances of a device while managing unique characteristics on a per instance basis.
- Polled and interrupt driven I/O
- Non-blocking function calls to aid complex applications
- May have a large memory footprint
- Typically provides buffer interfaces for data transfers as opposed to byte interfaces. This makes the API easier to use for complex applications.
- Does not communicate directly to Layer 2 adapters or application software. Utilizes asynchronous callbacks for upward communication.

## Layer 0, Low Level Drivers

This layer consists of low level device drivers. They are implemented as macros and functions and are designed to allow a developer to create a small system, typically for internal memory of an FPGA. They typically have the following characteristics.

- Simple, low-level API
- Small memory footprint
- Little to no error checking is performed
- Supports primary device features only
- Minimal abstraction such that the API typically matches the device registers. The API is therefore less isolated from hardware device changes.
- No support of device configuration parameters
- Supports multiple instances of a device with base address input to the API
- None or minimal state is maintained
- Polled I/O only
- Blocking functions for simple use cases
- Typically provides byte interfaces but can provide buffer interfaces for packet-based devices.

## **Object-Oriented Device Drivers**

In addition to the layered architecture, it is important that the user understand the underlying design of the device drivers. The device drivers are designed using an object-oriented methodology. The methodology is based upon components and is described in the following paragraphs. This approach pertains particularly to the Layer 1, high-level device drivers.

### Component Definition

A component is a logical partition of the software which provides a functionality similar to one or more classes in C++. Each component provides a set of functions that operate on the internal data of the component. In general, components are not allowed access to the data of other components. A device driver is typically designed as a single component. A component may consist of one or more files.

### Component Implementation

The component contains data variables which define the set of values that instances of that type can hold and a set of functions that operate on those data variables. Components must utilize the functions of other components in order to access the data of other components, rather than accessing component data directly. Components provide data abstraction and encapsulation by gathering the state of an object and the functions that operate on that object into a single unit and by denying direct access to its data members.

#### Component Data Variables

The primary mechanism for implementing a component in C is the structure. The data variables for a component are grouped in a single structure such that instances of the component each have their own data. The structure and the prototypes for all component functions are declared in the header file which is shared between the implementing component and other components which utilize it. A pointer to this structure, referred to as the instance pointer, is passed into each function of the component which operates on the instance data.

#### Component Interface

Each component has a set of functions which are collectively referred to as the component interface. Every function of a component which operates on the instance data utilizes a pointer, named InstancePtr, to an instance of a component as the first argument. This argument emulates the *this* pointer in C++ and allows the component function to manipulate the instance data.

#### Component Instance

An instance of a component is created when a variable is created using the component data type. An instance of a component maps to each physical hardware device. Each instance may have unique characteristics such as it's memory mapped address and specific device capabilities.

### Component Example

The following code example illustrates a device driver component.

```
/* the device component data type */
typedef struct
{
     Xuint32 BaseAddress; /* component data variables */
     Xuint32 IsReady;
     Xuint32 IsStarted;
} XDevice;

/* create an instance of a device */
XDevice DeviceInstance;

/* device component interfaces */
XStatus XDevice_Initialize(XDevice *InstancePtr, Xuint16 DeviceId);
XStatus XDevice_Start(XDevice *InstancePtr);
```

## **API and Naming Conventions**

### **External Identifiers**

External identifiers are defined as those items that are accessible to all other components in the system (global) and include functions, constants, typedefs, and variables.

An 'X' is prepended to each Xilinx external so it does not pollute the global name space, thus reducing the risk of a name conflict with application code. The names of externals are based upon the component in which they exist. The component name is prepended to each external name. An underscore character always separates the component name from the variable or function name.

#### External Name Pattern:

```
X<component name>_VariableName;
X<component name>_FunctionName(ArgumentType Argument)
X<component name> TypeName;
```

Constants are typically defined as all uppercase and prefixed with an abbreviation of the component name. For example, a component named XUartLite (for the UART Lite device driver) would have constants that begin with XUL\_, and a component named XEmac (for the Ethernet 10/100 device driver) would have constants that begin with XEM\_. The abbreviation utilizes the first three uppercase letters of the component name, or the first three letters if there are only two uppercase letters in the component name.

## File Naming Conventions

The file naming convention utilizes long file names and is not limited to 8 characters as imposed by the older versions of the DOS operating system.

#### Component Based Source File Names

Source file names are based upon the name of the component implemented within the source files such that the contents of the source file are obvious from the file name. All file names must begin with the lowercase letter "x" to differentiate Xilinx source files. File extensions .h and .c are utilized to distinguish between header source files and implementation source files.

### Implementation Source Files (\*.c)

The C source files contain the implementation of a component. A component is typically contained in multiple source files to allow parts of the component to be user selectable.

#### Source File Naming Pattern:

## Header Source Files (\*.h)

The header files contain the interfaces for a component. There will always be external interfaces which is what an application that utilizes the component invokes.

- The external interfaces for the high level drivers (Layer 1) are contained in a header file with the file name format *x*<*component name*>.*h*.
- The external interfaces for the low level drivers (Layer 0) are contained in a header file with the file name format *x*<*component name*>\_*l.h.*

In the case of multiple C source files which implement the class, there may also be a header file which contains internal interfaces for the class. The internal interfaces allow the functions within each source file to access functions in the another source file.

The internal interfaces are contained in a header file with the file name format

x<component name>\_i.h.

#### **Device Driver Layers**

Layer 1 and Layer 0 device drivers (i.e., high-level and low-level drivers) are typically bundled together in a directory. The Layer 0 device driver files are named *x*<*component name*>\_*l.h* and *x*<*component name*>\_*l.c.* The "\_!" indicates low-level driver. Layer 2 RTOS adapter files include the word "adapter" in the file name, such as *x*<*component name*>\_*adapter.h* and *x*<*component name*>\_*adapter.c.* These are typically stored in a different directory name (e.g., one specific to the RTOS) than the device driver files.

#### **Example File Names**

The following source file names illustrates an example which is complex enough to utilize multiple C source files.

```
xuartns550.c
                     Main implementation file
xuartns550 intr.c
                     Secondary implementation file for interrupt
handling
xuartns550.h
                     High level external interfaces header file
xuartns550 i.h
                     Internal identifiers header file
xuartns550 l.h
                     Low level external interfaces header file
xuartns550 l.c
                     Low level implementation file
xuartns550_g.c
                     Generated file controlling parameterized
instances
and,
xuartns550 sio adapter.c VxWorks Serial I/O (SIO) adapter
```

## High Level Device Driver API

High level device drivers are designed to have an API which includes a standard API together with functions that may be unique to that device. The standard API provides a consistent interface for Xilinx drivers such that the effort to use multiple device drivers is minimized. An example API follows.

#### Standard Device Driver API

#### Initialize

This function initializes an instance of a device driver. Initialization must be performed before the instance is used. Initialization includes mapping a device to a memory-mapped address and initialization of data structures. It maps the instance of the device driver to a physical hardware device. The user is responsible for allocating an instance variable using the driver's data type, and passing a pointer to this variable to this and all other API functions.

#### Reset

This function resets the device driver and device with which it is associated. This function is provided to allow recovery from exception conditions. This function resets the device and device driver to a state equivalent to after the Initialize() function has been called.

#### SelfTest

This function performs a self-test on the device driver and device with which it is associated. The self-test verifies that the device and device driver are functional.

### Optional Functions

Each of the following functions may be provided by device drivers.

#### Start

This function is provided to start the device driver. Starting a device driver typically enables the device and enables interrupts. This function, when provided, must be called prior to other data or event processing functions.

#### Stop

This function is provided to stop the device driver. Stopping a device driver typically disables the device and disables interrupts.

#### GetStats

This function gets the statistics for the device and/or device driver.

#### ClearStats

This function clears the statistics for the device and/or device driver.

#### InterruptHandler

This function is provided for interrupt processing when the device must handle interrupts. It does not save or restore context. The user is expected to connect this interrupt handler to their system interrupt controller. Most drivers will also provide hooks, or callbacks, for the user to be notified of asynchronous events during interrupt processing (e.g., received data or device errors).

# **Configuration Parameters**

Standard device driver API functions (of Layer 1, high-level drivers) such as Initialize() and Start() require basic information about the device such as where it exists in the system memory map or how many instances of the device there are. In addition, the hardware features of the device may change because of the ability to reconfigure the hardware within the FPGA. Other parts of the system such as the operating system or application may need to know which interrupt vector the device is attached to. For each device driver, this type of information is distributed across two files: *xparameters.h* and *x*<*component name*>\_*g.c.* 

Typically, these files are automatically generated by a system generation tool based on what the user has included in their system. However, these files can be hand coded to support internal development and integration activities. Note that the low-level drivers of Layer 0 do not require or make use of the configuration information defined in these two files. Other than the memory-mapped location of the device, the low-level drivers are typically fixed in the hardware features they support.

#### xparameters.h

This source file centralizes basic configuration constants for all drivers within the system. Browsing this file gives the user an overall view of the system architecture. The device drivers and Board Support Package (BSP) utilize the information contained here to configure the system at runtime. The amount of configuration information varies by device, but at a minimum the following items should be defined for each device:

- Number of device instances
- Device ID for each instance

A Device ID uniquely identifies each hardware device which maps to a device driver. A Device ID is used during initialization to perform the mapping of a device driver to a hardware device. Device IDs are typically assigned either by the user or by a system generation tool. It is currently defined as a 16-bit unsigned integer.

- Device base address for each instance
- Device interrupt assignment for each instance if interrupts can be generated.

### File Format and Naming Conventions

Every device must have the following constant defined indicating how many instances of that device are present in the system (note that <component name > does not include the preceding "X"):

```
XPAR_X<component name>_NUM_INSTANCES
```

Each device instance will then have multiple, unique constants defined. The names of the constants typically match the hardware configuration parameters, but can also include other constants. For example, each device instance has a unique device identifier (DEVICE\_ID), the base address of the device's registers (BASEADDR), and the end address of the device's registers (HIGHADDR).

```
XPAR_<component name>_<component instance>_DEVICE_ID
XPAR_<component name>_<component instance>_BASEADDR
XPAR_<component name>_<component instance>_HIGHADDR
```

<component instance> is typically a number between 0 and (XPAR\_X<component
name>\_NUM\_INSTANCES - 1). Note that the system generation tools may create these
constants with a different convention than described here. Other device specific constants
are defined as needed:

```
XPAR_<component name>_<component instance>_<item description>
```

When the device specific constant applies to all instances of the device:

```
XPAR_<component name>_<item description>
```

For devices that can generate interrupts, a separate section within *xparameters.h* is used to store interrupt vector information. While the device driver implementation files do not utilize this information, their RTOS adapters, BSP files, or user application code will require them to be defined in order to connect, enable, and disable interrupts from that device. The naming convention of these constants varies whether an interrupt controller is part of the system or the device hooks directly into the processor.

For the case where an interrupt controller is considered external and part of the system, the naming convention is as follows:

```
XPAR_INTC_<instance>_<component name>_<component instance>_VEC_ID
```

Where INTC is the name of the interrupt controller component, <instance> is the component instance of the INTC, <component name> and <component instance> is the name and instance number of the component connected to the controller. Of course XPAR\_INTC must have the other required constants DEVICE\_ID, BASEADDR, etc. This convention supports single and cascaded interrupt controller architectures.

For the case where an interrupt controller is considered internal to a processor, the naming convention changes:

```
XPAR_component name>_component instance>_VEC_ID
```

Where proc name is the name of the processor.

### x<component name>\_g.c

The header file *x*<*component name*>.*h* defines the type of a configuration structure. The type will contain all of the configuration information necessary for an instance of the device. The format of the data type is as follows:

```
typedef struct
{
    Xuint16 DeviceID;
    Xuint32 BaseAddress;

    /* Other device dependent data attributes */
} X<component name>_Config;
```

The implementation file *x*<*component name*>\_*g.c* defines an array of structures of X<*component name*>\_*Config type*. Each element of the array represents an instance of the device, and contains most of the per-instance XPAR constants from *xparameters.h*.

### Example

To help illustrate the relationships between these configuration files, an example is presented that contains a single interrupt controller whose component name is INTC and a single UART whose component name is (UART). Only xintc.h and xintc\_g.c are illustrated, but xuart.h and xuart\_g.c would be very similar.

#### xparameters.h

```
/* Constants for INTC */
   XPAR_INTC_NUM_INSTANCES
                                1
   XPAR INTC 0 DEVICE ID
                                21
   XPAR_INTC_0 BASEADDR
                                0xA0000100
   /* Interrupt vector assignments for this instance */
   XPAR_INTC_0_UART_0_VEC_ID
   /* Constants for UART */
   XPAR_UART_NUM_INSTANCES
   XPAR UART 0 DEVICE ID
                                0xB0001000
   XPAR_UART_0_BASEADDR
xintc.h
   typedef struct
      Xuint16 DeviceID;
      Xuint32 BaseAddress;
   } XIntc_Config;
xintc_g.c
   static XintcConfig[XPAR INTC NUM INSTANCES] =
   {
        XPAR INTC 0 DEVICE ID,
        XPAR_INTC_0_BASEADDR,
```

# **Common Driver Infrastructure**

### Source Code Documentation

The comments in the device driver source code contain *doxygen* tags for *javadoc*-style documentation. *Doxygen* is a *javadoc*-like tool that works on C language source code. These tags typically start with "@" and provide a means to automatically generate HTML-based documentation for the device drivers. The HTML documentation contains a detailed description of the API for each device driver.

### **Driver Versions**

Some device drivers may have multiple versions. Device drivers are usually versioned when the API changes, either due to a significant hardware change or simply restructuring of the device driver code. The version of a device driver is only indicated within the

comment block of a device driver file. A modification history exists at the top of each file and contains the version of the driver. An example of a device driver version is "1.00b", where 1 is the major revision, 00 is the minor revision, and b is a subminor revision. The hardware device and its device driver must match major and minor revisions in order to be compatible.

Currently, the user is not allowed to link two versions of the same device driver into their application. The versions of a device driver use the same function and file names, thereby preventing them from being linked into the same link image. As multiple versions of drivers are supported, the version name will be included in the driver file names, as in x-component>v1 $_00$ a.c.

### **Primitive Data Types**

The primitive data types provided by C are minimized by the device drivers because they are not guaranteed to be the same size across processor architectures. Data types which are size specific are utilized to provide portability and are contained in the header file *xbasic\_types.h*.

### Device I/O

The method by which I/O devices are accessed varies between processor architectures. In order for the device drivers to be portable, this difference is isolated such that the driver for a device will work for many microprocessor architectures with minimal changes. A device I/O component, XIo, in *xio.c* and *xio.h* source files, contains functions and/or macros which provide access to the device I/O and are utilized for portability.

### **Error Handling**

Errors that occur within device drivers are propagated to the application. Errors can be divided into two classes, synchronous and asynchronous. Synchronous errors are those that are returned from function calls (either as return status or as a parameter), so propagation of the error occurs when the function returns. Asynchronous errors are those that occur during an asynchronous event, such as an interrupt and are handled through callback functions.

#### Return Status

In order to indicate an error condition, functions which include error processing return a status which indicates success or an error condition. Any other return values for such functions are returned as parameters. Error codes are standardized in a 32-bit word and the definitions are contained in the file *xstatus.h*.

#### Asserts

Asserts are utilized in the device drivers to allow better debugging capabilities. Asserts are used to test each input argument into a function. Asserts are also used to ensure that the component instance has been initialized.

Asserts may be turned off by defining the symbol NDEBUG before the inclusion of the header file *xbasic\_types.h*.

The assert macro is defined in *xbasic\_types.h* and calls the function XAssert when an assert condition fails. This function is designed to allow a debugger to set breakpoints to check for assert conditions when the assert macro is not connected to any form of I/O.

The XAssert function calls a user defined function and then enters an endless loop. A user may change the default behavior of asserts such that an assert condition which fails does return to the user by changing the initial value of the variable XWaitInAssert to XFALSE in *xbasic\_types.c.* A user defined function may be defined by initializing the variable XAssertCallbackRoutine to the function in *xbasic\_types.c.* 

### Communication with the Application

Communication from an application to a device driver is implemented utilizing standard function calls. Asynchronous communication from a device driver to an application is accomplished with callbacks using C function pointers. It should be noted that callback functions are called from an interrupt context in many drivers. The application function called by the asynchronous callback must minimize processing to communicate to the application thread of control.

### Reentrancy and Thread Safety

The device drivers are designed to be reentrant, but may not be thread-safe due to shared resources.

### Interrupt Management

The device drivers use device-specific interrupt management rather than processor-specific interrupt management.

# Multi-threading & Dynamic Memory Management

The device drivers are designed without the use of mult-threading and dynamic memory management. This is expected to be accomplished by the application or by an RTOS adapter.

### Cache & MMU Management

The device drivers are designed without the use of cache and MMU management. This is expected to be accomplished by the application or by an RTOS adapter.

# **Revision History**

The following table shows the revision history for this document.

	Date	Version	Revision		
	06/28/02	1.0	Xilinx initial release.		
7/02/02 1.1 Made IP Spec # conditional text and removed ML reference.		Made IP Spec # conditional text and removed ML reference.			



# Tornado 2.x BSP User Guide

### **General Overview**

The addition of the Chip Support Package (CSP) into a Tornado 2.x BSP is a unique challenge because of the nature of how easily hardware is added and removed from the FPGA using the EDK and how difficult it is to accommodate this feature into a Tornado 2.x BSP. The CSP is a part of the BSP in that it provides the software drivers for hardware IP utilized by the BSP and application code. The CSP is designed to be primarily operating system independent. So in many respects it is segregated and independently configured from the BSP.

The purpose of this document is to provide an introduction to the Tornado 2.x BSP as implemented in BSPs generated by the EDK and on handcoded BSPs implemented on selected Virtex-II Pro reference boards. The first part of this document goes over general design principles and APIs utilized. The second part goes over specific BSPs details for the ML300 and Insight MDFG456 reference boards. This document will not attempt to rehash in detail information already available from Wind River regarding BSP design and configuration, but will point out differences, restrictions, and deviations imposed by BSPs created by the EDK.

The reader is expected to have a working knowledge in these areas:

- Tornado 2.x BSPs.
- "C" programming language

Experienced BSP designers should have little trouble getting EDK generated BSPs integrated into their target system. Novices may have difficulties because even though the EDK can generate an operational BSP for a given set of IP hardware, there will always be some extra configuration and tweaking required to get the best performance out of the target system. It is highly recommended that the user have on hand the *Tornado BSP Developer's Kit for VxWorks User's Guide* and the *VxWorks Programmer's Guide* available from Wind River. Wind River also offers classes on BSP design at additional cost.

# Requirements

The user should have either Tornado 2.0.2 or Tornado 2.2 development kit installed on their host computer. It is recommended the user go with Tornado 2.2 due to the many bug fixes and easier installation. It is not required for the host computer to have both the Xilinx EDK and Tornado installed because EDK generated BSPs are compiled and configured outside the EDK environment.

#### Tornado 2.0.2

Patches required that can be found at Wind River's Windsurf technical support web site:

- SPR67953 Cumulative patch
- DosFs 2.0 DOS file system support



Note that some of these patches may no longer be available. Contact your Wind River FAE for more information.

#### Tornado 2.2

This is an updated Tornado release with many bug fixes to the development environment. No patches are required.

### SingleStep (XE)

The XE stands for Xilinx Edition. This version of the SingleStep debugger is Virtex-II Pro aware. This debugger works in concert with the VisionProbe debugger pod.

### Files and Directories

While the root directory of the BSP can be placed anywhere, it is typically located at \$WIND\_BASE/target/config/<bspname>. The Tornado Project component of the BSP is located at \$WIND\_BASE/target/proj/<bspname>\_vx.

The project component of the BSP is required if it will be configured/compiled with the Tornado Project Facility IDE. Normally, the Project Facility is utilized during application development and trivial BSP tweaks. The non-project component (also referred to as the command-line interface) is utilized during BSP development. Note that the methods of configuring and building the BSP differ greatly between the Project and command-line methods. See Tornado documentation for more information.

The following directories make up BSPs:

### config/<bspname>

The traditional directory for Tornado 2.x BSPs. Contains BSP library source code and the command-line makefile.

#### config/<bspname>/net

An optional directory that contains Tornado Project "configlette" network source code that overrides configlettes located at \$WIND\_BASE/target/config/comps/src/net.

#### config/<bspname>//config/<bspname>\_drv\_csp

The base directory for the CSP. cprocname is a name provided by the user in the EDK to name the processor instance. This directory is unique to EDK BSPs.

#### config/<bspname>//config/<bspname>\_drv\_csp/xsrc

Contains source code for the CSP. This directory is unique to EDK BSPs.

### proj/<bspname>\_vx

The base directory for a Tornado project. All files here are maintained by the Project Facility.



### proj/<bspname>\_vx/<build spec>

A build specification maintained by the Project Facility. There is typically a "default" build spec here unless removed by the developer. Other build specifications can be added by the developer.

### **CSP Driver Organization**

This section briefly discusses how the CSP is compiled and linked and eventually used by Tornado makefiles to include into the VxWorks image.

CSP drivers are implemented in "C" and can be distributed among several source files unlike traditional VxWorks drivers which consist of single "C" header and implementation files.

There are up to three components for CSP drivers:

- Driver source inclusion.
- OS independent implementation
- OS dependent implementation (optional).

"Driver source inclusion" refers to how CSP drivers are compiled. For every CSP driver, there is a file named cname>\_drv\_<dev>\_<version>.c. This file #include's each CSP driver source file(s) (\*.c) for the given device.

This process is analogous to how VxWorks' sysLib.c #include's source for Wind River supplied drivers. The reason why CSP files are not simply #include'd in sysLib.c like the rest of the drivers is due to namespace conflicts and maintainability issues. If all CSP files were part of a single compilation unit, static functions and data are no longer private. This places restrictions on the CSP device drivers and would negate their operating system independence.

The OS independent part of the driver is designed for use with any operating system or any processor. It provides an API that utilizes the functionality of the underlying hardware. The OS dependent part of the driver adapts the driver for use with VxWorks. Such examples are SIO drivers for serial ports, or END drivers for ethernet adapters. Not all drivers require the OS dependent drivers, nor is it required to include the OS dependent portion of the driver in the CSP build.

# Configuration

EDK BSPs are configured just like any other Tornado 2.x BSP. There is little configurability to CSP drivers since the IP hardware has been pre-configured in most cases by the EDK. The only configuration available generally is whether the driver is included in the CSP at all. How to go about including/excluding drivers depends on whether the Project facility or the command-line method is being used to perform the configuration activities.

Note that simply by including a CSP device driver does not mean that driver will be automatically utilized. Most CSP drivers with VxWorks adapters have initialization code. In some cases the user may be required to add the proper driver initialization function calls to the BSP.

When using the EDK to generate a BSP, the resulting files generated in the <br/>directory contain "TODO" comments. These comments, many of which originate from the PPC 405 BSP template provided by Wind River, provide hints of what the user must provide in order to configure the BSP for their target board. The *Tornado BSP Developer's Kit for VxWorks User's Guide* and *VxWorks Programmer's Guide* are very good resources for BSP configuration.



### Command-Line CSP Driver Inclusion/Exclusion

A set of constants (one for each driver) are defined in config/<br/>
/spname>/config.h and follow the format:

#define INCLUDE\_<XDRIVER>

This file is included near the top of config/<br/>bspname>/config.h. By default all drivers are included in the build. To exclude a driver, add the following line in config.h after the #include "procname>\_drv\_config.h" statement.

#undef INCLUDE\_<XDRIVER>

This will prevent the driver from being compiled and linked into the build. To re-instate the driver, remove the #undef line from config.h. Some care is required for certain drivers. For example, Ethernet may require that a DMA driver be present. Undefining the DMA driver will cause the build to fail.

### Project Facility CSP Driver Inclusion/Exclusion

The Project Facility is part of the Tornado IDE. It is a GUI driven environment. To add/delete CSP drivers, go to the VxWorks pane in the workspace window (see figure below). Then add/delete driver components just as you would with any other VxWorks component.



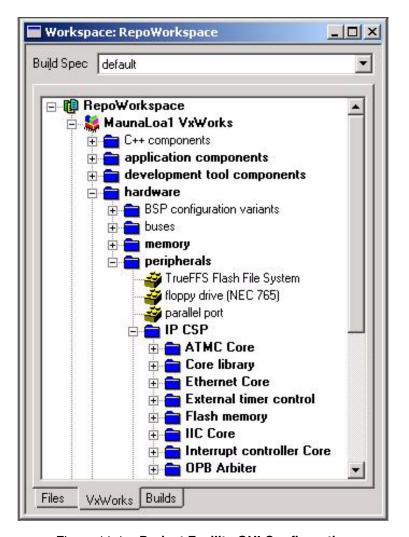


Figure 11-1: Project Facility GUI Configuration

Note that whatever configuration has been specified in cprocname>\_drv\_config.h and config.h will be overridden by the project facility.

# **Building VxWorks**

These BSPs follow the standard Tornado conventions when it comes to creating VxWorks images. Refer to Tornado documentation on how to make a VxWorks image.

### Command-Line BSP Build Extensions

The CSP is compiled/linked with the same toolchain VxWorks is built with. Minor additions to the Makefile were required to help Tornado find the location of CSP source code files.

### **Project BSP Build Extensions**

There are no extensions to the Project build.



### **Bootup Sequence**

There are many variations of VxWorks images with some based in RAM, some in ROM. Depending on board design, not all these images are supported. The following list discusses various image types:

- ROM compressed images These images begin execution in ROM and decompress the BSP image into RAM, then transfer control to the decompressed image in RAM. This image type is not compatible with SystemACE because SystemACE doesn't know the image is compressed and will dutifully place it in RAM at an address that will be overwritten by the decompression algorithm when it begins. It may be possible to get this type of image to work if modifications are made to the standard Tornado makefiles to handle this scenario.
- RAM based images These images are loaded into RAM by a bootloader, SystemACE, or an emulator. These images are fully supported.
- ROM based images These images begin execution in ROM, copy themselves to RAM
  then transfer execution to RAM. In designs with SystemACE as the bootloader, the
  image is automatically copied to RAM. The handcoded BSP examples short-circuit the
  VxWorks copy operation so that the copy does not occur again after control is
  transferred to RAM by SystemACE (see romInit.s).
- ROM resident images These images begin execution in ROM, copy the data section
  to RAM, and execution remains in ROM. In systems with only a SystemACE, this
  image is not supported. Theoretically BRAM could be used as a ROM, however, the
  current Virtex-II Pro parts being used in evaluation boards do not have the capacity to
  store a VxWorks image which could range in size from 200KB to over 700KB.

### "vxWorks" Boot Sequence

This standard image is designed to be downloaded to the target RAM space by some device. Once downloaded, the processor is setup to begin execution at function <code>\_sysInit</code> at address <code>RAM\_LOW\_ADRS</code>. (this constant is defined in config.h and Makefile). Most of the time, the device performing the download will do this automatically as it can extract the entry point from the image.

- 2. usrInit(): This "C" function running out of RAM sets up the "C" runtime environment and performs pre-kernel initialization. It invokes sysHwInit() (implemented in sysLib.c) to place the HW in a quiescent state. When completed, this function will call kernelInit() to bring up the VxWorks kernel. This function will in turn invoke usrRoot() as the first task.
- 3. usrRoot(): Performs post-kernel initialization. Hooks up the system clock, initializes the TCP/IP stack, etc. It invokes sysHwInit2() (implemented in sysLib.c) to attach and enable HW interrupts. When complete, usrRoot() invokes user application startup code usrAppInit() if so configured in the BSP.

Both usrInit() and usrRoot() are implemented by Wind River. The source code files they exist in are different depending on whether the command line or the Tornado Project facility is being used to compile the system. Under the command line interface, they are implemented at \$WIND\_BASE/target/config/all/usrConfig.c. Under the project facility, they are maintained in the user's project directory.



### "bootrom\_uncmp" Boot Sequence

This standard image is ROM based but in reality it is linked to execute out of RAM addresses. While executing from ROM, this image uses relative addressing tricks to call functions for processing tasks before jumping to RAM.

- 1. Power on. Processor vectors to 0xFFFFFFC where a jump instruction should be located that transfers control to the bootrom at address \_romInit.
- 2. \_romInit: This assembly language function running out of ROM notes that this is a cold boot then jumps to start. Both \_romInit and start are located in source code file <bspname>/romInit.s.
- 3. start: This assembly language function running out of ROM sets up the processor, invalidates the caches, and prepares the system to operate out of RAM. The last operation is to invoke "C" function romStart() which is implemented by Wind River and is located in source code file \$WIND\_BASE/target/config/all/bootInit.c.
- romStart(): This "C" function running out of ROM copies VxWorks to its RAM start address located at RAM\_HIGH\_ADRS (this constant is defined in config.h and Makefile). After copying VxWorks, control is transferred to function usrInit() in RAM.
- 5. Follows steps 2 & 3 of the "vxWorks" bootup sequence.

### "bootrom\_uncmp" Boot Sequence with SystemACE

This non-standard image is similar to the image discussed in the previous section except that SystemACE is used to load it. Several changes have to be made to the boot process. More information can be found in section **Bootrom with SystemACE** as the Boot Device, page 25

- 1. Power on. SystemACE loads the image into RAM at RAM\_HIGH\_ADRS (this constant is defined in config.h and Makefile) and sets the processor to begin fetching instructions at address \_romInit.
- 2. \_romInit: This assembly language function running out of RAM notes that this is a cold boot then jumps to start. Both \_romInit and start are located in source code file <bspname>/romInit.s.
- start: This assembly language function running out of RAM simply jumps to function \_sysInit. The call to romStart() is bypassed because SystemACE has already loaded the bootrom into it's destination RAM address.
- 4. Follow steps 1, 2, & 3 of the "vxWorks" bootup sequence.

# System ACE

The System ACE controller is a device that provides a way to store multiple FPGA bitstream loads. These loads are stored in a DOS FAT formatted compact flash (CF) device and downloaded by the System ACE controller into the FPGA when the system is powered up. Additionally, these bitstreams can contain a software load that is downloaded to RAM after the FPGA's IP cores have been programmed. Since a DOS filesystem is used, regular files can be accessed from the CF as well. Such files include VxWorks ELF images, application code & data, and script files.

BSPs equipped with the EDK System ACE core and drivers utilize the controller in two ways. First as a boot device and second as an external storage device. Together these features provide a very flexible storage mechanism.



### DOS File System

When being used as a file storage device, the BSP will mount the CF as a DOS FAT disk partition using Wind River's DosFs2.0 add-on. To get the required VxWorks libraries into the image, the following packages must be #define'd in config.h or by the Project Facility:

- INCLUDE\_DOSFS\_MAIN
- INCLUDE\_DOSFS\_FAT
- INCLUDE\_DISK\_CACHE
- INCLUDE DISK PART
- INCLUDE\_DOSFS\_DIR\_FIXED
- INCLUDE\_DOSFS\_DIR\_VFAT
- INCLUDE\_CBIO

### Mounting the DOS FAT File System

Programatically, an application can mount the file system using the following API calls:

```
FILE *fp;
sysSystemAceInitFS();
if (sysSystemAceMount("/cf0", 1) != OK)
{
    /* handle error */
}
fp = fopen("/cf0/myfile.dat","r");
    .
```

### **Bootroms**

The bootrom is a scaled down VxWorks image that operates in much the same way a PC BIOS does. Its primary job is to find and boot a full VxWorks image. The full VxWorks image may reside on disk, in flash memory, or on some host via the Ethernet. The bootrom must be compiled in such a way that it has the ability to retrieve the image. If the image is retrieved from an Ethernet network, then the bootrom must have the TCP/IP stack compiled in, if the image is on disk, then the bootrom must have disk access support compiled in, etc. The bootroms do little else than retrieve and start the full image and maintain a bootline. The bootline is a text string that set certain user characteristics such as the target's IP address if using Ethernet and the file path to the VxWorks image to boot.

Bootroms are not a requirement. They are typically used in a development environment then replaced with a production VxWorks image.

### Creating Bootroms

At a command shell in the <bspname> directory, issue the following command to create an uncompressed bootrom image (required for SystemACE):

```
 \begin{array}{c} \text{make bootrom\_uncmp} \\ \text{or} \\ \\ \text{make bootrom} \end{array}
```

to create a compressed image suitable for placing in a flash memory array.



### **Bootrom Display**

Upon cycling power, if the bootroms are working correctly, output similar to the following should be seen on the console serial port:

```
Copyright 1984-1998 Wind River Systems, Inc.

CPU: ML300 VirtexII Pro PPC405 Rev D

Version: 5.4.2

BSP version: 1.2/0

Creation date: July 26 2002, 12:51:32

Press any key to stop auto-boot...

3

[VxWorks Boot]:
```

VxWorks System Boot

Typing the "help" at this prompt lists the available commands.

#### **Bootline**

The bootline is a text string that defines user serviceable characteristics such as the IP address of the target board and how to find a vxWorks image to boot. The bootline is maintained at runtime by the bootrom and is typically kept in some non-volatile (NVRAM) storage area of the system such as an EEPROM or flash memory. If there is no NVRAM, or an error occurs reading it, then the bootline is hard-coded with DEFAULT\_BOOT\_LINE defined in the BSP's config.h source code file. In brand new systems where NVRAM has not been initialized, then the bootline may be gibberish.

The bootline can be changed if the auto-boot countdown sequence is interrupted by entering a character on the console serial port. The "c" command can then be used to interactively edit the bootline. Enter "p" to view the bootline. On a non-bootrom image, you can still change the bootline by entering the bootChange command at a host or target shell prompt.

The following list goes over the meanings of the bootline fields:

- boot device: Device to boot from. This could be Ethernet, or a local disk. Note that when changing the bootline, the unit number may be shown appended to this field ("xemac0" or "sysace=10) when prompting for the new boot device. This number can be ignored.
- processor number: Always 0 with single processor systems.
- host name: Name as needed.
- file name: The VxWorks image to boot.
- inet on ethernet (e): The IP internet address of the target. If there is no network interface, then this field can be left blank.
- host inet (h): The IP internet address of the host. If there is no network interface, then this field can be left blank.



- user (u): Username for host file system access. Pick whatever name suites you. Your ftp server must be setup to allow this user access to the host file system.
- ftp password (pw): Password for host file system access. Pick whatever name suites you. Your ftp server must be setup to allow this user access to the host file system.
- flags (f): For a list of options, enter the "help" command at the [VxWorks Boot]: prompt.
- target name (tn): Name as needed. Set per network requirements.
- other (o): This field is useful when you have a non-Ethernet device as the boot device. When this is the case, VxWorks will not start the network when it boots. Specifying an Ethernet device here will enable that device at boot time with the network parameters specified in the other bootline fields.
- inet on backplane (b): Typically left blank if the target system is not on a VME or PCI backplane.
- gateway inet (g): Enter an IP address here if you have to go through a gateway to reach the host computer. Otherwise leave blank.
- startup script (s): Path to a file on the host computer containing shell commands to execute once bootup is complete. Leave blank if not using a script. Examples:

SystemACE resident script: /cf0/vxworks/scripts/myscript.txt
Host resident script: c:/temp/myscript.txt

### Bootrom with SystemACE as the Boot Device

SystemACE enabled bootroms are capable of booting VxWorks images directly off the Compact Flash device either as a regular elf file or an ace file.

### Required Mods to VxWorks Source

While the EDK is capable of generating a BSP that uses SystemACE in a "vxWorks" image that can open and close files in a DOS filesystem, it cannot generate a BSP that uses SystemACE as a "bootrom" boot device. To use SystemACE in this way requires extensive modifications to bootrom code provided by Wind River. Wind River allows BSP developers to change Tornado source code files provided they keep the changes local to the BSP and leave the original code as is. The two files that have to be modified from their original version are:

1. \$WIND\_BASE/target/config/all/bootConfig.c: This file is overridden with one found in the <bspname> directory. The changes needed are to add code to properly parse the bootline and to initialize and use SystemACE as a JTAG and DOS boot device. To override the default bootConfig.c, the following line must be added to the BSP's Makefile:

```
BOOTCONFIG = ./bootConfig.c.
```

2. \$WIND\_BASE/target/config/comps/src/net/usrNetBoot.c: This file is overridden with one found in the <bspname>/net/usrNetBoot.c directory. The changes needed are to add code to make VxWorks aware that SystemACE is a disk based system like IDE, SCSI, or floppy drives. This change allows a BSP built from the Tornado Project downloaded with a SystemACE enabled bootrom to properly process the "other" field of the bootline. The existence of the modified file in the BSP directory automatically overrides the original.

Neither of these files are provided by the EDK because they are maintained in their original form by Wind River. The ML300 reference BSP contains versions of these files with the modifications to support SystemACE as a boot device. Those versions can be copied to the developer's BSP.



A third file, \$WIND\_BASE/target/src/config/usrNetwork.c, cannot be overridden due to the architecture of the command line BSP build process. This affects network capable BSPs built from the command line that are downloaded with a SystemACE enabled bootrom. Without modifying usrNetwork.c, affected BSPs are unable to initialize their network device and must rely on application code to perform this function. If the user desires, they can make the change to this file in their Tornado installation. There are disadvantages to this approach because any edits made to this file affect all users of that installation and may be lost if the user upgrades or re-installs Tornado. For the adventurous, the change to usrNetwork.c occurs in function usrNetInit().

#### from:

Edit this code at your own risk.

### **Special Configuration**

Preparing a bootrom\_uncmp image downloadable by SystemACE as an ace file requires special configuration. These changes are required because the bootrom is linked to begin running out of a non-volatile memory device, copy itself to RAM, then transfer control to the RAM copy. The changes will prevent the copy operation since SystemACE has already place the bootrom into a RAM device at reset.

- a. Change the definitions of ROM\_TEXT\_ADRS and ROM\_WARM\_ADRS to a value equivalent to RAM\_HIGH\_ADRS in both config.h and Makefile.
- b. Change the assembly language code at the "start" label in romInit.s to simply jump to function \_sysInit (note, an example of this usage is available in the romInit.s source code file in the ML300 reference BSP):

```
start:
  LOADPTR (r1, _sysInit)
  mtlr    r1
  blrl
```

#### **Bootline Format**

The "boot device" field of the bootline is specified using the following syntax:

```
sysace=<partition number>
```

where <partition number> is the partition to boot from. Normally, this value is set to 1, but some CF devices do not have a partition table and are formatted as if they were a large floppy disk. In this case, specify 0 as the partition number. Failure to get the partition number correct will lead to errors being reported by VxWork's dosFS libraries when the drive is mounted.



The "file name" field of the bootline is set depending on how the System ACE is to boot the system. There are two boot methods:

Boot from a regular file. This is similar to network booting in that the vxWorks image
resides in the SystemACE compact flash storage device instead of the host file system.
The compact flash device is a DOS FAT file system partition. Simply build vxWorks
using the Tornado tools then copy the resulting image file to the compact flash device
using a USB card reader or similar tool. Then specify that file in the "file name" field of
the boot rom.

The "file name" must have the following syntax:

```
/cf0/<path/to/vxWorks/image>
```

where cf0 is the mount point. <path/to/vxWorks/image> should provide the complete path to the VxWorks image to boot. When being specified in this way, the bootrom will mount the drive as a FAT formatted disk, load the file into memory and begin execution.

2. Boot from an ace file. The ace file can contain HW only, SW only, or HW + SW. When booting from an ace file with HW, the FPGA is reprogrammed. If the ace file contains SW, then it is loaded into the memory, the processor's PC is set to the entry point and released to begin fetching instructions. This boot method is flexible in that a totally different HW profile can be "booted" from a VxWorks bootrom.

The "file name" must have the following syntax:

```
cfgaddr[x]
```

where [X] is a number between 0 and 7 that corresponds to one of the configuration directories specified in the XILINX.SYS file resident in the root directory of the compact flash device. If [X] is omitted, then the default configuration is used. The default configuration is typically selected by a rotary switch mounted somewhere on the evaluation board. The bootrom will trigger a JTAG download of the ace file pointed to by the specified config address. There should be only a single file with an .ace extension in the selected configuration directory.

In either boot scenario, if you want an Ethernet device started when the downloaded VxWorks starts, then modify the "other" field of the bootline to contain the name of the network device.

### Bootrom with 10/100 Ethernet (EMAC) as the Boot Device

The EDK will generate a BSP that is capable of being built as a bootrom using the EMAC as a boot device. Very little user configuration is required. The MAC address is hard coded in the source file sysNet.c. The BSP can be used with the default MAC as long as the target is on a private network and there is no more than one target on that network with the same default MAC address. Otherwise the designer should replace this MAC with a function to retrieve one from a non-volatile memory device on their target board.

To specify the EMAC as the boot device in the bootrom, change the "boot device" field in the bootline to "xemac". If there is a single EMAC, then set the "unit number" to 0.



### Bootrom with 1 Gigabit Ethernet (GEMAC) as the Boot Device

The EDK will generate a BSP that is capable of being built as a bootrom using the GEMAC as a boot device. Very little user configuration is required. The MAC address is hard coded in the source file sysNet.c. The BSP can be used with the default MAC as long as the target is on a private network and there is no more than one target on that network with the same default MAC address. Otherwise the designer should replace this MAC with a function to retrieve one from a non-volatile memory device on their target board.

To specify the GEMAC as the boot device in the bootrom, change the "boot device" field in the bootline to "xgemac". If there is a single GEMAC, then set the "unit number" to 0.

### **Bootline Examples**

The following example boots from the ethernet using the Xilinx "xemac" as the boot device. The image booted is on the host file system on drive C.

The following example boots from a file resident on the first partition of the SystemACE's compact flash device. If the file booted from /cf0/vxworks/images/vxWorks utilizes the network, then the "xemac" device is initialized.

```
boot device : sysace=1
unit number : 0
processor number : 0
host name : host
file name : /cf0/vxworks/images/vxWorks
inet on ethernet (e) : 192.168.0.2
host inet (h) : 192.168.0.1
user (u) : xemhost
ftp password (pw) : whatever
flags (f) : 0x0
target name (tn) : vxtarget
other (o) : xemac
```

The following example boots from an ace file resident on the first partition of the SystemACE's compact flash device. The location of the ace file is set by XILINX.SYS located in the root directory of the compact flash device. If the ace file contains a VxWorks SW image that utilizes the network, then the "xemac" device is initialized for that image.

```
boot device : sysace=1
unit number : 0
processor number : 0
host name : host
file name : cfgaddr2
inet on ethernet (e) : 192.168.0.2
host inet (h) : 192.168.0.1
user (u) : xemhost
ftp password (pw) : whatever
```



flags (f) : 0x0
target name (tn) : vxtarget
other (o) : xemac

### Caches

The instruction and data caches are managed by VxWorks proprietary libraries. They are enabled by modifying the following constants in config.h or by using the Tornado Project facility to change the constants of the same name:

- INCLUDE\_CACHE\_SUPPORT If #define'd, the VxWorks cache libraries are linked into the image. If caching is not desired, then #undef this constant.
- USER\_I\_CACHE\_ENABLE If #define'd, VxWorks will enable the instruction cache at boottime. Requires INCLUDE\_CACHE\_SUPPORT be #define'd to have any effect.
- USER\_D\_CACHE\_ENABLE If #define'd, VxWorks will enable the data cache at boottime. Requires INCLUDE\_CACHE\_SUPPORT be #define'd to have any effect.

### **MMU**

If the MMU is enabled, then the cache control discussed in the previous section may not have any effect. The MMU is managed by VxWorks proprietary libraries but the initial setup is defined in the BSP. To enable the MMU, the constant INCLUDE\_MMU\_BASIC should be #define'd in config.h or by using the Project Facility. The constant USER\_D\_MMU\_ENABLE and USER\_I\_MMU\_ENABLE control whether the instruction and/or data MMU is utilized.

VxWorks initializes the MMU based on data in the sysPhysMemDesc structure defined in sysCache.c. Amongst other things, this table configures memory areas with the following attributes:

- Whether instruction execution is allowed.
- Whether data writes are allowed
- Instruction & data cacheability attributes.
- Translation offsets used to form virtual addresses.

The PPC405 is capable of other attributes including zone protection, however, Wind River documentation is rather deficient in this area and it is unclear whether the basic MMU package supports them. An add-on is available from Wind River for advanced MMU operations.

When VxWorks initializes the MMU, it takes the definitions from sysphysMemDesc and creates page table entries (PTEs) in RAM. Each PTE describes 4KB of memory area (even though the processor is capable of representing up to 16MB per PTE) Beware that specifying large areas of memory uses substantial amounts of RAM to store the PTEs. To map 4MB of contiguous memory space takes 8KB of RAM to store the PTEs.

Without the MMU enabled, the following rules apply to configuring memory access attributes and caching:

- There is no address translation, all effective addresses are physical.
- Cache control granularity is 128MB.



The guarded attribute applies only to speculative instruction fetches on the PPC405.

### **Exception Handling**

There are two types of exceptions which are of importance to PPC405 BSPs. The first type are internal exceptions such as machine check, illegal instruction, etc.. By default, the BSP configures VxWorks to trap these types of exceptions. When one occurs, the offending task is suspended and a descriptive message is displayed on the console. If the exception occurs in interrupt context, VxWorks will warm-reboot itself and leave a message to be displayed during the reboot. Note that if SystemACE resets the system then this message may not be available. See Limitations, page 31.

The other type of exception are external asynchronous. The BSP initializes and handles these exceptions which are the result of an active signal on the external or critical interrupt pins of the processor.

With the provided example BSPs, there are two INTC IP devices within the FPGA, one connected to the processor's external interrupt and the other on the critical interrupt. Functions in BSP source code file sysInterrupt.c are responsible for initializing these two devices with the XIntc component driver and hooking them into VxWorks.

### External Interrupts

Most IP peripherals that can generate interrupts are attached to the INTC component responsible for asserting the external interrupt processor exception. BSP initialization code hooks control of this device into the VxWorks intlib library.

External interrupt vectors are defined in xparameters.h. <br/>
\*spname.h> may translate these vectors into SYS\_<device>\_VEC\_ID to limit changes to BSP source code when device names change. These constants are utilized when invoking the VxWorks intLib functions. Example:

```
#include <intLib.h>

void foo(void)
{
    intEnable(SOME_DEVICE_VEC_ID);
}
```

### Critical Interrupts

Since VxWorks does not define a critical interrupt API as it does for external interrupts, the user must utilize the API defined in sysLibExtra.h. Functions sysIntCritConnect, sysIntCritEnable, and sysIntCritDisable are designed to work identically to those for the external interrupt defined by the VxWorks intLib.h library. Example:

```
#include "sysLibExtra.h"

void foo(void)
{
    sysIntCritEnable(SOME_CRITICAL_DEVICE_VEC_ID);
}
```

#### **Deviations**

The following list sums up the differences between EDK generated BSPs and traditional BSPs.



- 1. An extra directory structure is added to the root BSP directory to contain the CSP source code files.
- 2. The CSP contains drivers for Xilinx IP cores (see CSP Driver Organization, page 18) To keep the BSP buildable while maintaining compatibility with the Tornado Project facility, a set of files named qrocname > drv < driver > \_ c populate the BSP directory that simply #include the source code from the CSP.
- The BSP Makefile has been modified so that the compiler can find the CSP driver source code. The Makefile contains more information about this deviation and its implications.
- SystemACE usage may require changes to VxWorks source code files found in the Tornado distribution directory. See Bootrom with SystemACE as the Boot Device, page 25.

### Limitations

This section goes over what limitations EDK BSPs impose under certain circumstances and the reasons why.

### No WARM boots with SystemACE

When SystemACE is setup to download VxWorks images into RAM via JTAG, all boots are cold. This is because the System ACE controller resets the processor whenever it performs an ace file download.

An effect of this could can cause exception messages generated by VxWorks to not be printed on the console when the system is rebooted due to an exception in an ISR or a kernel panic. See troubleshooting guide for tips to get at this exception message.

### No Compressed Images with SystemACE

This applies to standard compressed images created with Tornado such as "bootrom". Compressed images cannot be placed on SystemACE as an ace file. System ACE cannot decompress data as it writes it to RAM. Starting such an image will lead to a system crash.

# Command Line Build Can't Init the Network when SystemACE is the Boot Device

This requires that the application provide code to initialize the network when SystemACE is the boot device. To get around this issue see the discussion of \$WIND\_BASE/target/src/config/usrNetwork.c in section Bootrom with SystemACE as the Boot Device, page 25.

### Reset Vector and SystemACE

On the PPC405 processor, the reset vector is at physical address 0xFFFFFFFC. There is a short time window where the processor will attempt to fetch and execute the instruction at this address while SystemACE processes the ace file. The processor needs to be given something to do during this time even if it is a spin loop:

```
FFFFFFFC b.
```

If BRAM occupies this address range, then the designer who creates the bitstream should place instructions here with the elf to BRAM utility found in the Xilinx ISI tools.



### **ML300 Reference BSP**

This handcoded BSP was created to complement the EDK example system for the ML300 reference board. It has been customized to work with hardware devices specific to the board. The BSP has enough support to allow application development using the Tornado tool chain.

This BSP directly supports the following hardware:

- 10/100 BaseT Ethernet
- RS-232 Serial ports (2)
- System ACE
- GPIO (LEDs & pushbutton switches)
- IIC (including EEPROM, temperature & power monitors)
- 128MB DDR RAM
- 32KB BRAM
- PPC405 built-in timers, instruction cache, data cache

The BSP utilizes drivers for the following EDK IP cores:

- EMAC Ethernet: END driver type
- 16550 UART on connector P107: SIO driver type on /tyco/0 (VxWorks console)
- 16550 UART on connector P106: SIO driver type on /tyco/1
- PLB to OPB bridge, PLB arbiter
- System ACE as a JTAG device
- System ACE as a block device for disk access (FAT32)
- INTC Interrupt controllers. 1 critical controller, 1 external controller

This BSP does not support the following hardware due to the lack of support in the IP bitstream or from the lack of drivers:

- LCD Display
- PCI
- Parallel port
- PS2 ports
- USB ports
- Audio ports
- Fiber ports
- SPI

### Installation

### Compact Flash & SystemACE

A compressed zipfile is provided in the ace subdirectory. This is a complete image containing a bootrom and sample VxWorks images in ace and elf file formats. See the README in the ace directory for more information.

To install this image, do the following:

- 1. Make a backup of your microdrive then erase all files from it.
- 2. Uncompress the ace/compactFlash.zip file to the microdrive.
- 3. Insert the microdrive into the compact flash slot on the ML300.



- 4. Connect a serial port cable to the P106 connector on the evaluation board. Default comm settings are 115200, N, 8, 1.
- 5. Set the rotary switch on the ML300 to setting 6 and apply power. At this point, the VxWorks bootrom should be running and writing to the console serial port.
- 6. Set the bootrom's bootline per your requirements. See **Bootroms**, page 23 for more information.

### Setting Ethernet MAC Address

To verify your MAC address is correct perform the following steps:

- 1. Set the rotary switch associated with the VxWorks bootrom and reboot the ML300.
- 2. Interrupt the countdown sequence to get the [VxWorks Boot]: prompt.
- 3. Enter the "N" command (case sensitive). The current MAC will be displayed and you will be prompted to enter a new MAC. The first three bytes of the MAC should be 000A35.

```
Press any key to stop auto-boot...

1
[VxWorks Boot]: N
Current Ethernet Address is: 00:0a:35:00:03:20
Modify only the last 3 bytes (board unique portion) of Ethernet Address.
The first 3 bytes are fixed at manufacturer's default address block.
00- 00
0a- 0a
35- 35
00-
```

If the MAC is valid, then press return three times to accept the default. On new boards, the address may be all FFs. If this is the case, enter the last three bytes that are assigned to the board's serial number. If you are not sure of the numbers, then enter return three times. This will change the MAC to 00:0a:35:FF:FF:FF. This will provide you with a valid MAC until the correct number is obtained. Boards with a MAC of all FFs will not be capable of running the network stack. Multiple boards connected to the same network with the same MAC will not work either.

# **Bootstrap Information**

The default bitstream contains a bootstrap program that consists of a single instruction at the processor's reset vector which is in effect an endless loop, or while(1) in "C" programming constructs. This loop keeps the processor from running amok until SystemACE completes its download or an emulator connects to the target board. See **Reset Vector and SystemACE**, page 31.

# Memory Maps

Due to the nature of this evaluation board a full memory map is not given in this document. The user is instead referenced to "C" source code header file xparameters.h. This source file provides a memory map for all CSP devices. A partial map is given here.



Table 11-1: System Memory Map

Device	Start (hex)	End (hex)	Size (bytes)	
PLB DDR	00000000	07FFFFFF	128 MB	
OPB Space	60000000	60010000	64 KB	
BRAM	FFFF8000	FFFFFFF	32 KB	

### **RAM Memory Map**

RAM device contains the VxWorks runtime image and heap space. ML300 follows VxWorks conventions for RAM usage for PowerPC processors. Refer to Appendix F of the *VxWorks 5.4 Programmer's Guide*.

Table 11-2: RAM Memory Map

Physical Address Range (hex)	Usage
00000000000000FF	(DDR) Unused & undefined
0000010000002FFF	(DDR) Interrupt Vector table
0000300000010000	(DDR) VxWorks usage. Exception reason message and other VxWorks constructs are at the bottom of this region. Initial stack is set at the top of this range and grows downward. Once VxWorks has switched to multi-tasking mode, this stack is no longer used.
0001000000BFFFFF	(DDR) RAM_LOW_ADRS. VxWorks image, interrupt stack, host memory pool, and heap space.
00C0000007DFFFFF	(DDR) RAM_HIGH_ADRS. Two possible uses. (1) VxWorks bootrom image and heap space. (2) VxWorks heap space.
07E0000007EFFFFF	(DDR) USER_RESERVED_MEM. This 1MB is used for network data buffers and network DMA descriptor spaces.
07F0000007FFFFFF	(DDR) USER_RESERVED_MEM. This 1 MB is not used by BSP. Available for application use
FFFF8000FFFFFFF	(BRAM) Address FFFFFFC contains reset vector.

### **NVRAM Memory Map**

NVRAM support is provided by a Microchip Technology 24LC32A EEPROM on the IIC bus. This device provides 4KB of storage space. BSP source code file 24LC32aNvRam.c is the driver for this device and provides the API interface required by VxWorks. The primary BSP related objects stored in NVRAM are the bootline and the Ethernet MAC address.

When there is no IIC bus support, the BSP will replace the EEPROM driver with \$WIND\_BASE/src/drv/mem/nullNvRam.c which provides only function stubs so that VxWorks will link. When this is the case, the default bootline is used (see config.h) and the Ethernet MAC address defaults to: 00:0a:35:00:00.

Part Offset Range (hex)	sysNvRamGet/Set Offset	Usage
000007FF	N/A*	Reserved for board level objects such as the Ethernet MAC address
080008FF	000000FF	Reserved for VxWorks bootline
09000FEF	010007EF	Unused
0FF00FFF	07F007FF	Reserved

Table 11-3: NVRAM Memory Map

### Caches

The caches are configured by the following constants in ML300.h. These constants map to the PPC cache control registers of the same name. See PPC405 documentation for further information on these registers:

- ML300\_ICCR\_VAL Initial contents of the ICCR register (instruction cacheability attribute).
- ML300\_DCCR\_VAL Initial contents of the DCCR register (data cacheability attribute).
- ML300\_DCWR\_VAL Initial contents of the DCWR register (write back/through attribute).
- ML300\_SGR\_VAL Initial contents of the SGR register (guarded attribute).

- Charle 11-up					
Physical Address Range (hex)	I Cache	D Cache	Write Back/Through	Guarded	
0000000007F FFFFF	Y	Y	Back	N	
F8000000FFF FFFFF	Y	Y	N/A	N	
everything else	N	N	N/A	N	

Table 11-4: Cache Map

# **External Interrupts**

There are two INTC interrupt controller IP cores in the design. One is wired to the external interrupt signal of the PPC405 and the other to the critical interrupt signal.

PLB/OPB bridges & arbiters are wired to the critical INTC instance. If these interrupt sources are enabled and the PPC machine check interrupt is enabled then VxWorks may reboot when an exception occurs. This is because the PLB/OPB bridge/arbiter will assert

<sup>\*</sup> sysNvRamGet and sysNvRamSet are the VxWorks required NVRAM interface functions. The interface they provide uses offsets relative to the bootline offset. Accessing part offsets 0000..07FF requires an alternate interface.



their interrupt signal when they cannot complete a transaction to the INTC. This signal will propagate to the PPC as a critical interrupt exception (vector 0x100). At the same time the PPC will detect a bad bus cycle and generate a machine check exception (vector 0x200). VxWorks will begin handling the first exception, but during this time the second exception arrives. VxWorks architecturally does not allow this and will reboot the system when it occurs.

It is not recommended to sysIntCritEnable() one of these interrupt sources. Instead, use the VxWorks excHookAdd() function to use your own function perform custom exception processing (after VxWorks finishes its own processing). Here, the hook function can examine the bridges/arbiters and perform whatever task is required for the event.

### IIC

There are several devices connected to the IIC bus with hardwired addresses. These addresses are defined for the BSP in the ML300.h header file. The BSP provides a polled interface to the IIC bus to access these devices. The interface includes a mutual exclusion semaphore that can be used to prevent more than one task from accessing the bus at a time. Before the operating system is up, the semaphore is not available and it is up to boot code to sequence access to the bus. This should not be an issue since the system is single-threaded at boot time and the only device accessed should be the NVRAM.

BSP file syslic.c provides initialization, read/write primitives, and resource allocation functions.

### **Board API**

There are a handful of "board level" BSP functions not implemented by the CSP device drivers. Prototypes for these functions are located in config/ML300/sysLibExtra.h.

This section will not go over CSP device driver functions. Instead the user is directed to the appropriate ip\_csp/xsrc/<device>.c file for documentation and usage.

#### Standard I/O

The BSP comes with stdin, stdout, and stderr directed through the UART on the P106 connector. The default UART baud rate is set to 115200, no parity, 8 data bits, and 1 stop bit. The secondary UART on P107 is enabled and ready for application usage. It defaults to 19200 baud, no parity, 8 data bits, and 1 stop bit.

#### **GPIO**

Two instances of GPIO can be included in the BSP. The first instance controls the momentary push button switches and their surrounding LEDs. The second controls the 32 GPIO lines on the J10 connector. Both instances require that INCLUDE\_XGPIO constant be defined. Each instance can be enabled or disabled with constants INCLUDE\_GPIO\_LED\_SWITCHES and INCLUDE\_GPIO\_TEST\_PORT.

#### void sysLedOn(UINT32 mask)

Turns on LEDs in the mask. Bits set to one cause the associated LED to be illuminated. The mask is built using constants GPIO\_LED\_DSxx defined in ML300.h where xx is the LED



number and DSxx is the LED label on the PCB. This function requires that both INCLUDE\_XGPIO and INCLUDE\_GPIO\_LED\_SWITCHES be defined.

### void sysLedOff(UINT32 mask)

Turns off LEDs in the mask. Bits set to one cause the associated LED to be turned off. The mask is built using constants <code>GPIO\_LED\_DSxx</code> defined in <code>ML300.h</code> where <code>xx</code> is the LED number and <code>DSxx</code> is the LED label on the PCB. This function requires that both <code>INCLUDE\_XGPIO</code> and <code>INCLUDE\_GPIO\_LED\_SWITCHES</code> be defined.

### UINT32 sysSwitchReadState(void)

Reads the state of all the push button switches. A mask is returned describing which switches are closed (i.e. being pushed). The mask is decoded using constants GPIO\_SWITCH\_SWxx defined in ML300.h where xx is the switch number and SWxx is the switch label on the PCB. This function requires that both INCLUDE\_XGPIO and INCLUDE\_GPIO\_LED\_SWITCHES be defined. Usage example:

```
UINT32 mask = sysSwitchReadState();
if (mask & GPIO_SWITCH_SW06)
{
    // handle switch 6 press
}
```

### void sysGpioBankSetDataDirection(UINT32 mask)

Sets the output enable for the J10 32-bit GPIO header located adjacent to the LCD display. Bits in the mask set to "1" are inputs, "0" are outputs.

### void sysGpioBankWriteDiscretes(UINT32 data)

Writes to the 32-bit GPIO J10 header.

#### UINT32 sysGpioBankReadDiscretes(void)

Reads the state of the pins of the 32-bit GPIO J10 header.

#### void sysLedBusErrClear(UINT32 ledMask)

Turns the PLB & OPB bus error LEDs from red (bus error occurred) to green. This function does not clear the error condition. Parameter ledMask is formed from or'ing together GPIO\_LED\_BUSERR constants defined in ML300.h.

### System ACE

These routines require that the INCLUDE\_XSYSACE constant be defined.

#### STATUS sysSystemAceSetRebootAddr(unsigned configAddr)

Sets the reboot JTAG configuration address. This address is mapped to cfgaddr0..7 as defined in XILINX.SYS in the root directory of the CF device. If this function is never invoked, then the default address is used. The default address is the address selected by the rotary switch. The given address will be rebooted if sysToMonitor() or reset() is called.



The configAddr parameter range is 0..7 (i.e. cfgaddr0..7) or -1 to select the default address.

Returns ERROR if configAddr is out of range, OK otherwise.

### void sysSystemAceInitFS(void)

Initializes the required Wind River DosFs 2.0 libraries. Application code is not required to call this function on a BSP built with the Project facility.

### STATUS sysSystemAceMount(char\* mountPoint, int partition)

Mount the compact flash as DOS file system volume. The mountpoint parameter is an arbitrary string labeling the device. Once mounted, refer to this mountpoint in all file accesses. The partition parameter specifies the partition to mount. If "0" is specified then the boot device is assumed to not contain a partition table (i.e. it is treated like a floppy disk).

Note: Before calling this routine, be sure to initialize the DOS file system with a call to sysSystemAceInitFS().

Note: Application code is not required to call this function on a BSP built with the Project facility with INCLUDE\_XSYSACE\_AUTOMOUNT defined.

### Power & Temperature Monitor Functions

These functions require that INCLUDE\_XIIC constant be defined.

#### void sysPowerMonCpuGet(int \*v1\_8, int \*v2\_5, int \*v3\_3, int \*v5, int \*v12)

This routine reads the two power monitor devices on the IIC bus to determine the current voltage levels on the CPU board. All voltages are returned in units of milli-volts. If the voltage cannot be read for any reason, then that voltage level is returned as SYS\_MEASUREMENT-\_ERROR. Parameters are interpreted as follows: v1\_8 = 1.8volt source, etc..

#### void sysPowerMonIoGet(int \*v1\_8, int \*v2\_5, int \*v3\_3, int \*v5, int \*v12)

This routine reads the two power monitor devices on the IIC bus to determine the current voltage levels on the IO board. All voltages are returned in units of milli-volts. If the voltage cannot be read for any reason, then that voltage level is returned as SYS\_MEASUREMENT-\_ERROR. Parameters are interpreted as follows: v1\_8 = 1.8volt source, etc..

#### void sysPowerMonShow(void)

Print the voltages from all power monitor sources to the console. If errors are encountered while reading the voltage monitors, then "Err" is displayed next to the voltage. This function requires INCLUDE\_POWERMON\_SHOW be defined in config.h or in the project facility under *development tool components* -> *show routines*.



### void sysTemperatureMonGet(int \*cpu, int \*ambient)

This routine reads the two temperature sensing devices on the IIC bus to determine the current temperature. If the temperature cannot be read for whatever reason, then that temperature is returned as SYS\_MEASUREMENT\_ERROR. Temperature is returned in units of deg C.

### void sysPowerMonShow(void)

Print the temperature (in deg C) for the CPU and the ambient temperature. If errors are encountered while reading the temperature monitors, then "Err" is displayed next to the temperature. INCLUDE\_TEMPERATUREMON\_SHOW be defined in config.h or in the project facility under *development tool components* -> show routines.

#### Miscellaneous Functions

### void sysMsDelay(UINT32 delay)

Delay the specified number of milliseconds. The delay is implemented as a busy loop that occupies the CPU. The delay can be preempted by a higher priority task or interrupts if tasking/interrupts are enabled causing loss of delay precision.

### void sysUsDelay(UINT32 delay)

Delay the specified number of microseconds. The delay is implemented as a busy loop that occupies the CPU. The delay can be pre-empted by a higher priority task or interrupts if tasking/interrupts are enabled causing loss of delay precision.

This function not accurate for delay times below 20us due to system overhead. The overhead is more or less constant and can be negated by the use of SYS\_US\_DELAY\_BIAS defined in config.h. Use this constant to calibrate to your system's needs. As delivered with a 300 MHz CPU clock and a bias of -2, this function is accurate within +/-15% for a 20us delay. As the delay time increases, the accuracy increases.

#### void sysEepromWriteEnable(void)

Enables writes to the IIC EEPROM.

#### void sysEepromWriteDisable(void)

Disable writes to the IIC EEPROM.

# **Board Specific Options**

This section discusses ML300 specific configuration options that can be set either in config.h or in the Project GUI. Unless otherwise stated, these options can be set by #define'ing or #undef'ing them in config.h or by defining them in the Project GUI in the project workspace's macros settings in the build tab.



Table 11-5: Custom BSP Options

Option	Description
INCLUDE_XSYSACE_INSTALLRESET_VEC	Controls whether reset code is placed the processor's reset vector address. This reset code will trigger SystemACE to load the default configuration bitstream.
INCLUDE_XSYSACE_AUTOMOUNT	Controls whether the System ACE filesystem is mounted at boot time using the next two SYSACE_constants defined in this table. This constant affects only Project builds.
SYSACE_AUTOMOUNT_POINT	Default mount point used when INCLUDE XSYSACE_AUTOMOUNT is defined in Project builds.
SYSACE_AUTOMOUNT_PARTITION	Default partition used when INCLUDE_XSYSACEAUTOMOUNT is defined in Project builds.
INCLUDE_GPIO_LED_SWITCHES	Controls whether GPIO support is present for the switches on top of the board and the LED in close proximity to those switches. If support is not included, then functions sysLedOn, sysLedOff, and sysSwitchReadState have no effect.
INCLUDE_GPIO_TEST_PORT	Controls whether GPIO support is present for the J10 I/O connector port. If support is not included, then sysGpioBank functions have no effect.
SYS_US_DELAY_BIAS	Adds the specified number of microseconds to the delay parameter in sysUsDelay(). This option can be used to cancel out overhead.
INCLUDE_EMAC_PHY_RESETAT_BOOT	Controls whether the Ethernet PHY is reset at boot time. In the Project GUI, this is a parameter under the emac component and can be found under <i>hardware-</i> > <i>peripherals-&gt;IP CSP-&gt; Ethernet Core.</i> Set to TRUE to enable, FALSE to disable.
INCLUDE_POWERMON_SHOW	Controls whether function sysPowerMonShow is compiled into the BSP.
INCLUDE_TEMPERATUREMONSHOW	Controls whether function sysTemperature- MonShow is compiled into the BSP.
SYS_GPIO_SWITCH_DEBOUNCE_TICKS	Sampling interval used by function sysSwitchReadState() when attempting to debounce switches. Units are in clock ticks.

# Release History

# Version 1.2/0 - September 26, 2002

First pre-release for Tornado 2.0. This is a beta release that does not include support for all HW. Note that testing has been done on the ML3 evaluation board as opposed to the ML300. In other words, this version of the BSP has never been run on the ML300 hardware. The SEG IP bitstream is used for this load.



#### **HW Supported**

- 16550 UART on outside edge connector (VxWorks console)
- EMAC Ethernet
- 16MB DDR RAM
- 32KB BRAM
- System ACE
- PPC Instruction cache

#### HW Not supported

- PPC Data cache
- PPC MMU
- PLB/OPB Bridge register access (no access to BEAR, BESR registers).
- LCD display
- PCI
- GPIO
- Parallel Port
- PS2 Ports

#### **Usage Notes**

1. Bootroms: The bootroms are integrated into the FPGA bitstream and downloaded by System ACE at powerup and reset. There are two different types of bootroms stored in the ace subdirectory. Each one uses serial port #1 as the console at 38400 baud, N,8,1.

top\_vxboot.ace: This bootrom has a hardcoded bootline of "sysace=1(0,0):/cf0/ vxworks/vxWorks.st". It will mount the compact flash device using the MPU interface of the System ACE as an external DOS volume. The given VxWorks image will be loaded and started. If a /vxworks directory is not in your compact flash device then create one and place your vxWorks.st image there. This bootrom has no network support.

top\_vxbootnet.ace: This bootrom has a hardcoded bootline of

- a. "xemac(0,0)host:c:/tornado/ target/config/ML300/vxWorks h=192.168.0.1 e=192.168.0.2 u=xemhost pw=slurm". The network is started and the vxWorks image is downloaded via ftp.
- 2. When using SystemACE as the boot device for bootroms, make sure macro INCLUDE\_NET\_INIT is undefined and any macro that causes it to be defined such as WDB\_COMM\_TYPE=WDB\_COMM\_END.
- 3. Reset vector issue. The PPC405 reset vector is at physical address FFFFFFFC. With SystemACE at powerup, the processor will be prevented from executing an instruction at this address in some cases. With a VxWorks bootrom in the bitstream, SystemACE will load the FPGA IP cores, then the bootrom, place the PC at the bootrom entry point romInit and release it to begin fetching instructions. So what happens when you press the reset button? The answer is the processor will vector to FFFFFFFC and something had better be there. The BSP can be configured to initialize this reset vector with code to cause a System ACE jtag reboot. Defining INCLUDE\_XSYSACE\_INSTALL\_RESET\_VEC will install this code but a better solution would be to place something at the reset vector with Data2Bram in the Xilinx design flow toolchain.



#### Errata

- 1. Since there is no NVRAM support, the bootline is hardcoded in the DEFAULT\_BOOT\_LINE macro defined in config.h. The Ethernet MAC address is hardcoded in sysNet.c.
- Pressing the CPU reset button will not reset the system and reload the bootrom. Users must press the System ACE reset button or place code in the BRAM at the end of the memory map that triggers system ACE to reset itself.
- 3. Ethernet 100Base-T may have poor performance with some host computers. If this is the case, then switch your host computer's ethernet adapter to 10Base-T.
- 4. When creating a Tornado Project using this BSP as the "basis BSP", ensure the data cache is disabled. Go to the "enable caches" component of the memory folder and set USER\_D\_CACHE\_ENABLE to no value.

### Version 1.2/1 - November 13, 2002

The first release using an EDK/platgen generated bitstream.

### **HW** Supported

- 16550 UART on P107 (VxWorks console)
- 16550 UART on P106
- EMAC Ethernet
- 128MB DDR RAM
- 32KB BRAM
- PPC MMU & Instruction & Data caches
- PLB/OPB Bridge
- GPIO (LEDs & Switches)
- IIC including NVRAM, temperature & power monitors.

#### **HW** Not supported

- System ACE
- LCD Display
- PCI
- Parallel Port
- PS2 Ports
- USB Ports
- Audio Ports
- SPI

#### **Usage Notes**

At the time this document was updated, this BSP is largely untested on a real EDK/platgen bitstream load.

#### Errata

- 1. System mode debugging through the END connection does not work.
- 2. Serial port usage as the WDB target connection does not work. Serial port polling mode does not seem to work.



### Version 1.2/2 - January 10, 2003

Tested using the EDK/platgen reference design bitstream ML300\_ppc405\_example.

New Features & Enhancements

- 1. Added support for SystemACE HW using 16-bit bus mode.
- Added boot error logging to note where CSP driver errors were encountered at boot time.
- 3. Added bus error LED clear functions.
- 4. Added EEPROM write protect functions.
- 5. BRAM is now data cached by default.
- 6. Changed push button switch debouncing to use taskDelay instead of busy loop.

### **Bug Fixes**

- 1. Moved implementation of sysDcrPlb functions to sysALib.s from sysPlbOpb.c because these functions cannot be implemented in "C" due to the way the VxWorks exception library works.
- 2. Corrected GPIO bitmasks and XPAR to SYS constants mappings in ML300.h.
- 3. Corrected NETWORK\_MEMORY\_SIZE constant definition. Previously, it had worked correctly only with the default setting of USER\_RESERVE\_MEMORY.
- 4. Removed init code that by default enabled critical interrupts from the PLB arbiter and PLB/OPB bridge. In some situations, this setup could cause VxWorks to reboot during a bus error.
- 5. Fixed bug in intConnect that prevented the user from connecting an ISR to a source that already had a connected ISR.

#### **Usage Notes**

1. Using the push button switches as interrupt sources requires a debouncing algorithm. Otherwise an avalanche of interrupts will befall you due to the noisy signals present on this board.

#### Errata

- 1. System mode debugging through the END connection does not work.
- 2. Serial port usage as the WDB target connection does not work. Serial port polling mode does not seem to work.
- 3. Stubbed out LCD code. Functions left to stay compatible with ML300seg. At this time there is no LCD HW IP Core for this particular LCD display in the EDK.
- 4. MMU induced instability. When MMU is enabled, have noted system stability problems especially when using the host shell to download and run object code. The BSP is shipped with the MMU disabled.
- 5. Errors accessing the IIC bus. On some occasions, the IIC bus has come up in an inaccessible state. When this occurs, the BSP will use the default bootline and the default MAC address.

# ML300Seg Reference BSP

This handcoded BSP was created to complement the V2PDK example system for the ML300 reference board. It has been customized to work with hardware devices specific to



the board. The BSP has enough support to allow application development using the Tornado tool chain.

This BSP directly supports the following hardware:

- 10/100 BaseT Ethernet
- RS-232 Serial ports (2)
- System ACE
- LCD Display
- GPIO (LEDs & pushbutton switches)
- IIC (including EEPROM, temperature & power monitors)
- 128MB DDR RAM
- 32KB BRAM
- PPC405 built-in timers, instruction cache, data cache

The BSP utilizes drivers for the following IP cores:

- EMAC Ethernet: END driver type
- 16550 UART on connector P107: SIO driver type on /tyco/0 (VxWorks console)
- 16550 UART on connector P106: SIO driver type on /tyco/1
- PLB to OPB bridge, PLB arbiter
- System ACE as a JTAG device
- System ACE as a block device for disk access (FAT32)
- INTC Interrupt controllers. 1 critical controller, 1 external controller

This BSP does not support the following hardware due to the lack of driver support:

- PCI
- Parallel port
- PS2 ports
- USB ports
- Audio ports
- Fiber ports
- SPI

#### Installation

### Compact Flash & SystemACE

A compressed zipfile is provided in the ace subdirectory. This is a complete image containing a bootrom and sample VxWorks images in ace and elf file formats. See the README in the ace directory for more information.

To install this image, do the following:

- 1. Make a backup of your microdrive then erase all files from it.
- 2. Uncompress the ace/compactFlash.zip file to the microdrive.
- 3. Insert the microdrive into the compact flash slot on the ML300.
- 4. Connect a serial port cable to the P106 connector on the evaluation board. Default comm settings are 115200, N, 8, 1.
- 5. Set the rotary switch on the ML300 to setting 6 and apply power. At this point, the VxWorks bootrom should be running and writing to the console serial port.



 Set the bootrom's bootline per your requirements. See Bootroms, page 23 for more information.

### Setting Ethernet MAC Address

To verify your MAC address is correct perform the following steps:

- 1. Set the rotary switch associated with the VxWorks bootrom and reboot the ML300.
- 2. Interrupt the countdown sequence to get the [VxWorks Boot]: prompt.
- 3. Enter the "N" command (case sensitive). The current MAC will be displayed and you will be prompted to enter a new MAC. The first three bytes of the MAC should be 000A35.

```
Press any key to stop auto-boot...

1
[VxWorks Boot]: N
Current Ethernet Address is: 00:0a:35:00:03:20
Modify only the last 3 bytes (board unique portion) of Ethernet Address.
The first 3 bytes are fixed at manufacturer's default address block.
00- 00
0a- 0a
35- 35
00-
```

If the MAC is valid, then press return three times to accept the default. On new boards, the address may be all FFs. If this is the case, enter the last three bytes that are assigned to the board's serial number. If you are not sure of the numbers, then enter return three times. This will change the MAC to 00:0a:35:FF:FF:FF. This will provide you with a valid MAC until the correct number is obtained. Boards with a MAC of all FFs will not be capable of running the network stack. Multiple boards connected to the same network with the same MAC will not work either.

# **Bootstrap Information**

The default bitstream contains a bootstrap program that consists of a single instruction at the processor's reset vector which is in effect an endless loop, or while(1) in "C" programming constructs. This loop keeps the processor from running amok until SystemACE completes its download or an emulator connects to the target board. See Reset Vector and SystemACE, page 31.

# **Memory Maps**

Due to the nature of this evaluation board a full memory map is not given in this document. The user is instead referenced to "C" source code header file xparameters.h. This source file provides a memory map for all CSP devices. A partial map is given here.



Table 11-6: System Memory Map

Device	Start (hex)	End (hex)	Size (bytes)
PLB DDR	00000000	07DFFFFF	126 MB
PLB LCD Frame Buffer	07E00000	07FFFFFF	2 MB
OPB Space	60000000	DFFFFFF	2 GB
BRAM	FFFF8000	FFFFFFF	32 KB

### **RAM Memory Map**

RAM device contains the VxWorks runtime image and heap space. ML300Seg follows VxWorks conventions for RAM usage for PowerPC processors. Refer to Appendix F of the *VxWorks 5.4 Programmer's Guide*.

Table 11-7: RAM Memory Map

Physical Address Range (hex)	Usage
00000000.000000FF	(DDR) Unused & undefined
0000010000002FFF	(DDR) Interrupt Vector table
0000300000010000	(DDR) VxWorks usage. Exception reason message and other VxWorks constructs are at the bottom of this region. Initial stack is set at the top of this range and grows downward. Once VxWorks has switched to multi-tasking mode, this stack is no longer used.
0001000000BFFFFF	(DDR) RAM_LOW_ADRS. VxWorks image, interrupt stack, host memory pool, and heap space.
00C0000007BFFFFF	(DDR) RAM_HIGH_ADRS. Two possible uses. (1) VxWorks bootrom image and heap space. (2) VxWorks heap space.
07C0000007CFFFFF	(DDR) USER_RESERVED_MEM. This 1MB is used for network data buffers and network DMA descriptor spaces.
07D0000007DFFFFF	(DDR) USER_RESERVED_MEM. This 1 MB is not used by BSP. Available for application use
07E0000007FFFFF	(DDR) LCD frame buffer
FFFF8000FFFFFFF	(BRAM) Address FFFFFFC contains reset vector.

### **NVRAM Memory Map**

NVRAM support is provided by a Microchip Technology 24LC32A EEPROM on the IIC bus. This device provides 4KB of storage space. BSP source code file 24LC32aNvRam.c is the driver for this device and provides the API interface required by VxWorks. The primary BSP related objects stored in NVRAM are the bootline and the Ethernet MAC address.

When there is no IIC bus support, the BSP will replace the EEPROM driver with \$WIND\_BASE/src/drv/mem/nullNvRam.c which provides only function stubs so that

VxWorks will link. When this is the case, the default bootline is used (see config.h) and the Ethernet MAC address defaults to: 00:0a:35:00:00.

Table 11-8: NVRAM Memory Map

Part Offset sysNvRamGet/Set Range (hex) Offset		Usage	
000007FF	N/A*	Reserved for board level objects such as the Ethernet MAC address	
080008FF	000000FF	Reserved for VxWorks bootline	
09000FEF	010007EF	Unused	
0FF00FFF	07F007FF	Reserved	

<sup>\*</sup> sysNvRamGet and sysNvRamSet are the VxWorks required NVRAM interface functions. The interface they provide uses offsets relative to the bootline offset. Accessing part offsets 0000..07FF requires an alternate interface.

### Caches

The caches are configured by the following constants in ML300.h. These constants map to the PPC cache control registers of the same name. See PPC405 documentation for further information on these registers:

- ML300\_ICCR\_VAL Initial contents of the ICCR register (instruction cacheability attribute).
- ML300\_DCCR\_VAL Initial contents of the DCCR register (data cacheability attribute).
- ML300\_DCWR\_VAL Initial contents of the DCWR register (write back/through attribute).
- ML300\_SGR\_VAL Initial contents of the SGR register (guarded attribute).

Table 11-9: Cache Map

Physical Address Range (hex)	l Cache	D Cache	Write Back/Through	Guarded
0000000007FFFFF	Y	Y <sup>1</sup>	Back	N
F8000000FFFFFFF	Y	Y	N/A	N
everything else	N	N	N/A	N

<sup>&</sup>lt;sup>1</sup> This region includes the LCD frame buffer on the ML300Seg. A data cache flush may be required to complete writes to this buffer.

# **External Interrupts**

There are two INTC interrupt controller IP cores in the design. One is wired to the external interrupt signal of the PPC405 and the other to the critical interrupt signal.

PLB/OPB bridges & arbiters are wired to the critical INTC instance. If these interrupt sources are enabled and the PPC machine check interrupt is enabled then VxWorks may reboot when an exception occurs. This is because the PLB/OPB bridge/arbiter will assert



their interrupt signal when they cannot complete a transaction to the INTC. This signal will propagate to the PPC as a critical interrupt exception (vector 0x100). At the same time the PPC will detect a bad bus cycle and generate a machine check exception (vector 0x200). VxWorks will begin handling the first exception, but during this time the second exception arrives. VxWorks architecturally does not allow this and will reboot the system when it occurs.

It is not recommended to sysIntCritEnable() one of these interrupt sources. Instead, use the VxWorks excHookAdd() function to use your own function perform custom exception processing (after VxWorks finishes its own processing). Here, the hook function can examine the bridges/arbiters and perform whatever task is required for the event.

#### IIC

There are several devices connected to the IIC bus with hardwired addresses. These addresses are defined for the BSP in the ML300.h header file. The BSP provides a polled interface to the IIC bus to access these devices. The interface includes a mutual exclusion semaphore that can be used to prevent more than one task from accessing the bus at a time. Before the operating system is up, the semaphore is not available and it is up to boot code to sequence access to the bus. This should not be an issue since the system is single-threaded at boot time and the only device accessed should be the NVRAM.

BSP file syslic.c provides initialization, read/write primitives, and resource allocation functions.

#### **Board API**

There are a handful of "board level" BSP functions not implemented by the CSP device drivers. Prototypes for these functions are located in config/ML300/sysLibExtra.h.

This section will not go over CSP device driver functions. Instead the user is directed to the appropriate ip\_csp/xsrc/<device>.c file for documentation and usage.

#### Standard I/O

The BSP comes with stdin, stdout, and stderr directed through the UART on the P106 connector. The default UART baud rate is set to 115200, no parity, 8 data bits, and 1 stop bit. The secondary UART on P107 is enabled and ready for application usage. It defaults to 19200 baud, no parity, 8 data bits, and 1 stop bit.

#### **GPIO**

Two instances of GPIO can be included in the BSP. The first instance controls the momentary push button switches and their surrounding LEDs. The second controls the 32 GPIO lines on the J10 connector. Both instances require that INCLUDE\_XGPIO constant be defined. Each instance can be enabled or disabled with constants INCLUDE\_GPIO\_LED\_SWITCHES and INCLUDE\_GPIO\_TEST\_PORT.



#### void sysLedOn(UINT32 mask)

Turns on LEDs in the mask. Bits set to one cause the associated LED to be illuminated. The mask is built using constants <code>GPIO\_LED\_DSxx</code> defined in <code>ML300.h</code> where <code>xx</code> is the LED number and <code>DSxx</code> is the LED label on the PCB. This function requires that both <code>INCLUDE\_XGPIO</code> and <code>INCLUDE\_GPIO\_LED\_SWITCHES</code> be defined.

#### void sysLedOff(UINT32 mask)

Turns off LEDs in the mask. Bits set to one cause the associated LED to be turned off. The mask is built using constants <code>GPIO\_LED\_DSxx</code> defined in ML300.h where xx is the LED number and <code>DSxx</code> is the LED label on the PCB. This function requires that both <code>INCLUDE\_XGPIO</code> and <code>INCLUDE\_GPIO\_LED\_SWITCHES</code> be defined.

#### UINT32 sysSwitchReadState(void)

Reads the state of all the push button switches. A mask is returned describing which switches are closed (i.e. being pushed). The mask is decoded using constants GPIO\_SWITCH\_SWxx defined in ML300.h where xx is the switch number and SWxx is the switch label on the PCB. This function requires that both INCLUDE\_XGPIO and INCLUDE\_GPIO\_LED\_SWITCHES be defined. Usage example:

```
UINT32 mask = sysSwitchReadState();
if (mask & GPIO_SWITCH_SW06)
{
    // handle switch 6 press
}
```

#### void sysGpioBankSetDataDirection(UINT32 mask)

Sets the output enable for the J10 32-bit GPIO header located adjacent to the LCD display. Bits in the mask set to "1" are outputs, "0" are inputs.

#### void sysGpioBankWriteDiscretes(UINT32 data)

Writes to the 32-bit GPIO J10 header.

#### UINT32 sysGpioBankReadDiscretes(void)

Reads the state of the pins of the 32-bit GPIO J10 header.

# System ACE

These routines require that the INCLUDE\_XSYSACE constant be defined.

#### STATUS sysSystemAceSetRebootAddr(unsigned configAddr)

Sets the reboot JTAG configuration address. This address is mapped to cfgaddr0..7 as defined in XILINX.SYS in the root directory of the CF device. If this function is never invoked, then the default address is used. The default address is the address selected by the rotary switch. The given address will be rebooted if <code>sysToMonitor()</code> or <code>reset()</code> is called.

The configAddr parameter range is 0..7 (i.e. cfgaddr0..7) or -1 to select the default address.



Returns ERROR if configAddr is out of range, OK otherwise.

#### void sysSystemAceInitFS(void)

Initializes the required Wind River DosFs 2.0 libraries. Application code is not required to call this function on a BSP built with the Project facility.

#### STATUS sysSystemAceMount(char\* mountPoint, int partition)

Mount the compact flash as DOS file system volume. The mountpoint parameter is an arbitrary string labeling the device. Once mounted, refer to this mountpoint in all file accesses. The partition parameter specifies the partition to mount. If "0" is specified then the boot device is assumed to not contain a partition table (i.e. it is treated like a floppy disk).

Note: Before calling this routine, be sure to initialize the DOS file system with a call to sysSystemAceInitFS().

Note: Application code is not required to call this function on a BSP built with the Project facility with INCLUDE\_XSYSACE\_AUTOMOUNT defined.

#### LCD

These functions perform very basic operations useful for verifying the LCD is working. A more substantial library will be required if, say, someone wanted to port Quake. Screen geometry is defined in ML300.h with the constants LCD\_COLS, LCD\_ROWS, and LCD\_ROW\_ALIGNMENT.

#### void sysLcdSetColor(UINT32 rgb)

Set the entire display to the color encoded by the rgb parameter. The rgb parameter is encoded as follows: 0x00RRGGB where RR is the red component, GG is the green component, and RR is the red component. A value of 0x000000000 is black, 0x00FFFFFF is white.

#### void sysLcdDisplayColorBars(void)

Writes a test display to the LCD screen that includes 8 bars in the top half of the display and a 256 grey-scale pattern in the lower half of the display.

#### void sysLcdSetPixels(int row, int col, unsigned numPixels, UINT32 rgb)

Starting at row and column, write the RGB encoded value to consecutive pixels as they exist in the LCD's frame buffer. This is basically a horizontal line draw function. If numPixels is large enough, then the RGB color continues onto the next row. See sysLcdSetColor described above for information on the rgb parameter.

#### STATUS sysLcdSetBrightness(unsigned char value)

This routine sets the brightness level of the LCD display. Valid range is 0..255 with 0 being the dimmest setting. This setting is persistent in that the LCD keeps this setting even through power cycles.



Returns ERROR if unable to communicate with device, OK otherwise.

#### STATUS sysLcdGetBrightness(unsigned char \*value)

This routine retrieves the brightness level of the LCD display. Valid returned range is 0..255 with 0 being the dimmest setting.

Returns ERROR if unable to communicate with device, OK otherwise.

#### Power & Temperature Monitor Functions

#### void sysPowerMonCpuGet(int \*v1\_8, int \*v2\_5, int \*v3\_3, int \*v5, int \*v12)

This routine reads the two power monitor devices on the IIC bus to determine the current voltage levels on the CPU board. All voltages are returned in units of milli-volts. If the voltage cannot be read for any reason, then that voltage level is returned as SYS\_MEASUREMENT-\_ERROR. Parameters are interpreted as follows: v1\_8 = 1.8volt source, etc..

#### void sysPowerMonIoGet(int \*v1\_8, int \*v2\_5, int \*v3\_3, int \*v5, int \*v12)

This routine reads the two power monitor devices on the IIC bus to determine the current voltage levels on the IO board. All voltages are returned in units of milli-volts. If the voltage cannot be read for any reason, then that voltage level is returned as SYS\_MEASUREMENT-\_ERROR. Parameters are interpreted as follows: v1\_8 = 1.8volt source, etc..

#### void sysPowerMonShow(void)

Print the voltages from all power monitor sources to the console. If errors are encountered while reading the voltage monitors, then "Err" is displayed next to the voltage. This function requires INCLUDE\_POWERMON\_SHOW be defined in config.h or in the project facility under *development tool components* -> *show routines*.

#### void sysTemperatureMonGet(int \*cpu, int \*ambient)

This routine reads the two temperature sensing devices on the IIC bus to determine the current temperature. If the temperature cannot be read for whatever reason, then that temperature is returned as SYS\_MEASUREMENT\_ERROR. Temperature is returned in units of deg C.

#### void sysPowerMonShow(void)

Print the temperature (in deg C) for the CPU and the ambient temperature. If errors are encountered while reading the temperature monitors, then "Err" is displayed next to the temperature. INCLUDE\_TEMPERATUREMON\_SHOW be defined in config.h or in the project facility under *development tool components* -> show routines.

#### Miscellaneous Functions

#### void sysMsDelay(UINT32 delay)

Delay the specified number of milliseconds. The delay is implemented as a busy loop that occupies the CPU. The delay can be pre-empted by a higher priority task or interrupts if tasking/interrupts are enabled causing loss of delay precision.



#### void sysUsDelay(UINT32 delay)

Delay the specified number of microseconds. The delay is implemented as a busy loop that occupies the CPU. The delay can be pre-empted by a higher priority task or interrupts if tasking/interrupts are enabled causing loss of delay precision.

This function not accurate for delay times below 20us due to system overhead. The overhead is more or less constant and can be negated by the use of SYS\_US\_DELAY\_BIAS defined in config.h. Use this constant to calibrate to your system's needs. As delivered with a 300 MHz CPU clock and a bias of -2, this function is accurate within +/-15% for a 20us delay. As the delay time increases, the accuracy increases.

# **Board Specific Options**

This section discusses ML300Seg specific configuration options that can be set either in config.h or in the Project GUI. Unless otherwise stated, these options can be set by #define'ing or #undef'ing them in config.h or by defining them in the Project GUI in the project workspace's macros settings in the build tab.

Table 11-10: Custom BSP Options

Option	Description
INCLUDE_XSYSACE_INSTALLRESET_VEC	Controls whether reset code is placed the processor's reset vector address. This reset code will trigger SystemACE to load the default configuration bitstream.
INCLUDE_XSYSACE_AUTOMOUNT	Controls whether the System ACE filesystem is mounted at boot time using the next two SYSACE_constants defined in this table. This constant affects only Project builds.
SYSACE_AUTOMOUNT_POINT	Default mount point used when INCLUDE XSYSACE_AUTOMOUNT is defined in Project builds.
SYSACE_AUTOMOUNT_PARTITION	Default partition used when INCLUDE_XSYSACE AUTOMOUNT is defined in Project builds.
INCLUDE_GPIO_LED_SWITCHES	Controls whether GPIO support is present for the switches on top of the board and the LED in close proximity to those switches. If support is not included, then functions sysLedOn, sysLedOff, and sysSwitchReadState have no effect.
INCLUDE_GPIO_TEST_PORT	Controls whether GPIO support is present for the J10 I/O connector port. If support is not included, then sysGpioBank functions have no effect.
SYS_US_DELAY_BIAS	Adds the specified number of microseconds to the delay parameter in sysUsDelay(). This option can be used to cancel out overhead.
INCLUDE_LCD_CLEAR_AT_BOOT	Clears the LCD display at VxWorks boot time.



#### Table 11-10: Custom BSP Options

Option	Description
INCLUDE_LCD_BARS_AT_BOOT	Displays the color bar test screen on the LCD at VxWorks boot time. If both INCLUDE_LCD_BARSAT_BOOT and INCLUDE_LCD_CLEAR_AT_BOOT are defined, the LCD will first be cleared then the color bars will be drawn.
INCLUDE_EMAC_PHY_RESETAT_BOOT	Controls whether the Ethernet PHY is reset at boot time. In the Project GUI, this is a parameter under the emac component and can be found under <i>hardware-</i> > <i>peripherals-&gt;IP CSP-&gt; Ethernet Core.</i> Set to TRUE to enable, FALSE to disable.
INCLUDE_POWERMON_SHOW	Controls whether function sysPowerMonShow is compiled into the BSP.
INCLUDE_TEMPERATUREMONSHOW	Controls whether function sysTemperature-MonShow is compiled into the BSP.
SYS_GPIO_SWITCH_DEBOUNCE_TICKS	Sampling interval used by function sysSwitchReadState() when attempting to debounce switches. Units are in clock ticks.

# Release History

### Version 1.2/0 (seg 092402) - November 13, 2002

Written using the ML300 HW as a testbed and the 9/24/02 hand-coded version of the SEG IP load. This release supports more HW including the data cache, LCD, IIC, GPIO LEDs and switches.

This is in reality a renamed ML300 1.2/0 BSP with additional HW support and other refinements. The ML300 1.2/x BSP will be based on EDK/platgen bitstreams.

# **HW Supported**

- 16550 UART on P107 (VxWorks console)
- 16550 UART on P106
- EMAC Ethernet
- 126MB DDR RAM
- 32KB BRAM
- LCD Display
- System ACE
- PPC MMU & Instruction & Data caches
- PLB/OPB Bridge BEAR & BESR register access (seg version)
- GPIO (LEDs & Switches)
- IIC including NVRAM, temperature & power monitors, and LCD brightness.



#### **HW Not supported**

The SEG IP load used by this BSP does map control registers for the following devices, however there is no BSP support for them.

- PCI
- Parallel Port
- PS2 Ports
- USB Ports
- Audio Ports
- SPI

#### **Usage Notes**

None.

#### Errata

- 1. System mode debugging through the END connection does not work.
- 2. Serial port usage as the WDB target connection does not work. Serial port polling mode does not seem to work.

# **Insight MDFG456 Reference BSP**

This handcoded BSP was created to complement the EDK example system for the Insight MDFG456 reference board. It has been customized to work with hardware devices specific to the board. The BSP has enough support to allow application development using the Tornado tool chain.

This BSP directly supports the following hardware:

- 10/100 BaseT Ethernet on P160 module
- RS-232 Serial ports, one on main board, one on P160 module
- System ACE (requires daughter card)
- LCD Display
- GPIO (LEDs, pushbutton switches, DIP switches)
- 8MB SDRAM (Rev1 boards)
- 32KB BRAM
- 8MB Flash memory / 1MB SRAM on P160 module
- PPC405 built-in timers, instruction cache, data cache

The BSP utilizes drivers for the following IP cores:

- EMAC Ethernet: END driver type
- UART Lite on main board connector, SIO driver type on /tyco/0 (VxWorks console)
- UART Lite on P160 connectorP, SIO driver type on /tyco/1
- PLB to OPB bridge, PLB arbiter
- System ACE as a JTAG device
- System ACE as a block device for disk access (FAT32)
- INTC Interrupt controllers. 1 critical controller, 1 external controller



This BSP does not support the following hardware:

- IIC header on P160 module
- SPI header on P160 module
- PS/2 ports
- USB ports

#### Installation

#### Compact Flash & SystemACE

A compress zipfile is provided in the ace subdirectory. This is a complete image containing a bootrom and sample VxWorks images in ace and elf file formats. See the README in the ace directory for more information.

To install this image, do the following:

- 1. Make a backup of your microdrive then erase all files from it.
- 2. Uncompress the ace/compactFlash.zip file to the microdrive.
- 3. Insert the microdrive into the compact flash slot on the MDFG456.
- 4. Connect a serial port cable to the mainboard connector. Default comm settings are 19200, N, 8, 1. Note that you shouldn't use a null modem cable with this board.
- 5. Set the rotary switch on the MDFG456 to setting 6 and apply power. At this point, the VxWorks bootrom should be running and writing to the console serial port.
- 6. Set the bootrom boot line per your requirements. See **Bootroms**, page 23 for more information.

# Setting Ethernet MAC Address

This procedure assumes a working P160 module has been attached to the mainboard.

To verify your MAC address is correct perform the following steps:

- 1. Reboot the system.
- 2. Interrupt the countdown sequence to get the [VxWorks Boot]: prompt.
- Enter the "N" command (case sensitive). The current MAC will be displayed and you
  will be prompted to enter a new MAC. The first three bytes of the MAC should be
  000A35.

```
Press any key to stop auto-boot...

1
[VxWorks Boot]: N
Current Ethernet Address is: 00:0a:35:00:03:20
Modify only the last 3 bytes (board unique portion) of Ethernet Address.
The first 3 bytes are fixed at manufacturer's default address block.
00- 00
0a- 0a
35- 35
00-
```

If the MAC is valid, then press return three times to accept the default. On new boards, the address may be all FFs. If this is the case, enter the last three bytes that are assigned to the board's serial number. If you are not sure of the numbers, then enter return three times. This will change the MAC to 00:0a:35:FF:FF:FF. This will provide you with a valid MAC until the correct number is obtained. Boards with a MAC of all FFs will not be capable of



running the network stack. Multiple boards connected to the same network with the same MAC will not work either.

# **Bootrom Flash Programming**

This section will discuss steps involved with getting a VxWorks bootrom into flash memory storage using the SingleStep debugger. It is assumed the reader is familiar with the debugger and how to setup a connection to the target board.

#### Procedure

The following steps assume the target board is off, contains the FPGA bitstream associated with the example system, a VisionProbe is connected to the board, the debugger is not running, and "bootrom" or "bootrom\_uncmp" has been created (see **Creating Bootroms**, page 23).

- 1. Ensure DIP switch #2 is set to the ON position and turn the target board on. LED1 should be flashing. If a different bitstream other than the one that came with the example system is being used, then the DIP switch and LED behavior may be different.
- 2. Start the SingleStep debugger. Click "Debug without a file" then click "OK" to connect to the target board.
- 3. Go to the main menu and select "Tools" then "Vision Flash Utility".
- 4. Click the "Files" tab and press the "Convert" button. Select the file to program.
- 5. In the "File Conversion" dialog, change the "start address" to 0x10000 for "bootrom" or 0xC00000 for "bootrom\_uncmp" image types. Click the "Add the newly converted file to the flash file list" check box, then click "Convert". The file should be converted from ELF to a binary representation with the resulting .bin added to the binary files list.
- 6. Click on the newly created file then click "Edit". Change the start address to 0xDE020000 then select "OK". This address corresponds to the first main block of flash memory. If the bitstream has changed the base address of flash then use the appropriate value (base + 0x20000).
- 7. Click the "toggle enable" button. The "Enabled" field in the file list should change from NOT ENABLED to ENABLED. Now click the "Configuration" tab to setup which flash programming algorithm to utilize.
- 8. In the folder window select Devices -> AMD -> 29DL32xxB -> 2048x16 -> 2 Devices. In the "Device Configuration" fields, enter the base address of the flash array at 0xDE000000. In the "Erase Range" fields select block #'s 8 through 31.
- 9. Click the "Program tab". Select the "Initialize Target" checkbox. Click "Erase/Program" to write the bootrom to flash memory.

#### Troubleshooting

Problem: SingleStep never finishes the programming operation.

Erasing and programming can take up to 3 minutes to complete. During this operation, SingleStep shows a progress bar. If this progress stops for more than a few minutes then emulator configuration settings may be incorrect. Verify "trap exception" is set to yes and the workspace is set to a valid writable RAM space. This check is done using the emulator command window. At the "SingleStep>" prompt, enter "vsh", then enter "cf". The emulator settings are listed. Change as required.



#### Problem: The bootline and MAC address have been overwritten.

The BSP uses the first block of flash to store the bootline and MAC address. The flash erase range may have been set to erase this block. You will need to adjust the erase range to leave this block untouched. If this occurs, then the bootline and MAC will have to be reset. See **Bootline**, page 24 and **Setting Ethernet MAC Address**, page 55.

# **Bootstrap Information**

The default bitstream contains bootstrap code that performs the following algorithm when the processor is reset:

```
if (DIP switch #2 == "ON")
{
    Flash LED #1 forever;
}
else
{
    Turn on LEDs #1,#2,#3,#4;
    Jump to flash address 0xDE020000;
}
```

DIP #2, when in the "ON" position, keeps the processor from running amok until SystemACE completes its download or an emulator connects to the target board.

When "OFF", the processor will begin executing instruction in flash memory where a VxWorks bootrom or some other OS loader resides. If there is no flash, or nothing programmed into flash, or no GPIO with LED/DIP connections in the bitstream, then there will likely be an exception to address 0xFFFF0200, 0xFFFF0100, or 0xFFFF0700. If there is nothing at these address, then the processor will remain stuck there in an exception loop.

# **Memory Maps**

Due to the nature of this evaluation board a full memory map is not given in this document. The user is instead referenced to "C" source code header file xparameters.h. This source file provides a memory map for all CSP devices. A partial map is given here that relates directly to BSP operation.

Table 11-11: System Memory Map

Device	Start (hex)	End (hex)	Size (bytes)
PLB SDRAM	00000000	007FFFFF	32 MB
OPB Space	40000000	DFFFFFF	2.5 GB
PLB BRAM	FFFF8000	FFFFFFF	32 KB



#### RAM Memory Map

MDFG456 follows VxWorks conventions for RAM usage for PowerPC processors. Refer to Appendix F of the *VxWorks 5.4 Programmer's Guide*.

Table 11-12: RAM Memory Map

Physical Address Range (hex)	Usage
00000000000000FF	(SDRAM) Unused & undefined
0000010000002FFF	(SDRAM) Interrupt Vector table
0000300000010000	(SDRAM) VxWorks usage. Exception reason message and other VxWorks constructs are at the bottom of this region. Initial stack is set at the top of this range and grows downward. Once VxWorks has switched to multi-tasking mode, this stack is no longer used.
0001000000BFFFFF	(SDRAM) RAM_LOW_ADRS. VxWorks image, interrupt stack, host memory pool, and heap space.
00C0000001FFFFFF	(SDRAM) RAM_HIGH_ADRS. Two possible uses. (1) VxWorks bootrom image and heap space. (2) VxWorks heap space.
48000000480FFFFF	(SRAM) This memory is resident on the P160 communications add-on module and is part of the Toshiba flash memory device. This memory area is used for network buffers.
FFFF8000FFFFFFF	(BRAM) Address FFFFFFC contains reset vector.

## Flash Memory Map

The P160 communications module contains 8MB of flash memory implemented on two Toshiba parts. These parts are wired together to form a 32 bit memory width. The flash blocks are not of uniform size. Smaller "parameter" blocks reside at the beginning of the addressing range of these parts. The BSP uses the first one of these eight parameter blocks. The remaining parameter blocks are not used. The "main" blocks can be used to store a VxWorks image or any other user data. The "hidden" block is not utilized by this BSP.

Table 11-13: Flash Memory Map

Offset Byte Address Range (hex)	Usage
0000000000003FFF	First parameter block used for NVRAM storage VxWorks boot line at offset [0255] Ethernet mac address at offset [3FFA-3FFF]
000040000001FFFF	Remaining parameter blocks unused
000200000031FFFF	VxWorks image <sup>1</sup>
00320000007FFFFF	Unused

<sup>&</sup>lt;sup>1</sup> This region can be enlarged past 0x00320000 to accommodate big VxWorks images. ROM\_TEXT\_SIZE in config.h and the BSP makefile must be changed to reflect the larger range.



# **OPB Memory Map**

Table 11-14: OPB Memory Map (unused areas not shown)

Physical Address Range (hex)	Usage
48000000480FFFFF	SRAM
5FFFFF005FFFFFF	EMC control
600000006000FFFF	OPB peripherals
DE000000DE7FFFF	Flash memory

### **NVRAM Memory Map**

NVRAM support is provided by the Toshiba flash memory. The first parameter block of this flash array is reserved for NVRAM. A special NVRAM to flash driver is utilized by the BSP at \$WIND\_BASE/src/drv/mem/nvRamToFlash.c. This driver uses functions in sysFlash.c to read/write parameters to NVRAM.

When there is no flash support, the BSP will replace the NVRAM driver with \$WIND\_BASE/src/drv/mem/nullNvRam.c which provides only function stubs so that VxWorks will link. When this is the case, the default bootline is used (see config.h) and the Ethernet MAC address defaults to: 00:0a:35:00:00.

Table 11-15: NVRAM Memory Map

Part Offset Range (hex)	sysNvRamGet/Set Offset	Usage
000000FF	000000FF	Reserved for VxWorks bootline
01003FF9	01003FF9	Unused
3FFA3FFF	3FFA3FFF	Ethernet MAC address

#### Caches

The caches are configured by the following constants in MDFG456  $\cdot$  h. These constants map to the PPC cache control registers of the same name. See PPC405 documentation for further information on these registers:

- MDFG456\_ICCR\_VAL Initial contents of the ICCR register (instruction cacheability attribute).
- MDFG456\_DCCR\_VAL Initial contents of the DCCR register (data cacheability attribute).
- MDFG456\_DCWR\_VAL Initial contents of the DCWR register (write back/through attribute).
- MDFG456\_SGR\_VAL Initial contents of the SGR register (guarded attribute).



Table 11-16: Cache Map

Physical Address Range (hex)	I Cache	D Cache	Write Back/Thr ough	Guarded
0000000.01FFFFFF	Y	Y <sup>1</sup>	Back	N
F8000000FFFFFFF	Y	Y	N/A	N
everything else	N	N	N/A	N

<sup>&</sup>lt;sup>1</sup> Rev1 boards require data caching enabled in this address range. This is due to a SDRAM design error that prevents byte and half-word access.

# **External Interrupts**

There are two INTC interrupt controller IP cores in the design. One is wired to the external interrupt signal of the PPC405 and the other to the critical interrupt signal.

PLB/OPB bridges & arbiters are wired to the critical INTC instance. If these interrupt sources are enabled and the PPC machine check interrupt is enabled then VxWorks may reboot when an exception occurs. This is because the PLB/OPB bridge/arbiter will assert their interrupt signal when they cannot complete a transaction to the INTC. This signal will propagate to the PPC as a critical interrupt exception (vector 0x100). At the same time the PPC will detect a bad bus cycle and generate a machine check exception (vector 0x200). VxWorks will begin handling the first exception, but during this time the second exception arrives. VxWorks architecturally does not allow this and will reboot the system when it occurs.

It is not recommended to sysIntCritEnable() one of these interrupt sources. Instead, use the VxWorks excHookAdd() function to use your own function perform custom exception processing (after VxWorks finishes its own processing). Here, the hook function can examine the bridges/arbiters and perform whatever task is required for the event.

#### **GPIO Switches & LEDs**

LEDs 1, 2, 3, and 4 are available for application use. Pushbutton switches 1,2, and 3 are available for application use. DIP switches 1-4 are reserved for HW and BSP use. DIP switches 5-8 are available for application use.



Table 11-17: DIP Switch Usage

Number	Use
1	Controls JTAG muxing between SystemACE and the CPU debug port. This feature is implemented by the bitstream.
2	Controls whether system boots from flash memory. When set to "ON", the processor spins in a loop flashing LED1 forever. When set to "OFF", all LEDs are illuminated and control is transferred to flash memory. This feature is implemented by the bootstrap program located in BRAM and incorporated into the bitstream.
3	Reserved for future use
4	Reserved for future use
5	Available for application use
6	Available for application use
7	Available for application use
8	Available for application use

#### **Board API**

This section will not go over CSP device driver functions. Instead the user is directed to the appropriate ip\_csp/xsrc/<device>.c file for documentation and usage.

There are a handful of "board level" BSP functions not implemented by the CSP device drivers. Prototypes for these functions are located in:

config/MDFG456/sysLibExtra.h.

#### Standard I/O

The BSP comes with stdin, stdout, and stderr directed through the UART on the main board. The default UART baud rate is set to 19200, no parity, 8 data bits, and 1 stop bit. The secondary UART on the P160 communications is enabled and ready for application usage. It defaults to 19200 baud, no parity, 8 data bits, and 1 stop bit.

#### **GPIO**

Two instances of GPIO can be included in the BSP. The first instance controls the momentary push button switches, their surrounding LEDs, and the bank of 8 DIP switches. The second GPIO instance controls the LCD display. Both instances require that INCLUDE XGPIO constant be defined.

DIP switches 1-4 are reserved for the bitstream and for the BSP. Application code may use switches 5-8.

#### void sysLedOn(UINT32 mask)

Turns on LEDs in the mask. Bits set to one cause the associated LED to be illuminated. The mask is built using constants  $\texttt{GPIO\_OUT\_LEDx}$  defined in MDFG456. h where x is the LED number on the PCB. This function requires  $\texttt{INCLUDE\_XGPIO}$  be defined.



#### void sysLedOff(UINT32 mask)

Turns off LEDs in the mask. Bits set to one cause the associated LED to be turned off. The mask is built using constants <code>GPIO\_OUT\_LEDx</code> defined in <code>MDFG456.h</code> where <code>x</code> is the LED number on the PCB. This function requires <code>INCLUDE\_XGPIO</code> be defined.

#### UINT32 sysSwitchReadState(void)

Reads the state of all the push button switches. A mask is returned describing which switches are closed (i.e. being pushed). The mask is decoded using constants GPIO\_IN\_PUSHx defined in MDFG456.h where x is the switch on the PCB. This function requires INCLUDE\_XGPIO be defined. Usage example:

```
UINT32 mask = sysSwitchReadState();
if (mask & GPIO_IN_PUSH3)
{
    // handle switch 3 press
}
```

#### UINT32 sysDipReadState(void)

Reads the state of all the DIP switches. A mask is returned describing which switches are in the "ON" position. The mask is decoded using constants GPIO\_IN\_DIPx defined in MDFG456.h where x is the DIP switch position on the PCB. This function requires INCLUDE\_XGPIO be defined. Usage example:

```
UINT32 mask = sysDipReadState();
if (mask & GPIO_IN_DIP5)
{
    // handle DIP #5 being "on"
}
```

# System ACE

These routines require that the INCLUDE\_XSYSACE constant be defined.

#### STATUS sysSystemAceSetRebootAddr(unsigned configAddr)

Sets the reboot JTAG configuration address. This address is mapped to cfgaddr0..7 as defined in XILINX.SYS in the root directory of the CF device. If this function is never invoked, then the default address is used. The default address is the address selected by the rotary switch. The given address will be rebooted if sysToMonitor() or reset() is called.

The configAddr parameter range is 0..7 (i.e. cfgaddr0..7) or -1 to select the default address.

Returns ERROR if configAddr is out of range, OK otherwise.

#### void sysSystemAceInitFS(void)

Initializes the required Wind River DosFs 2.0 libraries. Application code is not required to call this function on a BSP built with the Project facility.



#### STATUS sysSystemAceMount(char\* mountPoint, int partition)

Mount the compact flash as DOS file system volume. The mountpoint parameter is an arbitrary string labeling the device. Once mounted, refer to this mountpoint in all file accesses. The partition parameter specifies the partition to mount. If "0" is specified then the boot device is assumed to not contain a partition table (i.e. it is treated like a floppy disk).

Note: Before calling this routine, be sure to initialize the DOS file system with a call to sysSystemAceInitFS().

Note: Application code is not required to call this function on a BSP built with the Project facility with INCLUDE\_XSYSACE\_AUTOMOUNT defined.

#### LCD

This board contains a LCD character display capable of displaying 1 or 2 lines of characters. Control of the display is handled using GPIO lines. The BSP sets up the LCD display for two lines using the 5x8 character matrix with no cursor. This setup provides a 2x16 character window.

Low level functions are available to write instructions and data to the device (see sysLcdWriteInstruction() and sysLcdWriteData() in section GPIO, page 61).

#### void sysLcdWriteString(char\* string)

This function clears the display then writes the given string to it. The string parameter may truncate in the display if too long. A null string will clear the display. If string contains the newline character "\n", then characters following it will be placed in the 2nd line of the display. If more than one newline is present, then the text following the last newline will be written to the 2nd line of the display.

This function assumes LCD display characteristics have not been changed since sysLcdInit() was invoked at boot time. If display font or line mode have been changed, then the string may look scrambled in the display.

#### void sysLcdWriteInstruction(UINT8 data)

This function clocks in an instruction command to the LCD device. Application code can use this function to perform low level operations to the LCD display.

#### void sysLcdWriteData(UINT8 data)

This function clocks in data to the LCD device's internal RAM. This function is typically used to place a character somewhere in the device's memory. Application code can use this function to perform low level operations to the LCD display.



#### Miscellaneous Functions

#### void sysMsDelay(UINT32 delay)

Delay the specified number of milliseconds. The delay is implemented as a busy loop that occupies the CPU. The delay can be pre-empted by a higher priority task or interrupts if tasking/interrupts are enabled causing loss of delay precision.

#### void sysUsDelay(UINT32 delay)

Delay the specified number of microseconds. The delay is implemented as a busy loop that occupies the CPU. The delay can be pre-empted by a higher priority task or interrupts if tasking/interrupts are enabled causing loss of delay precision.

This function not accurate for delay times below 20us due to system overhead. The overhead is more or less constant and can be negated by the use of SYS\_US\_DELAY\_BIAS defined in config.h. Use this constant to calibrate to your system's needs.

# **Board Specific Options**

This section discusses MDFG456 specific configuration options that can be set either in config.h or in the Project GUI. Unless otherwise stated, these options can be set by #define'ing or #undef'ing them in config.h or by defining them in the Project GUI in the project workspace's macros settings in the build tab.

Table 11-18: Custom BSP Options

Option	Description
INCLUDE_P160_COMM_MODULE	Controls whether code used to control peripherals is eligible to be compiled into the BSP. P160 has an ethernet controller, flash/SRAM memories, and a UART amongst other things.
INCLUDE_XSYSACE_INSTALLRESET_VEC	Controls whether reset code is placed the processor's reset vector address. This reset code will trigger SystemACE to load the default configuration bitstream.
INCLUDE_XSYSACE_AUTOMOUNT	Controls whether the System ACE filesystem is mounted at boot time using the next two SYSACE_constants defined in this table. This constant affects only Project builds.
SYSACE_AUTOMOUNT_POINT	Default mount point used when INCLUDE XSYSACE_AUTOMOUNT is defined in Project builds.
SYSACE_AUTOMOUNT_PARTITION	Default partition used when INCLUDE_XSYSACEAUTOMOUNT is defined in Project builds.
INCLUDE_BOOT_FLASH	Sets the BSP up to boot from Flash memory. If not defined, then SystemACE is assumed to be the bootstrap device.



Table 11-18: Custom BSP Options (Continued)

Option	Description
SYS_US_DELAY_BIAS	Adds the specified number of microseconds to the delay parameter in sysUsDelay(). This option can be used to cancel out overhead.
INCLUDE_EMAC_PHY_RESETAT_BOOT	Controls whether the Ethernet PHY is reset at boot time. In the Project GUI, this is a parameter under the emac component and can be found under <i>hardware</i> -> <i>peripherals-&gt;IP CSP-&gt; Ethernet Core</i> . Set to TRUE to enable, FALSE to disable.
SYS_GPIO_SWITCH_DEBOUNCE_TICKS	Sampling interval used by function sysSwitchReadState() when attempting to debounce switches. Units are in clock ticks.
SYS_LCD_INIT_DISPLAY	If this character constant is defined, then it's value will be written to the LCD display at boot time.  Requires GPIO support (INCLUDE_XGPIO).

# Release History

#### Version 1.2/0 - January 10, 2003

First release for Tornado 2.0. Not all hardware is supported.

# **HW Supported**

- Main board UART (console). IP core is UartLite.
- Main board SDRAM 32MB
- Main board LEDs (1-4)
- Main board push button switches (1-3)
- Main board DIP switch (1-8)
- Main board LCD display
- P160 daughter board UART. IP core is a UartLite.
- P160 daughter board Flash/SRAM.
- P160 daughter board Ethernet. IP core is a Emac.

#### **HW Not supported**

- System ACE daughter board.
- P160 daughter board IIC header
- P160 daughter board SPI header
- P160 daughter board USB port.
- P160 daughter board PS/2 port.

#### Errata

- 1. System mode debugging through the END connection does not work.
- 2. Serial port usage as the WDB target connection does not work. Serial port polling mode does not seem to work.



- 3. Rev1 evaluation boards have mis-wired SDRAM that requires all accesses occur in 32 bit divisible quantities. This problem is worked around by enabling the data cache at bootstrap time and leaving it on. Instruction fetches always occur in 32 bit divisible quantities.
- 4. Since System ACE is not supported in this revision (it will be in future revisions), the only way to get a VxWorks image downloaded into the target is via an emulator.
- 5. Ethernet links have been iffy on two sample Rev1 boards this BSP has been tested on. If the link LED on the P160 board does not illuminate after applying power to the target (assuming there is a cable connected between the RJ45 jack and another network device), then try reseating the P160, emulator connector, and RS232 connectors. Once the link is established, it seems to remain that way.
- 6. Use non null-modem cabling for the RS-232 serial ports.
- 7. System not tested with MMU enabled.
- 8. System hangs when PLB error occurs.

#### Version 1.2/1 - February10, 2003

- Added support for System ACE.
- Added flash booting capability.
- Corrected Rev 1.2/0 release history information.

#### Errata

- 1. System mode debugging through the END connection does not work.
- 2. Serial port usage as the WDB target connection does not work. Serial port polling mode does not seem to work.
- 3. Rev1 evaluation boards have mis-wired SDRAM that requires all accesses occur in 32 bit divisible quantities. This problem is worked around by enabling the data cache at bootstrap time and leaving it on. Instruction fetches always occur in 32 bit divisible quantities.
- 4. Since System ACE is not supported in this revision (it will be in future revisions), the only way to get a VxWorks image downloaded into the target is via an emulator.
- 5. Ethernet links have been iffy on two sample Rev1 boards this BSP has been tested on. If the link LED on the P160 board does not illuminate after applying power to the target (assuming there is a cable connected between the RJ45 jack and another network device), then try reseating the P160, emulator connector, and RS232 connectors. Once the link is established, it seems to remain that way.
- 6. Use non null-modem cabling for the RS-232 serial ports.
- 7. System not tested with MMU enabled.
- 8. SystemACE requires DIP #1 to be set to the "OFF" position to download data to the FPGA. VisionProbe requires the switch set to the "ON" position. If connecting to the target with the emulator after a SystemACE download, move the switch from "OFF" to "ON" then connect.

# These BSP on Other Boards

The BSPs discussed here can be used directly on other development hardware such as the Xilinx AFX Evaluation board. Modifications will be required to the BSP to account for a differing list of CSP peripherals and the amount and type of RAM.

First step is to remove all unsupported peripheral drivers from the BSP. This can be done by following steps in the section titled **Configuration**, page 18.

Next step is to change the amount and type of RAM the BSP recognizes. This can be done by editing the constant LOCAL\_MEM\_SIZE. If not using the Tornado project facility, this constant can be modified by editing its definition in config.h. If using the Tornado Project facility, this constant can be modified by changing its property definition in the memory folder.

Other areas to watch out for are constants defined by xparameters.h. These constants must match the VirtexII Pro bitstream. If they do not then all kinds of problems can be expected such as bus errors. Key constants to watch out for:

- XPAR\_CPU\_PPC405\_CORE\_CLOCK\_FREQ\_HZ
- XPAR\_UARTNS550\_0\_CLOCK\_HZ
- XPAR\_<device>\_BASEADDR
- XPAR\_INTC\_0\_<device>\_x\_VEC\_ID

# **Troubleshooting**

# **Project Creation**

Issues seen when creating a Tornado Project based on the ML300 BSP.

# "Project Creation Error" Dialog Pop-up

Scroll to the end of the box and if it contains error messages complaining about missing header files dpartCbio.h and dcacheCbio.h, then you don't have the DosFS 2.0 libraries installed in your system.



# SingleStep

Issues seen when using SingleStep with this BSP.



# Source browser not displaying source code at addresses where source code should be

Try to rebuild everything with the -gdwarf compiler option.

# Tornado Crosswind debugger

Issues seen when using Tornado's IDE debugger with this BSP.

# Source browser not displaying source code at addresses where source code should be

Is the -gdwarf option enabled in the compiler? Try to rebuild everything with the -g compiler option.

# **Target Shell Issues**

Issues seen when using the built-in target shell.

#### Relocation value does not fit in 24 bits message from Loader

This is seen when a system contains more than 32MB of memory. Recompile your source code using the -mlongcall compiler option.

#### **Ethernet Issues**

Issues seen when integrating/using the XEmac Ethernet adapter

#### Network interface xemac unknown. Message from console at boot

There are multiple causes to this problem.

- 1. Did you compile the XEmac component into the BSP? In the Tornado Project facility, check that both *hardware->peripherals->IP CSP->Ethernet EMAC* and *EMAC END* components are included. On command line BSP builds, is INCLUDE\_XEMAC and INCLUDE\_XEMAC\_END declared in ip\_config.h and not #undef'd anywhere.
- 2. In the Tornado Project facility, if you remove then later restore network support, Project fails to restore "END" driver support. Check folder *network components*
  \*network devices and verify that both END attach interface and END interface support components are included.

# Insight MDFG456 Issues

Issues specific to the MDFG456 reference board.

#### VisionProbe not communicating with target board

Ensure DIP switch #1 is set to the "ON" position.

#### SystemACE not downloading

Ensure DIP switch #1 is set to the "OFF" position

# **References**

- Tornado BSP Developer's Kit for VxWorks User's Guide
- VxWorks 5.4 Programmer's Guide



Tornado 2.0 User's Guide

# **Revision History**

The following table shows the revision history for this document.

Date	Version	Revision	
02/07/03	1.0	Combined IPSPEC124 and 138 into this document	
07/10/03	1.1	Added more information regarding bootroms	



# Device Driver Summary

# **Summary**

Xilinx provides full featured device drivers for its Processor IP cores. The device driver architecture is described in the Device Driver Programmer Guide, which is contained in the Processor IP Reference Guide.

A summary of device drivers and links to the Application Programming Interface (API) documentation for each device driver are provided <a href="https://example.com/here.">here.</a>



# Automatic Generation of Tornado 2.x (VxWorks 5.x) Board Support Packages

## **Overview**

One of the key embedded system development activities is the development of the Board Support Package (BSP). Creation of a BSP can be a lengthy and tedious process that must be incurred every time the microprocessor complex (processor plus associated peripherals) changes. While managing these changes applies to any microprocessor-based project, the changes can come about more rapidly than ever with the advent of programmable System-on-Chip (SoC) hardware.

This document describes a tool, BSP Generator (*BSPgen*), which automatically generates a customized BSP for various microprocessor, peripheral, and RTOS combinations. This tool enables embedded system designers to:

- Substantially decrease development cycles (decrease time-to-market)
- Create a BSP which matches the application (customized BSP)
- Eliminate BSP design bugs (automatically created based on certified components)
- Enable application software developers (don't have to wait for BSP development)

*BSPgen* is currently used in conjunction with the Xilinx Embedded Development Kit (EDK). Through this kit, the user can choose to automatically create a BSP based on an embedded system just created. The BSP contains all the necessary support software for a system, including boot code, device drivers, and RTOS initialization. The BSP is customized based on the type of operating system, processor, and peripherals chosen by the user for the FPGA-based embedded system.

The only types of BSPs currently supported by *BSPgen* are for the WindRiver VxWorks 5.4/5.5 operating systems and Tornado 2.0.2/2.2 IDE, in conjunction with the IBM PowerPC 405 microprocessor core.

# Tool/User Input

*BSPgen* requires a description of the embedded system in order to customize the BSP. The system description includes the type of processor(s) in the system, the types of peripherals and bus connections, interrupt connections, versions of peripherals and device drivers, and any other information needed to generate a functional BSP. This system description is typically provided by the tool that invokes *BSPgen*. But the user, of course, is ultimately responsible for input of the system through the tool.

In addition, information about the BSP to be generated is provided. This information includes the type of operating system, the directory location where the BSP will reside, and the name of the BSP.



The user may also have to decide which peripherals, or devices, are tightly integrated into the operating system. Tight integration typically means the device driver is connected directly to the operating system through an OS interface, such as a network stack or a serial I/O interface. Other devices are loosely integrated into the OS, which means that although there is no standard interface to access the device, the user can access the device by using the device driver directly from the application.

# Template-Based Approach

A set of BSP template files are released with *BSPgen*. Every operating system supported has a corresponding set of template files. These template files are used during creation of the BSP, making appropriate modifications based on the makeup of the FPGA-based embedded system.

If the user chooses not to automatically generate a BSP, these template files could be used as a reference for building a BSP from scratch.

## **Device Drivers**

A set of device driver source files are released with the EDK and reside in an installation directory. During creation of a customized BSP, device driver source code is copied from this installation directory to the BSP directory. Only the source code pertaining to the devices built into the FPGA-based embedded system are copied. This copy provides the user with a self-contained, standalone BSP directory which can be modified by the user if necessary and/or relocated if necessary. If the user makes changes to the device driver source code for this BSP and sometime later wishes to back those changes out, the user can use the EDK tools to regenerate the BSP. Device driver source files are then recopied from the installation directory to the BSP.

# **Backups**

If the directory location of the BSP contains existing files, these files are copied into a backup directory before being overwritten. This prevents the inadvertent loss of changes made by the user to BSP source files. The backup directory resides within the BSP directory and is named <code>backup<timestamp></code>, where <code><timestamp></code> represents the current date and time.

# Generating the Tornado BSP

# Using the Embedded Development Kit (EDK)

Xilinx Platform Studio (XPS) is available in the EDK and is a graphical design entry and implementation tool for a PPC405- or MicroBlaze-based embedded system. This section describes the steps needed to invoke *BSPgen* and create a Tornado BSP using XPS. These steps pertain to EDK version 6.2 and later.

- Select the operating system and core clock frequency
   In the software settings for the PPC instance, select the operating system using the Software Platform tab. In this case, we want to select a VxWorks5\_x operating system. In addition, the Tornado BSP needs to know the frequency of the CPU. In the Processor and Drivers Parameters tab, enter the Core Clk Freq field (in Hz) under the Processor Parameters fields.
- 2. Configure the VxWorks console device



If you intend to use a serial device, such as a Uart, as the VxWorks console, select or enter the instance name of the serial device as the STDIN/STDOUT peripheral in the Library/OS Parameters tab. It is important to enter the same device for both STDIN and STDOUT. Currently, *BSPgen* supports only the Uart 16550/16450 and UartLite devices as VxWorks console devices.

#### 3. Integrate the device drivers

#### a. Configure all drivers with Level 1 interface

This step is no longer necessary for projects created with EDK 6.2 or later. If you are working with an EDK 6.2 project that was originally created in EDK 6.1, you may have driver levels indicated in the Processor and Drivers Parameters tab. In general, all drivers that you want accessible from your VxWorks application or tightly integrated into VxWorks need to be configured as Level 1 drivers. Only if there is no Level 1 interface for a driver will its Level 0 interface be made available in the Tornado BSP.

#### b. Connect to VxWorks

There is a Connected Peripherals dialog box available in the Library/OS Parameters tab. Using this dialog box, you will want to Add those peripherals that can be tightly integrated with the OS, including the device you selected as the STDIN/STDOUT peripheral. See the section "Device Integration" for more details on tight integration of devices.

#### c. Overwrite MDD Parameters

In the Processor and Drivers Parameters tab, under Driver Parameters, there may be parameter values that you need to override. Please look at the value of these parameters and determine if they suffice for your needs.

#### 4. Generate the Tornado BSP

In the Tools menu of XPS, the menu item "Generate Libraries and BSPs" can be selected to invoke *BSPgen*. The output of this invocation is shown in the XPS output window. Once *BSPgen* is done, the resulting Tornado BSP should exist under the PPC405 instance subdirectory of the user's EDK project. For example, if in XPS the user has named their PPC405 instance *myppc405*, then the Tornado BSP will reside at *<user project>/myppc405/bsp\_myppc405*.

# The Tornado 2.x BSP

This section assumes the reader is familiar with WindRiver's Tornado 2.0.2 or 2.2 IDE. It describes the Tornado BSP output by *BSPgen*.

# Integration with IDE

The automatically generated BSP is integrated into the Tornado IDE and Project facility. The BSP can be compiled from the command-line using the Tornado make tools, or from the Tornado Project facility (also referred to as the Tornado GUI). Once the BSP has been generated, the user can simply type <code>make vxWorks</code> from the command-line to compile a bootable RAM image. This assumes the Tornado environment has been previously set up, which can be done via the command-line using the <code>host/x86-win32/bin/torVars.bat</code> script if on a Windows platform. If using the Tornado Project facility, the user can create a project based on the newly generated BSP, then use the build environment provided through the GUI to compile the BSP.

In Tornado 2.2, the *diab* compiler is supported in addition to the *gnu* compiler. The Tornado BSP created by *BSPgen* has a Makefile that can be modified by the command-line



user to use the diab compiler instead of the gnu compiler. Look for the make variable named TOOLS and set the value to "diab" instead of "gnu". If using the Tornado Project facility, the user can select the desired tool when the project is first created.

The file 50<csp\_name>.cdf resides in the BSP directory and is tailored during creation of the BSP. This file integrates the CSP device drivers into the Tornado GUI. CSPs hook themselves into the BSP at the hardware/peripherals sub-folder. Below this is a Core library folder and individual device driver folders. Figure 13-1 shows the look of the GUI given the CSP name "IP".

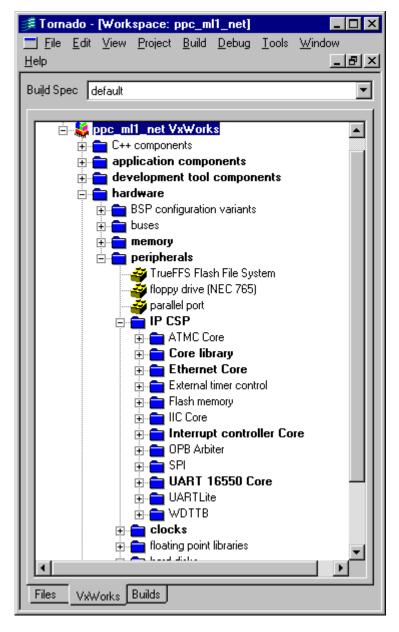


Figure 13-1: Tornado 2.x Project GUI - VxWorks

The "Files" tab of the Tornado Project GUI will also show a number of new files used to integrate the CSP device drivers into the Tornado build process. Once again, these files are



automatically created by *BSPgen*. The user need only be aware of that the files exist. These files are prefixed with the name of the CSP. Figure 13-2 shows an example of the CSP build files.

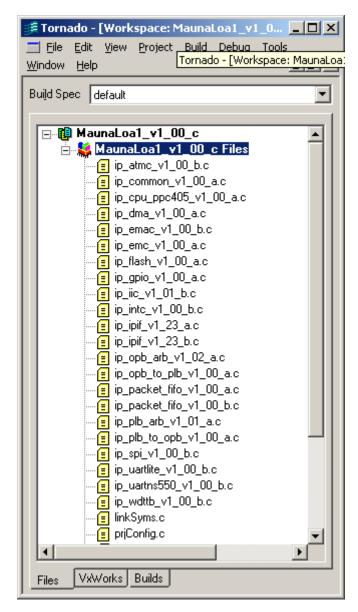


Figure 13-2: Tornado 2.x Project GUI - Files

# **Device Integration**

Devices in the FPGA-based embedded system have varying degrees of integration with the VxWorks operating system. The degree of integration may be selectable by the user through the system generation tools. Below is a list of currently supported devices and their level of integration.

A UART 16450/16550/Lite can be integrated into the VxWorks Serial I/O (SIO) interface. This makes the UART available for file I/O and printf/stdio. Only one



UART device can be selected as the console, where standard I/O (stdin, stdout, and stderr) is directed. Reference the *sysSerial.c* file of the BSP to see details of this integration.

- Ethernet 10/100 MAC, Ethernet Lite 10/100, and Gigabit Ethernet MAC can be integrated into the VxWorks Enhanced Network Driver (END) interface. This makes the device available to the VxWorks network stack and thus socket-level applications. Reference the *configNet.h* and *sysNet.c* files of the BSP to see details of this integration.
- An Interrupt controller can be connected to the VxWorks exception handling and the PowerPC 405 external non-critical interrupt pin. *BSPgen* does not currently handle interrupt controller integration for the critical interrupt pin of the PPC405. However, the user is always free to manually add this integration in the *sysInterrupt.c* file of the BSP.
- A System ACE controller can be connected to VxWorks as a block device, allowing the
  user to attach a filesystem to the CompactFlash device connected to the System ACE
  controller. The user must manually call BSP functions to initialize the System
  ACE/CompactFlash as a block device and attach it to the DOS operating system. The
  functions currently available to the user are: sysSystemAceInitFS() and
  sysSystemAceMount(). Reference the file sysSystemAce.c in the BSP for more details.
- A PCI bridge can be initialized and made available to the standard VxWorks PCI driver and configuration functions. The user is encouraged to edit the config.h and sysBusPci.c BSP files to tailor the PCI memory addresses and configuration for their target system.
- All other devices and associated device drivers are not tightly integrated into a VxWorks interface. Instead, they are loosely integrated and access to these devices is available by directly accessing the associated device drivers from the user's application.

# Device Driver Location and BSP Directory Tree

The automatically generated BSP contains boot code, device driver code, and initialization code. The BSP resembles most other Tornado BSPs except for the placement of device driver code. Off-the-shelf device driver code distributed with the Tornado IDE typically resides in the <code>target/src/drv</code> directory in the Tornado distribution directory. Device driver code for a BSP that is automatically generated resides in the BSP directory itself. This minor deviation is due to the dynamic nature of FPGA-based embedded system. Since the FPGA-based embedded system can be reprogrammed with new or changed IP, the device driver configuration can change, calling for a more dynamic placement of device driver source files.

The directory tree for the automatically generated BSP is shown below.



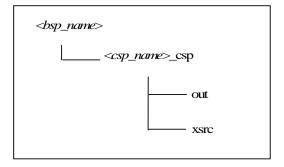


Figure 13-3: BSP directory tree

The top-level directory is named according to the name of the BSP the user provides. The customized BSP source files reside in this directory. There is a subdirectory within the BSP directory named according to the name of the CSP the user provides. The CSP directory contains two subdirectories. The *xsrc* subdirectory contains all the device driver related source files. The *out* subdirectory is created during the build process and only exists if building from the command-line. It contains files generated during the compilation or build process (e.g., the .o files for each driver source file). If building from the Project facility, the files generated during the build process reside at \$PRJ\_DIR/\$BUILD\_SPEC/<*csp\_name>*\_csp.

#### Limitations

The automatically generated BSP should be considered a good starting point for the user, but should not be expected to meet all the user's needs. Due to the potential complexities of a BSP, the variety of features that can be included in a BSP, and the support necessary for board devices external to the FPGA, the automatically generated BSP will likely require enhancements by the user. However, the generated BSP will be compilable and will contain the necessary device drivers represented in the FPGA-based embedded system. Some of the commonly used devices are also integrated with the operating system. Specific limitations are listed below.

- An interrupt controller connected to the PPC405 critical interrupt pin is not automatically integrated into VxWorks' interrupt scheme. Only the external interrupt is currently supported.
- Bus error detection from bus bridges or arbiters is not supported.
- User-defined cores or drivers in the EDK are not supported through the bspgen flow.
  That is, device drivers associated with user-defined cores, or user-defined device
  drivers associated with EDK cores, are not copied nor integrated into the resulting
  BSP.
- The command-line Tornado BSP defaults to use the GNU compiler. The user must manually change the Makefile to use the DIAB compiler, or specifiy the DIAB compiler when creating a Tornado project based on the BSP.
- There is no automatic support for bootroms.
- PPC405 caches are disabled by default. The user must enable caches manually through the config.h file or the Tornado project menu.