

# Libraries Guide

ISE 6.ii



"Xilinx" and the Xilinx logo shown above are registered trademarks of Xilinx, Inc. Any rights not expressly granted herein are reserved. CoolRunner, RocketChips, Rocket IP, Spartan, StateBENCH, StateCAD, Virtex, XACT, XC2064, XC3090, XC4005, and XC5210 are registered trademarks of Xilinx, Inc.



The shadow X shown above is a trademark of Xilinx, Inc.

ACE Controller, ACE Flash, A.K.A. Speed, Alliance Series, AllianceCORE, Bencher, ChipScope, Configurable Logic Cell, CORE Generator, CoreLINX, Dual Block, EZTag, Fast CLK, Fast CONNECT, Fast FLASH, FastMap, Fast Zero Power, Foundation, Gigabit Speeds...and Beyond!, HardWire, HDL Bencher, IRL, J Drive, JBits, LCA, LogiBLOX, Logic Cell, LogiCORE, LogicProfessor, MicroBlaze, MicroVia, MultiLINX, NanoBlaze, PicoBlaze, PLUSASM, PowerGuide, PowerMaze, QPro, Real-PCI, RocketIO, SelectIO, SelectRAM, SelectRAM+, Silicon Xpresso, Smartguide, Smart-IP, SmartSearch, SMARTswitch, System ACE, Testbench In A Minute, TrueMap, UIM, VectorMaze, VersaBlock, VersaRing, Virtex-II Pro, Virtex-II EasyPath, Wave Table, WebFITTER, WebPACK, WebPOWERED, XABEL, XACT-Floorplanner, XACT-Performance, XACTstep Advanced, XACTstep Foundry, XAM, XAPP, X-BLOX +, XC designated products, XChecker, XDM, XEPLD, Xilinx Foundation Series, Xilinx XDTV, Xinfo, XSI, XtremeDSP and ZERO+ are trademarks of Xilinx, Inc.

The Programmable Logic Company is a service mark of Xilinx, Inc.

All other trademarks are the property of their respective owners.

Xilinx, Inc. does not assume any liability arising out of the application or use of any product described or shown herein; nor does it convey any license under its patents, copyrights, or maskwork rights or any rights of others. Xilinx, Inc. reserves the right to make changes, at any time, in order to improve reliability, function or design and to supply the best product possible. Xilinx, Inc. will not assume responsibility for the use of any circuitry described herein other than circuitry entirely embodied in its products. Xilinx provides any design, code, or information shown or described herein "as is." By providing the design, code, or information as one possible implementation of a feature, application, or standard, Xilinx makes no representation that such implementation is free from any claims of infringement. You are responsible for obtaining any rights you may require for your implementation. Xilinx expressly disclaims any warranty whatsoever with respect to the adequacy of any such implementation, including but not limited to any warranties or representations that the implementation is free from claims of infringement, as well as any implied warranties of merchantability or fitness for a particular purpose. Xilinx, Inc. devices and products are protected under U.S. Patents. Other U.S. and foreign patents pending. Xilinx, Inc. does not represent that devices shown or products described herein are free from patent infringement or from any other third party right. Xilinx, Inc. assumes no obligation to correct any errors contained herein or to advise any user of this text of any correction if such be made. Xilinx, Inc. will not assume any liability for the accuracy or correctness of any engineering or software support or assistance provided to a user.

Xilinx products are not intended for use in life support appliances, devices, or systems. Use of a Xilinx product in such applications without the written consent of the appropriate Xilinx officer is prohibited.

The contents of this manual are owned and copyrighted by Xilinx. Copyright 1994-2003 Xilinx, Inc. All Rights Reserved. Except as stated herein, none of the material may be copied, reproduced, distributed, republished, downloaded, displayed, posted, or transmitted in any form or by any means including, but not limited to, electronic, mechanical, photocopying, recording, or otherwise, without the prior written consent of Xilinx. Any unauthorized use of any material contained in this manual may violate copyright laws, trademark laws, the laws of privacy and publicity, and communications regulations and statutes.

# About This Guide

---

The Libraries Guide is part of the ISE documentation collection.

## Guide Contents

This guide contains the following:

- Discussion of the [Xilinx Unified Libraries](#)
- [Slice Count](#) information for FPGAs
- A listing of the various [Functional Categories](#) of design elements
- [Architecture Specific Information](#) chapters
- Individual chapters for each of the [Design Elements](#)

## Additional Resources

For additional information, go to <http://support.xilinx.com>. The following table lists some of the resources you can access from this website. You can also directly access these resources using the provided URLs.

Resource	Description/URL
Tutorials	Tutorials covering Xilinx design flows, from design entry to verification and debugging <a href="http://support.xilinx.com/support/techsup/tutorials/index.htm">http://support.xilinx.com/support/techsup/tutorials/index.htm</a>
Answer Browser	Database of Xilinx solution records <a href="http://support.xilinx.com/xlnx/xil_ans_browser.jsp">http://support.xilinx.com/xlnx/xil_ans_browser.jsp</a>
Application Notes	Descriptions of device-specific design techniques and approaches <a href="http://support.xilinx.com/apps/appsweb.htm">http://support.xilinx.com/apps/appsweb.htm</a>
Data Book	Pages from <i>The Programmable Logic Data Book</i> , which contains device-specific information on Xilinx device characteristics, including readback, boundary scan, configuration, length count, and debugging <a href="http://support.xilinx.com/partinfo/databook.htm">http://support.xilinx.com/partinfo/databook.htm</a>
Problem Solvers	Interactive tools that allow you to troubleshoot your design issues <a href="http://support.xilinx.com/support/troubleshoot/psolvers.htm">http://support.xilinx.com/support/troubleshoot/psolvers.htm</a>
Tech Tips	Latest news, design tips, and patch information for the Xilinx design environment <a href="http://www.support.xilinx.com/xlnx/xil_tt_home.jsp">http://www.support.xilinx.com/xlnx/xil_tt_home.jsp</a>

## Conventions

This document uses the following conventions. An example illustrates each convention.

### Typographical

The following typographical conventions are used in this document:

Convention	Meaning or Use	Example
Courier font	Messages, prompts, and program files that the system displays	speed grade: - 100
Courier bold	Literal commands that you enter in a syntactical statement	<b>ngdbuild</b> <i>design_name</i>
Helvetica bold	Commands that you select from a menu	<b>File → Open</b>
	Keyboard shortcuts	<b>Ctrl+C</b>
<i>Italic font</i>	Variables in a syntax statement for which you must supply values	<b>ngdbuild</b> <i>design_name</i>
	References to other manuals	See the <i>Development System Reference Guide</i> for more information.
	Emphasis in text	If a wire is drawn so that it overlaps the pin of a symbol, the two nets are <i>not</i> connected.
Square brackets [ ]	An optional entry or parameter. However, in bus specifications, such as <b>bus[ 7:0 ]</b> , they are required.	<b>ngdbuild</b> [ <i>option_name</i> ] <i>design_name</i>
Braces { }	A list of items from which you must choose one or more	<b>lowpwr</b> = { <b>on</b>   <b>off</b> }
Vertical bar	Separates items in a list of choices	<b>lowpwr</b> = { <b>on</b>   <b>off</b> }
Vertical ellipsis . . .	Repetitive material that has been omitted	IOB #1: Name = QOUT' IOB #2: Name = CLKIN' . . .
Horizontal ellipsis ...	Repetitive material that has been omitted	<b>allow block</b> <i>block_name loc1 loc2 ... locn</i> ;

### Online Document

The following conventions are used in this document:

Convention	Meaning or Use	Example
Blue text	Cross-reference link to a location in the current document	See the section “ <a href="#">Additional Resources</a> ” for details. Refer to “ <a href="#">Title Formats</a> ” in <a href="#">Chapter 1</a> for details.

Convention	Meaning or Use	Example
Red text	Cross-reference link to a location in another document	See <b>Figure 2-5</b> in the <i>Virtex-II Handbook</i> .
<u>Blue, underlined text</u>	Hyperlink to a website (URL)	Go to <a href="http://www.xilinx.com">http://www.xilinx.com</a> for the latest speed files.

## What's New in This Release

The following design elements have been removed from the current release:

- GT10\_3GIO\_n
- MUXF8\_D
- MUXF8\_L

The following design elements have been added to the current release:

- IBUFDS\_DIFF\_OUT



# Table of Contents

---

## About This Guide

Guide Contents .....	3
Additional Resources .....	3
Conventions .....	4
Typographical .....	4
Online Document .....	4
What's New in This Release .....	5

## Xilinx Unified Libraries

Overview .....	19
Applicable Architectures .....	20
Functional Categories .....	20
Design Elements .....	20
Schematic Examples .....	20
Naming Conventions .....	21
Attributes and Constraints .....	21
Carry Logic .....	21
Spartan-II, Spartan-IIE, Virtex, and Virtex-E .....	21
Virtex-II, Virtex-II Pro, Virtex-II Pro X, and Spartan-3 .....	22
Flip-Flop, Counter, and Register Performance .....	22
Unconnected Pins .....	24

## Slice Count

About Configurable Logic Blocks (CLBs) .....	25
Slice Count for FPGA Components .....	25

## Architecture Specific Information

Spartan-II and Spartan-IIE .....	41
Spartan-3 .....	43
Virtex and Virtex-E .....	47
Virtex-II, Virtex-II Pro, Virtex-II Pro X .....	49
XC9500/XV/XL .....	53
CoolRunner XPLA3 .....	55
CoolRunner-II .....	57
CoolRunner-IIS .....	59

## Functional Categories

Arithmetic Functions .....	63
Buffers .....	65

<b>Comparators</b> .....	69
<b>Counters</b> .....	71
<b>Decoders</b> .....	89
<b>Edge Decoders</b> .....	91
<b>Flip-Flops</b> .....	93
<b>General</b> .....	103
<b>Input Latches</b> .....	109
<b>Input/Output Flip-Flops</b> .....	111
<b>Input/Output Functions</b> .....	117
<b>Latches</b> .....	123
<b>Logic Primitives</b> .....	127
<b>Map Elements</b> .....	137
<b>Multiplexers</b> .....	139
<b>Memory Elements</b> .....	141
<b>Shifters</b> .....	143
<b>Shift Registers</b> .....	145

## Design Elements

<b>ACC1</b> .....	153
<b>ACC4, 8, 16</b> .....	157
<b>ADD1</b> .....	165
<b>ADD4, 8, 16</b> .....	167
<b>ADSU1</b> .....	175
<b>ADSU4, 8, 16</b> .....	179
<b>AND2-9</b> .....	185
<b>AND12, 16</b> .....	193
<b>BRLSHFT4, 8</b> .....	197
<b>BSCAN_SPARTAN2</b> .....	201
<b>BSCAN_SPARTAN3</b> .....	203
<b>BSCAN_VIRTEX</b> .....	205
<b>BSCAN_VIRTEX2</b> .....	209
<b>BUF</b> .....	211
<b>BUF4, 8, 16</b> .....	213
<b>BUFCF</b> .....	215
<b>BUFE, 4, 8, 16</b> .....	217
<b>BUFG</b> .....	221
<b>BUFGCE</b> .....	223
<b>BUFGCE_1</b> .....	225
<b>BUFGDLL</b> .....	227
<b>BUFGMUX</b> .....	229
<b>BUFGMUX_1</b> .....	233
<b>BUFGP</b> .....	237



<b>BUFGSR</b> .....	241
<b>BUFGTS</b> .....	243
<b>BUFT, 4, 8, 16</b> .....	245
<b>CAPTURE_SPARTAN2</b> .....	249
<b>CAPTURE_SPARTAN3</b> .....	253
<b>CAPTURE_VIRTEX</b> .....	255
<b>CAPTURE_VIRTEX2</b> .....	257
<b>CB2CE, CB4CE, CB8CE, CB16CE</b> .....	259
<b>CB2CLE, CB4CLE, CB8CLE, CB16CLE</b> .....	265
<b>CB2CLED, CB4CLED, CB8CLED, CB16CLED</b> .....	271
<b>CB2RE, CB4RE, CB8RE, CB16RE</b> .....	279
<b>CB2RLE, CB4RLE, CB8RLE, CB16RLE</b> .....	285
<b>CB2X1, CB4X1, CB8X1, CB16X1</b> .....	289
<b>CB2X2, CB4X2, CB8X2, CB16X2</b> .....	295
<b>CBD2CE, CBD4CE, CBD8CE, CBD16CE</b> .....	301
<b>CBD2CLE, CBD4CLE, CBD8CLE, CBD16CLE</b> .....	305
<b>CBD2CLED, CBD4CLED, CBD8CLED, CBD16CLED</b> .....	309
<b>CBD2RE, CBD4RE, CBD8RE, CBD16RE</b> .....	315
<b>CBD2RLE, CBD4RLE, CBD8RLE, CBD16RLE</b> .....	319
<b>CBD2X1, CBD4X1, CBD8X1, CBD16X1</b> .....	323
<b>CBD2X2, CBD4X2, CBD8X2, CBD16X2</b> .....	329
<b>CC8CE, CC16CE</b> .....	335
<b>CC8CLE, CC16CLE</b> .....	341
<b>CC8CLED, CC16CLED</b> .....	347
<b>CC8RE, CC16RE</b> .....	355
<b>CD4CE</b> .....	361
<b>CD4CLE</b> .....	365
<b>CD4RE</b> .....	371
<b>CD4RLE</b> .....	375
<b>CDD4CE</b> .....	381
<b>CDD4CLE</b> .....	385
<b>CDD4RE</b> .....	389
<b>CDD4RLE</b> .....	393
<b>CJ4CE, CJ5CE, CJ8CE</b> .....	399
<b>CJ4RE, CJ5RE, CJ8RE</b> .....	403
<b>CJD4CE, CJD5CE, CJD8CE</b> .....	407
<b>CJD4RE, CJD5RE, CJD8RE</b> .....	411
<b>CLK_DIV2,4,6,8,10,12,14,16</b> .....	415
<b>CLK_DIV2,4,6,8,10,12,14,16R</b> .....	417
<b>CLK_DIV2,4,6,8,10,12,14,16RSD</b> .....	419
<b>CLK_DIV2,4,6,8,10,12,14,16SD</b> .....	421
<b>CLKDLL</b> .....	423

<b>CLKDLLE</b> .....	429
<b>CLKDLLHF</b> .....	433
<b>COMP2, 4, 8, 16</b> .....	437
<b>COMPM2, 4, 8, 16</b> .....	441
<b>COMPMC8, 16</b> .....	447
<b>CR8CE, CR16CE</b> .....	451
<b>CRD8CE, CRD16CE</b> .....	455
<b>D2_4E</b> .....	459
<b>D3_8E</b> .....	461
<b>D4_16E</b> .....	465
<b>DCM</b> .....	471
<b>DEC_CC4, 8, 16</b> .....	481
<b>DECODE4, 8, 16</b> .....	483
<b>DECODE32, 64</b> .....	487
<b>FD</b> .....	491
<b>FD_1</b> .....	495
<b>FD4, 8, 16</b> .....	497
<b>FD4CE, FD8CE, FD16CE</b> .....	501
<b>FD4RE, FD8RE, FD16RE</b> .....	505
<b>FDC</b> .....	509
<b>FDC_1</b> .....	513
<b>FDCE</b> .....	517
<b>FDCE_1</b> .....	521
<b>FDCP</b> .....	525
<b>FDCP_1</b> .....	529
<b>FDCPE</b> .....	533
<b>FDCPE_1</b> .....	537
<b>FDD</b> .....	541
<b>FDD4,8,16</b> .....	545
<b>FDD4CE, FDD8CE, FDD16CE</b> .....	547
<b>FDD4RE, FDD8RE, FDD16RE</b> .....	549
<b>FDDC</b> .....	553
<b>FDDCE</b> .....	557
<b>FDDCP</b> .....	561
<b>FDDCPE</b> .....	565
<b>FDDP</b> .....	569
<b>FDDPE</b> .....	573
<b>FDDR</b> .....	577
<b>FDDRCPE</b> .....	579
<b>FDDRE</b> .....	583
<b>FDDRRSE</b> .....	587
<b>FDDRS</b> .....	591

<b>FDDRSE</b> .....	595
<b>FD DS</b> .....	597
<b>FDDSE</b> .....	599
<b>FDDSR</b> .....	601
<b>FDDSR E</b> .....	605
<b>FDE</b> .....	607
<b>FDE_1</b> .....	611
<b>FDP</b> .....	615
<b>FDP_1</b> .....	619
<b>FDPE</b> .....	623
<b>FDPE_1</b> .....	627
<b>FDR</b> .....	631
<b>FDR_1</b> .....	635
<b>FDRE</b> .....	639
<b>FDRE_1</b> .....	643
<b>FDRS</b> .....	647
<b>FDRS_1</b> .....	651
<b>FDRSE</b> .....	655
<b>FDRSE_1</b> .....	659
<b>FDS</b> .....	663
<b>FDS_1</b> .....	667
<b>FDSE</b> .....	671
<b>FDSE_1</b> .....	675
<b>FDSR</b> .....	679
<b>FDSRE</b> .....	683
<b>FJKC</b> .....	685
<b>FJKCE</b> .....	689
<b>FJKCP</b> .....	693
<b>FJKP</b> .....	697
<b>FJKCPE</b> .....	701
<b>FJKPE</b> .....	705
<b>FJKRSE</b> .....	711
<b>FJKSRE</b> .....	715
<b>FMAP</b> .....	719
<b>FTC</b> .....	723
<b>FTCE</b> .....	727
<b>FTCLE</b> .....	731
<b>FTCLEX</b> .....	735
<b>FTCP</b> .....	739
<b>FTCPE</b> .....	743
<b>FTCPLE</b> .....	747
<b>FTDCE</b> .....	751

<b>FTDCLE</b> .....	755
<b>FTDCLEX</b> .....	759
<b>FTDCP</b> .....	763
<b>FTDRSE</b> .....	767
<b>FTDRSLE</b> .....	771
<b>FTP</b> .....	775
<b>FTPE</b> .....	779
<b>FTPLE</b> .....	783
<b>FTRSE</b> .....	787
<b>FTRSLE</b> .....	791
<b>FTSRE</b> .....	795
<b>FTSRLE</b> .....	799
<b>GND</b> .....	803
<b>GT_AURORA_n</b> .....	805
<b>GT_CUSTOM</b> .....	829
<b>GT_ETHERNET_n</b> .....	839
<b>GT_FIBRE_CHAN_n</b> .....	863
<b>GT_INFINIBAND_n</b> .....	887
<b>GT_XAUI_n</b> .....	911
<b>GT10_AURORA_n</b> .....	935
<b>GT10_AURORAX_n</b> .....	961
<b>GT10_CUSTOM</b> .....	979
<b>GT10_INFINIBAND_n</b> .....	989
<b>GT10_XAUI_n</b> .....	995
<b>GT10_10GE_n</b> .....	1021
<b>GT10_10GFC_n</b> .....	1039
<b>GT10_OC48_n</b> .....	1053
<b>GT10_OC192_n</b> .....	1073
<b>GT10_PCI_EXPRESS_n</b> .....	1087
<b>IBUF, 4, 8, 16</b> .....	1111
<b>IBUF_selectIO</b> .....	1113
<b>IBUFDS</b> .....	1125
<b>IBUFG, IBUFG_selectIO</b> .....	1129
<b>IBUFGDS</b> .....	1135
<b>IBUFGDS_DIFF_OUT</b> .....	1139
<b>ICAP_VIRTEX2</b> .....	1141
<b>IFD, 4, 8, 16</b> .....	1143
<b>IFD_1</b> .....	1147
<b>IFDDRCPE</b> .....	1149
<b>IFDDRRSE</b> .....	1153
<b>IFDI</b> .....	1157
<b>IFDI_1</b> .....	1159

<b>IFDX, 4, 8, 16</b> .....	1161
<b>IFDX_1</b> .....	1165
<b>IFDXI</b> .....	1167
<b>IFDXI_1</b> .....	1169
<b>ILD, 4, 8, 16</b> .....	1171
<b>ILD_1</b> .....	1177
<b>ILDI</b> .....	1179
<b>ILDI_1</b> .....	1181
<b>ILDY, 4, 8, 16</b> .....	1183
<b>ILDY_1</b> .....	1187
<b>ILDYI</b> .....	1189
<b>ILDYI_1</b> .....	1193
<b>INV, 4, 8, 16</b> .....	1195
<b>IOBUF, IOBUF_selectIO</b> .....	1199
<b>IOBUFDS</b> .....	1207
<b>IOBUFE</b> .....	1209
<b>IOPAD, 4, 8, 16</b> .....	1211
<b>IPAD, 4, 8, 16</b> .....	1213
<b>JTAGPPC</b> .....	1215
<b>KEEPER</b> .....	1219
<b>LD</b> .....	1221
<b>LD4, 8, 16</b> .....	1225
<b>LD_1</b> .....	1229
<b>LDC</b> .....	1233
<b>LDC_1</b> .....	1237
<b>LDCE</b> .....	1241
<b>LDCE_1</b> .....	1245
<b>LD4CE, LD8CE, LD16CE</b> .....	1249
<b>LDCP</b> .....	1253
<b>LDCP_1</b> .....	1257
<b>LDCPE</b> .....	1261
<b>LDCPE_1</b> .....	1265
<b>LDE</b> .....	1269
<b>LDE_1</b> .....	1273
<b>LDG</b> .....	1277
<b>LDG4, 8, 16</b> .....	1279
<b>LDP</b> .....	1281
<b>LDP_1</b> .....	1285
<b>LDPE</b> .....	1289
<b>LDPE_1</b> .....	1293
<b>LUT1, 2, 3, 4</b> .....	1297
<b>LUT1_D, LUT2_D, LUT3_D, LUT4_D</b> .....	1303

LUT1_L, LUT2_L, LUT3_L, LUT4_L .....	1311
M2_1 .....	1317
M2_1B1 .....	1321
M2_1B2 .....	1325
M2_1E .....	1329
M4_1E .....	1333
M8_1E .....	1337
M16_1E .....	1341
MULT_AND .....	1345
MULT18X18 .....	1349
MULT18X18S .....	1353
MUXCY .....	1355
MUXCY_D .....	1359
MUXCY_L .....	1363
MUXF5 .....	1367
MUXF5_D .....	1369
MUXF5_L .....	1371
MUXF6 .....	1373
MUXF6_D .....	1375
MUXF6_L .....	1377
MUXF7 .....	1379
MUXF7_D .....	1381
MUXF7_L .....	1383
MUXF8 .....	1385
NAND2-9 .....	1387
NAND12, 16 .....	1393
NOR2-9 .....	1397
NOR12, 16 .....	1403
OBUF, 4, 8, 16 .....	1407
OBUF_selectIO .....	1411
OBUFDS .....	1417
OBUFFE, 4, 8, 16 .....	1421
OBUFFT, 4, 8, 16 .....	1425
OBUFFT_selectIO .....	1429
OBUFFTDS .....	1435
OFD, 4, 8, 16 .....	1439
OFD_1 .....	1445
OFDDRCPE .....	1447
OFDDRRSE .....	1451
OFDDRTCPE .....	1455
OFDDRTRSE .....	1459
OFDE, 4, 8, 16 .....	1463

OFDE_1 .....	1467
OFDI .....	1469
OFDI_1 .....	1473
OFDT, 4, 8, 16 .....	1477
OFDT_1 .....	1481
OFDX, 4, 8, 16 .....	1483
OFDX_1 .....	1487
OFDXI .....	1489
OFDXI_1 .....	1493
OPAD, 4, 8, 16 .....	1495
OR2-9 .....	1497
OR12, 16 .....	1503
ORCY .....	1507
PPC405 .....	1509
PULLDOWN .....	1525
PULLUP .....	1527
RAM16X1D .....	1529
RAM16X1D_1 .....	1533
RAM16X1S .....	1537
RAM16X1S_1 .....	1539
RAM16X2D .....	1543
RAM16X2S .....	1545
RAM16X4D .....	1549
RAM16X4S .....	1553
RAM16X8D .....	1557
RAM16X8S .....	1561
RAM32X1D .....	1565
RAM32X1D_1 .....	1569
RAM32X1S .....	1573
RAM32X1S_1 .....	1575
RAM32X2S .....	1579
RAM32X4S .....	1583
RAM32X8S .....	1587
RAM64X1D .....	1593
RAM64X1D_1 .....	1597
RAM64X1S .....	1601
RAM64X1S_1 .....	1605
RAM64X2S .....	1609
RAM128X1S .....	1613
RAM128X1S_1 .....	1617
RAMB4_Sn .....	1621
RAMB4_Sm_Sn .....	1625

<b>RAMB16_Sn</b> .....	1633
<b>RAMB16_Sm_Sn</b> .....	1651
<b>ROC</b> .....	1683
<b>ROCBUF</b> .....	1685
<b>ROM16X1</b> .....	1687
<b>ROM32X1</b> .....	1691
<b>ROM64X1</b> .....	1695
<b>ROM128X1</b> .....	1699
<b>ROM256X1</b> .....	1703
<b>SOP3-4</b> .....	1707
<b>SR4CE, SR8CE, SR16CE</b> .....	1709
<b>SR4CLE, SR8CLE, SR16CLE</b> .....	1713
<b>SR4CLED, SR8CLED, SR16CLED</b> .....	1717
<b>SR4RE, SR8RE, SR16RE</b> .....	1723
<b>SR4RLE, SR8RLE, SR16RLE</b> .....	1727
<b>SR4RLED, SR8RLED, SR16RLED</b> .....	1731
<b>SRD4CE, SRD8CE, SRD16CE</b> .....	1735
<b>SRD4CLE, SRD8CLE, SRD16CLE</b> .....	1739
<b>SRD4CLED, SRD8CLED, SRD16CLED</b> .....	1743
<b>SRD4RE, SRD8RE, SRD16RE</b> .....	1749
<b>SRD4RLE, SRD8RLE, SRD16RLE</b> .....	1753
<b>SRD4RLED, SRD8RLED, SRD16RLED</b> .....	1757
<b>SRL16</b> .....	1761
<b>SRL16_1</b> .....	1765
<b>SRL16E</b> .....	1769
<b>SRL16E_1</b> .....	1773
<b>SRLC16</b> .....	1777
<b>SRLC16_1</b> .....	1781
<b>SRLC16E</b> .....	1783
<b>SRLC16E_1</b> .....	1787
<b>STARTBUF_architecture</b> .....	1791
<b>STARTUP_SPARTAN2</b> .....	1793
<b>STARTUP_SPARTAN3</b> .....	1797
<b>STARTUP_VIRTEX</b> .....	1801
<b>STARTUP_VIRTEX2</b> .....	1805
<b>TOC</b> .....	1809
<b>TOCBUF</b> .....	1811
<b>VCC</b> .....	1813
<b>UPAD</b> .....	1815
<b>XNOR2-9</b> .....	1817
<b>XOR2-9</b> .....	1825
<b>XORCY</b> .....	1831



<b>XORCY_D</b> .....	1833
<b>XORCY_L</b> .....	1835



# *Xilinx Unified Libraries*

---

This chapter describes the Unified Libraries and the applicable device architectures for each library. It also briefly discusses the contents of the other chapters, the general naming conventions, and performance issues.

This chapter consists of the following major sections.

- “Overview”
- “Applicable Architectures”
- “Functional Categories”
- “Design Elements”
- “Schematic Examples”
- “Naming Conventions”
- “Attributes and Constraints”
- “Carry Logic”
- “Flip-Flop, Counter, and Register Performance”
- “Unconnected Pins”

## Overview

Xilinx maintains software libraries with thousands of functional design elements (primitives and macros) for different device architectures. New functional elements are assembled with each release of development system software. The catalog of design elements is known as the Unified Libraries. Elements in these libraries are common to all Xilinx device architectures. This “unified” approach means that you can use your circuit design created with “unified” library elements across all current Xilinx device architectures that recognize the element you are using.

Elements that exist in multiple architectures look and function the same, but their implementations might differ to make them more efficient for a particular architecture. A separate library still exists for each architecture (or architectural group) and common symbols are duplicated in each one, which is necessary for simulation (especially board level) where timing depends on a particular architecture.

If you have active designs that were created with former Xilinx library primitives or macros, you may need to change references to the design elements that you were using to reflect the Unified Libraries elements.

The *Libraries Guide* describes the primitive and macro logic elements available in the Unified Libraries for the Xilinx FPGA and CPLD devices. Common logic functions can be implemented with these elements and more complex functions can be built by combining macros and primitives. Several hundred design elements (primitives and

macros) are available across multiple device architectures, providing a common base for programmable logic designs.

This libraries guide provides a functional selection guide and describes the design elements.

## Applicable Architectures

Design elements for the Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex -II, Virtex-II Pro, Virtex-II Pro X, XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II libraries are included in the Xilinx Unified Libraries. Each library supports specific device architectures. For detailed information on the architectural families referenced below and the devices in each, see the current version of *The Programmable Logic Data Book* (an online version is available from the Xilinx web site, <http://support.xilinx.com>).

## Functional Categories

The functional categories list the available elements in each category along with a brief description of each element and an applicability table identifying which libraries (Spartan-II, Spartan-IIE, Virtex, Virtex-E, Virtex -II, Virtex-II Pro, Virtex-II Pro X, XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II) contain the element.

## Design Elements

Design elements are organized in alphanumeric order, with all numeric suffixes in ascending order. For example, FDR precedes FDRS, and ADD4 precedes ADD8, which precedes ADD16.

The following information is provided for each library element, where applicable:

- Graphic symbol
- Applicability table (with primitive versus macro identification)
- Functional description
- Truth table
- Schematic for macros
- VHDL and Verilog instantiation and inference code
- Commonly used constraints



## Schematic Examples

Schematics are included for each library if the implementation differs.


Design elements with bussed or multiple I/O pins (2-, 4-, 8-, 16-bit versions) typically include just one schematic -- generally the 8-bit version. When only one schematic is included, implementation of the smaller and larger elements differs only in the number of sections. In cases where an 8-bit version is very large, an appropriate smaller element serves as the schematic example.

## Naming Conventions

Examples of the general naming conventions for the unified library elements are shown in the following figures.

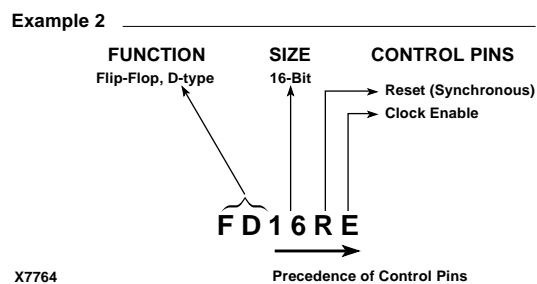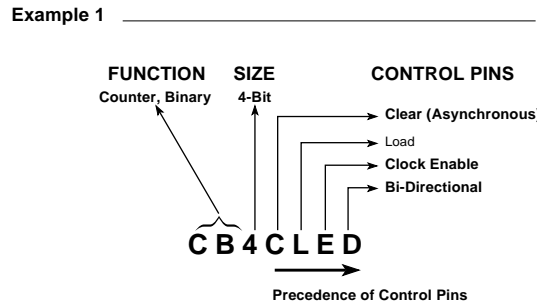

### Naming Conventions

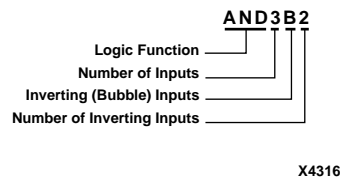

### Combinatorial Naming Conventions

## Attributes and Constraints

Attributes and constraints are instructions placed on components or nets to indicate their placement, implementation, naming, directionality, and so forth. The *Constraints Guide* provides information on all attributes and constraints.

## Carry Logic

The Spartan-II, Spartan-IIE, Virtex, and Virtex-II architectures include dedicated carry logic components.

### Spartan-II, Spartan-IIE, Virtex, and Virtex-E

Carry Logic for Spartan-II, Spartan-IIE, Virtex, and Virtex-E is a simple structure associated with each look-up table. The design entry library contains the following dedicated carry logic primitives: MULT\_AND, MUXCY, MUXCY\_D, MUXCY\_L, XORCY, XORCY\_D, and XORCY\_L. The function performed is determined by their

connectivity and the contents of the look-up table. For an example of how to use carry logic, see “[CC8CE](#), [CC16CE](#)”.

For detailed information on Carry Logic in Virtex and Spartan-II, see *The Programmable Logic Data Book* available on the Xilinx web site, <http://support.xilinx.com>.

## Virtex-II, Virtex-II Pro, Virtex-II Pro X, and Spartan-3

The dedicated carry logic primitives for Virtex-II, Virtex-II Pro, Virtex-II Pro X, and Spartan-3 are MULT\_AND, MUXCY, MUXCY\_D, MUXCY\_L, XORCY, XORCY\_D, and XORCY\_L.

ORCY can only be used exclusively with Virtex-II, Virtex-II Pro, and Virtex-II Pro X.


For detailed information on Carry Logic in Virtex-II, Virtex-II Pro, Virtex-II Pro X, and Spartan-3, see *The Programmable Logic Data Book* available on the Xilinx web site, <http://support.xilinx.com>.

## Flip-Flop, Counter, and Register Performance


All counter, register, and storage functions derived from the flip-flops are available in the Configurable Logic Blocks (CLBs).


The D flip-flop is the basic building block for all architectures. Differences occur from the availability of asynchronous Clear (CLR) and Preset (PRE) inputs, and the source of the synchronous control signals, such as Clock Enable (CE), Clock (C), Load enable (L), synchronous Reset (R), and synchronous Set (S). The basic flip-flop configuration for each architecture follows.

The basic XC9000 flip-flops have both Clear and Preset inputs.

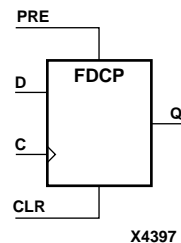

Virtex and Spartan-II have two basic flip-flop types. One has both Clear and Preset inputs and one has both asynchronous and synchronous control functions.

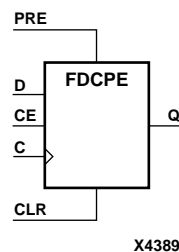

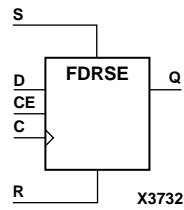

The asynchronous and synchronous control functions, when used, have a priority that is consistent across all devices and architectures. These inputs can be either active-High or active-Low as defined by the macro. The priority, from highest to lowest, is as follows.


- Asynchronous Clear (CLR)
- Asynchronous Preset (PRE)
- Synchronous Set (S)
- Synchronous Reset (R)
- Clock Enable (CE)

**Note:** The asynchronous CLR and PRE inputs, by definition, have priority over all the synchronous control and clock inputs.

For FPGA families, the Clock Enable (CE) function is implemented using two different methods in the Xilinx Unified Libraries; both are shown in the following figure.

- In method 1, CE is implemented by connecting the CE pin of the macro directly to the dedicated Enable Clock (EC) pin of the internal Configurable Logic Block (CLB) flip-flop. This allows one CE per CLB. CE takes precedence over the L, S, and R inputs. All flip-flops with asynchronous clear or preset use this method.
- In method 2, CE is implemented using function generator logic. This allows two CEs per CLB. CE has the same priority as the L, S, and R inputs. All flip-flops with synchronous set or reset use this method.

The method used in a particular macro is indicated by the inclusion of asynchronous clear, asynchronous preset, synchronous set, or synchronous reset in the macro's description.

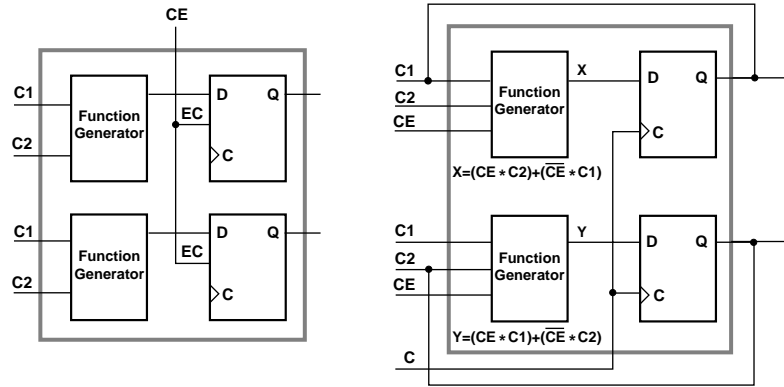

**Method 1**  
CE implemented using dedicated EC pin.

**Method 2**  
CE implemented as a function generator input.

X4675

### Clock Enable Implementation Methods

## Unconnected Pins

Xilinx recommends that you *always* connect input pins in your designs. This ensures that front end simulation functionally matches back end timing simulation. If an input pin is left unconnected, mapper errors may result.

If an output pin is left unconnected in your design, the corresponding function is trimmed. If the component has only one output, the entire component is trimmed. If the component has multiple outputs, the portion that drives the output is trimmed. As an example of the latter case, if the overflow pin (OFL) in an adder macro is unconnected, the logic that generates that term is trimmed, but the rest of the adder is retained (assuming all of the sum outputs are connected).



# Slice Count

This chapter contains the following sections.

- [About Configurable Logic Blocks \(CLBs\)](#)
- [Slice Count for FPGA Components](#)

## About Configurable Logic Blocks (CLBs)

Configurable Logic Blocks (CLBs) implement most of the logic in an FPGA.

Each Virtex, Virtex-E and Spartan-II, Spartan-IIE CLB contains two slices. Each Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X CLB contains four slices. In the following table, the numbers for Spartan-II, Spartan-IIE, Virtex, Virtex-E, Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X are the number of slices required to implement the component.

The Slice Count table lists FPGA design elements in alphanumeric order with the number of CLBs or slices needed for their implementation in each applicable library.

**Note:** This information is for reference only. The actual count could vary, depending upon the switch settings of the implementation tools; for example, the effort level in PAR (Place and Route) or usage of the components with other components.

The asterisk for the RAM16X1D and RAM16X1D\_1 in the Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X columns indicates that these design elements consume 1/2 of two slices.

The double asterisks for design elements indicate that these primitives cannot be used by themselves. However, there is only one available per slice.

## Slice Count for FPGA Components

	Spartan-II, Spartan-IIE	Spartan-3	Virtex, Virtex-E	Virtex-II, Virtex-II Pro, Virtex-II Pro X
Name	Number of Slices to Implement			
ACC4	5	6	5	6
ACC8	9	10	9	10
ACC16	17	18	17	18
ADD4	3	3	3	3
ADD8	5	5	5	5
ADD16	9	9	9	9
ADSU4	3	3	3	3
ADSU8	5	5	5	5
ADSU16	9	9	9	9

## Slice Count for FPGA Components

	Spartan-II, Spartan-II E	Spartan-3	Virtex, Virtex-E	Virtex-II, Virtex-II Pro, Virtex-II Pro X
Name	Number of Slices to Implement			
AND2	1	1	1	1
AND3	1	1	1	1
AND4	1	1	1	1
AND5	1	1	1	1
AND6	1	1	1	1
AND7	1	1	1	1
AND8	2	2	2	2
AND9	2	2	2	2
AND12	2	2	2	2
AND16	2	2	2	2
BRLSHFT4	8	4	8	4
BRLSHFT8	12	12	12	12
BSCAN_SPARTAN2	-	-	-	-
BSCAN_VIRTEX	-	-	-	-
BSCAN_VIRTEX2	-	-	-	-
BUF	-	-	-	-
BUF4	-	-	-	-
BUF8	-	-	-	-
BUF16	-	-	-	-
BUFCF	-	-	-	-
BUFE	-	-	-	-
BUFE4	-	-	-	-
BUFE8	-	-	-	-
BUFE16	-	-	-	-
BUFG	-	-	-	-
BUFGCE	-	-	-	-
BUFGCE_1	-	-	-	-
BUFGDLL	-	-	-	-
BUFGMUX	-	-	-	-
BUFGMUX_1	-	-	-	-
BUFGP	-	-	-	-
BUFT	-	-	-	-
BUFT4	-	-	-	-
BUFT8	-	-	-	-
BUFT16	-	-	-	-
CAPTURE_SPARTAN2	-	-	-	-
CAPTURE_VIRTEX	-	-	-	-

## Slice Count for FPGA Components

	Spartan-II, Spartan-II E	Spartan-3	Virtex, Virtex-E	Virtex-II, Virtex-II Pro, Virtex-II Pro X
Name	Number of Slices to Implement			
CAPTURE_VIRTEX2	-	-	-	-
CB2CE	2	3	2	3
CB2CLE	3	3	3	3
CB2CLED	3	3	3	3
CB2RE	2	3	2	3
CB4CE	3	4	3	4
CB4CLE	5	5	5	5
CB4CLED	6	7	6	7
CB4RE	3	4	3	4
CB8CE	6	7	6	7
CB8CLE	9	10	9	10
CB8CLED	12	12	12	12
CB8RE	6	7	6	7
CB16CE	13	14	13	14
CB16CLE	18	19	18	19
CB16CLED	24	25	24	25
CB16RE	13	14	13	14
CC8CE	8	5	8	5
CC8CLE	9	9	9	9
CC8CLED	9	17	9	17
CC8RE	9	9	9	9
CC16CE	16	9	16	9
CC16CLE	17	17	17	17
CC16CLED	17	33	17	33
CC16RE	17	17	17	17
CD4CE	3	4	3	4
CD4CLE	5	5	5	5
CD4RE	3	4	3	4
CD4RLE	7	7	7	7
CJ4CE	2	4	2	4
CJ4RE	2	4	2	4
CJ5CE	3	5	3	5
CJ5RE	3	5	3	5
CJ8CE	4	4	4	4
CJ8RE	4	4	4	4
CLKDLL	-	-	-	-
CLKDLLE	-	-	-	-

## Slice Count for FPGA Components

	Spartan-II, Spartan-IIE	Spartan-3	Virtex, Virtex-E	Virtex-II, Virtex-II Pro, Virtex-II Pro X
Name	Number of Slices to Implement			
CLKDLLHF	-	-	-	-
COMP2	1	1	1	1
COMP4	2	2	2	2
COMP8	3	4	3	4
COMP16	6	9	6	9
COMPM2	1	2	1	2
COMPM4	5	5	5	5
COMPM8	11	13	11	13
COMPM16	24	32	24	32
COMPMC8	8	8	8	8
COMPMC16	16	16	16	16
CR8CE	8	8	8	8
CR16CE	16	16	16	16
D2_4E	2	2	2	2
D3_8E	4	4	4	4
D4_16E	16	16	16	16
DCM	-	-	-	-
DEC_CC4	1	1	1	1
DEC_CC8	1	1	1	1
DEC_CC16	2	2	2	2
DECODE4	1	1	1	1
DECODE8	2	2	2	2
DECODE16	2	2	2	2
DECODE32	4	4	4	4
DECODE64	8	8	8	8
FD	1	1	1	1
FD_1	1	1	1	1
FD4CE	2	4	2	4
FD4RE	2	4	2	4
FD8CE	4	4	4	4
FD8RE	4	4	4	4
FD16CE	8	8	8	8
FD16RE	8	8	8	8
FDC	1	1	1	1
FDC_1	1	1	1	1
FDCE	1	1	1	1
FDCE_1	1	1	1	1

## Slice Count for FPGA Components

	Spartan-II, Spartan-II E	Spartan-3	Virtex, Virtex-E	Virtex-II, Virtex-II Pro, Virtex-II Pro X
Name	Number of Slices to Implement			
FDCP	1	1	1	1
FDCP_1	1	1	1	1
FDCPE	1	1	1	1
FDCPE_1	1	1	1	1
FDDRCPE	-	-	-	-
FDDRRSE	-	-	-	-
FDE	1	1	1	1
FDE_1	1	1	1	1
FDP	1	1	1	1
FDP_1	1	1	1	1
FDPE	1	1	1	1
FDPE_1	1	1	1	1
FDR	1	1	1	1
FDR_1	1	1	1	1
FDRE	1	1	1	1
FDRE_1	1	1	1	1
FDRS	1	1	1	1
FDRS_1	1	1	1	1
FDRSE	1	1	1	1
FDRSE_1	1	1	1	1
FDS	1	1	1	1
FDS_1	1	1	1	1
FDSE	1	1	1	1
FDSE_1	1	1	1	1
FJKC	1	1	1	1
FJKCE	1	1	1	1
FJKP	1	1	1	1
FJKPE	1	1	1	1
FJKRSE	1	1	1	1
FJKSRE	1	1	1	1
FMAP	-	-	-	-
FTC	1	1	1	1
FTCE	1	1	1	1
FTCLE	1	1	1	1
FTCLEX	1	1	1	1
FTP	1	1	1	1
FTPE	1	1	1	1

## Slice Count for FPGA Components

	Spartan-II, Spartan-II-E	Spartan-3	Virtex, Virtex-E	Virtex-II, Virtex-II Pro, Virtex-II Pro X
Name	Number of Slices to Implement			
FTPLE	1	1	1	1
FTRSE	1	1	1	1
FTRSLE	2	1	2	1
FTSRE	1	1	1	1
FTSRLE	2	2	2	2
GND	-	-	-	-
GT_AURORA_n	-	-	-	-
GT_CUSTOM_n	-	-	-	-
GT_ETHERNET_n	-	-	-	-
GT_FIBRE_CHAN_n	-	-	-	-
GT_INFINIBAND_n	-	-	-	-
GT_XAUI_n	-	-	-	-
GT10_AURORA_n	-	-	-	-
GT10_AURORAX_n	-	-	-	-
GT10_CUSTOM_n	-	-	-	-
GT10_INFINIBAND_n	-	-	-	-
GT10_XAUI_n	-	-	-	-
GT10_10GE_n	-	-	-	-
GT10_10GFC_n	-	-	-	-
GT10_3GIO_n	-	-	-	-
GT10_OC48_n	-	-	-	-
GT10_OC192_n	-	-	-	-
IBUF	-	-	-	-
IBUF4	-	-	-	-
IBUF8	-	-	-	-
IBUF16	-	-	-	-
IBUF_selectIO	-	-	-	-
IBUFDS	-	-	-	-
IBUFG	-	-	-	-
IBUFG_selectIO	-	-	-	-
IBUFGDS	-	-	-	-
IBUFGDS_DIFF_OUT	-	-	-	-
ICAP_VIRTEX2	-	-	-	-
IFD	-	-	-	-
IFD_1	-	-	-	-
IFD4	-	-	-	-
IFD8	-	-	-	-

## Slice Count for FPGA Components

	Spartan-II, Spartan-IIE	Spartan-3	Virtex, Virtex-E	Virtex-II, Virtex-II Pro, Virtex-II Pro X
Name	Number of Slices to Implement			
IFD16	-	-	-	-
IFDDRCPE	-	-	-	-
IFDDRRSE	-	-	-	-
IFDI	-	-	-	-
IFDI_1	-	-	-	-
IFDX	-	-	-	-
IFDX4	-	-	-	-
IFDX8	-	-	-	-
IFDX16	-	-	-	-
IFDX_1	-	-	-	-
IFDXI	-	-	-	-
IFDXI_1	-	-	-	-
ILD	1	1	1	1
ILD_1	1	1	1	1
ILD4	2	2	2	2
ILD8	4	4	4	4
ILD16	8	8	8	8
ILDI	-	-	-	-
ILDI_1	-	-	-	-
ILDX	-	-	-	-
ILDX4	-	-	-	-
ILDX8	-	-	-	-
ILDX16	-	-	-	-
ILDX_1	-	-	-	-
ILDXI	-	-	-	-
ILDXI_1	-	-	-	-
INV	1	1	1	1
INV4	1	1	1	1
INV8	1	1	1	1
INV16	1	1	1	1
IOBUF	-	-	-	-
IOBUF_selectIO	-	-	-	-
IOPAD	-	-	-	-
IOPAD4	-	-	-	-
IOPAD8	-	-	-	-
IOPAD16	-	-	-	-
IPAD	-	-	-	-

## Slice Count for FPGA Components

	Spartan-II, Spartan-II-E	Spartan-3	Virtex, Virtex-E	Virtex-II, Virtex-II Pro, Virtex-II Pro X
Name	Number of Slices to Implement			
IPAD4	-	-	-	-
IPAD8	-	-	-	-
IPAD16	-	-	-	-
JTAGPPC	-	-	-	-
KEEPER	-	-	-	-
LD	1	1	1	1
LD_1	1	1	1	1
LD4	2	4	2	4
LD8	4	4	4	4
LD16	8	8	8	8
LD4CE	2	4	2	4
LD8CE	4	4	4	4
LD16CE	8	8	8	8
LDC	1	1	1	1
LDC_1	1	1	1	1
LDCE	1	1	1	1
LDCE_1	1	1	1	1
LDCP	1	1	1	1
LDCP_1	1	1	1	1
LDCPE	1	1	1	1
LDCPE_1	1	1	1	1
LDE	1	1	1	1
LDE_1	1	1	1	1
LDP	1	1	1	1
LDP_1	1	1	1	1
LDPE	1	1	1	1
LDPE_1	1	1	1	1
LUT1	1	1	1	1
LUT2	1	1	1	1
LUT3	1	1	1	1
LUT4	1	1	1	1
LUT1_D	1	1	1	1
LUT2_D	1	1	1	1
LUT3_D	1	1	1	1
LUT4_D	1	1	1	1
LUT1_L	1	1	1	1
LUT2_L	1	1	1	1



## Slice Count for FPGA Components

	Spartan-II, Spartan-IIE	Spartan-3	Virtex, Virtex-E	Virtex-II, Virtex-II Pro, Virtex-II Pro X
Name	Number of Slices to Implement			
LUT3_L	1	1	1	1
LUT4_L	1	1	1	1
M2_1	1	1	1	1
M2_1B1	1	1	1	1
M2_1B2	1	1	1	1
M2_1E	1	1	1	1
M4_1E	1	1	1	1
M8_1E	2	2	2	2
M16_1E	5	5	5	5
MULT_AND **	-	-	-	-
MULT18X18	-	-	-	-
MULT18X18S	-	-	-	-
MUXCY **	-	-	-	-
MUXCY_D **	-	-	-	-
MUXCY_L **	-	-	-	-
MUXF5 **	-	-	-	-
MUXF5_D **	-	-	-	-
MUXF5_L **	-	-	-	-
MUXF6 **	-	-	-	-
MUXF6_D **	-	-	-	-
MUXF6_L **	-	-	-	-
MUXF7 **	-	-	-	-
MUXF7_D **	-	-	-	-
MUXF7_L **	-	-	-	-
MUXF8 **	-	-	-	-
MUXF8_D **	-	-	-	-
MUXF8_L **	-	-	-	-
NAND2	1	1	1	1
NAND3	1	1	1	1
NAND4	1	1	1	1
NAND5	1	1	1	1
NAND6	1	1	1	1
NAND7	1	1	1	1
NAND8	2	2	2	2
NAND9	2	2	2	2
NAND12	2	2	2	2
NAND16	2	2	2	2

## Slice Count for FPGA Components

	Spartan-II, Spartan-IIE	Spartan-3	Virtex, Virtex-E	Virtex-II, Virtex-II Pro, Virtex-II Pro X
Name	Number of Slices to Implement			
NOR2	1	1	1	1
NOR3	1	1	1	1
NOR4	1	1	1	1
NOR5	1	1	1	1
NOR6	1	1	1	1
NOR7	1	1	1	1
NOR8	2	2	2	2
NOR9	2	2	2	2
NOR12	2	2	2	2
NOR16	2	2	2	2
OBUF	-	-	-	-
OBUF4	-	-	-	-
OBUF8	-	-	-	-
OBUF16	-	-	-	-
OBUF_selectIO	-	-	-	-
OBUFDS	-	-	-	-
OBUFE	-	-	-	-
OBUFE4	-	-	-	-
OBUFE8	-	-	-	-
OBUFE16	-	-	-	-
OBUFT	-	-	-	-
OBUFT4	-	-	-	-
OBUFT8	-	-	-	-
OBUFT16	-	-	-	-
OBUFT_selectIO	-	-	-	-
OBUFTDS	-	-	-	-
OFD	-	-	-	-
OFD_1	-	-	-	-
OFD4	-	-	-	-
OFD8	-	-	-	-
OFD16	-	-	-	-
OFDDRCPE	-	-	-	-
OFDDRRSE	-	-	-	-
OFDDRTCPE	-	-	-	-
OFDDRTRSE	-	-	-	-
OFDE	-	-	-	-
OFDE_1	-	-	-	-

## Slice Count for FPGA Components

	Spartan-II, Spartan-II E	Spartan-3	Virtex, Virtex-E	Virtex-II, Virtex-II Pro, Virtex-II Pro X
Name	Number of Slices to Implement			
OFDE4	-	-	-	-
OFDE8	-	-	-	-
OFDE16	-	-	-	-
OFDI	-	-	-	-
OFDI_I	-	-	-	-
OFDT	-	-	-	-
OFDT_1	-	-	-	-
OFDT4	-	-	-	-
OFDT8	-	-	-	-
OFDT16	-	-	-	-
OFDX	-	-	-	-
OFDX4	-	-	-	-
OFDX8	-	-	-	-
OFDX16	-	-	-	-
OFDX_1	-	-	-	-
OFDXI	-	-	-	-
OFDXI_I	-	-	-	-
OPAD	-	-	-	-
OPAD4	-	-	-	-
OPAD8	-	-	-	-
OPAD16	-	-	-	-
OR2	1	1	1	1
OR3	1	1	1	1
OR4	1	1	1	1
OR5	1	1	1	1
OR6	1	1	1	1
OR7	1	1	1	1
OR8	2	2	2	2
OR9	2	2	2	2
OR12	2	2	2	2
OR16	2	2	2	2
ORCY **	-	-	-	-
PPC405	-	-	-	-
PULLDOWN	-	-	-	-
PULLUP	-	-	-	-
RAM16X1D	1	2*	1	2*
RAM16X1D_1	1	2*	1	2*

## Slice Count for FPGA Components

	Spartan-II, Spartan-II E	Spartan-3	Virtex, Virtex-E	Virtex-II, Virtex-II Pro, Virtex-II Pro X
Name	Number of Slices to Implement			
RAM16X1S	1	1	1	1
RAM16X1S_1	1	1	1	1
RAM16X2D	2	4	2	4
RAM16X2S	2	2	2	2
RAM16X4D	4	8	4	8
RAM16X4S	4	3	4	3
RAM16X8D	8	16	8	16
RAM16X8S	8	5	8	5
RAM32X1D	-	2	-	2
RAM32X1D_1	-	2	-	2
RAM32X1S	1	1	1	1
RAM32X1S_1	1	1	1	1
RAM32X2S	2	2	2	2
RAM32X4S	8	3	8	3
RAM32X8S	-	6	-	6
RAM64X1D	-	4	-	4
RAM64X1D_1	-	4	-	4
RAM64X1S	-	2	-	2
RAM64X1S_1	-	2	-	2
RAM64X2S	-	4	-	4
RAM128X1S	-	4	-	4
RAM128X1S_1	-	4	-	4
RAMB4_Sn	-	-	-	-
RAMB4_Sm_Sn	-	-	-	-
RAMB16_Sn	-	-	-	-
RAMB16_Sm_Sn	-	-	-	-
ROM16X1	1	1	1	1
ROM32X1	1	1	1	1
ROM64X1	2	2	2	2
ROM128X1	-	4	-	4
ROM256X1	-	8	-	8
SOP3	1	1	1	1
SOP4	1	1	1	1
SR4CE	2	4	2	4
SR4CLE	3	3	3	3
SR4CLED	5	5	5	5
SR4RE	2	4	2	4

## Slice Count for FPGA Components

	Spartan-II, Spartan-IIE	Spartan-3	Virtex, Virtex-E	Virtex-II, Virtex-II Pro, Virtex-II Pro X
Name	Number of Slices to Implement			
SR4RLE	3	3	3	3
SR4RLED	5	5	5	5
SR8CE	4	4	4	4
SR8CLE	5	5	5	5
SR8CLED	9	9	9	9
SR8RE	4	4	4	4
SR8RLE	5	5	5	5
SR8RLED	9	9	9	9
SR16CE	8	8	8	8
SR16CLE	9	9	9	9
SR16CLED	17	17	17	17
SR16RE	8	8	8	8
SR16RLE	9	9	9	9
SR16RLED	17	17	17	17
SRL16	1	1	1	1
SRL16_1	1	1	1	1
SRL16E	1	1	1	1
SRL16E_1	1	1	1	1
SRLC16	-	1	-	1
SRLC16_1	-	1	-	1
SRLC16E	-	1	-	1
SRLC16E_1	-	1	-	1
STARTUP_SPARTAN2	-	-	-	-
STARTUP_VIRTEX	-	-	-	-
STARTUP_VIRTEX2	-	-	-	-
UPAD	-	-	-	-
VCC	-	-	-	-
XNOR2	1	1	1	1
XNOR3	1	1	1	1
XNOR4	1	1	1	1
XNOR5	1	1	1	1
XNOR6	1	1	1	1
XNOR7	1	1	1	1
XNOR8	2	2	2	2
XNOR9	2	2	2	2
XOR2	1	1	1	1
XOR3	1	1	1	1

## Slice Count for FPGA Components

	Spartan-II, Spartan-IIE	Spartan-3	Virtex, Virtex-E	Virtex-II, Virtex-II Pro, Virtex-II Pro X
Name	Number of Slices to Implement			
XOR4	1	1	1	1
XOR5	1	1	1	1
XOR6	1	1	1	1
XOR7	1	1	1	1
XOR8	2	2	2	2
XOR9	2	2	2	2
XORCY **	-	-	-	-
XORCY_D **	-	-	-	-
XORCY_L **	-	-	-	-

\* The RAM16X1D and RAM16X1D\_1 consume 1/2 of two slices.

\*\* These primitives cannot be used by themselves. However, there is only one available per slice.

# Architecture Specific Information

---

The following sections list the design elements that can be used with supported architectures.

- [Spartan-II and Spartan-IIE](#)
- [Spartan-3](#)
- [Virtex and Virtex-E](#)
- [Virtex-II, Virtex-II Pro, Virtex-II Pro X](#)
- [XC9500/XV/XL](#)
- [CoolRunner XPLA3](#)
- [CoolRunner-II](#)
- [CoolRunner-IIS](#)

To access lists of the constraints associated with each of these architectures, see [“Architecture-Specific Constraints”](#), in the *Xilinx Constraints Guide*.







## Spartan-II and Spartan-IIE

The following table indicates the supported design elements for Spartan-II and Spartan-IIE. For a complete description of these architectures, see the Product Data Sheets (<http://www.xilinx.com/partinfo/databook.htm#spartan>).

### Spartan-II, Spartan-IIE Design Elements

ACC4, 8, 16	ADD4, 8, 16	ADSU4, 8, 16
AND2-9	AND12, 16	BRLSHFT4, 8
BSCAN_SPARTAN2	BUF	BUFCF
BUFE, 4, 8, 16	BUFG	BUFGDLL
BUFGP	BUFT, 4, 8, 16	CAPTURE_SPARTAN2
CB2CE, CB4CE, CB8CE, CB16CE	CB2CLE, CB4CLE, CB8CLE, CB16CLE	CB2CLED, CB4CLED, CB8CLED, CB16CLED
CB2RE, CB4RE, CB8RE, CB16RE	CC8CE, CC16CE	CC8CLE, CC16CLE
CC8CLED, CC16CLED	CC8RE, CC16RE	CD4CE
CD4CLE	CD4RE	CD4RLE
CJ4CE, CJ5CE, CJ8CE	CJ4RE, CJ5RE, CJ8RE	CLKDLL, CLKDLLE (Spartan-IIE only)
CLKDLLHF	COMP2, 4, 8, 16	COMPM2, 4, 8, 16
COMP8, 16	CR8CE, CR16CE	D2_4E
D3_8E	D4_16E	DEC_CC4, 8, 16
DECODE4, 8, 16	DECODE32, 64	FD
FD_1	FD4CE, FD8CE, FD16CE	FD4RE, FD8RE, FD16RE
FDC	FDC_1	FDCE
FDCE_1	FDCP	FDCP_1
FDCPE	FDCPE_1	FDE
FDE_1	FDP	FDP_1
FDPE	FDPE_1	FDR
FDR_1	FDRE	FDRE_1
FDRS	FDRS_1	FDRSE
FDRSE_1	FDS	FDS_1
FDSE	FDSE_1	FJKC
FJKCE	FJKP	FJKPE
FJKRSE	FJKSRE	FMAP
FTC	FTCE	FTCLE
FTCLEX	FTP	FTPE
FTPLE	FTRSE	FTRSLE
FTRSRE	FTRSLE	GND
IBUF, 4, 8, 16	IBUF_selectIO	IBUFG, IBUFG_selectIO
IFD, 4, 8, 16	IFD_1	IFDI
IFDI_1	IFDX, 4, 8, 16	IFDX_1
IFDXI	IFDXI_1	ILD, 4, 8, 16
ILD_1	ILDI	ILDI_1
ILDX, 4, 8, 16	ILDX_1	ILDXI

## Spartan-II, Spartan-IIE Design Elements

ILD XI_1	INV, 4, 8, 16	IOBUF, IOBUF_selectIO
IOPAD, 4, 8, 16	IPAD, 4, 8, 16	KEEPER
LD	LD_1	LD4, 8, 16
LDC	LDC_1	LDCE
LDCE_1	LD4CE, LD8CE, LD16CE	LDCP
LDCP_1	LDCPE	LDCPE_1
LDE	LDE_1	LDP
LDP_1	LDPE	LDPE_1
LUT1, 2, 3, 4	LUT1_D, LUT2_D, LUT3_D, LUT4_D	LUT1_L, LUT2_L, LUT3_L, LUT4_L
M2_1	M2_1B1	M2_1B2
M2_1E	M4_1E	M8_1E
M16_1E	MULT_AND	MUXCY
MUXCY_D	MUXCY_L	MUXF5
MUXF5_D	MUXF5_L	MUXF6
MUXF6_D	MUXF6_L	NAND2-9
NAND12, 16	NOR2-9	NOR12, 16
OBUF, 4, 8, 16	OBUF_selectIO	OBUFE, 4, 8, 16
OBUFT, 4, 8, 16	OBUFT_selectIO	OFD, 4, 8, 16
OFD_1	OFDE, 4, 8, 16	OFDE_1
OFDI	OFDI_1	OFDT, 4, 8, 16
OFDT_1	OFDX, 4, 8, 16	OFDX_1
OFDXI	OFDXI_1	OPAD, 4, 8, 16
OR2-9	OR12, 16	PULLDOWN
PULLUP	RAM16X1D	RAM16X1D_1
RAM16X1S	RAM16X1S_1	RAM16X2D
RAM16X2S	RAM16X4D	RAM16X4S
RAM16X8D	RAM16X8S	RAM32X1S
RAM32X1S_1	RAM32X2S	RAM32X4S
RAM32X8S	RAMB4_Sn	RAMB4_Sm_Sn
ROC	ROCBUF	ROM16X1
ROM32X1	SOP3-4	SR4CE, SR8CE, SR16CE
SR4CLE, SR8CLE, SR16CLE	SR4CLED, SR8CLED, SR16CLED	SR4RE, SR8RE, SR16RE
SR4RLE, SR8RLE, SR16RLE	SR4RLED, SR8RLED, SR16RLED	SRL16
SRL16_1	SRL16E	SRL16E_1
STARTBUF_architecture	STARTUP_SPARTAN2	TOC
TOCBUF	UPAD	VCC
XNOR2-9	XOR2-9	XORCY
XORCY_D	XORCY_L	

The table below indicates the supported design elements for Spartan-3.

### Spartan-3 Design Elements

ACC4, 8, 16	ADD4, 8, 16	ADSU4, 8, 16
AND2-9	AND12, 16	BRLSHFT4, 8
BSCAN_SPARTAN3	BUF	BUFCF
BUFG	BUFGCE	BUFGCE_1
BUFGDLL	BUFGMUX	BUFGMUX_1
BUFGP	CAPTURE_SPARTAN3	CB2CE, CB4CE, CB8CE, CB16CE
CB2RE, CB4RE, CB8RE, CB16RE	CB2CLE, CB4CLE, CB8CLE, CB16CLE	CB2CLED, CB4CLED, CB8CLED, CB16CLED
CC8CE, CC16CE	CC8CLE, CC16CLE	CC8CLED, CC16CLED
CC8RE, CC16RE	CD4CE	CD4CLE
CD4RE	CD4RLE	CJ4CE, CJ5CE, CJ8CE
CJ4RE, CJ5RE, CJ8RE	COMP2, 4, 8, 16	COMPM2, 4, 8, 16
COMP8, 16	CR8CE, CR16CE	D2_4E
D3_8E	D4_16E	DCM
DEC_CC4, 8, 16	DECODE4, 8, 16	DECODE32, 64
FD	FD_1	FD4CE, FD8CE, FD16CE
FD4RE, FD8RE, FD16RE	FDC	FDC_1
FDCE	FDCE_1	FDCP
FDCP_1	FDCPE	FDCPE_1
FDDRCPE	FDDRRSE	FDE
FDE_1	FDP	FDP_1
FDPE_1	FDR	FDR_1
FDRE	FDRE_1	FDRS
FDRS_1	FDRSE	FDRSE_1
FDS	FDS_1	FDSE
FDSE_1	FJKC	FJKCE
FJKP	FJKPE	FJKRSE
FJKSRE	FMAP	FTC
FTCE	FTCLE	FTCLEX
FTP	FTPE	FTPLE
FTRSE	FTRSLE	FTRSRE
FTRSLE	GND	IBUF, 4, 8, 16
IBUFDS	IBUFG, IBUFG_selectIO	IBUFGDS
IFD, 4, 8, 16	IFD_1	IFDDRCPE
IFDDRRSE	IFDI	IFDI_1
IFDX, 4, 8, 16	IFDX_1	IFDXI
IFDXI_1	ILD, 4, 8, 16	ILD_1
ILDI	ILDI_1	ILD, 4, 8, 16
ILD, 4, 8, 16	ILD, 4, 8, 16	ILD, 4, 8, 16
ILD, 4, 8, 16	ILD, 4, 8, 16	ILD, 4, 8, 16



## Spartan-3 Design Elements

ILD XI_1	INV, 4, 8, 16	IOBUF, IOBUF_selectIO
IOBUFDS	KEEPER	LD
LD_1	LD4, 8, 16	LDC
LDC_1	LDCE	LDCE_1
LD4CE, LD8CE, LD16CE	LDCEP	LDCEP_1
LDCPE	LDCPE_1	LDE
LDE_1	LDP	LDP_1
LDPE	LDPE_1	LUT1, 2, 3, 4
LUT1_D, LUT2_D, LUT3_D, LUT4_D	LUT1_L, LUT2_L, LUT3_L, LUT4_L	M2_1
M2_1B1	M2_1B2	M2_1E
M4_1E	M8_1E	M16_1E
MULT_AND	MULT18X18	MULT18X18S
MUXCY	MUXCY_D	MUXCY_L
MUXF5	MUXF5_D	MUXF5_L
MUXF6	MUXF6_D	MUXF6_L
MUXF7	MUXF7_D	MUXF7_L
MUXF8	NAND2-9	NAND12, 16
NOR2-9	NOR12, 16	OBUF, 4, 8, 16
OBUF_selectIO	OBUFDS	OBUFT, 4, 8, 16
OBUFTDS	OFD, 4, 8, 16	OFD_1
OFDDRCPE	OFDDRRSE	OFDDRTCPE
OFDDRTRSE	OFDE, 4, 8, 16	OFDE_1
OFDI	OFDI_1	OFDT, 4, 8, 16
OFDT_1	OFDX, 4, 8, 16	OFDX_1
OFDXI	OFDXI_1	OPAD, 4, 8, 16
OR2-9	OR12, 16	PULLDOWN
PULLUP	RAM16X1D	RAM16X1D_1
RAM16X1S	RAM16X1S_1	RAM16X2S
RAM16X4S	RAM16X8S	RAM32X1S
RAM32X1S_1	RAM32X2S	RAM64X1S
RAM64X1S_1	RAMB16_Sn	RAMB16_Sm_Sn
ROC	ROCBUF	ROM16X1
ROM32X1	ROM64X1	ROM128X1
ROM256X1	SOP3-4	SR4CE, SR8CE, SR16CE
SR4CLE, SR8CLE, SR16CLE	SR4CLED, SR8CLED, SR16CLED	SR4RE, SR8RE, SR16RE
SR4RLE, SR8RLE, SR16RLE	SR4RLED, SR8RLED, SR16RLED	SRL16
SRL16_1	SRL16E	SRL16E_1
SRLC16	SRLC16_1	SRLC16E
SRLC16E_1	STARTBUF_architecture	STARTUP_SPARTAN3
TOC	TOCBUF	VCC



### Spartan-3 Design Elements

XNOR2-9	XOR2-9	XORCY
XORCY_D	XORCY_L	





## Virtex and Virtex-E

The table below indicates the supported design elements for Virtex and Virtex-E. For a complete description, see the Product Data Sheets (<http://www.xilinx.com/partinfo/databook.htm#virtex>).

### Virtex, Virtex-E Design Elements

ACC4, 8, 16	ADD4, 8, 16	ADSU4, 8, 16
AND2-9	AND12, 16	BRLSHFT4, 8
BSCAN_VIRTEX	BUF	BUFCF
BUFE, 4, 8, 16	BUFG	BUFGDLL
BUFGP	BUFT, 4, 8, 16	CAPTURE_VIRTEX
CB2CE, CB4CE, CB8CE, CB16CE	CB2CLE, CB4CLE, CB8CLE, CB16CLE	CB2CLED, CB4CLED, CB8CLED, CB16CLED
CB2RE, CB4RE, CB8RE, CB16RE	CC8CE, CC16CE	CC8CLE, CC16CLE
CC8CLED, CC16CLED	CC8RE, CC16RE	CD4CE
CD4CLE	CD4RE	CD4RLE
CJ4CE, CJ5CE, CJ8CE	CJ4RE, CJ5RE, CJ8RE	CLKDLL
CLKDLLE	CLKDLLHF	COMP2, 4, 8, 16
COMPM2, 4, 8, 16	COMPMC8, 16	CR8CE, CR16CE
D2_4E	D3_8E	D4_16E
DEC_CC4, 8, 16	DECODE4, 8, 16	DECODE32, 64
FD	FD_1	FD4CE, FD8CE, FD16CE
FD4RE, FD8RE, FD16RE	FDC	FDC_1
FDCE	FDCE_1	FDCP
FDCP_1	FDCPE	FDCPE_1
FDE	FDE_1	FDP
FDP_1	FDPE	FDPE_1
FDR	FDR_1	FDRE
FDRE_1	FDRS	FDRS_1
FDRSE	FDRSE_1	FDS
FDS_1	FDSE	FDSE_1
FJKC	FJKCE	FJKP
FJKPE	FJKRSE	FJKSRE
FMAP	FTC	FTCE
FTCLE	FTCLEX	FTP
FTPE	FTPLE	FTRSE
FTRSLE	FTRSRE	FTRSLE
GND	IBUF, 4, 8, 16	IBUF_selectIO
IBUFG, IBUFG_selectIO	IFD, 4, 8, 16	IFD_1
IFDI	IFDI_1	IFDX, 4, 8, 16
IFDX_1	IFDXI	IFDXI_1
ILD, 4, 8, 16	ILD_1	ILDI
ILD_1	ILD_1	ILD_1
ILD_1	ILD_1	ILD_1

### Virtex, Virtex-E Design Elements

ILDXI	ILDXI_1	INV, 4, 8, 16
IOBUF, IOBUF_selectIO	IOPAD, 4, 8, 16	IPAD, 4, 8, 16
KEEPER	LD	LD_1
LD4, 8, 16	LDC	LDC_1
LDCE	LDCE_1	LD4CE, LD8CE, LD16CE
LDCP	LDCP_1	LDCPE
LDCPE_1	LDE	LDE_1
LDP	LDP_1	LDPE
LDPE_1	LUT1, 2, 3, 4	LUT1_D, LUT2_D, LUT3_D, LUT4_D
LUT1_L, LUT2_L, LUT3_L, LUT4_L	M2_1	M2_1B1
M2_1B2	M2_1E	M4_1E
M8_1E	M16_1E	MULT_AND
MUXCY	MUXCY_D	MUXCY_L
MUXF5	MUXF5_D	MUXF5_L
MUXF6	MUXF6_D	MUXF6_L
NAND2-9	NAND12, 16	NOR2-9
NOR12, 16	OBUF, 4, 8, 16	OBUF_selectIO
OBUFFE, 4, 8, 16	OBUFFT, 4, 8, 16	OBUFFT_selectIO
OFD, 4, 8, 16	OFD_1	OFDE, 4, 8, 16
OFDE_1	OFDI	OFDI_1
OFDT, 4, 8, 16	OFDT_1	OFDX, 4, 8, 16
OFDX_1	OFDXI	OFDXI_1
OPAD, 4, 8, 16	OR2-9	OR12, 16
PULLDOWN	PULLUP	RAM16X1D
RAM16X1D_1	RAM16X1S	RAM16X1S_1
RAM16X2D	RAM16X2S	RAM16X4D
RAM16X4S	RAM16X8D	RAM16X8S
RAM32X1S	RAM32X1S_1	RAM32X2S
RAM32X4S	RAM32X8S	RAMB4_Sn
RAMB4_Sm_Sn	ROC	ROCBUF
ROM16X1	ROM32X1	SOP3-4
SR4CE, SR8CE, SR16CE	SR4CLE, SR8CLE, SR16CLE	SR4CLED, SR8CLED, SR16CLED
SR4RE, SR8RE, SR16RE	SR4RLE, SR8RLE, SR16RLE	SR4RLED, SR8RLED, SR16RLED
SRL16	SRL16_1	SRL16E
SRL16E_1	STARTBUF_architecture	STARTUP_VIRTEX
TOC	TOCBUF	UPAD
VCC	XNOR2-9	XOR2-9
XORCY	XORCY_D	XORCY_L





## Virtex-II, Virtex-II Pro, Virtex-II Pro X

The table below indicates the supported design elements for Virtex-II, Virtex-II Pro, and Virtex-II Pro X. For a complete description of Virtex-II, see the Product Data Sheets (<http://www.xilinx.com/partinfo/databook.htm#vtwo>).

### Virtex-II, Virtex-II Pro, Virtex-II Pro X Design Elements

ACC4, 8, 16	ADD4, 8, 16	ADSU4, 8, 16
AND2-9	AND12, 16	BRLSHFT4, 8
BSCAN_VIRTEX2	BUF	BUFCF
BUFE, 4, 8, 16	BUFG	BUFGCE
BUFGCE_1	BUFGDLL	BUFGMUX
BUFGMUX_1	BUFGP	BUFT, 4, 8, 16
CAPTURE_VIRTEX2	CB2CE, CB4CE, CB8CE, CB16CE	CB2CLE, CB4CLE, CB8CLE, CB16CLE
CB2CLED, CB4CLED, CB8CLED, CB16CLED	CB2RE, CB4RE, CB8RE, CB16RE	CC8CE, CC16CE
CC8CLE, CC16CLE	CC8CLED, CC16CLED	CC8RE, CC16RE
CD4CE	CD4CLE	CD4RE
CD4RLE	CJ4CE, CJ5CE, CJ8CE	CJ4RE, CJ5RE, CJ8RE
COMP2, 4, 8, 16	COMPM2, 4, 8, 16	COMPMC8, 16
CR8CE, CR16CE	D2_4E	D3_8E
D4_16E	DCM	DEC_CC4, 8, 16
DECODE4, 8, 16	DECODE32, 64	FD
FD_1	FD4CE, FD8CE, FD16CE	FD4RE, FD8RE, FD16RE
FDC	FDC_1	FDCE
FDCE_1	FDCP	FDCP_1
FDCPE	FDCPE_1	FDDRCPE
FDDRRSE	FDE	FDE_1
FDP	FDP_1	FDPE
FDPE_1	FDR	FDR_1
FDRE	FDRE_1	FDRS
FDRS_1	FDRSE	FDRSE_1
FDS	FDS_1	FDSE
FDSE_1	FJKC	FJKCE
FJKP	FJKPE	FJKRSE
FJKSRE	FMAP	FTC
FTCE	FTCLE	FTCLEX
FTP	FTPE	FTPLE
FTRSE	FTRSLE	FTRSRE
FTRSLE	GND	GT_AURORA_n (Virtex-II Pro only)
GT_CUSTOM (Virtex-II Pro only)	GT_ETHERNET_n (Virtex-II Pro only)	GT_FIBRE_CHAN_n (Virtex-II Pro only)
GT_INFINIBAND_n (Virtex-II Pro only)	GT_XAUL_n (Virtex-II Pro only)	GT10_AURORA_n (Virtex-II Pro X only)
GT10_AURORAX_n (Virtex-II Pro X only)	GT10_CUSTOM (Virtex-II Pro X only)	GT10_INFINIBAND_n (Virtex-II Pro X only)

### Virtex-II, Virtex-II Pro, Virtex-II Pro X Design Elements

GT10_XAUI_n (Virtex-II Pro X only)	GT10_10GE_n (Virtex-II Pro X only)	GT10_10GFC_n (Virtex-II Pro X only)
GT10_OC48_n (Virtex-II Pro X only)	GT10_OC192_n (Virtex-II Pro X only)	IBUF, 4, 8, 16
IBUF_selectIO	IBUFDS	IBUFG, IBUFG_selectIO
IBUFGDS	IBUFGDS_DIFF_OUT	ICAP_VIRTEX2
IFD, 4, 8, 16	IFD_1	IFDDRCPE
IFDDRRSE	IFDI	IFDI_1
IFDX, 4, 8, 16	IFDX_1	IFDXI
IFDXI_1	ILD, 4, 8, 16	ILD_1
ILDI	ILDI_1	ILDX, 4, 8, 16
ILDX_1	ILDXI	ILDXI_1
INV, 4, 8, 16	IOBUF, IOBUF_selectIO	IOBUFDS
IOPAD, 4, 8, 16	IPAD, 4, 8, 16	JTAGPPC (Virtex-II Pro only)
KEEPER	LD	LD_1
LD4, 8, 16	LDC	LDC_1
LDCE	LDCE_1	LD4CE, LD8CE, LD16CE
LDCP	LDCP_1	LDCPE
LDCPE_1	LDE	LDE_1
LDP	LDP_1	LDPE
LDPE_1	LUT1, 2, 3, 4	LUT1_D, LUT2_D, LUT3_D, LUT4_D
LUT1_L, LUT2_L, LUT3_L, LUT4_L	M2_1	M2_1B1
M2_1B2	M2_1E	M4_1E
M8_1E	M16_1E	MULT_AND
MULT18X18	MULT18X18S	MUXCY
MUXCY_D	MUXCY_L	MUXF5
MUXF5_D	MUXF5_L	MUXF6
MUXF6_D	MUXF6_L	MUXF7
MUXF7_D	MUXF7_L	MUXF8
NAND2-9	NAND12, 16	
NOR2-9	NOR12, 16	OBUF, 4, 8, 16
OBUF_selectIO	OBUFDS	OBUFE, 4, 8, 16
OBUFT, 4, 8, 16	OBUFT_selectIO	OBUFTDS
OFD, 4, 8, 16	OFD_1	OFDDRCPE
OFDDRRSE	OFDDRTCPE	OFDDRTRSE
OFDE, 4, 8, 16	OFDE_1	OFDI
OFDI_1	OFDT, 4, 8, 16	OFDT_1
OFDX, 4, 8, 16	OFDX_1	OFDXI
OFDXI_1	OPAD, 4, 8, 16	OR2-9
OR12, 16	ORCY	PPC405 (Virtex-II Pro only)
PULLDOWN	PULLUP	RAM16X1D
RAM16X1D_1	RAM16XIS	RAM16XIS_1

### Virtex-II, Virtex-II Pro, Virtex-II Pro X Design Elements

RAM16X2D	RAM16X2S	RAM16X4D
RAM16X4S	RAM16X8D	RAM16X8S
RAM32X1D	RAM32X1D_1	RAM32X1S
RAM32X1S_1	RAM32X2S	RAM32X4S
RAM32X8S	RAM64X1D	RAM64X1D_1
RAM64X1S	RAM64X1S_1	RAM64X2S
RAM128X1S	RAM128X1S_1	RAMB16_Sn
RAMB16_Sm_Sn	ROC	ROCBUF
ROM16X1	ROM32X1	ROM64X1
ROM128X1	ROM256X1	SOP3-4
SR4CE, SR8CE, SR16CE	SR4CLE, SR8CLE, SR16CLE	SR4CLED, SR8CLED, SR16CLED
SR4RE, SR8RE, SR16RE	SR4RLE, SR8RLE, SR16RLE	SR4RLED, SR8RLED, SR16RLED
SRL16	SRL16_1	SRL16E
SRL16E_1	SRLC16	SRLC16_1
SRLC16E	SRLC16E_1	STARTBUF_architecture
STARTUP_VIRTEX2	TOC	TOCBUF
UPAD	VCC	XNOR2-9
XOR2-9	XORCY	XORCY_D
XORCY_L		



The table below indicates the supported design elements for XC95000/XV/XL. For a complete description, see the Product Data Sheets (<http://www.xilinx.com/partinfo/databook.htm#cp1d>).

**XC9500/XV/XL Design Elements**

ACC1	ACC4, 8, 16	ADD1
ADD4, 8, 16	ADSU1	ADSU4, 8, 16
AND2-9	BRLSHFT4, 8	BUF
BUF4, 8, 16	BUFE, 4, 8, 16	BUFG
BUFGSR	BUFGTS	BUFT, 4, 8, 16
CB2CE, CB4CE, CB8CE, CB16CE	CB2CLE, CB4CLE, CB8CLE, CB16CLE	CB2CLED, CB4CLED, CB8CLED, CB16CLED
CB2RE, CB4RE, CB8RE, CB16RE	CB2RLE, CB4RLE, CB8RLE, CB16RLE	CB2X1, CB4X1, CB8X1, CB16X1
CB2X2, CB4X2, CB8X2, CB16X2	CD4CE	CD4CLE
CD4RE	CD4RLE	CJ4CE, CJ5CE, CJ8CE
CJ4RE, CJ5RE, CJ8RE	COMP2, 4, 8, 16	COMPM2, 4, 8, 16
CR8CE, CR16CE	D2_4E	D3_8E
D4_16E	FD	FD4, 8, 16
FD4CE, FD8CE, FD16CE	FD4RE, FD8RE, FD16RE	FDC
FDCE	FDCP	FDCPE
FDP	FDPE	FDR
FDRE	FDRS	FDRSE
FDS	FDSE	FDSR
FDSRE	FJKC	FJKCE
FJKCP	FJKCPE	FJKP
FJKPE	FJKRSE	FJKSRE
FTC	FTCE	FTCLE
FTCP	FTCPE	FTCPLE
FTDCP	FTP	FTPE
FTPLE	FTRSE	FTRSLE
FTRSRE	FTRSLE	GND
IBUF, 4, 8, 16	IOBUFE	INV, 4, 8, 16
IOPAD, 4, 8, 16	IPAD, 4, 8, 16	LD
LD4, 8, 16	LDC	LDCP
LDP	M2_1	M2_1B1
M2_1B2	M2_1E	M4_1E
M8_1E	M16_1E	NAND2-9
NOR2-9	OBUF, 4, 8, 16	OBUFE, 4, 8, 16
OBUFT, 4, 8, 16	OPAD, 4, 8, 16	OR2-9
SOP3-4	SR4CE, SR8CE, SR16CE	SR4CLE, SR8CLE, SR16CLE
SR4CLED, SR8CLED, SR16CLED	SR4RE, SR8RE, SR16RE	SR4RLE, SR8RLE, SR16RLE

### XC9500/XV/XL Design Elements

SR4RLED, SR8RLED, SR16RLED	VCC	XNOR2-9
XOR2-9		



## CoolRunner XPLA3

The table below indicates the supported design elements for CoolRunner XPLA3. For a complete description, see the Product Data Sheets (<http://www.xilinx.com/partinfo/databook.htm#coolrunner>).

### CoolRunner XPLA3 Design Elements

ACC1	ACC4, 8, 16	ADD1
ADD4, 8, 16	ADSU1	ADSU4, 8, 16
AND2-9	BRLSHFT4, 8	BUF
BUF4, 8, 16	BUFE, 4, 8, 16	BUFG
BUFT, 4, 8, 16	CB2CE, CB4CE, CB8CE, CB16CE	CB2CLE, CB4CLE, CB8CLE, CB16CLE
CB2CLED, CB4CLED, CB8CLED, CB16CLED	CB2RE, CB4RE, CB8RE, CB16RE	CB2RLE, CB4RLE, CB8RLE, CB16RLE
CB2X1, CB4X1, CB8X1, CB16X1	CB2X2, CB4X2, CB8X2, CB16X2	CD4CE
CD4CLE	CD4RE	CD4RLE
CJ4CE, CJ5CE, CJ8CE	CJ4RE, CJ5RE, CJ8RE	COMP2, 4, 8, 16
COMPM2, 4, 8, 16	CR8CE, CR16CE	D2_4E
D3_8E	D4_16E	FD
FD4, 8, 16	FD4CE, FD8CE, FD16CE	FD4RE, FD8RE, FD16RE
FDC	FDCE	FDCP
FDCPE	FDP	FDPE
FDR	FDRE	FDRS
FDRSE	FDS	FDSE
FDSR	FDSRE	FJKC
FJKCE	FJKCP	FJKCPE
FJKP	FJKPE	FJKRSE
FJKSRE	FTC	FTCE
FTCLE	FTCP	FTCPE
FTCPLE	FTDCP	FTP
FTPE	FTPLE	FTRSE
FTRSLE	FTRSRE	FTRSLE
GND	IBUF, 4, 8, 16	INV, 4, 8, 16
IOBUFE	IOPAD, 4, 8, 16	IPAD, 4, 8, 16
LD	LD4, 8, 16	LDC
LDCP	LDP	M2_1
M2_1B1	M2_1B2	M2_1E
M4_1E	M8_1E	M16_1E
NAND2-9	NOR2-9	OBUF, 4, 8, 16
OBUFE, 4, 8, 16	OBUFT, 4, 8, 16	OPAD, 4, 8, 16
OR2-9	SOP3-4	SR4CE, SR8CE, SR16CE
SR4CLE, SR8CLE, SR16CLE	SR4CLED, SR8CLED, SR16CLED	SR4RE, SR8RE, SR16RE
SR4RLE, SR8RLE, SR16RLE	SR4RLED, SR8RLED, SR16RLED	VCC
XNOR2-9	XOR2-9	





The table below indicates the supported design elements for CoolRunner-II. For a complete description of CoolRunner-II, see the Product Data Sheets (<http://www.xilinx.com/partinfo/databook.htm#cooltwo>).

**CoolRunner-II Design Elements**

ACC1	ACC4, 8, 16	ADD1
ADD4, 8, 16	ADSU1	ADSU4, 8, 16
AND2-9	BRLSHFT4, 8	BUF
BUF4, 8, 16	BUFG	BUFGSR
BUFGTS	CB2CE, CB4CE, CB8CE, CB16CE	CB2CLE, CB4CLE, CB8CLE, CB16CLE
CB2CLED, CB4CLED, CB8CLED, CB16CLED	CB2RE, CB4RE, CB8RE, CB16RE	CB2RLE, CB4RLE, CB8RLE, CB16RLE
CB2X1, CB4X1, CB8X1, CB16X1	CB2X2, CB4X2, CB8X2, CB16X2	CBD2CE, CBD4CE, CBD8CE, CBD16CE
CBD2CLE, CBD4CLE, CBD8CLE, CBD16CLE	CBD2CLED, CBD4CLED, CBD8CLED, CBD16CLED	CBD2RE, CBD4RE, CBD8RE, CBD16RE
CBD2RLE, CBD4RLE, CBD8RLE, CBD16RLE	CBD2X1, CBD4X1, CBD8X1, CBD16X1	CBD2X2, CBD4X2, CBD8X2, CBD16X2
CD4CE	CD4CLE	CD4RE
CD4RLE	CDD4CE	CDD4CLE
CDD4RE	CDD4RLE	CJ4CE, CJ5CE, CJ8CE
CJ4RE, CJ5RE, CJ8RE	CJD4CE, CJD5CE, CJD8CE	CJD4RE, CJD5RE, CJD8RE
CLK_DIV2,4,6,8,10,12,14,16	CLK_DIV2,4,6,8,10,12,14,16R	CLK_DIV2,4,6,8,10,12,14,16RSD
CLK_DIV2,4,6,8,10,12,14,16SD	COMP2, 4, 8, 16	COMPM2, 4, 8, 16
CR8CE, CR16CE	CRD8CE, CRD16CE	D2_4E
D3_8E	D4_16E	FD
FD4, 8, 16	FD4CE, FD8CE, FD16CE	FD4RE, FD8RE, FD16RE
FDC	FDCE	FDCP
FDCPE	FDD	FDD4,8,16
FDD4CE, FDD8CE, FDD16CE	FDD4RE, FDD8RE, FDD16RE	FDDC
FDDCE	FDDCP	FDDCPE
FDDP	FDDPE	FDDR
FDDRE	FDDRS	FDDRSE
FDDS	FDDSE	FDDSR
FDDSRE	FDP	FDPE
FDR	FDRE	FDRS
FDRSE	FDS	FDSE
FDSR	FDSRE	FJKC
FJKCE	FJKCP	FJKCPE
FJKP	FJKPE	FJKRSE
FJKSRE	FTC	FTCE
FTCLE	FTCP	FTCPE
FTCPLE	FTDCE	FTDCLE
FTDCLEX	FTDCP	FTDRSE

### CoolRunner-II Design Elements

FTDRSLE	FTP	FTPE
FTPLE	FTRSE	FTRSLE
FTSRE	FTSRLE	GND
IBUF, 4, 8, 16	INV, 4, 8, 16	IOBUFE
IOPAD, 4, 8, 16	IPAD, 4, 8, 16	KEEPER
LD	LD4, 8, 16	LDC
LDCP	LDG	LDG4, 8, 16
LDP	M2_1	M2_1B1
M2_1B2	M2_1E	M4_1E
M8_1E	M16_1E	NAND2-9
NOR2-9	OBUF, 4, 8, 16	OBUFE, 4, 8, 16
OBUFT, 4, 8, 16	OPAD, 4, 8, 16	OR2-9
PULLDOWN	PULLUP	SOP3-4
SR4CE, SR8CE, SR16CE	SR4CLE, SR8CLE, SR16CLE	SR4CLED, SR8CLED, SR16CLED
SR4RE, SR8RE, SR16RE	SR4RLE, SR8RLE, SR16RLE	SR4RLED, SR8RLED, SR16RLED
SRD4CE, SRD8CE, SRD16CE	SRD4CLE, SRD8CLE, SRD16CLE	SRD4CLED, SRD8CLED, SRD16CLED
SRD4RE, SRD8RE, SRD16RE	SRD4RLE, SRD8RLE, SRD16RLE	SRD4RLED, SRD8RLED, SRD16RLED
VCC	XNOR2-9	XOR2-9

The following table lists the supported, primitive design elements for CoolRunner-IIS.

**CoolRunner-IIS Design Elements**

NAND2	NAND9	NOR7
NAND2B1	NOR2	NOR8
NAND2B2	NOR2B1	NOR9
NAND3	NOR2B2	OBUF
NAND3B1	NOR3	OBUF16
NAND3B2	NOR3B1	OBUF4
NAND3B3	NOR3B2	OBUF8
NAND4	NOR3B3	OBUFE
NAND4B1	NOR4	OBUFE16
NAND4B2	NOR4B1	OBUFE4
NAND4B3	NOR4B2	OBUFE8
NAND4B4	NOR4B3	OBUFT
NAND5	NOR4B4	OBUFT16
NAND5B1	NOR5	OBUFT4
NAND5B2	NOR5B1	OBUFT8
NAND5B3	NOR5B2	OPAD
NAND5B4	NOR5B3	OPAD16
NAND5B5	NOR5B4	OPAD4
NAND6	NOR5B5	OPAD8
NAND7	NOR6	PULLDOWN
NAND8		



# Functional Categories

---

This section categorizes, by function, the logic elements that are described in detail in the “Design Elements” sections. Each category is briefly described. Tables under each category identify all the available elements for the function and indicate which libraries include the element.

- “Arithmetic Functions”
- “Buffers”
- “Comparators”
- “Counters”
- “Decoders”
- “Edge Decoders”
- “Flip-Flops”
- “General”
- “Input Latches”
- “Input/Output Flip-Flops”
- “Input/Output Functions”
- “Latches”
- “Logic Primitives”
- “Map Elements”
- “Multiplexers”
- “Memory Elements”
- “Shifters”
- “Shift Registers”

Elements are listed in alphanumeric order under each category.

See the Xilinx Unified Libraries chapter for information on the specific device families that use each library. "N/A" column means that the element does not apply.

"RPM" refers to Relationally Placed Macros. RPMs are “soft” macros that contain relative location constraint (RLOC) information. The Xilinx libraries contain three types of elements.

- Primitives are basic logical elements such as AND2 and OR2 gates.
- Soft macros are schematics made by combining primitives and sometimes other soft macros.

- Relationally placed macros (RPMs) are soft macros that contain relative location constraint (RLOC) information, carry logic symbols, and FMAP symbols, where appropriate.

The last item mentioned above, RPMs, applies only to FPGA families.

The relationally placed macro (RPM) library uses RLOC constraints to define the order and structure of the underlying design primitives. Because these macros are built upon standard schematic parts, they do not have to be translated before simulation. The components that are implemented as RPMs are listed in the “[Slice Count](#)” section.


Designs created with RPMs can be functionally simulated. RPMs can, but need not, include all the following elements.

- FMAPs and CLB-grouping attributes to control mapping. FMAPs have pin-lock attributes, which allow better control over routing.
- Relative location (RLOC) constraints to provide placement structure. They allow positioning of elements relative to each other.
- Carry logic primitive symbols.

The RPM library offers the functionality and precision of the hard macro library with added flexibility. You can optimize RPMs and merge other logic within them. The elements in the RPM library allow you to access carry logic easily and to control mapping and block placement. Because RPMs are a superset of ordinary macros, you can design them in the normal design entry environment. They can include any primitive logic. The macro logic is fully visible to you and can be easily back-annotated with timing information.

## Arithmetic Functions

There are three types of arithmetic functions: accumulators (ACC), adders (ADD), and adder/subtractors (ADSU). With an ADSU, either unsigned binary or twos-complement operations cause an overflow. If the result crosses the overflow boundary, an overflow is generated. Similarly, when the result crosses the carry-out boundary, a carry-out is generated. The following figure shows the ADSU carry-out and overflow boundaries.

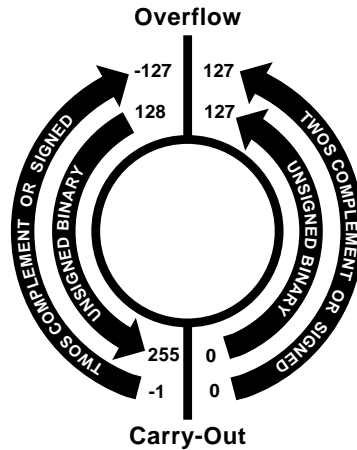

X4720

ADSU Carry-Out and Overflow Boundaries

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
ACC1	1-Bit Loadable Cascadable Accumulator with Carry-In, Carry-Out, and Synchronous Reset	No	No	No	No	Macro	Macro	Macro	No
ACC16	16-Bit Loadable Cascadable Accumulator with Carry-In, Carry-Out, and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
ACC4	4-Bit Loadable Cascadable Accumulator with Carry-In, Carry-Out, and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
ACC8	8-Bit Loadable Cascadable Accumulator with Carry-In, Carry-Out, and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
ADD1	1-Bit Full Adder with Carry-In and Carry-Out	No	No	No	No	Macro	Macro	Macro	No
ADD16	16-Bit Cascadable Full Adder with Carry-In, Carry-Out, and Overflow	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
ADD4	4-Bit Cascadable Full Adder with Carry-In, Carry-Out, and Overflow	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
ADD8	8-Bit Cascadable Full Adder with Carry-In, Carry-Out, and Overflow	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
ADSU1	1-Bit Cascadable Adder/ Subtractor with Carry-In, Carry-Out	No	No	No	No	Macro	Macro	Macro	No
ADSU16	16-Bit Cascadable Adder/ Subtractor with Carry-In, Carry-Out, and Overflow	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
ADSU4	4-Bit Cascadable Adder/ Subtractor with Carry-In, Carry-Out, and Overflow	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
ADSU8	8-Bit Cascadable Adder/ Subtractor with Carry-In, Carry-Out, and Overflow	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
MULT18X18	18 x 18 Signed Multiplier	No	Primitive	No	Primitive	No	No	No	No
MULT18X18S	18 x 18 Signed Multiplier -- Registered Version	No	Primitive	No	Primitive	No	No	No	No



The buffers in this section route high fanout signals, 3-state signals, and clocks inside a PLD device. The “[Input/Output Functions](#)” section covers off-chip interfaces.

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500/XV/XL	CR XPLA3	CR-II	CR-IIS
BUF	General Purpose Buffer	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
BUF16	16-Bit General Purpose Buffer	No	No	No	No	Macro	Macro	Macro	No
BUF4	4-Bit General Purpose Buffer	No	No	No	No	Macro	Macro	Macro	No
BUF8	8-Bit General Purpose Buffer	No	No	No	No	Macro	Macro	Macro	No
BUFCF	Fast Connect Buffer	Primitive	Primitive	Primitive	Primitive	No	No	No	No
BUFE	Internal 3-State Buffer with Active High Enable. Not supported for XC9500XL and XC9500XV devices	Primitive	No	Primitive	Primitive	Primitive*	Primitive	No	No
BUFE16	Internal 3-State Buffer with Active High Enable. Not supported for XC9500XL and XC9500XV devices	Macro	No	Macro	Macro	Macro*	Macro	No	No
BUFE4	Internal 3-State Buffer with Active High Enable. Not supported for XC9500XL and XC9500XV devices	Macro	No	Macro	Macro	Macro*	Macro	No	No
BUFE8	Internal 3-State Buffer with Active High Enable. Not supported for XC9500XL and XC9500XV devices	Macro	No	Macro	Macro	Macro*	Macro	No	No
BUFG	Global Clock Buffer	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500/XV/XL	CR XPLA3	CR-II	CR-IIS
BUFGCE	Global Clock MUX with Clock Enable and Output State 0	No	Primitive	No	Primitive	No	No	No	No
BUFGCE_1	Global Clock MUX Buffer with Clock Enable and Output State 1	No	Primitive	No	Primitive	No	No	No	No
BUFGDLL	Clock Delay Locked Loop Buffer	Primitive	Primitive	Primitive	Primitive	No	No	No	No
BUFGMUX	Global Clock MUX Buffer with Output State 0	No	Primitive	No	Primitive	No	No	No	No
BUFGMUX_1	Global Clock MUX with Output State 1	No	Primitive	No	Primitive	No	No	No	No
BUFGP	Primary Global Buffer for Driving Clocks or Longlines (Four per PLD Device)	Primitive	Primitive	Primitive	Primitive	No	No	No	No
BUFGSR	Global Set/Reset Input Buffer	No	No	No	No	Primitive	Primitive	Primitive	No
BUFGTS	Global 3-State Input Buffer	No	No	No	No	Primitive	Primitive	Primitive	No
BUFT	Internal 3-State Buffer with Active-Low Enable. Not supported for XC9500XL and XC9500XV devices	Primitive	No	Primitive	Primitive	Primitive*	Primitive	No	No
BUFT16	Internal 3-State Buffer with Active-Low Enable. Not supported for XC9500XL and XC9500XV devices	Macro	No	Macro	Macro	Macro*	Macro	No	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500/XV/XL	CR XPLA3	CR-II	CR-IIS
BUFT4	Internal 3-State Buffer with Active-Low Enable. Not supported for XC9500XL and XC9500XV devices.	Macro	No	Macro	Macro	Macro*	Macro	No	No
BUFT8	Internal 3-State Buffer with Active-Low Enable. Not supported for XC9500XL and XC9500XV devices.	Macro	No	Macro	Macro	Macro*	Macro	No	No






# Comparators

Following is a list of comparators.

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
COMP16	16-Bit Identity Comparator	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
COMP2	2-Bit Identity Comparator	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
COMP4	4-Bit Identity Comparator	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
COMP8	8-Bit Identity Comparator	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
COMPM 16	16-Bit Magnitude Comparator	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
COMPM 2	2-Bit Magnitude Comparator	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
COMPM 2	2-Bit Magnitude Comparator	Macro	Macro	Macro	Macro	No	No	No	No
COMPM 4	4-Bit Magnitude Comparator	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
COMPM 4	4-Bit Magnitude Comparator	Macro	Macro	Macro	Macro	No	No	No	No
COMPM 8	8-Bit Magnitude Comparator	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
COMPM 8	8-Bit Magnitude Comparator	Macro	Macro	Macro	Macro	No	No	No	No




There are six types of counters with various synchronous and asynchronous inputs. The name of the counter defines the modulo or bit size, the counter type, and which control functions are included. The counter naming convention is shown in the following figure.

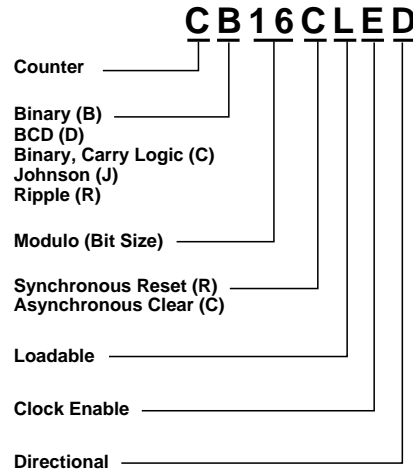

X4577

### Counter Naming Convention

A carry-lookahead design accommodates large counters without extra gating. On TTL 7400-type counters with trickle clock enable (ENT), parallel clock enable (ENP), and ripple carry-out (RCO), both the ENT and ENP inputs must be High to count. ENT is propagated forward to enable RCO, which produces a High output with the approximate duration of the QA output. The following figure illustrates a carry-lookahead design.

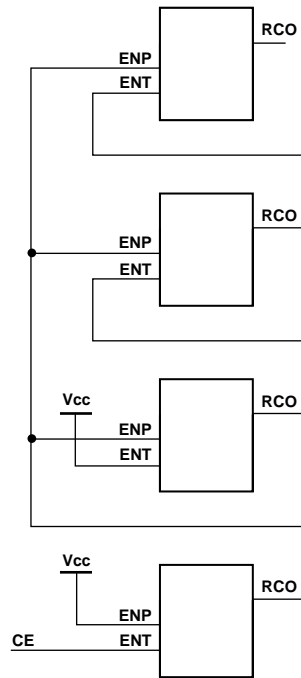

X4719

### Carry-Lookahead Design

The RCO output of the first stage of the ripple carry is connected to the ENP input of the second stage and all subsequent stages. The RCO output of the second stage and all subsequent stages is connected to the ENT input of the next stage. The ENT of the second stage is always enabled/tied to VCC. CE is always connected to the ENT input of the first stage. This cascading method allows the first stage of the ripple carry to be built as a prescaler. In other words, the first stage is built to count very fast.

**Note:** For counters, do not use TC (or any other gated signal) as a clock. Possible glitches may not always allow for a proper setup time when using gated signals.

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/ XL	CR XPLA3	CR-II	CR-IIS
CB16RE	16-Bit Cascadable Binary Counter with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
CB16RLE	16-Bit Loadable Cascadable Binary Counter with Clock Enable and Synchronous Reset	No	No	No	Macro	Macro	Macro	No	No



Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/ XL	CR XPLA3	CR-II	CR-IIS
CB16X1	16-Bit Loadable Cascadable Bidirectional Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	Macro	Macro	Macro	No	No
CB16X2	16-Bit Loadable Cascadable Bidirectional Binary Counter with Clock Enable and Synchronous Reset	No	No	No	Macro	Macro	Macro	No	No
CB2CE	2-Bit Cascadable Binary Counter with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
CB2RE	2-Bit Cascadable Binary Counter with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
CB2RLE	2-Bit Loadable Cascadable Binary Counter with Clock Enable and Synchronous Reset	No	No	No	Macro	Macro	Macro	No	No
CB2X1	2-Bit Loadable Cascadable Bidirectional Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	Macro	Macro	Macro	No	No
CB2X2	2-Bit Loadable Cascadable Bidirectional Binary Counter with Clock Enable and Synchronous Reset	No	No	No	Macro	Macro	Macro	No	No
CB4CE	4-Bit Cascadable Binary Counter with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/ XL	CR XPLA3	CR-II	CR-IIS
CB4RE	4-Bit Cascadable Binary Counter with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
CB4RLE	4-Bit Loadable Cascadable Binary Counter with Clock Enable and Synchronous Reset	No	No	No	Macro	Macro	Macro	No	No
CB4X1	4-Bit Loadable Cascadable Bidirectional Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	Macro	Macro	Macro	No	No
CB4X2	4-Bit Loadable Cascadable Bidirectional Binary Counter with Clock Enable and Synchronous Reset	No	No	No	Macro	Macro	Macro	No	No
CB8CE	8-Bit Cascadable Binary Counter with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
CB8RE	8-Bit Cascadable Binary Counter with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
CB8RLE	8-Bit Loadable Cascadable Binary Counter with Clock Enable and Synchronous Reset	No	No	No	Macro	Macro	Macro	No	No
CB8X1	8-Bit Loadable Cascadable Bidirectional Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	Macro	Macro	Macro	No	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/ XL	CR XPLA3	CR-II	CR-IIS
CB8X2	8-Bit Loadable Cascadable Bidirectional Binary Counter with Clock Enable and Synchronous Reset	No	No	No	Macro	Macro	Macro	No	No
CBD16CE	16-Bit Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	Macro	No	No
CBD16CE	16-Bit Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CBD16CLE	16-Bit Loadable Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CBD16CLE	16-Bit Loadable Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CBD16CLE D	16-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CBD16RE	16-Bit Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/ XL	CR XPLA3	CR-II	CR-IIS
CBD16RE	16-Bit Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD16RELE	16-Bit Loadable Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD16RLE	16-Bit Loadable Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD16X1	16-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CBD16X1	16-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CBD16X2	16-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/ XL	CR XPLA3	CR-II	CR-IIS
CBD16X2	16-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD2CE	2-Bit Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	Macro	No	No
CBD2CE	2-Bit Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CBD2CLE	2-Bit Loadable Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CBD2CLE	2-Bit Loadable Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CBD2CLE D	2-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/ XL	CR XPLA3	CR-II	CR-IIS
CBD2RE	2-Bit Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD2RE	2-Bit Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD2RLE	2-Bit Loadable Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD2RLE	2-Bit Loadable Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD2X1	2-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CBD2X1	2-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/ XL	CR XPLA3	CR-II	CR-IIS
CBD2X2	2-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD2X2	2-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD4CE	4-Bit Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	Macro	No	No
CBD4CE	4-Bit Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CBD4CLE	4-Bit Loadable Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CBD4CLE	4-Bit Loadable Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/ XL	CR XPLA3	CR-II	CR-IIS
CBD4CLE D	4-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CBD4RE	4-Bit Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD4RE	4-Bit Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD4RLE	4-Bit Loadable Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD4RLE	4-Bit Loadable Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD4X1	4-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No



Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/ XL	CR XPLA3	CR-II	CR-IIS
CBD4X1	4-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CBD4X2	4-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD4X2	4-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD8CE	8-Bit Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	Macro	No	No
CBD8CE	8-Bit Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CBD8CLE	8-Bit Loadable Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/ XL	CR XPLA3	CR-II	CR-IIS
CBD8CLE	8-Bit Loadable Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CBD8CLE D	8-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CBD8RE	8-Bit Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD8RE	8-Bit Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD8RLE	8-Bit Loadable Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD8RLE	8-Bit Loadable Cascadable Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD8X1	8-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/ XL	CR XPLA3	CR-II	CR-IIS
CBD8X1	8-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CBD8X2	8-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CBD8X2	8-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CC16CE	16-Bit Cascadable Binary Counter with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	No	No	No	No
CC16CLE	16-Bit Loadable Cascadable Binary Counter with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	No	No	No	No
CC16CLED	16-Bit Loadable Cascadable Bidirectional Binary Counter with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	No	No	No	No
CC16RE	16-Bit Cascadable Binary Counter with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	No	No	No	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/ XL	CR XPLA3	CR-II	CR-IIS
CC8CE	8-Bit Cascadable Binary Counter with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	No	No	No	No
CC8CLE	8-Bit Loadable Cascadable Binary Counter with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	No	No	No	No
CC8CLED	8-Bit Loadable Cascadable Bidirectional Binary Counter with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	No	No	No	No
CC8RE	8-Bit Cascadable Binary Counter with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	No	No	No	No
CD16CE		Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
CD4CE	4-Bit Cascadable BCD Counter with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
CD4CLE	4-Bit Loadable Cascadable BCD Counter with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
CD4RE	4-Bit Cascadable BCD Counter with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
CD4RLE	4-Bit Loadable Cascadable BCD Counter with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/ XL	CR XPLA3	CR-II	CR-IIS
CDD4CE	4-Bit Cascadable Dual Edge Triggered BCD Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CDD4CLE	4-Bit Loadable Cascadable Dual Edge Triggered BCD Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CDD4RE	4-Bit Cascadable Dual Edge Triggered BCD Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CDD4RLE	4-Bit Loadable Cascadable Dual Edge Triggered BCD Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CJ4CE	4-Bit Johnson Counter with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
CJ4RE	4-Bit Johnson Counter with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
CJ5CE	5-Bit Johnson Counter with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
CJ5RE	5-Bit Johnson Counter with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
CJ8CE	8-Bit Johnson Counter with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No


Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/ XL	CR XPLA3	CR-II	CR-IIS
CJ8RE	8-Bit Johnson Counter with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
CJD4CE	4-Bit Dual Edge Triggered Johnson Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CJD4RE	4-Bit Dual Edge Triggered Johnson Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CJD5CE	5-Bit Dual Edge Triggered Johnson Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CJD5RE	5-Bit Dual Edge Triggered Johnson Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CJD8CE	8-Bit Dual Edge Triggered Johnson Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CJD8RE	8-Bit Dual Edge Triggered Johnson Counter with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
CR16CE	16-Bit Negative-Edge Binary Ripple Counter with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/ XL	CR XPLA3	CR-II	CR-IIS
CR8CE	8-Bit Negative-Edge Binary Ripple Counter with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
CRD16CE	16-Bit Dual-Edge Triggered Binary Ripple Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
CRD8CE	8-Bit Dual-Edge Triggered Binary Ripple Counter with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No





Decoder names, shown in the following figure, indicate the number of inputs and outputs and whether or not an enable is available. Decoders with an enable can be used as multiplexers.

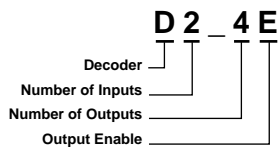

X4619

### Decoder Naming Convention

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
D2_4E	2- to 4-Line Decoder/ Demultiplexer with Enable	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
D3_8E	3- to 8-Line Decoder/ Demultiplexer with Enable	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
D4_16E	4- to 16-Line Decoder/ Demultiplexer with Enable	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
DEC_CC16	16-Bit Active Low Decoder	Macro	Macro	Macro	Macro	No	No	No	No
DEC_CC4	4-Bit Active Low Decoder	Macro	Macro	Macro	Macro	No	No	No	No
DEC_CC8	8-Bit Active Low Decoder	Macro	Macro	Macro	Macro	No	No	No	No






## Edge Decoders

Edge decoders are open-drain wired AND gates that are available in different bit sizes.

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
DECODE16	16-Bit Active-Low Decoder	Macro	Macro	Macro	No	No	No	No	No
DECODE32	32-Bit Active-Low Decoder	Macro	Macro	Macro	Macro	No	No	No	No
DECODE4	4-Bit Active-Low Decoder	Macro	Macro	Macro	No	No	No	No	No
DECODE64	64-Bit Active-Low Decoder	Macro	Macro	Macro	Macro	No	No	No	No
DECODE8	8-Bit Active-Low Decoder	Macro	Macro	Macro	No	No	No	No	No



There are three types of flip-flops (D, J-K, toggle) with various synchronous and asynchronous inputs. Some are available with inverted clock inputs and/or the ability to set in response to global set/reset rather than reset. The naming convention shown in the following figure provides a description for each flip-flop. D-type flip-flops are available in multiples of up to 16 in one macro.

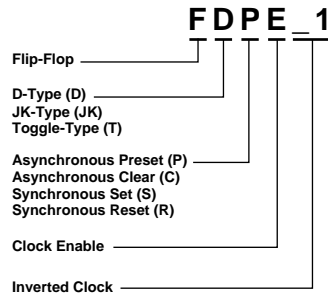

X4579

### Flip-Flop Naming Convention

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
FD	D Flip-Flop	Primitive	Primitive	Primitive	Primitive	Macro	Macro	Macro	No
FD_1	D Flip-Flop with Negative-Edge Clock	Primitive	Primitive	Primitive	Primitive	No	No	No	No
FD16	Multiple D Flip-Flop	No	No	No	No	Macro	Macro	Macro	No
FD16CE	16-Bit Data Register with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
FD16RE	16-Bit Data Register with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
FD4	Multiple D Flip-Flop	No	No	No	No	Macro	Macro	Macro	No
FD4CE	4-Bit Data Register with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
FD4RE	4-Bit Data Register with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
FD8	Multiple D Flip-Flop	No	No	No	No	Macro	Macro	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
FD8CE	8-Bit Data Register with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
FD8RE	8-Bit Data Register with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
FDC	D Flip-Flop with Asynchronous Clear	Primitive	Primitive	Primitive	Primitive	Macro	Macro	Macro	No
FDC_1	D Flip-Flop with Negative-Edge Clock and Asynchronous Clear	Primitive	Primitive	Primitive	Primitive	No	No	No	No
FDCE	D Flip-Flop with Clock Enable and Asynchronous Clear	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
FDCE_1	D Flip-Flop with Negative-Edge Clock, Clock Enable, and Asynchronous Clear	Primitive	Primitive	Primitive	Primitive	No	No	No	No
FDCP	D Flip-Flop with Asynchronous Preset and Clear	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
FDCP_1	D Flip-Flop with Negative-Edge Clock and Asynchronous Preset and Clear	Primitive	Primitive	Primitive	Primitive	No	No	No	No
FDCP_1	D Flip-Flop with Negative-Edge Clock and Asynchronous Preset and Clear	Primitive	Primitive	Primitive	Primitive	No	No	No	No
FDCPE	D Flip-Flop with Clock Enable and Asynchronous Preset and Clear	Primitive	Primitive	Primitive	Primitive	Macro	Macro	Primitive	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
FDCPE_1	D Flip-Flop with Negative-Edge Clock, Clock Enable, and Asynchronous Preset and Clear	Primitive	Primitive	Primitive	No	No	No	No	No
FDD	Dual Edge Triggered D Flip-Flop	No	No	No	No	No	No	Macro	No
FDD16	Multiple Dual Edge Triggered D Flip-Flop	No	No	No	No	No	No	Macro	No
FDD16CE	16-Bit Dual Edge Triggered Data Register with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
FDD16RE	16-Bit Dual Edge Triggered Data Register with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
FDD4	Multiple Dual Edge Triggered D Flip-Flop	No	No	No	No	No	No	Macro	No
FDD4CE	4-Bit Dual Edge Triggered Data Register with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
FDD4RE	4-Bit Dual Edge Triggered Data Register with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
FDD8	Multiple Dual Edge Triggered D Flip-Flop	No	No	No	No	No	No	Macro	No
FDD8CE	8-Bit Dual Edge Triggered Data Register with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
FDD8RE	8-Bit Dual Edge Triggered Data Register with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
FDDC	D Dual Edge Triggered Flip-Flop with Asynchronous Clear	No	No	No	No	No	No	Macro	No
FDDCE	Dual Edge Triggered D Flip-Flop with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Primitive	No
FDDCP	Dual Edge Triggered D Flip-Flop Asynchronous Preset and Clear	No	No	No	No	No	No	Primitive	No
FDDCPE	Dual Edge Triggered D Flip-Flop with Clock Enable and Asynchronous Preset and Clear	No	No	No	No	No	No	Macro	No
FDDP	Dual Edge Triggered D Flip-Flop with Asynchronous Preset	No	No	No	No	No	No	Macro	No
FDDPE	Dual Edge Triggered D Flip-Flop with Clock Enable and Asynchronous Preset	No	No	No	No	No	No	Primitive	No
FDDR	Dual Edge Triggered D Flip-Flop with Synchronous Reset	No	No	No	No	No	No	Macro	No
FDDRCPE	Dual Data Rate D Flip-Flop with Clock Enable and Asynchronous Preset and Clear	No	Primitive	No	Primitive	No	No	No	No
FDDRE	Dual Edge Triggered D Flip-Flop with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No



Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
FDDRRSE	Dual Data Rate D Flip-Flop with Clock Enable and Synchronous Reset and Set	No	Primitive	No	Primitive	No	No	No	No
FDDRSE	Dual Edge Triggered D Flip-Flop with Synchronous Reset and Set	No	No	No	No	No	No	Macro	No
FDDRSE	Dual Edge Triggered D Flip-Flop with Synchronous Reset and Set and Clock Enable	No	No	No	No	No	No	Macro	No
FDDS	Dual Edge Triggered D Flip-Flop with Synchronous Set	No	No	No	No	No	No	Macro	No
FDDSE	D Flip-Flop with Clock Enable and Synchronous Set	No	No	No	No	No	No	Macro	No
FDDSR	Dual Edge Triggered D Flip-Flop with Synchronous Set and Reset	No	No	No	No	No	No	Macro	No
FDDSRSE	Dual Edge Triggered D Flip-Flop with Synchronous Set and Reset and Clock Enable	No	No	No	No	No	No	Macro	No
FDE	D Flip-Flop with Clock Enable	Primitive	Primitive	Primitive	Primitive	No	No	No	No
FDE_1	D Flip-Flop with Negative-Edge Clock and Clock Enable	Primitive	Primitive	Primitive	Primitive	No	No	No	No
FDP	D Flip-Flop with Asynchronous Preset	Primitive	Primitive	Primitive	Primitive	Macro	Macro	Macro	No
FDP_1	D Flip-Flop with Negative-Edge Clock and Asynchronous Preset	Primitive	Primitive	Primitive	Primitive	No	No	No	No
FDPE	D Flip-Flop with Clock Enable and Asynchronous Preset	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
FDPE_1	D Flip-Flop with Negative-Edge Clock, Clock Enable, and Asynchronous Preset	Primitive	Primitive	Primitive	Primitive	No	No	No	No
FDR	D Flip-Flop with Synchronous Reset	Primitive	Primitive	Primitive	Primitive	Macro	Macro	Macro	No
FDR_1	D Flip-Flop with Negative-Edge Clock and Synchronous Reset	Primitive	Primitive	Primitive	Primitive	No	No	No	No
FDRE	D Flip-Flop with Clock Enable and Synchronous Reset	Primitive	Primitive	Primitive	Primitive	Macro	Macro	Macro	No
FDRE_1	D Flip-Flop with Negative-Clock Edge, Clock Enable, and Synchronous Reset	Primitive	Primitive	Primitive	Primitive	No	No	No	No
FDRS	D Flip-Flop with Synchronous Reset and Set	Primitive	Primitive	Primitive	Primitive	Macro	Macro	Macro	No
FDRS_1	D Flip-Flop with Negative-Clock Edge and Synchronous Reset and Set	Primitive	Primitive	Primitive	Primitive	No	No	No	No
FJKRSE	J-K Flip-Flop with Clock Enable and Synchronous Reset and Set	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
FJKSRE	J-K Flip-Flop with Clock Enable and Synchronous Set and Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
FTC	Toggle Flip-Flop with Toggle Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
FTCE	Toggle Flip-Flop with Toggle and Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
FTCLE	Toggle/ Loadable Flip-Flop with Toggle and Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
FTCLEX	Toggle/ Loadable Flip-Flop with Toggle and Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	No	No	No	No
FTCLEX	Toggle/ Loadable Flip-Flop with Toggle and Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	No	No	No	No
FTCP	Toggle Flip-Flop with Toggle Enable and Asynchronous Clear and Preset	No	No	No	No	Primitive	Primitive	Primitive	No
FTCPE	Toggle Flip-Flop with Toggle and Clock Enable and Asynchronous Clear and Preset	No	No	No	No	Macro	Macro	Macro	No
FTCPLE	Loadable Toggle Flip-Flop with Toggle and Clock Enable and Asynchronous Clear and Preset	No	No	No	No	Macro	Macro	Macro	No
FTDCE	Dual Edge Triggered Toggle Flip-Flop with Toggle and Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
FTDCLE	Dual Edge Triggered Toggle/ Loadable Flip-Flop with Toggle and Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
FTDCP	Toggle Flip-Flop with Toggle Enable and Asynchronous Clear and Preset	No	No	No	No	Primitive	Primitive	Primitive	No
FTDRSE	Dual Edge Triggered Toggle Flip-Flop with Toggle and Clock Enable and Synchronous Reset and Set	No	No	No	No	No	No	Macro	No
FTP	Toggle Flip-Flop with Toggle Enable and Asynchronous Preset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
FTPE	Toggle Flip-Flop with Toggle and Clock Enable and Asynchronous Preset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
FTPLE	Toggle/ Loadable Flip-Flop with Toggle and Clock Enable and Asynchronous Preset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
FTRSE	Toggle Flip-Flop with Toggle and Clock Enable and Synchronous Reset and Set	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
FTRSLE	Toggle/ Loadable Flip-Flop with Toggle and Clock Enable and Synchronous Reset and Set	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
FTRSLE	Toggle/ Loadable Flip-Flop with Toggle and Clock Enable and Synchronous Reset and Set	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
FTSRE	Toggle Flip-Flop with Toggle and Clock Enable and Synchronous Set and Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
FTSRLE	Toggle/ Loadable Flip-Flop with Toggle and Clock Enable and Synchronous Set and Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No



General elements include FPGA configuration functions, oscillators, boundary scan logic, and other functions not classified in other sections.

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
BSCAN_SPARTAN2	Spartan-II Boundary Scan Logic Control Circuit.	Primitive*	No	No	No	No	No	No	No
BSCAN_SPARTAN3	Spartan-3 Boundary Scan Logic Control Circuit	No	Primitive	No	No	No	No	No	No
BSCAN_VIRTEX	Virtex Boundary Scan Logic Control Circuit.	Primitive*	No	Primitive	No	No	No	No	No
BSCAN_VIRTEX2	Virtex2 Boundary Scan Logic Control Circuit	No	No	No	Primitive	No	No	No	No
CAPTURE_SPARTAN2	Spartan-II Register State Capture for Bitstream Readback	Primitive	No	No	No	No	No	No	No
CAPTURE_SPARTAN3	Spartan-3 Register State Capture for Bitstream Readback	No	Primitive	No	No	No	No	No	No
CAPTURE_VIRTEX	Virtex Register State Capture for Bitstream Readback	No	No	Primitive	No	No	No	No	No
CAPTURE_VIRTEX2	Virtex-II Register State Capture for Bitstream Readback	No	No	No	Primitive	No	No	No	No
CLK_DIV10	Global Clock Divider	No	No	No	No	No	No	Primitive	No
CLK_DIV10R	Global Clock Divider with Synchronous Reset	No	No	No	No	No	No	Primitive	No
CLK_DIV10RSD	Global Clock Divider with Synchronous Reset and Start Delay	No	No	No	No	No	No	Primitive	No
CLK_DIV10SD	Global Clock Divider with Start Delay	No	No	No	No	No	No	Primitive	No
CLK_DIV12	Global Clock Divider	No	No	No	No	No	No	Primitive	No
CLK_DIV12R	Global Clock Divider with Synchronous Reset	No	No	No	No	No	No	Primitive	No
CLK_DIV12RSD	Global Clock Divider with Synchronous Reset and Start Delay	No	No	No	No	No	No	Primitive	No
CLK_DIV12SD	Global Clock Divider with Start Delay	No	No	No	No	No	No	Primitive	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
CLK_DIV14	Global Clock Divider	No	No	No	No	No	No	Primitive	No
CLK_DIV14R	Global Clock Divider with Synchronous Reset	No	No	No	No	No	No	Primitive	No
CLK_DIV14RSD	Global Clock Divider with Synchronous Reset and Start Delay	No	No	No	No	No	No	Primitive	No
CLK_DIV14SD	Global Clock Divider with Start Delay	No	No	No	No	No	No	Primitive	No
CLK_DIV16	Global Clock Divider	No	No	No	No	No	No	Primitive	No
CLK_DIV16R	Global Clock Divider with Synchronous Reset	No	No	No	No	No	No	Primitive	No
CLK_DIV16RSD	Global Clock Divider with Synchronous Reset and Start Delay	No	No	No	No	No	No	Primitive	No
CLK_DIV16SD	Global Clock Divider with Start Delay	No	No	No	No	No	No	Primitive	No
CLK_DIV2	Global Clock Divider	No	No	No	No	No	No	Primitive	No
CLK_DIV2R	Global Clock Divider with Synchronous Reset	No	No	No	No	No	No	Primitive	No
CLK_DIV2RSD	Global Clock Divider with Synchronous Reset and Start Delay	No	No	No	No	No	No	Primitive	No
CLK_DIV2SD	Global Clock Divider with Start Delay	No	No	No	No	No	No	Primitive	No
CLK_DIV4	Global Clock Divider	No	No	No	No	No	No	Primitive	No
CLK_DIV4R	Global Clock Divider with Synchronous Reset	No	No	No	No	No	No	Primitive	No
CLK_DIV4RSD	Global Clock Divider with Synchronous Reset and Start Delay	No	No	No	No	No	No	Primitive	No
CLK_DIV4SD	Global Clock Divider with Start Delay	No	No	No	No	No	No	Primitive	No
CLK_DIV6	Global Clock Divider	No	No	No	No	No	No	Primitive	No
CLK_DIV6R	Global Clock Divider with Synchronous Reset	No	No	No	No	No	No	Primitive	No



Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
CLK_DIV6RSD	Global Clock Divider with Synchronous Reset and Start Delay	No	No	No	No	No	No	Primitive	No
CLK_DIV6SD	Global Clock Divider with Start Delay	No	No	No	No	No	No	Primitive	No
CLK_DIV8	Global Clock Divider	No	No	No	No	No	No	Primitive	No
CLK_DIV8R	Global Clock Divider with Synchronous Reset	No	No	No	No	No	No	Primitive	No
CLK_DIV8RSD	Global Clock Divider with Synchronous Reset and Start Delay	No	No	No	No	No	No	Primitive	No
CLK_DIV8SD	Global Clock Divider with Start Delay	No	No	No	No	No	No	Primitive	No
CLKDLL	Clock Delay Locked Loop. * Use CLKDLLE for Spartan-II and Virtex-E	Primitive*	No	Primitive*	No	No	No	No	No
CLKDLLE	Clock Delay Locked Loop with Expanded Output.	Primitive*	No	Primitive*	No	No	No	No	No
CLKDLLHF	High Frequency Clock Delay Locked Loop. *Use CLKDLLHF for the Virtex-E DLL in HF mode. In LF mode, both the separate CLKDLLE and CLKDLL primitive can be used.	Primitive	No	Primitive*	No	No	No	No	No
DCM	Digital Clock Manager	No	Primitive	No	Primitive	No	No	No	No
GND	Ground-Connection Signal Tag	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
ICAP_VIRTEX2	User Interface to Virtex-II Internal Configuration Access Port	No	No	No	Primitive	No	No	No	No
JTAGPPC	JTAG Primitive for the Power PC. * Not supported for Virtex-II. Supported for Virtex-II PRO only.	No	No	No	Primitive	No	No	No	No
KEEPER	KEEPER Symbol	Primitive	Primitive	Primitive	Primitive	No*	No	Primitive	No
LUT1	1-Bit Look-Up-Table with General Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
LUT1_D	1-Bit Look-Up-Table with Dual Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
LUT1_L	1-Bit Look-Up-Table with Local Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
LUT2	2-Bit Look-Up-Table with General Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
LUT2_D	2-Bit Look-Up-Table with Dual Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
LUT2_L	2-Bit Look-Up-Table with Local Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
LUT3	3-Bit Look-Up-Table with General Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
LUT3_D	3-Bit Look-Up-Table with Dual Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
LUT3_L	3-Bit Look-Up-Table with Local Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
LUT4	4-Bit Look-Up-Table with General Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
LUT4_D	4-Bit Look-Up-Table with Dual Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
LUT4_L	4-Bit Look-Up-Table with Local Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
PPC405	Primitive for the Power PC Core. * Not supported for Virtex-II. Supported for Virtex-II PRO only.	No	No	No	Primitive*	No	No	No	No
PULLDOWN	Resistor to GND for Input Pads	Primitive	Primitive	Primitive	Primitive	No	No	Primitive	Primitive
PULLUP	Resistor to VCC for Input PADS, Open-Drain, and 3-State Outputs	Primitive	Primitive	Primitive	Primitive	No	Primitive	Primitive	No
ROC	Reset On Configuration	Primitive	Primitive	Primitive	Primitive	No	No	No	No
STARTBUF_architecture	VHDL Simulation of FPGA Designs	Primitive	Primitive	Primitive	Primitive	No	No	No	No
STARTUP_SPARTAN2	Spartan-II User Interface to Global Clock, Reset, and 3-State Controls.	Primitive*	No	No	No	No	No	No	No
STARTUP_VIRTEX	Virtex User Interface to Global Clock, Reset, and 3-State Controls.	Primitive*	No	Primitive	No	No	No	No	No
STARTUP_VIRTEX2	Virtex-II User Interface to Global Clock, Reset, and 3-State Controls	No	No	No	Primitive	No	No	No	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
TOC	Three-State On Configuration	Primitive	Primitive	Primitive	Primitive	No	No	No	No
TOCBUF	Three-State On Configuration Buffer	Primitive	Primitive	Primitive	Primitive	No	No	No	No
VCC	VCC-Connection Signal Tag	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No





## Input Latches


Single and multiple input latches can hold transient data entering a chip. Input latches use the same naming convention as I/O flip-flops.

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
ILD	Transparent Input Data Latch	Macro	Macro	Macro	Macro	Macro	Macro	No	No
ILD_1	Transparent Input Data Latch with Inverted Gate	Macro	Macro	Macro	Macro	No	No	No	No
ILD16	Transparent Input Data Latch	Macro	Macro	Macro	Macro	Macro	Macro	No	No
ILD4	Transparent Input Data Latch	Macro	Macro	Macro	Macro	Macro	Macro	No	No
ILD8	Transparent Input Data Latch	Macro	Macro	Macro	Macro	Macro	Macro	No	No
ILDI	Transparent Input Data Latch (Asynchronous Preset)	Macro	Macro	Macro	Macro	No	No	No	No
ILDI_1	Transparent Input Data Latch with Inverted Gate (Asynchronous Preset)	Macro	Macro	Macro	Macro	No	No	No	No
ILDx	Transparent Input Data Latch	Macro	Macro	Macro	Macro	No	No	No	No
ILDx_1	Transparent Input Data Latch with Inverted Gate	Macro	Macro	Macro	Macro	No	No	No	No
ILDx16	Transparent Input Data Latch	Macro	Macro	Macro	Macro	No	No	No	No
ILDx4	Transparent Input Data Latch	Macro	Macro	Macro	Macro	No	No	No	No
ILDx8	Transparent Input Data Latch	Macro	Macro	Macro	Macro	No	No	No	No
ILDxI	Transparent Input Data Latch (Asynchronous Preset)	Macro	Macro	Macro	Macro	No	No	No	No
ILDxI_1	Transparent Input Data Latch with Inverted Gate (Asynchronous Preset)	Macro	Macro	Macro	Macro	No	No	No	No



## Input/Output Flip-Flops

Input/Output flip-flops are configured in IOBs. They include flip-flops whose outputs are enabled by 3-state buffers, flip-flops that can be set upon global set/reset rather than reset, and flip-flops with inverted clock inputs. The naming convention specifies each flip-flop function and is illustrated in the following figure.

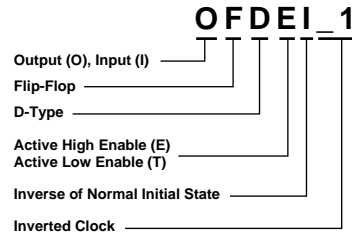

X4580

### Input/Output Flip-Flop Naming Convention

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
IFD	Single- and Multiple-Input D Flip-Flop	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
IFD_1	Input D Flip-Flop with Inverted Clock	Macro	Macro	Macro	Macro	No	No	No	No
IFD16	Single- and Multiple-Input D Flip-Flop	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
IFD4	Single- and Multiple-Input D Flip-Flop	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
IFD8	Single- and Multiple-Input D Flip-Flop	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
IFDDRCPE	Dual Data Rate Input D Flip-Flop with Clock Enable and Asynchronous Preset and Clear	No	Primitive	No	Primitive	No	No	No	No
IFDDRRSE	Dual Data Rate Input D Flip-Flop with Synchronous Reset and Set and Clock Enable	No	Primitive	No	Primitive	No	No	No	No
IFDI	Input D Flip-Flop (Asynchronous Preset)	Macro	Macro	Macro	Macro	No	No	No	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
IFDI_1	Input D Flip-Flop with Inverted Clock (Asynchronous Preset)	Macro	Macro	Macro	Macro	No	No	No	No
IFDX	Single- and Multiple-Input D Flip-Flop with Clock Enable	Macro	Macro	Macro	Macro	No	No	No	No
IFDX_1	Input D Flip-Flop with Inverted Clock and Clock Enable	Macro	Macro	Macro	Macro	No	No	No	No
IFDX16	Single- and Multiple-Input D Flip-Flops with Clock Enable	Macro	Macro	Macro	Macro	No	No	No	No
IFDX4	Single- and Multiple-Input D Flip-Flop with Clock Enable	Macro	Macro	Macro	Macro	No	No	No	No
IFDX8	Single- and Multiple-Input D Flip-Flop with Clock Enable	Macro	Macro	Macro	Macro	No	No	No	No
IFDXI	Input D Flip-Flop with Clock Enable (Asynchronous Preset)	Macro	Macro	Macro	Macro	No	No	No	No
IFDXI_1	Input D Flip-Flop with Inverted Clock and Clock Enable (Asynchronous Preset)	Macro	Macro	Macro	Macro	No	No	No	No
OFD	Single- and Multiple-Output D Flip-Flops	Macro	Macro	Macro	Macro	Macro	Macro	No	No
OFD_1	Output D Flip-Flop with Inverted Clock	Macro	Macro	Macro	Macro	No	No	No	No
OFD16	Single- and Multiple-Output D Flip-Flops	Macro	Macro	Macro	Macro	Macro	Macro	No	No
OFD4	Single- and Multiple-Output D Flip-Flops	Macro	Macro	Macro	Macro	Macro	Macro	No	No
OFD8	Single- and Multiple-Output D Flip-Flops	Macro	Macro	Macro	Macro	Macro	Macro	No	No



Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
OFDDRCPE	Dual Data Rate Output D Flip-Flop with Clock Enable and Asynchronous Preset and Clear	No	Primitive	No	Primitive	No	No	No	No
OFDDRRE	Dual Data Rate Output D Flip-Flop with Synchronous Reset and Set and Clock Enable	No	Primitive	No	Primitive	No	No	No	No
OFDDRTCPE	Dual Data Rate D Flip-Flop with Active-Low 3-State Output Buffer, Clock Enable, and Asynchronous Preset and Clear	No	Primitive	No	Primitive	No	No	No	No
OFDDRTRE	Dual Data Rate D Flip-Flop with Active -Low 3-State Output Buffer, Synchronous Reset and Set, and Clock Enable	No	Primitive	No	Primitive	No	No	No	No
OFDE	D Flip-Flop with Active-High Enable Output Buffers	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OFDE	D Flip-Flop with Active-High Enable Output Buffers	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OFDE_1	D Flip-Flop with Active-High Enable Output Buffer and Inverted Clock	Macro	Macro	Macro	Macro	No	No	No	No
OFDE16	D Flip-Flop with Active-High Enable Output Buffers	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OFDE16	D Flip-Flop with Active-High Enable Output Buffers	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OFDE4	D Flip-Flop with Active-High Enable Output Buffers	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
OFDE4	D Flip-Flop with Active-High Enable Output Buffers	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OFDE8	D Flip-Flop with Active-High Enable Output Buffers	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OFDE8	D Flip-Flop with Active-High Enable Output Buffers	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OFDI	Output D Flip-Flop (Asynchronous Preset)	Macro	Macro	Macro	Macro	No	No	No	No
OFDI_1	Output D Flip-Flop with Inverted Clock (Asynchronous Preset)	Macro	Macro	Macro	Macro	No	No	No	No
OFDT	Single and Multiple D Flip-Flop with Active-Low 3-State Output Buffers	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OFDT_1	D Flip-Flop with Active-Low 3-State Output Buffer and Inverted Clock	Macro	Macro	Macro	Macro	No	No	No	No
OFDT16	Single and Multiple D Flip-Flop with Active-Low 3-State Output Buffers	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OFDT4	Single and Multiple D Flip-Flop with Active-Low 3-State Output Buffers	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OFDT8	Single and Multiple D Flip-Flop with Active-Low 3-State Output Buffers	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OFDX	Single- and Multiple-Output D Flip-Flop with Clock Enable	Macro	Macro	Macro	Macro	No	No	No	No
OFDX_1	Output D Flip-Flop with Inverted Clock and Clock Enable	Macro	Macro	Macro	Macro	No	No	No	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
OFDX16	Single- and Multiple-Output D Flip-Flop with Clock Enable	Macro	Macro	Macro	Macro	No	No	No	No
OFDX4	Single- and Multiple-Output D Flip-Flop with Clock Enable	Macro	Macro	Macro	Macro	No	No	No	No
OFDX8	Single- and Multiple-Output D Flip-Flop with Clock Enable	Macro	Macro	Macro	Macro	No	No	No	No
OFDXI	Output D Flip-Flop with Clock Enable (Asynchronous Preset)	Macro	Macro	Macro	Macro	No	No	No	No
OFDXI_1	Output D Flip-Flop with Inverted Clock and Clock Enable (Asynchronous Preset)	Macro	Macro	Macro	Macro	No	No	No	No





## Input/Output Functions

Input/Output Block (IOB) resources are configured into various I/O primitives and macros for convenience, such as output buffers (OBUFs) and output buffers with an enable (OBUFES). Pads used to connect the circuit to PLD device pins are also included.

Virtex, Virtex-E, Spartan-II, Spartan-IIe, Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X have multiple variants (primitives) to choose from for each SelectIO buffer. The I/O interface for each variant corresponds to a specific I/O standard.

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
GT_AURORA_n	Gigabit Transceiver for High-Speed I/O.	No	No	No	Primitive	No	No	No	No
GT_CUSTOM	Gigabit Transceiver for High-Speed I/O.	No	No	No	Primitive	No	No	No	No
GT_ETHERNET_n	Gigabit Transceiver for High-Speed I/O.	No	No	No	Primitive	No	No	No	No
GT_XAU_N	Gigabit Transceiver for High-Speed I/O.	No	No	Primitive	No	No	No	No	No
GT10_10GE_N	10-Gigabit Transceiver for High-Speed I/O.	No	No	Primitive	No	No	No	No	No
GT10_10GFC_N	10-Gigabit Transceiver for High-Speed I/O.	No	No	Primitive	No	No	No	No	No
GT10_3GIO_N	10-Gigabit Transceiver for High-Speed I/O.	No	No	Primitive	No	No	No	No	No
GT10_AURORA_N	10-Gigabit Transceiver for High-Speed I/O.	No	No	No	Primitive	No	No	No	No
GT10_AURORA_X_N	10-Gigabit Transceiver for High-Speed I/O.	No	No	No	Primitive	No	No	No	No
GT10_CUSTOM	10-Gigabit Transceiver for High-Speed I/O.	No	No	Primitive	No	No	No	No	No
GT10_FIBRE_C HAN_n	Gigabit Transceiver for High-Speed I/O.	No	No	No	Primitive	No	No	No	No
GT10_INFINIBA ND_n	10-Gigabit Transceiver for High-Speed I/O.	No	No	No	Primitive	No	No	No	No
GT10_OC192_N	10-Gigabit Transceiver for High-Speed I/O.	No	No	No	Primitive	No	No	No	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
GT10_OC48_N	10-Gigabit Transceiver for High-Speed I/O.	No	No	No	Primitive	No	No	No	No
GT10_XAU_n	10-Gigabit Transceiver for High-Speed I/O.	No	No	No	Primitive	No	No	No	No
IBUF	Single- and Multiple-Input Buffer	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
IBUF_selectIO	Single Input Buffer with Selectable I/O Interface (multiple primitives)	Primitive	Primitive	Primitive	Primitive	No	No	No	No
IBUF16	Single- and Multiple-Input Buffer	Macro	No	Macro	Macro	Macro	Macro	Macro	No
IBUF4	Single- and Multiple-Input Buffer	Macro	No	Macro	Macro	Macro	Macro	Macro	No
IBUF8	Single- and Multiple-Input Buffer	Macro	No	Macro	Macro	Macro	Macro	Macro	No
IBUFDS	Differential Signaling Input Buffer with Selectable I/O Interface	No	Primitive	No	Primitive	No	No	No	No
IBUFG	Dedicated Input Buffer with Selectable I/O Interface (multiple primitives)	Primitive	Primitive	Primitive	Primitive	No	No	No	No
IBUFG_selectIO	Dedicated Input Buffer with Selectable I/O Interface (multiple primitives)	Primitive	Primitive	Primitive	Primitive	No	No	No	No
IBUFGDS	Dedicated Differential Signaling Input Buffer with Selectable I/O Interface	No	Primitive	No	Primitive	No	No	No	No
IBUFGDS_DIFF_OUT	Differential I/O Input Buffer with Differential Outputs	No	Primitive	No	Primitive	No	No	No	No
IOBUF	Bi-Directional Buffer with Selectable I/O Interface (multiple primitives)	Primitive	Primitive	Primitive	Primitive	No	No	No	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
IOBUF_selectIO	Bi-Directional Buffer with Selectable I/O Interface (multiple primitives)	Primitive	Primitive	Primitive	Primitive	No	No	No	No
IOBUFDS	3-State Differential Signaling I/O Buffer with Active Low Output Enable	No	Primitive	No	Primitive	No	No	No	No
IOBUFE	Bi-Directional Buffer	No	No	No	No	Primitive	Primitive	Primitive	No
IOPAD	Single- and Multiple-Input/Output Pad	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
IOPAD16	Single- and Multiple-Input/Output Pad	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
IOPAD4	Single- and Multiple-Input/Output Pad	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
IOPAD8	Single- and Multiple-Input/Output Pad	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
IPAD	Single- and Multiple-Input Pad	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
IPAD16	Single- and Multiple-Input Pad	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
IPAD4	Single- and Multiple-Input Pad	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
IPAD8	Single- and Multiple-Input Pad	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OBUF	Single- and Multiple-Output Buffer	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
OBUF16	Single- and Multiple-Output Buffer	Macro	Macro	Macro	Macro	Macro	Macro	Macro	Primitive
OBUF4	Single- and Multiple-Output Buffer	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
OBUF8	Single- and Multiple-Output Buffer	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
OBUFDS	Differential Signaling Output Buffer with Selectable I/O Interface	No	Primitive	No	Primitive	No	No	No	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
OBUFE	3-State Output Buffers with Active-High Output Enable	Macro	No	Macro	Macro	Primitive	Primitive	Primitive	Primitive
OBUFE16	3-State Output Buffers with Active-High Output Enable	Macro	No	Macro	Macro	Macro	Macro	Macro	Primitive
OBUFE4	3-State Output Buffers with Active-High Output Enable	Macro	No	Macro	Macro	Primitive	Primitive	Primitive	Primitive
OBUFE8	3-State Output Buffers with Active-High Output Enable	Macro	No	Macro	Macro	Primitive	Primitive	Primitive	Primitive
OBUFT	Single and Multiple 3-State Output Buffer with Active Low Output Enable	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
OBUFT_selectIO	Single 3-State Output Buffer with Active-Low Output Enable and Selectable I/O Interface (multiple primitives)	Primitive	Primitive	Primitive	Primitive	No	No	No	No
OBUFT_selectIO	Single 3-State Output Buffer with Active-Low Output Enable and Selectable I/O Interface (multiple primitives)	Primitive	Primitive	Primitive	Primitive	No	No	No	No
OBUFT16	Single and Multiple 3-State Output Buffer with Active Low Output Enable	Macro	Macro	Macro	Macro	Macro	Macro	Macro	Primitive
OBUFT4	Single and Multiple 3-State Output Buffer with Active Low Output Enable	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
OBUFT8	Single and Multiple 3-State Output Buffer with Active Low Output Enable	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive



Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
OBUFTDS	3-State Output Buffer with Differential Signaling, Active-Low Output Enable, and Selectable I/O Interface	No	Primitive	No	Primitive	No	No	No	No
OPAD	Single- and Multiple-Output Pad	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
OPAD16	Single- and Multiple-Output Pad	Macro	Macro	Macro	Macro	Macro	Macro	Macro	Primitive
OPAD4	Single- and Multiple-Output Pad	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
OPAD8	Single- and Multiple-Output Pad	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
UPAD	Connects the I/O Node of an IOB to the Internal PLD Circuit	Primitive	Primitive	Primitive	Primitive	No	No	No	No



Latches (LD) are available for all architectures.

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
LD	Transparent Data Latch	Primitive	Primitive	Primitive	Primitive	Macro	Primitive	Primitive	No
LD_1	Transparent Data Latch with Inverted Gate	Primitive	Primitive	Primitive	Primitive	No	No	No	No
LD16	Multiple Transparent Data Latch	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
LD16	Multiple Transparent Data Latch	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
LD16CE	Transparent Data Latch with Asynchronous Clear and Gate Enable	Macro	Macro	Macro	Macro	No	No	No	No
LD4	Multiple Transparent Data Latch	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
LD4CE	Transparent Data Latch with Asynchronous Clear and Gate Enable	Macro	Macro	Macro	Macro	No	No	No	No
LD8	Multiple Transparent Data Latch	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
LD8	Multiple Transparent Data Latch	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
LD8CE	Transparent Data Latch with Asynchronous Clear and Gate Enable	Macro	Macro	Macro	Macro	No	No	No	No
LDC	Transparent Data Latch with Asynchronous Clear	Primitive	Primitive	Primitive	Primitive	Macro	Primitive	Primitive	No
LDC_1	Transparent Data Latch with Asynchronous Clear and Inverted Gate	Primitive	Primitive	Primitive	Primitive	No	No	No	No
LDCE	Transparent Data Latch with Asynchronous Clear and Gate Enable	Primitive	Primitive	Primitive	Primitive	No	No	No	No
LDCE_1	Transparent Data Latch with Asynchronous Clear, Gate Enable, and Inverted Gate	Primitive	Primitive	Primitive	Primitive	No	No	No	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
LDCP	Transparent Data Latch with Asynchronous Clear and Preset	Primitive	Primitive	Primitive	Primitive	Macro	Primitive	Primitive	No
LDCP_1	Transparent Data Latch with Asynchronous Clear and Preset and Inverted Gate	Primitive	Primitive	Primitive	Primitive	No	No	No	No
LDCPE	Transparent Data Latch with Asynchronous Clear and Preset and Gate Enable	Primitive	Primitive	Primitive	Primitive	No	No	No	No
LDCPE_1	Transparent Data Latch with Asynchronous Clear and Preset, Gate Enable, and Inverted Gate	Primitive	Primitive	Primitive	Primitive	No	No	No	No
LDE	Transparent Data Latch with Gate Enable	Primitive	Primitive	Primitive	Primitive	No	No	No	No
LDE_1	Transparent Data Latch with Gate Enable and Inverted Gate	Primitive	Primitive	Primitive	Primitive	No	No	No	No
LDG	Transparent Datagate Latch	No	No	No	No	No	No	Primitive	No
LDG16	Multiple Transparent Datagate Latch	No	No	No	No	No	No	Macro	No
LDG4	Multiple Transparent Datagate Latch	No	No	No	No	No	No	Macro	No
LDG8	Multiple Transparent Datagate Latch	No	No	No	No	No	No	Macro	No
LDP	Transparent Data Latch with Asynchronous Preset	Primitive	Primitive	Primitive	Primitive	Macro	Primitive	Primitive	No
LDP_1	Transparent Data Latch with Asynchronous Preset and Inverted Gate	Primitive	Primitive	Primitive	Primitive	No	No	No	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
LDPE	Transparent Data Latch with Asynchronous Preset and Gate Enable	Primitive	Primitive	Primitive	Primitive	No	No	No	No
LDPE_1	Transparent Data Latch with Asynchronous Preset, Gate Enable, and Inverted Gate	Primitive	Primitive	Primitive	Primitive	No	No	No	No





## Logic Primitives

Combinatorial logic gates that implement the basic Boolean functions are available in all architectures with up to five inputs in all combinations of inverted and non-inverted inputs, and with six to nine inputs non-inverted.

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
AND12	12- Input AND Gate with Non-Inverted Inputs	Macro	Macro	Macro	Macro	No	No	No	No
AND16	16- Input AND Gate with Non-Inverted Inputs	Macro	Macro	Macro	Macro	No	No	No	No
AND2	2-Input AND Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	No	No	No	No
AND2B1	2-Input AND Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	No	No	No	No
AND2B2	2-Input AND Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	No	No	No	No
AND3	3-Input AND Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	No	No	No	No
AND3B1	3-Input AND Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	No	No	No	No
AND3B2	3-Input AND Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	No	No	No	No
AND3B3	3-Input AND Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	No	No	No	No
AND4	4-Input AND Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	No	No	No	No
AND4B1	4-Input AND Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	No	No	No	No
AND4B2	4-Input AND Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	No	No	No	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
AND4B3	4-Input AND Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	No	No	No	No
AND4B4	4-Input AND Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
AND5	5-Input AND Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
AND5B1	5-Input AND Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
AND5B2	5-Input AND Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
AND5B3	5-Input AND Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
AND5B4	5-Input AND Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
AND5B5	5-Input AND Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
AND6	6-Input AND Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
AND7	7-Input AND Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
AND8	8-Input AND Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
AND9	9-Input AND Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	Primitive	Primitive	Primitive	No
INV	Single and Multiple Inverters	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
INV16	Single and Multiple Inverters	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No



Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
INV4	Single and Multiple Inverters	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
INV8	Single and Multiple Inverters	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
MULT_AND	Fast Multiplier AND	Primitive	Primitive	Primitive	Primitive	No	No	No	No
NAND12	12- Input NAND Gate with Non-Inverted Inputs.	Macro	Macro	Macro	Macro	No	No	No	No
NAND16	16- Input NAND Gate with Non-Inverted Inputs.	Macro	Macro	Macro	Macro	No	No	No	No
NAND2	2-Input NAND Gate with Inverted and Non-Inverted Inputs.	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NAND2B1	2-Input NAND Gate with Inverted and Non-Inverted Inputs.	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NAND2B2	2-Input NAND Gate with Inverted and Non-Inverted Inputs.	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NAND3	3-Input NAND Gate with Inverted and Non-Inverted Inputs.	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NAND3B1	3-Input NAND Gate with Inverted and Non-Inverted Inputs.	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NAND3B2	3-Input NAND Gate with Inverted and Non-Inverted Inputs.	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NAND3B3	3-Input NAND Gate with Inverted and Non-Inverted Inputs.	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NAND4	4-Input NAND Gate with Inverted and Non-Inverted Inputs.	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
NAND4B1	4-Input NAND Gate with Inverted and Non-Inverted Inputs.	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NAND4B2	4-Input NAND Gate with Inverted and Non-Inverted Inputs.	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NAND4B3	4-Input NAND Gate with Inverted and Non-Inverted Inputs.	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NAND4B4	4-Input NAND Gate with Inverted and Non-Inverted Inputs.	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NAND5	5-Input NAND Gate with Inverted and Non-Inverted Inputs.	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NAND5B1	5-Input NAND Gate with Inverted and Non-Inverted Inputs.	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NAND5B2	5-Input NAND Gate with Inverted and Non-Inverted Inputs.	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NAND5B3	5-Input NAND Gate with Inverted and Non-Inverted Inputs.	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NAND5B4	5-Input NAND Gate with Inverted and Non-Inverted Inputs.	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NAND5B5	5-Input NAND Gate with Inverted and Non-Inverted Inputs.	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NAND6	6-Input NAND Gate with Inverted and Non-Inverted Inputs.	Macro	Macro	Macro	Macro	Primitive	Primitive	Primitive	Primitive

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
NAND7	7-Input NAND Gate with Inverted and Non-Inverted Inputs.	Macro	Macro	Macro	Macro	Primitive	Primitive	Primitive	Primitive
NAND8	8-Input NAND Gate with Inverted and Non-Inverted Inputs.	Macro	Macro	Macro	Macro	Primitive	Primitive	Primitive	Primitive
NAND9	9-Input NAND Gate with Inverted and Non-Inverted Inputs.	Macro	Macro	Macro	Macro	Primitive	Primitive	Primitive	Primitive
NOR12	12-Input NOR Gate with Non-Inverted Inputs	Macro	Macro	Macro	Macro	No	No	No	No
NOR16	16-Input NOR Gate with Non-Inverted Inputs	Macro	Macro	Macro	Macro	No	No	No	No
NOR2	2- Input NOR Gate with Inverted and Non-Inverted Inputs.	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NOR2B1	2- Input NOR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NOR2B2	2- Input NOR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NOR3	3- Input NOR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NOR3B1	3- Input NOR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NOR3B2	3- Input NOR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NOR3B3	3- Input NOR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NOR4	4- Input NOR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
NOR4B1	4- Input NOR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NOR4B2	4- Input NOR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NOR4B3	4- Input NOR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NOR4B4	4- Input NOR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NOR5	5- Input NOR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NOR5B1	5- Input NOR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NOR5B2	5- Input NOR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NOR5B3	5- Input NOR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NOR5B4	5- Input NOR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NOR5B5	5- Input NOR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NOR6	6- Input NOR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NOR7	7- Input NOR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive
NOR8	8- Input NOR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
NOR9	9- Input NOR Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	Primitive	Primitive	Primitive	Primitive
OR12	12-Input OR Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	No	No	No	No
OR16	16-Input OR Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	No	No	No	No
OR2	2-Input OR Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OR2B1	2-Input OR Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OR2B2	2-Input OR Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OR3	3-Input OR Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OR3B1	3-Input OR Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OR3B2	3-Input OR Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OR3B3	3Input OR Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OR4	4-Input OR Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OR4B1	4-Input OR Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OR4B2	4-Input OR Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
OR4B3	4-Input OR Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
OR4B4	4-Input OR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
OR5	5-Input OR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
OR5B1	5-Input OR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
OR5B2	12-Input OR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
OR5B3	5-Input OR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
OR5B4	5-Input OR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
OR5B5	5-Input OR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
OR6	6-Input OR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
OR7	6-Input OR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
OR8	8-Input OR Gate with Inverted and Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
OR9	9-Input OR Gate with Inverted and Non-Inverted Inputs	Macro	Macro	Macro	Macro	Primitive	Primitive	Primitive	No
ORCY	OR with Carry Logic	Primitive	Primitive	Primitive	Primitive	No	No	No	No
SOP3	Sum of Products	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SOP3B1A	Sum of Products	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
SOP3B1B	Sum of Products	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SOP3B2A	Sum of Products	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SOP3B2B	Sum of Products	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SOP3B3	Sum of Products	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SOP4	Sum of Products	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SOP4B1	Sum of Products	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SOP4B2A	Sum of Products	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SOP4B2B	Sum of Products	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SOP4B3	Sum of Products	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SOP4B4	Sum of Products	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
XNOR2	2-Input XNOR Gate with Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
XNOR3	3-Input XNOR Gate with Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
XNOR4	4-Input XNOR Gate with Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	Primitive	No
XNOR5	5-Input XNOR Gate with Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Macro	Macro	Macro	No
XNOR6	6-Input XNOR Gate with Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Macro	Macro	Macro	No
XNOR7	7-Input XNOR Gate with Non-Inverted Inputs	Primitive	Primitive	Primitive	Primitive	Macro	Macro	Macro	No







## Map Elements

Map elements are used in conjunction with logic symbols to constrain the logic to particular CLBs or particular F function generators.


Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
FMAP	F Function Generator Partitioning Control Symbol	Primitive	Primitive	Primitive	Primitive	No	No	No	No



# XILINX®

## Multiplexers

The multiplexer naming convention shown in the following figure indicates the number of inputs and outputs and whether or not an enable is available.

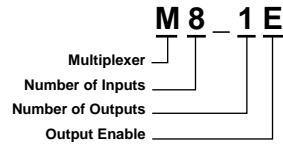

X4620

### Multiplexer Naming Convention

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
M16_1E	16-to-1 Multiplexer with Enable	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
M2_1	2-to-1 Multiplexer	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
M2_1B1	2-to-1 Multiplexer with D0 Inverted	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
M2_1B2	2-to-1 Multiplexer with D0 and D1 Inverted	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
M2_1E	2-to-1 Multiplexer with Enable	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
M4_1E	4-to-1 Multiplexer with Enable	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
M8_1E	8-to-1 Multiplexer with Enable	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
MUXCY	2-to-1 Multiplexer for Carry Logic with General Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
MUXCY_D	2-to-1 Multiplexer for Carry Logic with Dual Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
MUXCY_L	2-to-1 Multiplexer for Carry Logic with Local Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
MUXF5	2-to-1 Lookup Table Multiplexer with General Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
MUXF5_D	2-to-1 Lookup Table Multiplexer with Dual Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
MUXF5_L	2-to-1 Lookup Table Multiplexer with Local Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
MUXF6	2-to-1 Lookup Table Multiplexer with General Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
MUXF6_D	2-to-1 Lookup Table Multiplexer with Dual Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
MUXF6_L	2-to-1 Lookup Table Multiplexer with Local Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
MUXF7	2-to-1 Lookup Table Multiplexer with General Output	No	Primitive	No	Primitive	No	No	No	No
MUXF7_D	2-to-1 Lookup Table Multiplexer with Dual Output	No	Primitive	No	Primitive	No	No	No	No
MUXF7_L	2-to-1 Lookup Table Multiplexer with Local Output	No	Primitive	No	Primitive	No	No	No	No
MUXF8	2-to-1 Lookup Table Multiplexer with General Output	No	Primitive	No	Primitive	No	No	No	No
MUXF8_D	2-to-1 Lookup Table Multiplexer with Dual Output	No	Primitive	No	Primitive	No	No	No	No
MUXF8_L	2-to-1 Lookup Table Multiplexer with Local Output	No	Primitive	No	Primitive	No	No	No	No



## Memory Elements

In the Virtex, Virtex-E, Spartan-II, and Spartan-IIE, Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X architectures, a number of static RAMs are defined as primitives. These 16- or 32-word RAMs are 1, 2, 4, and 8 bits wide.

The Virtex, Virtex-E, Spartan-II, and Spartan-IIE, Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X architectures have dedicated blocks of on-chip 4096-bit single-port and dual-port synchronous RAM. Each port is configured to a specific data width. There are five single-port block RAM primitives and 30 dual-port block RAM primitives.

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
M16_1E	16-to-1 Multiplexer with Enable	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
M2_1	2-to-1 Multiplexer	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
M2_1B1	2-to-1 Multiplexer with D0 Inverted	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
M2_1B2	2-to-1 Multiplexer with D0 and D1 Inverted	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
M2_1E	2-to-1 Multiplexer with Enable	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
M4_1E	4-to-1 Multiplexer with Enable	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
M8_1E	8-to-1 Multiplexer with Enable	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
MUXCY	2-to-1 Multiplexer for Carry Logic with General Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
MUXCY_D	2-to-1 Multiplexer for Carry Logic with Dual Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
MUXCY_L	2-to-1 Multiplexer for Carry Logic with Local Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
MUXF5	2-to-1 Lookup Table Multiplexer with General Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
MUXF5_D	2-to-1 Lookup Table Multiplexer with Dual Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
MUXF5_L	2-to-1 Lookup Table Multiplexer with Local Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
MUXF6	2-to-1 Lookup Table Multiplexer with General Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
MUXF6_D	2-to-1 Lookup Table Multiplexer with Dual Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
MUXF6_L	2-to-1 Lookup Table Multiplexer with Local Output	Primitive	Primitive	Primitive	Primitive	No	No	No	No
MUXF7	2-to-1 Lookup Table Multiplexer with General Output	No	Primitive	No	Primitive	No	No	No	No
MUXF7_D	2-to-1 Lookup Table Multiplexer with Dual Output	No	Primitive	No	Primitive	No	No	No	No
MUXF7_L	2-to-1 Lookup Table Multiplexer with Local Output	No	Primitive	No	Primitive	No	No	No	No
MUXF8	2-to-1 Lookup Table Multiplexer with General Output	No	Primitive	No	Primitive	No	No	No	No
MUXF8_D	2-to-1 Lookup Table Multiplexer with Dual Output	No	Primitive	No	Primitive	No	No	No	No
MUXF8_L	2-to-1 Lookup Table Multiplexer with Local Output	No	Primitive	No	Primitive	No	No	No	No

Shifters are barrel shifters (BRLSHFT) of four and eight bits.

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
BRLSHFT4	4-Bit Barrel Shifter	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
BRLSHFT8	8-Bit Barrel Shifter	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No






# XILINX®

## Shift Registers

Shift registers are available in a variety of sizes and capabilities. The naming convention shown in the following figure illustrates available features.

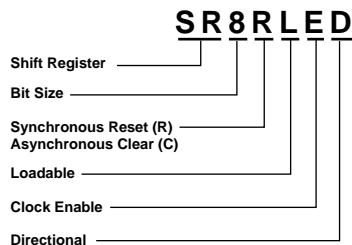

X4578

### Shift Register Naming Convention

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
SR16CE	16-Bit Serial-In Parallel-Out Shift Register with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SR16CLE	16-Bit Loadable Serial/Parallel-In Parallel-Out Shift Register with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SR16CLE D	16-Bit Shift Register with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SR16RE	16-Bit Serial-In Parallel-Out Shift Register with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SR16RLE	16-Bit Loadable Serial/Parallel-In Parallel-Out Shift Register with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	No	No
SR16RLED	16-Bit Shift Register with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
SR4CE	4-Bit Serial-In Parallel-Out Shift Register with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SR4CLE	4-Bit Loadable Serial/ Parallel-In Parallel-Out Shift Register with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SR4CLED	4-Bit Shift Register with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SR4RE	4-Bit Serial-In Parallel-Out Shift Register with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SR4RLE	4-Bit Loadable Serial/ Parallel-In Parallel-Out Shift Register with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	No	No
SR4RLED	4-Bit Shift Register with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SR8CE	8-Bit Serial-In Parallel-Out Shift Register with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SR8CLE	8-Bit Loadable Serial/ Parallel-In Parallel-Out Shift Register with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SR8CLED	8-Bit Shift Register with Clock Enable and Asynchronous Clear	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
SR8RE	8-Bit Serial-In Parallel-Out Shift Register with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SR8RLE	8-Bit Loadable Serial/ Parallel-In Parallel-Out Shift Register with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	No	No
SR8RLED	8-Bit Shift Register with Clock Enable and Synchronous Reset	Macro	Macro	Macro	Macro	Macro	Macro	Macro	No
SRD16CE	16-Bit Serial-In Parallel-Out Dual Edge Triggered Shift Register with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
SRD16CLE	16-Bit Loadable Serial/ Parallel-In Parallel-Out Dual Edge Triggered Shift Register with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
SRD16CED	16-Bit Dual Edge Triggered Shift Register with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
SRD16RE	16-Bit Serial-In Parallel-Out Dual Edge Triggered Shift Register with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
SRD16RLE	16-Bit Loadable Serial/ Parallel-In Parallel-Out Dual Edge Triggered Shift Register with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
SRD16RLE D	16-Bit Dual Edge Triggered Shift Register with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
SRD4CE	4-Bit Serial-In Parallel-Out Dual Edge Triggered Shift Register with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
SRD4CLE	4-Bit Loadable Serial/ Parallel-In Parallel-Out Dual Edge Triggered Shift Register with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
SRD4CLE D	4-Bit Dual Edge Triggered Shift Register with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
SRD4RE	4-Bit Serial-In Parallel-Out Dual Edge Triggered Shift Register with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
SRD4RLE	4-Bit Loadable Serial/ Parallel-In Parallel-Out Dual Edge Triggered Shift Register with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
SRD4RLED	4-Bit Dual Edge Triggered Shift Register with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
SRD8CE	8-Bit Serial-In Parallel-Out Dual Edge Triggered Shift Register with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
SRD8CLE	8-Bit Loadable Serial/Parallel-In Parallel-Out Dual Edge Triggered Shift Register with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
SRD8CLED	8-Bit Dual Edge Triggered Shift Register with Clock Enable and Asynchronous Clear	No	No	No	No	No	No	Macro	No
SRD8RE	8-Bit Serial-In Parallel-Out Dual Edge Triggered Shift Register with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
SRD8RLED	8-Bit Loadable Serial/Parallel-In Parallel-Out Dual Edge Triggered Shift Register with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
SRD8RLED	8-Bit Dual Edge Triggered Shift Register with Clock Enable and Synchronous Reset	No	No	No	No	No	No	Macro	No
SRL16	16-Bit Shift Register Look-Up-Table (LUT)	Primitive	Primitive	Primitive	Primitive	No	No	No	No

Design Element	Description	Spartan-II, IIE	Spartan-3	Virtex, E	Virtex II, Pro, Pro X	XC9500 /XV/XL	CR XPLA3	CR-II	CR-IIS
SRL16_1	16-Bit Shift Register Look-Up-Table (LUT) with Negative-Edge Clock	Primitive	Primitive	Primitive	Primitive	No	No	No	No
SRL16E	16-Bit Shift Register Look-Up-Table (LUT) with Clock Enable	Primitive	Primitive	Primitive	Primitive	No	No	No	No
SRLC16	16-Bit Shift Register Look-Up-Table (LUT) with Carry	No	Primitive	No	Primitive	No	No	No	No
SRLC16_1	16-Bit Shift Register Look-Up-Table (LUT) with Carry and Negative-Edge Clock	No	Primitive	No	Primitive	No	No	No	No
SRLC16E	16-Bit Shift Register Look-Up-Table (LUT) with Carry and Clock Enable	No	Primitive	No	Primitive	No	No	No	No
SRLC16E_1	16-Bit Shift Register Look-Up-Table (LUT) with Carry, Negative-Edge Clock, and Clock Enable	No	Primitive	No	Primitive	No	No	No	No
SRLC16E_1	16-Bit Shift Register Look-Up-Table (LUT) with Carry, Negative-Edge Clock, and Clock Enable	No	Primitive	No	Primitive	No	No	No	No

# *Design Elements*

---

The remaining sections in this book describe each design element that can be used with the supported architectures.

Design elements are organized in alphanumeric order, with all numeric suffixes in ascending order. For example, FDR precedes FDRS, and ADD4 precedes ADD8, which precedes ADD16.

The following information is provided for each library element, where applicable

- Graphic symbol
- Applicability table (with primitive versus macro identification)
- Functional description
- Truth table
- Schematic for macros
- VHDL and Verilog instantiation and inference code
- Commonly used constraints






## ACC1

### 1-Bit Loadable Cascadable Accumulator with Carry-In, Carry-Out, and Synchronous Reset

#### Architectures Supported

ACC1	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

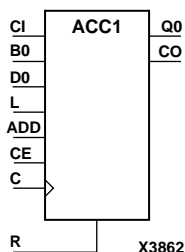

ACC1 can add or subtract a 1-bit unsigned-binary word to or from the contents of a 1-bit data register and store the results in the register. The register can be loaded with a 1-bit word. The synchronous reset (R) has priority over all other inputs and, when High, causes the output to go to logic level zero during the Low-to-High clock (C) transition. Clock (C) transitions are ignored when clock enable (CE) is Low. The accumulator is asynchronously cleared, outputs Low, when power is applied. For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

#### Load


When the load input (L) is High, CE is ignored and the data on the input D0 is loaded into the 1-bit register during the Low-to-High clock (C) transition.

#### Add

When control inputs ADD and CE are both High, the accumulator adds a 1-bit word (B0) and carry-in (CI) to the contents of the 1-bit register. The result is stored in the register and appears on output Q0 during the Low-to-High clock transition. The carry-out (CO) is not registered synchronously with the data output. CO always reflects the accumulation of input B0 and the contents of the register, which allows cascading of ACC1s by connecting CO of one stage to CI of the next stage. In add mode, CO acts as a carry-out, and CO and CI are active-High.

#### Subtract

When ADD is Low and CE is High, the 1-bit word B0 and CI are subtracted from the contents of the register. The result is stored in the register and appears on output Q0 during the Low-to-High clock transition. The carry-out (CO) is not registered synchronously with the data output. CO always reflects the accumulation of input B0 and the contents of the register, which allows cascading of ACC1s by connecting CO of one stage to CI of the next stage. In subtract mode, CO acts as a borrow, and CO and CI are active-Low.

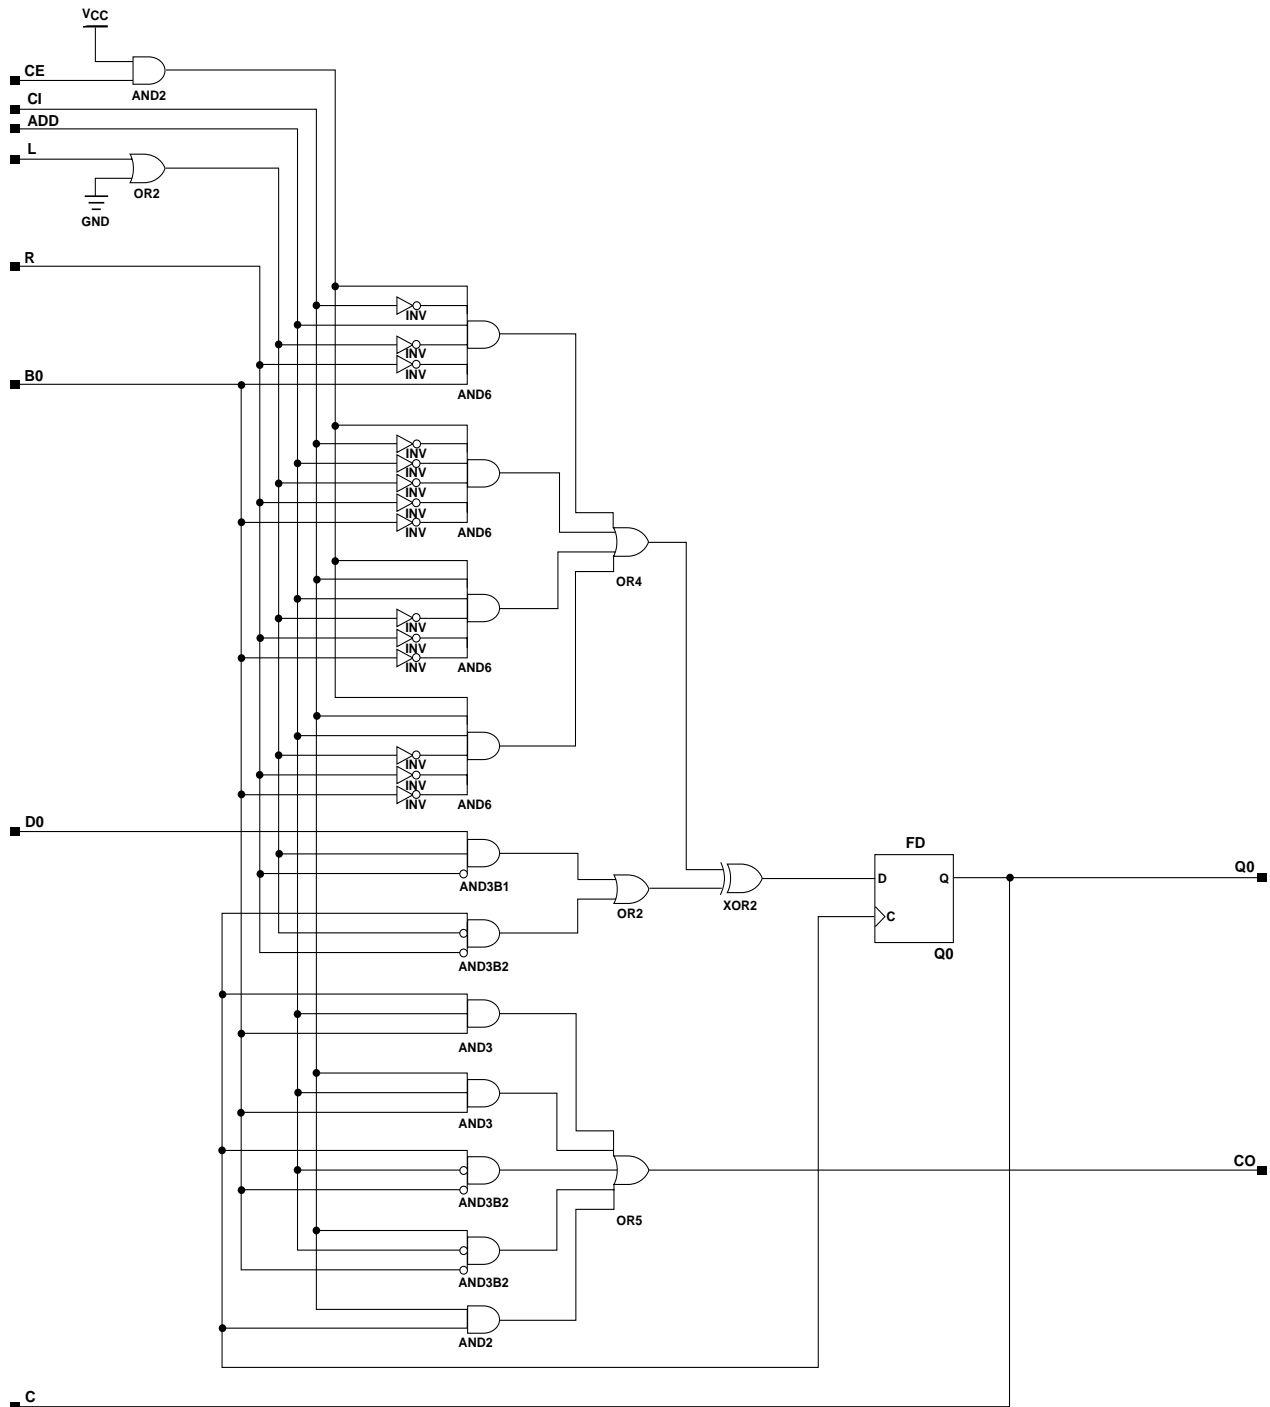

X7688

ACC1 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

## Usage

ACC is schematic and inference only-- not instantiated.

## VHDL Inference Code

Following is some "basic" code for inference of the ACC modules.

```
architecture Behavioral of acc1 is
begin
  process(C, R)
  begin
    if (R = '1') then
      Q <= (others => '0');
    elsif (C'event and C = '1') then
      if (L = '1') then
        Q <= D;
      elsif (CE = '1') then
        if (ADD = '1') then
          Q <= Q + B;
        else
          Q <= Q - B;
        end if;
      end if;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C)
begin
  if (R)
    Q <= 0;
  else if (L)
    Q <= D;
  else if (CE)
    end

  if (ADD)
    Q <= Q + B;
  else
    Q <= Q - B;
  end
```

## Commonly Used Constraints

None




## ACC4, 8, 16

### 4-, 8-, 16-Bit Loadable Cascadable Accumulators with Carry-In, Carry-Out, and Synchronous Reset

#### Architectures Supported

ACC4, ACC8, ACC16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

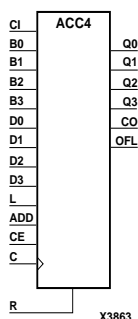

ACC4, ACC8, ACC16 can add or subtract a 4-, 8-, 16-bit unsigned-binary, respectively or twos-complement word to or from the contents of a 4-, 8-, 16-bit data register and store the results in the register. The register can be loaded with the 4-, 8-, 16-bit word.


The synchronous reset (R) has priority over all other inputs, and when High, causes all outputs to go to logic level zero during the Low-to-High clock (C) transition. Clock (C) transitions are ignored when clock enable (CE) is Low.

The accumulator is asynchronously cleared, outputs Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

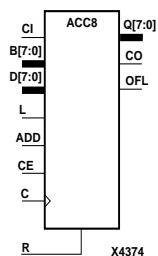

#### Load

When the load input (L) is High, CE is ignored and the data on the D inputs is loaded into the register during the Low-to-High clock (C) transition. ACC4 loads the data on inputs D3 – D0 into the 4-bit register. ACC8 loads the data on D7 – D0 into the 8-bit register. ACC16 loads the data on inputs D15 – D0 into the 16-bit register.

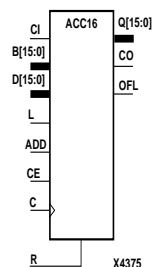

#### Unsigned Binary Versus Twos Complement

ACC4, ACC8, ACC16 can operate, respectively, on either 4-, 8-, 16-bit unsigned binary numbers or 4-, 8-, 16-bit twos-complement numbers. If the inputs are interpreted as unsigned binary, the result can be interpreted as unsigned binary. If the inputs are interpreted as twos complement, the output can be interpreted as twos complement. The only functional difference between an unsigned binary operation and a twos-complement operation is how they determine when “overflow” occurs. Unsigned

binary uses CO, while twos complement uses OFL to determine when “overflow” occurs.

### Unsigned Binary Operation

For unsigned binary operation, ACC4 can represent numbers between 0 and 15, inclusive; ACC8 between 0 and 255, inclusive; and ACC16 between 0 and 65535, inclusive. In add mode, CO is active (High) when the sum exceeds the bounds of the adder/subtractor. In subtract mode, CO is an active-Low borrow-out and goes Low when the difference exceeds the bounds. The carry-out (CO) is not registered synchronously with the data outputs. CO always reflects the accumulation of the B inputs (B3 – B0 for ACC4, B7 – B0 for ACC8, B15 – B0 for ACC16) and the contents of the register. This allows cascading of ACC4s, ACC8s, or ACC16s by connecting CO of one stage to CI of the next stage. An unsigned binary “overflow” that is always active-High can be generated by gating the ADD signal and CO as follows.


$$\text{unsigned overflow} = \text{CO XOR ADD}$$

Ignore OFL in unsigned binary operation.


### Twos-Complement Operation

For twos-complement operation, ACC4 can represent numbers between -8 and +7, inclusive; ACC8 between -128 and +127, inclusive; ACC16 between -32768 and +32767, inclusive. If an addition or subtraction operation result exceeds this range, the OFL output goes High. The overflow (OFL) is not registered synchronously with the data outputs. OFL always reflects the accumulation of the B inputs (B3 – B0 for ACC4, B7 – B0 for ACC8, B15 – B0 for ACC16) and the contents of the register, which allows cascading of ACC4s, ACC8s, or ACC16s by connecting OFL of one stage to CI of the next stage.

Ignore CO in twos-complement operation.

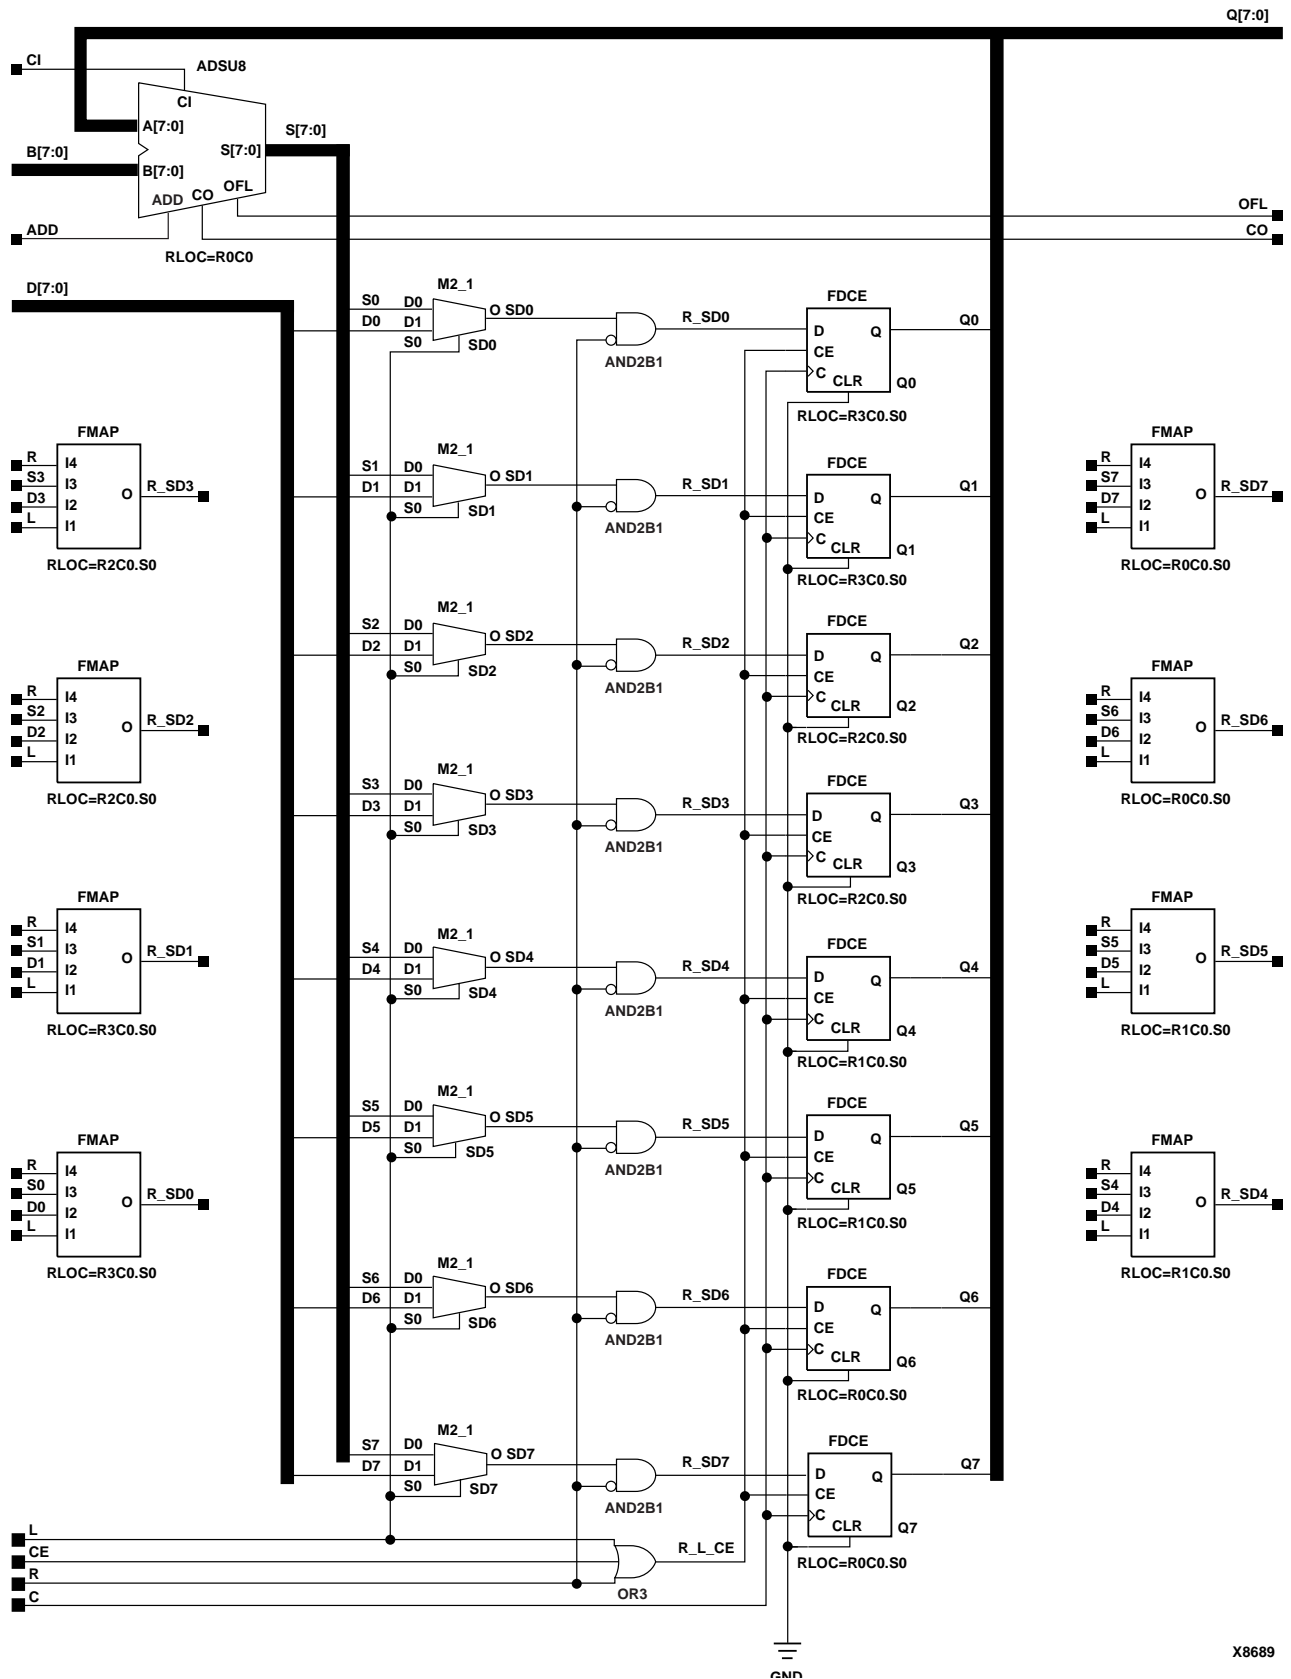


### ACC8 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

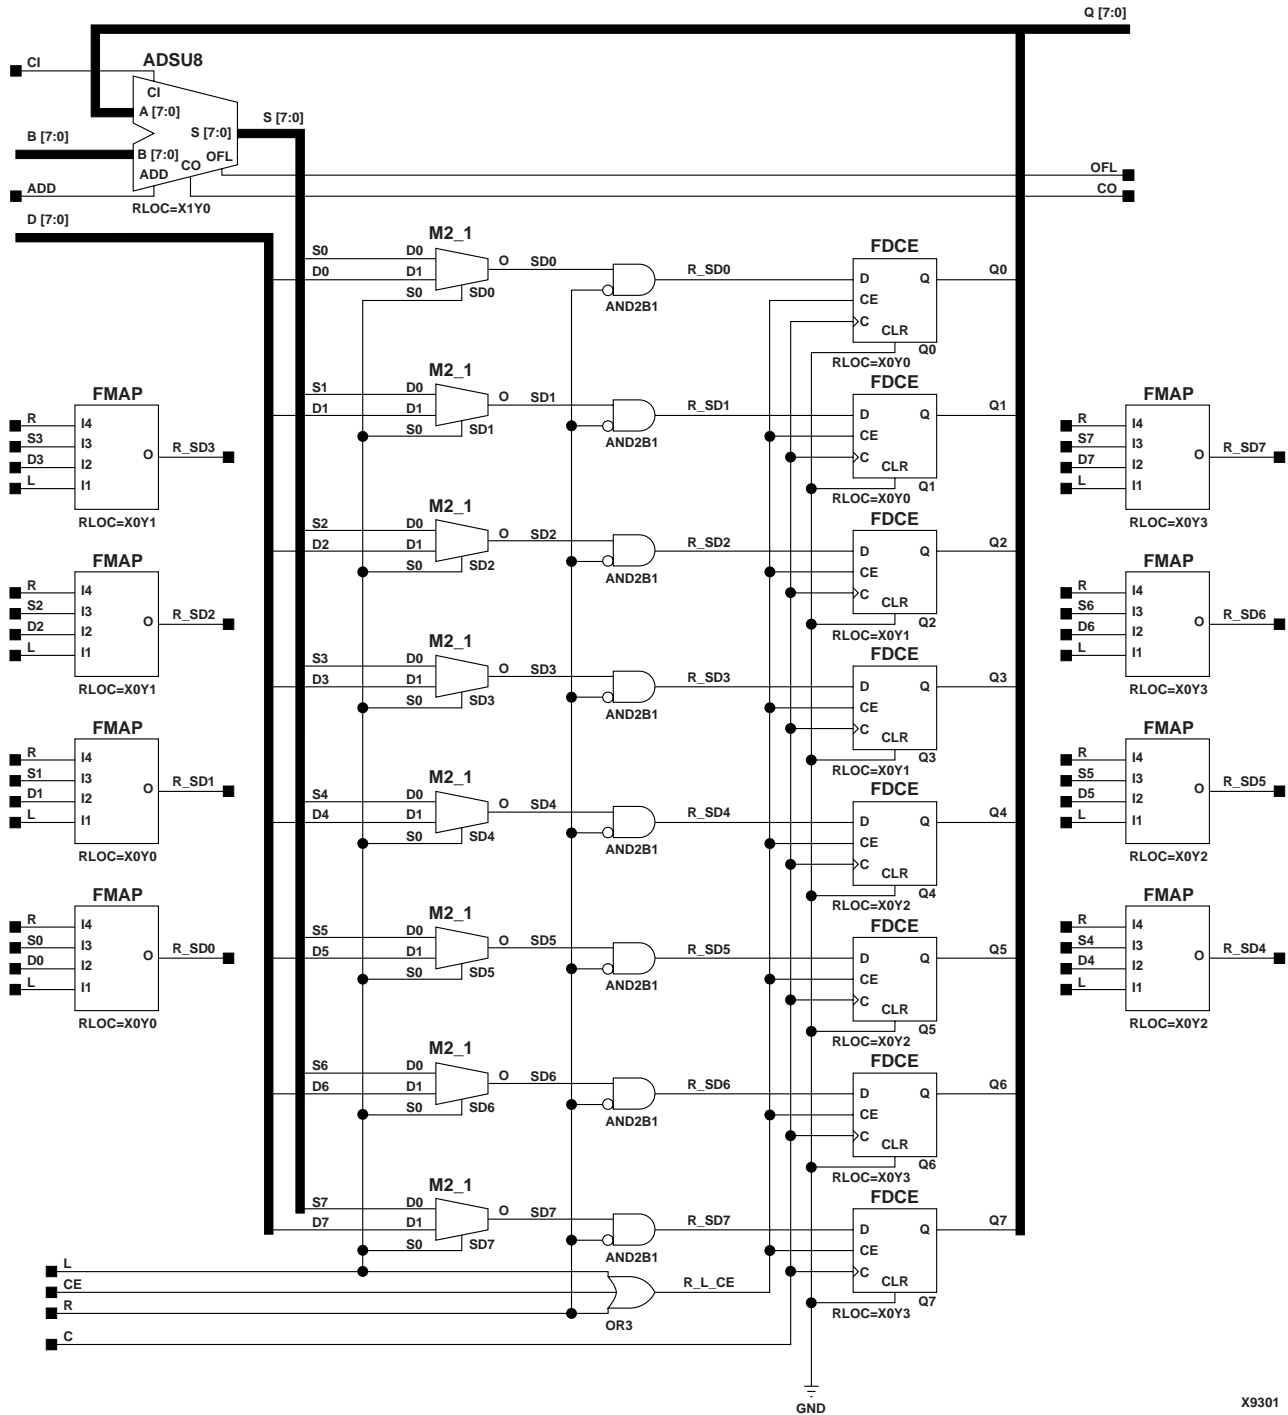


### ACC8 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X



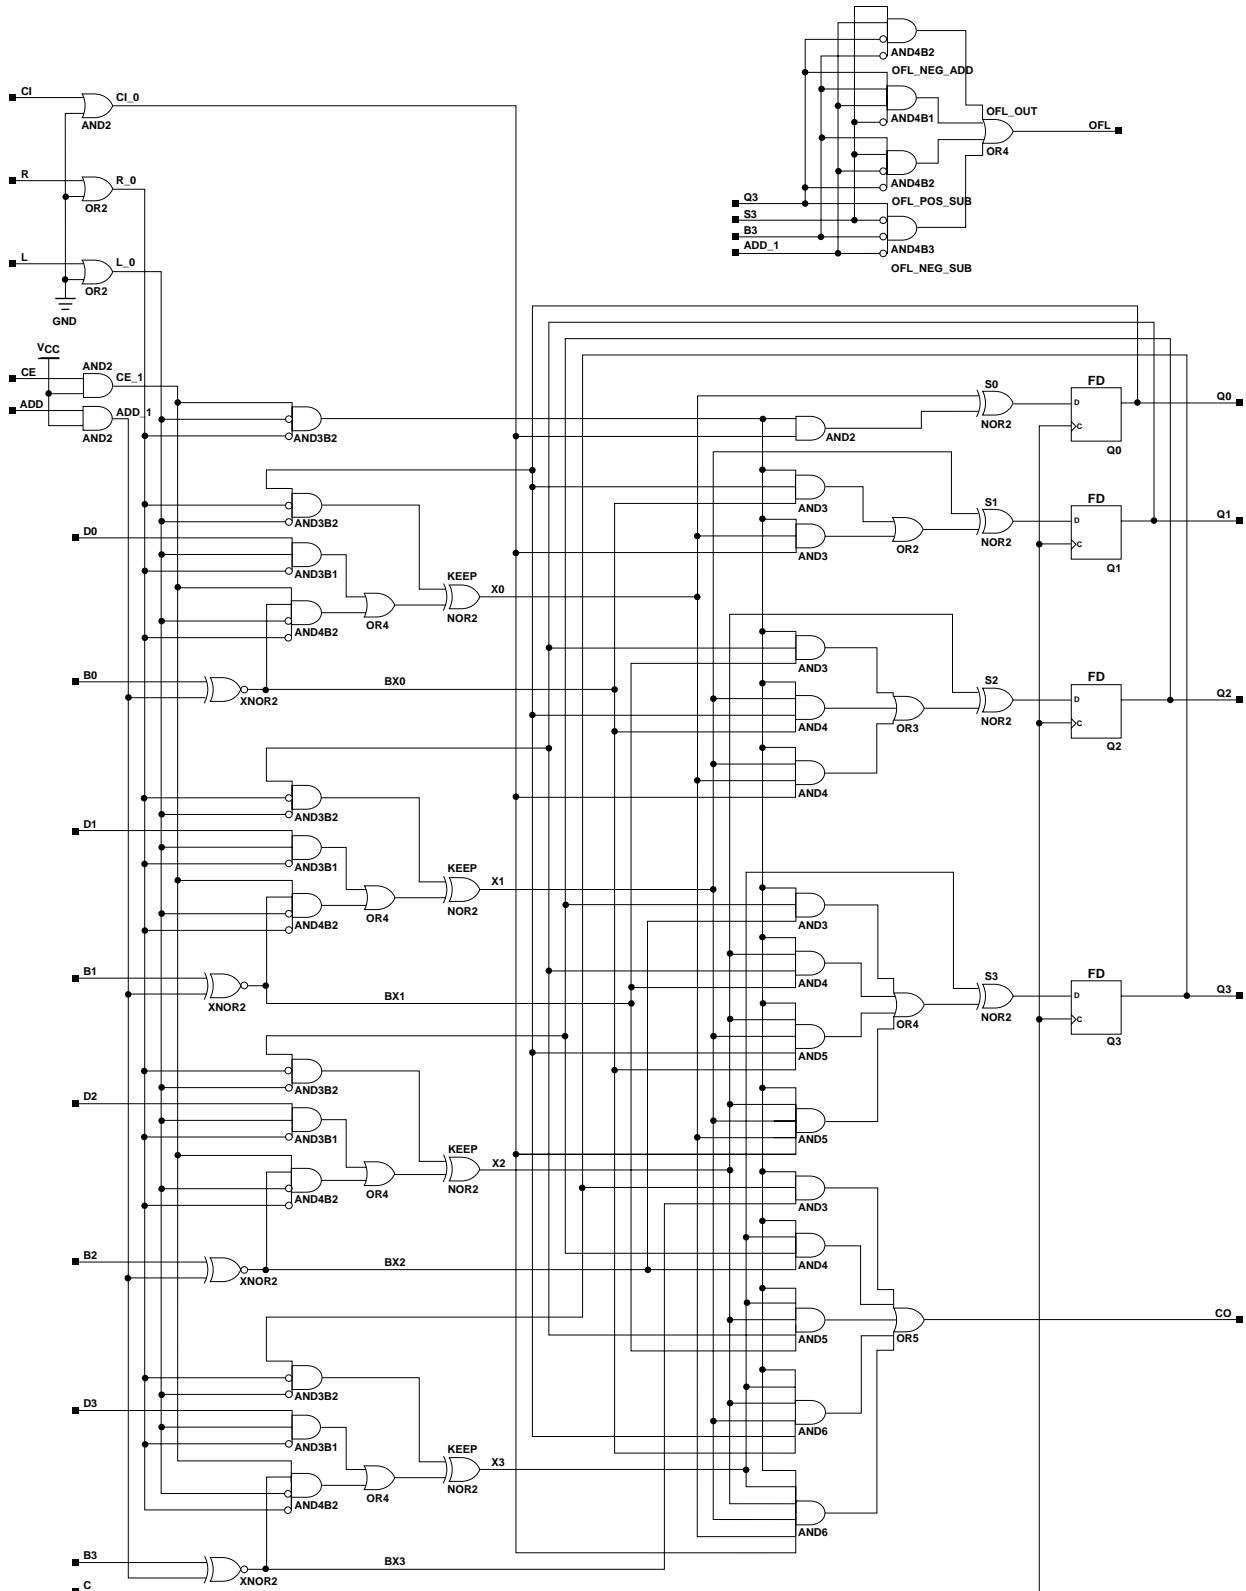

ACC4 Implementation XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II

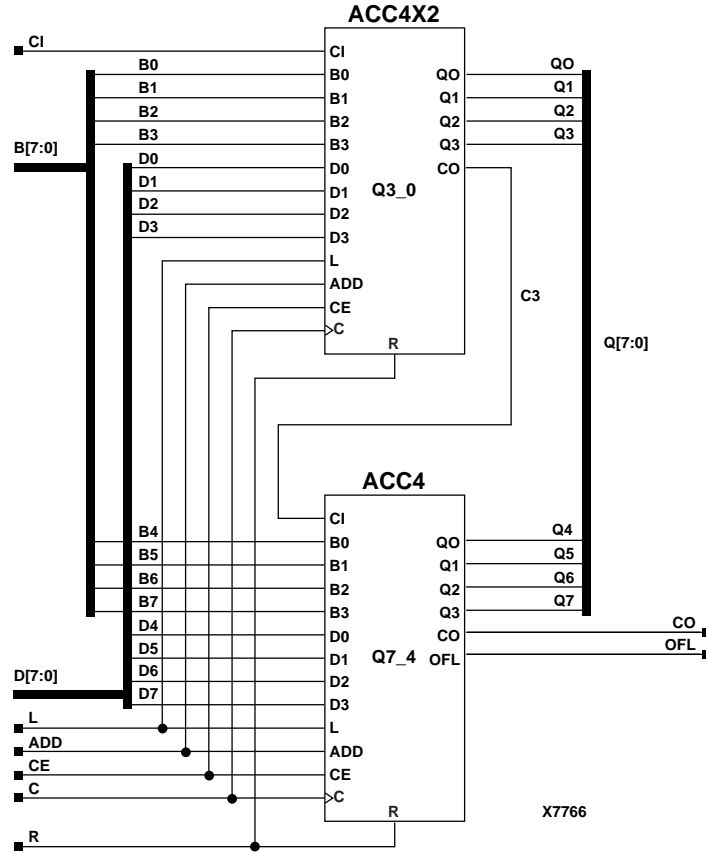

ACC8 Implementation XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II

Usage

ACC is schematic and inference only -- not instantiated.

VHDL Inference Code (ACC4)

Following is some "basic" code for inference of the ACC modules.

```

architecture Behavioral of acc4 is
begin
  process(C)
  begin
    if (R = '1') then
      Q <= (others => '0');
    elsif (C'event and C = '1') then
      if (L = '1') then
        Q <= D;
      elsif (CE = '1') then
        if (ADD = '1') then
          Q <= Q + B;
        else
          Q <= Q - B;
        end if;
      end if;
    end if;
  end process;
end architecture Behavioral;

```

```
    end if;  
  end if;  
end process;  
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C)  
begin  
  if (R)  
    Q <= 0;  
  else if (L)  
    Q <= D;  
  else if (CE)  
  end  
  if (ADD)  
    Q <= Q + B;  
  else  
    Q <= Q - B;  
  end  
end
```

## Commonly Used Constraints

None




## ADD1

### 1-Bit Full Adder with Carry-In and Carry-Out


#### Architectures Supported

ADD1	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

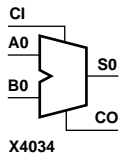

ADD1 is a cascadable 1-bit full adder with carry-in and carry-out. It adds two 1-bit words (A and B) and a carry-in (CI), producing a binary sum (S0) output and a carry-out (CO).

Inputs			Outputs	
A0	B0	CI	S0	CO
0	0	0	0	0
1	0	0	1	0
0	1	0	1	0
1	1	0	0	1
0	0	1	1	0
1	0	1	0	1
0	1	1	0	1
1	1	1	1	1

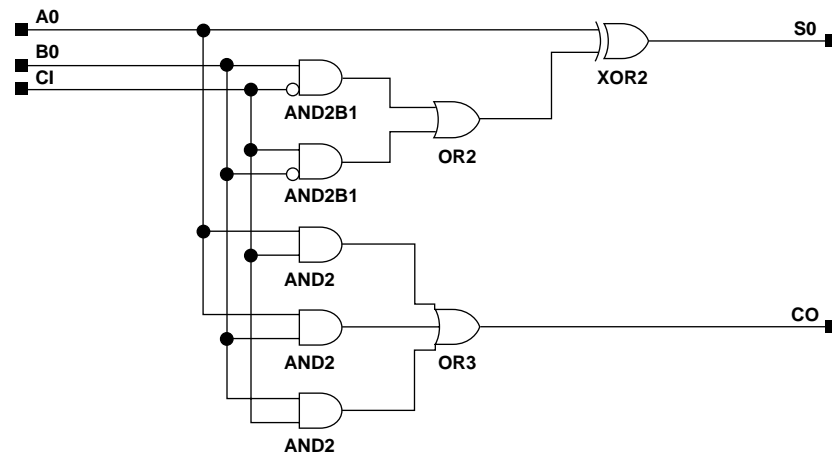

X7689

### ADD1 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

#### Usage

This design element is schematic or inference only -- no instantiation.

#### VHDL Inference Code

architecture Behavioral of ADD is

```
    signal sum: std_logic_vector(WIDTH downto 0);
    signal zeros: std_logic_vector(WIDTH-1 downto 0) := (others => '0');
```

```
begin
```

```
process (CI, A, B, sum)
```

```
begin
```

```
    sum <= ('0' & A) + ('0' & B) + (zeros & CI);
```

```
    S <= sum(WIDTH-1 downto 0);
```

```
    CO <= sum(WIDTH);
```

```
end process;
```

```
end Behavioral;
```

#### Verilog Inference Code

```
always @ (A or B or CI)
```

```
begin
```

```
    {CO,S} <= A + B + CI;
```

```
end
```

#### Commonly Used Constraints




None

## ADD4, 8, 16

### 4-, 8-, 16-Bit Cascadable Full Adders with Carry-In, Carry-Out, and Overflow

#### Architectures Supported

ADD4, ADD8, ADD16	
Spartan-II, Spartan-III	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

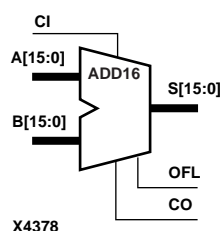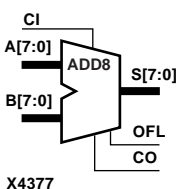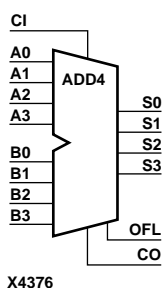

ADD4, ADD8, and ADD16 add two words and a carry-in (CI), producing a sum output and carry-out (CO) or overflow (OFL). ADD4 adds  $A_3 - A_0$ ,  $B_3 - B_0$ , and CI producing the sum output  $S_3 - S_0$  and CO (or OFL). ADD8 adds  $A_7 - A_0$ ,  $B_7 - B_0$ , and CI, producing the sum output  $S_7 - S_0$  and CO (or OFL). ADD16 adds  $A_{15} - A_0$ ,  $B_{15} - B_0$  and CI, producing the sum output  $S_{15} - S_0$  and CO (or OFL).

#### Unsigned Binary Versus Twos Complement

ADD4, ADD8, ADD16 can operate on either 4-, 8-, 16-bit unsigned binary numbers or 4-, 8-, 16-bit twos-complement numbers, respectively. If the inputs are interpreted as unsigned binary, the result can be interpreted as unsigned binary. If the inputs are interpreted as twos complement, the output can be interpreted as twos complement. The only functional difference between an unsigned binary operation and a twos-complement operation is how they determine when “overflow” occurs. Unsigned binary uses CO, while twos-complement uses OFL to determine when “overflow” occurs. To interpret the inputs as unsigned binary, follow the CO output. To interpret the inputs as twos complement, follow the OFL output.


#### Unsigned Binary Operation

For unsigned binary operation, ADD4 can represent numbers between 0 and 15, inclusive; ADD8 between 0 and 255, inclusive; ADD16 between 0 and 65535, inclusive. CO is active (High) when the sum exceeds the bounds of the adder.

OFL is ignored in unsigned binary operation.


#### Twos-Complement Operation

For twos-complement operation, ADD4 can represent numbers between -8 and +7, inclusive; ADD8 between -128 and +127, inclusive; ADD16 between -32768 and +32767, inclusive. OFL is active (High) when the sum exceeds the bounds of the adder. CO is ignored in twos-complement operation.

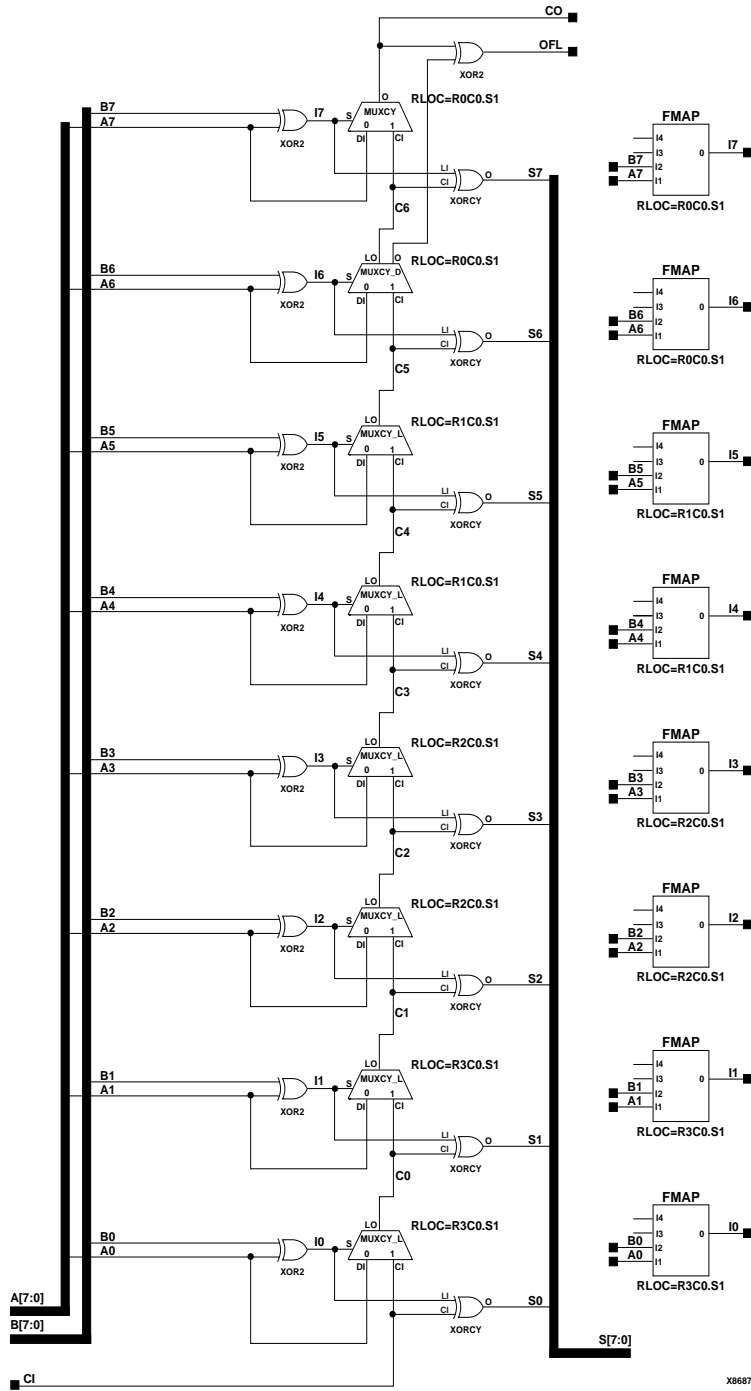


ADD8 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E




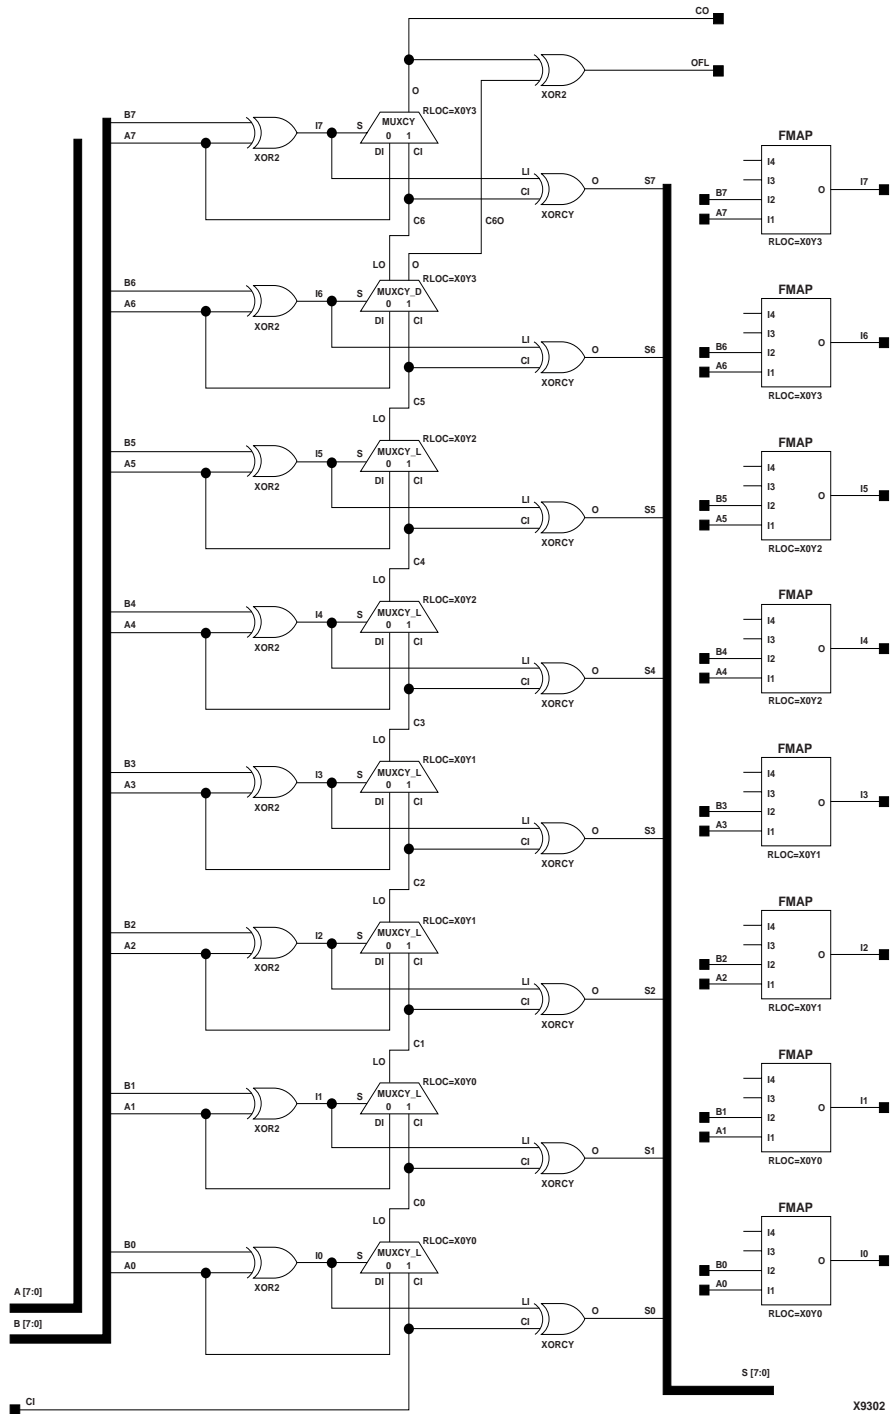

ADD8 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

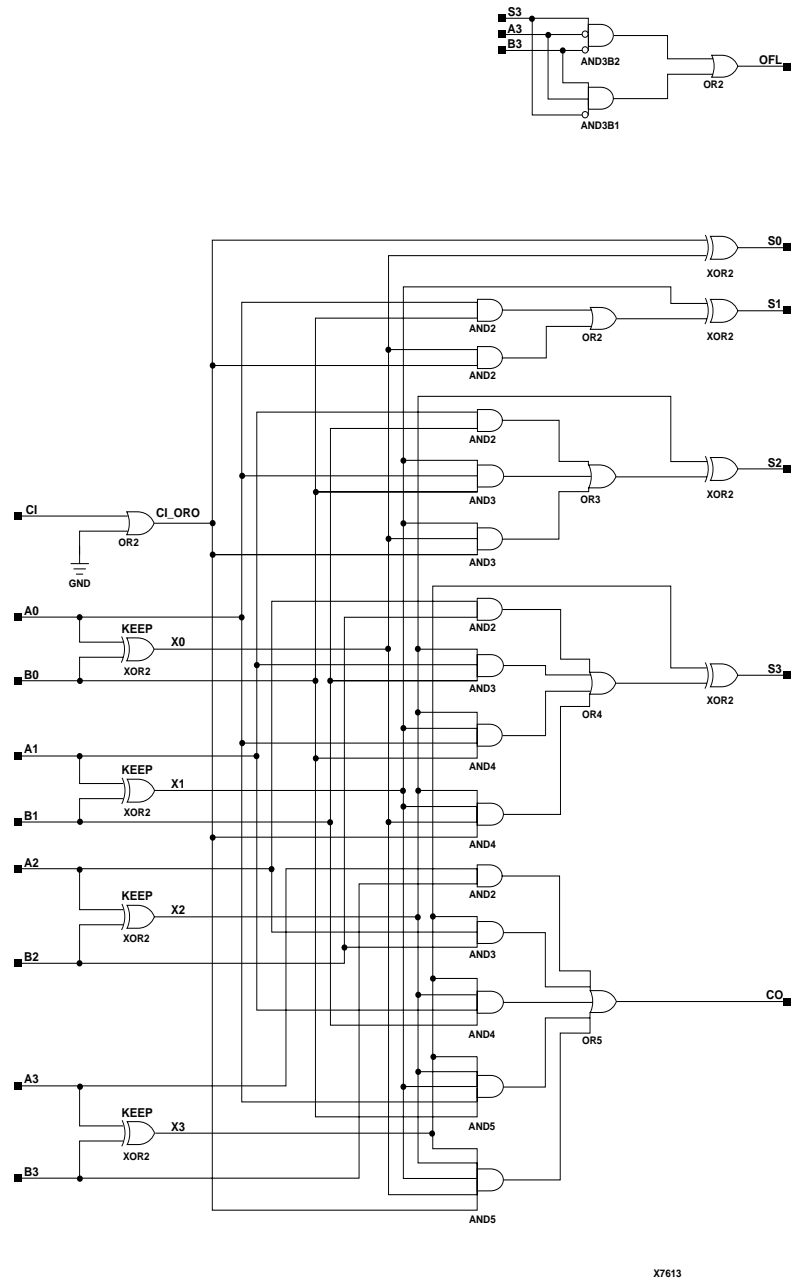

**ADD4 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

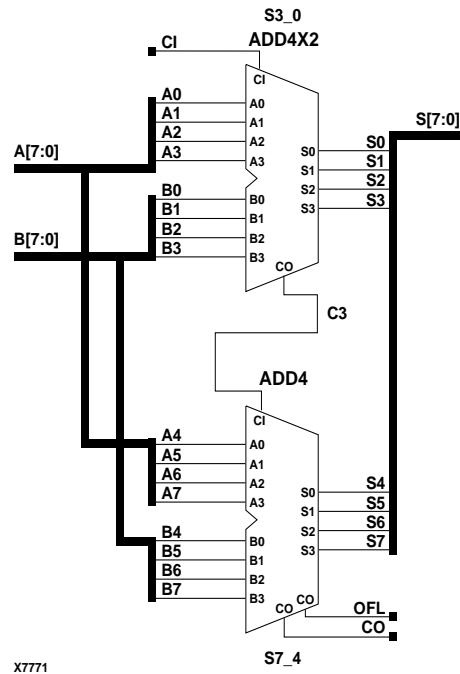

## ADD8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

### Usage

This design element is schematic or inference only -- no instantiation.

### VHDL Inference Code (ADD4)

architecture Behavioral of ADD is

```
signal sum: std_logic_vector(WIDTH-1 downto 0);
signal zeros: std_logic_vector(WIDTH-1 downto 0) := (others => '0');
```

```
begin
```

```
process (CI, A, B, sum)
```

```
begin
```

```
sum <= ('0' & A) + ('0' & B) + (zeros & CI);
```

```
S <= sum(WIDTH-1 downto 0);
```

```
CO <= sum(WIDTH);
```

```
end process;
```

```
end Behavioral;
```

### Verilog Inference Code (ADD4)

```
always @ (A or B or CI)
```

```
begin
```

```
{CO,sum} <= A + B + CI;
```

```
end
```

## Commonly Used Constraints

None






# ADSU1

## 1-Bit Cascadable Adder/Subtractor with Carry-In and Carry-Out

### Architectures Supported

ADSU1	
Spartan-II, Spartan-III	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

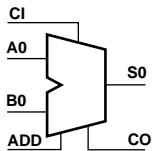

X4035

When the ADD input is High, two 1-bit words (A0 and B0) are added with a carry-in (CI), producing a 1-bit output (S0) and a carry-out (CO). When the ADD input is Low, B0 is subtracted from A0, producing a result (S0) and borrow (CO). In add mode, CO represents a carry-out, and CO and CI are active-High. In subtract mode, CO represents a borrow, and CO and CI are active-Low.

### Add Function, ADD=1


Inputs			Outputs	
A0	B0	CI	S0	CO
0	0	0	0	0
0	1	0	1	0
1	0	0	1	0
1	1	0	0	1
0	0	1	1	0
0	1	1	0	1
1	0	1	0	1
1	1	1	1	1

### Subtract Function, ADD=0

Inputs			Outputs	
A0	B0	CI	S0	CO
0	0	0	1	0
0	1	0	0	0
1	0	0	0	1
1	1	0	1	0

Subtract Function, ADD=0

Inputs			Outputs	
A0	B0	CI	S0	CO
0	0	1	0	1
0	1	1	1	0
1	0	1	1	1
1	1	1	0	1

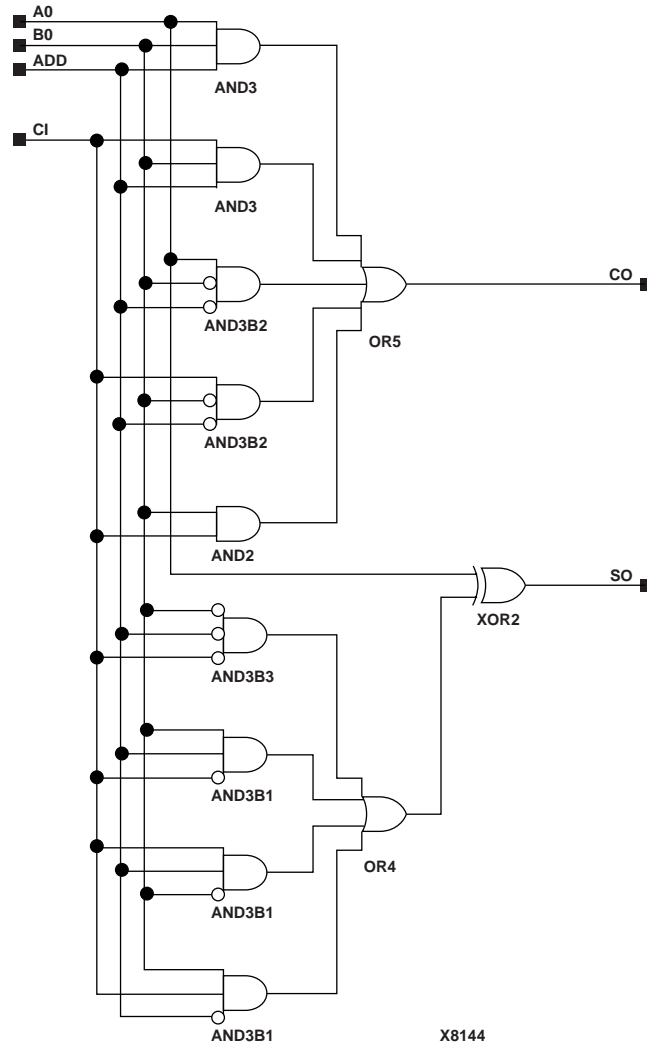

ADSU1 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

Usage

For HDL, this design element is inferred rather than instantiated.

VHDL Inference Code

architecture Behavioral of adsu4 is



```

begin
process (A0,ADD,B0)
begin
    if (ADD='1') then
        S <= A0 + B0;
    else
        S <= A0 - B0;
    end if;
end process;
end Behavioral;

```

## Verilog Inference Code

```

always @ (A0 or ADD or B0)
begin
    if (ADD)
        S0 <= A0 + B0;
    else
        S0 <= A0 - B0;
end

```

## VHDL Instantiation Template

```

-- Component Declaration for ADSU1 should be placed
-- after architecture statement but before begin keyword

```

```

component ADSU1
    port (CO : out STD_ULOGIC;
          S0 : out STD_ULOGIC;
          A0 : in STD_ULOGIC;
          ADD: in STD_ULOGIC;
          B0 : in STD_ULOGIC;
          CI : in STD_ULOGIC);
end component;

```

```

-- Component Attribute specification for ADSU1
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

-- Enter attributes here

```

```

-- Component Instantiation for ADSU1 should be placed
-- in architecture after the begin keyword

```

```

ADSU1_INSTANCE_NAME : ADSU1
    -- synthesis translate_off
    generic map (CDS_ACTION => "string_value")
    -- synthesis translate_on
    port map (CO =>user_CO,
              S0 => user_S0,
              A0 => user_A0,
              ADD => user_ADD,
              B0 => user_B0,
              CI => user_CI);

```

## Verilog Instantiation Template

```
ADSU1 instance_name (.CO (user_CO),  
                    .S0 (user_S0),  
                    .A0 (user_A0),  
                    .ADD(user_ADD),  
                    .B0 (user_B0),  
                    .CI (user_CI));
```

## Commonly Used Constraints


Non

## ADSU4, 8, 16


### 4-, 8-, 16-Bit Cascadable Adders/Subtractors with Carry-In, Carry-Out, and Overflow

#### Architectures Supported

ADSU4, ADSU8, ADSU16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

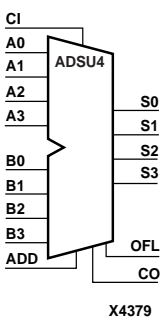


When the ADD input is High, ADSU4, ADSU8, and ADSU16 add two words and a carry-in (CI), producing a sum output and carry-out (CO) or overflow (OFL). ADSU4 adds two 4-bit words ( $A_3 - A_0$  and  $B_3 - B_0$ ) and a CI, producing a 4-bit sum output ( $S_3 - S_0$ ) and CO or OFL. ADSU8 adds two 8-bit words ( $A_7 - A_0$  and  $B_7 - B_0$ ) and a CI producing, an 8-bit sum output ( $S_7 - S_0$ ) and CO or OFL. ADSU16 adds two 16-bit words ( $A_{15} - A_0$  and  $B_{15} - B_0$ ) and a CI, producing a 16-bit sum output ( $S_{15} - S_0$ ) and CO or OFL.

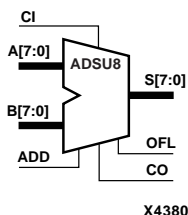

When the ADD input is Low, ADSU4, ADSU8, and ADSU16 subtract  $B_z - B_0$  from  $A_z - A_0$ , producing a difference output and CO or OFL. ADSU4 subtracts  $B_3 - B_0$  from  $A_3 - A_0$ , producing a 4-bit difference ( $S_3 - S_0$ ) and CO or OFL. ADSU8 subtracts  $B_7 - B_0$  from  $A_7 - A_0$ , producing an 8-bit difference ( $S_7 - S_0$ ) and CO or OFL. ADSU16 subtracts  $B_{15} - B_0$  from  $A_{15} - A_0$ , producing a 16-bit difference ( $S_{15} - S_0$ ) and CO or OFL.

In add mode, CO and CI are active-High. In subtract mode, CO and CI are active-Low. OFL is active-High in add and subtract modes.

ADSU4, ADSU8, and ADSU16 CI and CO pins do not use the CPLD carry chain.

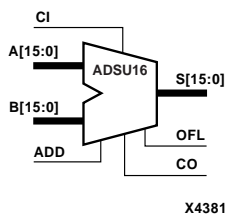


#### Unsigned Binary Versus Twos Complement

ADSU4, ADSU8, ADSU16 can operate, respectively, on either 4-, 8-, 16-bit unsigned binary numbers or 4-, 8-, 16-bit twos-complement numbers. If the inputs are interpreted as unsigned binary, the result can be interpreted as unsigned binary. If the inputs are interpreted as twos complement, the output can be interpreted as twos complement. The only functional difference between an unsigned binary operation and a twos-complement operation is how they determine when “overflow” occurs. Unsigned binary uses CO, while twos complement uses OFL to determine when “overflow” occurs.

With adder/subtractors, either unsigned binary or twos-complement operations cause an overflow. If the result crosses the overflow boundary, an overflow is

generated. Similarly, when the result crosses the carry-out boundary, a carry-out is generated. The following figure shows the ADSU carry-out and overflow boundaries.

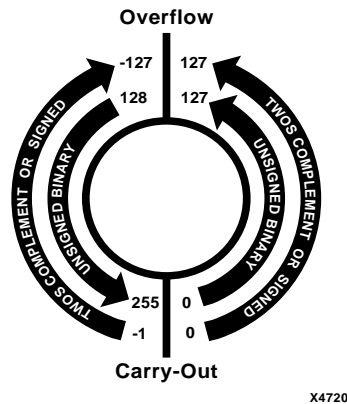

## ADSU Carry-Out and Overflow Boundaries

### Unsigned Binary Operation

For unsigned binary operation, ADSU4 can represent numbers between 0 and 15, inclusive; ADSU8 between 0 and 255, inclusive; ADSU16 between 0 and 65535, inclusive. In add mode, CO is active (High) when the sum exceeds the bounds of the adder/subtractor. In subtract mode, CO is an active-Low borrow-out and goes Low when the difference exceeds the bounds.

An unsigned binary “overflow” that is always active-High can be generated by gating the ADD signal and CO as follows.


$$\text{unsigned overflow} = \text{CO XOR ADD}$$

OFL is ignored in unsigned binary operation.


### Twos-Complement Operation

For twos-complement operation, ADSU4 can represent numbers between -8 and +7, inclusive; ADSU8 between -128 and +127, inclusive; ADSU16 between -32768 and +32767, inclusive. If an addition or subtraction operation result exceeds this range, the OFL output goes High.


CO is ignored in twos-complement operation.

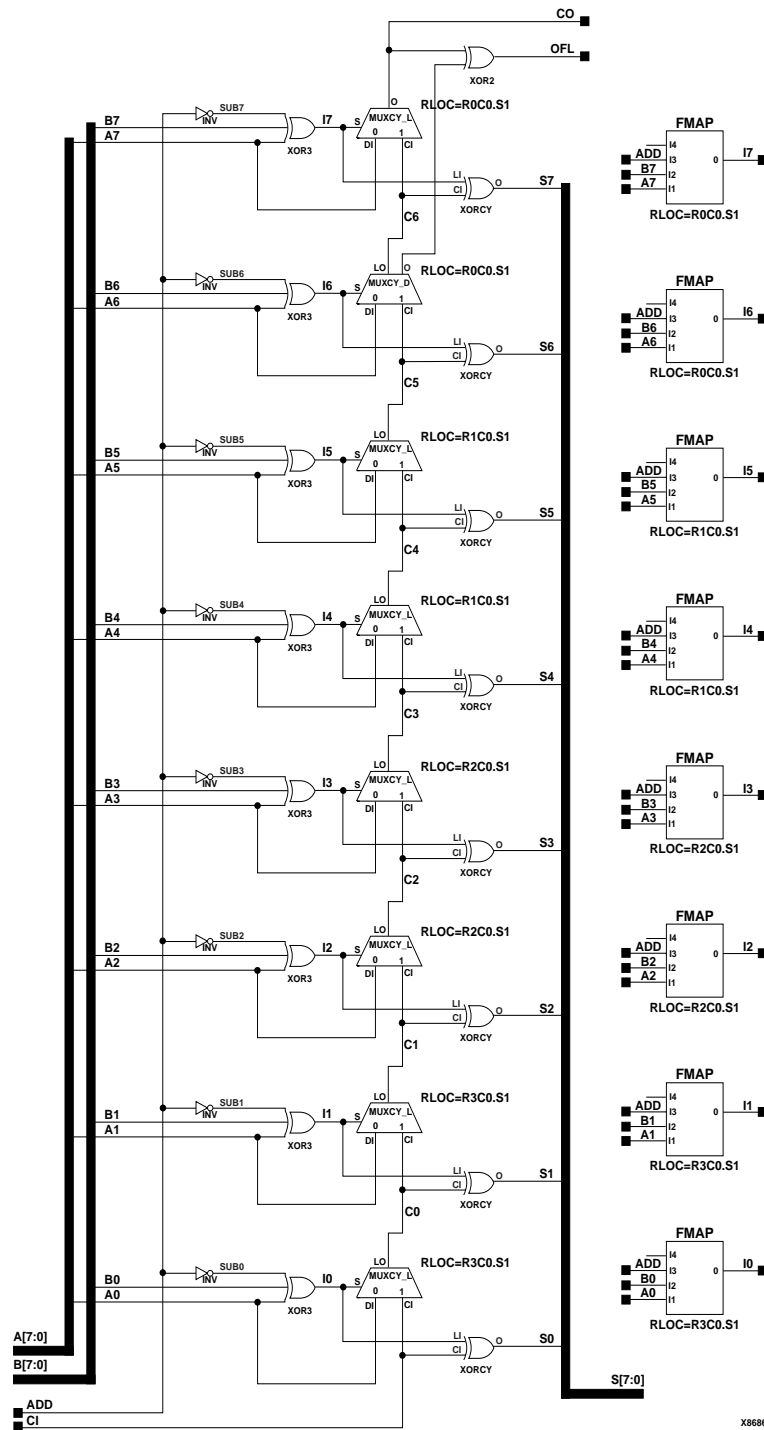


ADSU8 Implementation Spartan-II, Spartan-IIe, Virtex, Virtex-E

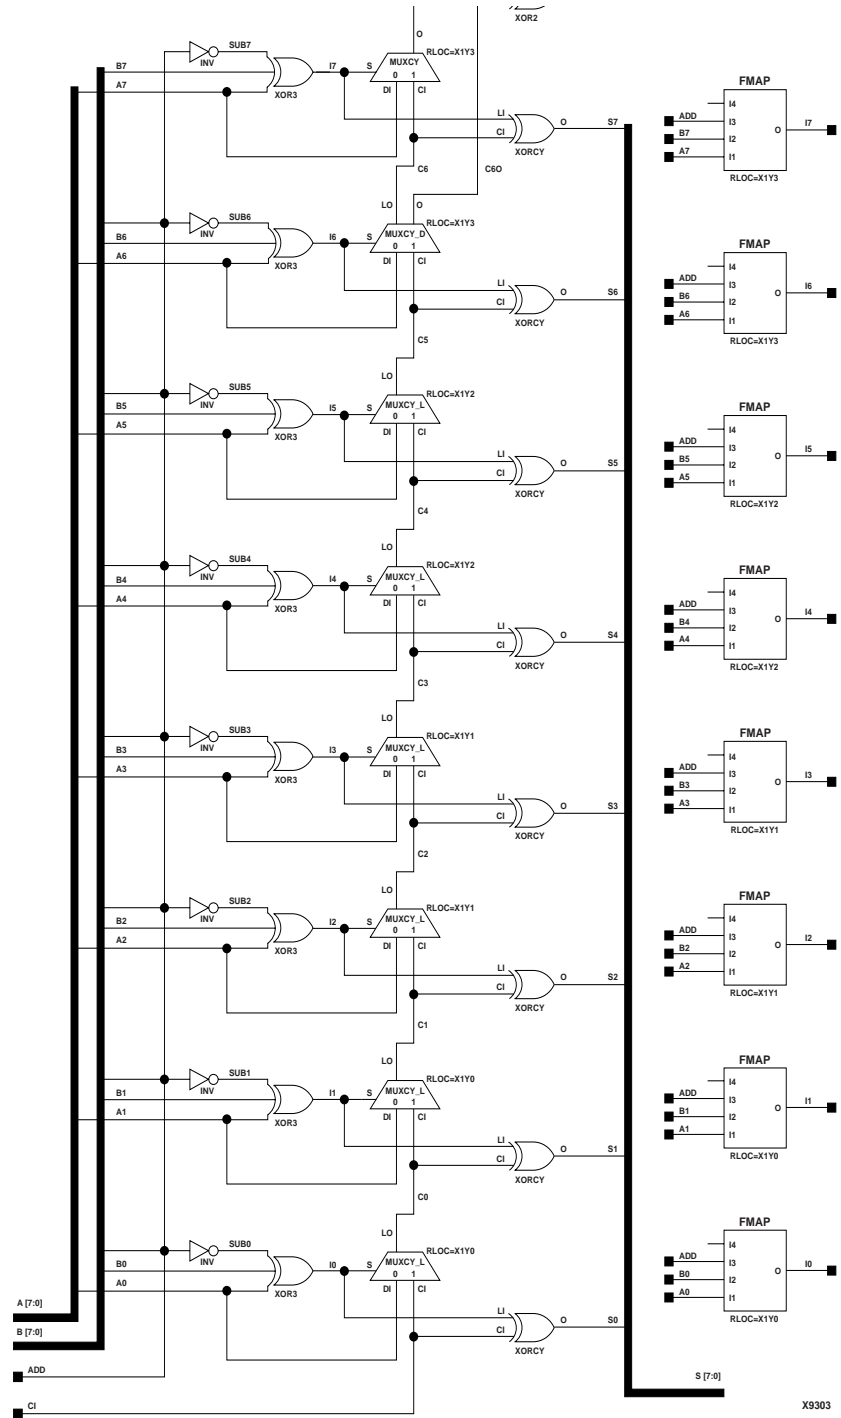

ADSU8 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

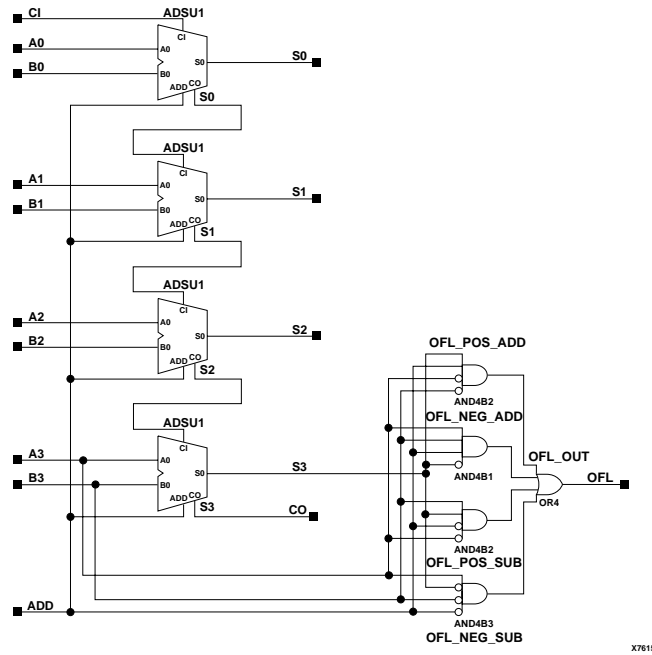

ADSU4 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

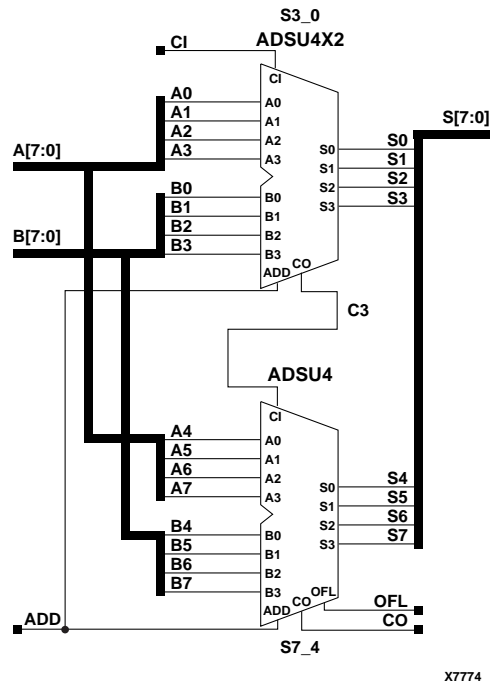

ADSU8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

## Usability

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of adsu4 is

begin

process (A,ADD,B)
begin
    if (ADD='1') then
        S <= A + B;
    else
        S <= A - B;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @ (A or ADD or B)
begin
    if (ADD)
        S <= A + B;
    else
        S <= A - B;
end
```




## AND2-9

### 2- to 9-Input AND Gates with Inverted and Non-Inverted Inputs

#### Architectures Supported

<b>AND2, AND2B1, AND2B2, AND3, AND3B1, AND3B2, AND3B3, AND4, AND4B1, AND4B2, AND4B3, AND4B4</b>	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No
<b>AND5, AND5B1, AND5B2, AND5B3, AND5B4, AND5B5</b>	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No
<b>AND7, AND8, AND9</b>	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No

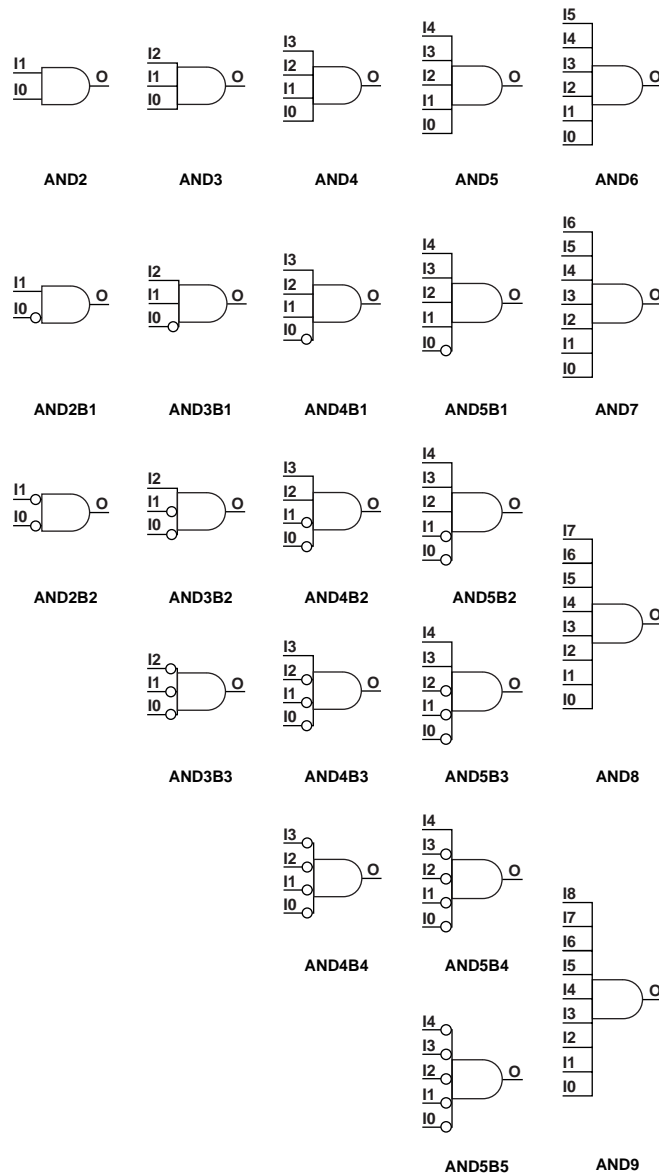


X9461


### AND Gate Representations

AND functions of up to five inputs are available in any combination of inverting and non-inverting inputs. AND functions of six to nine inputs are available with only non-inverting inputs. To make some or all inputs inverting, use external inverters. Because each input uses a CLB resource in Spartan-II, Spartan-3, Spartan-IIE, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X replace functions with unused inputs with functions having the appropriate number of inputs.

See “[AND12, 16](#)” for information on additional AND functions for Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X, and Spartan-3.

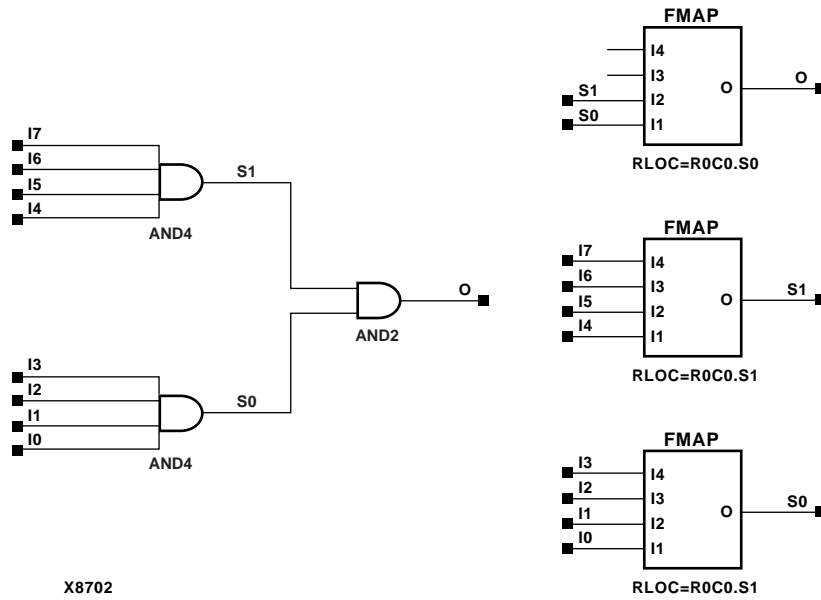

**AND8 Implementation Spartan-II, Spartan-II E, Virtex, Virtex-E**

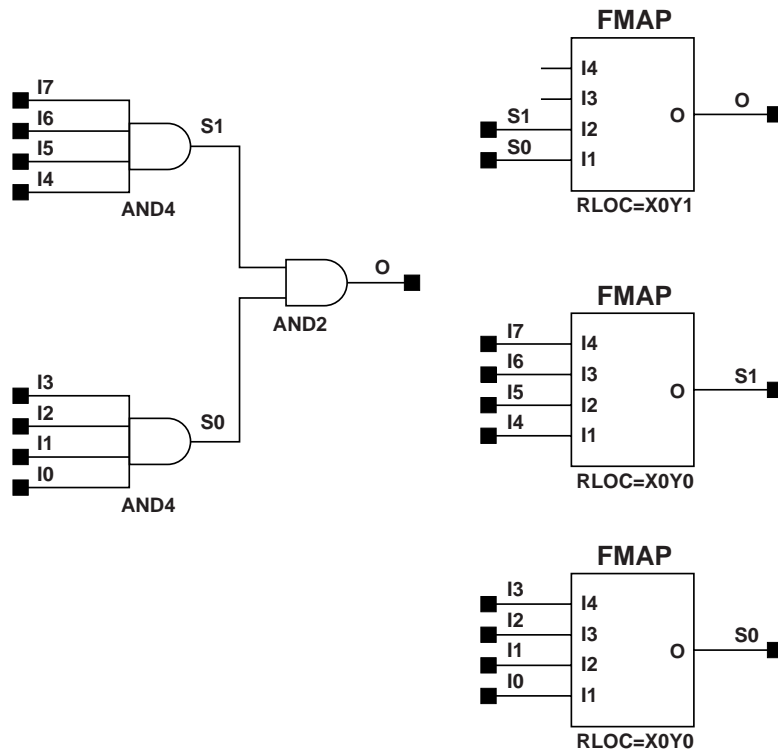

**AND8 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

## Usage

If possible, it is recommended that these design elements be inferred rather than instantiated.

## VHDL Inference Code

### AND2 example:

```
process (I0, I1)
begin
  O <= I0 and I1;
end process;
```

### AND5B3 example:

```
process (I0, I1, I2, I3, I4)
begin
  O <= (not I0) and (not I1) and (not I2) and I3 and I4;
end process;
```

## Verilog Inference Code

### AND2:

```
always @ (I0 or I1)
begin
  O <= I0 && I1;
end
```

### AND5B3:

```
always @ (I0 or I1 or I2 or I3 or I4)
begin
  O <= !I0 && !I1 && !I2 && I3 && I4;
end
```

## VHDL Instantiation Template for AND2, AND2B1, or AND2B2

```
-- Component Declaration for AND2, AND2B1, or AND2B2 should
-- be placed after architecture statement but before begin
-- keyword
```

```
component {AND2|AND2B1|AND2B2}
  port (O : out STD_ULOGIC;
        I1 : in STD_ULOGIC;
        I0 : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for AND2, AND2B1, or
-- AND2B2 should be placed after architecture declaration
-- but before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for AND2, AND2B1, or AND2B2
-- should be placed in architecture after the begin
-- keyword
```

```

INSTANCE_NAME : {AND2|AND2B1|AND2B2}
  port map (O => user_O,
           I0 => user_I0,
           I1 => user_I1);

```

### Verilog Instantiation Template for AND2, AND2B1, or AND2B2

```

ANDn instance_name (.O (user_O),
                   .I0 (user_I0),
                   .I1 (user_I1));

```

### VHDL Instantiation Template for AND3 Through AND3B3

```

-- Component Declaration for AND3 through AND3B3 should
-- be placed after architecture statement but before begin
-- keyword

```

```

component {AND3|AND3B1|AND3B2|AND3B3}
  port (O : out STD_ULOGIC;
        I0 : in STD_ULOGIC;
        I1 : in STD_ULOGIC;
        I2 : in STD_ULOGIC);
end component;

```

```

-- Component Attribute specification for AND3 through AND3B3
-- should be placed after architecture declaration
-- but before the begin keyword

```

```

-- Enter attributes here

```

```

-- Component Instantiation for AND3 through AND3B3
-- should be placed in architecture after the begin
-- keyword

```

```

INSTANCE_NAME : {AND3|AND3B1|AND3B2|AND3B3}
  port map (O => user_O,
           I0 => user_I0,
           I1 => user_I1,
           I2 => user_I2);

```

### Verilog Instantiation Template for AND3 Through AND3B3

```

ANDn instance_name (.O (user_O),
                   .I0 (user_I0),
                   .I1 (user_I1),
                   .I2 (user_I2));

```

## VHDL Instantiation Template for AND4 Through AND4B4

```
-- Component Declaration for AND4 through AND4B4 should
-- be placed after architecture statement but before begin
-- keyword

component {AND4|AND4B1|AND4B2|AND4B3|AND4B4}
  port (O : out STD_ULOGIC;
        I0 : in STD_ULOGIC;
        I1 : in STD_ULOGIC;
        I2 : in STD_ULOGIC;
        I3 : in STD_ULOGIC);
end component;

-- Component Attribute specification for AND4 through AND4B4
-- should be placed after architecture declaration
-- but before the begin keyword

-- Enter attributes here

-- Component Instantiation for AND4 through AND4B4
-- should be placed in architecture after the begin
-- keyword

INSTANCE_NAME : AND4_thru_AND4B4
  port map (O => user_O,
            I0 => user_I0,
            I1 => user_I1,
            I2 => user_I2,
            I3 => user_I3);
```

## Verilog Instantiation Template for AND4 through AND4B4

```
ANDn instance_name (.O (user_O),
                   .I0 (user_I0),
                   .I1 (user_I1),
                   .I2 (user_I2),
                   .I3 (user_I3));
```

## VHDL Instantiation Template for AND5 Through AND5B5

```
-- Component Declaration for AND5 through AND5B5 should
-- be placed after architecture statement but before begin
-- keyword

component {AND5|AND5B1|AND5B2|AND5B3|AND5B4|AND5B5}
  port (O : out STD_ULOGIC;
        I0 : in STD_ULOGIC;
        I1 : in STD_ULOGIC;
        I2 : in STD_ULOGIC;
        I3 : in STD_ULOGIC;
        I4 : in STD_ULOGIC);
end component;

-- Component Attribute specification for AND5 through AND5B5
-- should be placed after architecture declaration
-- but before the begin keyword

-- Enter attributes here

-- Component Instantiation for AND5 through AND5B5
-- should be placed in architecture after the begin
-- keyword

INSTANCE_NAME : AND5_thru_AND5B5
  port map (O => user_O,
            I0 => user_I0,
            I1 => user_I1,
            I2 => user_I2,
            I3 => user_I3,
            I4 => user_I4);
```

## Verilog Instantiation Template for AND5 through AND5B5

```
ANDn instance_name (.O (user_O),
                   .I0 (user_I0),
                   .I1 (user_I1),
                   .I2 (user_I2),
                   .I3 (user_I3),
                   .I4 (user_I4));
```

## Commonly Used Constraints

None






# AND12, 16

## 12- and 16-Input AND Gates with Non-Inverted Inputs

### Architectures Supported



AND12, AND16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No







AND12 and AND16 functions are performed in the Configurable Logic Block (CLB) function generator.

The 12- and 16-input AND functions are available only with non-inverting inputs. To invert all of some inputs, use external inverters.


See “AND2-9” for information on more AND functions.

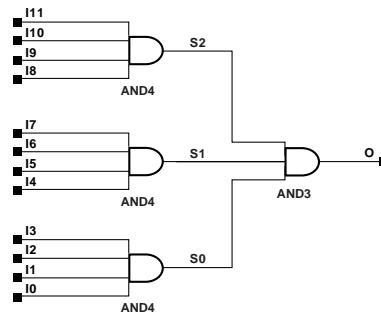


X8705

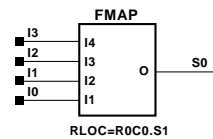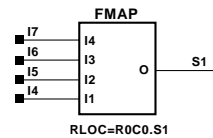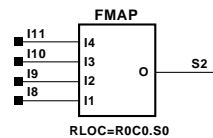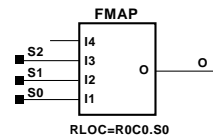


### AND12 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

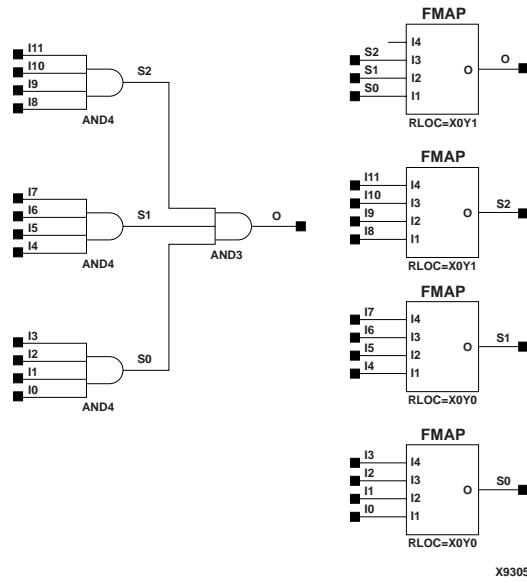

**AND12 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

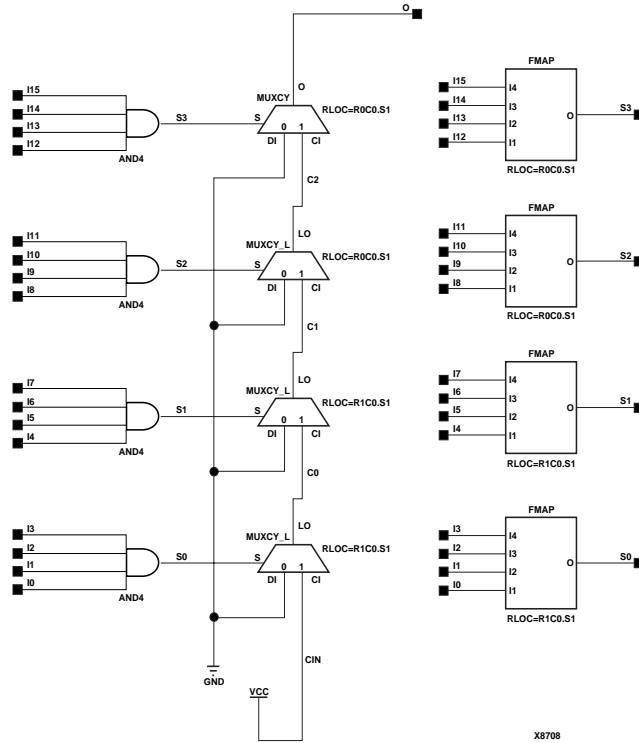

**AND16 Implementation Spartan-II, Spartan-II E, Virtex, Virtex-E**

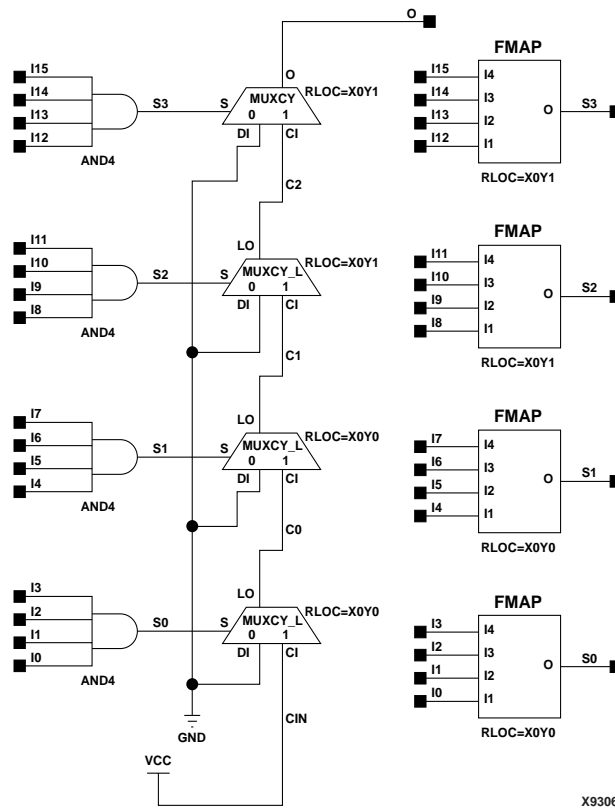

## AND16 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

### Usage

For HDL, it is recommended that these design elements be inferred rather than instantiated.

### VHDL Inference Code

architecture Behavioral of and12 is

begin

```
process (I0, I1, I2, I3, I4, I5, I6, I7, I8, I9, I10, I11)
begin
  O <= I0 and I1 and I2 and I3 and I4 and I5 and I6 and I7
    and I8 and I9 and I10 and I11;
end process;
```

end Behavioral;

## Verilog Inference Code

```
always @ (I0 or I1 or I2 or I3 or I4 or I5
  or I6 or I7 or I8 or I9 or I10 or I11)
begin
  O <= I0 && I1 && I2 && I3 && I4 && I5
    && I6 && I7 && I8 && I9 && I10 && I11;
end
```

## Commonly Used Constraints


None

## BRLSHFT4, 8

### 4-, 8-Bit Barrel Shifters


#### Architectures Supported

BRLSHFT4, BRLSHFT8	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

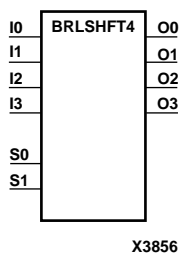

BRLSHFT4, a 4-bit barrel shifter, can rotate four inputs (I3 – I0) up to four places. The control inputs (S1 and S0) determine the number of positions, from one to four, that the data is rotated. The four outputs (O3 – O0) reflect the shifted data inputs.

BRLSHFT8, an 8-bit barrel shifter, can rotate the eight inputs (I7 – I0) up to eight places. The control inputs (S2 – S0) determine the number of positions, from one to eight, that the data is rotated. The eight outputs (O7 – O0) reflect the shifted data inputs.

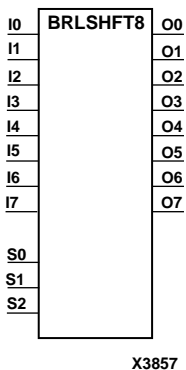

#### BRLSHFT4 Truth Table


Inputs						Outputs			
S1	S0	I0	I1	I2	I3	O0	O1	O2	O3
0	0	a	b	c	d	a	b	c	d
0	1	a	b	c	d	b	c	d	a
1	0	a	b	c	d	c	d	a	b
1	1	a	b	c	d	d	a	b	c

#### BRLSHFT8 Truth Table

Inputs											Outputs							
S2	S1	S0	I0	I1	I2	I3	I4	I5	I6	I7	O0	O1	O2	O3	O4	O5	O6	O7
0	0	0	a	b	c	d	e	f	g	h	a	b	c	d	e	f	g	h
0	0	1	a	b	c	d	e	f	g	h	b	c	d	e	f	g	h	a
0	1	0	a	b	c	d	e	f	g	h	c	d	e	f	g	h	a	b
0	1	1	a	b	c	d	e	f	g	h	d	e	f	g	h	a	b	c
1	0	0	a	b	c	d	e	f	g	h	e	f	g	h	a	b	c	d
1	0	1	a	b	c	d	e	f	g	h	f	g	h	a	b	c	d	e

**BRLSHFT8 Truth Table**

Inputs											Outputs							
S2	S1	S0	I0	I1	I2	I3	I4	I5	I6	I7	O0	O1	O2	O3	O4	O5	O6	O7
1	1	0	a	b	c	d	e	f	g	h	g	h	a	b	c	d	e	f
1	1	1	a	b	c	d	e	f	g	h	h	a	b	c	d	e	f	g

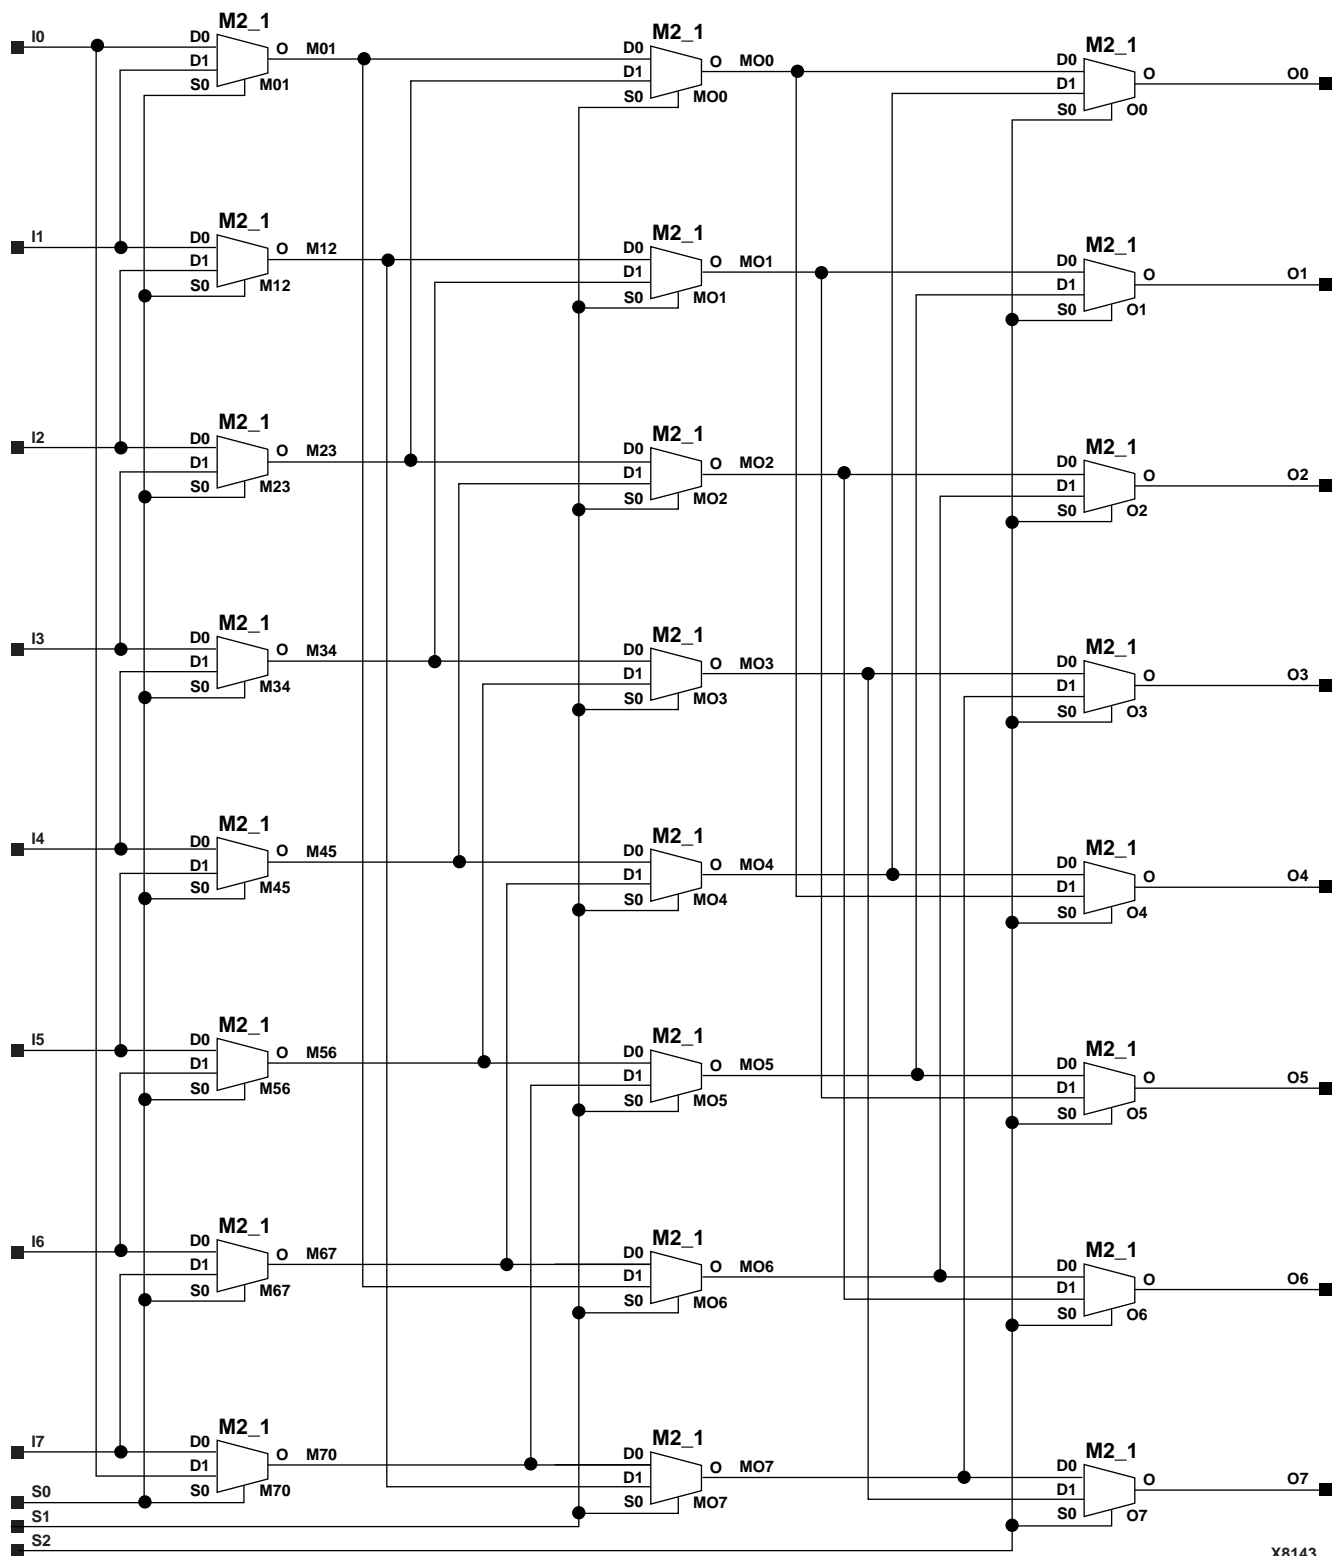

X8143

**BRLSHFT8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIe, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

## Usage

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of brlshft4 is

begin

process (I,S)
begin
    case S is
        when "00" =>
            O <= I;
        when "01" =>
            O(3) <= I(0);
            O(2 downto 0) <= I(3 downto 1);
        when "10" =>
            O(3 downto 2) <= I(1 downto 0);
            O(1 downto 0) <= I(3 downto 2);
        when "11" =>
            O(3 downto 1) <= I(2 downto 0);
            O(0) <= I(3);
        when others =>
            O <= I;
    end case;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @(I or S)
begin
    case (S)
        2'b00 : O <= I;
        2'b01 : O <= {I[0],I[3:1]};
        2'b10 : O <= {I[1:0],I[3:2]};
        2'b11 : O <= {I[2:0],I[3]};
    endcase
end
```




## BSCAN\_SPARTAN2

### Spartan-II Boundary Scan Logic Control Circuit

#### Architectures Supported

BSCAN_SPARTAN2	
Spartan-II, Spartan-IIE	Primitive*
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
* Supported for Spartan-II, but not for Spartan-IIE, which is supported by BSCAN_VIRTEX.	

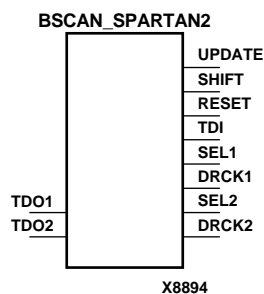

The BSCAN\_SPARTAN2 symbol creates internal boundary scan chains in a Spartan-II device. The 4-pin JTAG interface (TDI, TDO, TCK, and TMS) are dedicated pins in Spartan-II. To use normal JTAG for boundary scan purposes, just hook up the JTAG pins to the port and go. The pins on the BSCAN\_SPARTAN2 symbol do not need to be connected, unless those special functions are needed to drive an internal scan chain.

A signal on the TDO1 input is passed to the external TDO output when the USER1 instruction is executed; the SEL1 output goes High to indicate that the USER1 instruction is active. The DRCK1 output provides USER1 access to the data register clock (generated by the TAP controller). The TDO2 and SEL2 pins perform a similar function for the USER2 instruction and the DRCK2 output provides USER2 access to the data register clock (generated by the TAP controller). The RESET, UPDATE, and SHIFT pins represent the decoding of the corresponding state of the boundary scan internal state machine. The TDI pin provides access to the TDI signal of the JTAG port in order to shift data into an internal scan chain.

**Note:** For specific information on boundary scan for an architecture, see *The Programmable Logic Data Book*.

#### Usage

This design element is supported for instantiation and schematics but not for inference.

#### VHDL Instantiation Template

```
-- Component Declaration for BSCAN_SPARTAN2 should be placed
-- after architecture statement but before begin keyword
```

```
component BSCAN_SPARTAN2
  port (DRCK1 : out STD_ULOGIC;
        DRCK2 : out STD_ULOGIC;
```

```

        RESET : out STD_ULOGIC;
        SEL1  : out STD_ULOGIC;
        SEL2  : out STD_ULOGIC;
        SHIFT : out STD_ULOGIC;
        TDI   : out STD_ULOGIC;
        UPDATE : out STD_ULOGIC;
        TD01  : in  STD_ULOGIC;
        TD02  : in  STD_ULOGIC);
end component;

-- Component Attribute specification for BSCAN_SPARTAN2
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for BSCAN_SPARTAN2 should be
-- placed in architecture after the begin keyword

BSCAN_SPARTAN2_INSTANCE_NAME : BSCAN_SPARTAN2
    port map (DRCK1 => user_DRCK1,
              DRCK2 => user_DRCK2,
              RESET => user_RESET,
              SEL1  => user_SEL1,
              SEL2  => user_SEL2,
              SHIFT => user_SHIFT,
              TDI   => user_TDI,
              UPDATE => user_UPDATE,
              TD01  => user_TD01,
              TD02  => user_TD02);

```

## Verilog Instantiation Template

```

BSCAN_SPARTAN2 instance_name (.DRCK1 (user_DRCK1),
                              .DRCK2 (user_DRCK2),
                              .RESET (user_RESET),
                              .SEL1 (user_SEL1),
                              .SEL2 (user_SEL2),
                              .SHIFT (user_SHIFT),
                              .TDI (user_TDI),
                              .UPDATE (user_UPDATE),
                              .TD01 (user_TD01),
                              .TD02 (user_TD02));

```

## Commonly Used Constraints


None

## BSCAN\_SPARTAN3

### Spartan-3 Boundary Scan Logic Control Circuit

#### Architectures Supported

BSCAN_SPARTAN3	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

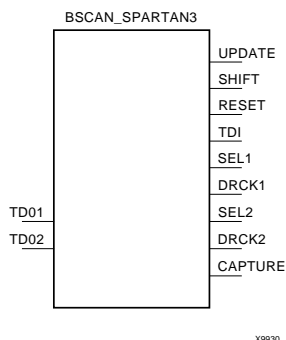

BSCAN\_SPARTAN3 provides access to the BSCAN sites on a Spartan-3 device. It is used to create internal boundary scan chains. The 4-pin JTAG interface (TDI, TDO, TCK, and TMS) are dedicated pins in Spartan-3. To use normal JTAG for boundary scan purposes, just hook up the JTAG pins to the port and go. The pins on the BSCAN\_SPARTAN3 symbol do not need to be connected, unless those special functions are needed to drive an internal scan chain.

A signal on the TDO1 input is passed to the external TDO output when the USER1 instruction is executed; the SEL1 output goes High to indicate that the USER1 instruction is active. The DRCK1 output provides USER1 access to the data register clock (generated by the TAP controller). The TDO2 and SEL2 pins perform a similar function for the USER2 instruction and the DRCK2 output provides USER2 access to the data register clock (generated by the TAP controller). The RESET, UPDATE, SHIFT, and CAPTURE pins represent the decoding of the corresponding state of the boundary scan internal state machine. The TDI pin provides access to the TDI signal of the JTAG port in order to shift data into an internal scan chain.

#### Usage

This design element is instantiated rather than inferred.

#### VHDL Instantiation Template

```
-- Component Declaration for BSCAN_SPARTAN3 should be placed
-- after architecture statement but before begin keyword
```

```
component BSCAN_SPARTAN3
  port (CAPTURE : out STD_ULOGIC;
        DRCK1  : out STD_ULOGIC;
        DRCK2  : out STD_ULOGIC;
        RESET  : out STD_ULOGIC;
        SEL1   : out STD_ULOGIC;
        SEL2   : out STD_ULOGIC;
        SHIFT  : out STD_ULOGIC;
        TDI    : out STD_ULOGIC;
```

```

        UPDATE : out STD_ULOGIC;
        TD01 : in STD_ULOGIC;
        TD02 : in STD_ULOGIC);
end component;

-- Component Attribute specification for BSCAN_SPARTAN3
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for BSCAN_SPARTAN3 should be
-- placed in architecture after the begin keyword

BSCAN_SPARTAN3_INSTANCE_NAME : BSCAN_SPARTAN3
    port map (CAPTURE => user_CAPTURE,
              DRCK1 => user_DRCK1,
              DRCK2 => user_DRCK2,
              RESET => user_RESET,
              SEL1 => user_SEL1,
              SEL2 => user_SEL2,
              SHIFT => user_SHIFT,
              TDI => user_TDI,
              UPDATE => user_UPDATE,
              TD01 => user_TD01,
              TD02 => user_TD02);

```

## Verilog Instantiation Template

```

BSCAN_SPARTAN3 instance_name (.CAPTURE (user_CAPTURE),
                              .DRCK1 (user_DRCK1),
                              .DRCK2 (user_DRCK2),
                              .RESET (user_RESET),
                              .SEL1 (user_SEL1),
                              .SEL2 (user_SEL2),
                              .SHIFT (user_SHIFT),
                              .TDI (user_TDI),
                              .UPDATE (user_UPDATE),
                              .TD01 (user_TD01),
                              .TD02 (user_TD02));

```

## Commonly Used Constraints


None.

## BSCAN\_VIRTEX

### Virtex Boundary Scan Logic Control Circuit

#### Architectures Supported

BSCAN_VIRTEX	
Spartan-II, Spartan-IIE	Primitive*
Spartan-3	No
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
* Supported for Spartan-IIE, but not for Spartan-II, which is supported by BSCAN_SPARTAN2.	

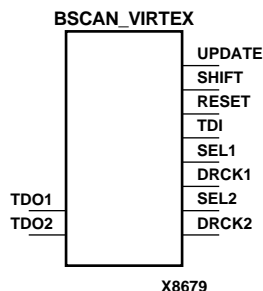

The BSCAN\_VIRTEX symbol is used to create internal boundary scan chains in a Virtex or Virtex- E device. The 4-pin JTAG interface (TDI, TDO, TCK, and TMS) are dedicated pins in Virtex and Virtex-E. To use normal JTAG for boundary scan purposes, just hook up the JTAG pins to the port and go. The pins on the BSCAN\_VIRTEX symbol do not need to be connected, unless those special functions are needed to drive an internal scan chain.

**Note:** For Virtex-II, Virtex-II Pro, and Virtex-II Pro X, see “BSCAN\_VIRTEX2”.

A signal on the TDO1 input is passed to the external TDO output when the USER1 instruction is executed; the SEL1 output goes High to indicate that the USER1 instruction is active. The DRCK1 output provides USER1 access to the data register clock (generated by the TAP controller). The TDO2 and SEL2 pins perform a similar function for the USER2 instruction and the DRCK2 output provides USER2 access to the data register clock (generated by the TAP controller). The RESET, UPDATE, and SHIFT pins represent the decoding of the corresponding state of the boundary scan internal state machine. The TDI pin provides access to the TDI signal of the JTAG port in order to shift data into an internal scan chain.

**Note:** For specific information on boundary scan for an architecture, see *The Programmable Logic Data Book*.

#### Usage

This design element is supported for instantiation and schematics but not for inference.

#### VHDL Instantiation Template

```
-- Component Declaration for BSCAN_VIRTEX should be placed
-- after architecture statement but before begin keyword
```

```
component BSCAN_VIRTEX
  port (DRCK1 : out STD_ULOGIC;
```

```

        DRCK2 : out STD_ULOGIC;
        RESET : out STD_ULOGIC;
        SEL1  : out STD_ULOGIC;
        SEL2  : out STD_ULOGIC;
        SHIFT : out STD_ULOGIC;
        TDI   : out STD_ULOGIC;
        UPDATE : out STD_ULOGIC;
        TD01  : in  STD_ULOGIC;
        TD02  : in  STD_ULOGIC);
end component;

-- Component Attribute specification for BSCAN_VIRTEX
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for BSCAN_VIRTEX should be
-- placed in architecture after the begin keyword

BSCAN_VIRTEX_INSTANCE_NAME : BSCAN_VIRTEX
    port map (DRCK1 => user_DRCK1,
              DRCK2 => user_DRCK2,
              RESET => user_RESET,
              SEL1  => user_SEL1,
              SEL2  => user_SEL2,
              SHIFT => user_SHIFT,
              TDI   => user_TDI,
              UPDATE => user_UPDATE,
              TD01  => user_TD01,
              TD02  => user_TD02);

```

## Verilog Instantiation Template

```

BSCAN_VIRTEX instance_name (.DRCK1 (user_DRCK1),
                             .DRCK2 (user_DRCK2),
                             .RESET (user_RESET),
                             .SEL1  (user_SEL1),
                             .SEL2  (user_SEL2),
                             .SHIFT (user_SHIFT),
                             .TDI   (user_TDI),
                             .UPDATE (user_UPDATE),
                             .TD01  (user_TD01),
                             .TD02  (user_TD02));

```

## Commonly Used Constraints

None








## BSCAN\_VIRTEX2

### Virtex-II Boundary Scan Logic Control Circuit

#### Architectures Supported

BSCAN_VIRTEX2	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

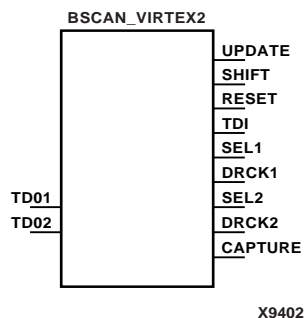

BSCAN\_VIRTEX2 provides access to the BSCAN sites on a Virtex-II, Virtex-II Pro, or Virtex-II Pro X device. It is used to create internal boundary scan chains. The 4-pin JTAG interface (TDI, TDO, TCK, and TMS) are dedicated pins in Virtex-II, Virtex-II Pro, and Virtex-II Pro X. To use normal JTAG for boundary scan purposes, just hook up the JTAG pins to the port and go. The pins on the BSCAN\_VIRTEX2 symbol do not need to be connected, unless those special functions are needed to drive an internal scan chain.

**Note:** For Virtex and Virtex-E, see “BSCAN\_VIRTEX”.

A signal on the TDO1 input is passed to the external TDO output when the USER1 instruction is executed; the SEL1 output goes High to indicate that the USER1 instruction is active. The DRCK1 output provides USER1 access to the data register clock (generated by the TAP controller). The TDO2 and SEL2 pins perform a similar function for the USER2 instruction and the DRCK2 output provides USER2 access to the data register clock (generated by the TAP controller). The RESET, UPDATE, SHIFT, and CAPTURE pins represent the decoding of the corresponding state of the boundary scan internal state machine. The TDI pin provides access to the TDI signal of the JTAG port in order to shift data into an internal scan chain.

**Note:** For specific information on boundary scan for an architecture, see *The Programmable Logic Data Book*.

#### Usage

This design element is supported for instantiation and schematics but not for inference.

#### VHDL Instantiation Template

```
-- Component Declaration for BSCAN_VIRTEX2 should be placed
-- after architecture statement but before begin keyword
```

```
component BSCAN_VIRTEX2
  port (CAPTURE : out STD_ULONGIC;
        DRCK1 : out STD_ULONGIC;
```

```

        DRCK2 : out STD_ULOGIC;
        RESET : out STD_ULOGIC;
        SEL1  : out STD_ULOGIC;
        SEL2  : out STD_ULOGIC;
        SHIFT : out STD_ULOGIC;
        TDI   : out STD_ULOGIC;
        UPDATE : out STD_ULOGIC;
        TD01  : in  STD_ULOGIC;
        TD02  : in  STD_ULOGIC);
end component;

-- Component Attribute specification for BSCAN_VIRTEX2
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for BSCAN_VIRTEX2 should be
-- placed in architecture after the begin keyword

BSCAN_VIRTEX2_INSTANCE_NAME : BSCAN_VIRTEX2
    port map (CAPTURE => user_CAPTURE,
              DRCK1  => user_DRCK1,
              DRCK2  => user_DRCK2,
              RESET  => user_RESET,
              SEL1   => user_SEL1,
              SEL2   => user_SEL2,
              SHIFT  => user_SHIFT,
              TDI    => user_TDI,
              UPDATE => user_UPDATE,
              TD01   => user_TD01,
              TD02   => user_TD02);

```

## Verilog Instantiation Template

```

BSCAN_VIRTEX2 instance_name (.CAPTURE (user_CAPTURE),
                             .DRCK1 (user_DRCK1),
                             .DRCK2 (user_DRCK2),
                             .RESET (user_RESET),
                             .SEL1 (user_SEL1),
                             .SEL2 (user_SEL2),
                             .SHIFT (user_SHIFT),
                             .TDI (user_TDI),
                             .UPDATE (user_UPDATE),
                             .TD01 (user_TD01),
                             .TD02 (user_TD02));

```

## Commonly Used Constraints

None

## BUF

### General-Purpose Buffer

#### Architectures Supported

BUF	
Spartan-II, Spartan-III	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No



BUF is a general purpose, non-inverting buffer.

In Spartan-II, Spartan-III, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, BUF is usually not necessary and is removed by the partitioning software (MAP).

In XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, BUF is usually removed, unless you inhibit optimization by applying the OPT=OFF attribute to the BUF symbol or by using the LOGIC\_OPT=OFF global attribute.

#### Usage

This design is supported in schematics and instantiation but not for inference.

#### VHDL Instantiation Template

```
-- Component Declaration for BUF should be placed
-- after architecture statement but before begin keyword

component BUF
  port (O : out STD_ULOGIC;
        I : in STD_ULOGIC);
end component;

-- Component Attribute specification for BUF
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for BUF should be placed
-- in architecture after the begin keyword

BUF_INSTANCE_NAME : BUF
  port map (O => user_O,
           I => user_I);
```

## Verilog Instantiation Template

```
BUF instance_name (.O (user_O),  
                  .I (user_I));
```

## Commonly Used Constraints




None

# BUF4, 8, 16

## General-Purpose Buffers


### Architectures Supported

BUF4, BUF8, BUF16	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

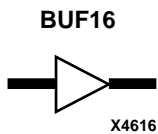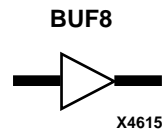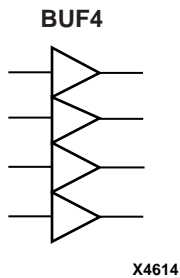

BUF4, 8, 16 are general purpose, non-inverting buffers.

In XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, BUF4, BUF8, and BUF16 are usually removed, unless you inhibit optimization by applying the OPT=OFF attribute to the BUF4, BUF8, or BUF16 symbol or by using the LOGIC\_OPT=OFF global attribute.

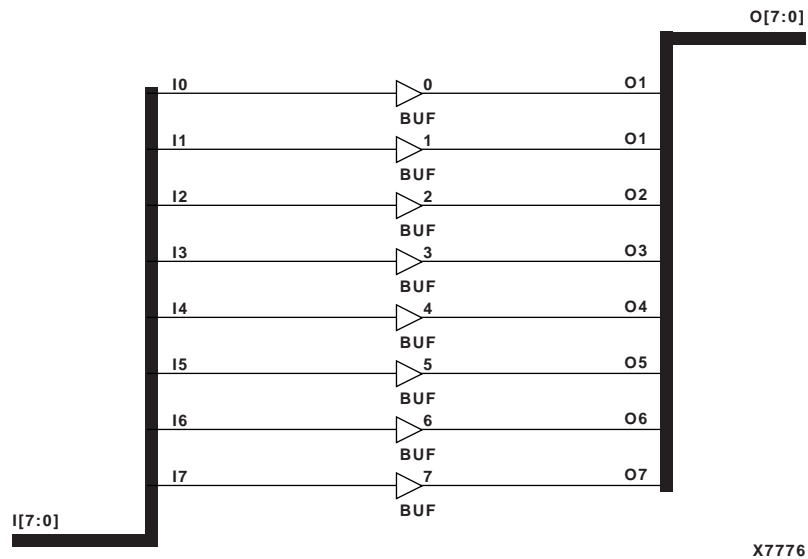

**BUF8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

### Usage

These design elements are schematic only.




## BUFCF

### Fast Connect Buffer

#### Architectures Supported

BUFCF	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



BUFCF is a single fast connect buffer used to connect the outputs of the LUTs and some dedicated logic directly to the input of another LUT. Using this buffer implies CLB packing. No more than four LUTs may be connected together as a group.

#### Usage

This design element is supported for schematics and instantiation but not for inference.

#### VHDL Instantiation Template

```
-- Component Declaration for BUFCF should be placed
-- after architecture statement but before begin keyword

component BUFCF
    port (O : out STD_ULOGIC;
          I : in STD_ULOGIC);
end component;

-- Component Attribute specification for BUFCF
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for BUFCF should be placed
-- in architecture after the begin keyword

BUFCF_INSTANCE_NAME : BUFCF
    port map (O => user_O,
              I => user_I);
```

## Verilog Instantiation Template

```
BUFCF instance_name (.O (user_O),  
                    .I (user_I));
```

## Commonly Used Constraints

None






## BUFE, 4, 8, 16

### Internal 3-State Buffers with Active High Enable

#### Architectures Supported

BUFE	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	No
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	No
CoolRunner-IIS	No
BUFE4, BUFE8, BUFE16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	No
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro*
CoolRunner XPLA3	Macro
CoolRunner-II	No
CoolRunner-IIS	No
*Not supported for XC9500XL and XC9500XV devices	

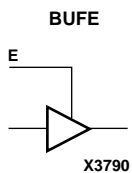


BUFE, BUFE4, BUFE8, and BUFE16 are single or multiple 3-state buffers with inputs I, I3 – I0, I7 – I0, and I15 – I0, respectively; outputs O, O3 – O0, O7 – O0, and O15 – O0, respectively; and active-High output enable (E). When E is High, data on the inputs of the buffers is transferred to the corresponding outputs. When E is Low, the output is high impedance (Z state or Off). The outputs of the buffers are connected to horizontal longlines in FPGA architectures.


The outputs of separate BUFE symbols can be tied together to form a bus or a multiplexer. Make sure that only one E is High at any one time. If none of the E inputs is active-High, a “weak-keeper” circuit (Spartan-II, Spartan-IIE, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X) keeps the output bus from floating but does not guarantee that the bus remains at the last value driven onto it.

For XC9500 devices, BUFE output nets assume the High logic level when all connected BUFE/BUFT buffers are disabled.

For Spartan-II, Spartan-IIE, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, BUFE elements need a PULLUP element connected to their output. NGDBuild inserts a PULLUP element if one is not connected.



Inputs		Outputs
E	I	O
0	X	Z
1	1	1
1	0	0

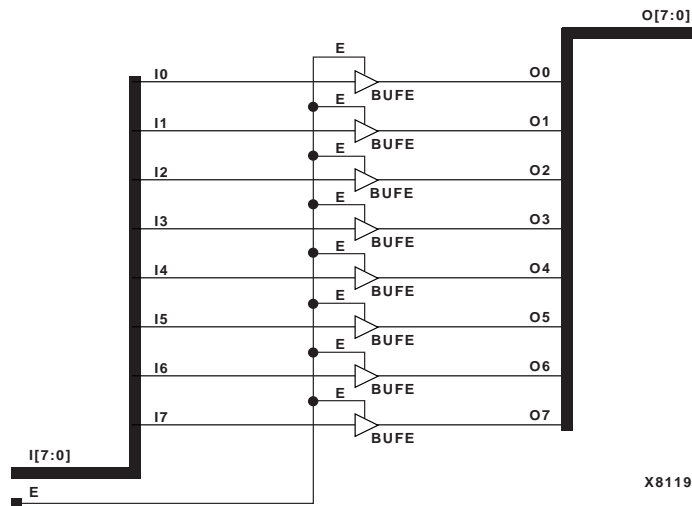

**BUFE8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIE, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

**Usage**

These design elements are supported for schematic, inference, and instantiation.

**VHDL Inference Code**

```
architecture Behavioral of bufe is
begin
process (I, E)
begin
if (E = '1') then
O <= I;
else
O <= 'Z';
end if;
end process;
end architecture;
```

```
end process;  
end Behavioral;
```

### Verilog Inference Code

```
always @ (I or E)  
begin  
  if (E)  
    O <= I;  
  else  
    O <= 1'bZ;  
end
```

## VHDL Instantiation Template

```
-- Component Declaration for BUFE should be placed
-- after architecture statement but before begin keyword

component BUFE
  port (O : out STD_ULOGIC;
        E : in STD_ULOGIC;
        I : in STD_ULOGIC);
end component;

-- Component Attribute specification for BUFE
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for BUFE should be placed
-- in architecture after the begin keyword

BUFE_INSTANCE_NAME : BUFE
  port map (O => user_O,
           E => user_E,
           I => user_I);
```

## Verilog Instantiation Template

```
BUFE instance_name (.O (user_O),
                   .E (user_E),
                   .I (user_I));
```

## Commonly Used Constraints


None

# BUFG

## Global Clock Buffer

### Architectures Supported

BUFG	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No



BUFG, an architecture-independent global buffer, distributes high fan-out clock signals throughout a PLD device. The Xilinx implementation software converts each BUFG to an appropriate type of global buffer for the target PLD device. To use a specific type of buffer, instantiate it manually.

To use a BUFG in a schematic, connect the input of the BUFG symbol to the clock source. Depending on the target PLD family, the clock source can be an external PAD symbol, an IBUF symbol, or internal logic. For a negative-edge clock input, insert an INV (inverter) symbol between the BUFG output and the clock input. The inversion is implemented at the Configurable Logic Block (CLB) or Input Output Block (IOB) clock pin.

### XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II

Consult the device data sheet for the number of available global pins. For these architectures BUFG is always implemented using an IOB. Connect the input of BUFG to an IPAD or an IOPAD that represents an external signal source. Each BUFG can drive any number of register clocks in a design. The output of a BUFG may also be used as an ordinary input signal to other logic elsewhere in the design.

### Virtex, Virtex-E, Spartan-II, Spartan-IIE

In Virtex, Virtex-E, Spartan-II, and Spartan-IIE, the BUFG cannot be driven directly from a pad. It can be driven from an IBUG to indicate to use the dedicated pin (GCLKIOB pin) or from an internal driver to create an internal clock. BUFG can also be driven with an IBUF to represent an externally driven clock that does not use the dedicated pin.

### Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, clock buffers are multiplexed clock buffers. In Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, a BUFG is implemented using a BUFGMUX with the S\_B input tied high, basically meaning the S input is tied low. I1 is unused. I0 is used.

## Usage

This design element is supported for schematic and instantiation. Synthesis tools usually infer a BUFGP on any clock net. If there are more clock nets than BUFGPs, the synthesis tool usually instantiates BUFGPs for the clocks that are most utilized. The BUFGP contains both a BUFG and an IBUFG.

## VHDL Instantiation Template

```
-- Component Declaration for BUFG should be placed
-- after architecture statement but before begin keyword

component BUFG
  port (O : out STD_ULOGIC;
        I : in  STD_ULOGIC);
end component;

-- Component Attribute specification for BUFG
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for BUFG should be placed
-- in architecture after the begin keyword

BUFG_INSTANCE_NAME : BUFG
  port map (O => user_O,
           I => user_I);
```

## Verilog Instantiation Template

```
BUFG instance_name (.O (user_O),
                   .I (user_I));
```

## Commonly Used Constraints


LOC

# BUFGCE

## Global Clock MUX Buffer with Clock Enable and Output State 0


### Architectures Supported

BUFGCE	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

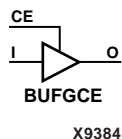

BUFGCE is a global clock buffer with a single gated input. Its O output is "0" when clock enable (CE) is Low (inactive). When clock enable (CE) is High, the I input is transferred to the O output.

Inputs		Outputs
I	CE	O
X	0	0
I	1	I

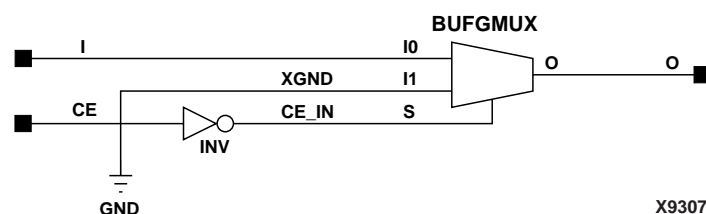

### BUFGCE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

### Usage

This design element is supported for schematics and instantiations but not for inference.

### VHDL Instantiation Template

```
-- Component Declaration for BUFCE should be placed
-- after architecture statement but before begin keyword
```

```
component BUFCE
  port (O : out STD_ULOGIC;
        CE : in STD_ULOGIC;
        I : in STD_ULOGIC);
```

```
end component ;

-- Component Attribute specification for BUFGCE
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for BUFGCE should be placed
-- in architecture after the begin keyword

BUFGCE_INSTANCE_NAME : BUFGCE
    port map (O => user_O,
              CE => user_CE,
              I => user_I);
```

### Verilog Instantiation Template

```
BUFGCE instance_name (.O (user_O),
                      .CE (user_CE),
                      .I (user_I));
```

### Commonly Used Constraints

LOC




# BUFGCE\_1

## Global Clock MUX Buffer with Clock Enable and Output State 1


### Architectures Supported

BUFGCE_1	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

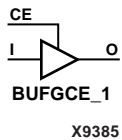

BUFGCE\_1 is a multiplexed global clock buffer with a single gated input. Its O output is High (1) when clock enable (CE) is Low (inactive). When clock enable (CE) is High, the I input is transferred to the O output.

Inputs		Outputs
I	CE	O
X	0	1
I	1	I

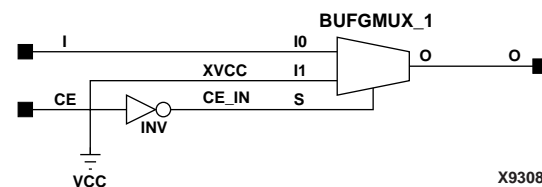

### BUFGCE\_1 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

### Usage

This design element is supported for schematics and instantiations but not for inference.

### VHDL Instantiation Template

```
-- Component Declaration for BUFCE_1 should be placed
-- after architecture statement but before begin keyword
```

```
component BUFCE_1
  port (O : out STD_ULOGIC;
        CE : in STD_ULOGIC;
        I: in STD_ULOGIC);
```

```
end component ;

-- Component Attribute specification for BUGCE_1
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for BUGCE_1 should be placed
-- in architecture after the begin keyword

BUGCE_1_INSTANCE_NAME : BUGCE_1
    port map (O => user_O,
              CE => user_CE,
              I => user_I);
```

### Verilog Instantiation Template

```
BUGCE_1 instance_name (.O (user_O),
                       .CE (user_CE),
                       .I (user_I));
```

### Commonly Used Constraints


LOC

# BUFGDLL

## Clock Delay Locked Loop Buffer

### Architectures Supported

BUFGDLL	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

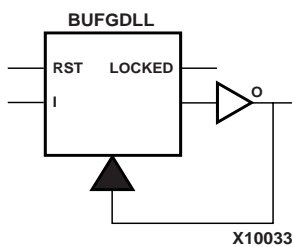

BUFGDLL is a special purpose clock delay locked loop buffer for clock skew management. It is provided as a user convenience for the most frequently used configuration of elements for clock skew management. Internally, it consists of an IBUFG driving the CLKIN pin of a CLKDLL followed by a BUFG that is driven by the CLK0 pin of the CLKDLL. Because BUFGDLL already contains an input buffer (IBUFG), it can only be driven by a top-level port (IPAD).

Any DUTY\_CYCLE\_CORRECTION attribute on a BUFGDLL applies to the underlying CLKDLL symbol.

### Usage

This design element is supported for schematics and instantiations but not for inference.

### VHDL Instantiation Template

```
-- Component Declaration for BUFGDLL should be placed
-- after architecture statement but before begin keyword

component BUFGDLL
    port (O : out STD_ULOGIC;
          I : in STD_ULOGIC);
end component;

-- Component Attribute specification for BUFGDLL
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here
```

```
-- Component Instantiation for BUFGDLL should be placed  
-- in architecture after the begin keyword
```

```
BUFGDLL_INSTANCE_NAME : BUFGDLL  
    port map (O => user_O,  
             I => user_I);
```

## Verilog Instantiation Template

```
BUFGDLL instance_name (.O (user_O),  
                      .I (user_I));
```

## Commonly Used Constraints


STARTUP\_WAIT

# BUFGMUX

## Global Clock MUX Buffer with Output State 0

### Architectures Supported

BUFGMUX	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

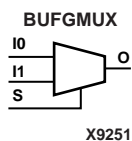

BUFGMUX is a multiplexed global clock buffer that can select between two input clocks I0 and I1. When the select input (S) is Low, the signal on I0 is selected for output (O). When the select input (S) is High, the signal on I1 is selected for output.

BUFGMUX and BUFGMUX\_1 are distinguished by which state the output assumes when it switches between clocks in response to a change in its select input. BUFGMUX assumes output state 0 and BUFGMUX\_1 assumes output state 1.

Using a BUFGMUX element in your design may cause inaccurate simulation if all the following conditions occur: both clock inputs (I0 and I1) are used, GSR is activated during simulation (after simulation time '0'), and the secondary clock input (I1) is selected before or while GSR is active. In this case, the primary clock input (I0) is incorrectly selected. This occurs because there is a cross-coupled register pair that ensures the BUFGMUX output does not inadvertently generate a clock edge. When GSR is asserted, these registers initialize to the default state of I0. To select the secondary clock, you must send a clock pulse to both the primary and secondary clock inputs while GSR is inactive.

**Note:** BUFGMUX guarantees that when S is toggled, the state of the output will remain in the inactive state until the next active clock edge (either I0 or I1) occurs.

Inputs			Outputs
I0	I1	S	O
I0	X	0	I0
X	I1	1	I1
X	X	↑	0
X	X	↓	0

### Usage

This design element is supported for schematics and instantiations but not for inference.

## VHDL Instantiation Template

```
-- Component Declaration for BUFGMUX should be placed
-- after architecture statement but before begin keyword

component BUFGMUX
  port (O : out STD_ULOGIC;
        IO : in STD_ULOGIC;
        I1 : in STD_ULOGIC;
        S : in STD_ULOGIC);
end component;

-- Component Attribute specification for BUFGMUX
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for BUFGMUX should be placed
-- in architecture after the begin keyword

BUFGMUX_INSTANCE_NAME : BUFGMUX
  port map (O => user_O,
            IO => user_IO,
            I1 => user_I1,
            S => user_S);
```

## Verilog Instantiation Template

```
BUFGMUX instance_name (.O (user_O),
                       .IO (user_IO),
                       .I1 (user_I1),
                       .S (user_S));
```

## Commonly Used Constraints

LOC








# BUFGMUX\_1

## Global Clock MUX Buffer with Output State 1

### Architectures Supported

BUFGMUX_1	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

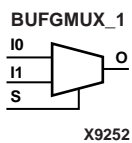

BUFGMUX\_1 is a multiplexed global clock buffer that can select between two input clocks I0 and I1. When the select input (S) is Low, the signal on I0 is selected for output (O). When the select input (S) is High, the signal on I1 is selected for output.

BUFGMUX and BUFGMUX\_1 are distinguished by which state the output assumes when it switches between clocks in response to a change in its select input. BUFGMUX assumes output state 0 and BUFGMUX\_1 assumes output state 1.

Using a BUFGMUX\_1 element in your design may cause inaccurate simulation if all the following conditions occur: both clock inputs (I0 and I1) are used, GSR is activated during simulation (after simulation time '0'), and the secondary clock input (I1) is selected before or while GSR is active. In this case, the primary clock input (I0) is incorrectly selected. This occurs because there is a cross-coupled register pair that ensures the BUFGMUX\_1 output does not inadvertently generate a clock edge. When GSR is asserted, these registers initialize to the default state of I0. To select the secondary clock, you must send a clock pulse to both the primary and secondary clock inputs while GSR is inactive.

Inputs			Outputs
I0	I1	S	O
I0	X	0	I0
X	I1	1	I1
X	X	↑	1
X	X	↓	1

### Usage

This design element is supported for schematics and instantiations but not for inference.

## VHDL Instantiation Template

```
-- Component Declaration for BUFGMUX_1 should be placed
-- after architecture statement but before begin keyword

component BUFGMUX_1
  port (O : out STD_ULOGIC;
        I0 : in STD_ULOGIC;
        I1 : in STD_ULOGIC;
        S : in STD_ULOGIC);
end component;

-- Component Attribute specification for BUFGMUX_1
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for BUFGMUX should be placed
-- in architecture after the begin keyword

BUFGMUX_1_INSTANCE_NAME : BUFGMUX_1
  port map (O => user_O,
            I0 => user_I0,
            I1 => user_I1,
            S => user_S);
```

## Verilog Instantiation Template

```
BUFGMUX_1 instance_name (.O (user_O),
                          .I0 (user_I0),
                          .I1 (user_I1),
                          .S (user_S));
```

## Commonly Used Constraints

LOC






## BUFGP

### Primary Global Buffer for Driving Clocks or Longlines (Four per PLD Device)

BUFGP	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



BUFGP, a primary global buffer, is used to distribute high fan-out clock or control signals throughout PLD devices.

In Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, BUFGP is equivalent to an IBUFG driving a BUFG.

In XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, BUFGP is treated like BUFG.

A BUFGP provides direct access to Configurable Logic Block (CLB) and Input Output Block (IOB) clock pins and limited access to other CLB inputs. The input to a BUFGP comes only from a dedicated IOB.

Because of its structure, a BUFGP can always access a clock pin directly. However, it can access only one of the F3, G1, C3, or C1 pins, depending on the corner in which the BUFGP is placed. When the required pin cannot be accessed directly from the vertical line, PAR feeds the signal through another CLB and uses general purpose routing to access the load pin.

To use a BUFGP in a schematic, connect the input of the BUFGP element directly to the PAD symbol. Do not use any IBUFs, because the signal comes directly from a dedicated IOB. The output of the BUFGP is then used throughout the schematic. For a negative-edge clock, insert an INV (inverter) element between the output of the BUFGP and the clock input. This inversion is performed inside each CLB or IOB.

A Spartan-II, Spartan-IIE, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X, or Spartan-3 BUFGP must be sourced by an external signal.

### Usage

This design element is supported for schematic and instantiation. Synthesis tools usually infer a BUFGP on any clock net. If there are more clock nets than BUFGPs, the synthesis tool usually instantiates BUFGPs for the clocks that are most utilized.

## VHDL Instantiation Template

```
-- Component Declaration for BUFGP should be placed
-- after architecture statement but before begin keyword

component BUFGP
  port (O : out STD_ULOGIC;
        I : in STD_ULOGIC);
end component;

-- Component Attribute specification for BUFGP
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for BUFGP should be placed
-- in architecture after the begin keyword

BUFGP_INSTANCE_NAME : BUFGP

  port map (O => user_O,
           I => user_I);
```

## Verilog Instantiation Template

```
BUFGP instance_name (.O (user_O),
                    .I (user_I));
```

## Commonly Used Constraints

HBLKNM








# BUFGSR

## Global Set/Reset Input Buffer

### Architectures Supported

BUFGSR	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No



BUFGSR distributes global set/reset signals throughout selected flip-flops of an XC9500/XV/XL, CoolRunner XPLA3, or CoolRunner-II device. Global Set/Reset (GSR) control pins are available on these CPLD devices. Consult device data sheets for availability.

BUFGSR always acts as an input buffer. To use it in a schematic, connect the input of the BUFGSR symbol to an IPAD or an IOPAD representing the GSR signal source. GSR signals generated on-chip must be passed through an OBUF-type buffer before they are connected to BUFGSR.

For global set/reset control, the output of BUFGSR normally connects to the CLR or PRE input of a flip-flop symbol, like FDCEP, or any registered symbol with asynchronous clear or preset. The global set/reset control signal may pass through an inverter to perform an active-low set/reset. The output of BUFGSR may also be used as an ordinary input signal to other logic elsewhere in the design. Each BUFGSR can control any number of flip-flops in a design.

### Usage

This design element is supported for schematics and instantiations but not for inference.

### VHDL Instantiation Template

```
-- Component Declaration for BUFGSR should be placed
-- after architecture statement but before begin keyword

component BUFGSR
  port (O : out STD_ULOGIC;
        I : in STD_ULOGIC);
end component;

-- Component Attribute specification for BUFGSR
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for BUFGSR should be placed  
-- in architecture after the begin keyword
```

```
BUFGSR_INSTANCE_NAME : BUFGSR  
    port map (O => user_O,  
             I => user_I);
```

## Verilog Instantiation Template


```
BUFGSR instance_name (.O (user_O),  
                     .I (user_I));
```

# BUFGTS

## Global 3-State Input Buffer

### Architectures Supported

BUFGTS	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No



BUFGTS distributes global output-enable signals throughout the output pad drivers of an XC9500/XV/XL, CoolRunner XPLA3, or CoolRunner-II device. Global Three-State (GTS) control pins are available on these CPLD devices. Consult device data sheets for availability.

BUFGTS always acts as an input buffer. To use it in a schematic, connect the input of the BUFGTS symbol to an IPAD or an IOPAD representing the GTS signal source. GTS signals generated on-chip must be passed through an OBUF-type buffer before they are connected to BUFGTS.

For global 3-state control, the output of BUFGTS normally connects to the E input of a 3-state output buffer symbol, OBUFE. The global 3-state control signal may pass through an inverter or control an OBUFT symbol to perform an active-low output-enable. The same 3-state control signal may even be used both inverted and non-inverted to enable alternate groups of device outputs. The output of BUFGTS may also be used as an ordinary input signal to other logic elsewhere in the design. Each BUFGTS can control any number of output buffers in a design.

### Usage

This design element is supported for schematics and instantiations but not for inference.

### VHDL Instantiation Template

```
-- Component Declaration for BUFGTS should be placed
-- after architecture statement but before begin keyword

component BUFGTS
    port (O : out STD_ULOGIC;
          I : in STD_ULOGIC);
end component;

-- Component Attribute specification for BUFGTS
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here

-- Component Instantiation for BUFGTS should be placed
-- in architecture after the begin keyword
```

```
BUFGTS_INSTANCE_NAME : BUFGTS
    port map (O => user_O,
              I => user_I);
```

### Verilog Instantiation Template




```
BUFGTS instance_name (.O (user_O),
                       .I (user_I));
```

## BUFT, 4, 8, 16

### Internal 3-State Buffers with Active-Low Enable

#### Architectures Supported

BUFT	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	No
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive*
CoolRunner XPLA3	Primitive
CoolRunner-II	No
CoolRunner-IIS	No
BUFT4, BUFT8, BUFT16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	No
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro*
CoolRunner XPLA3	Macro
CoolRunner-II	No
CoolRunner-IIS	No
*Not supported for XC9500XL and XC9500XV devices.	




BUFT, BUFT4, BUFT8, and BUFT16 are single or multiple 3-state buffers with inputs I, I3 – I0, I7 – I0, and I15 – I0, respectively; outputs O, O3 – O0, O7 – O0, and O15 – O0, respectively; and active-Low output enable (T). When T is Low, data on the inputs of the buffers is transferred to the corresponding outputs. When T is High, the output is high impedance (Z state or off). The outputs of the buffers are connected to horizontal longlines in FPGA architectures.


The outputs of separate BUFT symbols can be tied together to form a bus or a multiplexer. Make sure that only one T is Low at one time.

For XC9500 devices, BUFT output nets assume the High logic level when all connected BUFE/BUFT buffers are disabled.

For Spartan-II, Spartan-IIE, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, when all BUFTs on a net are disabled, the net is High. For correct simulation of this effect, a PULLUP element must be connected to the net. NGDBuild inserts a PULLUP element if one is not connected so that back-annotation simulation reflects the true state of the device.



Inputs		Outputs
T	I	O
1	X	Z
0	1	1
0	0	0

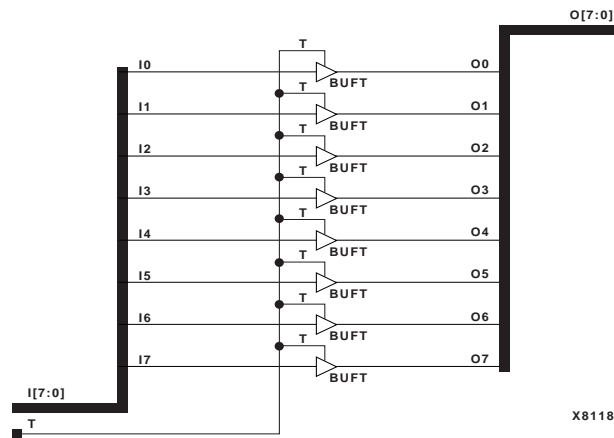

**BUFT8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIE, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

**Usage**

These design elements are supported for schematics, instantiations, or inferences.

**VHDL Inference Code**

```
architecture Behavioral of buft is
begin
process (I, T)
begin
if (T = '0') then
O <= I;
else
O <= 'Z';
end if;
end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (I or T)
begin
  if (!T)
    O <= I;
  else
    O <= 1'bZ;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for BUFT should be placed
-- after architecture statement but before begin keyword

component BUFT
  port (O : out STD_ULOGIC;
        I : in  STD_ULOGIC;
        T : in  STD_ULOGIC);
end component;

-- Component Attribute specification for BUFT
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for BUFT should be placed
-- in architecture after the begin keyword

BUFT_INSTANCE_NAME : BUFT
  port map (O => user_O,
            I => user_I,
            T => user_T);
```

## Verilog Instantiation Template

```
BUFT instance_name (.O (user_O),
                    .I (user_I),
                    .T (user_T));
```

## Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

LOC

U\_SET




## CAPTURE\_SPARTAN2

### Spartan-II Register State Capture for Bitstream Readback

#### Architectures Supported

CAPTURE_SPARTAN2	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

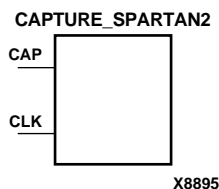

CAPTURE\_SPARTAN2 provides user control over when to capture register (flip-flop and latch) information for readback. Spartan-II and Spartan-IIE devices provide the readback function through dedicated configuration port instructions. The CAPTURE\_SPARTAN2 symbol is optional. Without it readback is still performed, but the asynchronous capture function it provides for register states is not available.

**Note:** Spartan-II and Spartan-IIE devices only allow for capturing register (flip-flop and latch) states. Although LUT RAM, SRL, and block RAM states are read back, they cannot be captured.

An asserted High CAP signal indicates that the registers in the device are to be captured at the next Low-to-High clock transition. By default, data is captured after every trigger (transition on CLK while CAP is asserted). To limit the readback operation to a single data capture, add the ONESHOT attribute to CAPTURE\_SPARTAN2. See the *Constraints Guide* for information on the ONESHOT attribute.

**Note:** For details on the Spartan-II and Spartan-IIE readback functions, see *The Programmable Logic Data Book*.

#### Usage

This design element is supported for schematics and instantiation but not for inference.

## VHDL Instantiation Template

```
-- Component Declaration for CAPTURE_SPARTAN2 should be
-- placed after architecture statement but before
-- begin keyword

component CAPTURE_SPARTAN2
  port (CAP : in STD_ULOGIC;
        CLK : in STD_ULOGIC);
end component;

-- Component Attribute specification for CAPTURE_SPARTAN2
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for CAPTURE_SPARTAN2 should be
-- placed in architecture after the begin keyword

CAPTURE_SPARTAN2_INSTANCE_NAME : CAPTURE_SPARTAN2
  port map (CAP => user_CAP,
           CLK => user_CLK);
```

## Verilog Instantiation Template

```
CAPTURE_SPARTAN2 instance_name (.CAP (user_CAP),
                                .CLK (user_CLK));
```

## Commonly Used Constraints

ONESHOT






## CAPTURE\_SPARTAN3

### Spartan-3 Register State Capture for Bitstream Readback

#### Architectures Supported

CAPTURE_SPARTAN3	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

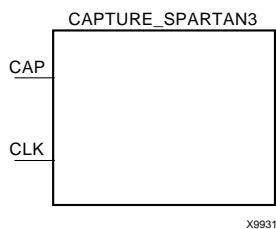

CAPTURE\_SPARTAN3 provides user control over when to capture register (flip-flop and latch) information for readback. Spartan-3 devices provide the readback function through dedicated configuration port instructions.

The CAPTURE\_SPARTAN3 symbol is optional. Without it readback is still performed, but the asynchronous capture function it provides for register states is not available.

Spartan-3 allows for capturing register (flip-flop and latch) states only. Although LUT RAM, SRL, and block RAM states are read back, they cannot be captured. An asserted high CAP signal indicates that the registers in the device are to be captured at the next Low-to-High clock transition.

By default, data is captured after every trigger (transition on CLK while CAP is asserted). To limit the readback operation to a single data capture, add the ONESHOT attribute to CAPTURE\_SPARTAN3. See the *Constraints Guide* for information on the ONESHOT attribute.

#### Usage

This design element is instantiated rather than inferred.

#### VHDL Instantiation Template

```
-- Component Declaration for CAPTURE_SPARTAN3 should be
-- placed after architecture statement but before
-- begin keyword

component CAPTURE_SPARTAN3
  port (CAP : in STD_ULOGIC;
        CLK : in STD_ULOGIC);
end component;

-- Component Attribute specification for CAPTURE_SPARTAN3
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here
```

```
-- Component Instantiation for CAPTURE_SPARTAN3 should be  
-- placed in architecture after the begin keyword
```

```
CAPTURE_SPARTAN3_INSTANCE_NAME : CAPTURE_SPARTAN3  
    port map (CAP => user_CAP,  
             CLK => user_CLK);
```

## Verilog Instantiation Template

```
CAPTURE_SPARTAN3 instance_name (.CAP (user_CAP),  
                               .CLK (user_CLK));
```

## Commonly Used Constraints


ONESHOT

## CAPTURE\_VIRTEX

### Virtex Register State Capture for Bitstream Readback

#### Architectures Supported

CAPTURE_VIRTEX	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

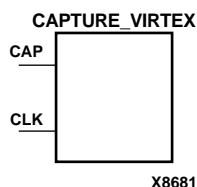

CAPTURE\_VIRTEX provides user control over when to capture register (flip-flop and latch) information for readback. Virtex and Virtex-E devices provide the readback function through dedicated configuration port instructions.

The CAPTURE\_VIRTEX symbol is optional. Without it readback is still performed, but the asynchronous capture function it provides for register states is not available.

**Note:** Virtex and Virtex-E allow for capturing register (flip-flop and latch) states only. Although LUT RAM, SRL, and block RAM states are read back, they cannot be captured.

An asserted High CAP signal indicates that the registers in the device are to be captured at the next Low-to-High clock transition. By default, data is captured after every trigger (transition on CLK while CAP is asserted). To limit the readback operation to a single data capture, add the ONESHOT attribute to CAPTURE\_VIRTEX. See the *Constraints Guide* for information on the ONESHOT attribute.

For details on the Virtex and Virtex-E readback functions, see the Virtex datasheets on the Xilinx web site, <http://support.xilinx.com>.

#### Usage

This design element is supported for schematics and instantiation but not for inference.

#### VHDL Instantiation Template

```
-- Component Declaration for CAPTURE_VIRTEX should be
-- placed after architecture statement but before
-- begin keyword

component CAPTURE_VIRTEX
  port (CAP : in STD_ULOGIC;
        CLK : in STD_ULOGIC);
end component;

-- Component Attribute specification for CAPTURE_VIRTEX
```

```
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for CAPTURE_VIRTEX should be
-- placed in architecture after the begin keyword

CAPTURE_VIRTEX_INSTANCE_NAME : CAPTURE_VIRTEX
    port map (CAP => user_CAP,
              CLK => user_CLK);
```

## Verilog Instantiation Template

```
CAPTURE_VIRTEX instance_name (.CAP (user_CAP),
                               .CLK (user_CLK));
```

## Commonly Used Constraints

ONESHOT




## CAPTURE\_VIRTEX2

### Virtex-II Register State Capture for Bitstream Readback

#### Architectures Supported

CAPTURE_VIRTEX2	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

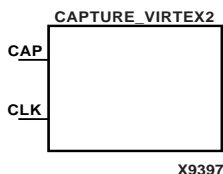

CAPTURE\_VIRTEX2 provides user control over when to capture register (flip-flop and latch) information for readback. Virtex-II, Virtex-II Pro, and Virtex-II Pro X devices provide the readback function through dedicated configuration port instructions.

The CAPTURE\_VIRTEX2 symbol is optional. Without it readback is still performed, but the asynchronous capture function it provides for register states is not available.

Virtex-II, Virtex-II Pro, and Virtex-II Pro X allow for capturing register (flip-flop and latch) states only. Although LUT RAM, SRL, and block RAM states are read back, they cannot be captured.

An asserted high CAP signal indicates that the registers in the device are to be captured at the next Low-to-High clock transition. By default, data is captured after every trigger (transition on CLK while CAP is asserted). To limit the readback operation to a single data capture, add the ONESHOT attribute to CAPTURE\_VIRTEX2. See the *Constraints Guide* for information on the ONESHOT attribute.

The GRDBK (internal capture signal) is asserted at the rising edge of the Capture clock when the Capture signal is high. The capture memory cell is continuously updated if the value of the FF is continuously changing. The final value of the capture memory cell occurs at the rising edge of the Capture clock when the Capture signal is low.

For details on the Virtex-II, Virtex-II Pro, and Virtex-II Pro X readback functions, see *The Programmable Logic Data Book*.

#### Usage

This design element is supported for schematics and instantiation but not for inference.

#### VHDL Instantiation Template

```
-- Component Declaration for CAPTURE_VIRTEX2 should be
-- placed after architecture statement but before
```

```
-- begin keyword

component CAPTURE_VIRTEX2
  port (CAP : in STD_ULOGIC;
        CLK : in STD_ULOGIC);
end component;

-- Component Attribute specification for CAPTURE_VIRTEX2
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for CAPTURE_VIRTEX2 should be
-- placed in architecture after the begin keyword

CAPTURE_VIRTEX2_INSTANCE_NAME : CAPTURE_VIRTEX2
  port map (CAP => user_CAP,
           CLK => user_CLK);
```

## Verilog Instantiation Template

```
CAPTURE_VIRTEX2 instance_name (.CAP (user_CAP),
                               .CLK (user_CLK));
```

## Commonly Used Constraints


None

## CB2CE, CB4CE, CB8CE, CB16CE


### 2-, 4-, 8-, 16-Bit Cascadable Binary Counters with Clock Enable and Asynchronous Clear

#### Architectures Supported


CB2CE, CB4CE, CB8CE, CB16CE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

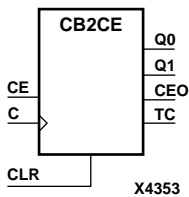

CB2CE, CB4CE, CB8CE, and CB16CE are, respectively, 2-, 4-, 8-, and 16-bit (stage), asynchronous, clearable, cascadable binary counters. The asynchronous clear (CLR) is the highest priority input. When CLR is High, all other inputs are ignored; the Q outputs, terminal count (TC), and clock enable out (CEO) go to logic level zero, independent of clock transitions. The Q outputs increment when the clock enable input (CE) is High during the Low-to-High clock (C) transition. The counter ignores clock transitions when CE is Low. The TC output is High when all Q outputs are High.

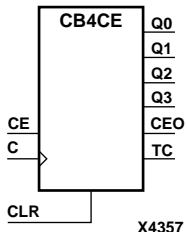

Larger counters are created by connecting the CEO output of the first stage to the CE input of the next stage and connecting the C and CLR inputs in parallel. CEO is active (High) when TC and CE are High. The maximum length of the counter is determined by the accumulated CE-to-TC propagation delays versus the clock period. The clock period must be greater than  $n(t_{CE-TC})$ , where  $n$  is the number of stages and the time  $t_{CE-TC}$  is the CE-to-TC propagation delay of each stage. When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not.

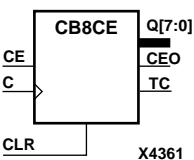


The counter is asynchronously cleared, outputs Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

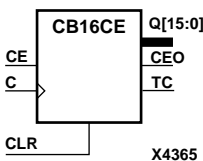


Inputs			Outputs		
CLR	CE	C	Qz-Q0	TC	CEO
1	X	X	0	0	0
0	0	X	No Chg	No Chg	0

Inputs			Outputs		
CLR	CE	C	Qz-Q0	TC	CEO
0	1	↑	Inc	TC	CEO

z = 1 for CB2CE; z = 3 for CB4CE; z = 7 for CB8CE; z = 15 for CB16CE


$TC = Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0$

$CEO = TC \cdot CE$

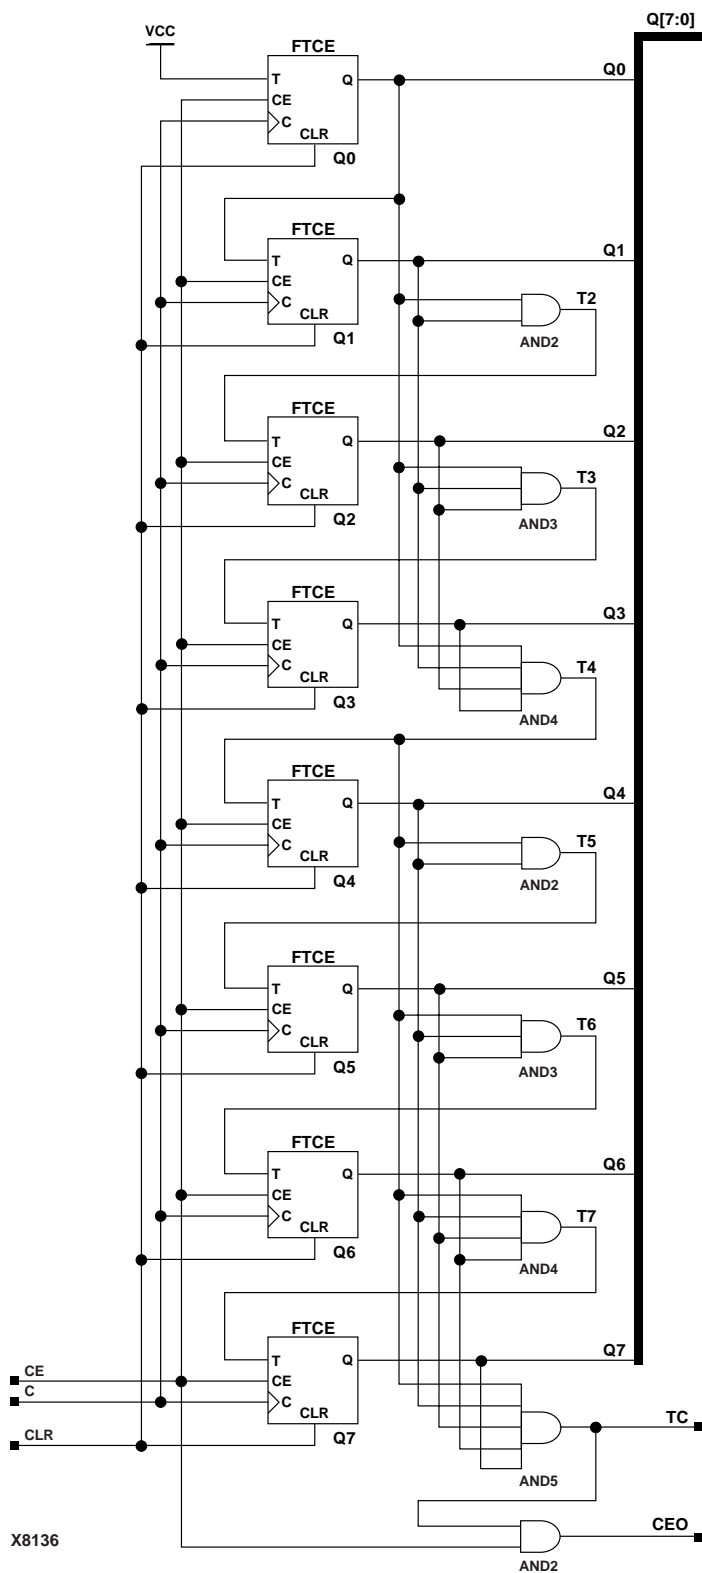


CB8CE Implementation Spartan-II, Spartan-II-E, Spartan-3, Virtex, Virtex-E,

Virtex-II, Virtex-II Pro, Virtex-II Pro X

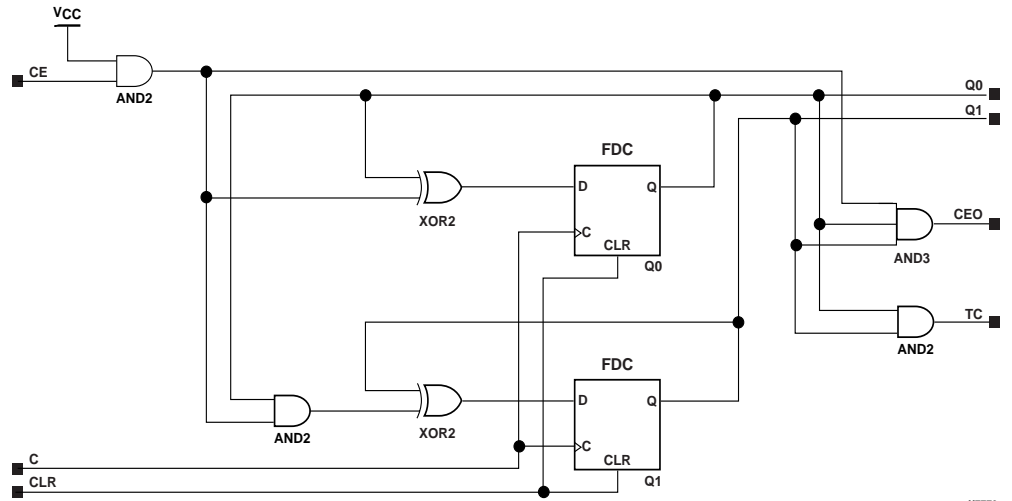

X7779

CB2CE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

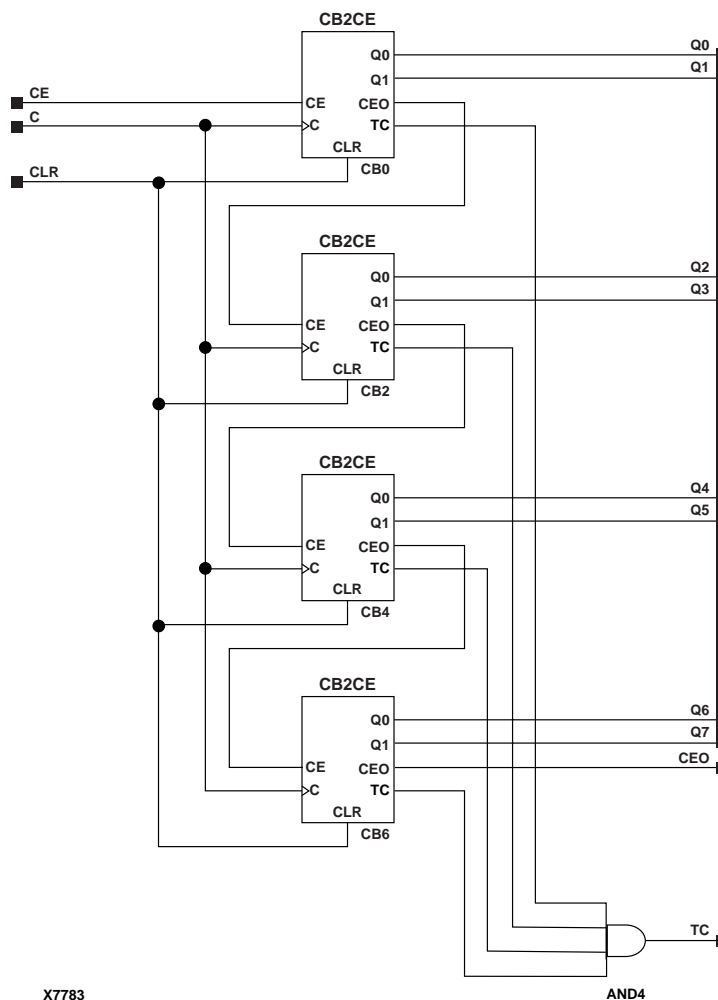

## CB8CE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

### Usage

For HDL, these design elements are inferred rather than instantiated.

### VHDL Inference Code

```
architecture Behavioral of cb2ce is

    constant TERMINAL_COUNT : std_logic_vector(WIDTH-1 downto 0) :=
        (others => '1');

begin

    process(C, CLR)
    begin
        if (CLR='1') then
            Q <= (others => '0');
        elsif (C'event and C='1') then
```

```
        if (CE='1') then
            Q <= Q+1;
        end if;
    end if;
end process;

process (Q)
begin
    if (Q = TERMINAL_COUNT) then
        TC <='1';
    else
        TC <='0';
    end if;
end process;

CEO<=TC and CE;

end Behavioral;
```

### Verilog Inference Code

```
always @ (posedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else if (CE)
        Q <= Q + 1;
    end
end

always @ (Q)
begin
    if (Q == TERMINAL_COUNT)
        TC <= 1;
    else
        TC <= 0;
    end
end

always @ (CE or TC)
begin
    CEO <= TC && CE;
end
end
```







## CB2CLE, CB4CLE, CB8CLE, CB16CLE

### 2-, 4-, 8-, 16-Bit Loadable Cascadable Binary Counters with Clock Enable and Asynchronous Clear

#### Architectures Supported

CBD2CLE, CBD4CLE, CBD8CLE, CBD16CLE	
Spartan-II, Spartan-III	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

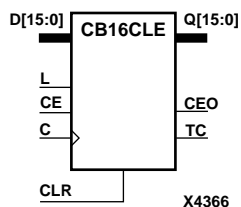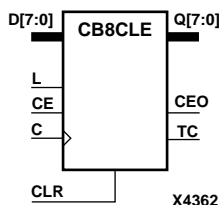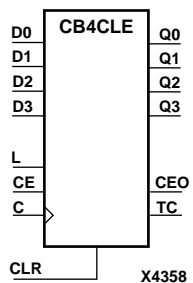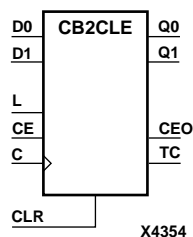

CB2CLE, CB4CLE, CB8CLE, and CB16CLE are, respectively, 2-, 4-, 8-, and 16-bit (stage) synchronously loadable, asynchronously clearable, cascadable binary counters. The asynchronous clear (CLR) is the highest priority input. When CLR is High, all other inputs are ignored; the Q outputs, terminal count (TC), and clock enable out (CEO) go to logic level zero, independent of clock transitions. The data on the D inputs is loaded into the counter when the load enable input (L) is High during the Low-to-High clock transition, independent of the state of clock enable (CE). The Q outputs increment when CE is High during the Low-to-High clock transition. The counter ignores clock transitions when CE is Low. The TC output is High when all Q outputs are High.

Larger counters are created by connecting the CEO output of the first stage to the CE input of the next stage and connecting the C, L, and CLR inputs in parallel. CEO is active (High) when TC and CE are High. The maximum length of the counter is determined by the accumulated CE-to-TC propagation delays versus the clock period. The clock period must be greater than  $n(t_{CE-TC})$ , where  $n$  is the number of stages and the time  $t_{CE-TC}$  is the CE-to-TC propagation delay of each stage. When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not.

The counter is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-III, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs					Outputs		
CLR	L	CE	C	Dz – D0	Qz – Q0	TC	CEO
1	X	X	X	X	0	0	0
0	1	X	↑	Dn	Dn	TC	CEO
0	0	0	X	X	No Chg	No Chg	0
0	0	1	↑	X	Inc	TC	CEO


z= 1 for CB2CLE; z = 3 for CB4CLE; z = 7 for CB8CLE; z = 15 for CB16CLE

$$TC = Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0$$


$$CEO = TC \cdot CE$$

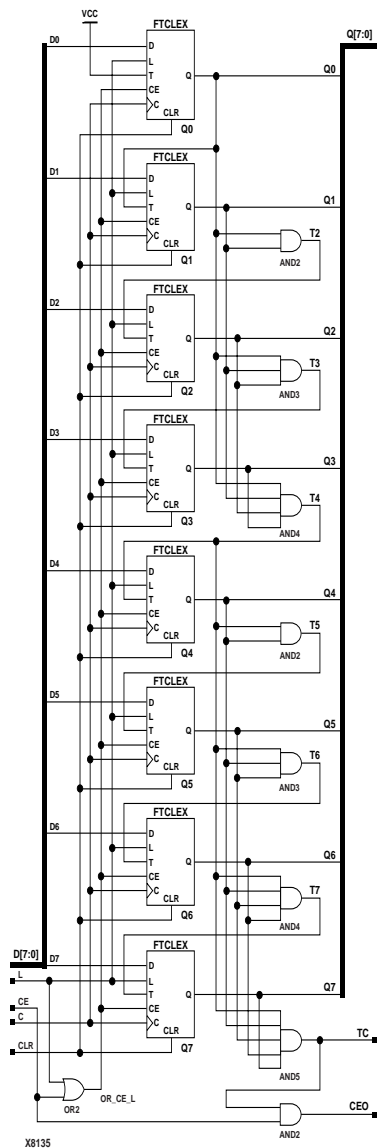

**CB8CLE Implementation Spartan-II, Spartan-IIe, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

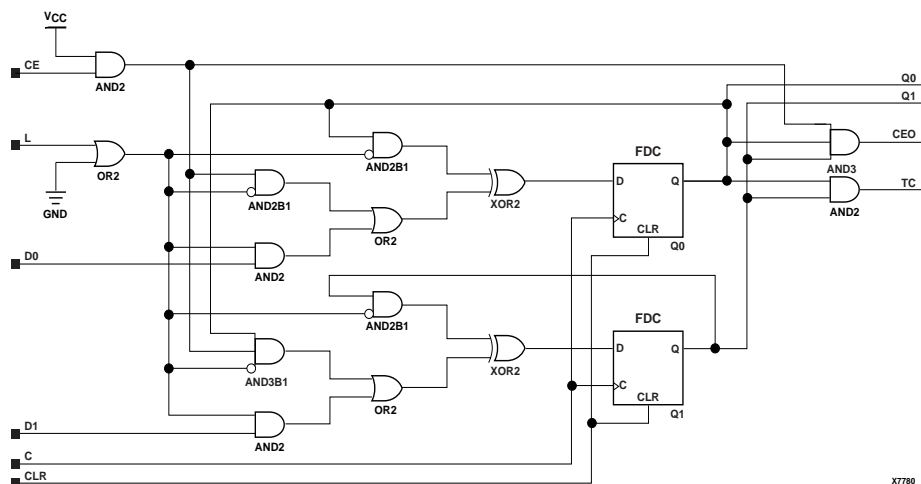

**CB2CLE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

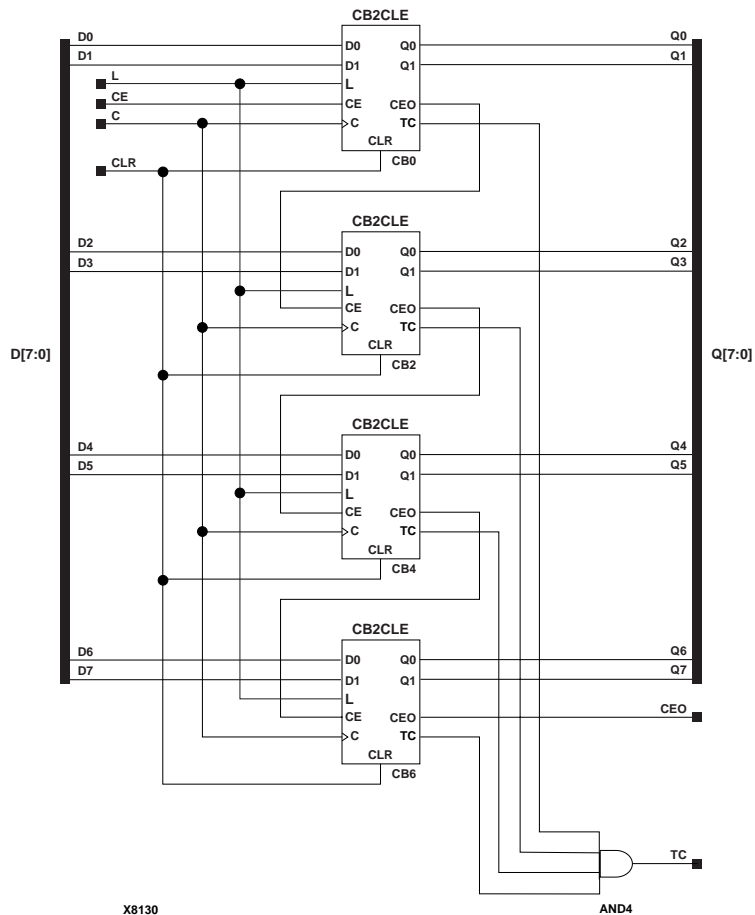

**CB8CLE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

## Usage

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

architecture Behavioral of cb2cle is

```

constant TERMINAL_COUNT : std_logic_vector(WIDTH-1 downto 0) :=
    (others => '1');

begin

process(C, CLR)
begin
    if (CLR='1') then
        Q <= (others => '0');
    elsif (C'event and C='1') then
        if (L = '1') then
            Q <= D;
        elsif (CE='1') then
            Q <= COUNT+1;
        end if;
    end if;
end process;

process(Q)
begin
    if (Q = TERMINAL_COUNT) then
        TC <= '1';
    else
        TC <= '0';
    end if;
end process;

TC <= TC_INT;
CEO <= TC and CE;

end Behavioral;

```

## Verilog Inference Code

```

always @ (posedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else if (L)
        Q <= D;
    else if (CE)
        Q <= Q + 1;
end

always @ (Q)
begin
    if (Q == TERMINAL_COUNT)
        TC <= 1;
    else
        TC <= 0;
end

```

```
end

always @ (TC or CE)
begin
    CEO <= TC & CE;
end
```




## CB2CLED, CB4CLED, CB8CLED, CB16CLED


### 2-, 4-, 8-, 16-Bit Loadable Cascadable Bidirectional Binary Counters with Clock Enable and Asynchronous Clear

#### Architectures Supported


CBD2CLED, CBD4CLED, CBD8CLED, CBD16CLED	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

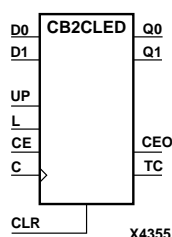

CB2CLED, CB4CLED, CB8CLED, and CB16CLED are, respectively, 2-, 4-, 8- and 16-bit (stage), synchronously loadable, asynchronously clearable, cascadable, bidirectional binary counters. The asynchronous clear (CLR) is the highest priority input. When CLR is High, all other inputs are ignored; the Q outputs, terminal count (TC), and clock enable out (CEO) go to logic level zero, independent of clock transitions. The data on the D inputs is loaded into the counter when the load enable input (L) is High during the Low-to-High clock (C) transition, independent of the state of clock enable (CE). The Q outputs decrement when CE is High and UP is Low during the Low-to-High clock transition. The Q outputs increment when CE and UP are High. The counter ignores clock transitions when CE is Low.

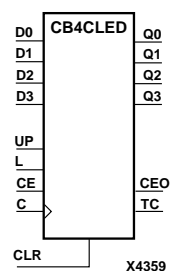

For counting up, the TC output is High when all Q outputs and UP are High. For counting down, the TC output is High when all Q outputs and UP are Low. To cascade counters, the CEO output of each counter is connected to the CE pin of the next stage. The clock, UP, L, and CLR inputs are connected in parallel. CEO is active (High) when TC and CE are High. The maximum length of the counter is determined by the accumulated CE-to-TC propagation delays versus the clock period. The clock period must be greater than  $n(t_{CE-TC})$ , where  $n$  is the number of stages and the time  $t_{CE-TC}$  is the CE-to-TC propagation delay of each stage.

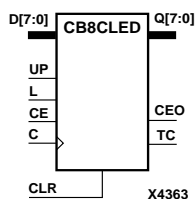


When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not. For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, see “CB2X1, CB4X1, CB8X1, CB16X1” for high-performance cascadable, bidirectional counters.

The counter is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

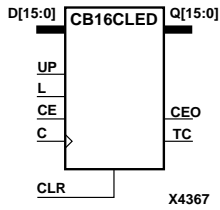

GSR defaults to active-High but can be inverted with an inverter in front of the GSR input of STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2.


Inputs						Outputs		
CLR	L	CE	C	UP	Dz – D0	Qz – Q0	TC	CEO
1	X	X	X	X	X	0	↑	↑*CE
0	1	X	↑	X	Dn	Dn	TC	CEO
0	0	0	X	X	X	No Chg	No Chg	0
0	0	1	↑	1	X	Inc	TC	CEO
0	0	1	↑	0	X	Dec	TC	CEO

z = 1 for CB2CLED; z = 3 for CB4CLED; z = 7 for CB8CLED; z = 15 for CB16CLED


$$TC = (Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0 \cdot UP) + (Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0 \cdot \overline{UP})$$

$$CEO = TC \cdot CE$$



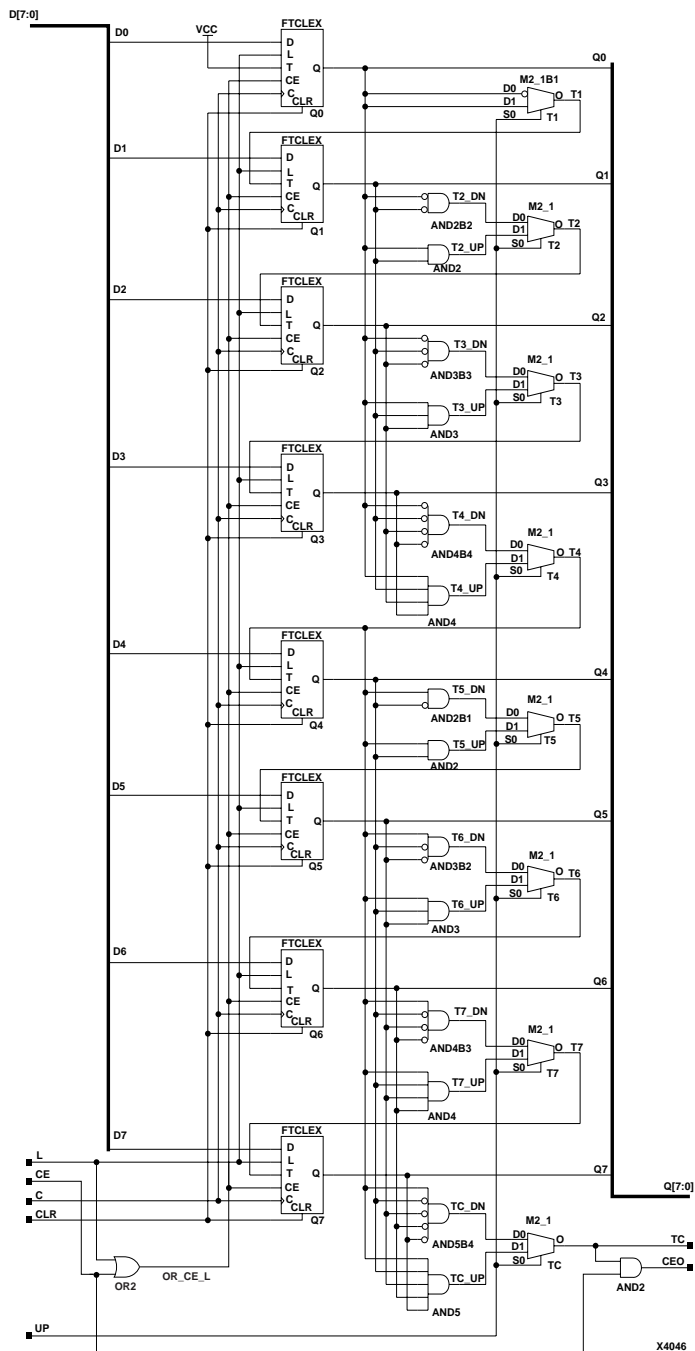

CB8CLED Implementation Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X

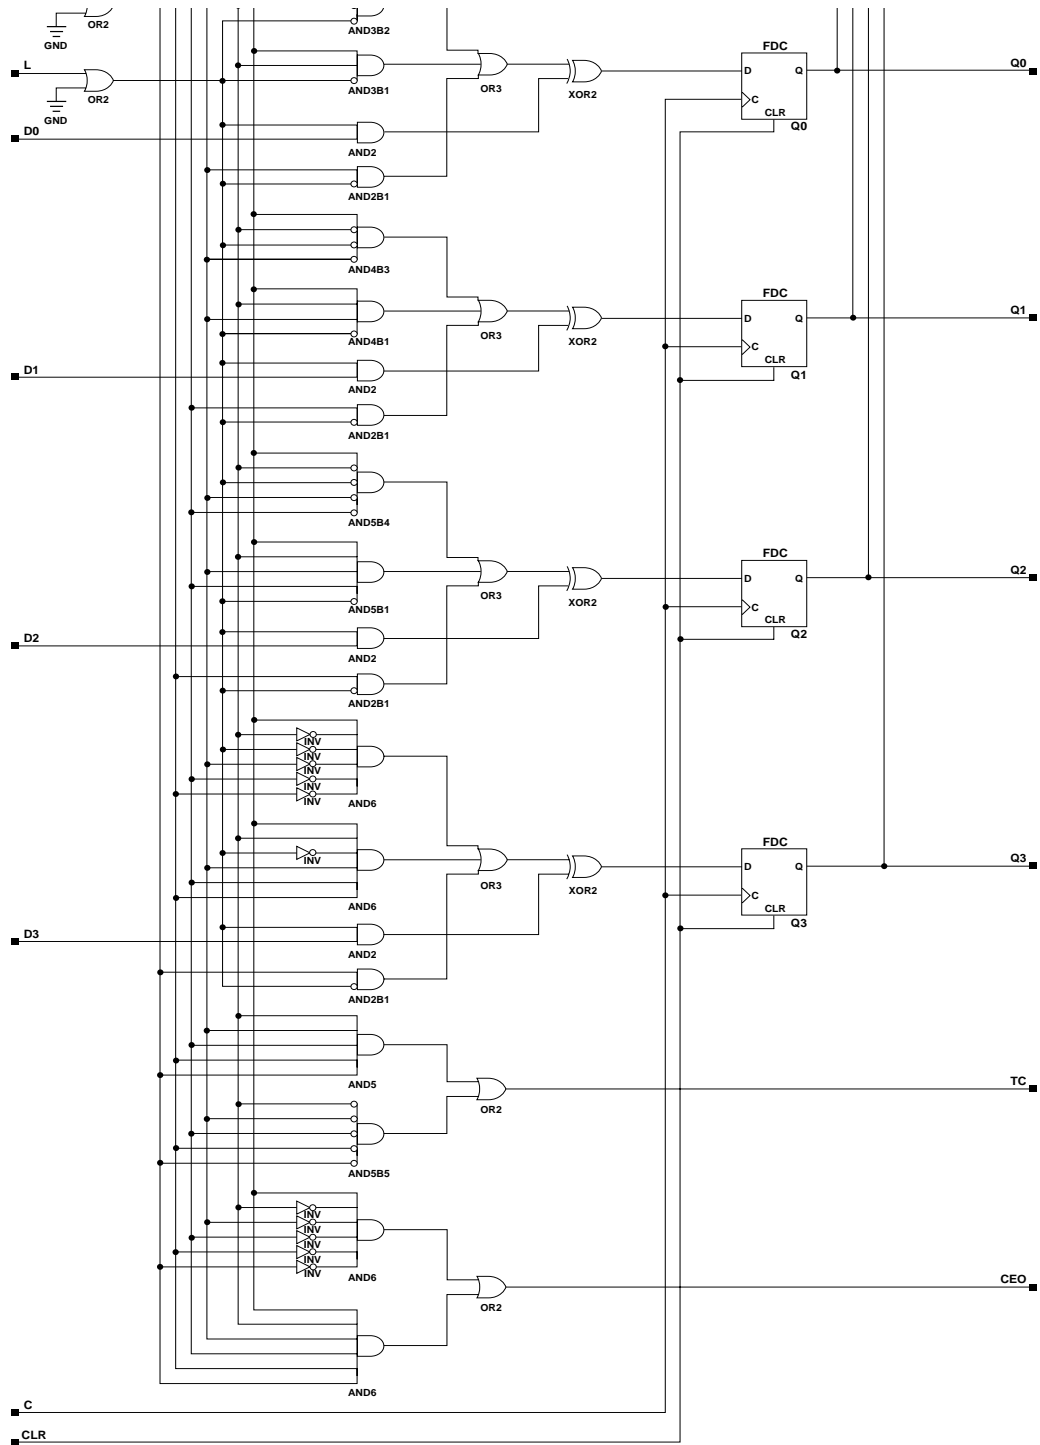

x7625

### CB4CLED Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

#### Usage

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

```

architecture Behavioral of cb2cled is

    constant TERMINAL_COUNT_UP : std_logic_vector(WIDTH-1 downto 0) :=
        (others => '1');
    constant TERMINAL_COUNT_DOWN : std_logic_vector(WIDTH-1 downto 0) :=
        (others => '0');

begin

process(C, CLR)
begin
    if (CLR='1') then
        Q <= (others => '0');
    elsif C'event and C='1' then
        if (L = '1') then
            Q <= D;
        elsif (CE='1') then
            if (UP='1') then
                Q <= Q+1;
            elsif (UP='0') then
                Q <= Q-1;
            end if;
        end if;
    end if;
end process;

process(Q, UP)
begin
    if (((Q = TERMINAL_COUNT_UP) and (UP = '1')) or
        ((Q = TERMINAL_COUNT_DOWN) and (UP = '0'))) then
        TC <='1';
    else
        TC <='0';
    end if;
end process;

CEO<=TC and CE;

end Behavioral;

```

## Verilog Inference Code

```

always @ (posedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else if (L)
        Q <= D;
    else if (CE)
        begin
            if (UP)
                Q <= Q + 1;
            else if (!UP)
                Q <= Q - 1;
        end
    end
end

```

```
always @ (Q or UP)
begin
  if ((Q == TERMINAL_COUNT_UP && UP) || (Q == TERMINAL_COUNT_DOWN &&
    !UP))
    TC <= 1;
  else
    TC <= 0;
end

always @ (TC or CE)
begin
  CEO <= TC & CE;
end
```









## CB2RE, CB4RE, CB8RE, CB16RE

### 2-, 4-, 8-, 16-Bit Cascadable Binary Counters with Clock Enable and Synchronous Reset

#### Architectures Supported

CB2RE, CB4RE, CB8RE, CB16RE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

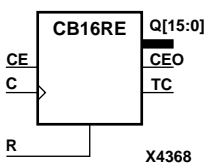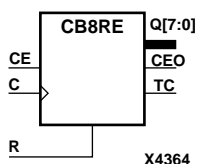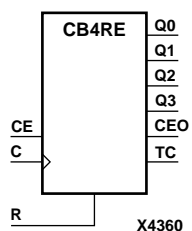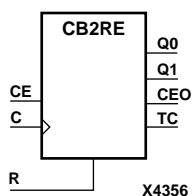

CB2RE, CB4RE, CB8RE, and CB16RE are, respectively, 2-, 4-, 8-, and 16-bit (stage), synchronous, resettable, cascadable binary counters. The synchronous reset (R) is the highest priority input. When R is High, all other inputs are ignored; the Q outputs, terminal count (TC), and clock enable out (CEO) go to logic level zero during the Low-to-High clock transition. The Q outputs increment when the clock enable input (CE) is High during the Low-to-High clock (C) transition. The counter ignores clock transitions when CE is Low. The TC output is High when both Q outputs are High.

Larger counters are created by connecting the CEO output of the first stage to the CE input of the next stage and connecting the C and R inputs in parallel. CEO is active (High) when TC and CE are High. The maximum length of the counter is determined by the accumulated CE-to-TC propagation delays versus the clock period. The clock period must be greater than  $n(t_{CE-TC})$ , where  $n$  is the number of stages and the time  $t_{CE-TC}$  is the CE-to-TC propagation delay of each stage. When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not.

The counter is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.


Inputs			Outputs		
R	CE	C	Qz – Q0	TC	CEO
1	X	↑	0	0	0
0	0	X	No Chg	No Chg	0

Inputs			Outputs		
R	CE	C	Qz – Q0	TC	CEO
0	1	↑	Inc	TC	CEO

z = 1 for CB2RE; z = 3 for CB4RE; z = 7 for CB8RE; z = 15 for CB16RE


$$TC = Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0$$

$$CEO = TC \cdot CE$$

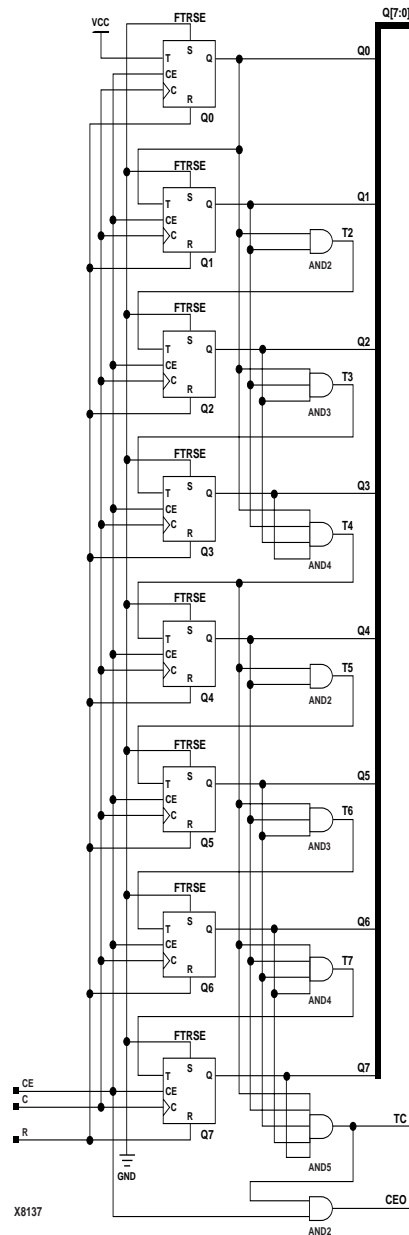


**CB8RE Implementation Spartan-II, Spartan-IIe, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**



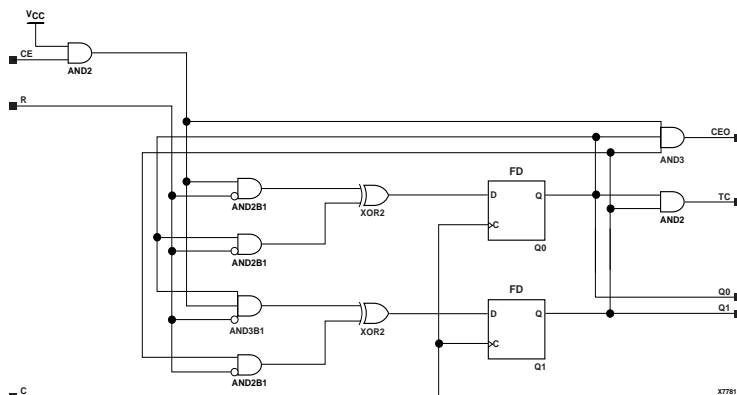

**CB2RE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

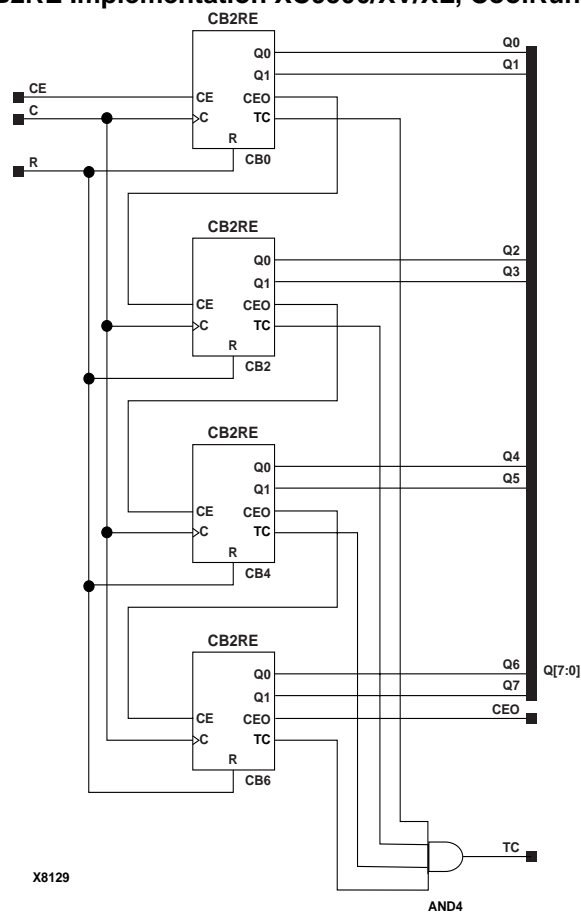

**CB8RE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

**Usage**

For HDL, these design elements are inferred rather than instantiated.

**VHDL Inference Code**

architecture Behavioral of cb2re is

```
constant TERMINAL_COUNT : std_logic_vector(WIDTH-1 downto 0) :=
    (others => '1');

begin

process(C)
begin
    if (C'event and C='1') then
        if (R='1') then
            Q <= (others => '0');
        elsif (CE='1') then
            Q <= Q+1;
        end if;
    end if;
end process;

process(Q)
begin
    if (Q = TERMINAL_COUNT) then
        TC <= '1';
    else
        TC <= '0';
    end if;
end process;

CEO<=TC and CE;

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C)
begin
    if (R)
        Q <= 0;
    else if (CE)
        Q <= Q + 1;
end

always @ (Q)
begin
    if (Q == TERMINAL_COUNT)
        TC <= 1;
    else
        TC <= 0;
end

always @ (TC or CE)
begin
    CEO <= TC & CE;
end
```






## CB2RLE, CB4RLE, CB8RLE, CB16RLE


### 2-, 4-, 8-, 16-Bit Loadable Cascadable Binary Counters with Clock Enable and Synchronous Reset

#### Architectures Supported


CB2RLE, CB4RLE, CB8RLE, CB16RLE	
Spartan-II, Spartan-III	N/A
Spartan-3	N/A
Virtex, Virtex-E	N/A
Virtex-II, Virtex-II Pro, Virtex-II Pro X	N/A
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

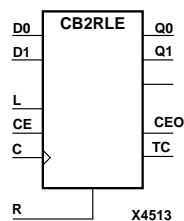


CB2RLE, CB4RLE, CB8RLE, and CB16RLE are, respectively, 2-, 4-, 8-, and 16-bit (stage), synchronous, loadable, resettable, cascadable binary counters. The synchronous reset (R) is the highest priority input. The synchronous R, when High, overrides all other inputs and resets the Q outputs, terminal count (TC), and clock enable out (CEO) outputs to Low on the Low-to-High clock (C) transition.

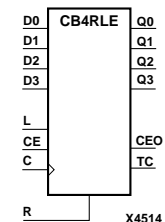

The data on the D inputs is loaded into the counter when the load enable input (L) is High during the Low-to-High clock (C) transition, independent of the state of CE. The Q outputs increment when CE is High during the Low-to-High clock transition. The counter ignores clock transitions when CE is Low. The TC output is High when all Q outputs are High. The CEO output is High when all Q outputs and CE are High to allow direct cascading of counters.

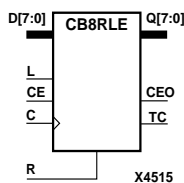

Larger counters are created by connecting the CEO output of the first stage to the CE input of the next stage and by connecting the C, L, and R inputs in parallel. The maximum length of the counter is determined by the accumulated CE-to-CEO propagation delays versus the clock period. When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not.

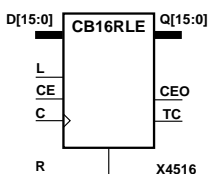

The counter is asynchronously cleared, output Low, when power is applied. For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.


Inputs					Outputs		
R	L	CE	C	Dz – D0	Qz – Q0	TC	CEO
1	X	X	↑	X	0	0	0
0	1	X	↑	Dn	Dn	TC	CEO
0	0	0	X	X	No Chg	No Chg	0

Inputs					Outputs		
R	L	CE	C	Dz – D0	Qz – Q0	TC	CEO
0	0	1	↑	X	Inc	TC	CEO


z = 1 for CB2RLE; z = 3 for CB4RLE; z = 7 for CB8RLE; z = 15 for CB16RLE

$$TC = Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0$$

$$CEO = TC \cdot CE$$

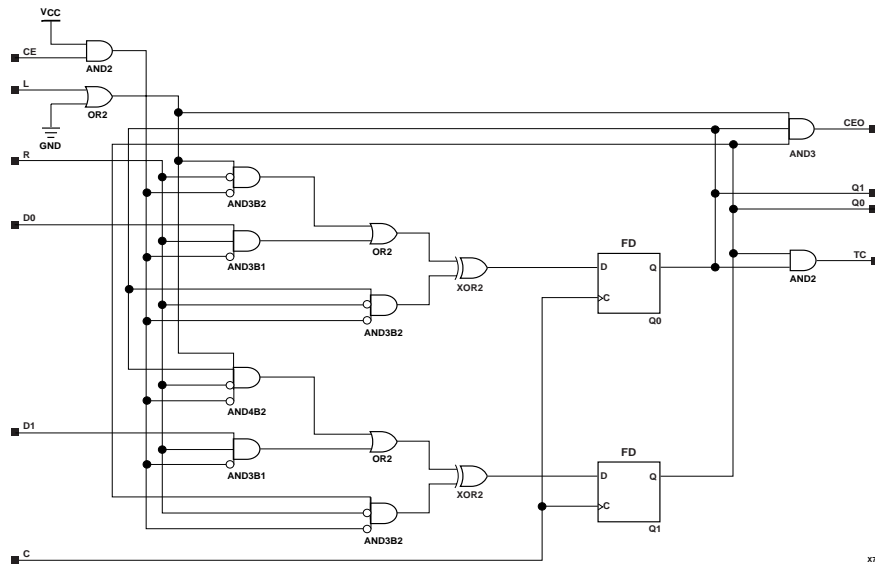

CB2RLE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

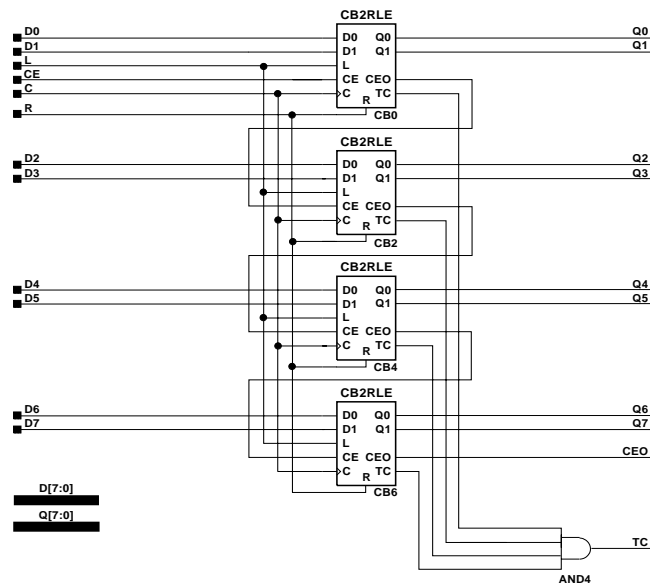

X7621

CB8RLE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

## Usage

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

architecture Behavioral of cb2rle is

```

constant TERMINAL_COUNT : std_logic_vector(WIDTH-1 downto 0) :=
    (others => '1');
begin
process(C)
begin
    if (C'event and C='1') then
        if (R='1') then
            Q <= (others => '0');
        elsif (L='1') then
            Q <= D;
        elsif (CE='1') then
            Q <= Q+1;
        end if;
    end if;
end process;

process(Q)
begin
    if (Q = TERMINAL_COUNT) then
        TC <='1';
    else
        TC <='0';
    end if;
end process;

CEO<=TC and CE;
end Behavioral;

```

## Verilog Inference Code

```

always @ (posedge C)
begin
    if (R)
        Q <= 0;
    else if (L)
        Q <= D;
    else if (CE)
        Q <= Q + 1;
    end
always @ (Q)
begin
    if (Q == TERMINAL_COUNT)
        TC <= 1;
    else
        TC <= 0;
    end
always @ (TC or CE)
begin
    CEO <= TC & CE;
end

```






## CB2X1, CB4X1, CB8X1, CB16X1

### 2-, 4-, 8-, 16-Bit Loadable Cascadable Bidirectional Binary Counters with Clock Enable and Asynchronous Clear


#### Architectures Supported

CB2X1, CB4X1, CB8X1, CB16X1	
Spartan-II, Spartan-III	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

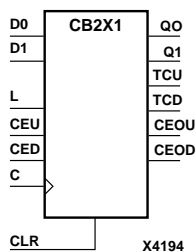


CB2X1, CB4X1, CB8X1, and CB16X1 are, respectively, 2-, 4-, 8-, and 16-bit (stage), synchronously loadable, asynchronously clearable, bidirectional binary counters. These counters have separate count-enable inputs and synchronous terminal-count outputs for up and down directions to support high-speed cascading in XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II.

The asynchronous clear (CLR) is the highest priority input. When CLR is High, all other inputs are ignored; data outputs (Q) go to logic level zero, terminal count outputs TCU and TCD go to zero and one, respectively, clock enable outputs CEOU and CEOD go to Low and High, respectively, independent of clock transitions. The data on the D inputs loads into the counter on the Low-to-High clock (C) transition when the load enable input (L) is High, independent of the CE inputs.

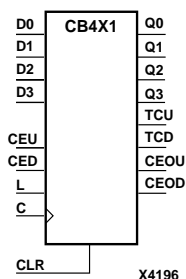


The Q outputs increment when CEU is High, provided CLR and L are Low, during the Low-to-High clock transition. The Q outputs decrement when CED is High, provided CLR and L are Low. The counter ignores clock transitions when CEU and CED are Low. Both CEU and CED should not be High during the same clock transition; the CEOU and CEOD outputs might not function properly for cascading when CEU and CED are both High.

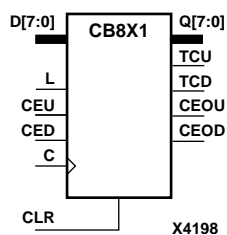

For counting up, the CEOU output is High when all Q outputs and CEU are High. For counting down, the CEOD output is High when all Q outputs are Low and CED is High. To cascade counters, the CEOU and CEOD outputs of each counter are connected directly to the CEU and CED inputs, respectively, of the next stage. The clock, L, and CLR inputs are connected in parallel.

The maximum clocking frequency of these counter components is unaffected by the number of cascaded stages for all counting and loading functions. The TCU terminal count output is High when all Q outputs are High, regardless of CEU. The TCD output is High when all Q outputs are Low, regardless of CED.

When cascading counters, the final terminal count signals can be produced by AND wiring all the TCU outputs (for the up direction) and all the TCD outputs (for the down direction). The TCU, CEOU, and CEOD outputs are produced by optimizable

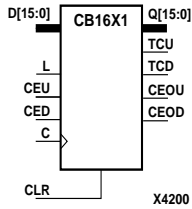

AND gates within the component. This results in zero propagation from the CEU and CED inputs and from the Q outputs, provided all connections from each such output remain on-chip. Otherwise, a macrocell buffer delay is introduced.

The counter is initialized to zero (TCU Low and TCD High) when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs						Outputs				
CLR	L	CEU	CED	C	Dz-D0	Qz-Q0	TCU	TCD	CEOU	CEOD
1	X	X	X	X	X	0	0	1	0	CEOD
0	1	X	X	↑	Dn	Dn	TCU	TCD	CEOU	CEOD
0	0	0	0	X	X	No Chg	No Chg	No Chg	0	0
0	0	1	0	↑	X	Inc	TCU	TCD	CEOU	0
0	0	0	1	↑	X	Dec	TCU	TCD	0	CEOD
0	0	1	1	↑	X	Inc	TCU	TCD	Invalid	Invalid


z = 1 for CB2X1; z = 3 for CB4X1; z = 7 for CB8X1; z = 15 for CB16X1

$$TCU = Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0$$

$$TCD = Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0$$

$$CEOU = TCU \cdot CEU$$

$$CEOD = TCD \cdot CED$$

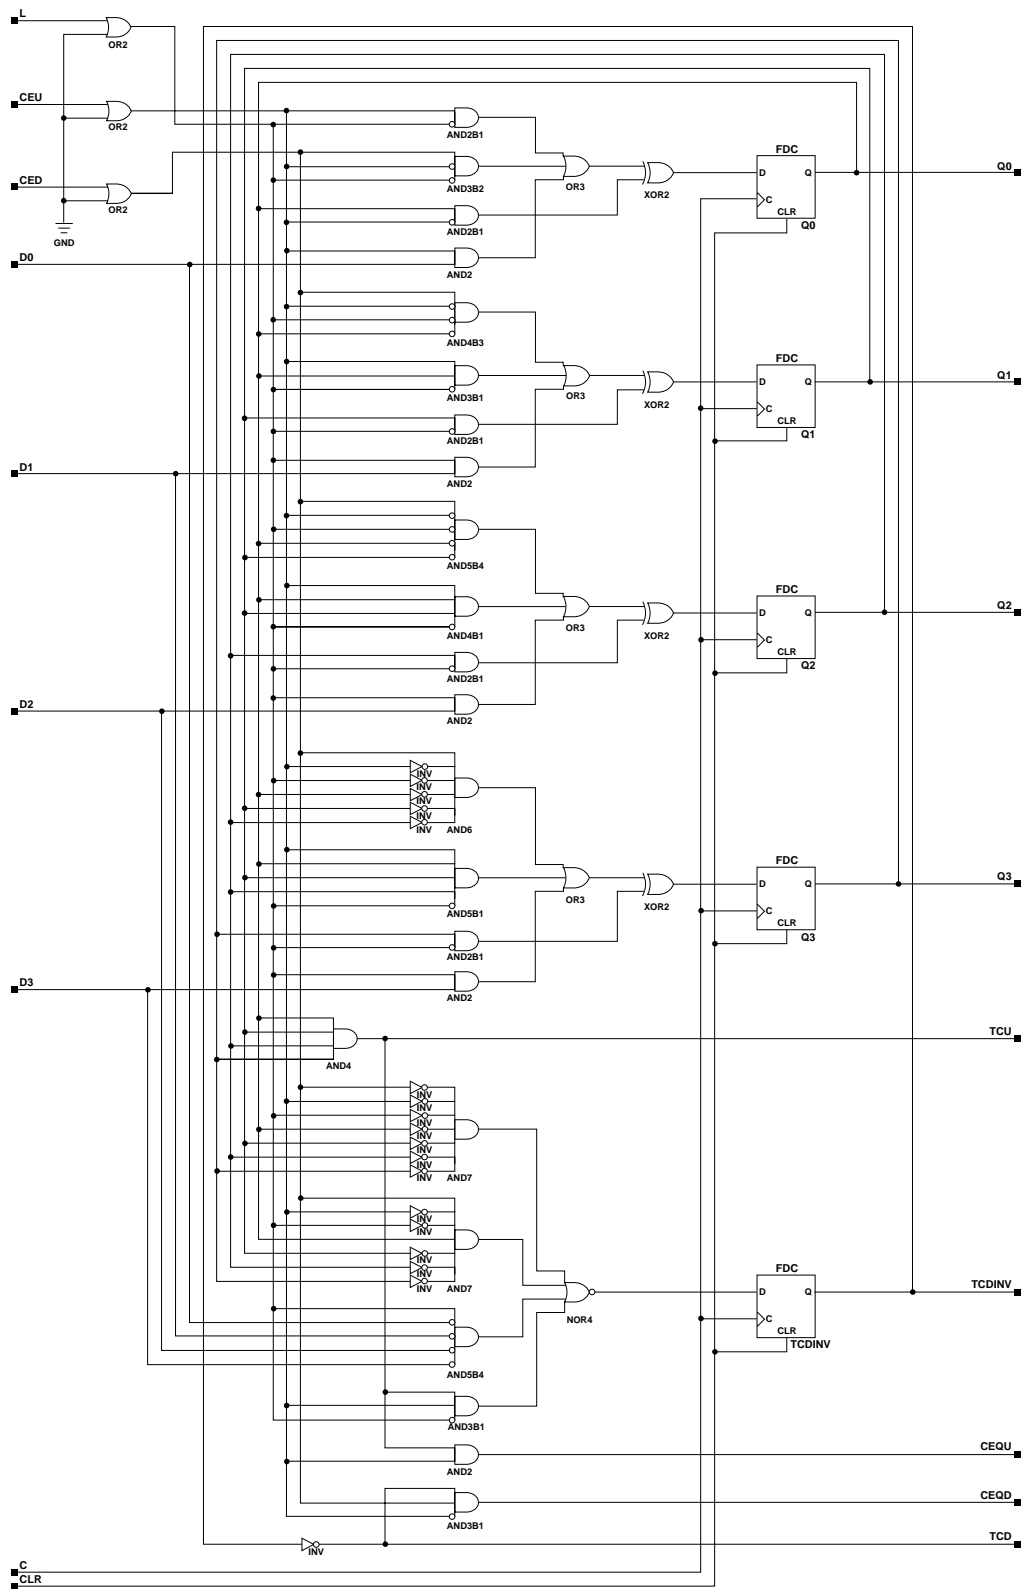

X7624

## CB4X1 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

### Usage

For HDL, these design elements are inferred rather than instantiated.

### VHDL Inference Code

architecture Behavioral of cb2x1 is

```

    signal CEU_INT : std_logic;
    signal CED_INT : std_logic;

    constant TERMINAL_COUNT_UP : std_logic_vector(WIDTH-1 downto 0) :=
        (others => '1');
    constant TERMINAL_COUNT_DOWN : std_logic_vector(WIDTH-1 downto 0)
        := (others => '0');

begin

process(C, CLR)
begin
    if (CLR='1') then
        Q <= (others => '0');
        CEU_INT <= '0';
        CED_INT <= '1';
    elsif ((C'event) and (C='1')) then
        if (L = '1') then
            Q <= D;
            CEU_INT <= CEU;
            CED_INT <= CED;
        elsif (CEU='1') then
            Q <= Q+1;
            CEU_INT <= '1';
            CED_INT <= '0';
        elsif (CED='1') then
            Q <= Q-1;
            CEU_INT <= '0';
            CED_INT <= '1';
        end if;
    end if;
end process;

process (Q, CEU_INT, CED_INT)
begin
    if ((Q = TERMINAL_COUNT_UP) and (CEU_INT = '1')) then
        TCU <= '1';
        TCD <= '0';
    elsif ((Q = TERMINAL_COUNT_DOWN) and (CED_INT = '1')) then
        TCU <= '0';
        TCD <= '1';
    else
        TCU <= '0';
        TCD <= '0';
    end if;
end process;

CEOU <= TCU and CEU;

```

```
CEOD <= TCD and CED;

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or posedge CLR)
begin
  if (CLR)
  begin
    Q <= 0;
    CEU_INT <= 1'b0;
    CED_INT <= 1'b1;
  end
  else if (L)
  begin
    Q <= D;
    CEU_INT <= CEU;
    CED_INT <= CED;
  end
  else if (CEU)
  begin
    Q <= Q + 1;
    CEU_INT <= 1;
    CED_INT <= 0;
  end
  else if (CED)
  begin
    Q <= Q - 1;
    CEU_INT <= 1'b0;
    CED_INT <= 1'b1;
  end
end

always @ (Q or CEU_INT or CED_INT)
begin
  if (Q == TERMINAL_COUNT_UP && CEU_INT)
  begin
    TCU_INT <= 1;
    TCD_INT <= 0;
  end
  else if ((Q == TERMINAL_COUNT_DOWN) && CED_INT)
  begin
    TCU_INT <= 0;
    TCD_INT <= 1;
  end
  else
  begin
    TCU_INT <= 0;
    TCD_INT <= 0;
  end
end

always @ (TCU_INT or CEU or TCD_INT or CED)
begin
  CEOU <= TCU_INT && CEU;
  CEOD <= TCD_INT && CED;
  TCU <= TCU_INT;
```


```
TCD <= TCD_INT;  
end
```

## CB2X2, CB4X2, CB8X2, CB16X2

### 2-, 4-, 8-, and 16-Bit Loadable Cascadable Bidirectional Binary Counters with Clock Enable and Synchronous Reset


#### Architectures Supported

CB2X2, CB4X2, CB8X2, CB16X2	
Spartan-II, Spartan-III	N/A
Spartan-3	N/A
Virtex, Virtex-E	N/A
Virtex-II, Virtex-II Pro, Virtex-II Pro X	N/A
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

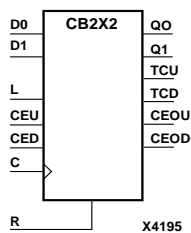


CB2X2, CB4X2, CB8X2, and CB16X2 are, respectively, 2-, 4-, 8-, and 16-bit (stage), synchronous, loadable, resettable, bidirectional binary counters. These counters have separate count-enable inputs and synchronous terminal-count outputs for up and down directions to support high-speed cascading in CPLD architectures.

The synchronous reset (R) is the highest priority input. When R is High, all other inputs are ignored; the data outputs (Q) go to logic level zero, terminal count outputs TCU and TCD go to zero and one, respectively, and clock enable outputs CEOU and CEOD go to Low and High, respectively, on the Low-to-High clock (C) transition. The data on the D inputs loads into the counter on the Low-to-High clock (C) transition when the load enable input (L) is High, independent of the CE inputs.

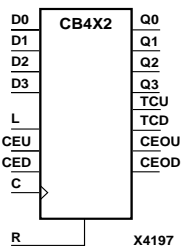


All Q outputs increment when CEU is High, provided R and L are Low during the Low-to-High clock transition. All Q outputs decrement when CED is High, provided R and L are Low. The counter ignores clock transitions when CEU and CED are Low. Both CEU and CED should not be High during the same clock transition; the CEOU and CEOD outputs might not function properly for cascading when CEU and CED are both High.

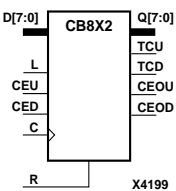

For counting up, the CEOU output is High when all Q outputs and CEU are High. For counting down, the CEOD output is High when all Q outputs are Low and CED is High. To cascade counters, the CEOU and CEOD outputs of each counter are, respectively, connected directly to the CEU and CED inputs of the next stage. The C, L, and R inputs are connected in parallel.

The maximum clocking frequency of these counter components is unaffected by the number of cascaded stages for all counting and loading functions. The TCU terminal count output is High when all Q outputs are High, regardless of CEU. The TCD output is High when all Q outputs are Low, regardless of CED.

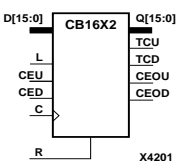

When cascading counters, the final terminal count signals can be produced by AND wiring all the TCU outputs (for the up direction) and all the TCD outputs (for the down direction). The TCU, CEOU, and CEOD outputs are produced by optimizable AND gates within the component. This results in zero propagation from the CEU and

CED inputs and from the Q outputs, provided all connections from each such output remain on-chip. Otherwise, a macrocell buffer delay is introduced.

The counter is initialized to zero (TCU Low and TCD High) when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs						Outputs				
R	L	CEU	CED	C	Dz – D0	Qz – Q0	TCU	TCD	CEOU	CEOD
1	X	X	X	↑	X	0	0	1	0	CEOD
0	1	X	X	↑	Dn	Dn	TCU	TCD	CEOU	CEOD
0	0	0	0	X	X	No Chg	No Chg	No Chg	0	0
0	0	1	0	↑	X	Inc	TCU	TCD	CEOU	0
0	0	0	1	↑	X	Dec	TCU	TCD	0	CEOD
0	0	1	1	↑	X	Inc	TCU	TCD	Invalid	Invalid

z = 1 for CB2X2; z = 3 for CB4X2; z = 7 for CB8X2; z = 15 for CB16X2


$$TCU = Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0$$

$$TCD = Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0$$

$$CEOU = TCU \cdot CEU$$

$$CEOD = TCD \cdot CED$$



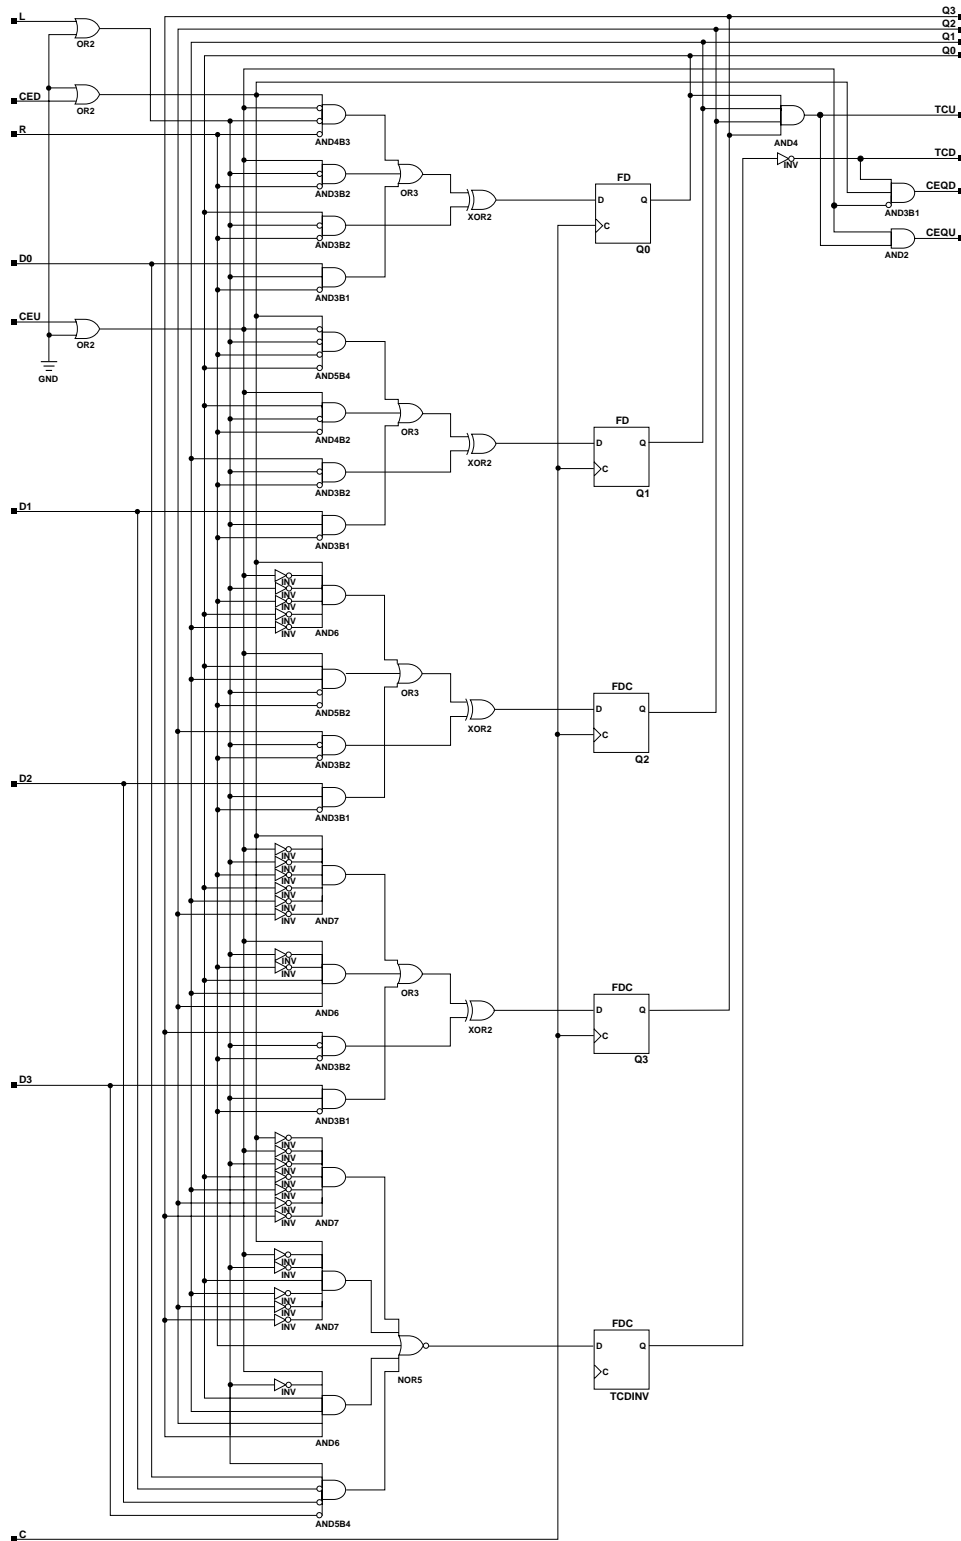

CB4X2 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

## Usage

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

architecture Behavioral of cb2x2 is

```

    signal CEU_INT : std_logic;
    signal CED_INT : std_logic;

    constant TERMINAL_COUNT_UP : std_logic_vector(WIDTH-1 downto 0) :=
        (others => '1');
    constant TERMINAL_COUNT_DOWN : std_logic_vector(WIDTH-1 downto 0)
        := (others => '0');

begin

process(C)
begin
    if ((C'event) and (C='1'))then
        if (R='1') then
            Q <= (others => '0');
            CEU_INT <= '0';
            CED_INT <= '1';
        elsif (L = '1') then
            Q <= D;
            CEU_INT <= CEU;
            CED_INT <= CED;
        elsif (CEU='1') then
            Q <= Q+1;
            CEU_INT <= '1';
            CED_INT <= '0';
        elsif (CED='1') then
            Q <= Q-1;
            CEU_INT <= '0';
            CED_INT <= '1';
        end if;
    end if;
end process;

process(Q, CEU_INT, CED_INT)
begin
    if ((Q = TERMINAL_COUNT_UP) and (CEU_INT = '1')) then
        TCU <= '1';
        TCD <= '0';
    elsif ((Q = TERMINAL_COUNT_DOWN) and (CED_INT = '1')) then
        TCU <= '0';
        TCD <= '1';
    else
        TCU <= '0';
        TCD <= '0';
    end if;
end process;

CEOU<=TCU and CEU;
CEOD<=TCD and CED;

```

```
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C)
begin
  if (R)
  begin
    Q <= 0;
    CEU_INT <= 1'b0;
    CED_INT <= 1'b1;
  end
  else if (L)
  begin
    Q <= D;
    CEU_INT <= CEU;
    CED_INT <= CED;
  end
  else if (CEU)
  begin
    Q <= Q + 1;
    CEU_INT <= 1;
    CED_INT <= 0;
  end
  else if (CED)
  begin
    Q <= Q - 1;
    CEU_INT <= 1'b0;
    CED_INT <= 1'b1;
  end
end

always @ (Q or CEU_INT or CED_INT)
begin
  if (Q == TERMINAL_COUNT_UP && CEU_INT)
  begin
    TCU_INT <= 1;
    TCD_INT <= 0;
  end
  else if ((Q == TERMINAL_COUNT_DOWN) && CED_INT)
  begin
    TCU_INT <= 0;
    TCD_INT <= 1;
  end
  else
  begin
    TCU_INT <= 0;
    TCD_INT <= 0;
  end
end

always @(TCU_INT or CEU or TCD_INT or CED)
begin
  CEOU <= TCU_INT && CEU;
  CEOD <= TCD_INT && CED;
  TCU <= TCU_INT;
  TCD <= TCD_INT;
end
```




## CBD2CE, CBD4CE, CBD8CE, CBD16CE


### 2-, 4-, 8-, 16-Bit Cascadable Dual Edge Triggered Binary Counters with Clock Enable and Asynchronous Clear

#### Architectures Supported


CBD2CE, CBD4CE, CBD8CE, CBD16CE	
Spartan-II, Spartan-III	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

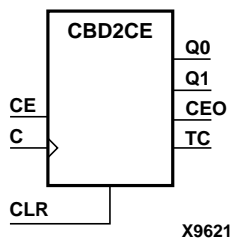


CBD2CE, CBD4CE, CBD8CE, and CBD16CE are, respectively, 2-, 4-, 8-, and 16-bit (stage), asynchronous, clearable, cascadable dual edge triggered binary counters. The asynchronous clear (CLR) is the highest priority input. When CLR is High, all other inputs are ignored; the Q outputs, terminal count (TC), and clock enable out (CEO) go to logic level zero, independent of clock transitions. The Q outputs increment when the clock enable input (CE) is High during the Low-to-High and High-to-Low clock (C) transition. The counter ignores clock transitions when CE is Low. The TC output is High when all Q outputs are High.

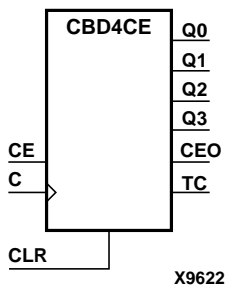


Larger counters are created by connecting the CEO output of the first stage to the CE input of the next stage and connecting the C and CLR inputs in parallel. CEO is active (High) when TC and CE are High. The maximum length of the counter is determined by the accumulated CE-to-TC propagation delays versus the clock period. The clock period must be greater than  $n(t_{CE-TC})$ , where  $n$  is the number of stages and the time  $t_{CE-TC}$  is the CE-to-TC propagation delay of each stage. When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not.

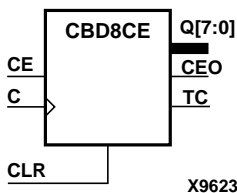


The counter is asynchronously cleared, outputs Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

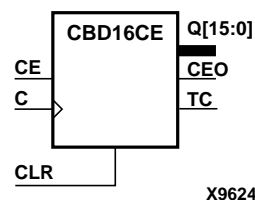

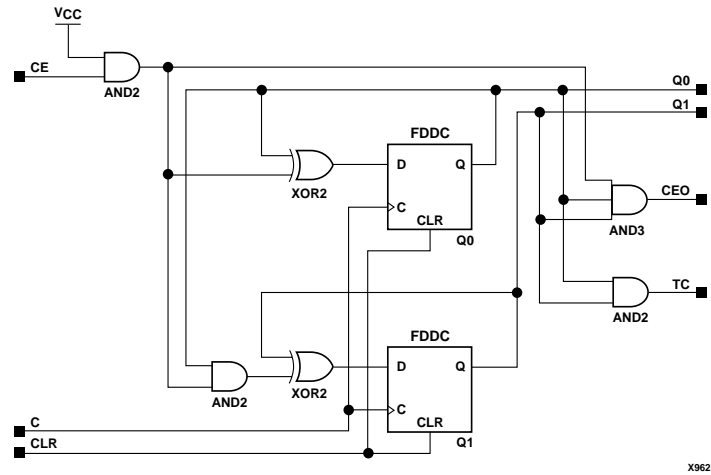

X9625

**CBD2CE Implementation CoolRunner-II**

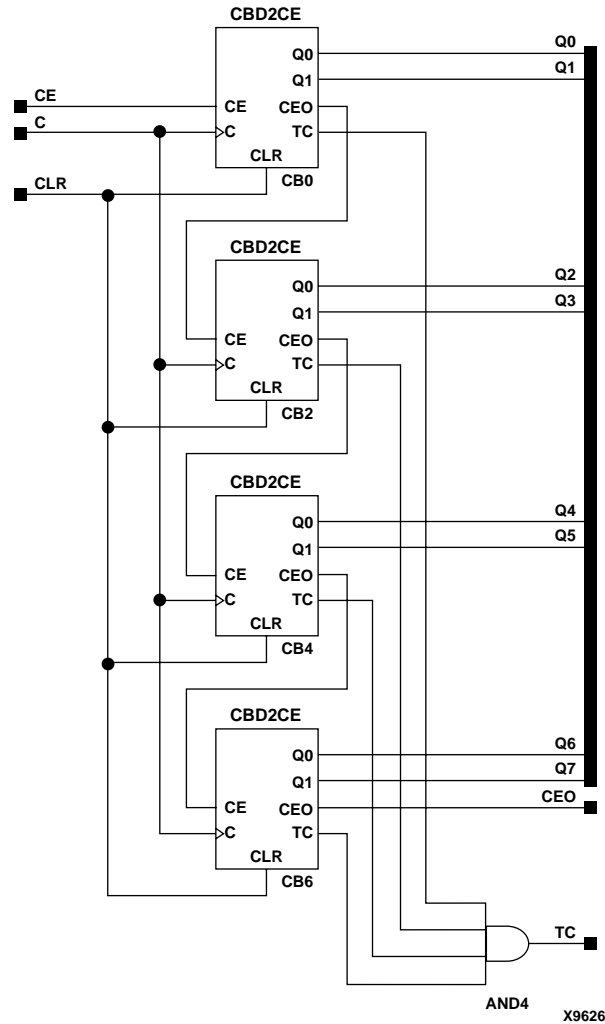

X9626

**CBD8CE Implementation CoolRunner-II**

## Usage

For HDL, these design elements are supported for inference but not instantiation.

## VHDL Inference Code

architecture Behavioral of cbd2ce is

```

constant TERMINAL_COUNT : std_logic_vector(WIDTH-1 downto 0) :=
    (others => '1');

begin

process(C, CLR)
begin
    if (CLR='1') then
        Q <= (others => '0');
    elsif C'event then
        if (CE='1') then
            Q <= Q+1;
        end if;
    end if;
end process;

process (Q)
begin
    if (Q = TERMINAL_COUNT) then
        TC <='1';
    else
        TC <='0';
    end if;
end process;
CEO<=TC and CE;
end Behavioral;

```

## Verilog Inference Code

```

always @ (posedge C or negedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else if (CE)
        Q <= Q + 1;
    end

always @ (Q)
begin
    if (Q == TERMINAL_COUNT)
        TC <= 1;
    else
        TC <= 0;
    end

always @ (TC or CE)
begin
    CEO <= TC & CE;
end

```









## CBD2CLE, CBD4CLE, CBD8CLE, CBD16CLE

### 2-, 4-, 8-, 16-Bit Loadable Cascadable Dual Edge Triggered Binary Counters with Clock Enable and Asynchronous Clear

#### Architectures Supported

CBD2CLE, CBD4CLE, CBD8CLE, CBD16CLE	
Spartan-II, Spartan-III	N/A
Spartan-3	N/A
Virtex, Virtex-E	N/A
Virtex-II, Virtex-II Pro, Virtex-II Pro X	N/A
XC9500, XC9500XV, XC9500XL	N/A
CoolRunner XPLA3	N/A
CoolRunner-II	Macro
CoolRunner-IIS	No

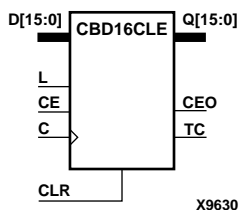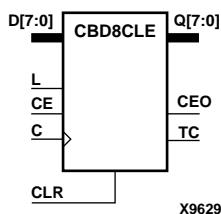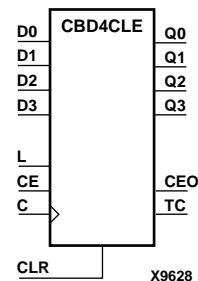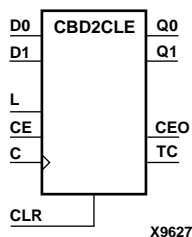

CBD2CLE, CBD4CLE, CBD8CLE, and CBD16CLE are, respectively, 2-, 4-, 8-, and 16-bit (stage) synchronously loadable, asynchronously clearable, cascadable dual edge triggered binary counters. The asynchronous clear (CLR) is the highest priority input. When CLR is High, all other inputs are ignored; the Q outputs, terminal count (TC), and clock enable out (CEO) go to logic level zero, independent of clock transitions. The data on the D inputs is loaded into the counter when the load enable input (L) is High during the Low-to-High clock transition, independent of the state of clock enable (CE). The Q outputs increment when CE is High during the Low-to-High and High-to-Low clock transition. The counter ignores clock transitions when CE is Low. The TC output is High when all Q outputs are High.

Larger counters are created by connecting the CEO output of the first stage to the CE input of the next stage and connecting the C, L, and CLR inputs in parallel. CEO is active (High) when TC and CE are High. The maximum length of the counter is determined by the accumulated CE-to-TC propagation delays versus the clock period. The clock period must be greater than  $n(t_{CE-TC})$ , where  $n$  is the number of stages and the time  $t_{CE-TC}$  is the CE-to-TC propagation delay of each stage. When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not.

The counter is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.


Inputs					Outputs		
CLR	L	CE	C	Dz – D0	Qz – Q0	TC	CEO
1	X	X	X	X	0	0	0
0	1	X	↑	Dn	Dn	TC	CEO
0	1	X	↓	Dn	Dn	TC	CEO

Inputs					Outputs		
CLR	L	CE	C	Dz – D0	Qz – Q0	TC	CEO
0	0	0	X	X	No Chg	No Chg	0
0	0	1	↑	X	Inc	TC	CEO
0	0	1	↓	X	Inc	TC	CEO

z= 1 for CBD2CLE; z = 3 for CBD4CLE; z = 7 for CBD8CLE; z = 15 for CBD16CLE


$$TC = Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0$$

$$CEO = TC \cdot CE$$

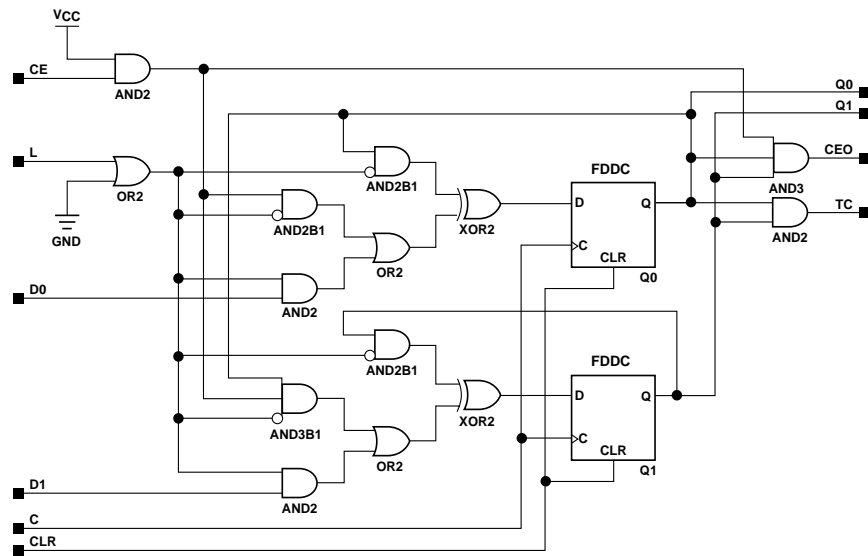

X9631

### CBD2CLE Implementation CoolRunner-II

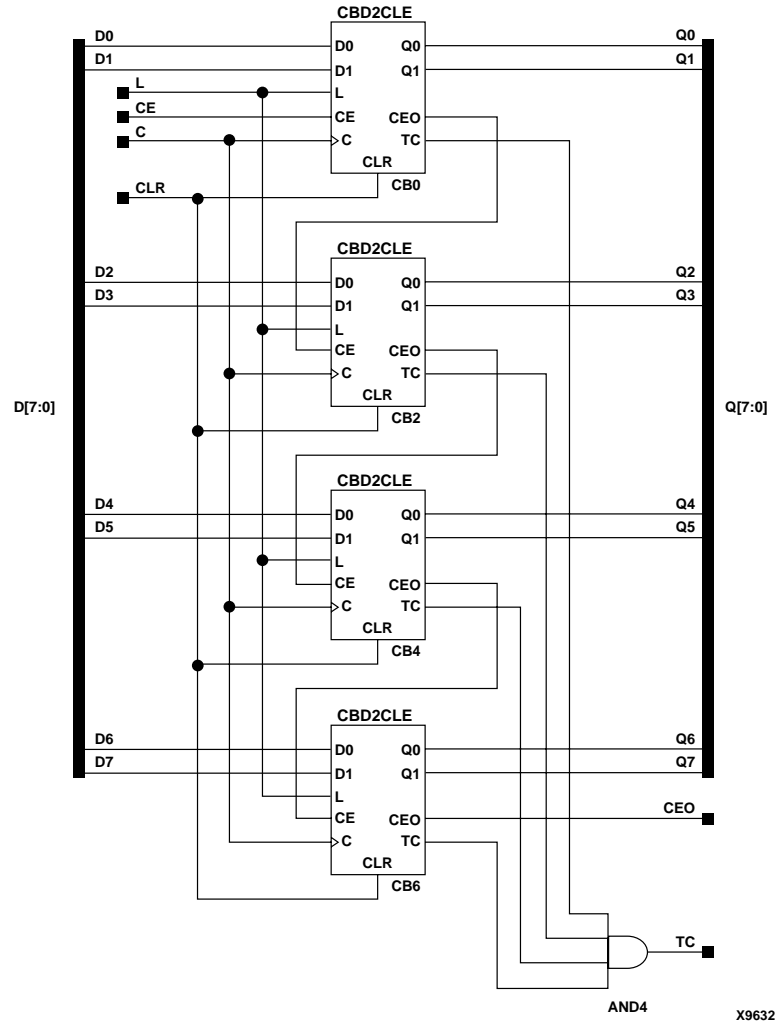

### CBD8CLE Implementation CoolRunner-II

#### Usage

For HDL, these design elements are supported for inference but not instantiation.

#### VHDL Inference Code

```
architecture Behavioral of cbd2cle is
    constant TERMINAL_COUNT : std_logic_vector(WIDTH-1 downto 0) :=
        (others => '1');

begin

    process(C, CLR)
    begin
        if (CLR='1') then
```

```
    Q <= (others => '0');
  elsif C'event then
    if (L = '1') then
      Q <= D;
    elsif (CE='1') then
      Q <= Q+1;
    end if;
  end if;
end process;

process(Q)
begin
  if (Q = TERMINAL_COUNT) then
    TC <='1';
  else
    TC <='0';
  end if;
end process;

CEO<=TC and CE;

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or negedge C or posedge CLR)
begin
  if (CLR)
    Q <= 0;
  else if (L)
    Q <= D;
  else if (CE)
    Q <= Q + 1;
end

always @ (Q)
begin
  if (Q == TERMINAL_COUNT)
    TC <= 1;
  else
    TC <= 0;
end


always @ (TC or CE)
begin
  CEO <= TC & CE;
end
```

## CBD2CLED, CBD4CLED, CBD8CLED, CBD16CLED


### 2-, 4-, 8-, 16-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counters with Clock Enable and Asynchronous Clear

#### Architectures Supported


CBD2CLED, CBD4CLED, CBD8CLED, CBD16CLED	
Spartan-II, Spartan-III	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

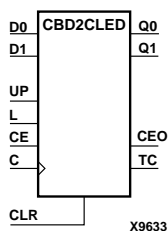


CBD2CLED, CBD4CLED, CBD8CLED, and CBD16CLED are, respectively, 2-, 4-, 8- and 16-bit (stage), synchronously loadable, asynchronously clearable, cascadable, bidirectional dual edge triggered binary counters. The asynchronous clear (CLR) is the highest priority input. When CLR is High, all other inputs are ignored; the Q outputs, terminal count (TC), and clock enable out (CEO) go to logic level zero, independent of clock transitions. The data on the D inputs is loaded into the counter when the load enable input (L) is High during the Low-to-High clock (C) transition, independent of the state of clock enable (CE). The Q outputs decrement when CE is High and UP is Low during the Low-to-High and High-to-Low clock transition. The Q outputs increment when CE and UP are High. The counter ignores clock transitions when CE is Low.

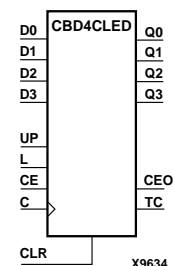

For counting up, the TC output is High when all Q outputs and UP are High. For counting down, the TC output is High when all Q outputs and UP are Low. To cascade counters, the CEO output of each counter is connected to the CE pin of the next stage. The clock, UP, L, and CLR inputs are connected in parallel. CEO is active (High) when TC and CE are High. The maximum length of the counter is determined by the accumulated CE-to-TC propagation delays versus the clock period. The clock period must be greater than  $n(t_{CE-TC})$ , where  $n$  is the number of stages and the time  $t_{CE-TC}$  is the CE-to-TC propagation delay of each stage.

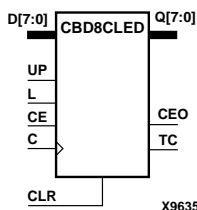

When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not. For CoolRunner-II, see “[CB2X1](#), [CB4X1](#), [CB8X1](#), [CB16X1](#)” for high-performance cascadable, bidirectional counters.

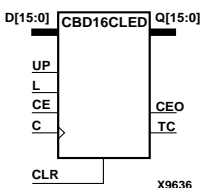


The counter is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs						Outputs		
CLR	L	CE	C	UP	Dz – D0	Qz – Q0	TC	CEO
1	X	X	X	X	X	0	0	0
0	1	X	↑	X	Dn	Dn	TC	CEO
0	1	X	↓	X	Dn	Dn	TC	CEO
0	0	0	X	X	X	No Chg	No Chg	0
0	0	1	↑	1	X	Inc	TC	CEO
0	0	1	↓	1	X	Inc	TC	CEO
0	0	1	↑	0	X	Dec	TC	CEO
0	0	1	↓	0	X	Dec	TC	CEO

$z = 1$  for CBD2CLED;  $z = 3$  for CBD4CLED;  $z = 7$  for CBD8CLED;  $z = 15$  for CBD16CLED

$TC = (Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0 \cdot UP) + (Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0 \cdot \overline{UP})$

$CEO = TC \cdot CE$

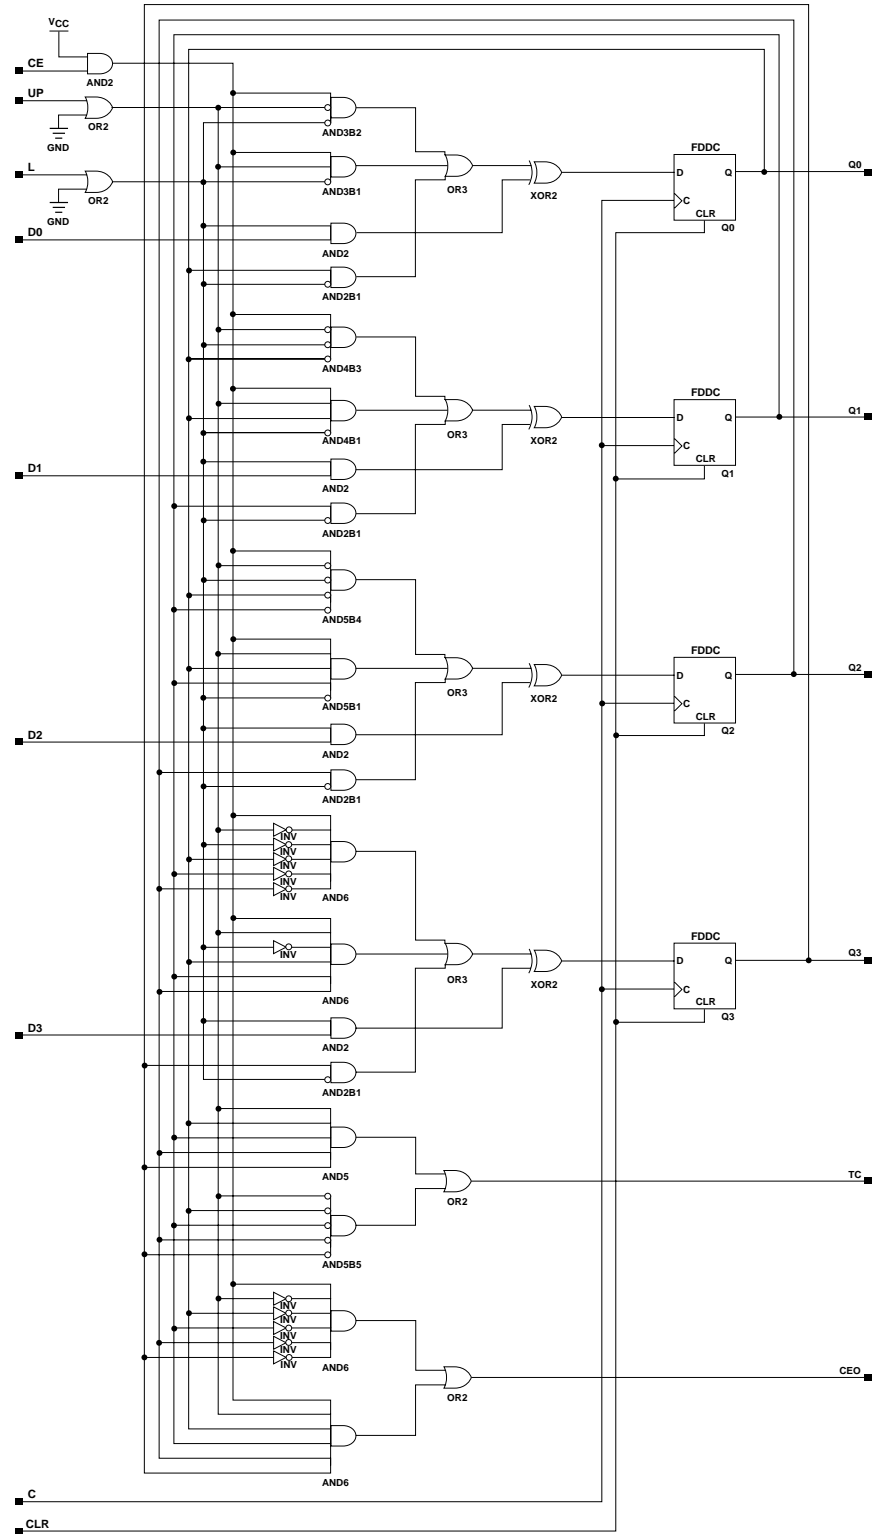

X9637

### CBD4CLED Implementation CoolRunner-II

## Usage

For HDL, these design elements are supported for inference but not instantiation.

## VHDL Inference Code

```
architecture Behavioral of cbd2cled is

    constant TERMINAL_COUNT_UP : std_logic_vector(WIDTH-1 downto 0) :=
        (others => '1');
    constant TERMINAL_COUNT_DOWN : std_logic_vector(WIDTH-1 downto 0) :=
        (others => '0');

begin

    process(C, CLR)
    begin
        if (CLR='1') then
            Q <= (others => '0');
        elsif (C'event) then
            if (L = '1') then
                Q <= D;
            elsif (CE='1') then
                if (UP='1') then
                    Q <= Q+1;
                elsif (UP='0') then
                    Q <= Q-1;
                end if;
            end if;
        end if;
    end process;

    process(Q, UP)
    begin
        if (((Q = TERMINAL_COUNT_UP) and (UP = '1')) or
            ((Q = TERMINAL_COUNT_DOWN) and (UP = '0'))) then
            TC <='1';
        else
            TC <='0';
        end if;
    end process;

    CEO <=TC and CE;

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or negedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else if (L)
        Q <= D;
    else if (CE)
        begin
            if (UP)
                Q <= Q + 1;
```



```
        else if (!UP)
            Q <= Q - 1;
        end
    end
end

always @ (Q or UP)
begin
    if ((Q == TERMINAL_COUNT_UP && UP) || (Q == TERMINAL_COUNT_DOWN &&
        !UP))
        TC <= 1;
    else
        TC <= 0;
    end
end

always @ (TC or CE)
begin
    CEO <= TC & CE;
end
```







## CBD2RE, CBD4RE, CBD8RE, CBD16RE

### 2-, 4-, 8-, 16-Bit Cascadable Dual Edge Triggered Binary Counters with Clock Enable and Synchronous Reset

#### Architectures Supported

CBD2RE, CBD4RE, CBD8RE, CBD16RE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

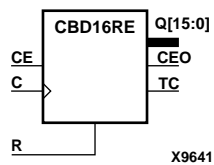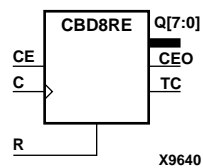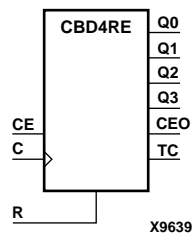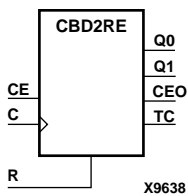

CBD2RE, CBD4RE, CBD8RE, and CBD16RE are, respectively, 2-, 4-, 8-, and 16-bit (stage), synchronous, resettable, cascadable dual edge triggered binary counters. The synchronous reset (R) is the highest priority input. When R is High, all other inputs are ignored; the Q outputs, terminal count (TC), and clock enable out (CEO) go to logic level zero during the Low-to-High or High-to-Low clock transition. The Q outputs increment when the clock enable input (CE) is High during the Low-to-High and High-to-Low clock (C) transition. The counter ignores clock transitions when CE is Low. The TC output is High when both Q outputs are High.

Larger counters are created by connecting the CEO output of the first stage to the CE input of the next stage and connecting the C and R inputs in parallel. CEO is active (High) when TC and CE are High. The maximum length of the counter is determined by the accumulated CE-to-TC propagation delays versus the clock period. The clock period must be greater than  $n(t_{CE-TC})$ , where  $n$  is the number of stages and the time  $t_{CE-TC}$  is the CE-to-TC propagation delay of each stage. When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not.

The counter is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.


Inputs			Outputs		
R	CE	C	Qz – Q0	TC	CEO
1	X	↑	0	0	0
1	X	↓	0	0	0
0	0	X	No Chg	No Chg	0
0	1	↑	Inc	TC	CEO

Inputs			Outputs		
R	CE	C	Qz – Q0	TC	CEO
0	1	↓	Inc	TC	CEO


z = 1 for CBD2RE; z = 3 for CBD4RE; z = 7 for CBD8RE; z = 15 for CBD16RE

$$TC = Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0$$

$$CEO = TC \cdot CE$$

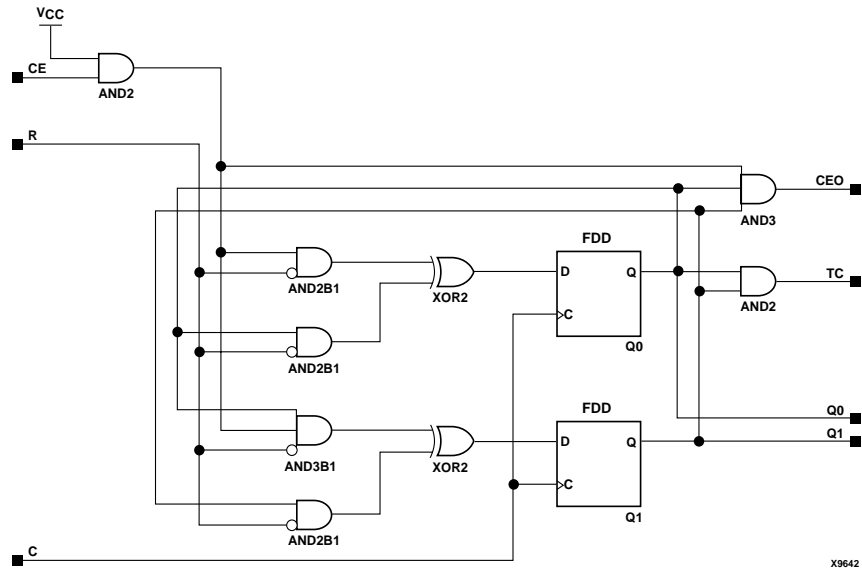

CBD2RE Implementation CoolRunner-II

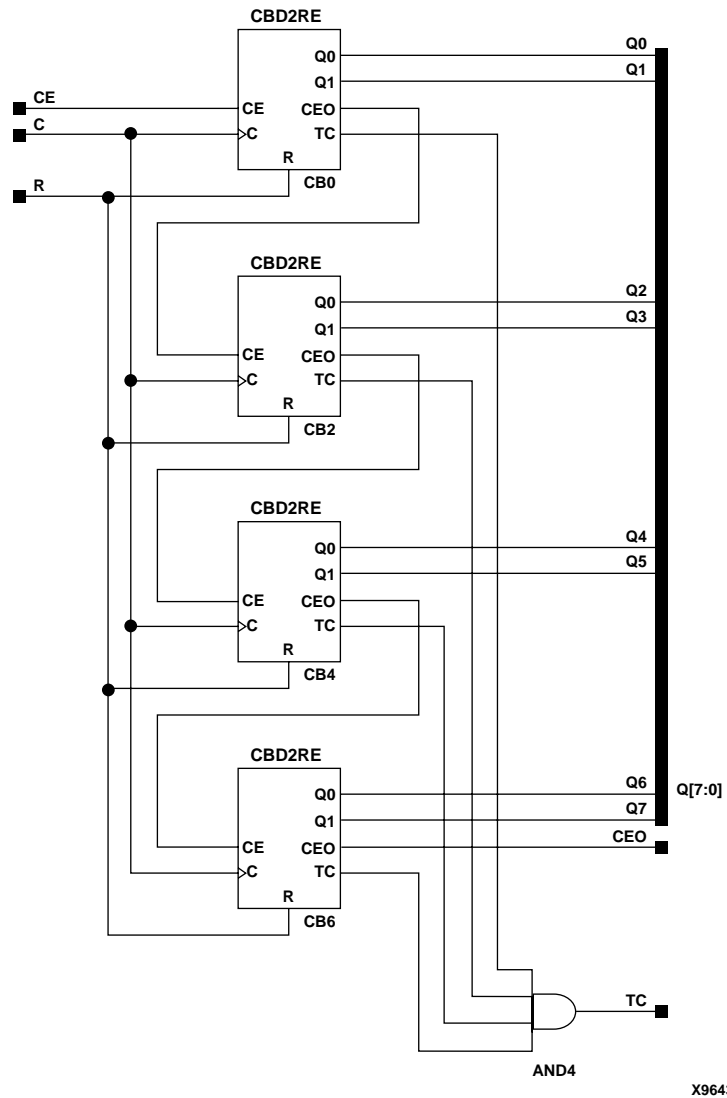

### CBD8RE Implementation CoolRunner-II

#### Usage

For HDL, these design elements are supported for inference but not instantiation.

## VHDL Inference Code

```
architecture Behavioral of cbd2re is

    constant TERMINAL_COUNT : std_logic_vector(WIDTH-1 downto 0) :=
        (others => '1');

begin
    process(C, R)
    begin
        if (C'event) then
            if (R='1') then
                Q <= (others => '0');
            elsif (CE='1') then
                Q <= Q+1;
            end if;
        end if;
    end process;

    process(Q)
    begin
        if (Q = TERMINAL_COUNT) then
            TC <='1';
        else
            TC <='0';
        end if;
    end process;

    CEO <= TC and CE;

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or negedge C)
begin
    if (R)
        Q <= 0;
    else if (CE)
        Q <= Q + 1;
    end

always @ (Q)
begin
    if (Q == TERMINAL_COUNT)
        TC <= 1;
    else
        TC <= 0;
    end


always @ (TC or CE)
begin
    CEO <= TC & CE;
end
```

## CBD2RLE, CBD4RLE, CBD8RLE, CBD16RLE


### 2-, 4-, 8-, 16-Bit Loadable Cascadable Dual Edge Triggered Binary Counters with Clock Enable and Synchronous Reset

#### Architectures Supported


CBD2RLE, CBD4RLE, CBD8RLE, CBD16RLE	
Spartan-II, Spartan-III	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

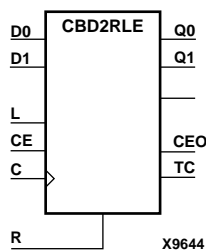


CBD2RLE, CBD4RLE, CBD8RLE, and CBD16RLE are, respectively, 2-, 4-, 8-, and 16-bit (stage), synchronous, loadable, resettable, cascadable dual edge triggered binary counters. The synchronous reset (R) is the highest priority input. The synchronous R, when High, overrides all other inputs and resets the Q outputs, terminal count (TC), and clock enable out (CEO) outputs to Low on the Low-to-High or High-to-Low clock (C) transition.

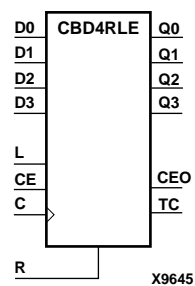

The data on the D inputs is loaded into the counter when the load enable input (L) is High during the Low-to-High and High-to-Low clock (C) transition, independent of the state of CE. The Q outputs increment when CE is High during the Low-to-High and High-to-Low clock transition. The counter ignores clock transitions when CE is Low. The TC output is High when all Q outputs are High. The CEO output is High when all Q outputs and CE are High to allow direct cascading of counters.

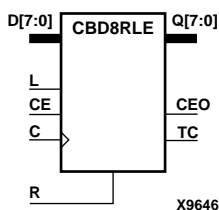

Larger counters are created by connecting the CEO output of the first stage to the CE input of the next stage and by connecting the C, L, and R inputs in parallel. The maximum length of the counter is determined by the accumulated CE-to-CEO propagation delays versus the clock period. When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not.

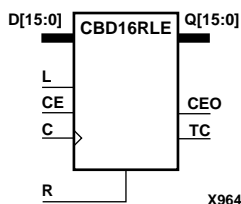


The counter is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs					Outputs		
R	L	CE	C	Dz – D0	Qz – Q0	TC	CEO
1	X	X	↑	X	0	0	0
1	X	X	↓	X	0	0	0
0	1	X	↑	Dn	Dn	TC	CEO
0	1	X	↓	Dn	Dn	TC	CEO
0	0	0	X	X	No Chg	No Chg	0
0	0	1	↑	X	Inc	TC	CEO
0	0	1	↓	X	Inc	TC	CEO

z = 1 for CBD2RLE; z = 3 for CBD4RLE; z = 7 for CBD8RLE; z = 15 for CBD16RLE


$$TC = Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0$$

$$CEO = TC \cdot CE$$

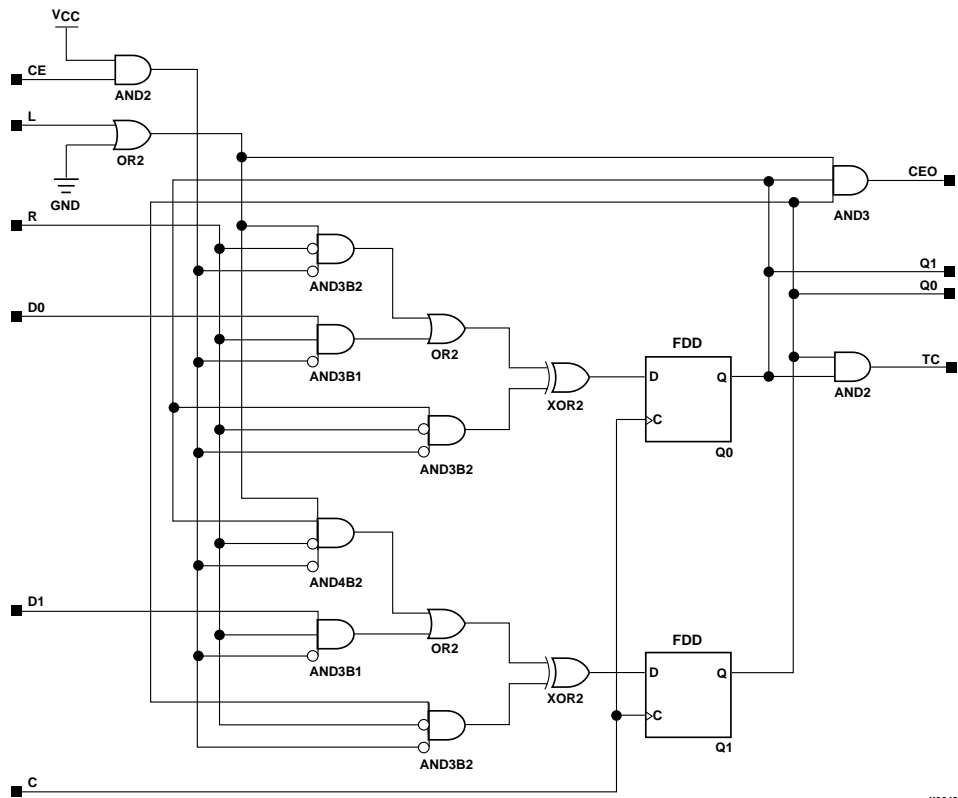

CBD2RLE Implementation CoolRunner-II



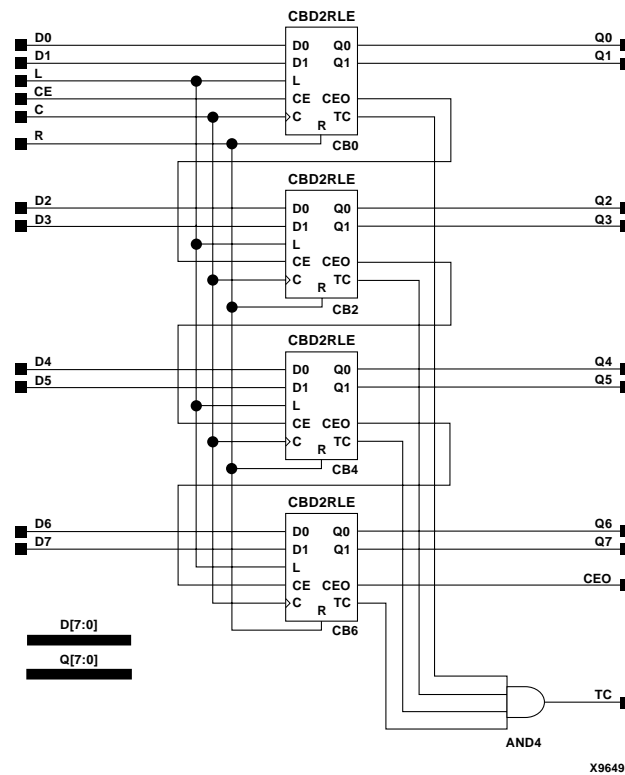

### CBD8RLE Implementation CoolRunner-II

#### Usage

For HDL, these design elements are supported for inference but not instantiation.

#### VHDL Inference Code

```
architecture Behavioral of cbd2rle is
    constant TERMINAL_COUNT : std_logic_vector(WIDTH-1 downto 0) :=
        (others => '1');

begin

    process(C, R)
    begin
        if (C'event) then
            if (R='1') then
                Q <= (others => '0');
            elsif (L='1') then
                Q <= D;
            elsif (CE='1') then
                Q <= Q+1;
            end if;
        end if;
    end process;

    process(Q)
    begin
```

```
    if (Q = TERMINAL_COUNT) then
      TC <= '1';
    else
      TC <= '0';
    end if;
  end process;

  CEO <= TC and CE;

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or negedge C)
begin
  if (R)
    Q <= 0;
  else if (L)
    Q <= D;
  else if (CE)
    Q <= Q + 1;
end

always @ (Q)
begin
  if (Q == TERMINAL_COUNT)
    TC <= 1;
  else
    TC <= 0;
end


always @ (TC or CE)
begin
  CEO <= TC & CE;
end
```

## CBD2X1, CBD4X1, CBD8X1, CBD16X1


### 2-, 4-, 8-, 16-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counters with Clock Enable and Asynchronous Clear

#### Architectures Supported


CBD2X1, CBD4X1, CBD8X1, CBD16X1	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

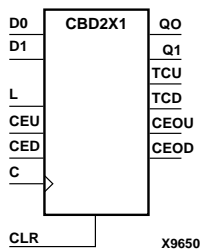

CBD2X1, CBD4X1, CBD8X1, and CBD16X1 are, respectively, 2-, 4-, 8-, and 16-bit (stage), synchronously loadable, asynchronously clearable, bidirectional dual edge triggered binary counters. These counters have separate count-enable inputs and synchronous terminal-count outputs for up and down directions to support high-speed cascading in the CoolRunner-II architecture.

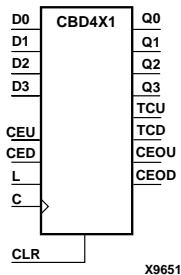

The asynchronous clear (CLR) is the highest priority input. When CLR is High, all other inputs are ignored; data outputs (Q) go to logic level zero, terminal count outputs TCU and TCD go to zero and one, respectively, clock enable outputs CEOU and CEOD go to Low and High, respectively, independent of clock transitions. The data on the D inputs loads into the counter on the Low-to-High and High-to-Low clock (C) transition when the load enable input (L) is High, independent of the CE inputs.

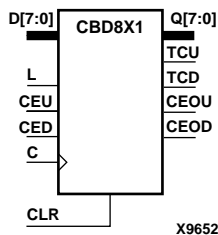


The Q outputs increment when CEU is High, provided CLR and L are Low, during the Low-to-High and High-to-Low clock transition. The Q outputs decrement when CED is High, provided CLR and L are Low. The counter ignores clock transitions when CEU and CED are Low. Both CEU and CED should not be High during the same clock transition; the CEOU and CEOD outputs might not function properly for cascading when CEU and CED are both High.

For counting up, the CEOU output is High when all Q outputs and CEU are High. For counting down, the CEOD output is High when all Q outputs are Low and CED is High. To cascade counters, the CEOU and CEOD outputs of each counter are connected directly to the CEU and CED inputs, respectively, of the next stage. The clock, L, and CLR inputs are connected in parallel.

In CoolRunner-II, the maximum clocking frequency of these counter components is unaffected by the number of cascaded stages for all counting and loading functions. The TCU terminal count output is High when all Q outputs are High, regardless of CEU. The TCD output is High when all Q outputs are Low, regardless of CED.

When cascading counters, the final terminal count signals can be produced by AND wiring all the TCU outputs (for the up direction) and all the TCD outputs (for the

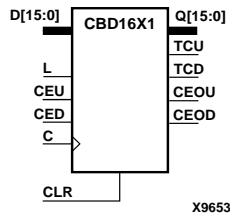

down direction). The TCU, CEOU, and CEOD outputs are produced by optimizable AND gates within the component. This results in zero propagation from the CEU and CED inputs and from the Q outputs, provided all connections from each such output remain on-chip. Otherwise, a macrocell buffer delay is introduced.

The counter is initialized to zero (TCU Low and TCD High) when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs						Outputs				
CLR	L	CEU	CED	C	Dz-D0	Qz-Q0	TCU	TCD	CEOU	CEOD
1	X	X	X	X	X	0	0	1	0	CEOD
0	1	X	X	↑	Dn	Dn	TCU	TCD	CEOU	CEOD
0	1	X	X	↓	Dn	Dn	TCU	TCD	CEOU	CEOD
0	0	0	0	X	X	No Chg	No Chg	No Chg	0	0
0	0	1	0	↑	X	Inc	TCU	TCD	CEOU	0
0	0	1	0	↓	X	Inc	TCU	TCD	CEOU	0
0	0	0	1	↑	X	Dec	TCU	TCD	0	CEOD
0	0	0	1	↓	X	Dec	TCU	TCD	0	CEOD
0	0	1	1	↑	X	Inc	TCU	TCD	Invalid	Invalid
0	0	1	1	↓	X	Inc	TCU	TCD	Invalid	Invalid


z = 1 for CBD2X1; z = 3 for CBD4X1; z = 7 for CBD8X1; z = 15 for CBD16X1

$$TCU = Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0$$

$$TCD = Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0$$

$$CEOU = TCU \cdot CEU$$

$$CEOD = TCD \cdot CED$$

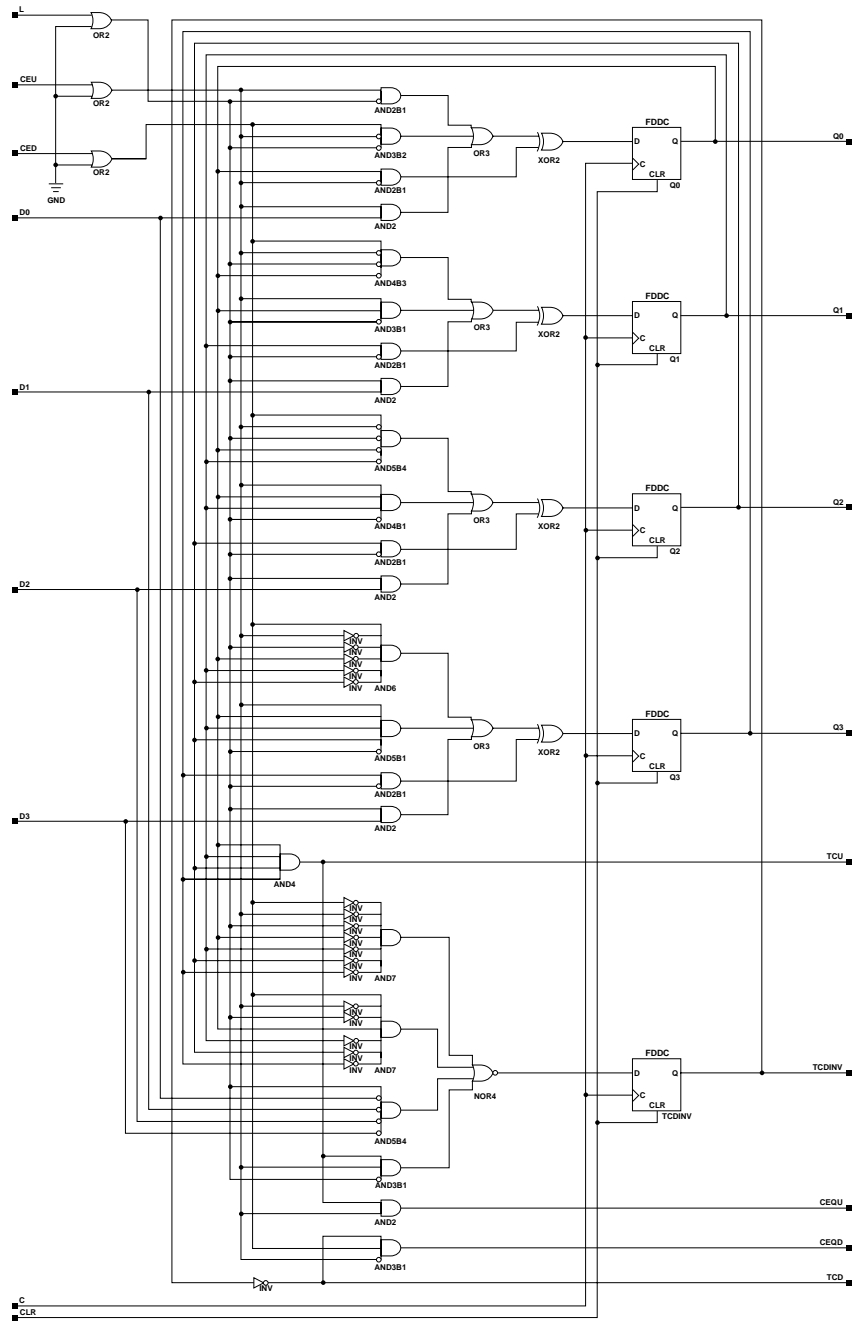

X9654

### CBD4X1 Implementation CoolRunner-II

### Usage

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of cbd2x1 is

    signal CEU_INT : std_logic;
    signal CED_INT : std_logic;

    constant TERMINAL_COUNT_UP : std_logic_vector(WIDTH-1 downto 0) :=
        (others => '1');
    constant TERMINAL_COUNT_DOWN : std_logic_vector(WIDTH-1 downto 0) :=
        (others => '0');

begin

    process(C, CLR)
    begin
        if (CLR='1') then
            Q <= (others => '0');
            CEU_INT <= '0';
            CED_INT <= '1';
        elsif C'event then
            if (L = '1') then
                Q <= D;
                CEU_INT <= CEU;
                CED_INT <= CED;
            elsif (CEU='1') then
                Q <= Q+1;
                CEU_INT <= '1';
                CED_INT <= '0';
            elsif (CED='1') then
                Q <= Q-1;
                CEU_INT <= '0';
                CED_INT <= '1';
            end if;
        end if;
    end process;

    process(Q, CEU_INT, CED_INT)
    begin
        if ((Q = TERMINAL_COUNT_UP) and (CEU_INT = '1')) then
            TCU_INT <= '1';
            TCD_INT <= '0';
        elsif ((Q = TERMINAL_COUNT_DOWN) and (CED_INT = '1')) then
            TCU <= '0';
            TCD <= '1';
        else
            TCU <= '0';
            TCD <= '0';
        end if;
    end process;

    CEOU <= TCU and CEU;
    CEOD <= TCD and CED;

end Behavioral;
```

## Verilog Inference Code

```

always @ (posedge C or negedge C or posedge CLR)
begin
  if (CLR)
  begin
    Q <= 0;
    CEU_INT <= 1'b0;
    CED_INT <= 1'b1;
  end
  else if (L)
  begin
    Q <= D;
    CEU_INT <= CEU;
    CED_INT <= CED;
  end
  else if (CEU)
  begin
    Q <= Q + 1;
    CEU_INT <= 1;
    CED_INT <= 0;
  end
  else if (CED)
  begin
    Q <= Q - 1;
    CEU_INT <= 1'b0;
    CED_INT <= 1'b1;
  end
end

always @ (Q or CEU_INT or CED_INT)
begin
  if (Q == TERMINAL_COUNT_UP && CEU_INT)
  begin
    TCU_INT <= 1;
    TCD_INT <= 0;
  end
  else if ((Q == TERMINAL_COUNT_DOWN) && CED_INT)
  begin
    TCU_INT <= 0;
    TCD_INT <= 1;
  end
  else
  begin
    TCU_INT <= 0;
    TCD_INT <= 0;
  end
end

always @ (TCU_INT or CEU or TCD_INT or CED)
begin
  CEU <= TCU_INT && CEU;
  CED <= TCD_INT && CED;
  TCU <= TCU_INT;
  TCD <= TCD_INT;
end

```









## CBD2X2, CBD4X2, CBD8X2, CBD16X2

### 2-, 4-, 8-, and 16-Bit Loadable Cascadable Bidirectional Dual Edge Triggered Binary Counters with Clock Enable and Synchronous Reset

#### Architectures Supported

CBD2X2, CBD4X2, CBD8X2, CBD16X2	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

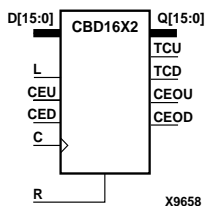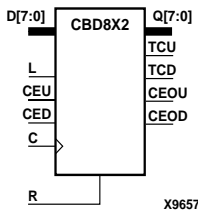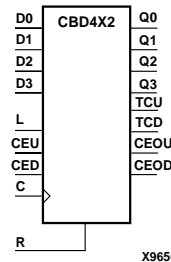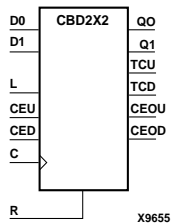

CBD2X2, CBD4X2, CBD8X2, and CBD16X2 are, respectively, 2-, 4-, 8-, and 16-bit (stage), synchronous, loadable, resettable, bidirectional dual edge triggered binary counters. These counters have separate count-enable inputs and synchronous terminal-count outputs for up and down directions to support high-speed cascading in the CoolRunner-II architecture.

The synchronous reset (R) is the highest priority input. When R is High, all other inputs are ignored; the data outputs (Q) go to logic level zero, terminal count outputs TCU and TCD go to zero and one, respectively, and clock enable outputs CEOU and CEOD go to Low and High, respectively, on the Low-to-High and High-to-Low clock (C) transition. The data on the D inputs loads into the counter on the Low-to-High and High-to-Low clock (C) transition when the load enable input (L) is High, independent of the CE inputs.

All Q outputs increment when CEU is High, provided R and L are Low during the Low-to-High and High-to-Low clock transition. All Q outputs decrement when CED is High, provided R and L are Low. The counter ignores clock transitions when CEU and CED are Low. Both CEU and CED should not be High during the same clock transition; the CEOU and CEOD outputs might not function properly for cascading when CEU and CED are both High.

For counting up, the CEOU output is High when all Q outputs and CEU are High. For counting down, the CEOD output is High when all Q outputs are Low and CED is High. To cascade counters, the CEOU and CEOD outputs of each counter are, respectively, connected directly to the CEU and CED inputs of the next stage. The C, L, and R inputs are connected in parallel.

In CoolRunner-II, the maximum clocking frequency of these counter components is unaffected by the number of cascaded stages for all counting and loading functions. The TCU terminal count output is High when all Q outputs are High, regardless of CEU. The TCD output is High when all Q outputs are Low, regardless of CED.

When cascading counters, the final terminal count signals can be produced by AND wiring all the TCU outputs (for the up direction) and all the TCD outputs (for the

down direction). The TCU, CEOU, and CEOD outputs are produced by optimizable AND gates within the component. This results in zero propagation from the CEU and CED inputs and from the Q outputs, provided all connections from each such output remain on-chip. Otherwise, a macrocell buffer delay is introduced.

The counter is initialized to zero (TCU Low and TCD High) when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs						Outputs				
R	L	CEU	CED	C	Dz – D0	Qz – Q0	TCU	TCD	CEOU	CEOD
1	X	X	X	↑	X	0	0	1	0	CEOD
1	X	X	X	↓	X	0	0	1	0	CEOD
0	1	X	X	↑	Dn	Dn	TCU	TCD	CEOU	CEOD
0	1	X	X	↓	Dn	Dn	TCU	TCD	CEOU	CEOD
0	0	0	0	X	X	No Chg	No Chg	No Chg	0	0
0	0	1	0	↑	X	Inc	TCU	TCD	CEOU	0
0	0	1	0	↓	X	Inc	TCU	TCD	CEOU	0
0	0	0	1	↑	X	Dec	TCU	TCD	0	CEOD
0	0	0	1	↓	X	Dec	TCU	TCD	0	CEOD
0	0	1	1	↑	X	Inc	TCU	TCD	Invalid	Invalid
0	0	1	1	↓	X	Inc	TCU	TCD	Invalid	Invalid


z = 1 for CBD2X2; z = 3 for CBD4X2; z = 7 for CBD8X2; z = 15 for CBD16X2

$$TCU = Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0$$

$$TCD = Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0$$

$$CEOU = TCU \cdot CEU$$

$$CEOD = TCD \cdot CED$$

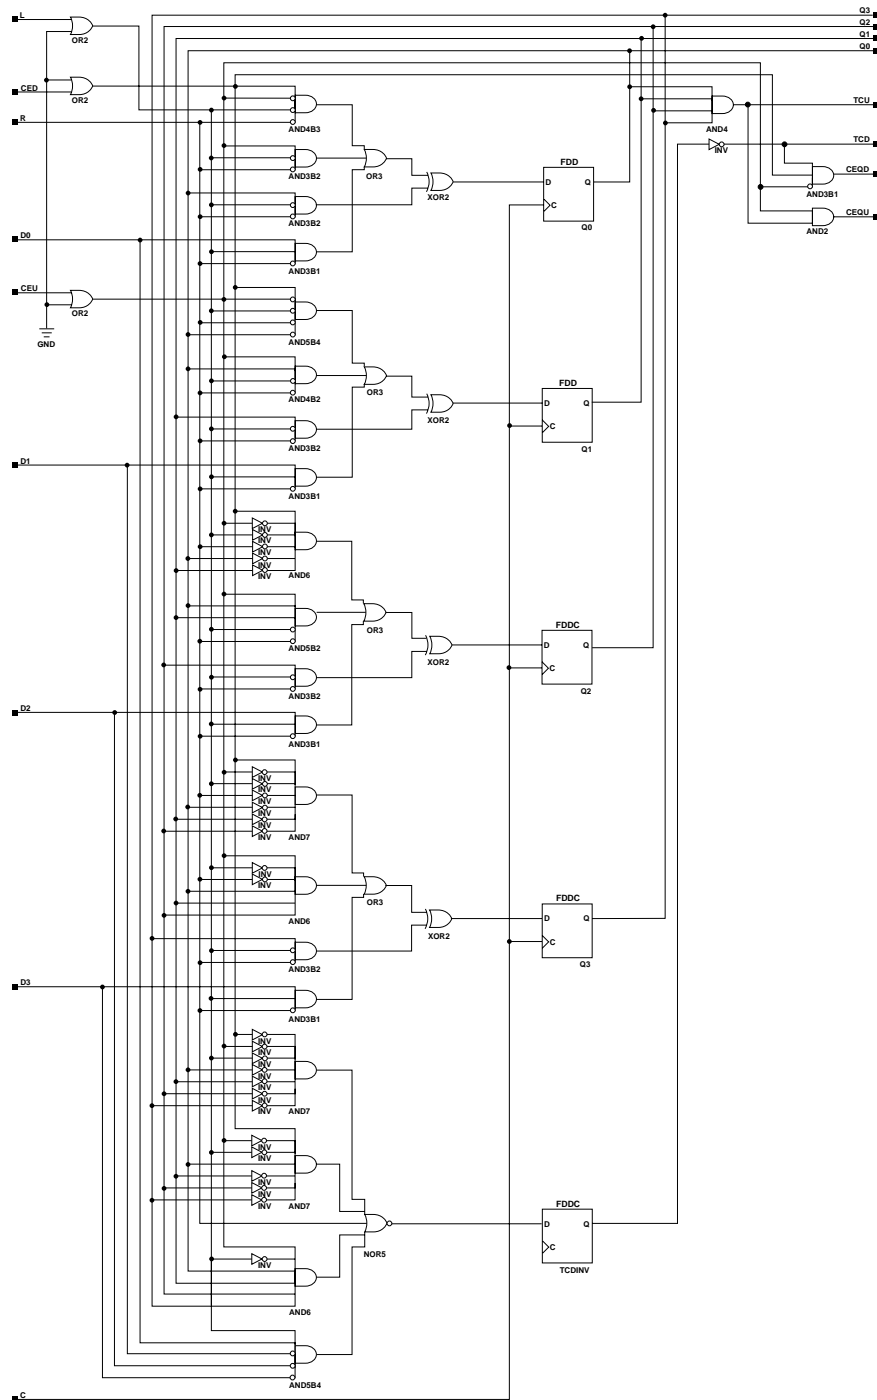

### CBD4X2 Implementation CoolRunner-II

#### Usage

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

```

architecture Behavioral of cbd2x2 is

    signal CEU_INT : std_logic;
    signal CED_INT : std_logic;

    constant TERMINAL_COUNT_UP : std_logic_vector(WIDTH-1 downto 0) :=
        (others => '1');
    constant TERMINAL_COUNT_DOWN : std_logic_vector(WIDTH-1 downto 0) :=
        (others => '0');

begin

    process(C)
    begin
        if (C'event) then
            if (R='1') then
                Q <= (others => '0');
                CEU_INT <= '0';
                CED_INT <= '1';
            elsif (L = '1') then
                Q <= D;
                CEU_INT <= CEU;
                CED_INT <= CED;
            elsif (CEU='1') then
                Q <= Q+1;
                CEU_INT <= '1';
                CED_INT <= '0';
            elsif (CED='1') then
                Q <= Q-1;
                CEU_INT <= '0';
                CED_INT <= '1';
            end if;
        end if;
    end process;

    process(Q, CEU_INT, CED_INT)
    begin
        if ((Q = TERMINAL_COUNT_UP) and (CEU_INT = '1')) then
            TCU_INT <= '1';
            TCD_INT <= '0';
        elsif ((Q = TERMINAL_COUNT_DOWN) and (CED_INT = '1')) then
            TCU <= '0';
            TCD <= '1';
        else
            TCU <= '0';
            TCD <= '0';
        end if;
    end process;

    CEOU <= TCU and CEU;
    CEOD <= TCD and CED;
end Behavioral;

```

## Verilog Inference Code

```

always @ (posedge C or negedge C)

```

```

begin
  if (R)
    begin
      Q <= 0;
      CEU_INT <= 1'b0;
      CED_INT <= 1'b1;
    end
  else if (L)
    begin
      Q <= D;
      CEU_INT <= CEU;
      CED_INT <= CED;
    end
  else if (CEU)
    begin
      Q <= Q + 1;
      CEU_INT <= 1;
      CED_INT <= 0;
    end
  else if (CED)
    begin
      Q <= Q - 1;
      CEU_INT <= 1'b0;
      CED_INT <= 1'b1;
    end
end

always @ (Q or CEU_INT or CED_INT)
begin
  if (Q == TERMINAL_COUNT_UP && CEU_INT)
    begin
      TCU_INT <= 1;
      TCD_INT <= 0;
    end
  else if ((Q == TERMINAL_COUNT_DOWN) && CED_INT)
    begin
      TCU_INT <= 0;
      TCD_INT <= 1;
    end
  else
    begin
      TCU_INT <= 0;
      TCD_INT <= 0;
    end
end

always @ (TCU_INT or CEU or TCD_INT or CED)
begin
  CEOU <= TCU_INT && CEU;
  CEOD <= TCD_INT && CED;
  TCU <= TCU_INT;
  TCD <= TCD_INT;
end

```





## CC8CE, CC16CE

### 8-, 16-Bit Cascadable Binary Counters with Clock Enable and Asynchronous Clear

#### Architectures Supported

CC8CE, CC16CE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

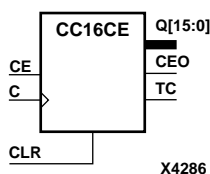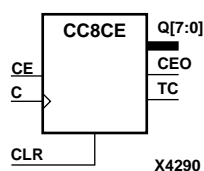

CC8CE and CC16CE are, respectively, 8- and 16-bit (stage), asynchronous clearable, cascadable binary counters. These counters are implemented using carry logic with relative location constraints to ensure efficient placement of logic. The asynchronous clear (CLR) is the highest priority input. When CLR is High, all other inputs are ignored; the Q outputs, terminal count (TC), and clock enable out (CEO) go to logic level zero, independent of clock transitions. The Q outputs increment when the clock enable input (CE) is High during the Low-to-High clock (C) transition. The counter ignores clock transitions when CE is Low. The TC output is High when all Q outputs are High.

Larger counters are created by connecting the count enable out (CEO) output of the first stage to the CE input of the next stage and connecting the C and CLR inputs in parallel. CEO is active (High) when TC and CE are High. The maximum length of the counter is determined by the accumulated CE-to-TC propagation delays versus the clock period. The clock period must be greater than  $n(t_{CE-TC})$ , where  $n$  is the number of stages and the time  $t_{CE-TC}$  is the CE-to-TC propagation delay of each stage. When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not.

The counter is asynchronously cleared, with Low outputs, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.


Inputs			Outputs		
CLR	CE	C	Qz – Q0	TC	CEO
1	X	X	0	0	0
0	0	X	No Chg	No Chg	0

Inputs			Outputs		
CLR	CE	C	Qz – Q0	TC	CEO
0	1	↑	Inc	TC	CEO

z = 7 for CC8CE; z = 15 for CC16CE


$$TC = Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0$$

$$CEO = TC \cdot CE$$

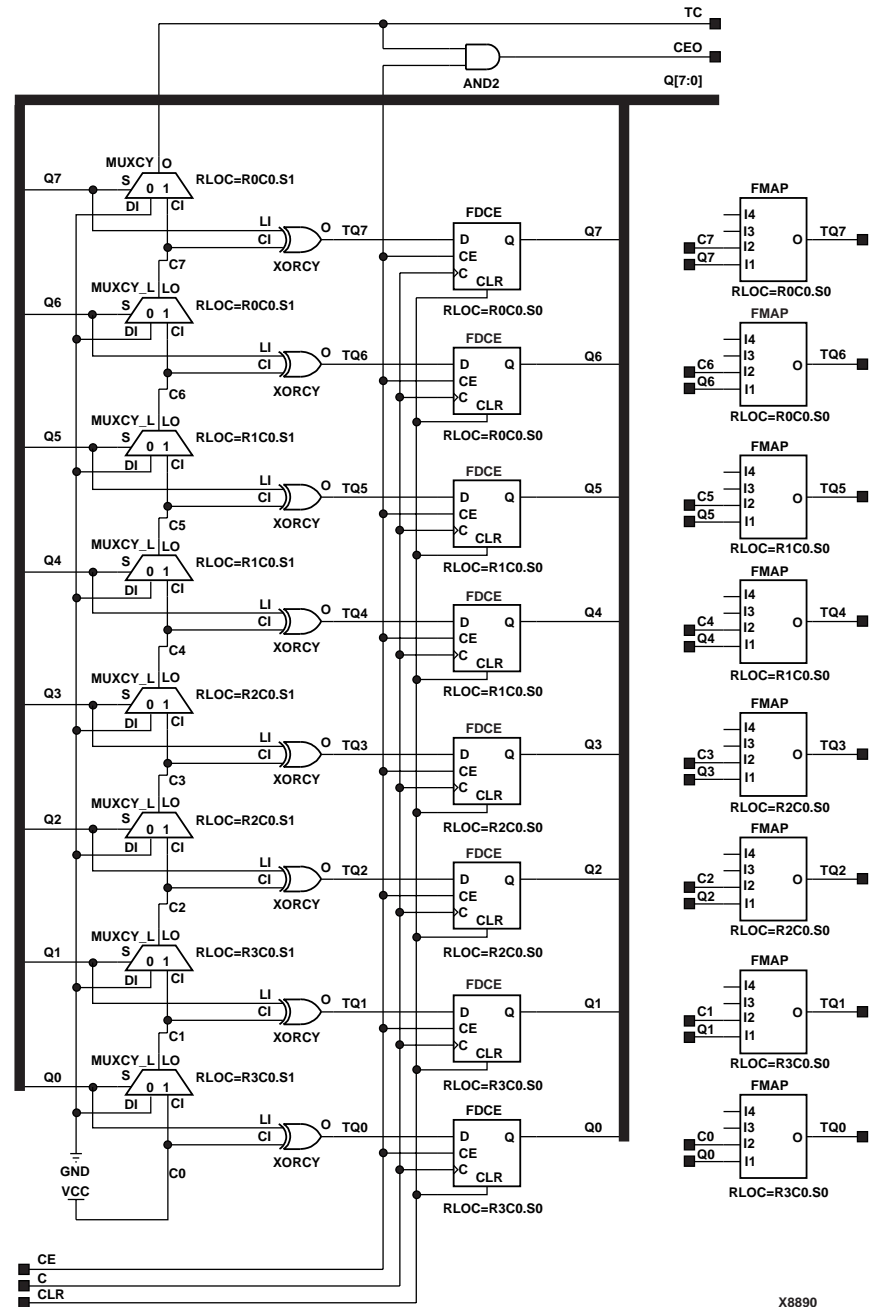

CC8CE Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E



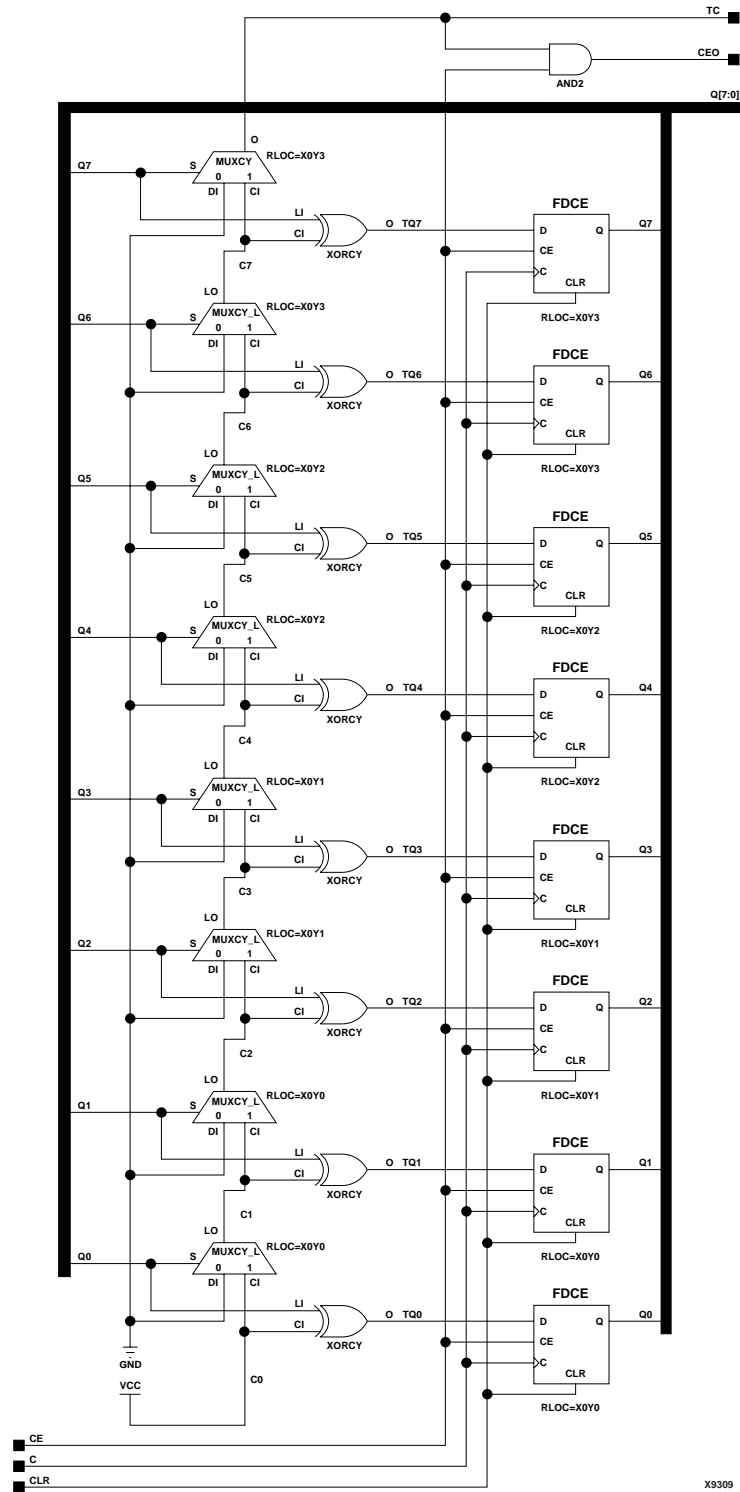

CC8CE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

## Usage

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of cc8ce is

    constant TERMINAL_COUNT : std_logic_vector(WIDTH-1 downto 0) :=
        (others => '1');

begin

    process(C, CLR)
    begin
        if (CLR='1') then
            Q <= (others => '0');
        elsif (C'event and C='1') then
            if (CE='1') then
                Q <= Q+1;
            end if;
        end if;
    end process;

    process (Q)
    begin
        if (Q = TERMINAL_COUNT) then
            TC <= '1';
        else
            TC <= '0';
        end if;
    end process;

    CEO <= TC and CE;

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or posedge CLR)
begin
  if (CLR)
    Q <= 0;
  else if (CE)
    Q <= Q + 1;
end

always @ (Q)
begin
  if (Q == TERMINAL_COUNT)
    TC <= 1;
  else
    TC <= 0;
end

always @ (TC or CE)
begin
  CEO <= TC & CE;
end
```





## CC8CLE, CC16CLE

### 8-, 16-Bit Loadable Cascadable Binary Counters with Clock Enable and Asynchronous Clear

#### Architectures Supported

CC8CLE, CC16CLE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

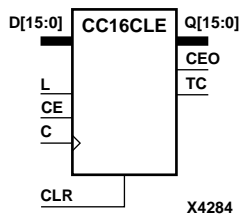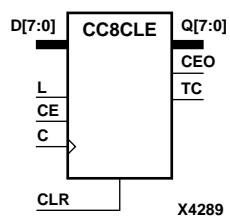

CC8CLE and CC16CLE are, respectively, 8- and 16-bit (stage), synchronously loadable, asynchronously clearable, cascadable binary counters. These counters are implemented using carry logic with relative location constraints to ensure efficient placement of logic.

The asynchronous clear (CLR) is the highest priority input. When CLR is High, all other inputs are ignored; the Q outputs, terminal count (TC), and clock enable out (CEO) go to logic level zero, independent of clock transitions. The data on the D inputs is loaded into the counter when the load enable input (L) is High during the Low-to-High clock (C) transition, independent of the state of clock enable (CE). The Q outputs increment when CE is High during the Low-to-High clock transition. The counter ignores clock transitions when CE is Low. The TC output is High when all Q outputs are High.

Larger counters are created by connecting the count enable out (CEO) output of the first stage to the CE input of the next stage and connecting the C, L, and CLR inputs in parallel. CEO is active (High) when TC and CE are High. The maximum length of the counter is determined by the accumulated CE-to-TC propagation delays versus the clock period. The clock period must be greater than  $n(t_{CE-TC})$ , where  $n$  is the number of stages and the time  $t_{CE-TC}$  is the CE-to-TC propagation delay of each stage. When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not.

The counter is asynchronously cleared, with Low output, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs					Outputs		
CLR	L	CE	C	Dz – D0	Qz – Q0	TC	CEO
1	X	X	X	X	0	0	0
0	1	X	↑	Dn	Dn	TC	CEO
0	0	0	X	X	No Chg	No Chg	0
0	0	1	↑	X	Inc	TC	CEO


z = 7 for CC8CLE; z = 15 for CC16CLE

TC =  $Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0$

CEO = TC • CE

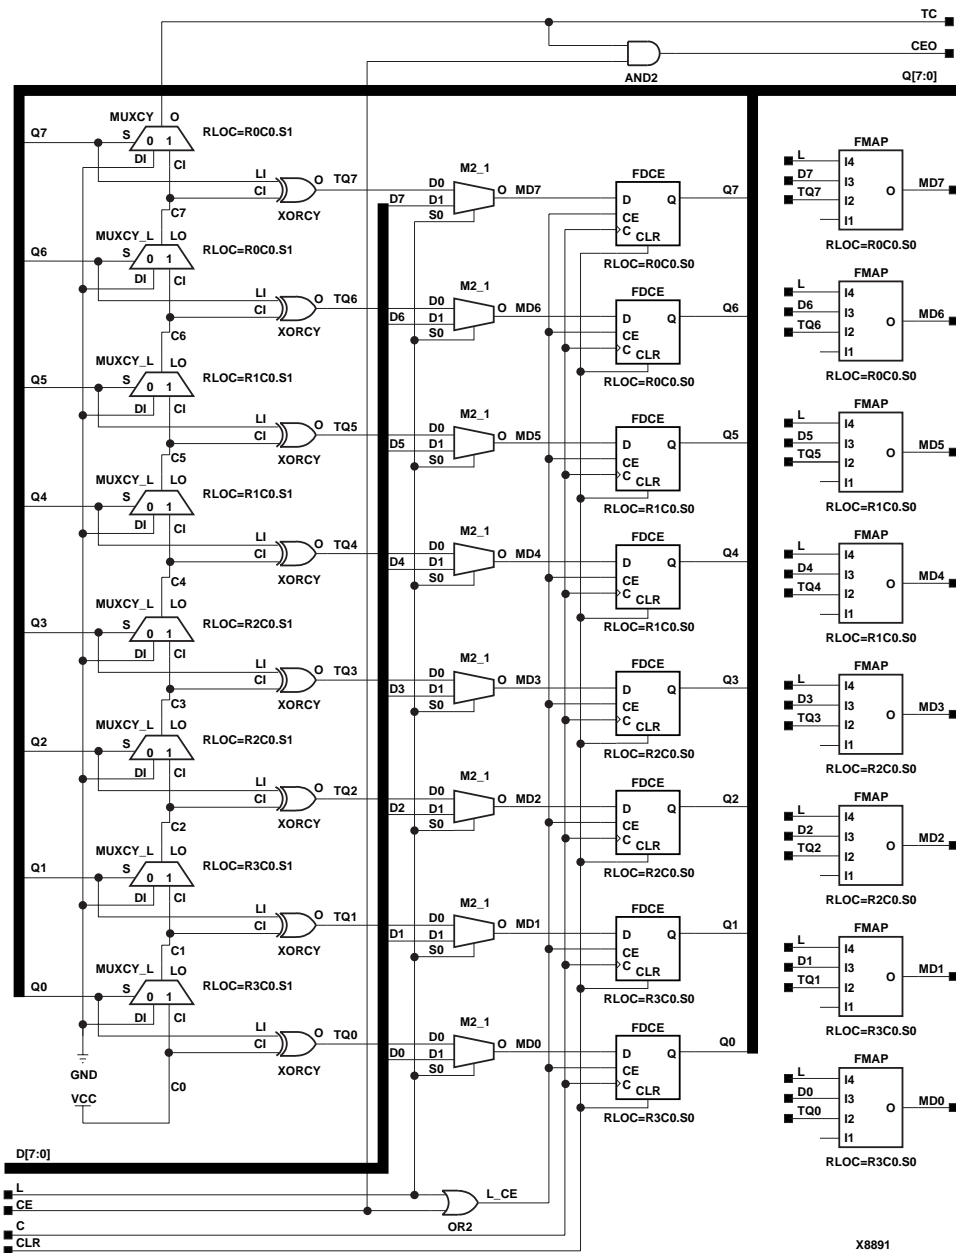

CC8CLE Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

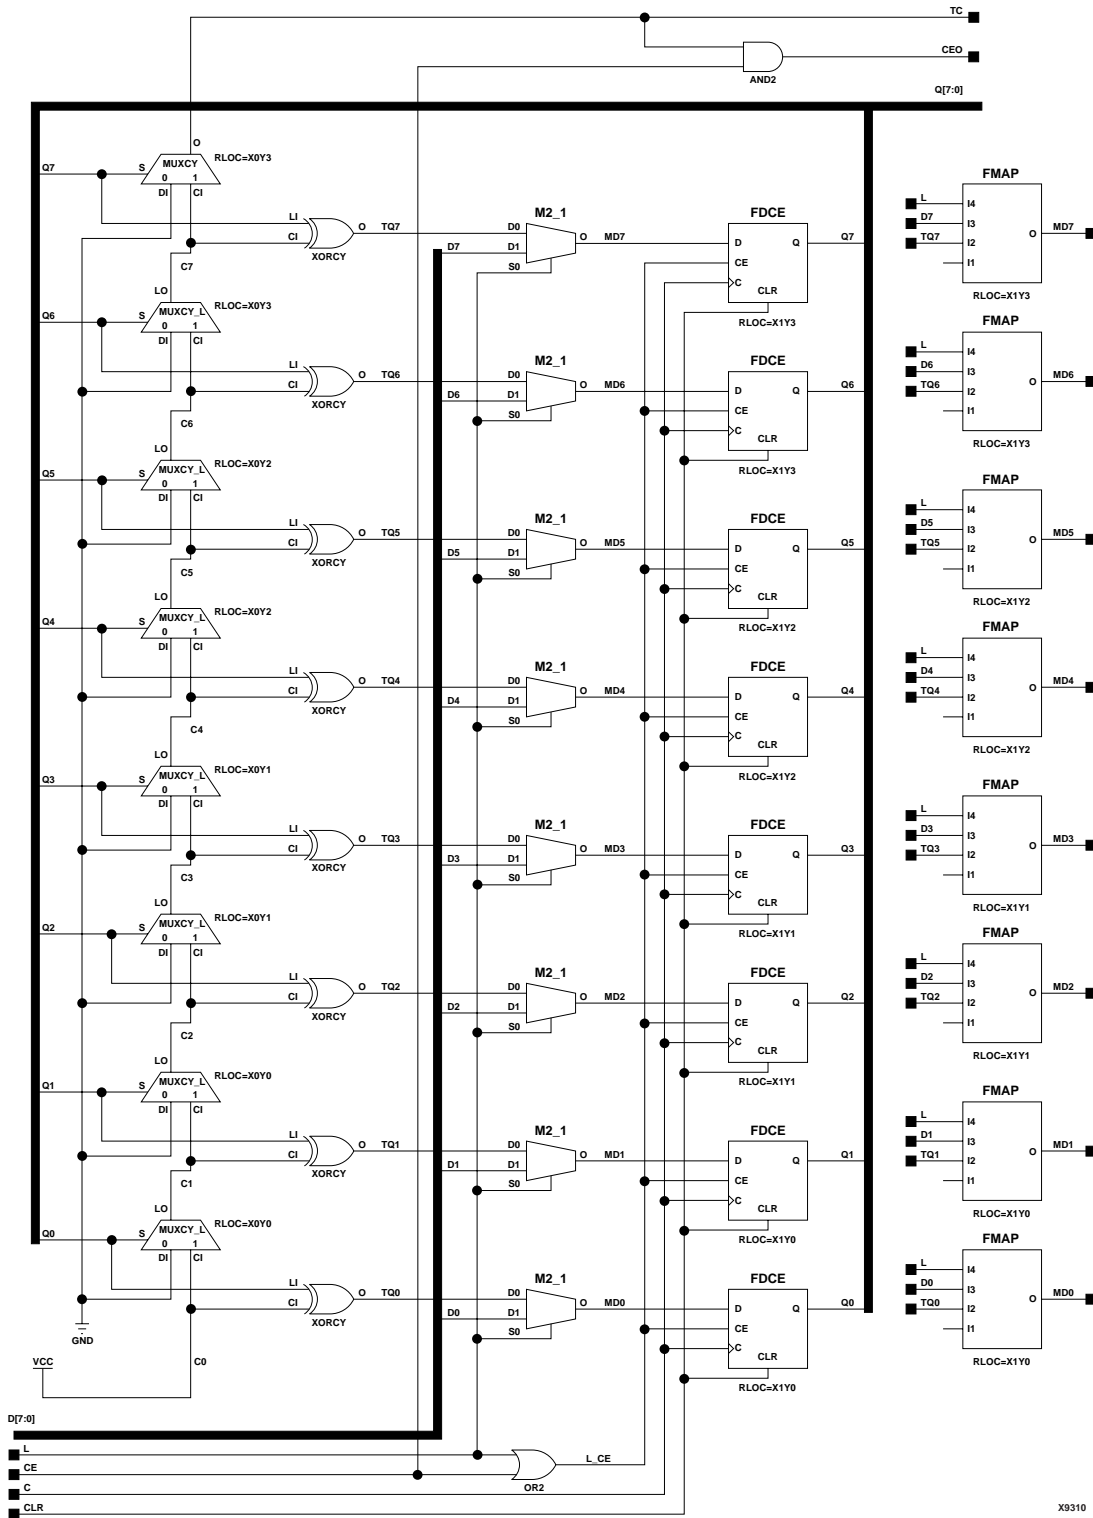

CC8CLE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X



## Usage

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

architecture Behavioral of cc8cle is

```
    constant TERMINAL_COUNT : std_logic_vector(WIDTH-1 downto 0) :=
        (others => '1');

begin

process(C, CLR)
begin
    if (CLR='1') then
        Q <= (others => '0');
    elsif (C'event and C='1') then
        if (L = '1') then
            Q <= D;
        elsif (CE='1') then
            Q <= Q+1;
        end if;
    end if;
end process;

process(Q)
begin
    if (Q = TERMINAL_COUNT) then
        TC <= '1';
    else
        TC <= '0';
    end if;
end process;

CEO <= TC and CE;

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or posedge CLR)
begin
  if (CLR)
    Q <= 0;
  else if (L)
    Q <= D;
  else if (CE)
    Q <= Q + 1;
end

always @ (Q)
begin
  if (Q == TERMINAL_COUNT)
    TC <= 1;
  else
    TC <= 0;
end



always @ (TC or CE)
begin
  CEO <= TC & CE;
end
```

## CC8CLED, CC16CLED

### 8-, 16-Bit Loadable Cascadable Bidirectional Binary Counters with Clock Enable and Asynchronous Clear

#### Architectures Supported

CC8CLED, CC16CLED	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

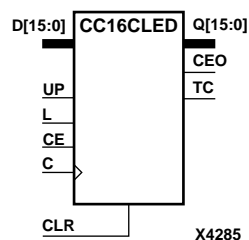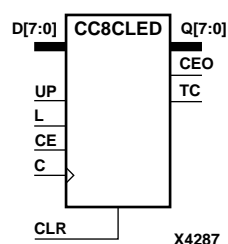

CC8CLED and CC16CLED are, respectively, 8- and 16-bit (stage), synchronously loadable, asynchronously clearable, cascadable, bidirectional binary counters. These counters are implemented using carry logic with relative location constraints, which assures most efficient logic placement.

The asynchronous clear (CLR) is the highest priority input. When CLR is High, all other inputs are ignored; the Q outputs, terminal count (TC), and clock enable out (CEO) go to logic level zero, independent of clock transitions. The data on the D inputs is loaded into the counter when the load enable input (L) is High during the Low-to-High clock (C) transition, independent of the state of clock enable (CE). The Q outputs decrement when CE is High and UP is Low during the Low-to-High clock transition. The Q outputs increment when CE and UP are High. The counter ignores clock transitions when CE is Low.

For counting up, the TC output is High when all Q outputs and UP are High. For counting down, the TC output is High when all Q outputs and UP are Low. To cascade counters, the count enable out (CEO) output of each counter is connected to the CE pin of the next stage. The clock, UP, L, and CLR inputs are connected in parallel. CEO is active (High) when TC and CE are High. The maximum length of the counter is determined by the accumulated CE-to-TC propagation delays versus the clock period. The clock period must be greater than  $n(t_{CE-TC})$ , where  $n$  is the number of stages and the time  $t_{CE-TC}$  is the CE-to-TC propagation delay of each stage. When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not.

The counter is asynchronously cleared, outputs Low, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs						Outputs		
CLR	L	CE	C	UP	Dz – D0	Qz – Q0	TC	CEO
1	X	X	X	X	X	0	0	0
0	1	X	↑	X	Dn	Dn	TC	CEO
0	0	0	X	X	X	No Chg	No Chg	0
0	0	1	↑	1	X	Inc	TC	CEO
0	0	1	↑	0	X	Dec	TC	CEO


$z = 7$  for CC8CLED;  $z = 15$  for CC16CLED

$$TC = (Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0 \cdot UP) + (Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0 \cdot \overline{UP})$$

$$CEO = TC \cdot CE$$

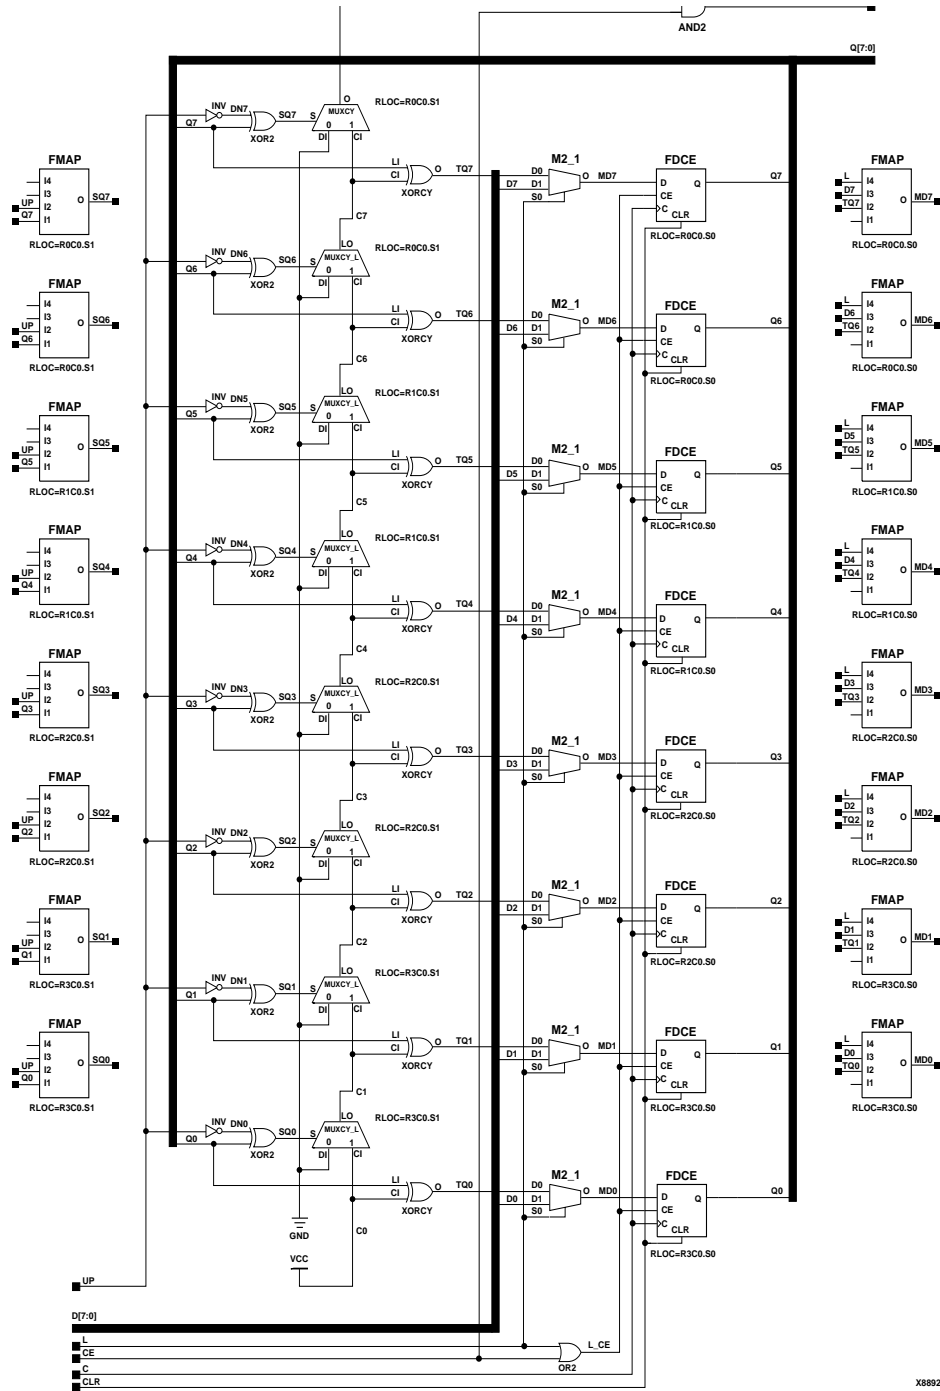

CC8CLED Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

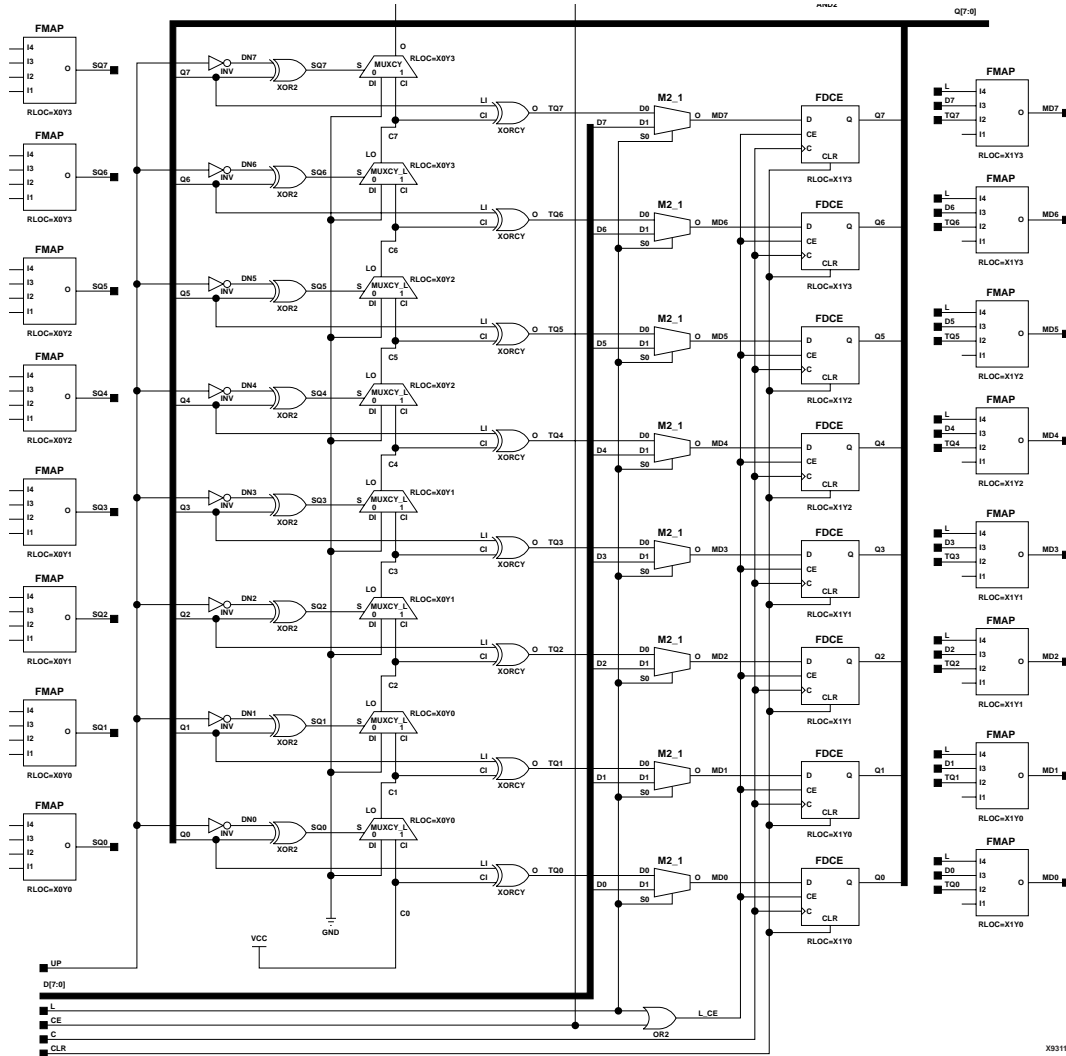

**CC8CLEd Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

**Usage**

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

```

architecture Behavioral of cc8cled is

    constant TERMINAL_COUNT_UP : std_logic_vector(WIDTH-1 downto 0) :=
        (others => '1');
    constant TERMINAL_COUNT_DOWN : std_logic_vector(WIDTH-1 downto 0) :=
        (others => '0');

begin

process(C, CLR)
begin
    if (CLR='1') then
        Q <= (others => '0');
    elsif (C'event and C='1') then
        if (L = '1') then
            Q <= D;
        elsif (CE='1') then
            if (UP='1') then
                Q <= Q+1;
            elsif (UP='0') then
                Q <= Q-1;
            end if;
        end if;
    end if;
end process;

process(Q, UP)
begin
    if (((Q = TERMINAL_COUNT_UP) and (UP = '1')) or
        ((Q = TERMINAL_COUNT_DOWN) and (UP = '0'))) then
        TC<='1';
    else
        TC<='0';
    end if;
end process;

CEO<=TC and CE;

end Behavioral;

```

## Verilog Inference Code

```

always @ (posedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else if (L)
        Q <= D;
    else if (CE)
        begin
            if (UP)
                Q <= Q + 1;
            else if (!UP)
                Q <= Q - 1;
        end
end

```

```
        end
    end

    always @ (Q or UP)
    begin
        if ((Q == TERMINAL_COUNT_UP && UP) || (Q == TERMINAL_COUNT_DOWN &&
            !UP))
            TC <= 1;
        else
            TC <= 0;
        end
    end

    always @ (TC or CE)
    begin
        CEO <= TC & CE;
    end
end
```









## CC8RE, CC16RE

### 8-, 16-Bit Cascadable Binary Counters with Clock Enable and Synchronous Reset

#### Architectures Supported

CC8RE, CC16RE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

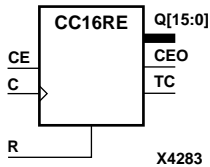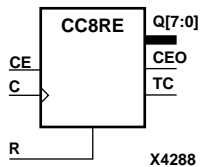

CC8RE and CC16RE are, respectively, 8- and 16-bit (stage), synchronous resettable, cascadable binary counters. These counters are implemented using carry logic with relative location constraints to ensure efficient placement of logic. The synchronous reset (R) is the highest priority input. When R is High, all other inputs are ignored; the Q outputs, terminal count (TC), and clock enable (CEO) go to logic level zero on the Low-to-High clock (C) transition. The Q outputs increment when the clock enable input (CE) is High during the Low-to-High clock transition. The counter ignores clock transitions when CE is Low. The TC output is High when all Q outputs and CE are High.

Larger counters are created by connecting the CEO output of the first stage to the CE input of the next stage and connecting the C and R inputs in parallel. CEO is active (High) when TC and CE are High. The maximum length of the counter is determined by the accumulated CE-to-TC propagation delays versus the clock period. The clock period must be greater than  $n(t_{CE-TC})$ , where  $n$  is the number of stages and the time  $t_{CE-TC}$  is the CE-to-TC propagation delay of each stage. When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not.

The counter is asynchronously cleared, with Low outputs, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.


Inputs			Outputs		
R	CE	C	Qz – Q0	TC	CEO
1	X	↑	0	0	0
0	0	X	No Chg	No Chg	0

Inputs			Outputs		
R	CE	C	Qz – Q0	TC	CEO
0	1	↑	Inc	TC	CEO


$z = 7$  for CC8RE;  $z = 15$  for CC16RE

$TC = Qz \cdot Q(z-1) \cdot Q(z-2) \cdot \dots \cdot Q0 \cdot CE$

$CEO = TC \cdot CE$

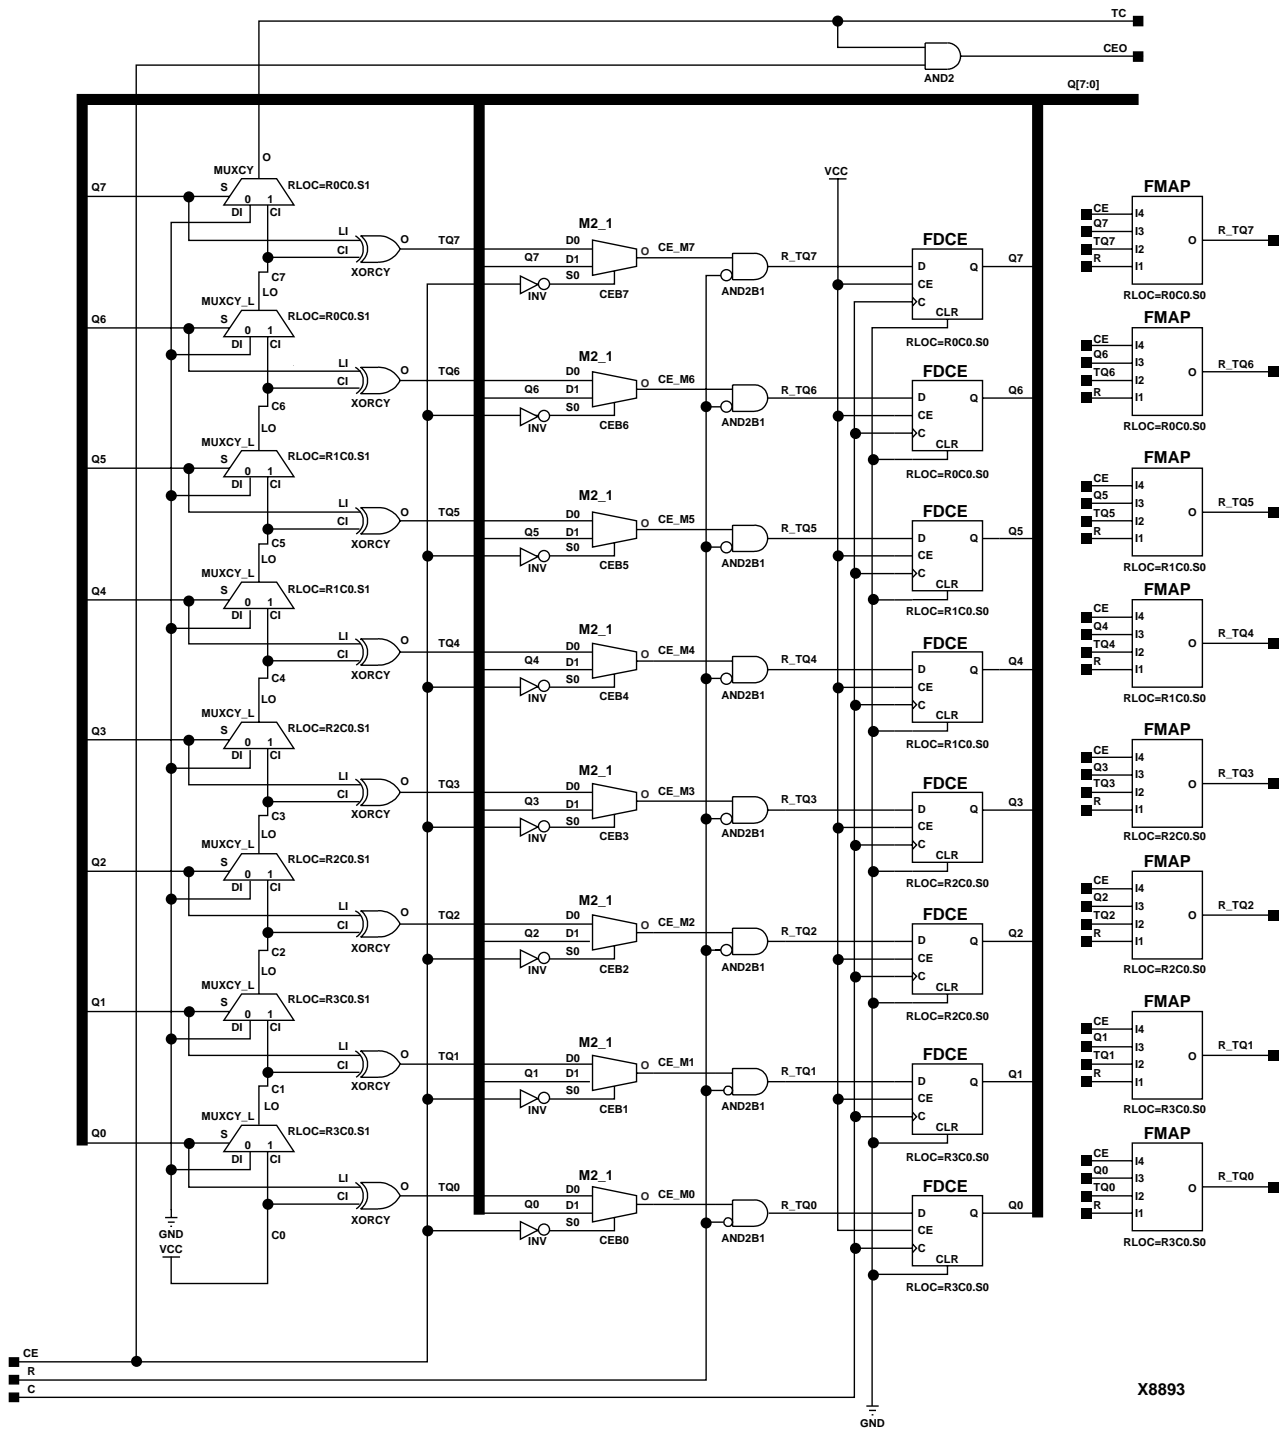

CC8RE Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

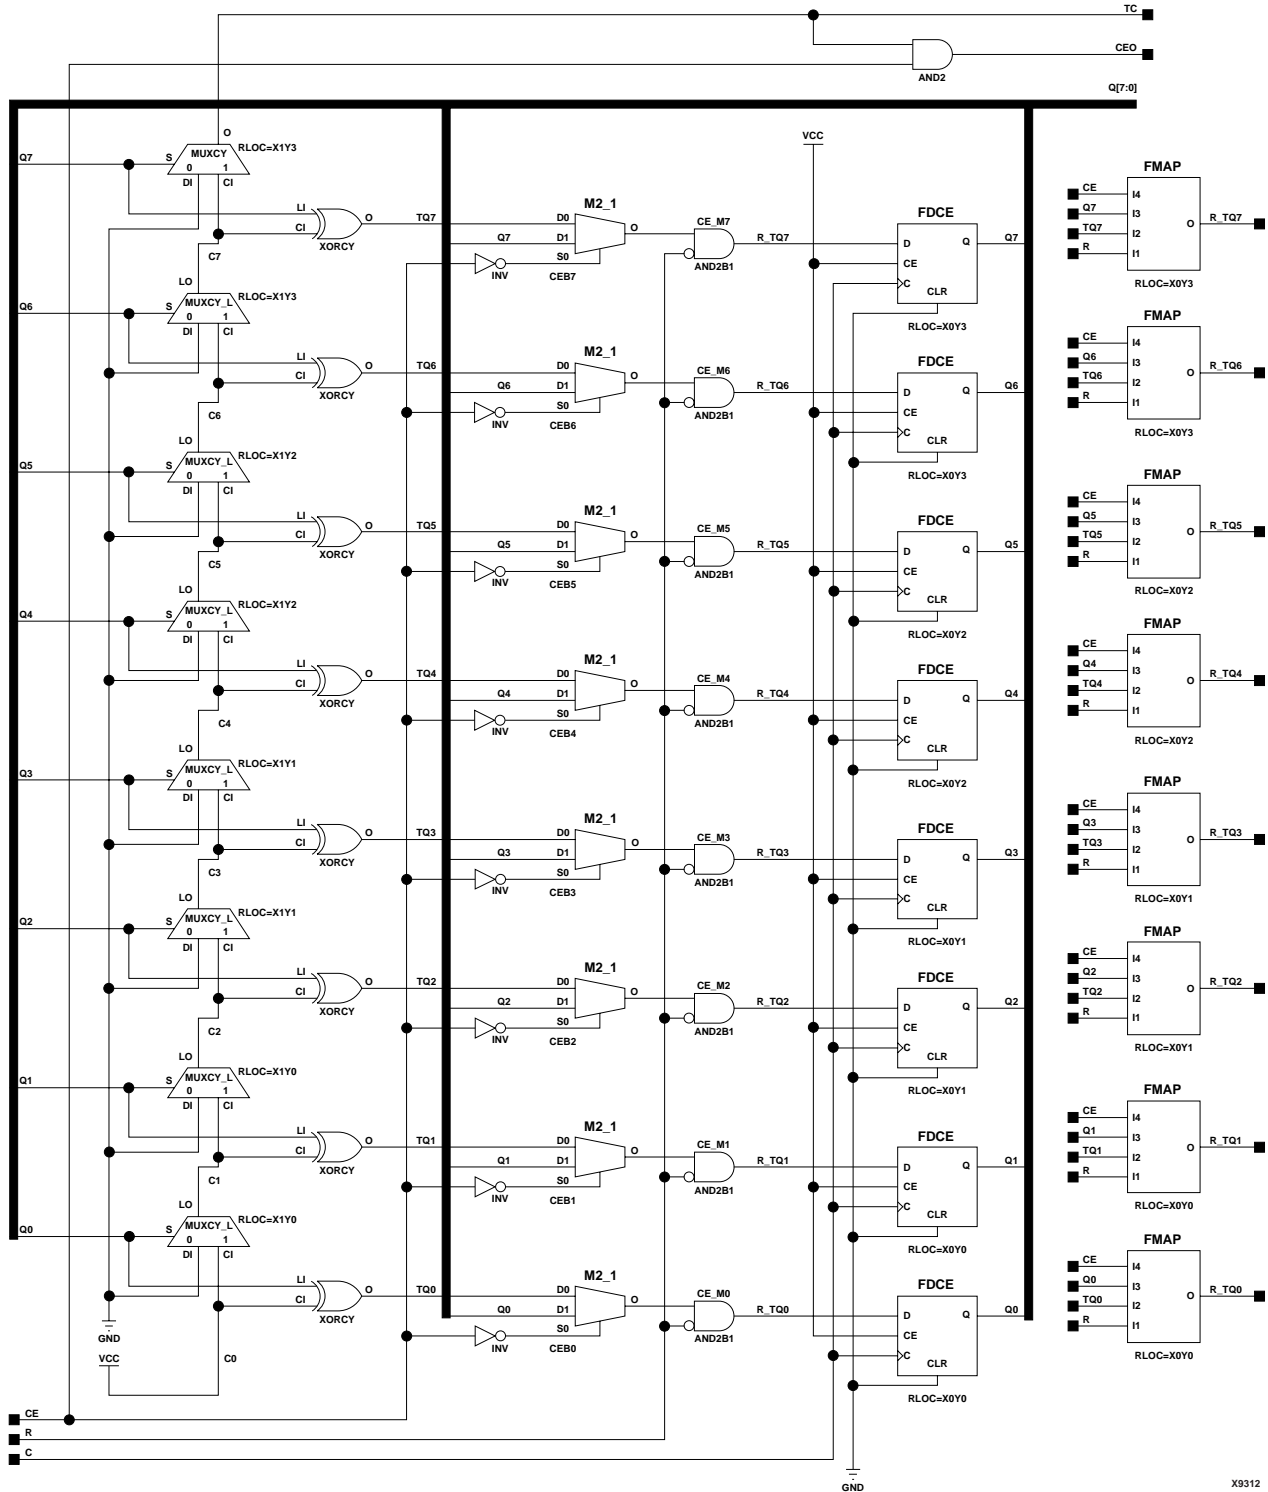

CC8RE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

## Usage

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of cc8re is

    constant TERMINAL_COUNT : std_logic_vector(WIDTH-1 downto 0) :=
        (others => '1');

begin

    process(C, R)
    begin
        if (C'event and C='1') then
            if (R='1') then
                Q <= (others => '0');
            elsif (CE='1') then
                Q <= Q+1;
            end if;
        end if;
    end process;

    process(Q)
    begin
        if (Q = TERMINAL_COUNT) then
            TC<='1';
        else
            TC<='0';
        end if;
    end process;

    CEO<=TC and CE;

end Behavioral;
```

## Verilog Inference Code

```
always @(posedge C)
begin
    if (R)
        Q <= 0;
    else if (CE)
        Q <= Q + 1;
end

always @(Q)
begin
    if (Q == TERMINAL_COUNT)
        TC <= 1;
    else
        TC <= 0;
end

always @(TC or CE)
begin
    CEO <= TC & CE;
end
```




## CD4CE

### 4-Bit Cascadable BCD Counter with Clock Enable and Asynchronous Clear


#### Architectures Supported

CD4CE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

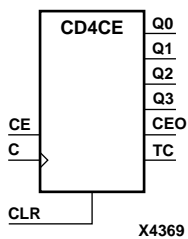

CD4CE is a 4-bit (stage), asynchronous clearable, cascadable binary-coded-decimal (BCD) counter. The asynchronous clear input (CLR) is the highest priority input. When CLR is High, all other inputs are ignored; the Q outputs, terminal count (TC), and clock enable out (CEO) go to logic level zero, independent of clock transitions. The Q outputs increment when clock enable (CE) is High during the Low-to-High clock (C) transition. The counter ignores clock transitions when CE is Low. The TC output is High when Q3 and Q0 are High and Q2 and Q1 are Low.

The counter recovers from any of six possible illegal states and returns to a normal count sequence within two clock cycles for Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X as shown in the following state diagram. For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the counter resets to zero or recovers within the first clock cycle.

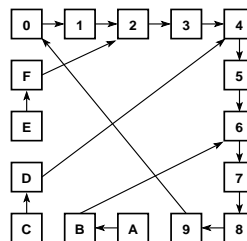

X2355

Larger counters are created by connecting the count enable out (CEO) output of the first stage to the CE input of the next stage and connecting the CLR and clock inputs in parallel. CEO is active (High) when TC and CE are High. The maximum length of the counter is determined by the accumulated CE-to-TC propagation delays versus the clock period. The clock period must be greater than  $n(t_{CE-TC})$ , where  $n$  is the number of stages and the time  $t_{CE-TC}$  is the CE-to-TC propagation delay of each stage.

When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not.

The counter is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse to the PRLD global net.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.


Inputs			Outputs					
CLR	CE	C	Q3	Q2	Q1	Q0	TC	CEO
1	X	X	0	0	0	0	0	0
0	1	↑	Inc	Inc	Inc	Inc	TC	CEO
0	0	X	No Chg	No Chg	No Chg	No Chg	TC	0
0	1	X	1	0	0	1	1	1

$$TC = Q3 \cdot !Q2 \cdot !Q1 \cdot Q0$$

$$CEO = TC \cdot CE$$

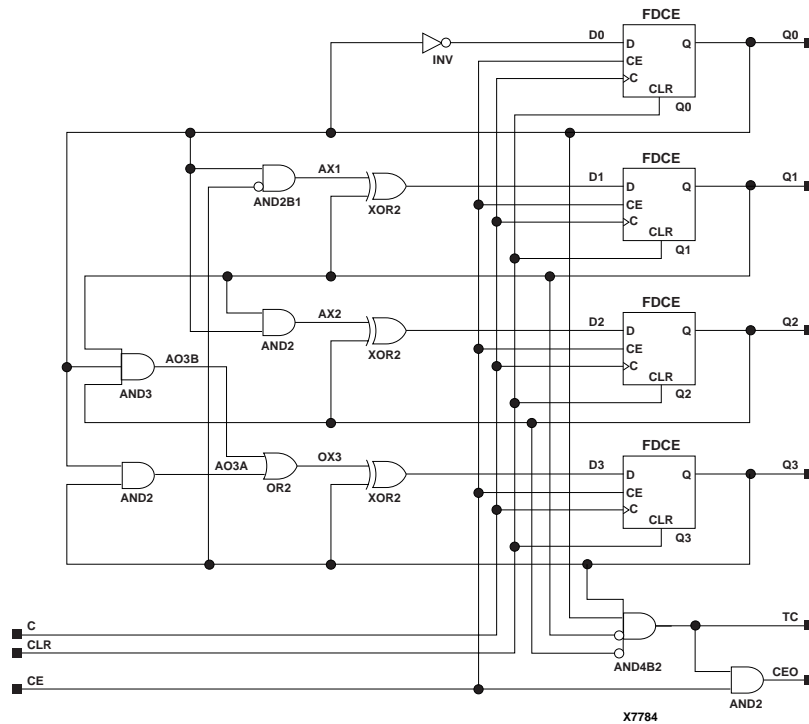

CD4CE Implementation Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X

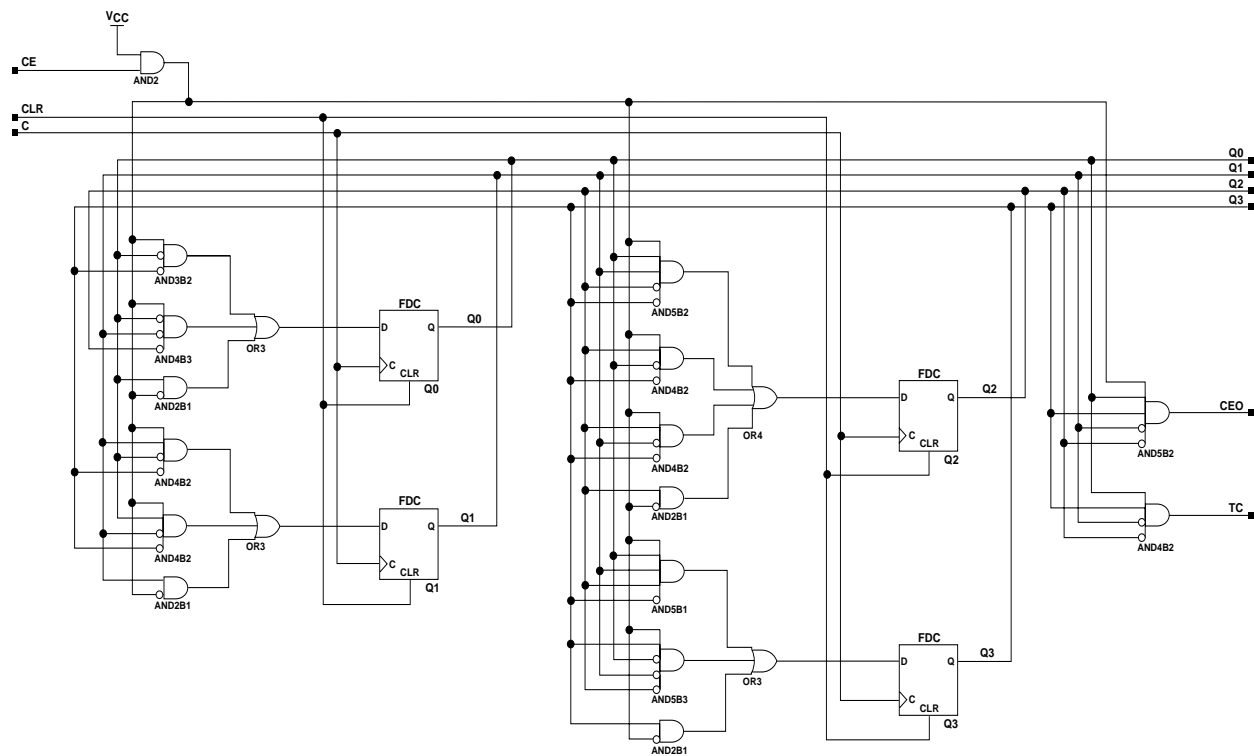

X7629

## CD4CE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

### Usage

For HDL, this design element can be inferred.

### VHDL Inference Code

architecture Behavioral of cd4ce is

begin

```

process (C, CLR)
begin
  if (CLR = '1') then
    Q <= "0000";
  elsif (C'event and C = '1') then
    if (CE = '1') then
      if (Q = "1001") then
        Q <= "0000";
      elsif (Q = "1011") then
        Q <= "0110";
      elsif (Q = "1101") then
        Q <= "0100";
      elsif (Q = "1111") then
        Q <= "0010";
      else
        Q <= Q + 1;
      end if;
    end if;
  end if;
end process;

```

```
        end if;
    end if;
end if;
end process;

process (Q)
begin
    if (Q = "1001") then
        TC_INT <= '1';
    else
        TC_INT <= '0';
    end if;
end process;

TC <= TC;

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else if (CE)
        begin
            if (Q == 4'b1001)
                Q <= 4'b0000;
            else if (Q == 4'b1011)
                Q <= 4'b0110;
            else if (Q == 4'b1101)
                Q <= 4'b0100;
            else if (Q == 4'b1111)
                Q <= 4'b0010;
            else
                Q <= Q + 1;
        end
    end
end

always @ (Q)
begin
    if (Q == 4'b1001)
        TC <= 1;
    else
        TC <= 0;
    end
end


always @ (TC or CE)
begin
    CEO <= TC && CE;
end
end
```

## CD4CLE

### 4-Bit Loadable Cascadable BCD Counter with Clock Enable and Asynchronous Clear

#### Architectures Supported


CD4CLE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

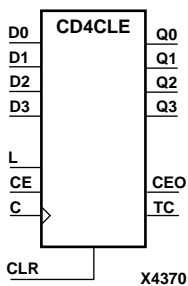

CD4CLE is a 4-bit (stage), synchronously loadable, asynchronously clearable, binary-coded-decimal (BCD) counter. The asynchronous clear input (CLR) is the highest priority input. When CLR is High, all other inputs are ignored; the Q outputs, terminal count (TC), and clock enable out (CEO) go to logic level zero, independent of clock transitions. The data on the D inputs is loaded into the counter when the load enable input (L) is High during the Low-to-High clock (C) transition. The Q outputs increment when clock enable input (CE) is High during the Low- to-High clock transition. The counter ignores clock transitions when CE is Low. The TC output is High when Q3 and Q0 are High and Q2 and Q1 are Low.

The counter recovers from any of six possible illegal states and returns to a normal count sequence within two clock cycles for Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X as shown in the following state diagram.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the counter resets to zero or recovers within the first clock cycle.

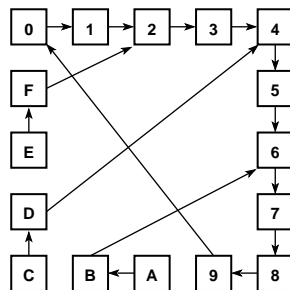

X2355

Larger counters are created by connecting the count enable out (CEO) output of the first stage to the CE input of the next stage and connecting the CLR, L, and C inputs in

parallel. CEO is active (High) when TC and CE are High. The maximum length of the counter is determined by the accumulated CE-to-TC propagation delays versus the clock period. The clock period must be greater than  $n(t_{CE-TC})$ , where  $n$  is the number of stages and the time  $t_{CE-TC}$  is the CE-to-TC propagation delay of each stage. When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not.

The counter is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.


Spartan-II, Spartan-IIIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.


Inputs					Outputs					
CLR	L	CE	D3 – D0	C	Q3	Q2	Q1	Q0	TC	CEO
1	X	X	X	X	0	0	0	0	0	0
0	1	X	D3 – D0	↑	D3	D2	D1	D0	TC	CEO
0	0	1	X	↑	Inc	Inc	Inc	Inc	TC	CEO
0	0	0	X	X	No Chg	No Chg	No Chg	No Chg	TC	0
0	0	1	X	X	1	0	0	1	1	1

$$TC = Q3 \cdot !Q2 \cdot !Q1 \cdot Q0$$

$$CEO = TC \cdot CE$$

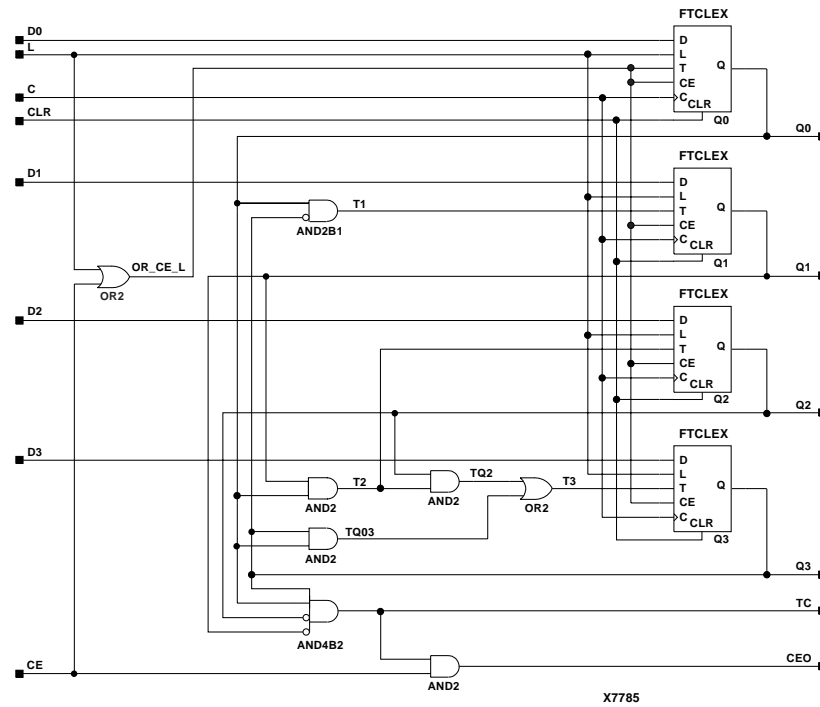

**CD4CLE Implementation Spartan-II, Spartan-IIIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

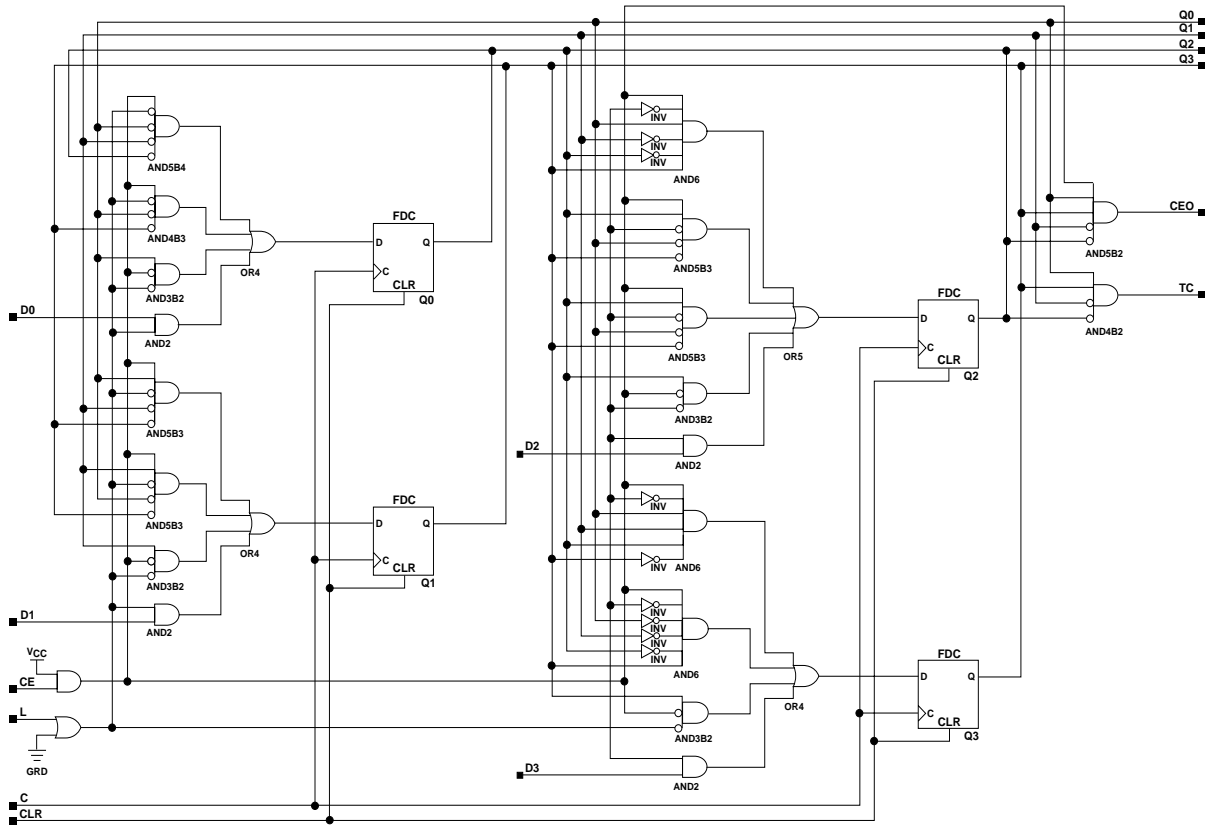

**CD4CLE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

**Usage**

For HDL, this design element can be inferred.

**VHDL Inference Code**

architecture Behavioral of cd4cle is

begin

```

process (C, CLR)
begin
  if (CLR = '1') then
    Q <= "0000";
  elsif (C'event and C = '1') then
    if (L = '1') then
      Q <= D;
    elsif (CE = '1') then
      if (Q = "1001") then
        Q <= "0000";
      elsif (Q = "1011") then
        Q <= "0110";
      elsif (Q = "1101") then
        Q <= "0100";
      elsif (Q = "1111") then

```



```

        Q <= "0010";
    else
        Q <= Q + 1;
    end if;
end if;
end if;
end process;

process (Q)
begin
    if (Q = "1001") then
        TC_INT <= '1';
    else
        TC_INT <= '0';
    end if;
end process;

CEO <= TC and CE;

end Behavioral;

```

## Verilog Inference Code

```

always @ (posedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else if (L)
        Q <= D;
    else if (CE)
        begin
            if (Q == 4'b1001)
                Q <= 4'b0000;
            else if (Q == 4'b1011)
                Q <= 4'b0110;
            else if (Q == 4'b1101)
                Q <= 4'b0100;
            else if (Q == 4'b1111)
                Q <= 4'b0010;
            else
                Q <= Q + 1;
        end
    end
end

always @ (Q)
begin
    if (Q == 4'b1001)
        TC <= 1;
    else
        TC <= 0;
    end
end

always @(TC or CE)
begin
    CEO <= TC && CE;
end
end

```




## CD4RE

### 4-Bit Cascadable BCD Counter with Clock Enable and Synchronous Reset


#### Architectures Supported

CD4RE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

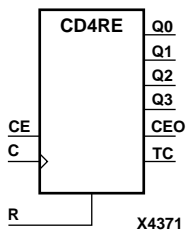

CD4RE is a 4-bit (stage), synchronous resettable, cascadable binary-coded-decimal (BCD) counter. The synchronous reset input (R) is the highest priority input. When R is High, all other inputs are ignored; the Q outputs, terminal count (TC), and clock enable out (CEO) go to logic level zero on the Low-to-High clock (C) transition. The Q outputs increment when the clock enable input (CE) is High during the Low-to-High clock transition. The counter ignores clock transitions when CE is Low. The TC output is High when Q3 and Q0 are High and Q2 and Q1 are Low.

The counter recovers from any of six possible illegal states and returns to a normal count sequence within two clock cycles for Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X as shown in the following state diagram. For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the counter resets to zero or recovers within the first clock cycle.

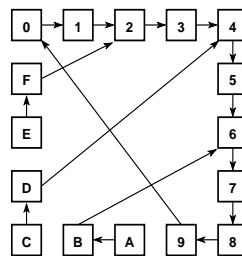

X2355

Larger counters are created by connecting the count enable out (CEO) output of the first stage to the CE input of the next stage and connecting the R and clock inputs in parallel. CEO is active (High) when TC and CE are High. The maximum length of the counter is determined by the accumulated CE-to-TC propagation delays versus the clock period. The clock period must be greater than  $n(t_{CE-TC})$ , where  $n$  is the number

of stages and the time  $t_{CE-TC}$  is the CE-to-TC propagation delay of each stage. When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not.

The counter is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.


Inputs			Outputs					
R	CE	C	Q3	Q2	Q1	Q0	TC	CEO
1	X	↑	0	0	0	0	0	0
0	1	↑	Inc	Inc	Inc	Inc	TC	CEO
0	0	X	No Chg	No Chg	No Chg	No Chg	TC	0
0	1	X	1	0	0	1	1	1

$$TC = Q3 \cdot !Q2 \cdot !Q1 \cdot Q0$$

$$CEO = TC \cdot CE$$

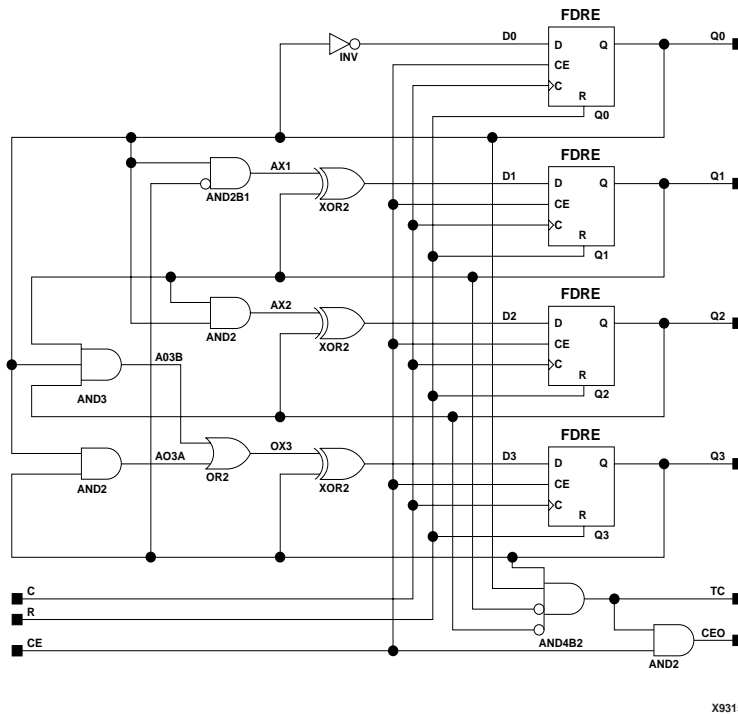

CD4RE Implementation Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X

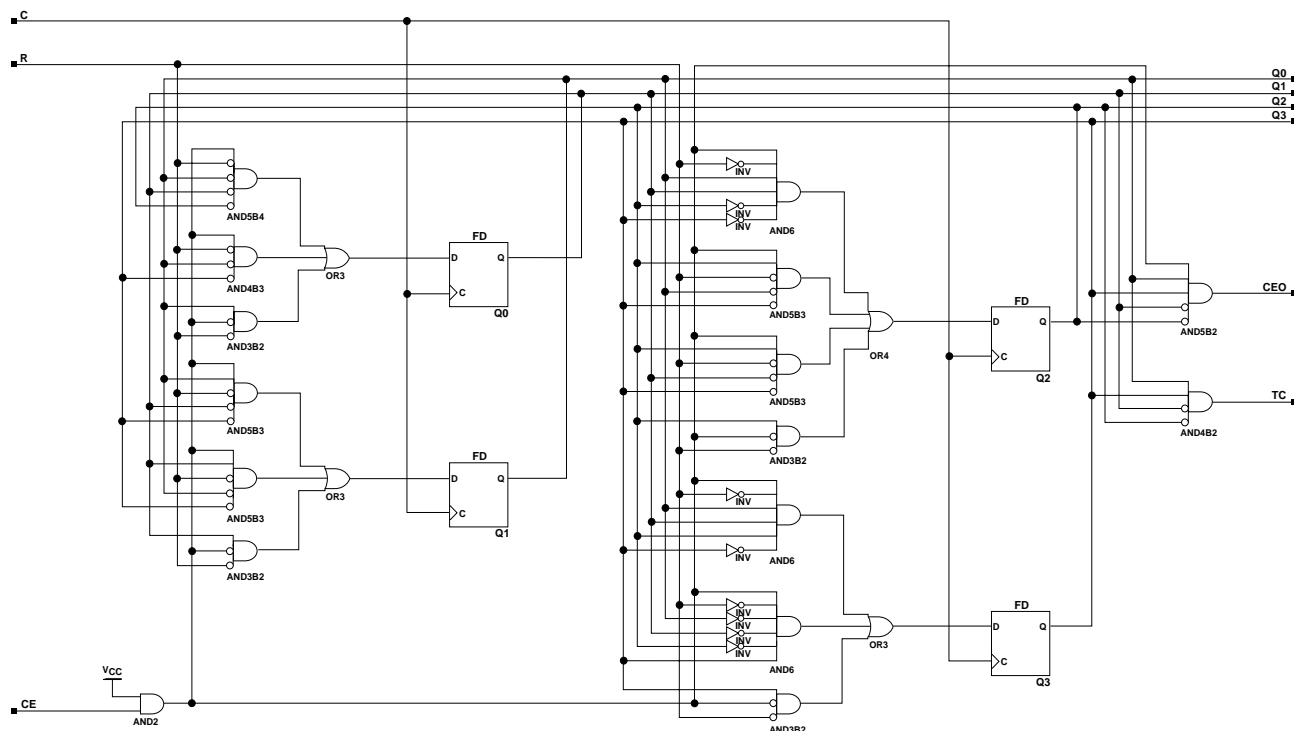

X7627

## CD4RE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

### Usage

For HDL, this design element can be inferred.

### VHDL Inference Code

architecture Behavioral of cd4re is

```
begin
  process (C)
  begin
    if (C'event and C = '1') then
      if (R = '1') then
        Q <= "0000";
      elsif (CE = '1') then
        if (Q = "1001") then
          Q <= "0000";
        elsif (Q = "1011") then
          Q <= "0110";
        elsif (Q = "1101") then
          Q <= "0100";
        elsif (Q = "1111") then
          Q <= "0010";
        else
          Q <= Q + 1;
        end if;
      end if;
    end if;
  end process;
end architecture;
```

```
    end if;
end process;

process (Q)
begin
    if (Q = "1001") then
        TC <= '1';
    else
        TC <= '0';
    end if;
end process;

CEO <= TC and CE;

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C)
begin
    if (R)
        Q <= 0;
    else if (CE)
        begin
            if (Q == 4'b1001)
                Q <= 4'b0000;
            else if (Q == 4'b1011)
                Q <= 4'b0110;
            else if (Q == 4'b1101)
                Q <= 4'b0100;
            else if (Q == 4'b1111)
                Q <= 4'b0010;
            else
                Q <= Q + 1;
        end
    end
end

always @ (Q)
begin
    if (Q == 4'b1001)
        TC <= 1;
    else
        TC <= 0;
    end
end


always @(TC or CE)
begin
    CEO <= TC && CE;
end
end
```

## CD4RLE

### 4-Bit Loadable Cascadable BCD Counter with Clock Enable and Synchronous Reset


#### Architectures Supported

CD4RLE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

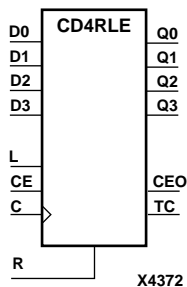

CD4RLE is a 4-bit (stage), synchronous loadable, resettable, binary-coded-decimal (BCD) counter. The synchronous reset input (R) is the highest priority input. When R is High, all other inputs are ignored; the Q outputs, terminal count (TC), and clock enable out (CEO) go to logic level zero on the Low-to-High clock transitions. The data on the D inputs is loaded into the counter when the load enable input (L) is High during the Low-to-High clock (C) transition. The Q outputs increment when the clock enable input (CE) is High during the Low-to-High clock transition. The counter ignores clock transitions when CE is Low. The TC output is High when Q3 and Q0 are High and Q2 and Q1 are Low.

The counter recovers from any of six possible illegal states and returns to a normal count sequence within two clock cycles for Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X as shown in the following state diagram. For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the counter resets to zero or recovers within the first clock cycle.

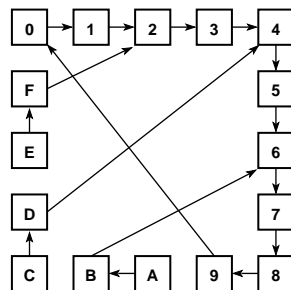

X2355

Larger counters are created by connecting the count enable out (CEO) output of the first stage to the CE input of the next stage and connecting the R, L, and C inputs in parallel. CEO is active (High) when TC and CE are High. The maximum length of the counter is determined by the accumulated CE-to-TC propagation delays versus the clock period. The clock period must be greater than  $n(t_{CE-TC})$ , where  $n$  is the number

of stages and the time  $t_{CE-TC}$  is the CE-to-TC propagation delay of each stage. When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not.

The counter is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs					Outputs					
R	L	CE	D3 – D0	C	Q3	Q2	Q1	Q0	TC	CEO
1	X	X	X	↑	0	0	0	0	0	0
0	1	X	D3 – D0	↑	D3	D	D	D0	TC	CEO
0	0	1	X	↑	Inc	Inc	Inc	Inc	TC	CEO
0	0	0	X	X	No Chg	No Chg	No Chg	No Chg	TC	0
0	0	1	X	X	1	0	0	1	1	1


$$TC = Q3 \cdot !Q2 \cdot !Q1 \cdot Q0$$

$$CEO = TC \cdot CE$$



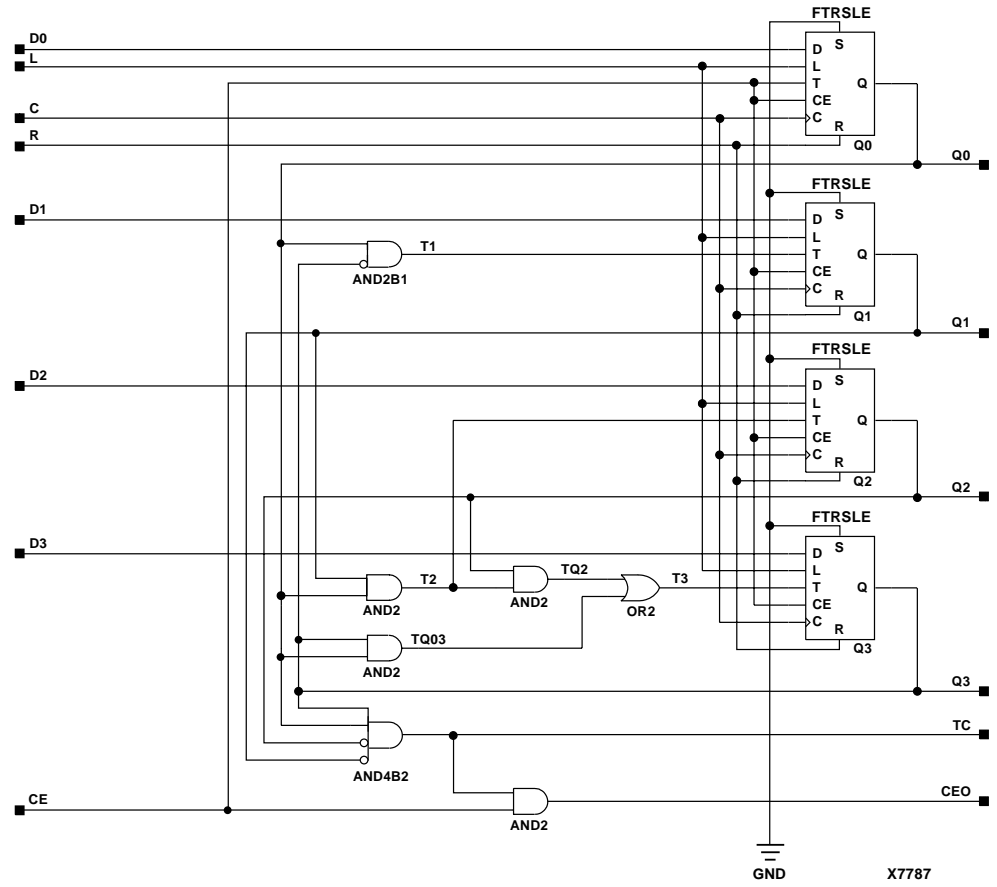

CD4RLE Implementation Spartan-II, Spartan-IIe, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X

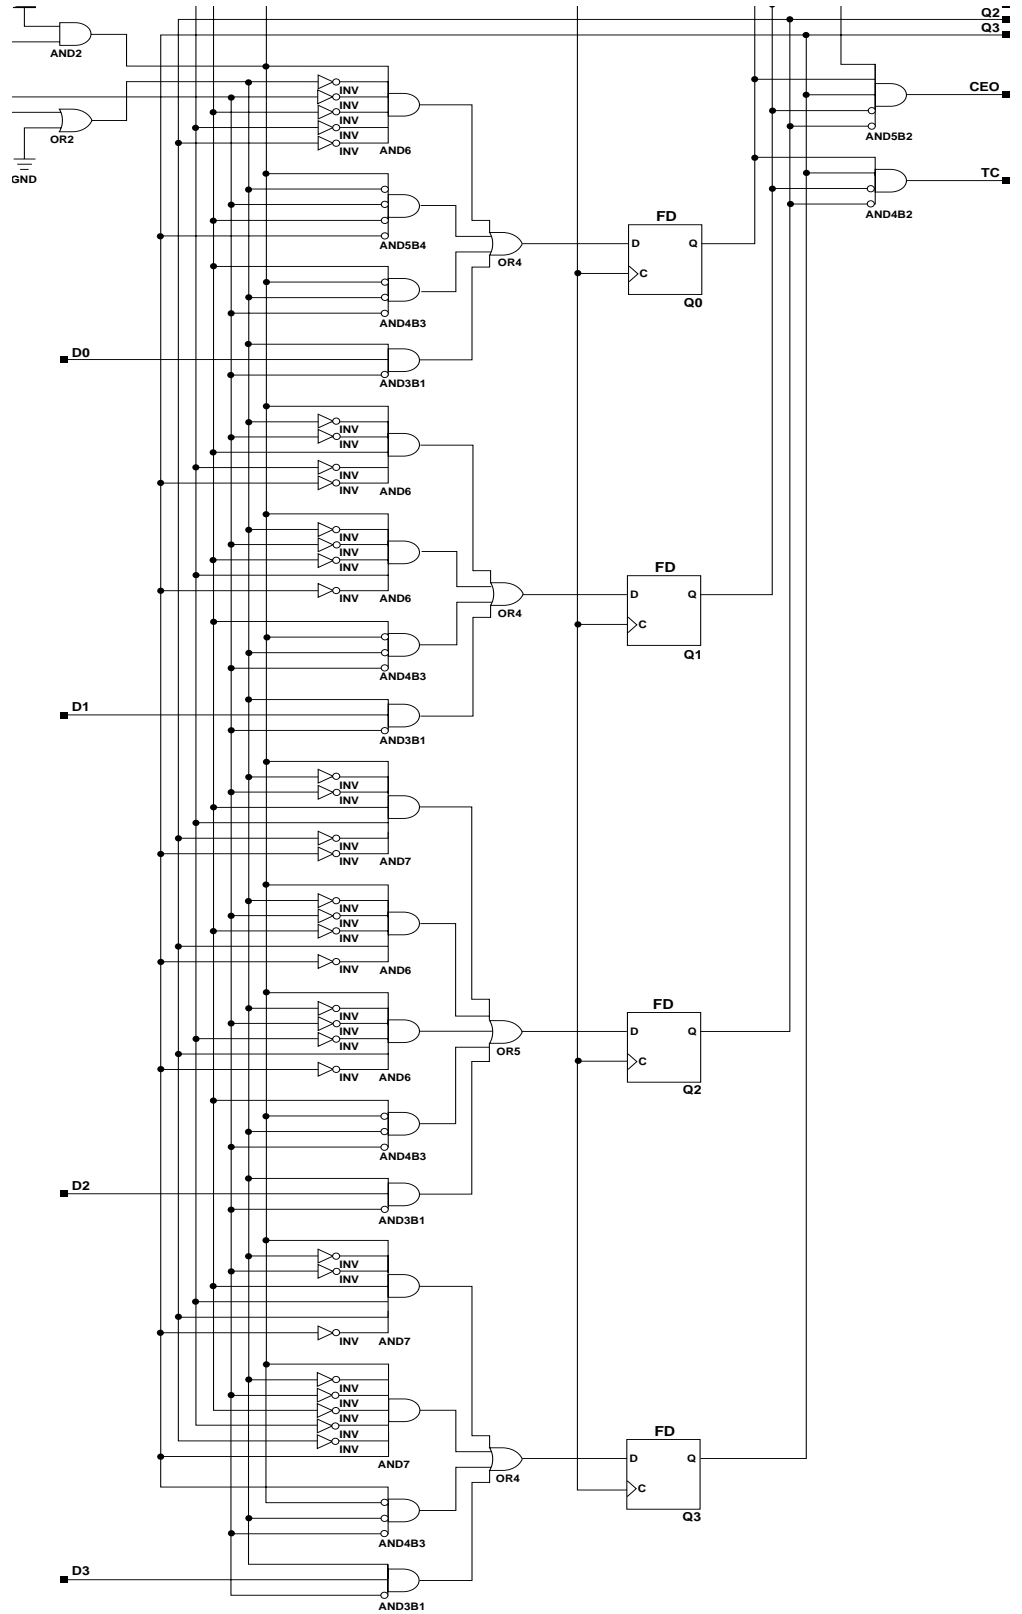

## CD4RLE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

### Usage

For HDL, this design element can be inferred but not instantiated.

### VHDL Inference Code

architecture Behavioral of cd4rle is

begin

```
process (C)
begin
  if (C'event and C = '1') then
    if (R = '1') then
      Q <= "0000";
    elsif (L = '1') then
      Q <= D;
    elsif (CE = '1') then
      if (Q = "1001") then
        Q <= "0000";
      elsif (Q = "1011") then
        Q <= "0110";
      elsif (Q = "1101") then
        Q <= "0100";
      elsif (Q = "1111") then
        Q <= "0010";
      else
        Q <= Q + 1;
      end if;
    end if;
  end if;
end process;
```

```
process (Q)
begin
  if (Q = "1001") then
    TC <= '1';
  else
    TC <= '0';
  end if;
end process;
```

```
CEO <= TC and CE;
```

end Behavioral;

## Verilog Inference Code

```
always @ (posedge C)
begin
  if (R)
    Q <= 0;
  else if (L)
    Q <= D;
  else if (CE)
    begin
      if (Q == 4'b1001)
        Q <= 4'b0000;
      else if (Q == 4'b1011)
        Q <= 4'b0110;
      else if (Q == 4'b1101)
        Q <= 4'b0100;
      else if (Q == 4'b1111)
        Q <= 4'b0010;
      else
        Q <= Q + 1;
    end
  end
end

always @ (Q)
begin
  if (Q == 4'b1001)
    TC <= 1;
  else
    TC <= 0;
end


always @ (TC or CE)
begin
  CEO <= TC && CE;
end
```

## CDD4CE

### 4-Bit Cascadable Dual Edge Triggered BCD Counter with Clock Enable and Asynchronous Clear

#### Architectures Supported

CDD4CE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

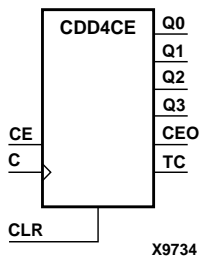

CDD4CE is a 4-bit (stage), asynchronous clearable, cascadable dual edge triggered Binary-coded-decimal (BCD) counter. The asynchronous clear input (CLR) is the highest priority input. When CLR is High, all other inputs are ignored; the Q outputs, terminal count (TC), and clock enable out (CEO) go to logic level zero, independent of clock transitions. The Q outputs increment when clock enable (CE) is High during the Low-to-High and High-to-Low clock (C) transition. The counter ignores clock transitions when CE is Low. The TC output is High when Q3 and Q0 are High and Q2 and Q1 are Low. The counter recovers to zero from any illegal state within the first clock cycle.

Larger counters are created by connecting the count enable out (CEO) output of the first stage to the CE input of the next stage and connecting the CLR and clock inputs in parallel. CEO is active (High) when TC and CE are High. The maximum length of the counter is determined by the accumulated CE-to-TC propagation delays versus the clock period. The clock period must be greater than  $n(t_{CE-TC})$ , where  $n$  is the number of stages and the time  $t_{CE-TC}$  is the CE-to-TC propagation delay of each stage. When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not.


The counter is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse to the PRLD global net.

Inputs			Outputs					
CLR	CE	C	Q3	Q2	Q1	Q0	TC	CEO
1	X	X	0	0	0	0	0	0
0	1	↑	Inc	Inc	Inc	Inc	TC	CEO
0	1	↓	Inc	Inc	Inc	Inc	TC	CEO
0	0	X	No Chg	No Chg	No Chg	No Chg	TC	0

Inputs			Outputs					
CLR	CE	C	Q3	Q2	Q1	Q0	TC	CEO
0	1	X	1	0	0	1	1	1

$TC = Q3 \cdot !Q2 \cdot !Q1 \cdot Q0$

$CEO = TC \cdot CE$

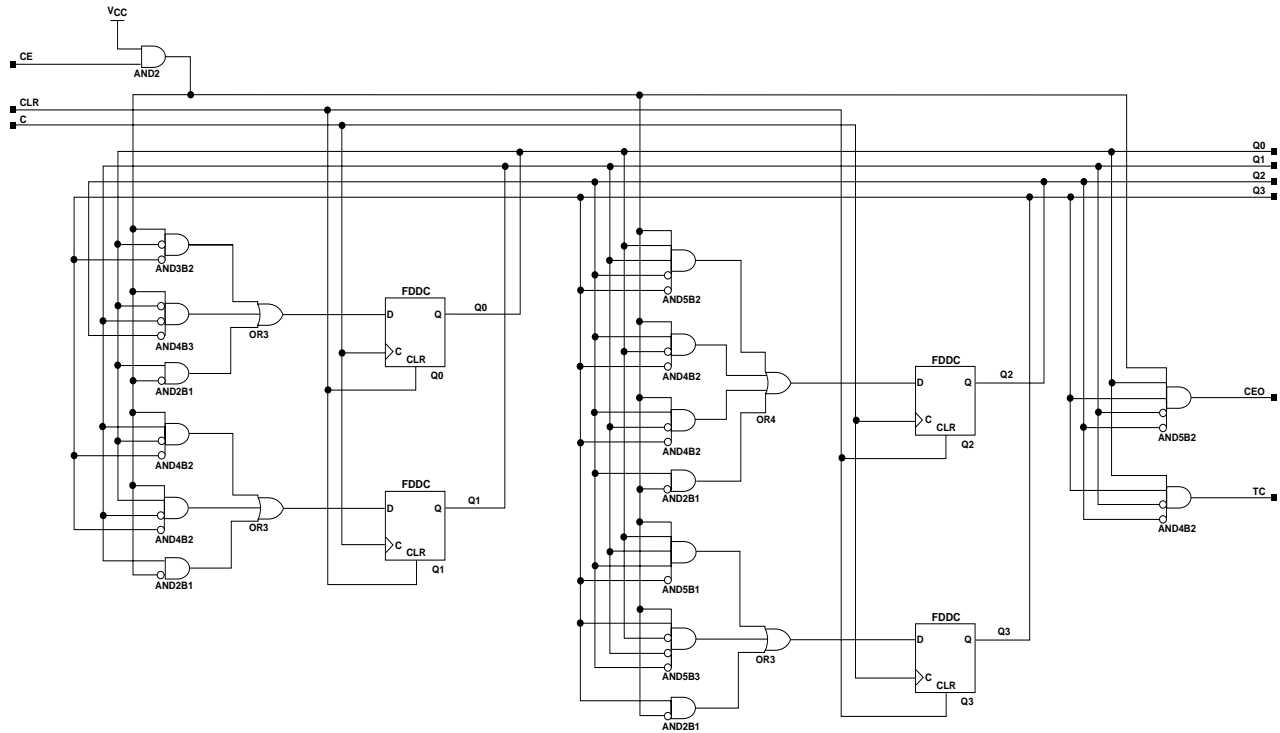

X9735

**CDD4CE Implementation CoolRunner-II**

## Usage

For HDL, this design element can be inferred but not instantiated.

## VHDL Inference Code

architecture Behavioral of cdd4ce is

begin

```
process (C, CLR)
begin
  if (CLR = '1') then
    Q <= "0000";
  elsif (C'event) then
    if (CE = '1') then
      if (Q = "1001") then
        Q <= "0000";
      elsif (Q = "1011") then
        Q <= "0110";
      elsif (Q = "1101") then
        Q <= "0100";
      elsif (Q = "1111") then
        Q <= "0010";
      else
        Q <= Q + 1;
      end if;
    end if;
  end if;
end process;
```

```
process (Q)
begin
  if (Q = "1001") then
    TC <= '1';
  else
    TC <= '0';
  end if;
end process;
```

```
CEO <= TC and CE;
```

end Behavioral;

## Verilog Inference Code

```
always @ (posedge C or negedge C or posedge CLR)
begin
  if (CLR)
    Q <= 0;
  else if (CE)
    begin
      if (Q == 4'b1001)
        Q <= 4'b0000;
      else if (Q == 4'b1011)
        Q <= 4'b0110;
      else if (Q == 4'b1101)
        Q <= 4'b0100;
      else if (Q == 4'b1111)
        Q <= 4'b0010;
      else
        Q <= Q + 1;
    end
end

always @ (Q)
begin
  if (Q == 4'b1001)
    TC <= 1;
  else
    TC <= 0;
end

always @ (TC or CE)
begin
  CEO <= TC && CE;
end
```




## CDD4CLE

### 4-Bit Loadable Cascadable Dual Edge Triggered BCD Counter with Clock Enable and Asynchronous Clear

#### Architectures Supported

CDD4CLE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

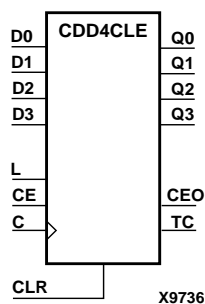

CDD4CLE is a 4-bit (stage), synchronously loadable, asynchronously clearable, dual edge triggered Binary-coded-decimal (BCD) counter. The asynchronous clear input (CLR) is the highest priority input. When CLR is High, all other inputs are ignored; the Q outputs, terminal count (TC), and clock enable out (CEO) go to logic level zero, independent of clock transitions. The data on the D inputs is loaded into the counter when the load enable input (L) is High during the Low-to-High and High-to-Low clock (C) transitions. The Q outputs increment when clock enable input (CE) is High during the Low- to-High clock transition. The counter ignores clock transitions when CE is Low. The TC output is High when Q3 and Q0 are High and Q2 and Q1 are Low. The counter recovers to zero from any illegal state within the first clock cycle.

Larger counters are created by connecting the count enable out (CEO) output of the first stage to the CE input of the next stage and connecting the CLR, L, and C inputs in parallel. CEO is active (High) when TC and CE are High. The maximum length of the counter is determined by the accumulated CE-to-TC propagation delays versus the clock period. The clock period must be greater than  $n(t_{CE-TC})$ , where  $n$  is the number of stages and the time  $t_{CE-TC}$  is the CE-to-TC propagation delay of each stage. When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not.


The counter is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs					Outputs					
CLR	L	CE	D3 – D0	C	Q3	Q2	Q1	Q0	TC	CEO
1	X	X	X	X	0	0	0	0	0	0
0	1	X	D3 – D0	↑	D3	D2	D1	D0	TC	CEO
0	1	X	D3 – D0	↓	D3	D2	D1	D0	TC	CEO

Inputs					Outputs					
CLR	L	CE	D3 – D0	C	Q3	Q2	Q1	Q0	TC	CEO
0	0	1	X	↑	Inc	Inc	Inc	Inc	TC	CEO
0	0	1	X	↓	Inc	Inc	Inc	Inc	TC	CEO
0	0	0	X	X	No Chg	No Chg	No Chg	No Chg	TC	0
0	0	1	X	X	1	0	0	1	1	1

$TC = Q3 \cdot !Q2 \cdot !Q1 \cdot Q0$

$CEO = TC \cdot CE$

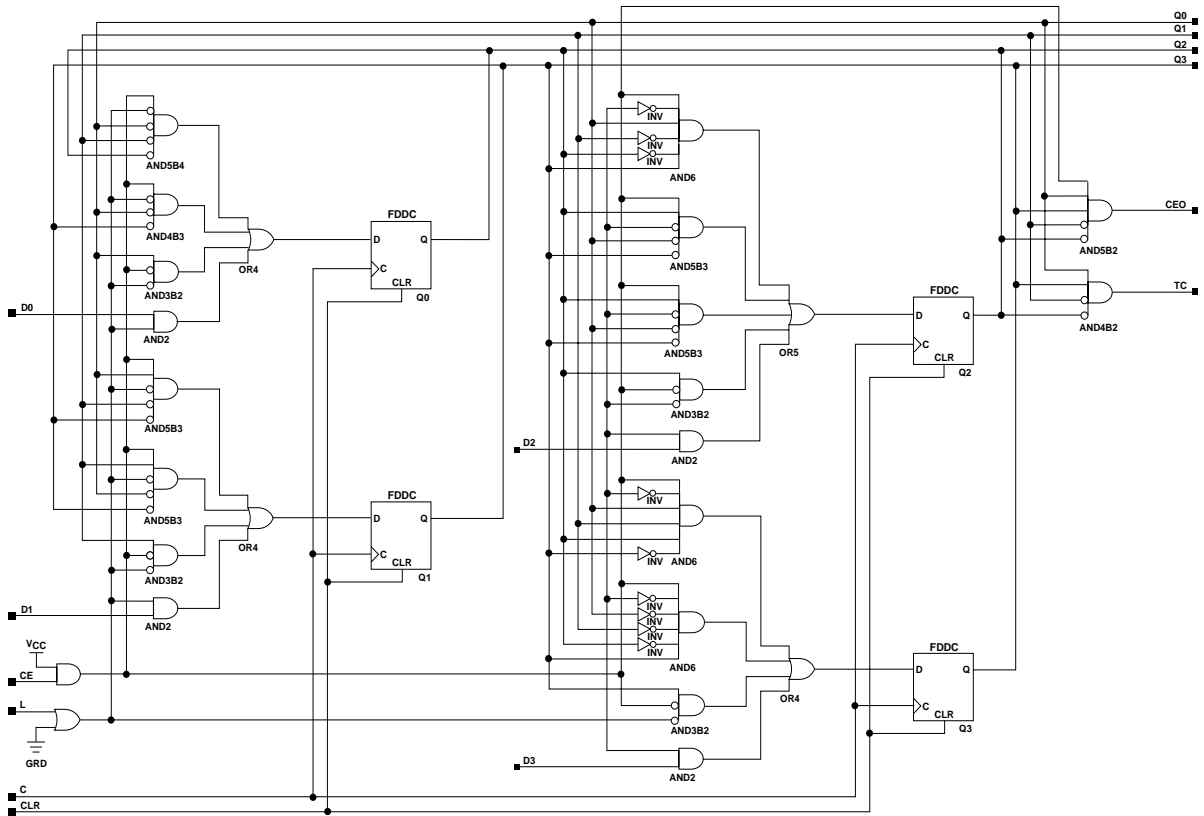

X9737

### CDD4CLE Implementation CoolRunner-II

#### Usage

For HDL, this design element can be inferred but not instantiated.

#### VHDL Inference Code

architecture Behavioral of cdd4cle is

begin

```

process (C, CLR)
begin

```

```
if (CLR = '1') then
  Q <= "0000";
elsif (C'event) then
  if (L = '1') then
    Q <= D;
  elsif (CE = '1') then
    if (Q = "1001") then
      Q <= "0000";
    elsif (Q = "1011") then
      Q <= "0110";
    elsif (Q = "1101") then
      Q <= "0100";
    elsif (Q = "1111") then
      Q <= "0010";
    else
      Q <= Q + 1;
    end if;
  end if;
end if;
end process;

process (Q)
begin
  if (Q = "1001") then
    TC <= '1';
  else
    TC <= '0';
  end if;
end process;

CEO <= TC and CE;

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or negedge C or posedge CLR)
begin
  if (CLR)
    Q <= 0;
  else if (L)
    Q <= D;
  else if (CE)
    begin
      if (Q == 4'b1001)
        Q <= 4'b0000;
      else if (Q == 4'b1011)
        Q <= 4'b0110;
      else if (Q == 4'b1101)
        Q <= 4'b0100;
      else if (Q == 4'b1111)
        Q <= 4'b0010;
      else
        Q <= Q + 1;
    end
end

always @ (Q)
begin
  if (Q == 4'b1001)
    TC <= 1;
  else
    TC <= 0;
end


always @ (TC or CE)
begin
  CEO <= TC && CE;
end
```

## CDD4RE

### 4-Bit Cascadable Dual Edge Triggered BCD Counter with Clock Enable and Synchronous Reset

#### Architectures Supported

CDD4RE	
Spartan-II, Spartan-III	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

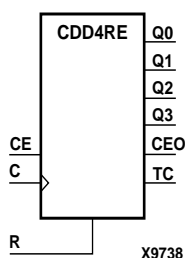

CDD4RE is a 4-bit (stage), synchronous resettable, cascadable dual edge triggered binary-coded-decimal (BCD) counter. The synchronous reset input (R) is the highest priority input. When R is High, all other inputs are ignored; the Q outputs, terminal count (TC), and clock enable out (CEO) go to logic level zero on the Low-to-High or High-to-Low clock (C) transition. The Q outputs increment when the clock enable input (CE) is High during the Low-to-High and High-to-Low clock transition. The counter ignores clock transitions when CE is Low. The TC output is High when Q3 and Q0 are High and Q2 and Q1 are Low. The counter recovers to zero from any illegal state within the first clock cycle.

Larger counters are created by connecting the count enable out (CEO) output of the first stage to the CE input of the next stage and connecting the R and clock inputs in parallel. CEO is active (High) when TC and CE are High. The maximum length of the counter is determined by the accumulated CE-to-TC propagation delays versus the clock period. The clock period must be greater than  $n(t_{CE-TC})$ , where  $n$  is the number of stages and the time  $t_{CE-TC}$  is the CE-to-TC propagation delay of each stage. When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not.


The counter is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs			Outputs					
R	CE	C	Q3	Q2	Q1	Q0	TC	CEO
1	X	↑	0	0	0	0	0	0
1	X	↓	0	0	0	0	0	0
0	1	↑	Inc	Inc	Inc	Inc	TC	CEO
0	1	↓	Inc	Inc	Inc	Inc	TC	CEO
0	0	X	No Chg	No Chg	No Chg	No Chg	TC	0

Inputs			Outputs					
R	CE	C	Q3	Q2	Q1	Q0	TC	CEO
0	1	X	1	0	0	1	1	1

$TC = Q3 \cdot !Q2 \cdot !Q1 \cdot Q0$

$CEO = TC \cdot CE$

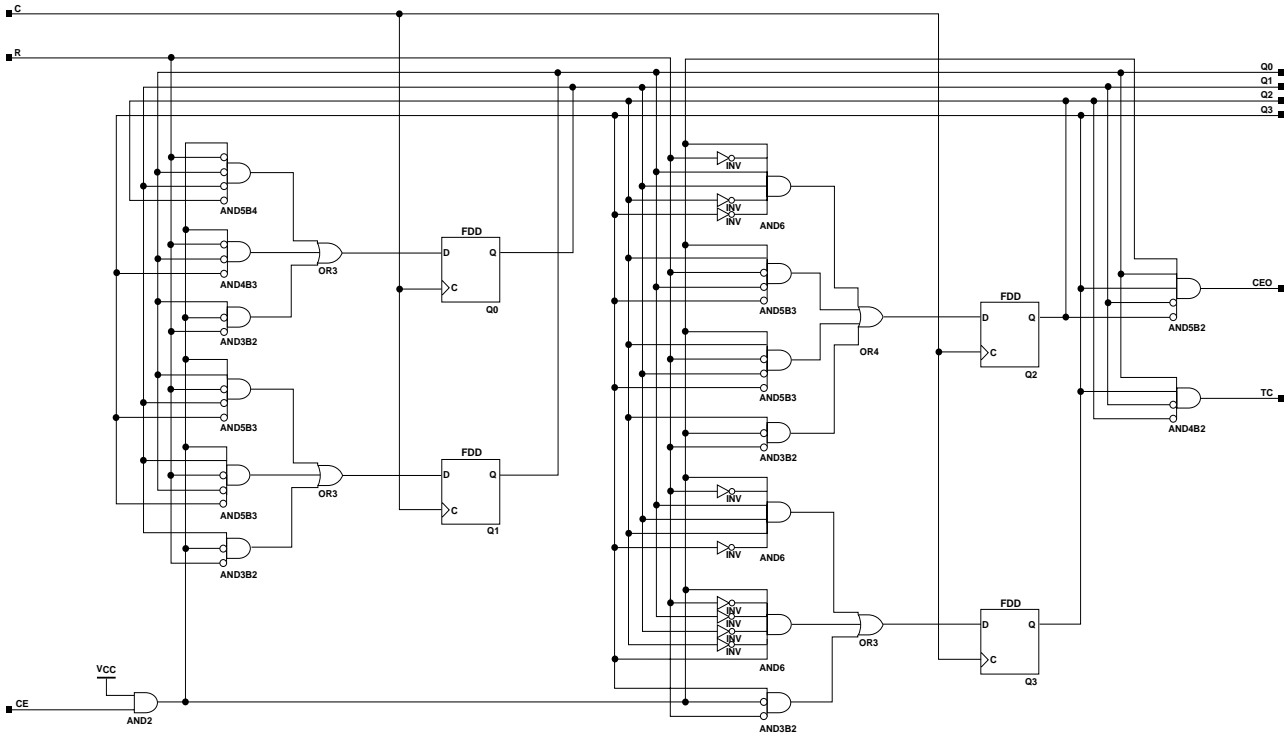

X975

### CDD4RE Implementation CoolRunner-II

#### Usage

For HDL, this design element can be inferred but not instantiated.

## VHDL Inference Code

```
architecture Behavioral of cdd4re is

begin

    process (C)
    begin
        if (C'event) then
            if (R = '1') then
                Q <= "0000";
            elsif (CE = '1') then
                if (Q = "1001") then
                    Q <= "0000";
                elsif (Q = "1011") then
                    Q <= "0110";
                elsif (Q = "1101") then
                    Q <= "0100";
                elsif (Q = "1111") then
                    Q <= "0010";
                else
                    Q <= Q + 1;
                end if;
            end if;
        end if;
    end process;

    process (Q)
    begin
        if (Q = "1001") then
            TC <= '1';
        else
            TC <= '0';
        end if;
    end process;

    CEO <= TC and CE;

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or negedge C)
begin
  if (R)
    Q <= 0;
  else if (CE)
    begin
      if (Q == 4'b1001)
        Q <= 4'b0000;
      else if (Q == 4'b1011)
        Q <= 4'b0110;
      else if (Q == 4'b1101)
        Q <= 4'b0100;
      else if (Q == 4'b1111)
        Q <= 4'b0010;
      else
        Q <= Q + 1;
    end
end

always @ (Q)
begin
  if (Q == 4'b1001)
    TC <= 1;
  else
    TC <= 0;
end

always @ (TC or CE)
begin
  CEO <= TC && CE;
end
```




## CDD4RLE

### 4-Bit Loadable Cascadable Dual Edge Triggered BCD Counter with Clock Enable and Synchronous Reset

#### Architectures Supported

CDD4RLE	
Spartan-II, Spartan-III	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

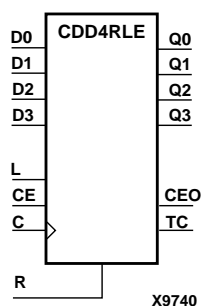

CDD4RLE is a 4-bit (stage), synchronous loadable, resettable, dual edge triggered binary-coded-decimal (BCD) counter. The synchronous reset input (R) is the highest priority input. When R is High, all other inputs are ignored; the Q outputs, terminal count (TC), and clock enable out (CEO) go to logic level zero on the Low-to-High or High-to-Low clock transitions. The data on the D inputs is loaded into the counter when the load enable input (L) is High during the Low-to-High and High-to-Low clock (C) transition. The Q outputs increment when the clock enable input (CE) is High during the Low-to-High and High-to-Low clock transition. The counter ignores clock transitions when CE is Low. The TC output is High when Q3 and Q0 are High and Q2 and Q1 are Low. The counter recovers to zero from any illegal state within the first clock cycle.

Larger counters are created by connecting the count enable out (CEO) output of the first stage to the CE input of the next stage and connecting the R, L, and C inputs in parallel. CEO is active (High) when TC and CE are High. The maximum length of the counter is determined by the accumulated CE-to-TC propagation delays versus the clock period. The clock period must be greater than  $n(t_{CE-TC})$ , where  $n$  is the number of stages and the time  $t_{CE-TC}$  is the CE-to-TC propagation delay of each stage. When cascading counters, use the CEO output if the counter uses the CE input; use the TC output if it does not.


The counter is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs					Outputs					
R	L	CE	D3 – D0	C	Q3	Q2	Q1	Q0	TC	CEO
1	X	X	X	↑	0	0	0	0	0	0
1	X	X	X	↓	0	0	0	0	0	0
0	1	X	D3 – D0	↑	D3	D2	D1	D0	TC	CEO
0	1	X	D3 – D0	↓	D3	D2	D1	D0	TC	CEO

Inputs					Outputs					
R	L	CE	D3 – D0	C	Q3	Q2	Q1	Q0	TC	CEO
0	0	1	X	↑	Inc	Inc	Inc	Inc	TC	CEO
0	0	1	X	↓	Inc	Inc	Inc	Inc	TC	CEO
0	0	0	X	X	No Chg	No Chg	No Chg	No Chg	TC	0
0	0	1	X	X	1	0	0	1	1	1

$$TC = Q3 \cdot !Q2 \cdot !Q1 \cdot Q0$$

$$CEO = TC \cdot CE$$

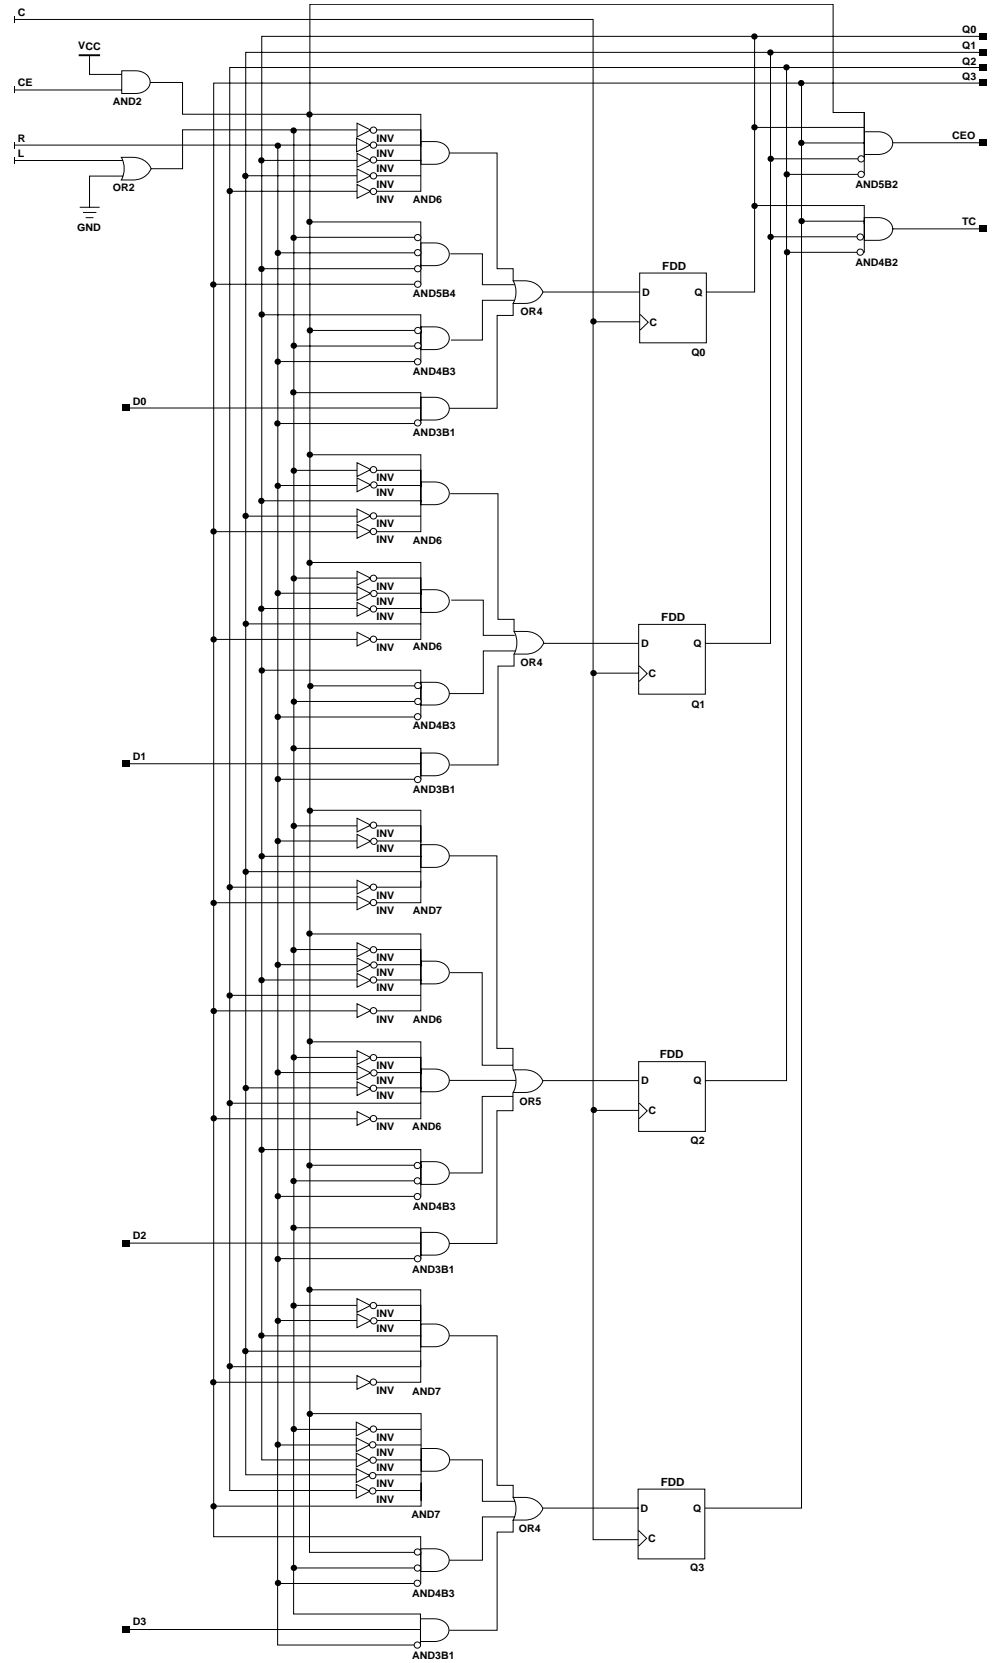

X9741

## CDD4RLE Implementation CoolRunner-II

### Usage

For HDL, this design element can be inferred but not instantiated.

### VHDL Inference Code

architecture Behavioral of cdd4rle is

begin

```
process (C)
begin
  if (C'event) then
    if (R = '1') then
      Q <= "0000";
    elsif (L = '1') then
      Q <= D;
    elsif (CE = '1') then
      if (Q = "1001") then
        Q <= "0000";
      elsif (Q = "1011") then
        Q <= "0110";
      elsif (Q = "1101") then
        Q <= "0100";
      elsif (Q = "1111") then
        Q <= "0010";
      else
        Q <= Q + 1;
      end if;
    end if;
  end if;
end process;
```

```
process (Q)
begin
  if (Q = "1001") then
    TC <= '1';
  else
    TC <= '0';
  end if;
end process;
```

```
CEO <= TC and CE;
```

end Behavioral;

## Verilog Inference Code

```
always @ (posedge C or negedge C)
begin
  if (R)
    Q <= 0;
  else if (L)
    Q <= D;
  else if (CE)
    begin
      if (Q == 4'b1001)
        Q <= 4'b0000;
      else if (Q == 4'b1011)
        Q <= 4'b0110;
      else if (Q == 4'b1101)
        Q <= 4'b0100;
      else if (Q == 4'b1111)
        Q <= 4'b0010;
      else
        Q <= Q + 1;
    end
  end
end

always @ (Q)
begin
  if (Q == 4'b1001)
    TC <= 1;
  else
    TC <= 0;
end

always @ (TC or CE)
begin
  CEO <= TC && CE;
end
```




## CJ4CE, CJ5CE, CJ8CE


### 4-, 5-, 8-Bit Johnson Counters with Clock Enable and Asynchronous Clear

#### Architectures Supported

CJ4CE, CJ5CE, CJ8CE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

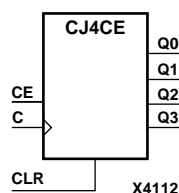

CJ4CE, CJ5CE, and CJ8CE are clearable Johnson/shift counters. The asynchronous clear (CLR) input, when High, overrides all other inputs and causes the data (Q) outputs to go to logic level zero, independent of clock (C) transitions. The counter increments (shifts Q0 to Q1, Q1 to Q2, and so forth) when the clock enable input (CE) is High during the Low-to-High clock transition. Clock transitions are ignored when CE is Low.

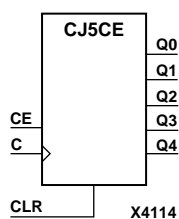


For CJ4CE, the Q3 output is inverted and fed back to input Q0 to provide continuous counting operation. For CJ5CE, the Q4 output is inverted and fed back to input Q0. For CJ8CE, the Q7 output is inverted and fed back to input Q0.

The counter is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

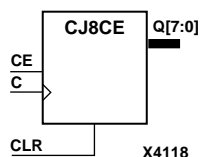

#### CJ4CE Truth Table

Inputs			Outputs			
CLR	CE	C	Q0	Q1	Q2	Q3
1	X	X	0	0	0	0
0	0	X	No Chg	No Chg	No Chg	No Chg
0	1	↑	!q3	q0	q1	q2

q = state of referenced output one setup time prior to active clock transition

**CJ5CE Truth Table**


Inputs			Outputs				
CLR	CE	C	Q0	Q1	Q2	Q3	Q4
1	X	X	0	0	0	0	0
0	0	X	No Chg	No Chg	No Chg	No Chg	No Chg
0	1	↑	!q4	q0	q1	q2	q3

q = state of referenced output one setup time prior to active clock transition

**CJ8CE Truth Table**

Inputs			Outputs	
CLR	CE	C	Q0	Q1 – Q7
1	X	X	0	0
0	0	X	No Chg	No Chg
0	1	↑	!q7	q0 – q6

q = state of referenced output one setup time prior to active clock transition

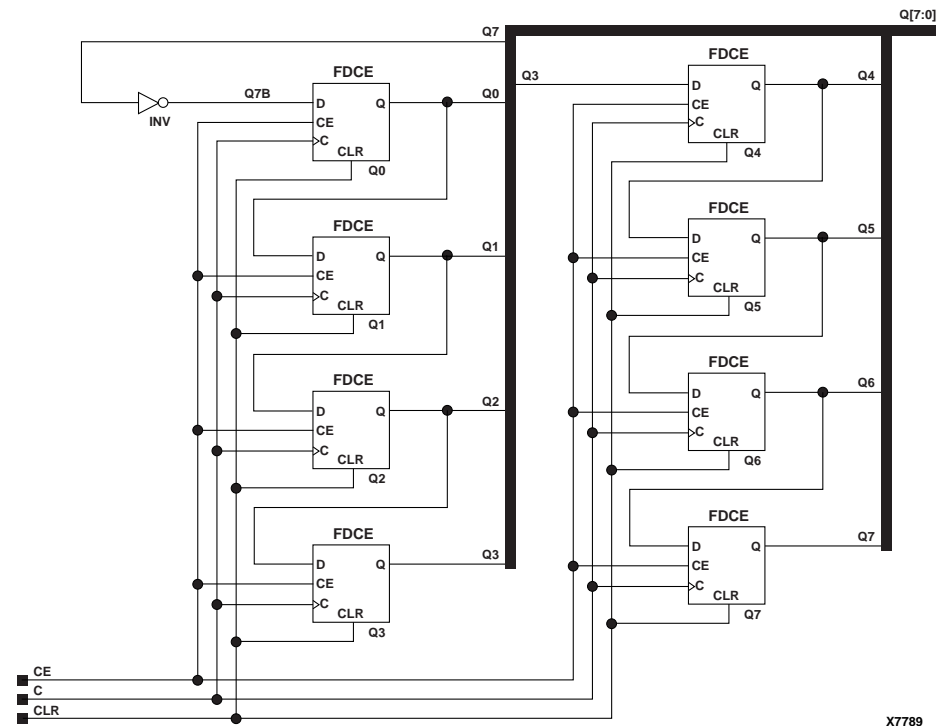

**CJ8CE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

**Usage**

For HDL, this design element can be inferred but not instantiated.



## VHDL Inference Code

```
architecture Behavioral of cj4ce is
begin

process (C, CLR)
begin
  if (CLR = '1') then
    Q <= (others => '0');
  elsif (C'event and C = '1') then
    if (CE = '1') then
      Q(0) <= not Q(WIDTH-1);
      Q(WIDTH-1 downto 1) <= Q(WIDTH-2 downto 0);
    end if;
  end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or posedge CLR)
begin
  if (CLR)
    Q <= 0;
  else
    begin
      if (CE)
        begin
          Q[0] <= !Q[WIDTH-1];
          Q[WIDTH-1:1] <= Q[WIDTH-2:0];
        end
      end
    end
end
```




## CJ4RE, CJ5RE, CJ8RE


### 4-, 5-, 8-Bit Johnson Counters with Clock Enable and Synchronous Reset

#### Architectures Supported

CJ4RE, CJ5RE, CJ8RE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

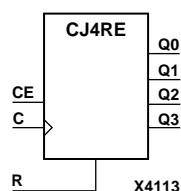

CJ4RE, CJ5RE, and CJ8RE are resettable Johnson/shift counters. The synchronous reset (R) input, when High, overrides all other inputs and causes the data (Q) outputs to go to logic level zero during the Low-to-High clock (C) transition. The counter increments (shifts Q0 to Q1, Q1 to Q2, and so forth) when the clock enable input (CE) is High during the Low-to-High clock transition. Clock transitions are ignored when CE is Low.

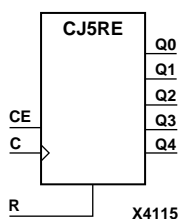


For CJ4RE, the Q3 output is inverted and fed back to input Q0 to provide continuous counting operations. For CJ5RE, the Q4 output is inverted and fed back to input Q0. For CJ8RE, the Q7 output is inverted and fed back to input Q0.

The counter is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

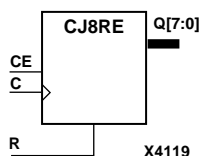

#### CJ4RE Truth Table

Inputs			Outputs			
R	CE	C	Q0	Q1	Q2	Q3
1	X	↑	0	0	0	0
0	0	X	No Chg	No Chg	No Chg	No Chg
0	1	↑	$\bar{q}_3$	q0	q1	q2

q = state of referenced output one setup time prior to active clock transition

**CJ5RE Truth Table**


Inputs			Outputs				
R	CE	C	Q0	Q1	Q2	Q3	Q4
1	X	↑	0	0	0	0	0
0	0	X	No Chg	No Chg	No Chg	No Chg	No Chg
0	1	↑	$\overline{q4}$	q0	q1	q2	q3

q = state of referenced output one setup time prior to active clock transition

**CJ8RE Truth Table**

Inputs			Outputs	
R	CE	C	Q0	Q1 – Q7
1	X	↑	0	0
0	0	X	No Chg	No Chg
0	1	↑	$\overline{q7}$	q0 – q6

q = state of referenced output one setup time prior to active clock transition

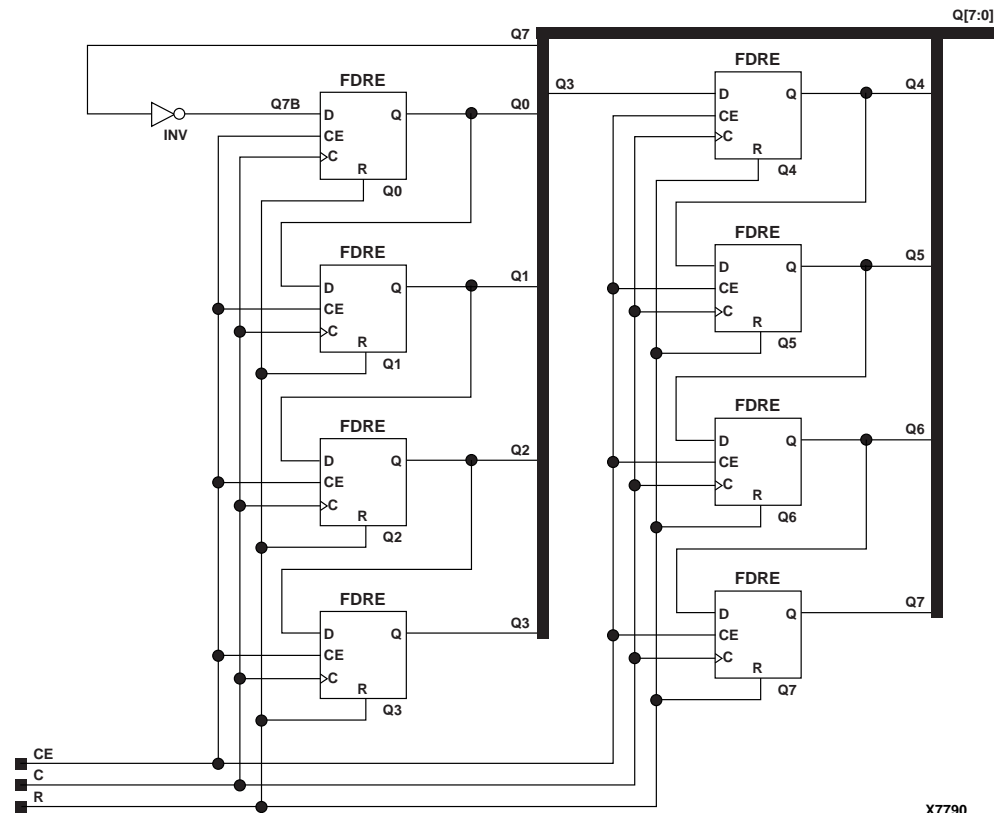

**CJ8RE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIe, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

## Usage

For HDL, this design element can be inferred but not instantiated.

## VHDL Inference Code

```
architecture Behavioral of cj4re is

begin

process (C)
begin
  if (C'event and C = '1') then
    if (R = '1') then
      Q <= (others => '0');
    elsif (CE = '1') then
      Q(0) <= not Q(WIDTH-1);
      Q(WIDTH-1 downto 1) <= Q(WIDTH-2 downto 0);
    end if;
  end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C)
begin
  if (R)
    Q <= 0;
  else
    begin
      if (CE)
        begin
          Q[0] <= !Q[WIDTH-1];
          Q[WIDTH-1:1] <= Q[WIDTH-2:0];
        end
      end
    end
end
```




## CJD4CE, CJD5CE, CJD8CE


### 4-, 5-, 8-Bit Dual Edge Triggered Johnson Counters with Clock Enable and Asynchronous Clear

#### Architectures Supported

CJD4CE, CJD5CE, CJD8CE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

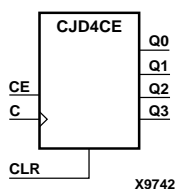


CJD4CE, CJD5CE, and CJD8CE are dual edge triggered clearable Johnson/shift counters. The asynchronous clear (CLR) input, when High, overrides all other inputs and causes the data (Q) outputs to go to logic level zero, independent of clock (C) transitions. The counter increments (shifts Q0 to Q1, Q1 to Q2, and so forth) when the clock enable input (CE) is High during the Low-to-High and High-to-Low clock transition. Clock transitions are ignored when CE is Low.

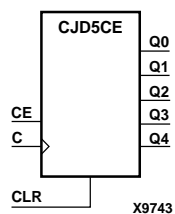

For CJD4CE, the Q3 output is inverted and fed back to input Q0 to provide continuous counting operations. For CJD5CE, the Q4 output is inverted and fed back to input Q0. For CJD8CE, the Q7 output is inverted and fed back to input Q0.

The counter is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

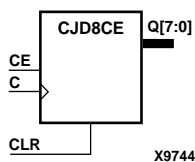

#### CJD4CE Truth Table

Inputs			Outputs			
CLR	CE	C	Q0	Q1	Q2	Q3
1	X	X	0	0	0	0
0	0	X	No Chg	No Chg	No Chg	No Chg
0	1	↑	!q3	q0	q1	q2
0	1	↓	!q3	q0	q1	q2

q = state of referenced output one setup time prior to active clock transition

**CJD5CE Truth Table**

Inputs			Outputs				
CLR	CE	C	Q0	Q1	Q2	Q3	Q4
1	X	X	0	0	0	0	0
0	0	X	No Chg	No Chg	No Chg	No Chg	No Chg
0	1	↑	!q4	q0	q1	q2	q3
0	1	↓	!q4	q0	q1	q2	q3

q = state of referenced output one setup time prior to active clock transition

**CJD8CE Truth Table**

Inputs			Outputs	
CLR	CE	C	Q0	Q1 – Q7
1	X	X	0	0
0	0	X	No Chg	No Chg
0	1	↑	!q7	q0 – q6
0	1	↓	!q7	q0 – q6

q = state of referenced output one setup time prior to active clock transition

## Usage

For HDL, this design element can be inferred but not instantiated.

## VHDL Inference Code

architecture Behavioral of cjd4ce is

begin

process (C, CLR)

begin

if (CLR = '1') then

  Q <= (others => '0');

elsif (C'event) then

  if (CE = '1') then

    Q(0) <= not Q(WIDTH-1);

    Q(WIDTH-1 downto 1) <= Q(WIDTH-2 downto 0);

  end if;

end if;

end process;

end Behavioral;



## Verilog Inference Code

```
always @ (posedge C or negedge C or posedge CLR)
begin
  if (CLR)
    Q_INT <= 0;
  else
    begin
      if (CE)
        begin
          Q_INT[0] <= !Q_INT[WIDTH-1];
          Q_INT[WIDTH-1:1] <= Q_INT[WIDTH-2:0];
        end
      end
    end
end

always @ (Q_INT)
begin
  Q <= Q_INT;
end
```






## CJD4RE, CJD5RE, CJD8RE

### 4-, 5-, 8-Bit Dual Edge Triggered Johnson Counters with Clock Enable and Synchronous Reset

#### Architectures Supported

CJD4RE, CJD5RE, CJD8RE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

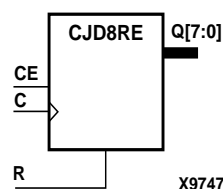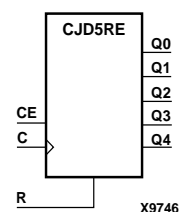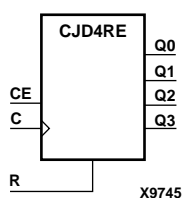

CJD4RE, CJD5RE, and CJD8RE are resettable dual edge triggered Johnson/shift counters. The synchronous reset (R) input, when High, overrides all other inputs and causes the data (Q) outputs to go to logic level zero during the Low-to-High and High-to-Low clock (C) transition. The counter increments (shifts Q0 to Q1, Q1 to Q2, and so forth) when the clock enable input (CE) is High during the Low-to-High and High-to-Low clock transition. Clock transitions are ignored when CE is Low.

For CJD4RE, the Q3 output is inverted and fed back to input Q0 to provide continuous counting operations. For CJD5RE, the Q4 output is inverted and fed back to input Q0. For CJD8RE, the Q7 output is inverted and fed back to input Q0.

The counter is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

#### CJD4RE Truth Table

Inputs			Outputs			
R	CE	C	Q0	Q1	Q2	Q3
1	X	↑	0	0	0	0
0	0	X	No Chg	No Chg	No Chg	No Chg
0	1	↑	$\overline{q_3}$	q0	q1	q2
0	1	↓	$\overline{q_3}$	q0	q1	q2

q = state of referenced output one setup time prior to active clock transition

**CJD5RE Truth Table**

Inputs			Outputs				
R	CE	C	Q0	Q1	Q2	Q3	Q4
1	X	↑	0	0	0	0	0
0	0	X	No Chg	No Chg	No Chg	No Chg	No Chg
0	1	↑	$\overline{q4}$	q0	q1	q2	q3
0	1	↓	$\overline{q4}$	q0	q1	q2	q3

q = state of referenced output one setup time prior to active clock transition

**CJD8RE Truth Table**

Inputs			Outputs	
R	CE	C	Q0	Q1 – Q7
1	X	↑	0	0
1	X	↓	0	0
0	0	X	No Chg	No Chg
0	1	↑	$\overline{q7}$	q0 – q6
0	1	↓	$\overline{q7}$	q0 – q6

q = state of referenced output one setup time prior to active clock transition

## Usage

For HDL, this design element can be inferred but not instantiated.

## VHDL Inference Code

architecture Behavioral of cjd4re is

begin

process (C)

begin

if (C'event) then

if (R = '1') then

Q <= (others => '0');

elsif (CE = '1') then

Q(0) <= not Q(WIDTH-1);

Q(WIDTH-1 downto 1) <= Q(WIDTH-2 downto 0);

end if;

end if;

end process;

end Behavioral;

## Verilog Inference Code

```
always @ (posedge C or negedge C)
begin
  if (R)
    Q <= 0;
  else
    begin
      if (CE)
        begin
          Q[0] <= !Q[WIDTH-1];
          Q[WIDTH-1:1] <= Q[WIDTH-2:0];
        end
      end
    end
end
```




## CLK\_DIV2,4,6,8,10,12,14,16

### Global Clock Divider

#### Architectures Supported

CLK_DIV2, CLK_DIV4, CLK_DIV6, CLK_DIV8, CLK_DIV10, CLK_DIV12, CLK_DIV14, CLK_DIV16	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Primitive
CoolRunner-IIS	Yes*
*Only for CLKDIV2 devices.	

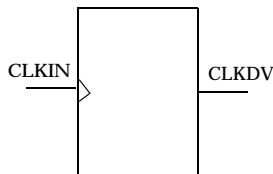

The CLK\_DIV2,4,6,8,10,12,14,16 Global Clock Dividers divide a user-provided external clock signal `gclk<2>` by 2, 4, 6, 8, 10, 12, 14, and 16, respectively. Only one clock divider may be used per design. The global clock divider is available on the XC2C128, XC2C256, XC2C384, and XC2C512 CoolRunner-II devices, but not the XC2C32 or XC2C64. The CLKIN input can only be connected to the device `gclk<2>` pin. The duty cycle of the CLKDV output is 50-50.

The CLKDV output is reset low by power-on reset circuitry.

#### Usage

This design element is supported for schematics and instantiation but not for inference.

#### VHDL Instantiation Template

```
-- Component Declaration for CLK_DIVn should be placed
-- after architecture statement but before begin keyword

component CLK_DIVn
  port (CLKDV : out STD_ULOGIC;
        CLKIN : in STD_ULOGIC);
end component;

-- Component Instantiation for CLK_DIVn should be placed
-- in architecture after the begin keyword

CLK_DIVn_INSTANCE_NAME : CLK_DIVn
  port map (CLKDV => user_CLKDV,
           CLKIN => user_CLKIN);
```

## Verilog Instantiation Template

```
CLK_DIVn CLK_DIVn_instance_name (.CLKDV (user_CLKDV),  
                                  .CLKIN (user_CLKIN));
```




## CLK\_DIV2,4,6,8,10,12,14,16R

### Global Clock Divider with Synchronous Reset

#### Architectures Supported

CLK_DIV2R, CLK_DIV4R, CLK_DIV6R, CLK_DIV8R, CLK_DIV10R, CLK_DIV12R, CLK_DIV14R, CLK_DIV16R	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Primitive
CoolRunner-IIS	Yes*
*Only for CLKDIV2 devices.	

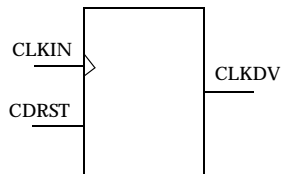

The CLK\_DIV2,4,6,8,10,12,14,16R Global Clock Dividers with Synchronous Reset divide a user-provided external clock signal `gclk<2>` by 2, 4, 6, 8, 10, 12, 14, and 16, respectively. Only one clock divider may be used per design. The global clock divider is available on the XC2C128, XC2C256, XC2C384, and XC2C512 CoolRunner-II devices, but not the XC2C32 or XC2C64. The CLKIN and CDRST inputs can only be connected to the device `gclk<2>` and CDRST pins. The duty cycle of the CLKDV output is 50-50.

The CDRST input is an active High synchronous reset. If CDRST is input High when the CLKDV output is High, the CLKDV output remains High to complete the last clock pulse, and then goes Low.

The CLKDV output is reset low by power-on reset circuitry.

#### Usage

For HDL, these design elements are supported for instantiation but not inference.

#### VHDL Instantiation Template

```
-- Component Declaration for CLK_DIVnR should be placed
-- after architecture statement but before begin keyword
```

```
component CLK_DIVnR
  port (CLKDV : out STD_ULOGIC;
        CDRST : in STD_ULOGIC;
        CLKIN : in STD_ULOGIC);
end component;
```

```
-- Component Instantiation for CLK_DIVnR should be placed
-- in architecture after the begin keyword
```

```
CLK_DIVnR_INSTANCE_NAME : CLK_DIVnR
  port map (CLKDV => user_CLKDV,
```

```
CDRST => user_CDRST,  
CLKIN => user_CLKIN);
```

### Verilog Instantiation Template


```
CLK_DIVnR CLK_DIVnR_instance_name (.CLKDV (user_CLKDV),  
                                     .CDRST (user_CDRST),  
                                     .CLKIN (user_CLKIN));
```

## CLK\_DIV2,4,6,8,10,12,14,16RSD

### Global Clock Divider with Synchronous Reset and Start Delay

#### Architectures Supported

CLK_DIV2RSD, CLK_DIV4RSD, CLK_DIV6RSD, CLK_DIV8RSD, CLK_DIV10RSD, CLK_DIV12RSD, CLK_DIV14RSD, CLK_DIV16RSD	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Primitive
CoolRunner-IIS	Yes*
*Only for CLKDIV2 devices.	

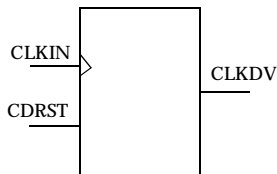

The CLK\_DIV2,4,6,8,10,12,14,16 Global Clock Dividers with Synchronous Reset and Start Delay divide a user-provided external clock signal `gclk<2>` by 2, 4, 6, 8, 10, 12, 14, and 16, respectively. Only one clock divider may be used per design. The global clock divider is available on the XC2C128, XC2C256, XC2C384, and XC2C512 CoolRunner-II devices, but not the XC2C32 or XC2C64. The CLKIN and CDRST inputs can only be connected to the device `gclk<2>` and CDRST pins. The duty cycle of the CLKDV output is 50-50.

The CDRST input is an active High synchronous reset. If CDRST is input High when the CLKDV output is High, the CLKDV output remains High to complete the last clock pulse, and then goes Low.

The start delay function delays the start of the CLKDV output by  $(n + 1)$  clocks, where  $n$  is the divisor for the clock divider.

The CLKDV output is reset low by power-on reset circuitry.

#### Usage

For HDL, these design elements are supported for instantiation but not inference.

#### VHDL Instantiation Template

```
-- Component Declaration for CLK_DIVnRSD should be placed
-- after architecture statement but before begin keyword

component CLK_DIVnRSD
  port (CLKDV : out STD_ULOGIC;
        CDRST : in  STD_ULOGIC;
        CLKIN : in  STD_ULOGIC);
end component;

-- Component Instantiation for CLK_DIVnRSD should be placed
-- in architecture after the begin keyword
```

```
CLK_DIVnRSD_INSTANCE_NAME : CLK_DIVnRSD
    port map (CLKDV => user_CLKDV,
              CDRST => user_CDRST,
              CLKIN => user_CLKIN);
```

### Verilog Instantiation Template


```
CLK_DIVnRSD CLK_DIVnRSD_instance_name (.CLKDV (user_CLKDV),
                                         .CDRST (user_CDRST),
                                         .CLKIN (user_CLKIN));
```

## CLK\_DIV2,4,6,8,10,12,14,16SD

### Global Clock Divider with Start Delay

#### Architectures Supported

CLK_DIV2SD, CLK_DIV4SD, CLK_DIV6SD, CLK_DIV8SD, CLK_DIV10SD, CLK_DIV12SD, CLK_DIV14SD, CLK_DIV16SD	
Spartan-II, Spartan-III	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Primitive
CoolRunner-IIS	Yes*
*Only for CLKDIV2 devices.	

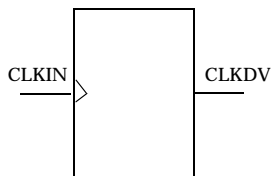

The CLK\_DIV2,4,6,8,10,12,14,16SD Global Clock Dividers with Start Delay divide a user-provided external clock signal gclk<2> by 2, 4, 6, 8, 10, 12, 14, and 16, respectively. Only one clock divider may be used per design. The global clock divider is available on the XC2C128, XC2C256, XC2C384, and XC2C512 CoolRunner-II devices, but not the XC2C32 or XC2C64. The CLKIN input can only be connected to the device gclk<2> pin. The duty cycle of the CLKDV output is 50-50.

The start delay function delays the CLKDV output (n + 1) clocks, where n is the divisor for the clock divider.

The CLKDV output is reset low by power-on reset circuitry.

#### Usage

This design element is supported for schematics and instantiation but not for inference.

#### VHDL Instantiation Template

```
-- Component Declaration for CLK_DIVnSD should be placed
-- after architecture statement but before begin keyword

component CLK_DIVnSD
  port (CLKDV : out STD_ULOGIC;
        CLKIN : in STD_ULOGIC);
end component;

-- Component Instantiation for CLK_DIVnSD should be placed
-- in architecture after the begin keyword

CLK_DIVnSD_INSTANCE_NAME : CLK_DIVnSD
  port map (CLKDV => user_CLKDV,
           CLKIN => user_CLKIN);
```

## Verilog Instantiation Template


```
CLK_DIVnSD CLK_DIVnSD_instance_name (.CLKDV (user_CLKDV),  
                                       .CLKIN (user_CLKIN));
```

## CLKDLL

### Clock Delay Locked Loop

#### Architectures Supported

CLKDLL	
Spartan-II, Spartan-IIE	Primitive*
Spartan-3	No
Virtex, Virtex-E	Primitive*
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
* Use CLKDLLE for Spartan-IIE and Virtex-E.	

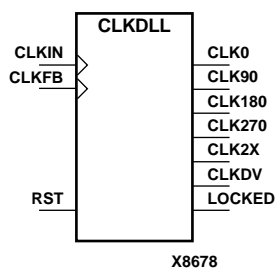

CLKDLL is a clock delay locked loop used to minimize clock skew. CLKDLL synchronizes the clock signal at the feedback clock input (CLKFB) to the clock signal at the input clock (CLKIN). The locked output (LOCKED) is high when the two signals are in phase. The signals are considered to be in phase when their rising edges are within a specific range of each other (see *The Programmable Logic Data Book* for the most current value).

The frequency of the clock signal at the CLKIN input must be in a specific range depending on speed grade (see *The Programmable Logic Data Book* for the most current values). The CLKIN pin must be driven by an IBUFG or a BUFG.

On-chip synchronization is achieved by connecting the CLKFB input to a point on the global clock network driven by a BUFG, a global clock buffer. The BUFG connected to the CLKFB input of the CLKDLL must be sourced from either the CLK0 or CLK2X outputs of the same CLKDLL. The CLKIN input should be connected to the output of an IBUFG, with the IBUFG input connected to a pad driven by the system clock.

Off-chip synchronization is achieved by connecting the CLKFB input to the output of an IBUFG, with the IBUFG input connected to a pad. Either the CLK0 or CLK2X output can be used but not both. The CLK0 or CLK2X must be connected to the input of OBUF, an output buffer.

The duty cycle of the CLK0 output is 50-50 unless the DUTY\_CYCLE\_CORRECTION attribute is set to FALSE, in which case the duty cycle is the same as that of the CLKIN input. The duty cycle of the phase shifted outputs (CLK90, CLK180, and CLK270) is the same as that of the CLK0 output. The duty cycle of the CLK2X and CLKDV outputs is always 50-50. The frequency of the CLKDV output is determined by the value assigned to the CLKDV\_DIVIDE attribute.

The master reset input (RST) resets CLKDLL to its initial (power-on) state. The signal at the RST input is asynchronous and must be held High for just 2ns.

### CLKDLL Outputs

Output	Description
CLK0	Clock at 1x CLKIN frequency
CLK180	Clock at 1x CLKIN frequency, shifted 180° with regards to CLK0
CLK270	Clock at 1x CLKIN frequency, shifted 270° with regards to CLK0
CLK2X	Clock at 2x CLKIN frequency, in phase with CLK0
CLK90	Clock at 1x CLKIN frequency, shifted 90° with regards to CLK0
CLKDV	Clock at (1/n)x CLKIN frequency, n=CLKDV_DIVIDE value. CLKDV is in phase with CLK0.
LOCKED	CLKDLL locked

**Note:** See the "PERIOD Specifications on CLKDLLs and DCM" section of the "Xilinx Constraints P" chapter in the *Constraints Guide* for additional information on using the TNM, TNM\_NET, and PERIOD attributes with CLKDLL components.

### Usage

This component is generally instantiated in the code as it can not be easily inferred in synthesis tools. Some synthesis tools may allow inference via an attribute. See your synthesis tool's documentation. Generally, global buffers (IBUFG, BUFG) are instantiated with the CLKDLL component to construct the proper clocking circuit. See the XAPP 132 application note, "Using the Virtex Delay-Locked Loop" and the *Xilinx Databook* for more information on using the CLKDLL component.

### VHDL Instantiation Template

```
-- Component Declaration for CLKDLL should be placed
-- after architecture statement but before begin keyword
```

```
component CLKDLL
-- synthesis translate_off
  generic (CLKDV_DIVIDE : real := 2.0; -- (1.5, 2.0, 2.5, 3.0, 4.0, 5.0, 8.0, 16.0)
          DUTY_CYCLE_CORRECTION : Boolean := TRUE; -- (TRUE, FALSE)
          STARTUP_WAIT : boolean := FALSE); -- (TRUE, FALSE)
-- synthesis translate_on
  port (CLK0 : out STD_ULOGIC;
        CLK180 : out STD_ULOGIC;
        CLK270 : out STD_ULOGIC;
        CLK2X : out STD_ULOGIC;
        CLK90 : out STD_ULOGIC;
        CLKDV : out STD_ULOGIC;
        LOCKED : out STD_ULOGIC;
```



```

        CLKFB : in STD_ULOGIC;
        CLKIN : in STD_ULOGIC;
        RST : in STD_ULOGIC);
end component;

-- Component Attribute specification for CLKDLL
-- should be placed after architecture declaration but
-- before the begin keyword

attribute CLKDV_DIVIDE : real;
attribute DUTY_CYCLE_CORRECTION : boolean;
attribute STARTUP_WAIT : boolean;

attribute CLKDV_DIVIDE of CLKDLL_instance_name: label is 2.0;
-- 1.5,2,2.5,3,4, 5, 8, 16 are valid for CLKDV_DIVIDE
attribute DUTY_CYCLE_CORRECTION of CLKDLL_instance_name: label is "TRUE";
-- TRUE, FALSE are valid for DUTY_CYCLE_CORRECTION
attribute STARTUP_WAIT of CLKDLL_instance_name: label is "FALSE"; --
(TRUE,FALSE)

-- Component Instantiation for CLKDLL should be placed
-- in architecture after the begin keyword

CLKDLL_INSTANCE_NAME : CLKDLL
-- synthesis translate_off
    generic map (CLKDV_DIVIDE => real_value, -- (1.5,2,2.5,3,4,5,8,16)
                DUTY_CYCLE_CORRECTION => boolean_value, -- (TRUE, FALSE)
                STARTUP_WAIT => boolean_value); -- (TRUE, FALSE)
-- synthesis translate_on
port map (CLK0 => user_CLK0,
          CLK180 => user_CLK180,
          CLK270 => user_CLK270,
          CLK2X => user_CLK2X,
          CLK90 => user_CLK90,
          CLKDV => user_CLKDV,
```

```

LOCKED => user_LOCKED,
CLKFB => user_CLKFB,
CLKIN0 => user_CLKIN,
RST => user_RST);

```

## Verilog Instantiation Template

```

CLKDLL CLKDLL_instance_name (.CLK0 (user_CLK0),
    .CLK180 (user_CLK180),
    .CLK270 (user_CLK270),
    .CLK2X (user_CLK2X),
    .CLK90 (user_CLK90),
    .CLKDV (user_CLKDV),
    .LOCKED (user_LOCKED),
    .CLKFB (user_CLKFB),
    .CLKIN (user_CLKIN),
    .RST (user_RST));

```

```

defparam CLKDLL_instance_name.CLKDV_DIVIDE = integer_value;
//(1.5,2,2.5,3,4,5,8,16)

```

```

defparam CLKDLL_instance_name.DUTY_CYCLE_CORRECTION = boolean_value; //
(TRUE, FALSE)

```

```

defparam CLKDLL_instance_name.STARTUP_WAIT = boolean_value; // (TRUE,
FALSE)

```

**Note:** Additional syntax may be necessary in order to pass the CLKDLL attributes via the synthesis tool. The above defparam statements may need to be isolated from the synthesis tool with `translate_off/translate_on` directives. See your synthesis tool documentation for more information on Verilog attribute passing to ensure that you properly pass these attributes to the synthesis tool. Otherwise, you may pass these attributes to the UCF file.

## Commonly Used Constraints

STARTUP\_WAIT, DUTY\_CYCLE\_CORRECTION, CLKDV\_DIVIDE and LOC.






## CLKDLLE

### Virtex-E Clock Delay Locked Loop

CLKDLLE	
Spartan-II, Spartan-IIE	Primitive*
Spartan-3	No
Virtex, Virtex-E	Primitive*
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
* Supported for Spartan-IIE and Virtex-E devices only.	

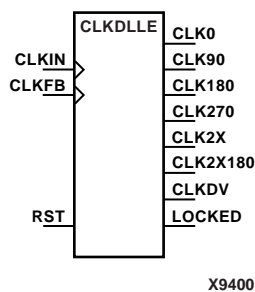

CLKDLLE is a clock delay locked loop used to minimize clock skew for Virtex-E devices. CLKDLLE synchronizes the clock signal at the feedback clock input (CLKFB) to the clock signal at the input clock (CLKIN). The locked output (LOCKED) is high when the two signals are in phase. The signals are considered to be in phase when their rising edges are within a specific range of each other (see *The Programmable Logic Data Book* for the most current value).

The frequency of the clock signal at the CLKIN input must be in a specific range depending on speed grade (see *The Programmable Logic Data Book* for the most current values). The CLKIN pin must be driven by an IBUFG or a BUFG.

On-chip synchronization is achieved by connecting the CLKFB input to a point on the global clock network driven by a BUFG, a global clock buffer. The BUFG input can only be connected to the CLK0 or CLK2X output of CLKDLLE. The BUFG connected to the CLKFB input of the CLKDLLE must be sourced from either the CLK0 or CLK2X outputs of the same CLKDLLE. The CLKIN input should be connected to the output of an IBUFG, with the IBUFG input connected to a pad driven by the system clock.

Off-chip synchronization is achieved by connecting the CLKFB input to the output of an IBUFG, with the IBUFG input connected to a pad. Either the CLK0 or CLK2X output can be used but not both. The CLK0 or CLK2X must be connected to the input of OBUF, an output buffer.

The duty cycle of the CLK0 output is 50-50 unless the DUTY\_CYCLE\_CORRECTION attribute is set to FALSE, in which case the duty cycle is the same as that of the CLKIN input. The duty cycle of the phase shifted outputs (CLK90, CLK180, and CLK270) is the same as that of the CLK0 output. The duty cycle of the CLK2X, CLK2X180, and CLKDV outputs is always 50-50. The frequency of the CLKDV output is determined by the value assigned to the CLKDV\_DIVIDE attribute.

The master reset input (RST) resets CLKDLLE to its initial (power-on) state. The signal at the RST input is asynchronous and must be held High for just 2ns.

## CLKDLLE Outputs

Output	Description
CLK0	Clock at 1x CLKIN frequency
CLK180	Clock at 1x CLK0 frequency, shifted 180° with regards to CLK0
CLK270	Clock at 1x CLK0 frequency, shifted 270° with regards to CLK0
CLK2X	Clock at 2x CLK0 frequency, in phase with CLK0
CLK2X180	Clock at 1x CLK2X frequency shifted 180° with regards to CLK2X
CLK90	Clock at 1x CLK0 frequency, shifted 90° with regards to CLK0
CLKDV	Clock at (1/n) x CLK0 frequency, where n=CLKDV_DIVIDE value. CLKDV is in phase with CLK0.
LOCKED	CLKDLLE locked. CLKIN and CLKFB synchronized.

## Usage

This component is generally instantiated in the code as it cannot be easily inferred in synthesis tools. Some synthesis tools may allow inference via an attribute. See your synthesis tool documentation. Generally, global buffers (IBUFG, BUFG) are instantiated with the CLKDLLE component to construct the proper clocking circuit. See the XAPP 132 application note, "Using the Virtex Delay-Locked Loop" and the *Xilinx Databook* for more information on using the CLKDLLE component.

## VHDL Instantiation Template

```
-- Component Declaration for CLKDLLE should be placed
-- after architecture statement but before begin keyword

component CLKDLLE
  -- synthesis translate_off
  generic (CLKDV_DIVIDE : real := 2.0; -- (1.5, 2.0, 2.5, 3.0, 3.5, 4.0, 4.5, 5.0,
    5.5, 6.0, 6.5, 7.5, 8.0, 9.0, 10.0, 11.0, 12.0, 13.0, 14.0, 15.0, 16.0)
    DUTY_CYCLE_CORRECTION : Boolean := TRUE; -- (TRUE, FALSE)
    STARTUP_WAIT :boolean := FALSE); -- (TRUE, FALSE)
  -- synthesis translate_on
  port (CLK0 : out STD_ULOGIC;
    CLK180 : out STD_ULOGIC;
    CLK270 : out STD_ULOGIC;
    CLK2X : out STD_ULOGIC;
    CLK2X180: out STD_ULOGIC;
    CLK90 : out STD_ULOGIC;
    CLKDV : out STD_ULOGIC;
    LOCKED : out STD_ULOGIC;
    CLKFB : in STD_ULOGIC;
    CLKIN : in STD_ULOGIC;
    RST : in STD_ULOGIC);
end component;

-- Component Attribute specification for CLKDLLE
-- should be placed after architecture declaration but
-- before the begin keyword

attribute CLKDV_DIVIDE : real;
```

```

attribute DUTY_CYCLE_CORRECTION : boolean;
attribute STARTUP_WAIT : boolean;

attribute CLKDV_DIVIDE of CLKDLLE_instance_name: label is 2.0;
-- (1.5, 2.0, 2.5, 3.0, 3.5, 4.0, 4.5, 5.0, 5.5, 6.0, 6.5, 7.5, 8.0, 9.0, 10.0, 11.0,
-- 12.0, 13.0, 14.0, 15.0, 16.0) are valid for CLKDV_DIVIDE
attribute DUTY_CYCLE_CORRECTION of CLKDLLE_instance_name: label is TRUE;
-- (TRUE, FALSE) are valid for DUTY_CYCLE_CORRECTION
attribute STARTUP_WAIT of CLKDLLE_instance_name: label is FALSE; -- (TRUE,FALSE)

-- Component Instantiation for CLKDLLE should be placed
-- in architecture after the begin keyword

CLKDLLE_INSTANCE_NAME : CLKDLLE
  -- synthesis translate_off
  generic map (CLKDV_DIVIDE => real_value, -- (1.5,2,2.5,3,4,5,8,16)
              DUTY_CYCLE_CORRECTION => boolean_value, -- (TRUE, FALSE)
              STARTUP_WAIT => boolean_value); -- (TRUE, FALSE)
  -- synthesis translate_on
  port map (CLK0 => user_CLK0,
            CLK180 => user_CLK180,
            CLK270 => user_CLK270,
            CLK2X => user_CLK2X,
            CLK2X180 => user_CLK2X,
            CLK90 => user_CLK90,
            CLKDV => user_CLKDV,
            LOCKED => user_LOCKED,
            CLKFB => user_CLKFB,
            CLKIN0 => user_CLKIN,
            RST => user_RST);

```

## Verilog Instantiation Template

```

CLKDLLE CLKDLLE_instance_name (.CLK0 (user_CLK0),
                               .CLK180 (user_CLK180),
                               .CLK270 (user_CLK270),
                               .CLK2X (user_CLK2X),
                               .CLK2X180 (user_CLK2X180),
                               .CLK90 (user_CLK90),
                               .CLKDV (user_CLKDV),
                               .LOCKED (user_LOCKED),
                               .CLKFB (user_CLKFB),
                               .CLKIN (user_CLKIN),
                               .RST (user_RST));

defparam CLKDLLE_instance_name.CLKDV_DIVIDE = integer_value;
// 1.5,2,2.5,3,4,5,8,16 are valid for CLKDV_DIVIDE
defparam CLKDLLE_instance_name.DUTY_CYCLE_CORRECTION = boolean_value;// (TRUE,FALSE)
defparam CLKDLLE_instance_name.STARTUP_WAIT = boolean_value; // (TRUE, FALSE)

```

**Note:** Additional syntax may be necessary in order to pass the CLKDLLE attributes via the synthesis tool. The above defparam statements may need to be isolated from the synthesis tool with `translate_off/translate_on` directives. See your synthesis tool documentation for more information on Verilog attribute passing to ensure that you properly pass these attributes to the synthesis tool. Otherwise, you may pass these attributes to the UCF file.

## Commonly Used Constraints

STARTUP\_WAIT

DUTY\_CYCLE\_CORRECTION

CLKDV\_DIVIDE

LOC




## CLKDLLHF

### High Frequency Clock Delay Locked Loop

#### Architectures Supported

CLKDLLHF	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	No
Virtex, Virtex-E	Primitive*
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
*Use CLKDLLHF for the Virtex-E DLL in HF mode. In LF mode, both the separate CLKDLLE and CLKDLL primitive can be used.	

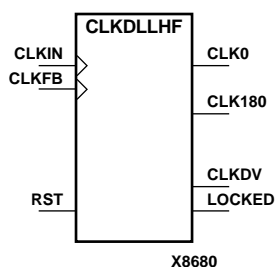

CLKDLLHF is a high frequency clock delay locked loop used to minimize clock skew. CLKDLLHF synchronizes the clock signal at the feedback clock input (CLKFB) to the clock signal at the input clock (CLKIN). The locked output (LOCKED) is high when the two signals are in phase. The signals are considered to be in phase when their rising edges are within a specific range of each other (see *The Programmable Logic Data Book* for the most current value).

The frequency of the clock signal at the CLKIN input must be in a specific range depending on speed grade (see *The Programmable Logic Data Book* for the most current values). The CLKIN pin must be driven by an IBUFG or a BUFG.

On-chip synchronization is achieved by connecting the CLKFB input to a point on the global clock network driven by a BUFG, a global clock buffer. The BUFG input can only be connected to the CLK0 output of CLKDLLHF. The BUFG connected to the CLKFB input of the CLKDLLHF must be sourced from the CLK0 output of the same CLKDLLHF. The CLKIN input should be connected to the output of an IBUFG, with the IBUFG input connected to a pad driven by the system clock.

Off-chip synchronization is achieved by connecting the CLKFB input to the output of an IBUFG, with the IBUFG input connected to a pad. Only the CLK0 output can be used. CLK0 must be connected to the input of OBUF, an output buffer.

The duty cycle of the CLK0 output is 50-50 unless the DUTY\_CYCLE\_CORRECTION attribute is set to FALSE, in which case the duty cycle is the same as that of the CLKIN input. The duty cycle of the phase shifted output (CLK180) is the same as that of the CLK0 output. The frequency of the CLKDV output is determined by the value assigned to the CLKDV\_DIVIDE attribute.

The master reset input (RST) resets CLKDLLHF to its initial (power-on) state. The signal at the RST input is asynchronous and must be held High for just 2ns.

### CLKDLLHF Outputs

Output	Description
CLK0	Clock at 1x CLKIN frequency
CLK180	Clock at 1x CLKIN frequency, shifted 180° with regards to CLK0
CLKDV	Clock at (1/n)x CLKIN frequency, n=CLKDV_DIVIDE value. CLKDV is in phase with CLK0.
LOCKED	CLKDLLHF locked

**Note:** See the "PERIOD Specifications on CLKDLLs and DCM" section of the "Xilinx Constraints P" chapter in the *Constraints Guide* for additional information on using the TNM, TNM\_NET, and PERIOD attributes with CLKDLLHF components.

### Usage

This component is generally instantiated in the code as it cannot be easily inferred in synthesis tools. Some synthesis tools may allow inference via an attribute. See your synthesis tool documentation. Generally, global buffers (IBUFG, BUFG) are instantiated with the CLKDLLHF component to construct the proper clocking circuit. See the XAPP 132 application note, "Using the Virtex Delay-Locked Loop" and the *Xilinx Databook* for more information on using the CLKDLLHF component.

### VHDL Instantiation Template

```
-- Component Declaration for CLKDLLHF should be placed
-- after architecture statement but before begin keyword

component CLKDLLHF
  -- synthesis translate_off
  generic (CLKDV_DIVIDE : real := 2.0; -- (1.5, 2.0, 2.5, 3.0, 4.0, 5.0, 8.0, 16.0)
          DUTY_CYCLE_CORRECTION : Boolean := TRUE; -- (TRUE, FALSE)
          STARTUP_WAIT : boolean := FALSE); -- (TRUE, FALSE)
  -- synthesis translate_on
  port (CLK0 : out STD_ULOGIC;
        CLK180 : out STD_ULOGIC;
        CLKDV : out STD_ULOGIC;
        LOCKED : out STD_ULOGIC;
        CLKFB : in STD_ULOGIC;
        CLKIN : in STD_ULOGIC;
        RST : in STD_ULOGIC);
end component;

-- Component Attribute specification for CLKDLLHF
-- should be placed after architecture declaration but
-- before the begin keyword

attribute CLKDV_DIVIDE : real;
attribute DUTY_CYCLE_CORRECTION : boolean;
attribute STARTUP_WAIT : boolean;

attribute CLKDV_DIVIDE of CLKDLLHF_instance_name: label is 2.0;
-- (1.5,2,2.5,3,4, 5, 8, 16) are valid for CLKDV_DIVIDE
attribute DUTY_CYCLE_CORRECTION of CLKDLLHF_instance_name: label is TRUE;
```

```
-- (TRUE, FALSE) are valid for DUTY_CYCLE_CORRECTION
attribute STARTUP_WAIT of CLKDLLHF_instance_name: label is FALSE; -- (TRUE,FALSE)
```

```
-- Component Instantiation for CLKDLLHF should be placed
-- in architecture after the begin keyword
```

```
CLKDLLHF_INSTANCE_NAME : CLKDLLHF
-- synthesis translate_off
  generic map(CLKDV_DIVIDE => real_value, -- (1.5,2,2.5,3,4,5,8,16)
             DUTY_CYCLE_CORRECTION => boolean_value, -- (TRUE, FALSE)
             STARTUP_WAIT => boolean_value); -- (TRUE, FALSE)
-- synthesis translate_on
port map (CLK0 => user_CLK0,
         CLK180 => user_CLK180,
         CLKDV => user_CLKDV,
         LOCKED => user_LOCKED,
         CLKFB => user_CLKFB,
         CLKIN => user_CLKIN,
         RST => user_RST);
```

## Verilog Instantiation Template

```
CLKDLLHF CLKDLLHF_instance_name (.CLK0 (user_CLK0),
                                 .CLK180 (user_CLK180),
                                 .CLKDV (user_CLKDV),
                                 .LOCKED (user_LOCKED),
                                 .CLKFB (user_CLKFB),
                                 .CLKIN (user_CLKIN),
                                 .RST (user_RST));

defparam CLKDLLHF_instance_name.CLKDV_DIVIDE = integer_value;
// 1.5,2,2.5,3,4,5,8,16 are valid for CLKDV_DIVIDE
defparam CLKDLLHF_instance_name.DUTY_CYCLE_CORRECTION = boolean_value;// (TRUE,FALSE)
defparam CLKDLLHF_instance_name.STARTUP_WAIT = boolean_value; // (TRUE, FALSE)
```

**Note:** Additional syntax may be necessary in order to pass the CLKDLLHF attributes via the synthesis tool. The above defparam statements may need to be isolated from the synthesis tool with `translate_off/translate_on` directives. See your synthesis tool documentation for more information on Verilog attribute passing to ensure that you properly pass these attributes to the synthesis tool. Otherwise, you may pass these attributes to the UCF file.

## Commonly Used Constraints

STARTUP\_WAIT

DUTY\_CYCLE\_CORRECTION

CLKDV\_DIVIDE

LOC




## COMP2, 4, 8, 16

### 2-, 4-, 8-, 16-Bit Identity Comparators




#### Architectures Supported


COMP2, COMP4, COMP8, COMP16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

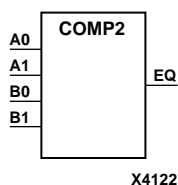

COMP2, COMP4, COMP8, and COMP16 are, respectively, 2-, 4-, 8-, and 16-bit identity comparators. The equal output (EQ) of the COMP2 2-bit, identity comparator is High when the two words A1 – A0 and B1 – B0 are equal. EQ is high for COMP4 when A3 – A0 and B3 – B0 are equal; for COMP8, when A7 – A0 and B7 – B0 are equal; and for COMP16, when A15 – A0 and B15 – B0 are equal.

Equality is determined by a bit comparison of the two words. When any two of the corresponding bits from each word are not the same, the EQ output is Low.

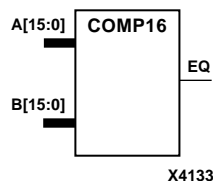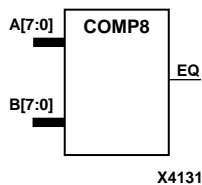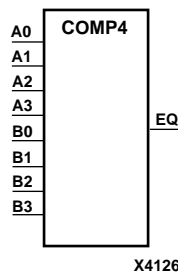

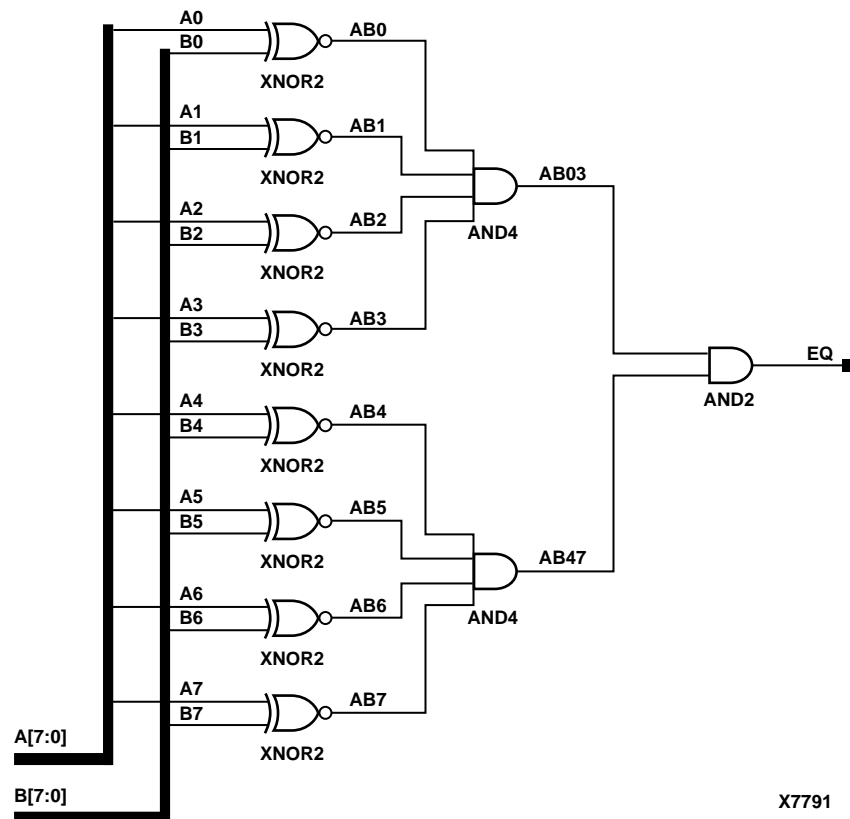

COMP8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIe, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X

## Usage

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

architecture behavioral of comp2 is

```
begin
  process (A, B)
  begin
    if (A=B) then
      EQ <= '1';
    else
      EQ <= '0';
    end if;
  end process;
end behavioral;
```

## Verilog Inference Code

```
always @ (A or B)
begin
  if (A == B)
    EQ <= 1;
  else
    EQ <= 0;
end
```






# COMP2, 4, 8, 16

## 2-, 4-, 8-, 16-Bit Magnitude Comparators


### Architectures Supported

COMP2, COMP4, COMP8, COMP16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

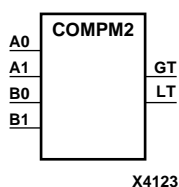

COMP2, COMP4, COMP8, and COMP16 are, respectively, 2-, 4-, 8-, and 16-bit magnitude comparators that compare two positive binary-weighted words.



COMP2 compares A1 – A0 and B1 – B0, where A1 and B1 are the most significant bits. COMP4 compares A3 – A0 and B3 – B0, where A3 and B3 are the most significant bits. COMP8 compares A7 – A0 and B7 – B0, where A7 and B7 are the most significant bits. COMP16 compares A15 – A0 and B15 – B0, where A15 and B15 are the most significant bits.

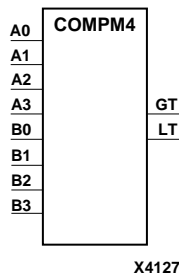

The greater-than output (GT) is High when A>B, and the less-than output (LT) is High when A<B. When the two words are equal, both GT and LT are Low. Equality can be measured with this macro by comparing both outputs with a NOR gate.

### COMP2 Truth Table

Inputs				Outputs	
A1	B1	A0	B0	GT	LT
0	0	0	0	0	0
0	0	1	0	1	0
0	0	0	1	0	1
0	0	1	1	0	0
1	1	0	0	0	0
1	1	1	0	1	0
1	1	0	1	0	1
1	1	1	1	0	0
1	0	X	X	1	0
0	1	X	X	0	1

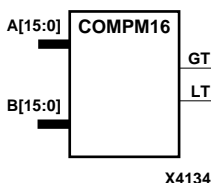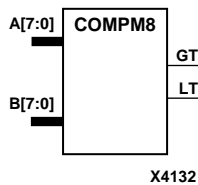


**COMPM4 Truth Table**


Inputs				Outputs	
A3, B3	A2, B2	A1, B1	A0, B0	GT	LT
A3>B3	X	X	X	1	0
A3<B3	X	X	X	0	1
A3=B3	A2>B2	X	X	1	0
A3=B3	A2<B2	X	X	0	1
A3=B3	A2=B2	A1>B1	X	1	0
A3=B3	A2=B2	A1<B1	X	0	1
A3=B3	A2=A2	A1=B1	A0>B0	1	0
A3=B3	A2=B2	A1=B1	A0<B0	0	1
A3=B3	A2=B2	A1=B1	A0=B0	0	0

**COMPM8 Truth Table (also representative of COMPM16)**

Inputs								Outputs	
A7, B7	A6, B6	A5, B5	A4, B4	A3, B3	A2, B2	A1, B1	A0, B0	GT	LT
A7>B7	X	X	X	X	X	X	X	1	0
A7<B7	X	X	X	X	X	X	X	0	1
A7=B7	A6>B6	X	X	X	X	X	X	1	0
A7=B7	A6<B6	X	X	X	X	X	X	0	1
A7=B7	A6=B6	A5>B5	X	X	X	X	X	1	0
A7=B7	A6=B6	A5<B5	X	X	X	X	X	0	1
A7=B7	A6=B6	A5=B5	A4>B4	X	X	X	X	1	0
A7=B7	A6=B6	A5=B5	A4<B4	X	X	X	X	0	1
A7=B7	A6=B6	A5=B5	A4=B4	A3>B3	X	X	X	1	0
A7=B7	A6=B6	A5=B5	A4=B4	A3<B3	X	X	X	0	1
A7=B7	A6=B6	A5=B5	A4=B4	A3=B3	A2>B2	X	X	1	0
A7=B7	A6=B6	A5=B5	A4=B4	A3=B3	A2<B2	X	X	0	1
A7=B7	A6=B6	A5=B5	A4=B4	A3=B3	A2=B2	A1>B1	X	1	0
A7=B7	A6=B6	A5=B5	A4=B4	A3=B3	A2=B2	A1<B1	X	0	1
A7=B7	A6=B6	A5=B5	A4=B4	A3=B3	A2=B2	A1=B1	A0>B0	1	0
A7=B7	A6=B6	A5=B5	A4=B4	A3=B3	A2=B2	A1=B1	A0<B0	0	1
A7=B7	A6=B6	A5=B5	A4=B4	A3=B3	A2=B2	A1=B1	A0=B0	0	0

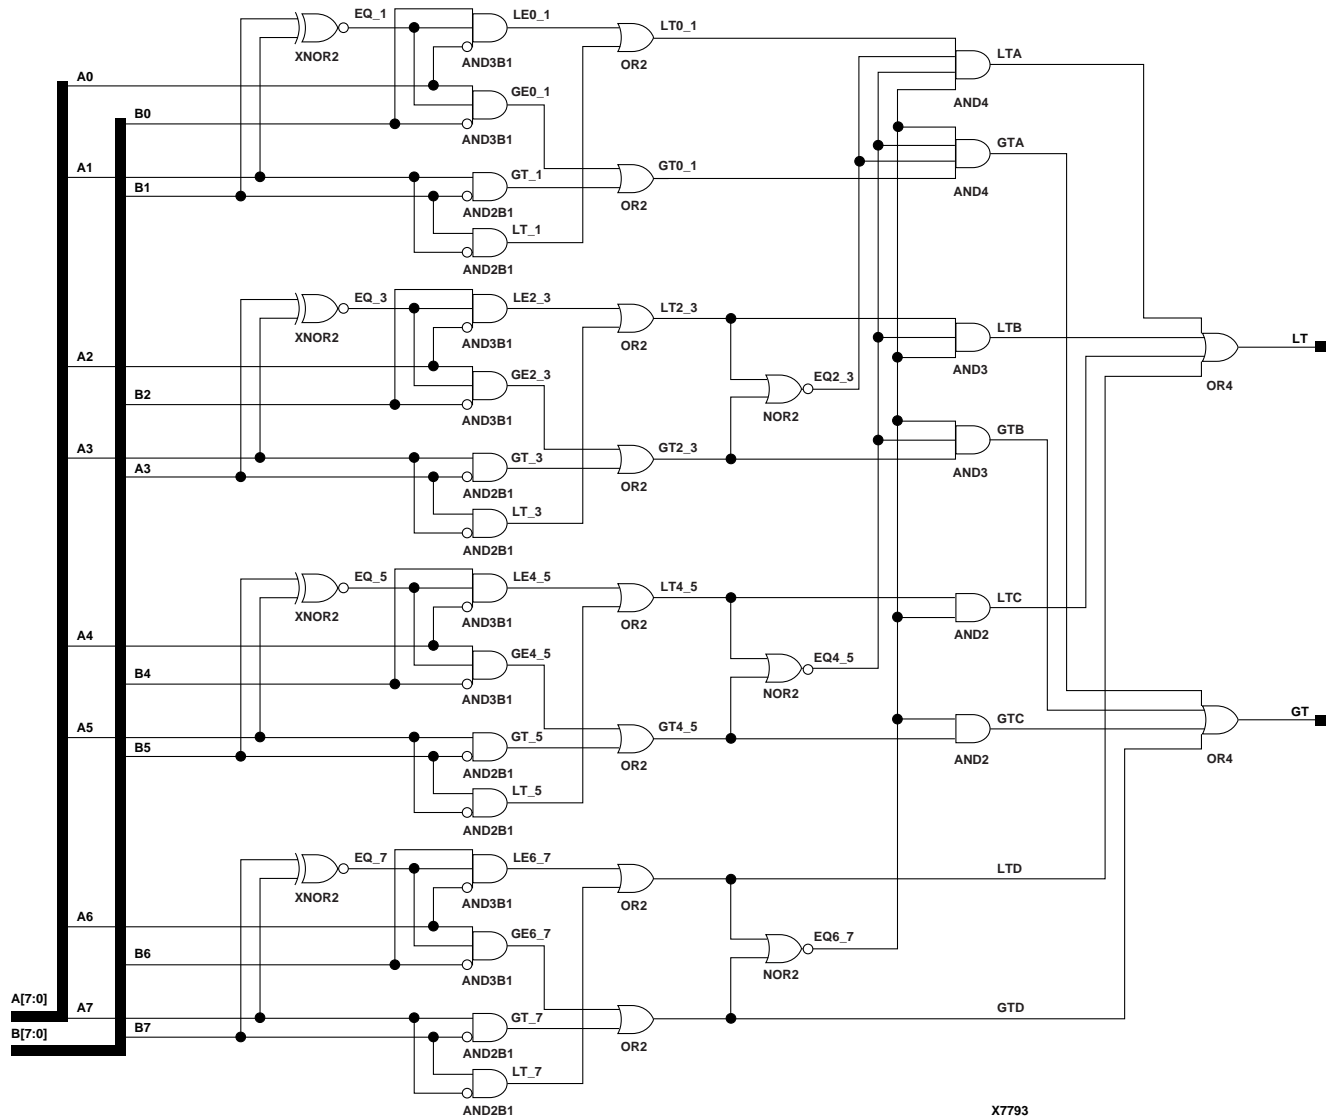

**COMPM8 Implementation Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

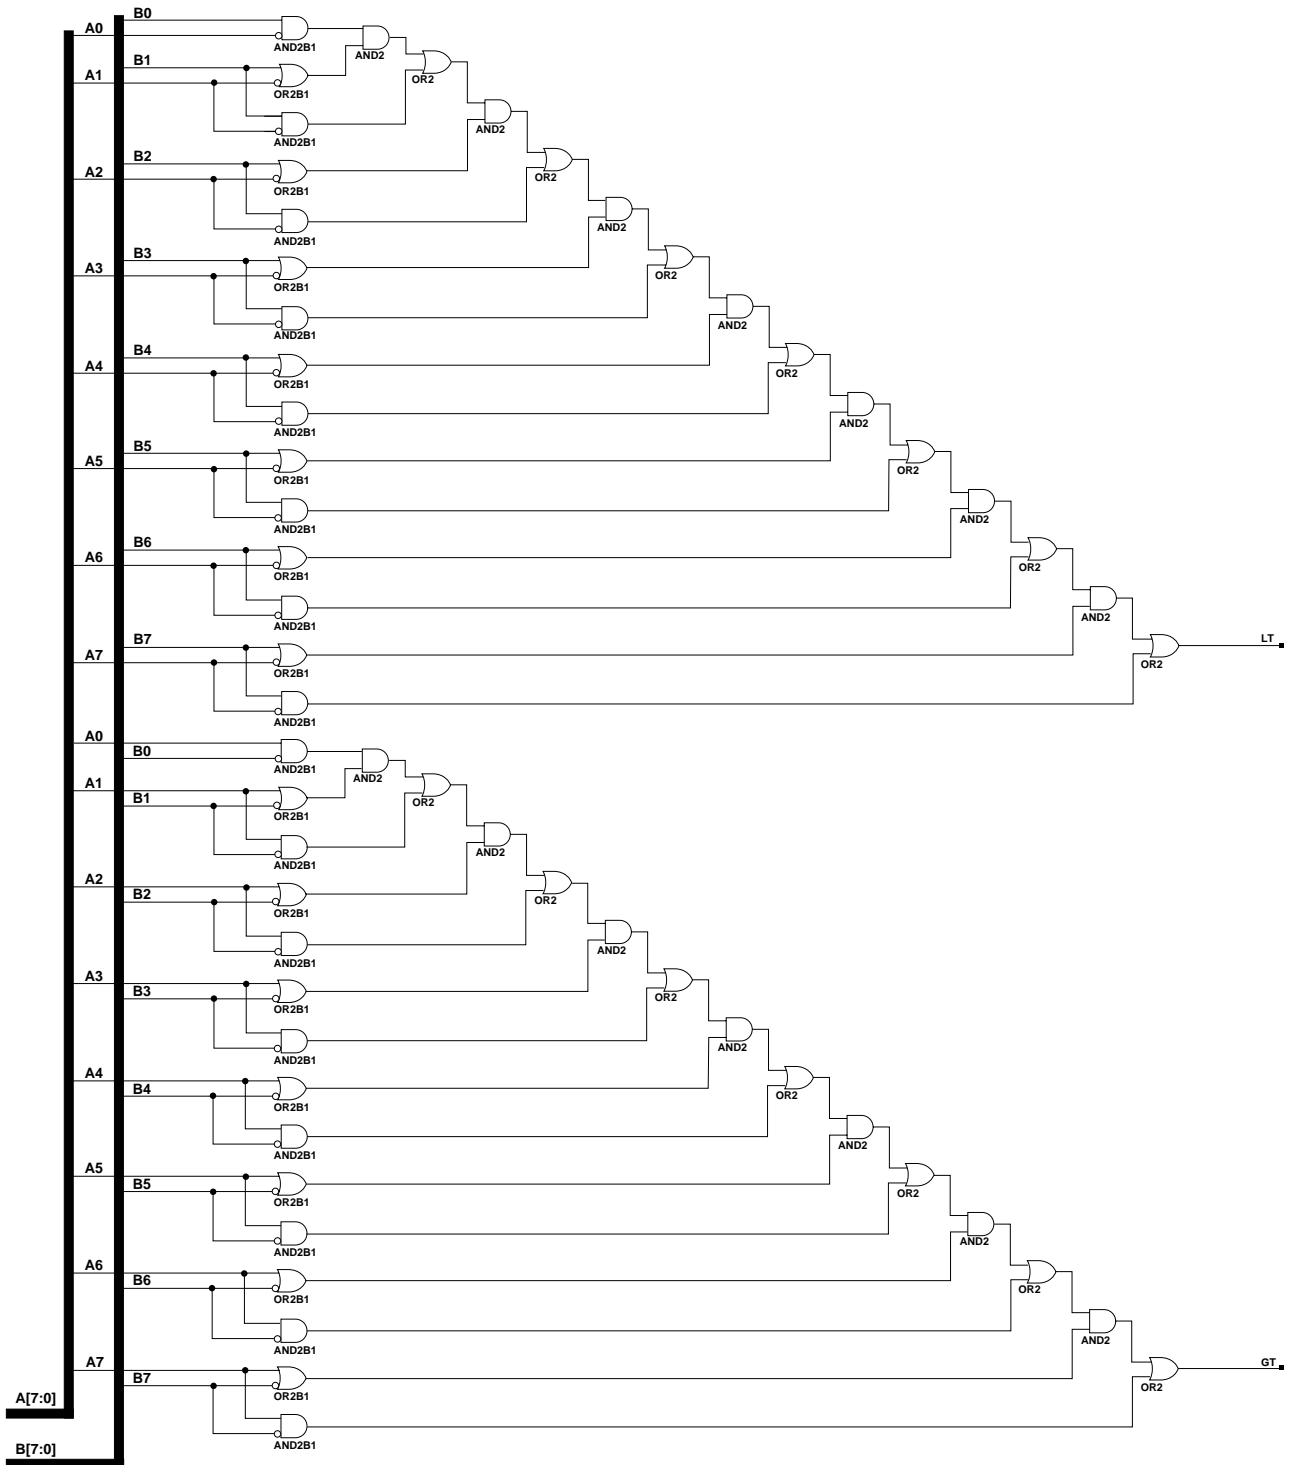

X7632

COMP8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

## Usage

For HDL, these design elements are supported for inference rather than instantiation.

## VHDL Inference Code

architecture Behavioral of compm2 is

```
begin
  process (A,B)
  begin
    if (A>B) then
      GT <= '1';
      LT <= '0';
    elsif (A<B) then
      GT <= '0';
      LT <= '1';
    else
      GT <= '0';
      LT <= '0';
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

always @ (A or B)

```
begin
  if (A > B)
  begin
    GT <= 1;
    LT <= 0;
  end
  else if (A < B)
  begin
    GT <= 0;
    LT <= 1;
  end
  else
  begin
    GT <= 0;
    LT <= 0;
  end
end
```




## COMP8, 16

### 8-, 16-Bit Magnitude Comparators


#### Architectures Supported

COMP8, COMP8, COMP8	
Spartan-II, Spartan-III	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

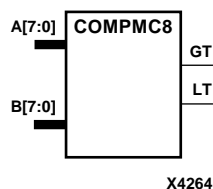

COMP8 is an 8-bit, magnitude comparator that compares two positive binary-weighted words A7 – A0 and B7 – B0, where A7 and B7 are the most significant bits. COMP16 is a 16-bit, magnitude comparator that compares two positive binary-weighted words A15 – A0 and B15 – B0, where A15 and B15 are the most significant bits.

These comparators are implemented using carry logic with relative location constraints to ensure efficient logic placement.

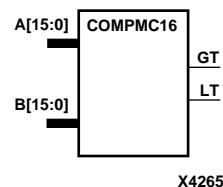


The greater-than output (GT) is High when A>B, and the less-than output (LT) is High when A<B. When the two words are equal, both GT and LT are Low. Equality can be flagged with this macro by connecting both outputs to a NOR gate.

#### COMP8 Truth Table (also representative of COMP16)

Inputs								Outputs	
A7, B7	A6, B6	A5, B5	A4, B4	A3, B3	A2, B2	A1, B1	A0, B0	GT	LT
A7>B7	X	X	X	X	X	X	X	1	0
A7<B7	X	X	X	X	X	X	X	0	1
A7=B7	A6>B6	X	X	X	X	X	X	1	0
A7=B7	A6<B6	X	X	X	X	X	X	0	1
A7=B7	A6=B6	A5>B5	X	X	X	X	X	1	0
A7=B7	A6=B6	A5<B5	X	X	X	X	X	0	1
A7=B7	A6=B6	A5=B5	A4>B4	X	X	X	X	1	0
A7=B7	A6=B6	A5=B5	A4<B4	X	X	X	X	0	1
A7=B7	A6=B6	A5=B5	A4=B4	A3>B3	X	X	X	1	0
A7=B7	A6=B6	A5=B5	A4=B4	A3<B3	X	X	X	0	1
A7=B7	A6=B6	A5=B5	A4=B4	A3=B3	A2>B2	X	X	1	0
A7=B7	A6=B6	A5=B5	A4=B4	A3=B3	A2<B2	X	X	0	1
A7=B7	A6=B6	A5=B5	A4=B4	A3=B3	A2=B2	A1>B1	X	1	0


COMP8 Truth Table (also representative of COMP16)

Inputs								Outputs	
A7, B7	A6, B6	A5, B5	A4, B4	A3, B3	A2, B2	A1, B1	A0, B0	GT	LT
A7=B7	A6=B6	A5=B5	A4=B4	A3=B3	A2=B2	A1<B1	X	0	1
A7=B7	A6=B6	A5=B5	A4=B4	A3=B3	A2=B2	A1=B1	A0>B0	1	0
A7=B7	A6=B6	A5=B5	A4=B4	A3=B3	A2=B2	A1=B1	A0<B0	0	1
A7=B7	A6=B6	A5=B5	A4=B4	A3=B3	A2=B2	A1=B1	A0=B0	0	0

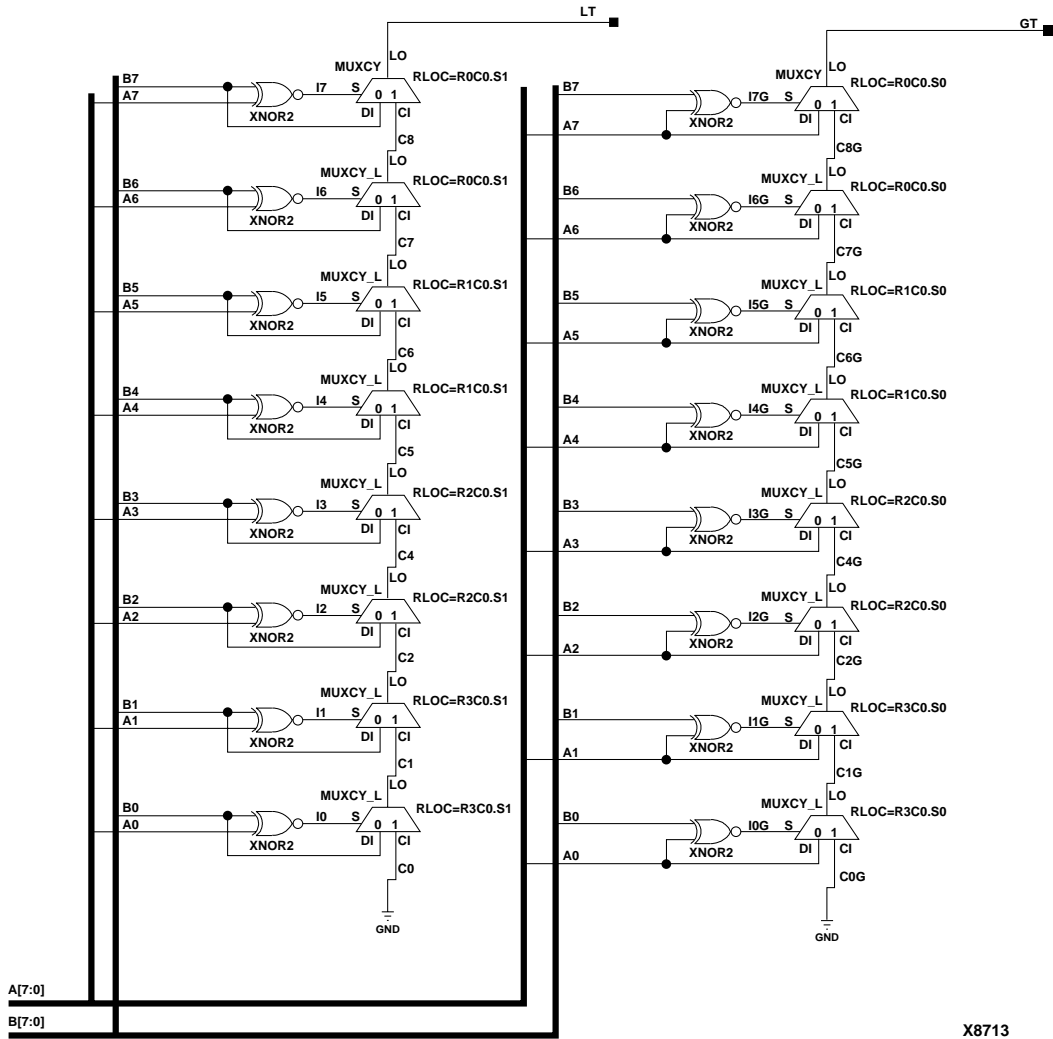

COMP8 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E



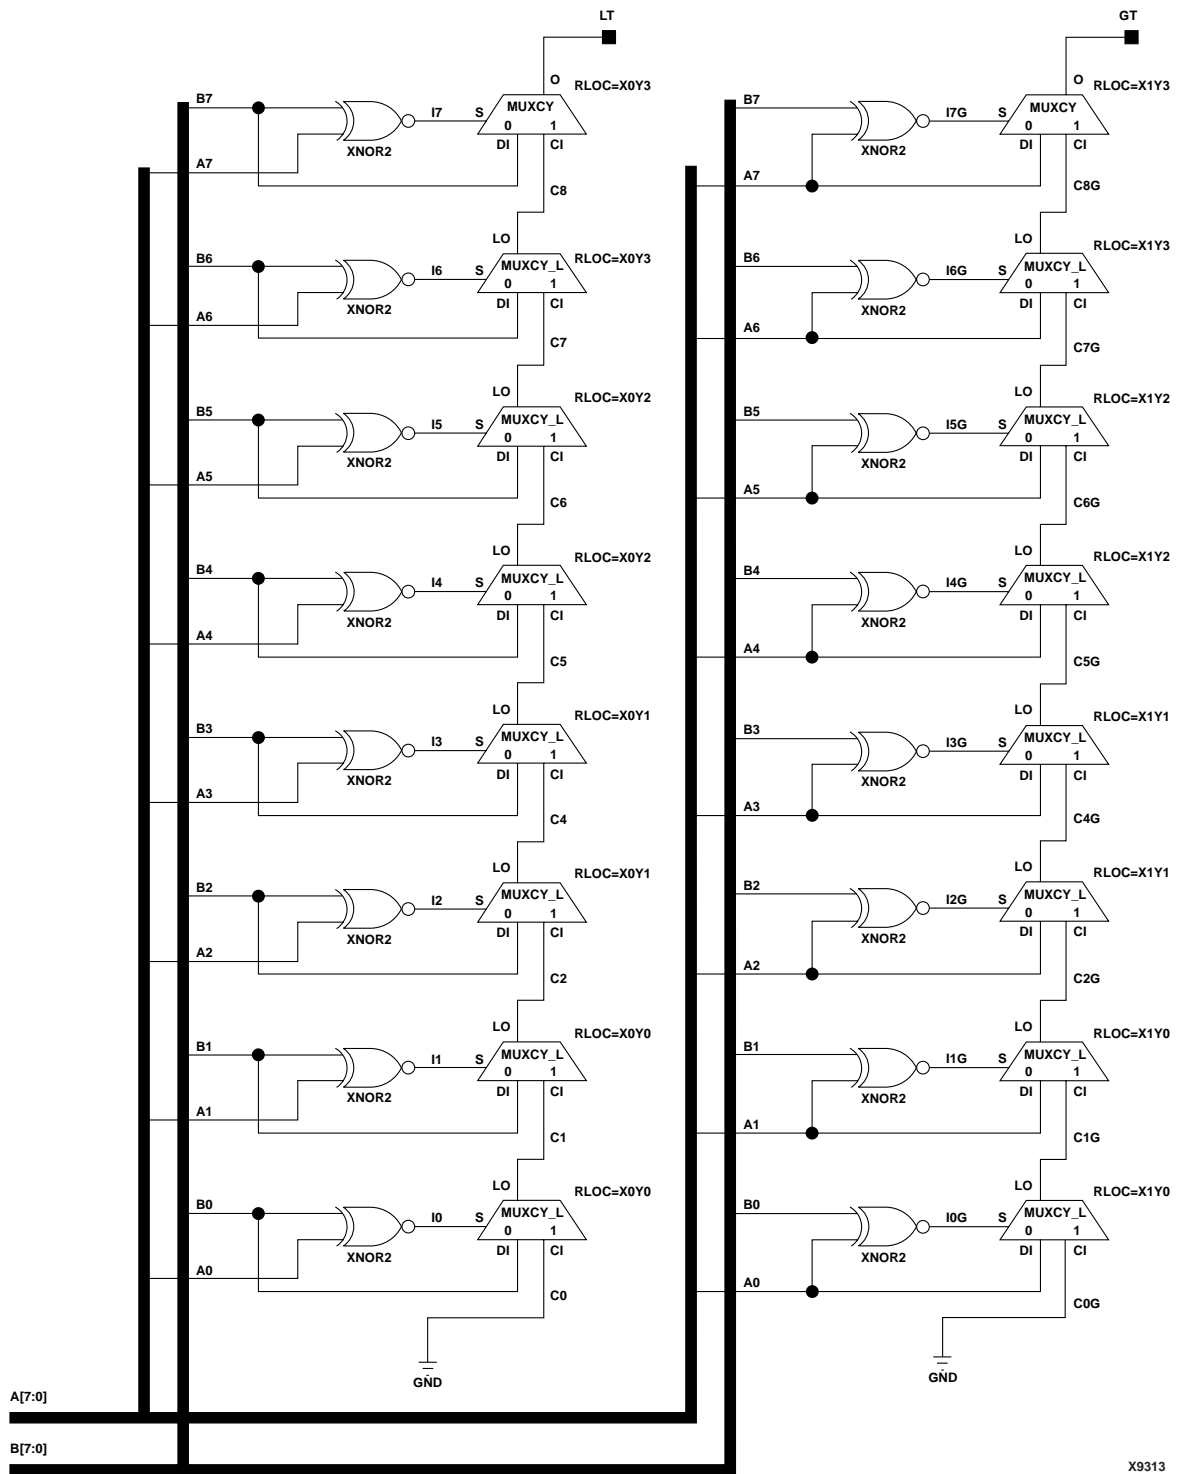

COMP8 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

## Usage

For HDL, these design elements are supported for inference rather than instantiation.

## VHDL Inference Code

architecture Behavioral of compmc8 is

```
begin
  process (A,B)
  begin
    if (A>B) then
      GT <= '1';
      LT <= '0';
    elsif (A<B) then
      GT <= '0';
      LT <= '1';
    else
      GT <= '0';
      LT <= '0';
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code



```
always @(A or B)
begin
  if (A > B)
  begin
    GT <= 1;
    LT <= 0;
  end
  else if (A < B)
  begin
    GT <= 0;
    LT <= 1;
  end
  else
  begin
    GT <= 0;
    LT <= 0;
  end
end
```

## CR8CE, CR16CE

### 8-, 16-Bit Negative-Edge Binary Ripple Counters with Clock Enable and Asynchronous Clear

#### Architectures Supported

CR8CE, CR16CE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

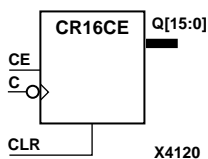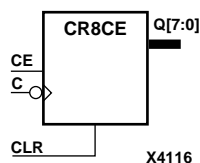

CR8CE and CR16CE are 8-bit and 16-bit, cascadable, clearable, binary, ripple counters. The asynchronous clear (CLR), when High, overrides all other inputs and causes the Q outputs to go to logic level zero. The counter increments when the clock enable input (CE) is High during the High-to-Low clock (C) transition. The counter ignores clock transitions when CE is Low.

Larger counters can be created by connecting the last Q output (Q7 for CR8CE, Q15 for CR16CE) of the first stage to the clock input of the next stage. CLR and CE inputs are connected in parallel. The clock period is not affected by the overall length of a ripple counter. The overall clock-to-output propagation is  $n(t_{C-Q})$ , where  $n$  is the number of stages and the time  $t_{C-Q}$  is the C-to-Qz propagation delay of each stage.

The counter is asynchronously cleared, output Low, when power is applied.


For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
CLR	CE	C	Qz – Q0
1	X	X	0
0	0	X	No Chg
0	1	↓	Inc

$z = 7$  for CR8CE;  $z = 15$  for CR16CE.

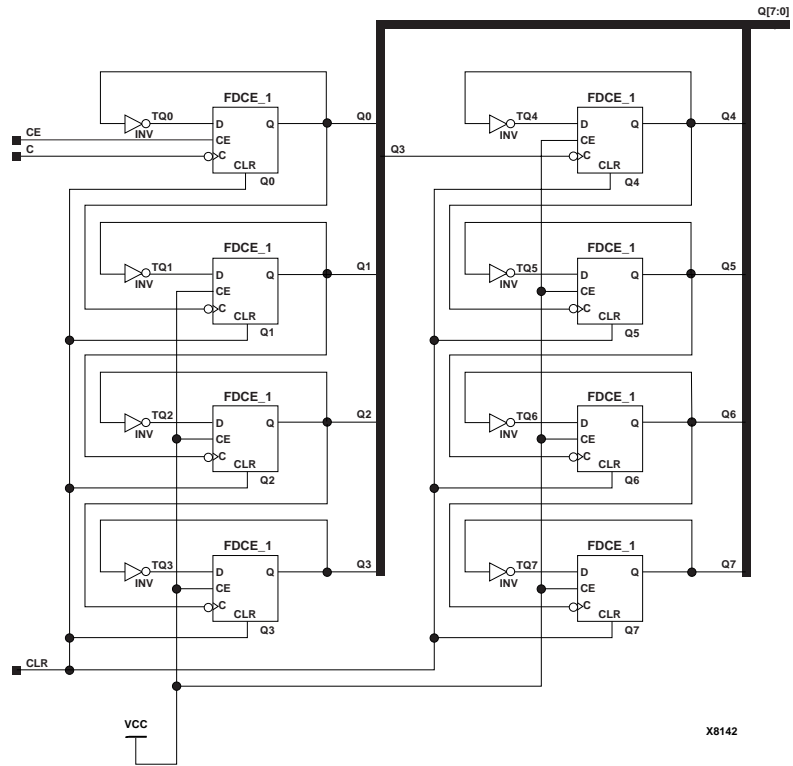

**CR8CE Implementation Spartan-II, Spartan-II-E, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

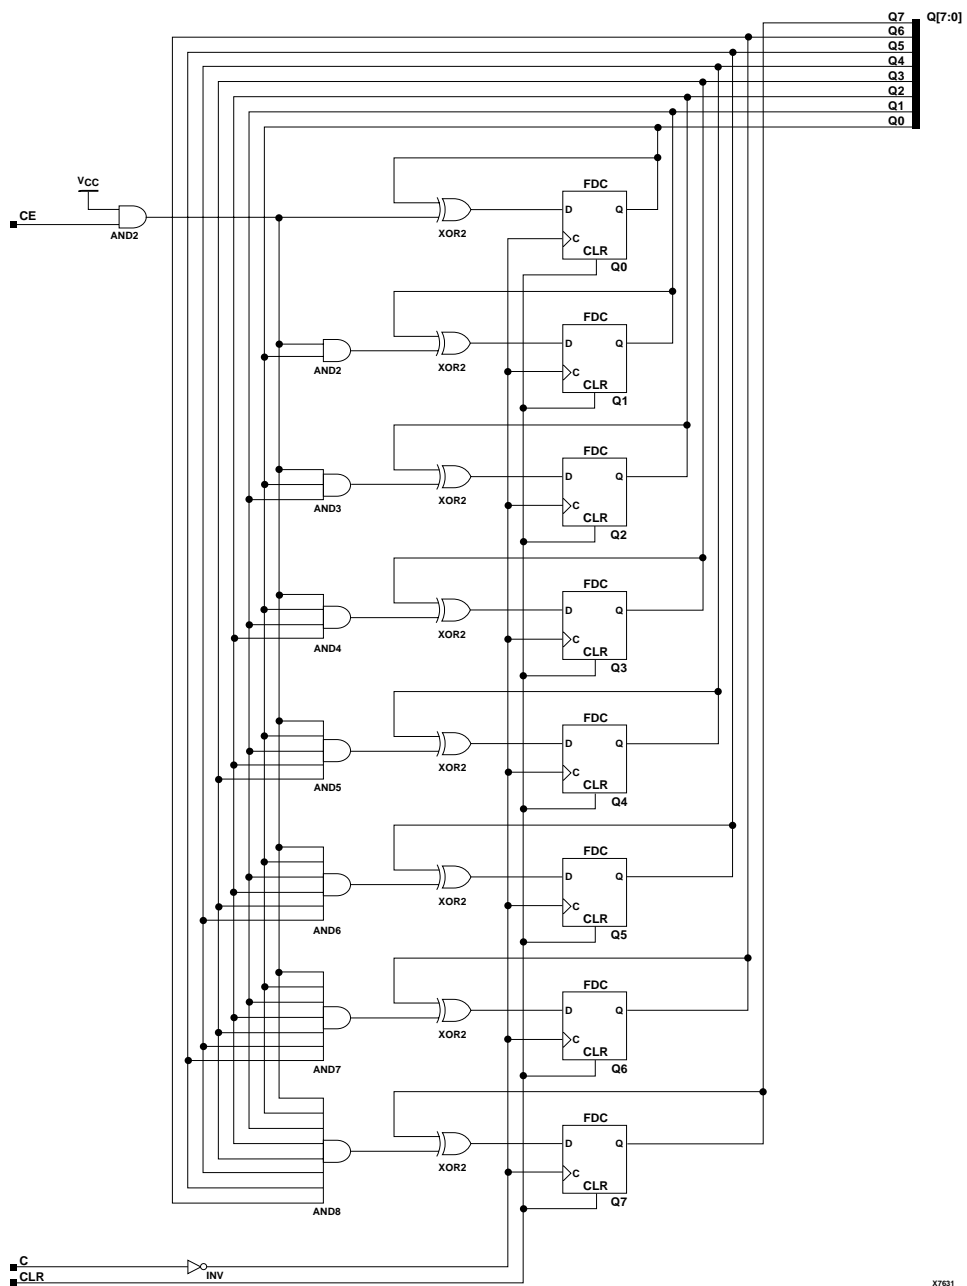

CR8CE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

## Usage

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of cr8ce is

begin

process (C, CLR)
begin
    if (CLR='1') then
        Q <= (others => '0');
    elsif (C' event and C='0') then
        if (CE='1') then
            Q <= Q + 1;
        end if;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code



```
always @(posedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else if (CE)
        Q <= Q + 1;
end
```

## CRD8CE, CRD16CE

### 8-, 16-Bit Dual-Edge Triggered Binary Ripple Counters with Clock Enable and Asynchronous Clear

#### Architectures Supported

CRD8CE, CRD16CE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

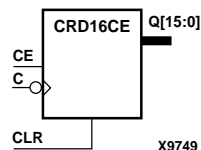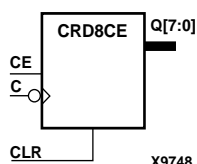


CRD8CE and CRD16CE are dual edge triggered 8-bit and 16-bit, cascadable, clearable, binary, ripple counters. The asynchronous clear (CLR), when High, overrides all other inputs and causes the Q outputs to go to logic level zero. The counter increments when the clock enable input (CE) is High during the High-to-Low and Low-to-High clock (C) transitions. The counter ignores clock transitions when CE is Low.

Larger counters can be created by connecting the last Q output (Q7 for CRD8CE, Q15 for CRD16CE) of the first stage to the clock input of the next stage. CLR and CE inputs are connected in parallel. The clock period is not affected by the overall length of a ripple counter. The overall clock-to-output propagation is  $n(t_{C-Q})$ , where  $n$  is the number of stages and the time  $t_{C-Q}$  is the C-to-Qz propagation delay of each stage.

The counter is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs			Outputs
CLR	CE	C	Qz – Q0
1	X	X	0
0	0	X	No Chg
0	1	↑	Inc
0	1	↓	Inc

$z = 7$  for CR8CE;  $z = 15$  for CR16CE.

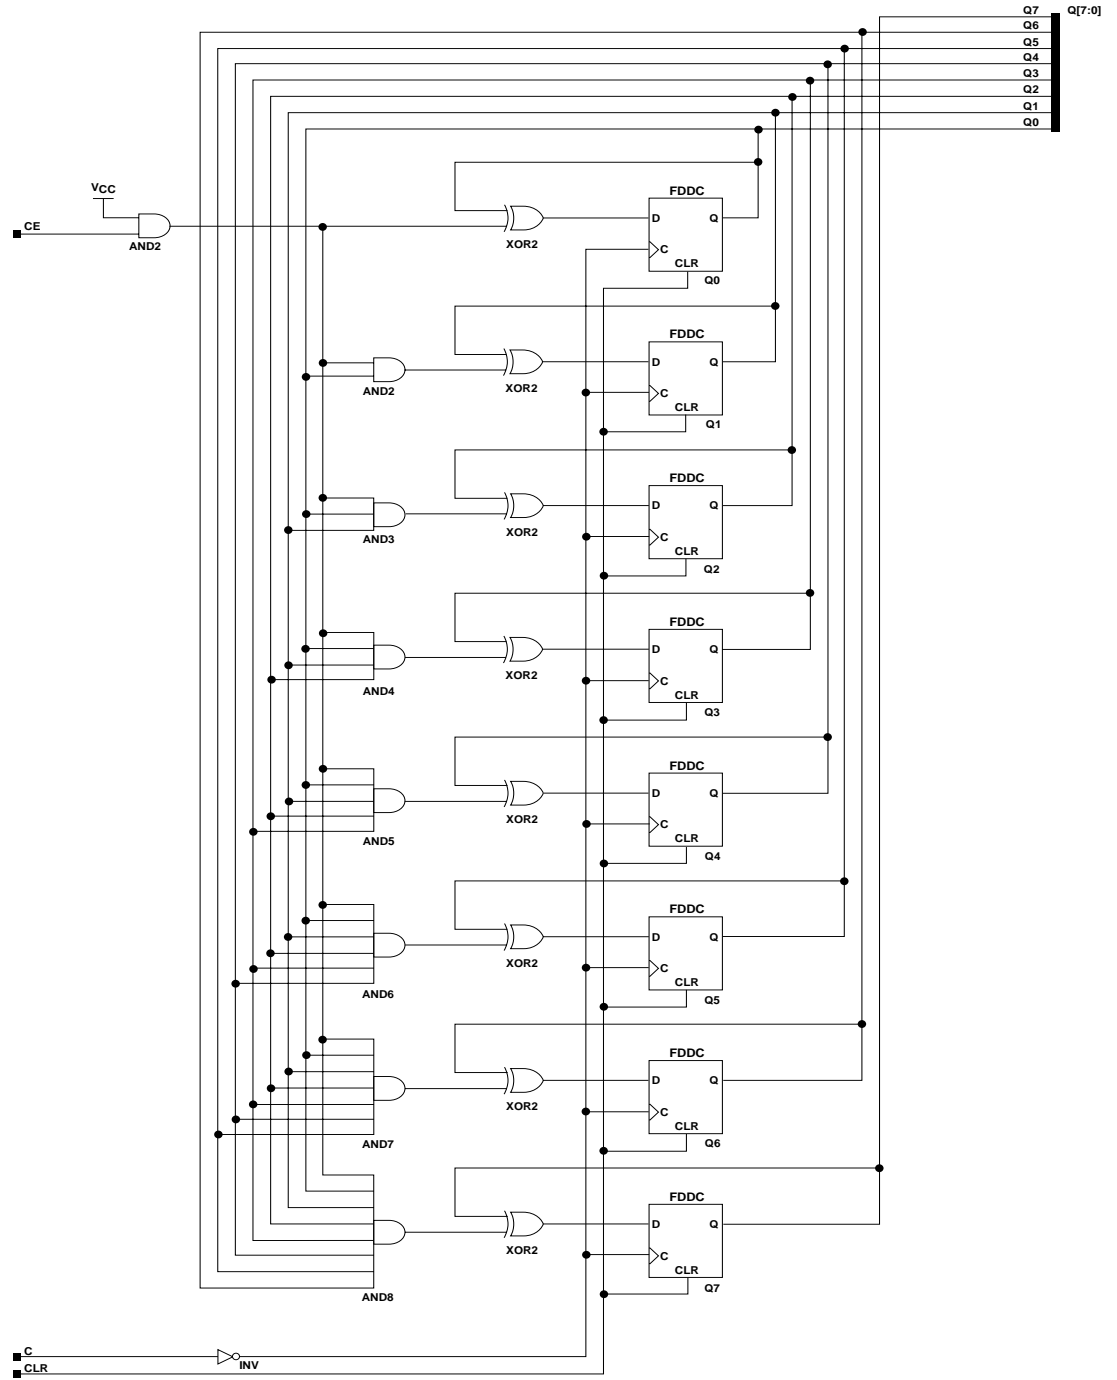

CRD8CE Implementation CoolRunner-II

X9750



## Usage

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of crd8ce is

begin

process (C, CLR)
begin
    if (CLR='1') then
        Q <= (others => '0');
    elsif (C' event) then
        if (CE='1') then
            Q <= Q + 1;
        end if;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @(posedge C or negedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else if (CE)
        Q <= Q + 1;
end
```




## D2\_4E

### 2- to 4-Line Decoder/Demultiplexer with Enable


#### Architectures Supported

D2_4E	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

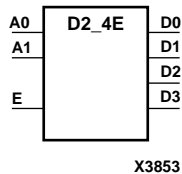

When the enable (E) input of the D2\_4E decoder/demultiplexer is High, one of four active-High outputs (D3 – D0) is selected with a 2-bit binary address (A1 – A0) input. The non-selected outputs are Low. Also, when the E input is Low, all outputs are Low. In demultiplexer applications, the E input is the data input.

Inputs			Outputs			
A1	A0	E	D3	D2	D1	D0
X	X	0	0	0	0	0
0	0	1	0	0	0	1
0	1	1	0	0	1	0
1	0	1	0	1	0	0
1	1	1	1	0	0	0

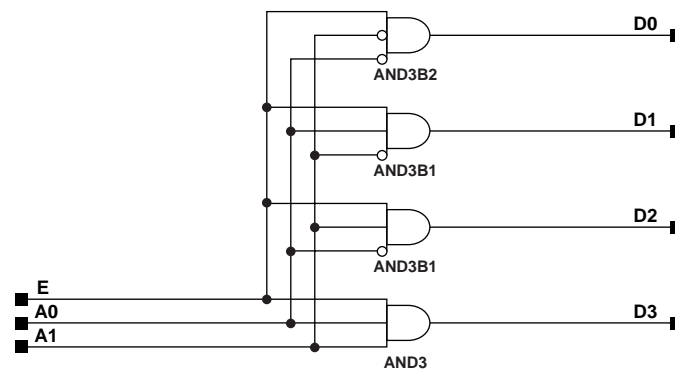

X7794

D2\_4E Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X

## Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of d2_4e is

begin

process (A, E)
begin
if (E='0') then
D <= "0000";
else
case A is
when "00" =>
D <= "0001";
when "01" =>
D <= "0010";
when "10" =>
D <= "0100";
when "11" =>
D <= "1000";
when others =>
D <= "0000";
end case;
end if;
end process;

end Behavioral;
```

## Verilog Inference Code


```
always @ (A or E)
begin
if (!E)
D <= 4'b0000;
else
begin
case (A)
2'b00 : D <= 4'b0001;
2'b01 : D <= 4'b0010;
2'b10 : D <= 4'b0100;
2'b11 : D <= 4'b1000;
endcase
end
end
```

## D3\_8E

### 3- to 8-Line Decoder/Demultiplexer with Enable


#### Architectures Supported

D3_8E	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

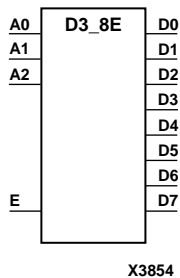

When the enable (E) input of the D3\_8E decoder/demultiplexer is High, one of eight active-High outputs (D7 – D0) is selected with a 3-bit binary address (A2 – A0) input. The non-selected outputs are Low. Also, when the E input is Low, all outputs are Low. In demultiplexer applications, the E input is the data input.

Inputs				Outputs							
A2	A1	A0	E	D7	D6	D5	D4	D3	D2	D1	D0
X	X	X	0	0	0	0	0	0	0	0	0
0	0	0	1	0	0	0	0	0	0	0	1
0	0	1	1	0	0	0	0	0	0	1	0
0	1	0	1	0	0	0	0	0	1	0	0
0	1	1	1	0	0	0	0	1	0	0	0
1	0	0	1	0	0	0	1	0	0	0	0
1	0	1	1	0	0	1	0	0	0	0	0
1	1	0	1	0	1	0	0	0	0	0	0
1	1	1	1	1	0	0	0	0	0	0	0

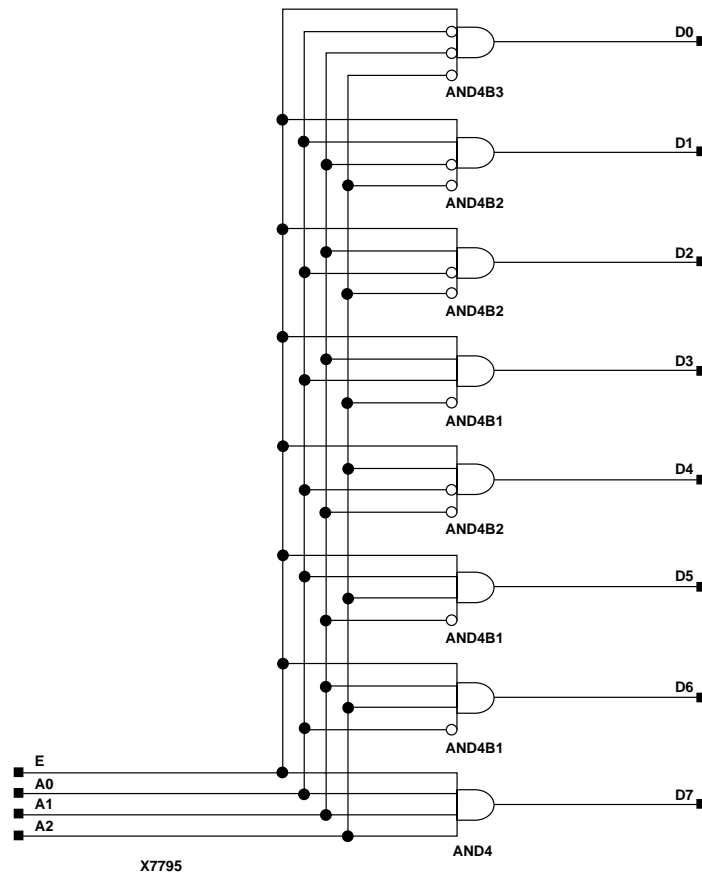

**D3\_8E Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

## Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

architecture Behavioral of d3\_8e is

begin

process (A, E)

begin

if (E='0') then

  D <= "00000000";

else

  case A is

    when "000" =>

      D <= "00000001";

    when "001" =>

      D <= "00000010";

    when "010" =>

      D <= "00000100";

    when "011" =>

      D <= "00001000";

```
        when "100" =>
            D <= "00010000";
        when "101" =>
            D <= "00100000";
        when "110" =>
            D <= "01000000";
        when "111" =>
            D <= "10000000";
    when others =>
        D <= "00000000";
    end case;
end if;
end process;

end Behavioral;
```

### Verilog Inference Code

```
always @ (A or E)
begin
    if (!E)
        D <= 8'b00000000;
    else
        begin
            case (A)
                3'b000 : D <= 8'b00000001;
                3'b001 : D <= 8'b00000010;
                3'b010 : D <= 8'b00000100;
                3'b011 : D <= 8'b00001000;
                3'b100 : D <= 8'b00010000;
                3'b101 : D <= 8'b00100000;
                3'b110 : D <= 8'b01000000;
                3'b111 : D <= 8'b10000000;
            endcase
        end
    end
end
```






## D4\_16E

### 4- to 16-Line Decoder/Demultiplexer with Enable


#### Architectures Supported

D4_16E	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

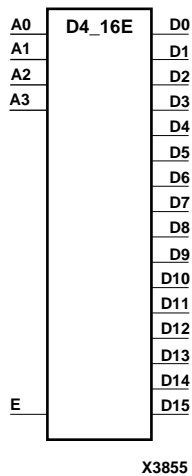

When the enable (E) input of the D4\_16E decoder/demultiplexer is High, one of 16 active-High outputs (D15 – D0) is selected with a 4-bit binary address (A3 – A0) input. The non-selected outputs are Low. Also, when the E input is Low, all outputs are Low. In demultiplexer applications, the E input is the data input.

See “D3\_8E” for a representative truth table derivation.

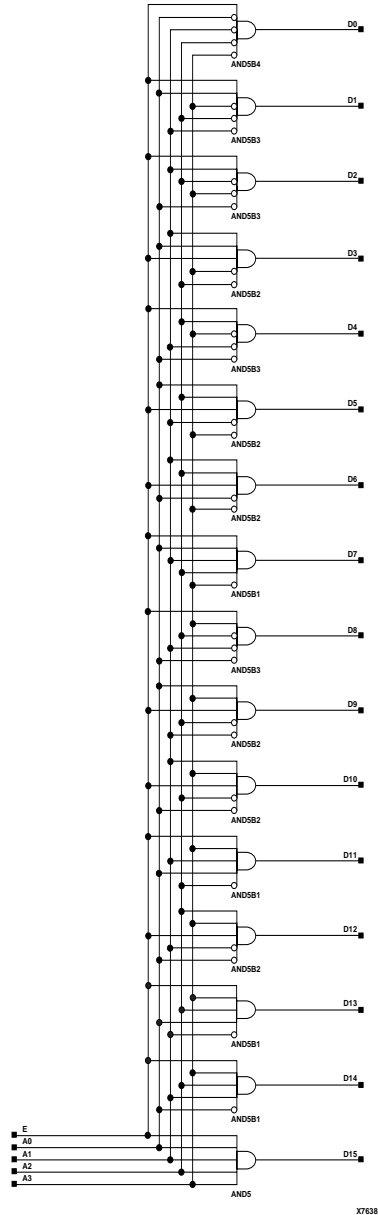

**D4\_16E Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

### Usage

For HDL, this design element is inferred rather than instantiated.

### VHDL Inference Code

architecture Behavioral of d4\_16e is

```
begin
process (A, E)
begin
```

```

if (E='0') then
  D <= "0000000000000000";
else
  case A is
    when "0000" =>
      D <= "0000000000000001";
    when "0001" =>
      D <= "0000000000000010";
    when "0010" =>
      D <= "0000000000000100";
    when "0011" =>
      D <= "0000000000001000";
    when "0100" =>
      D <= "0000000000010000";
    when "0101" =>
      D <= "0000000000100000";
    when "0110" =>
      D <= "0000000001000000";
    when "0111" =>
      D <= "0000000010000000";
    when "1000" =>
      D <= "0000000100000000";
    when "1001" =>
      D <= "0000001000000000";
    when "1010" =>
      D <= "0000010000000000";
    when "1011" =>
      D <= "0000100000000000";
    when "1100" =>
      D <= "0001000000000000";
    when "1101" =>
      D <= "0010000000000000";
    when "1110" =>
      D <= "0100000000000000";
    when "1111" =>
      D <= "1000000000000000";
    when others =>
      D <= "0000000000000000";
  end case;
end if;
end process;

end Behavioral;

```

## Verilog Inference Code

```

always @ (A or E)
begin
  if (!E)
    D <= 16'b0000000000000000;
  else
    begin
      case (A)
        4'b0000 : D <= 16'b0000000000000001;
        4'b0001 : D <= 16'b0000000000000010;
        4'b0010 : D <= 16'b0000000000000100;
        4'b0011 : D <= 16'b0000000000001000;
        4'b0100 : D <= 16'b0000000000010000;

```

```
4'b0101 : D <= 16'b0000000000100000;  
4'b0110 : D <= 16'b0000000001000000;  
4'b0111 : D <= 16'b0000000010000000;  
4'b1000 : D <= 16'b0000000100000000;  
4'b1001 : D <= 16'b0000001000000000;  
4'b1010 : D <= 16'b0000010000000000;  
4'b1011 : D <= 16'b0000100000000000;  
4'b1100 : D <= 16'b0001000000000000;  
4'b1101 : D <= 16'b0010000000000000;  
4'b1110 : D <= 16'b0100000000000000;  
4'b1111 : D <= 16'b1000000000000000;  
endcase  
end  
end
```






## DCM

### Digital Clock Manager

#### Architectures Supported

DCM	
Spartan-II, Spartan-III	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

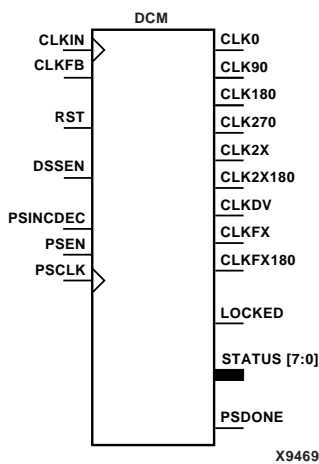

DCM is a digital clock manager that provides multiple functions. It can implement a clock delay locked loop, a digital frequency synthesizer, digital phase shifter, and a digital spread spectrum.

**Note:** All unused inputs must be driven Low. The program will automatically tie the inputs Low if they are unused.

#### Clock Delay Locked Loop (DLL)

DCM includes a clock delay locked loop used to minimize clock skew for Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X devices. DCM synchronizes the clock signal at the feedback clock input (CLKFB) to the clock signal at the input clock (CLKIN). The locked output (LOCKED) is high when the two signals are in phase. The signals are considered to be in phase when their rising edges are within a specified time (ps) of each other. See *The Programmable Logic Data Book* for the specified time value.

DCM supports two frequency modes for the DLL. By default, the DLL\_FREQUENCY\_MODE attribute is set to Low and the frequency of the clock signal at the CLKIN input must be in the Low (DLL\_CLKIN\_MIN\_LF to DLL\_CLKIN\_MAX\_LF) frequency range (MHz). See *The Programmable Logic Data Book* for the current DLL\_CLKIN\_MIN\_LF to DLL\_CLKIN\_MAX\_LF frequency range values. In Low frequency mode, the CLK0, CLK90, CLK180, CLK270, CLK2X, CLKDV, and CLK2X180 outputs are available.

When the DLL\_FREQUENCY\_MODE attribute is set to High, the frequency of the clock signal at the CLKIN input must be in the High (DLL\_CLKIN\_MIN\_HF to DLL\_CLKIN\_MAX\_HF) frequency range (MHz). See *The Programmable Logic Data Book* for the current DLL\_CLKIN\_MIN\_HF to DLL\_CLKIN\_MAX\_HF frequency range values. In High frequency mode, only the CLK0, CLK180, and CLKDV outputs are available.

On-chip synchronization is achieved by connecting the CLKFB input to a point on the global clock network driven by a BUFG, a global clock buffer. The BUFG connected to the CLKFB input of the DCM must be sourced from either the CLK0 or CLK2X outputs of the same DCM. The CLKIN input should be connected to the output of an IBUFG, with the IBUFG input connected to a pad driven by the system clock.

Off-chip synchronization is achieved by connecting the CLKFB input to the output of an IBUFG, with the IBUFG input connected to a pad. Either the CLK0 or CLK2X output can be used but not both. The CLK0 or CLK2X must be connected to the input of OBUF, an output buffer. The CLK\_FEEDBACK attribute controls whether the CLK0 output, the default, or the CLK2X output is the source of the CLKFB input.

The duty cycle of the CLK0 output is 50-50 unless the DUTY\_CYCLE\_CORRECTION attribute is set to FALSE, in which case the duty cycle is the same as that of the CLKIN input. The duty cycle of the phase shifted outputs (CLK90, CLK180, and CLK270) is the same as that of the CLK0 output. The duty cycle of the CLK2X, CLK2X180, and CLKDV outputs is 50-50 unless CLKDV\_DIVIDE is a non-integer and the DLL\_FREQUENCY\_MODE is High (see “CLKDV\_DIVIDE,” in the *Constraints Guide* for details). The frequency of the CLKDV output is determined by the value assigned to the CLKDV\_DIVIDE attribute.

**DCM Clock Delay Lock Loop Outputs**

Output	Description
CLK0	Clock at 1x CLKIN frequency
CLK180	Clock at 1x CLK0 frequency, shifted 180° with regards to CLK0
CLK270*	Clock at 1x CLK0 frequency, shifted 270° with regards to CLK0
CLK2X*	Clock at 2x CLK0 frequency, in phase with CLK0
CLK2X180*	Clock at 2x CLK0 frequency shifted 180° with regards to CLK2X
CLK90*	Clock at 1x CLK0 frequency, shifted 90° with regards to CLK0
CLKDV	Clock at (1/n) x CLK0 frequency, where n=CLKDV_DIVIDE value. CLKDV is in phase with CLK0.
LOCKED	All enabled DCM features locked.

\* The CLK90, CLK270, CLK2X, and CLK2X180 outputs are *not* available if the DLL\_FREQUENCY\_MODE is set to High.

**Digital Frequency Synthesizer (DFS)**

The CLKFX and CLKFX180 outputs in conjunction with the CLKFX\_MULTIPLY and CLKFX\_DIVIDE attributes provide a frequency synthesizer that can be any multiple or division of CLKIN. CLKFX and CLKIN are in phase every CLKFX\_MULTIPLY cycles of CLKFX and every CLKFX\_DIVIDE cycles of CLKIN when a feedback is provided to the CLKFB input of the DLL. The frequency of CLKFX is defined by the following equation.

$$\text{Frequency}_{\text{CLKFX}} = (\text{CLKFX\_MULTIPLY\_value} / \text{CLKFX\_DIVIDE\_value}) * \text{Frequency}_{\text{CLKIN}}$$

Both the CLKFX or CLKFX180 output can be used simultaneously.

CLKFX180 is 1x the CLKFX frequency, shifted 180° with regards to CLKFX. CLKFX and CLKFX180 always have a 50/50 duty cycle.

The DFS\_FREQUENCY\_MODE attribute specifies the allowable input clock and output clock frequency ranges.

The CLK\_FEEDBACK attribute set to NONE will cause the DCM to be in the Digital Frequency Synthesizer mode. The CLKFX and CLKFX180 will be generated without phase correction with respect to CLKIN.

See *The Programmable Logic Data Book* for the allowable frequency range of CLKFX.



## Digital Phase Shifter (DPS)

The phase shift (skew) between the rising edges of CLKIN and CLKFB may be configured as a fraction of the CLKIN period with the PHASE\_SHIFT attribute. This allows the phase shift to remain constant as ambient conditions change. The CLKOUT\_PHASE\_SHIFT attribute controls the use of the PHASE\_SHIFT value. By default, the CLKOUT\_PHASE\_SHIFT attribute is set to NONE and the PHASE\_SHIFT attribute has no effect.

By creating skew between CLKIN and CLKFB, all DCM output clocks are phase shifted by the amount of the skew.

When the CLKOUT\_PHASE\_SHIFT attribute is set to FIXED, the skew set by the PHASE\_SHIFT attribute is used at configuration for the rising edges of CLKIN and CLKFB. The skew remains constant.

When the CLKOUT\_PHASE\_SHIFT attribute is set to VARIABLE, the skew set at configuration is used as a starting point and the skew value can be changed dynamically during operation using the PS\* signals. This digital phase shifter feature is controlled by a synchronous interface. The inputs PSEN (phase shift enable) and PSINCDEC (phase shift increment/decrement) are set up to the rising edge of PSCLK (phase shift clock). The PSDONE (phase shift done) output is clocked with the rising edge of PSCLK (the phase shift clock). PSDONE must be connected to implement the complete synchronous interface. The rising-edge skew between CLKIN and CLKFB may be dynamically adjusted after the LOCKED output goes High.

The PHASE\_SHIFT attribute value specifies the initial phase shift amount when the device is configured. Then the PHASE\_SHIFT value is changed one unit when PSEN is activated for one period of PSCLK. The PHASE\_SHIFT value is incremented when PSINCDEC is High and decremented when PSINCDEC is Low during the period that PSEN is High. When the DCM completes an increment or decrement operation, the PSDONE output goes High for a single PSCLK cycle to indicate the operation is complete. At this point the next change may be made. When RST (reset) is High, the PHASE\_SHIFT attribute value is reset to the skew value set at configuration.

If CLKOUT\_PHASE\_SHIFT is FIXED or NONE, the PSEN, PSINCDEC, and PSCLK inputs must be tied to GND. The program will automatically tie the inputs to GND if they are not connected by the user.

## Digital Spread Spectrum (DSS)

The digital spread spectrum function of DCM broadens the frequency spectrum of the output clocks to help meet FCC requirements. Spread spectrum clocking is a simple method to lower electromagnetic interference (EMI). A digital system can create a severe EMI spike at the clock frequency. Spread spectrum clocking speeds up and slows down the clock within a few percent of the target frequency, thus flattening out the EMI peak by spreading it across a range of frequencies.

When the DSS\_MODE attribute is set to NONE, the DSSSEN input has no effect. When DSS\_MODE is set to a value other than NONE and DSSSEN is High, the output clock frequency is modulated by the amount of spread specified by the DSS\_MODE value.

For Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the DSS feature of the DCM has limited EMI reduction capability.

For maximum EMI reduction an IP core available from Xilinx is recommended.

**Note:** DSS is not supported in Spartan-3.

## Additional Status Bits

The STATUS output bits return the following information.

### DCM Additional Status Bits

Bit	Description
0	Phase Shift Overflow* 1 =  PHASE_SHIFT  > 255
1	DLL CLKIN stopped** 1 = CLKIN stopped toggling
2	DLL CLKFX stopped 1 = CLKFX stopped toggling
3	N/A
4	N/A
5	N/A
6	N/A
7	N/A

\* Phase Shift Overflow will also go high if the end of the phase shift delay line is reached (see the product data sheet for the most current value of the maximum shifting delay).

\*\* If only the DFS outputs are used (CLKFX & CLKFX180), this status bit will not go high if CLKIN stops.

## LOCKED

When LOCKED is high, all enabled signals are locked.

## RST

The master reset input (RST) resets DCM to its initial (power-on) state. The signal at the RST input is asynchronous and must be held High for 2ns.

## Usage

This component is generally instantiated in the code as it cannot be easily inferred in synthesis tools. Some synthesis tools may allow inference via an attribute. See your synthesis tool documentation.

## VHDL Instantiation Template

```
-- Component Declaration for DCM should be placed
-- after architecture statement but before begin keyword
```

```
component DCM
```

```
-- synthesis translate_off
```

```
generic (CLK_FEEDBACK : string := "1X";
```

```
        CLKDV_DIVIDE : real := 2.0; -- (1.5, 2.0, 2.5, 3.0, 4.0, 5.0, 8.0, 16.0)
```

```
        CLKFX_DIVIDE : integer := 1; -- (1 to 4096)
```

```

    CLKFX_MULTIPLY : integer := 4; -- (1.5, 2.0, 2.5, 3.0, 3.5, 4.0, 5.0, 5.5,
    -- 6.0, 6.5, 7.0, 7.5, 8.0, 9.0, 10.0, 11.0, 12.0, 13.0, 14.0, 15.0, 16.0)
    CLKIN_DIVIDE_BY_2 : boolean := FALSE; -- (TRUE, FALSE)
    CLKOUT_PHASE_SHIFT : string := "NONE";
    DESKEW_ADJUST : string := "SYSTEM_SYNCHRONOUS";
    DFS_FREQUENCY_MODE : string := "LOW";
    DLL_FREQUENCY_MODE : string := "LOW";
    DSS_MODE : string := "NONE";
    DUTY_CYCLE_CORRECTION : Boolean := TRUE; -- (TRUE, FALSE)
    PHASE_SHIFT : real := 0;
    STARTUP_WAIT : boolean := FALSE); -- (TRUE, FALSE)
-- synthesis translate_on
port (CLK0 : out STD_ULOGIC;
      CLK180 : out STD_ULOGIC;
      CLK270 : out STD_ULOGIC;
      CLK2X : out STD_ULOGIC;
      CLK2X180 : out STD_ULOGIC;
      CLK90 : out STD_ULOGIC;
      CLKDV : out STD_ULOGIC;
      CLKFX : out STD_ULOGIC;
      CLKFX180 : out STD_ULOGIC;
      LOCKED : out STD_ULOGIC;
      PSDONE : out STD_ULOGIC;
      STATUS : out STD_LOGIC_VECTOR (7 downto 0);
      CLKFB : in STD_ULOGIC;
      CLKIN : in STD_ULOGIC;
      DSSEN : in STD_ULOGIC;
      PSCLK : in STD_ULOGIC;
      PSEN : in STD_ULOGIC;
      PSINCDEC : in STD_ULOGIC;
      RST : in STD_ULOGIC);
end component;

-- Component Attribute specification for DCM
-- should be placed after architecture declaration but

```

```
-- before the begin keyword

attribute CLK_FEEDBACK : string;
attribute CLKDV_DIVIDE : real;
attribute CLKFX_DIVIDE : integer;
attribute CLKFX_MULTIPLY : integer;
attribute CLKIN_DIVIDE_BY_2 : string;
attribute CLKOUT_PHASE_SHIFT : string;
attribute DESKEW_ADJUST : string;
attribute DFS_FREQUENCY_MODE : string;
attribute DLL_FREQUENCY_MODE : string;
attribute DSS_MODE : string;
attribute DUTY_CYCLE_CORRECTION : string;
attribute PHASE_SHIFT : real;
attribute STARTUP_WAIT : boolean;

attribute CLK_FEEDBACK of DCM_instance_name: label is "1X";
attribute CLKDV_DIVIDE of DCM_instance_name: label is 2.0;
-- (1.5,2,2.5,3,4, 5, 8, 16) are valid for CLKDV_DIVIDE
attribute CLKFX_DIVIDE of DCM_instance_name: label is 1;
attribute CLKFX_MULTIPLY of DCM_instance_name: label is 4;
attribute CLKIN_DIVIDE_BY_2 of DCM_instance_name: label is "FALSE";
attribute CLKOUT_PHASE_SHIFT of DCM_instance_name: label is "NONE";
attribute DESKEW_ADJUST of DCM_instance_name : label is
"SYSTEM_SYNCHRONOUS";
attribute DFS_FREQUENCY_MODE of DCM_instance_name: label is "LOW";
attribute DLL_FREQUENCY_MODE of DCM_instance_name: label is "LOW";
attribute DSS_MODE of DCM_instance_name: label is "NONE";
attribute DUTY_CYCLE_CORRECTION of DCM_instance_name: label is TRUE;
-- (TRUE, FALSE) are valid for DUTY_CYCLE_CORRECTION
attribute PHASE_SHIFT of DCM_instance_name: label is 0;
attribute STARTUP_WAIT of DCM_instance_name: label is FALSE; -- (TRUE,FALSE)

-- Component Instantiation for DCM should be placed
```

-- in architecture after the begin keyword

*DCM\_INSTANCE\_NAME* : DCM

-- synthesis translate\_off

```
generic map(CLK_FEEDBACK => "string_value",
            CLKDV_DIVIDE => real_value, -- (1.5,2,2.5,3,4,5,8,16)
            CLKFX_DIVIDE => integer_value,
            CLKFX_MULTIPLY => integer_value,
            CLKIN_DIVIDE_BY_2 => boolean_value, -- (TRUE, FALSE)
            CLKOUT_PHASE_SHIFT => "string_value",
            DESKEW_ADJUST => "string_value",
            DFS_FREQUENCY_MODE => "string_value",
            DLL_FREQUENCY_MODE => "string_value",
            DSS_MODE => "string_value",
            DUTY_CYCLE_CORRECTION => boolean_value, -- (TRUE, FALSE)
            PHASE_SHIFT => integer_value,
            STARTUP_WAIT => boolean) -- (TRUE, FALSE)
```

-- synthesis translate\_on

```
port map (CLK0 => user_CLK0,
          CLK180 => user_CLK180,
          CLK270 => user_CLK270,
          CLK2X => user_CLK2X,
          CLK2X180 => user_CLK2X180,
          CLK90 => user_CLK90,
          CLKDV => user_CLKDV,
          CLKFX => user_CLKFX,
          CLKFX180 => user_CLKFX180,
          LOCKED => user_LOCKED)
PSDONE => user_PSDONE,
STATUS => user_STATUS,
CLKFB => user_CLKFB,
CLKIN => user_CLKIN,
DSSSEN => user_DSSSEN,
PSCLK => user_PSCLK,
PSEN => user_PSEN,
PSINCDEC => user_PSINCDEC,
```

```
RST => user_RST);
```

## Verilog Instantiation Template

```
DCM DCM_instance_name (CLK0 (user_CLK0),
    .CLK180 (user_CLK180),
    .CLK270 (user_CLK270),
    .CLK2X (user_CLK2X),
    .CLK2X180 (user_CLK2X180),
    .CLK90 (user_CLK90),
    .CLKDV (user_CLKDV),
    .CLKFX (user_CLKFX),
    .CLKFX180 (user_CLKFX180),
    .LOCKED (user_LOCKED),
    .PSDONE (user_PSDONE),
    .STATUS (user_STATUS),
    .CLKFB (user_CLKFB),
    .CLKIN (user_CLKIN),
    .DSSEN (user_DSSEN),
    .PSCLK (user_PSCLK),
    .PSEN (user_PSEN),
    .PSINCDEC (user_PSINCDEC),
    .RST (user_RST));
```

```
defparam DCM_instance_name.CLK_FEEDBACK => "string_value";
defparam DCM_instance_name.CLKDV_DIVIDE = integer_value;
//(1.5,2,2.5,3,4,5,8,16)
defparam DCM_instance_name.CLKFX_DIVIDE => integer_value;
defparam DCM_instance_name.CLKFX_MULTIPLY => integer_value;
defparam DCM_instance_name.CLKIN_DIVIDE_BY_2 => boolean_value; // (TRUE,
FALSE)
defparam DCM_instance_name.CLKOUT_PHASE_SHIFT => "string_value";
defparam DCM_instance_name.DESKEW_ADJUST => "string_value";
defparam DCM_instance_name.DFS_FREQUENCY_MODE => "string_value";
defparam DCM_instance_name.DLL_FREQUENCY_MODE => "string_value";
defparam DCM_instance_name.DSS_MODE => "string_value";
defparam DCM_instance_name.DUTY_CYCLE_CORRECTION => "string_value";//
(TRUE, FALSE)
```

```
defparam DCM_instance_name.PHASE_SHIFT => integer_value;
```

```
defparam DCM_instance_name.STARTUP_WAIT => boolean_value; // (TRUE, FALSE)
```

**Note:** Additional syntax may be necessary in order to pass the DCM attributes via the synthesis tool. The above defparam statements may need to be isolated from the synthesis tool with `translate_off/translate_on` directives. See your synthesis tool documentation for more information on Verilog attribute passing to ensure that you properly pass these attributes to the synthesis tool. Otherwise, you may pass these attributes to the UCF file.

## Commonly Used Constraints

CLKDV\_DIVIDE

CLK\_FEEDBACK

CLKFX\_DIVIDE

CLKFX\_MULTIPLY

CLKIN\_DIVIDE\_BY\_2

CLKOUT\_PHASE\_SHIFT

DUTY\_CYCLE\_CORRECTION

DFS\_FREQUENCY\_MODE

DLL\_FREQUENCY\_MODE

LOC

PHASE\_SHIFT

STARTUP\_WAIT

DESKEW\_ADJUST






# DEC\_CC4, 8, 16


## 4-, 8-, 16-Bit Active Low Decoders

### Architectures Supported

DEC_CC4, DEC_CC8, DEC_CC16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No


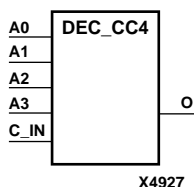


These decoders are used to build wide-decoder functions. They are implemented by cascading CY\_MUX elements driven by lookup tables (LUTs). The C\_IN pin can only be driven by the output (O) of a previous decode stage. When one or more of the inputs (A) are Low, the output is Low. When all the inputs are High and the C\_IN input is High, the output is High. You can decode patterns by adding inverters to inputs.

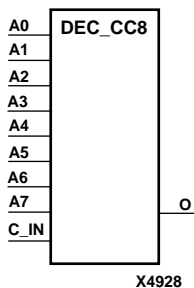

Inputs					Outputs
A0	A1	...	Az	C_IN	O
1	1	1	1	1	1
X	X	X	X	0	0
0	X	X	X	X	0
X	0	X	X	X	0
X	X	X	0	X	0


z = 3 for DEC\_CC4; z = 7 for DEC\_CC8; z = 15 for DEC\_CC16

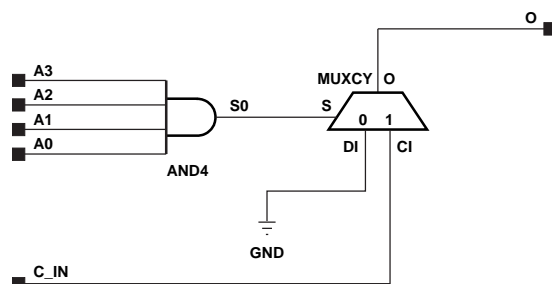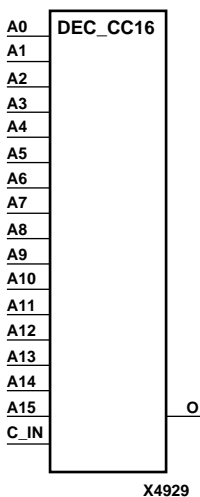

The C\_IN pin can only be initialized by a CY\_INIT or by the output of a previous decode stage.

X8717

**DEC\_CC4 Implementation Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

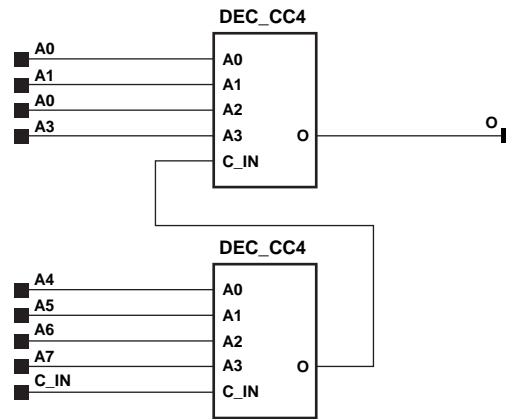

The C\_IN pin can only be initialized by a CY\_INIT or by the output of a previous decode stage.

X6396

### DEC\_CC8 Implementation Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X

#### Usage


DEC\_CC4 cannot be directly inferred or instantiated. The proper way to use a DEC\_CC4 is to infer the primitive components that make up the DEC\_CC4.

# DECODE4, 8, 16

## 4-, 8-, 16-Bit Active-Low Decoders

### Architectures Supported

DECODE4, DECODE8, DECODE16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	N/A
CoolRunner XPLA3	N/A
CoolRunner-II	N/A
CoolRunner-IIS	No

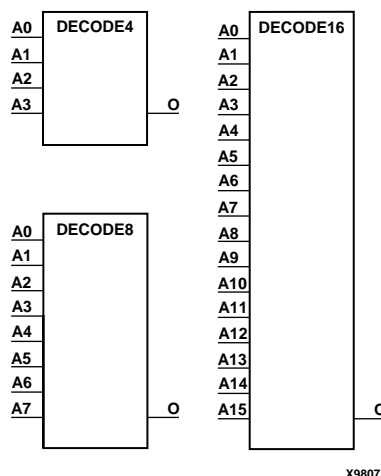


### DECODE Representations

In Spartan-II, , Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X decoders are implemented using combinations of LUTs and MUXCYs.


Inputs				Outputs*
A0	A1	...	Az	O
1	1	1	1	1
0	X	X	X	0
X	0	X	X	0
X	X	X	0	0

z = 3 for DECODE4, z = 7 for DECODE8; z = 15 for DECODE16

\*A pull-up resistor must be connected to the output to establish High-level drive current.

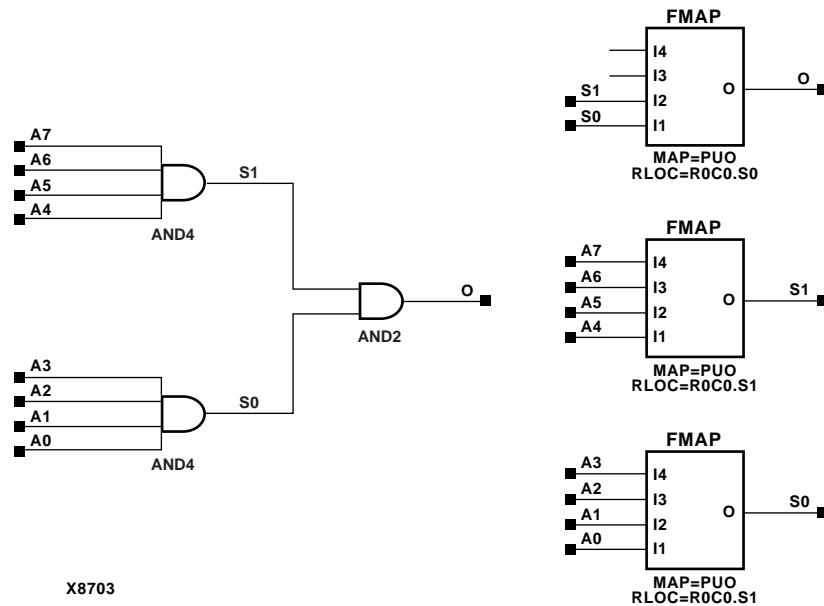

**DECODE8 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E**

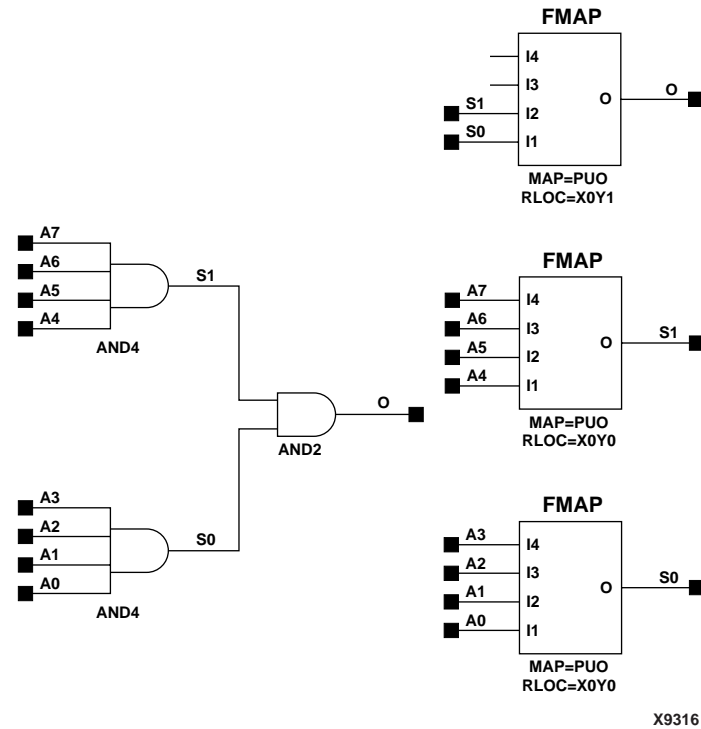

**DECODE8 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

**Usage**

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of decode4 is
begin
process (A)
begin
    case A is
        when "1111" => O <= '1';
        when others => O <= '0';
    end case;
end process;
end Behavioral;
```

## Verilog Inference Code

```
always @(A)
begin
    case (A)
        4'h0 : O <= 1;
        default : O <= 0;
    endcase
end
```




# DECODE32, 64

## 32- and 64-Bit Active-Low Decoders

### Architectures Supported

DECODE3, DECODE2, DECODE64	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

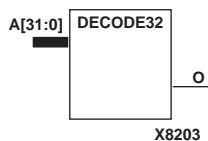

DECODE32 and DECODE64 are 32- and 64-bit active-low decoders. These decoders are implemented using combinations of LUTs and MUXCYs.

See “[DECODE4, 8, 16](#)” for a representative schematic.



Inputs				Outputs
A0	A1	...	Az	O
1	1	1	1	1
0	X	X	X	0
X	0	X	X	0
X	X	X	0	0

z = 31 for DECODE32, z = 63 for DECODE64

### Usage

For HDL, these design elements are inferred rather than instantiated.

### VHDL Inference Code

```
architecture Behavioral of decode32 is
begin
    process (A)
    begin
        case A is
            when x"11111111" => O <= '1';
            when others => O <= '0';
        end case;
    end process;
end Behavioral;
```

## Verilog Inference Code

```
always @(A)
begin
    case (A)
        32'h00000000 : O <= 1;
        default : O <= 0;
    endcase
end
```








# FD

## D Flip-Flop

### Architectures Supported

FD	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

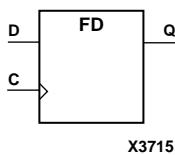

FD is a single D-type flip-flop with data input (D) and data output (Q). The data on the D inputs is loaded into the flip-flop during the Low-to-High clock (C) transition.

The flip-flop is asynchronously cleared, output Low, when power is applied.


For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

See “FD4, 8, 16” for information on multiple D flip-flops for XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II.

Inputs		Outputs
D	C	Q
0	↑	0
1	↑	1

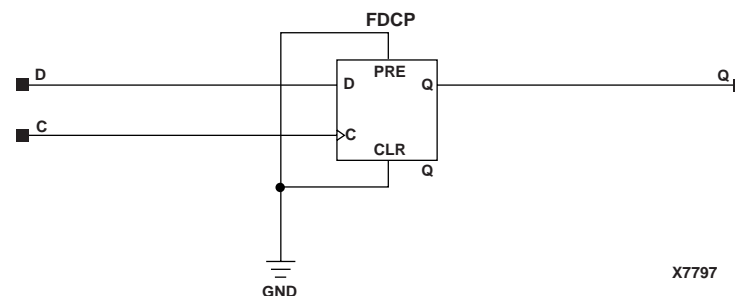

### FD Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

## Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of fd is
begin
  process (C)
  begin
    if C'event and C='1' then
      Q <= D;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C) begin
  Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FD should be placed
-- after architecture statement but before begin keyword

component FD
  -- synthesis translate_off
  generic (INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        D : in STD_ULOGIC);
end component;

-- Component Attribute specification for FD
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of FD_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for FD should be placed
-- in architecture after the begin keyword

FD_INSTANCE_NAME : FD
  -- synthesis translate_off
  generic map (INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
           C => user_C,
           D => user_D);
```

## Verilog Instantiation Template

```
FD FD_instance_name (.Q (user_Q),  
                    .C (user_C),  
                    .D (user_D));  
  
defparam FD_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM  
HBLKNM  
HU\_SET  
INIT  
IOB  
LOC  
REG  
RLOC  
TIMEGRP  
TNM  
U\_SET  
XBLKNM




## FD\_1

### D Flip-Flop with Negative-Edge Clock

#### Architectures Supported

FD_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

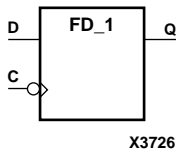

FD\_1 is a single D-type flip-flop with data input (D) and data output (Q). The data on the D input is loaded into the flip-flop during the High-to-Low clock (C) transition.

The flip-flop is asynchronously cleared, output Low, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs		Outputs
D	C	Q
0	↓	0
1	↓	1

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

#### VHDL Inference Code

```
architecture Behavioral of fd_1 is
begin
  process (C)
  begin
    if C' event and C = '0' then
      Q <= D;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (negedge C) begin
    Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FD_1 should be placed
-- after architecture statement but before begin keyword

component FD_1
    -- synthesis translate_off
    generic (INIT : bit := '1');
    -- synthesis translate_on
    port (Q : out STD_ULOGIC;
          C : in STD_ULOGIC;
          D : in STD_ULOGIC);
end component;

-- Component Attribute specification for FD_1
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of FD_1_instance_name : label is "0";
-- values can be (0 or 1)

begin

FD_1_INSTANCE_NAME : FD_1
    -- synthesis translate_off
    generic map (
        INIT => bit_value) -- INIT value can be '0' or '1'
    -- synthesis translate_on
    port map (Q => user_Q,
              C => user_C,
              D => user_D);
end Behavioral
```

## Verilog Instantiation Template

```
FD_1 FD_1_instance_name (.Q (user_Q),
                        .C (user_C),
                        .D (user_D));

defparam FD_1_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM, HBLKNM, HU\_SET, INIT, IOB, LOC, REG, RLOC, TIMEGRP, TNM, U\_SET, and XBLKNM




# FD4, 8, 16

## Multiple D Flip-Flops



### Architectures Supported

FD4, FD8, FD16	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

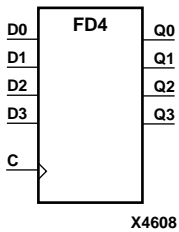


FD4, FD8, FD16 are multiple D-type flip-flops with data inputs (D) and data outputs (Q). FD4, FD8, and FD16 are, respectively, 4-bit, 8-bit, and 16-bit registers, each with a common clock (C). The data on the D inputs is loaded into the flip-flop during the Low-to-High clock (C) transition.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

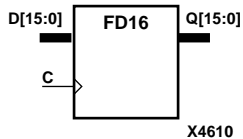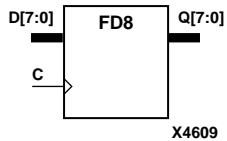

Inputs		Outputs
Dz – D0	C	Qz – Q0
0	↑	0
1	↑	1

z = 3 for FD4; z = 7 for FD8; z = 15 for FD16

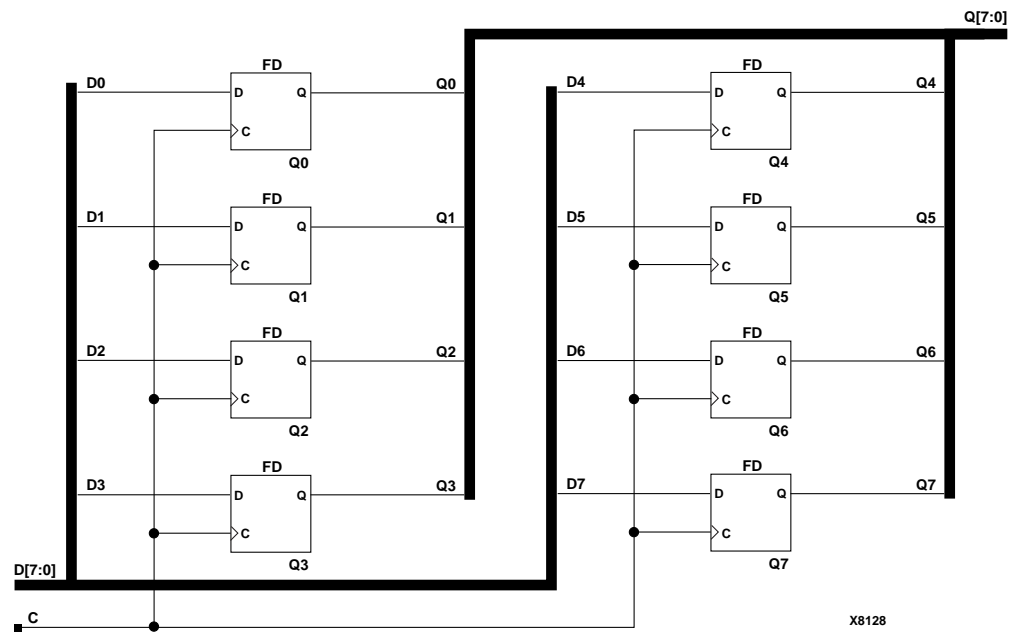

FD8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

## Usage

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of fd4 is
begin
  process (C)
  begin
    if C' event and C='1' then
      Q <= D;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C)
begin
  Q <= D;
end
```






## FD4CE, FD8CE, FD16CE

### 4-, 8-, 16-Bit Data Registers with Clock Enable and Asynchronous Clear


#### Architectures Supported

FD4CE, FD8CE, FD16CE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

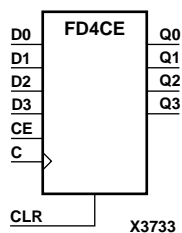

FD4CE, FD8CE, and FD16CE are, respectively, 4-, 8-, and 16-bit data registers with clock enable and asynchronous clear. When clock enable (CE) is High and asynchronous clear (CLR) is Low, the data on the data inputs (D) is transferred to the corresponding data outputs (Q) during the Low-to-High clock (C) transition. When CLR is High, it overrides all other inputs and resets the data outputs (Q) Low. When CE is Low, clock transitions are ignored.


The flip-flops are asynchronously cleared, output Low, when power is applied.

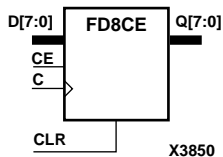

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

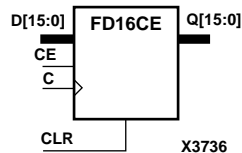

Inputs				Outputs
CLR	CE	Dz – D0	C	Qz – Q0
1	X	X	X	0
0	0	X	X	No Chg
0	1	Dn	↑	Dn

z = 3 for FD4CE; z = 7 for FD8CE; z = 15 for FD16CE.

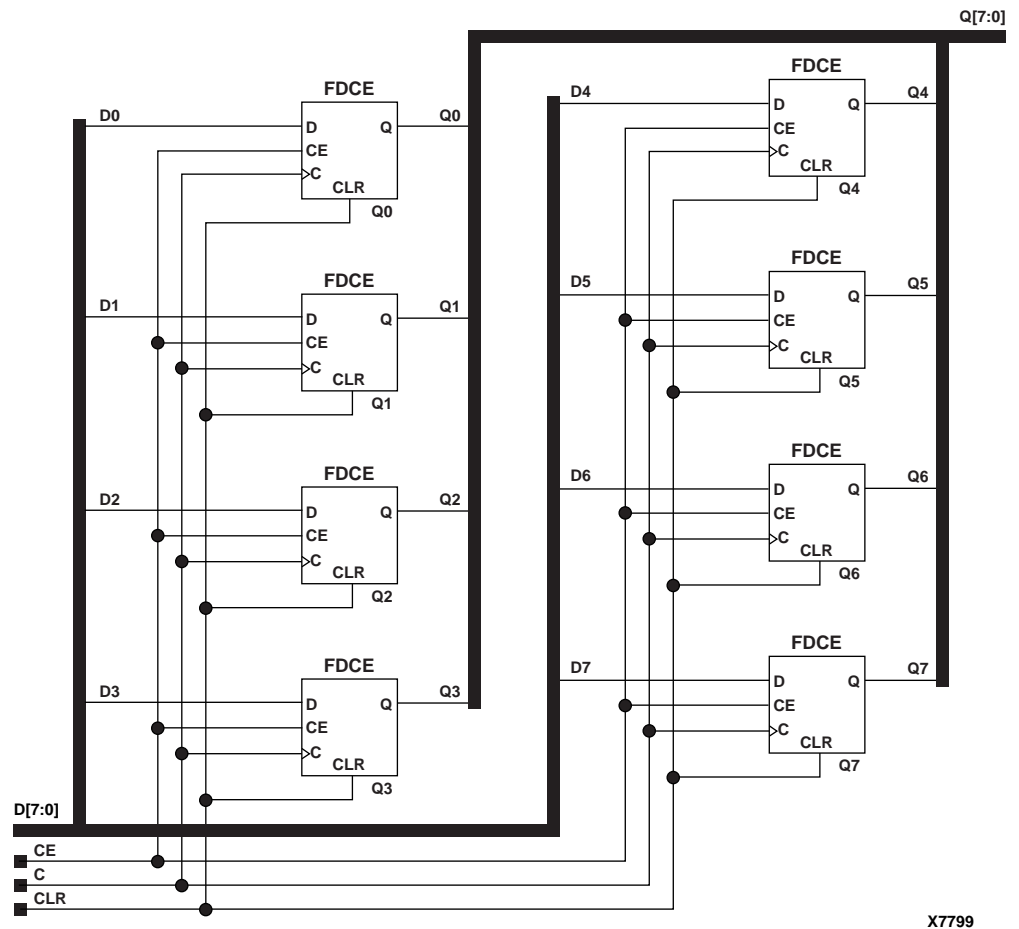

**FD8CE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIe, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

### Usage

For HDL, these design elements are inferred rather than instantiated.

### VHDL Inference Code

```
architecture Behavioral of fd4ce is
begin
  process (C, CLR) begin
    if (CLR = '1') then
      Q <= "0000";
    elsif (C' event and C = '1') then
      if (CE = '1') then
        Q <= D;
      end if;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or posedge CLR)
begin
  if (CLR)
    Q <= 4'b0000;
  else
    begin
      if (CE)
        Q <= D;
    end
end
end
```






## FD4RE, FD8RE, FD16RE

### 4-, 8-, 16-Bit Data Registers with Clock Enable and Synchronous Reset


#### Architectures Supported

FD4RE, FD8RE, FD16RE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

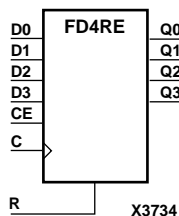

FD4RE, FD8RE, and FD16RE are, respectively, 4-, 8-, and 16-bit data registers. When the clock enable (CE) input is High, and the synchronous reset (R) input is Low, the data on the data inputs (D) is transferred to the corresponding data outputs (Q) during the Low-to-High clock (C) transition. When R is High, it overrides all other inputs and resets the data outputs (Q) Low on the Low-to-High clock transition. When CE is Low, clock transitions are ignored.


The flip-flops are asynchronously cleared, output Low, when power is applied.

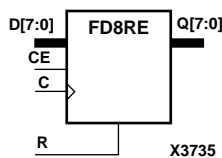

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

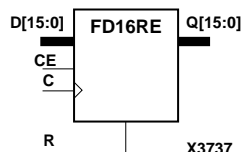

Inputs				Outputs
R	CE	Dz – D0	C	Qz – Q0
1	X	X	↑	0
0	0	X	X	No Chg
0	1	Dn	↑	Dn

z = 3 for FD4RE; z = 7 for FD8RE; z = 15 for FD16RE

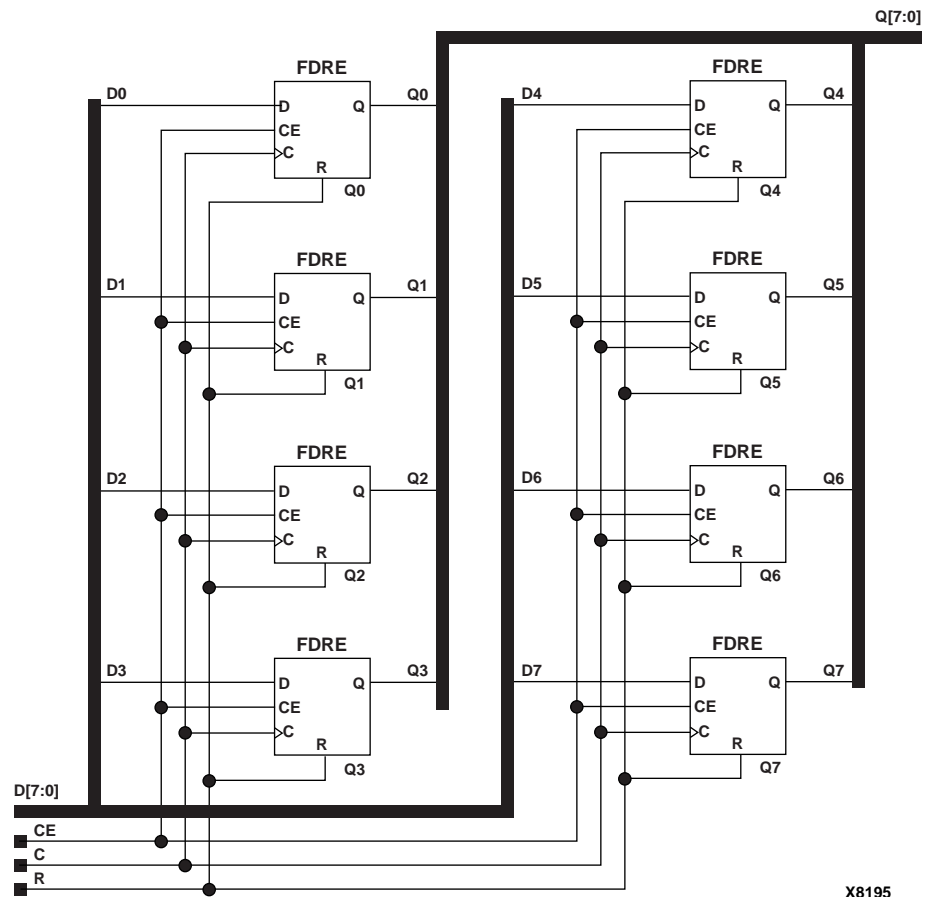

X8195

**FD8RE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

### Usage

For HDL, these design elements are inferred rather than instantiated.

### VHDL Inference Code

```
architecture Behavioral of fd4re is
begin
  process (C) begin
    if (C' event and C = '1') then
      if (R = '1') then
        Q <= "0000";
      elsif (CE = '1') then
        Q <= D;
      end if;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C)
begin
  if (R)
    Q <= 4'b0000;
  else
    begin
      if (CE)
        Q <= D;
    end
end
end
```




# FDC

## D Flip-Flop with Asynchronous Clear

### Architectures Supported

FDC	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

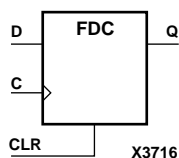

FDC is a single D-type flip-flop with data (D) and asynchronous clear (CLR) inputs and data output (Q). The asynchronous CLR, when High, overrides all other inputs and sets the Q output Low. The data on the D input is loaded into the flip-flop when CLR is Low on the Low-to-High clock transition.


The flip-flop is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
CLR	D	C	Q
1	X	X	0
0	1	↑	1
0	0	↑	0

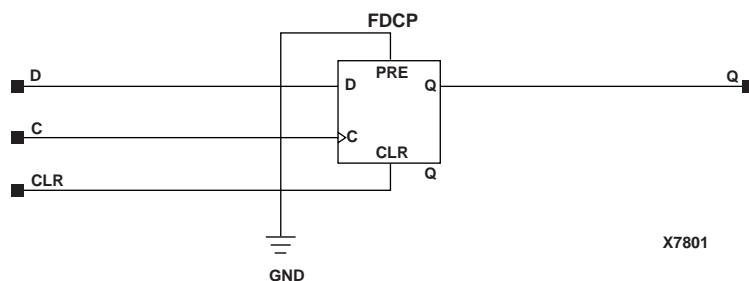

FDC Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

## Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of fdc is
begin
  process (C, CLR) begin
    if (CLR = '1') then
      Q <= '0';
    elsif (C' event and C = '1') then
      Q <= D;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or posedge CLR) begin
  if (CLR)
    Q <= 0;
  else
    Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FDC should be placed
-- after architecture statement but before begin keyword

component FDC
  -- synthesis translate_off
  generic (INIT : bit:= '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        CLR : in STD_ULOGIC;
        D : in STD_ULOGIC);
end component;

-- Component Attribute specification for FDC
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of FDC_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for FDC should be placed
-- in architecture after the begin keyword

FDC_INSTANCE_NAME : FDC
  -- synthesis translate_off
```

```
generic map (INIT => bit_value)
-- synthesis translate_on
port map (Q => user_Q,
          C => user_C,
          CLR => user_CLR,
          D => user_D);
```

## Verilog Instantiation Template

```
FDC FDC_instance_name (.Q (user_Q),
                      .C (user_C),
                      .CLR (user_CLR),
                      .D (user_D));

defparam FDC_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM  
HBLKNM  
HU\_SET  
INIT  
IOB  
LOC  
REG  
RLOC  
TIMEGRP  
TNM  
U\_SET  
XBLKNM






## FDC\_1

### D Flip-Flop with Negative-Edge Clock and Asynchronous Clear

#### Architectures Supported

FDC_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

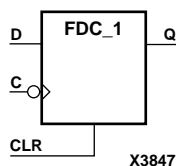

FDC\_1 is a single D-type flip-flop with data input (D), asynchronous clear input (CLR), and data output (Q). The asynchronous CLR, when active, overrides all other inputs and sets the Q output Low. The data on the D input is loaded into the flip-flop during the High-to-Low clock (C) transition.

The flip-flop is asynchronously cleared, output Low, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
CLR	D	C	Q
1	X	X	0
0	1	↓	1
0	0	↓	0

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

#### VHDL Inference Code

```
architecture Behavioral of fdc_1 is
begin
  process (C, CLR) begin
    if (CLR = '1') then
      Q <= '0';
    elsif (C' event and C = '0') then
      Q <= D;
    end if;
  end process;
end architecture;
```

```

    end if;
  end process;
end Behavioral;

```

## Verilog Inference Code

```

always @ (negedge C or posedge CLR) begin
  if (CLR)
    Q <= 0;
  else
    Q <= D;
end

```

## VHDL Instantiation Template

```

-- Component Declaration for FDC_1 should be placed
-- after architecture statement but before begin keyword

```

```

component FDC_1
  -- synthesis translate_off
  generic (INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        CLR : in STD_ULOGIC;
        D : in STD_ULOGIC);
end component;

```

```

-- Component Attribute specification for FDC_1
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

attribute INIT : string;
attribute INIT of FDC_1_instance_name : label is "0";
-- values can be (0 or 1)

```

```

-- Component Instantiation for FDC_1 should be placed
-- in architecture after the begin keyword

```

```

FDC_1_INSTANCE_NAME : FDC_1
  -- synthesis translate_off
  generic map (INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
           C => user_C,
           CLR => user_CLR,
           D => user_D);

```

## Verilog Instantiation Template

```

FDC_1 FDC_1_instance_name (.Q (user_Q),
                          .C (user_C),
                          .CLR (user_CLR),
                          .D (user_D));

defparam FDC_1_instance_name.INIT = bit_value;

```

## Commonly Used Constraints

BLKNM, HBLKNM, U\_SET, INIT, IOB, LOC, REG, RLOC, TIMEGRP, TNM, U\_SET,  
and XBLKNM




## FDCE

### D Flip-Flop with Clock Enable and Asynchronous Clear

#### Architectures Supported

FDCE	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No

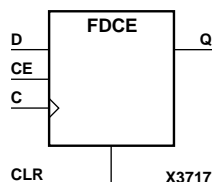

FDCE is a single D-type flip-flop with clock enable and asynchronous clear. When clock enable (CE) is High and asynchronous clear (CLR) is Low, the data on the data input (D) of FDCE is transferred to the corresponding data output (Q) during the Low-to-High clock (C) transition. When CLR is High, it overrides all other inputs and resets the data output (Q) Low. When CE is Low, clock transitions are ignored.

The flip-flop is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

For XC9500XL and XC9500XV devices, logic connected to the clock enable (CE) input may be implemented using the clock enable product term (p-term) in the macrocell, provided the logic can be completely implemented using the single p-term available for clock enable without requiring feedback from another macrocell. Only FDCE and FDPE flip-flops primitives may take advantage of the clock-enable p-term.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs				Outputs
CLR	CE	D	C	Q
1	X	X	X	0
0	0	X	X	No Chg
0	1	1	↑	1
0	1	0	↑	0

## Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of fdce is
begin
  process (C, CLR) begin
    if (CLR = '1') then
      Q <= '0';
    elsif (C' event and C = '1') then
      if (CE = '1') then
        Q <= D;
      end if;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge CLR or posedge C) begin
  if (CLR)
    Q <= 0;
  else if (CE)
    Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FDCE should be placed
-- after architecture statement but before begin keyword
```

```
component FDCE
  -- synthesis translate_off
  generic (INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        CE : in STD_ULOGIC;
        CLR : in STD_ULOGIC;
        D : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for FDCE
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
attribute INIT : string;
attribute INIT of FDCE_instance_name : label is "0";
-- values can be (0 or 1)
```

```
-- Component Instantiation for FDCE should be placed
-- in architecture after the begin keyword
```

```
FDCE_INSTANCE_NAME : FDCE
  -- synthesis translate_off
  generic map (INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
           C => user_C,
```

```
CE => user_CE,  
CLR => user_CLR,  
D => user_D);
```

## Verilog Instantiation Template

```
FDCE FDCE_instance_name (.Q (user_Q),  
                        .C (user_C),  
                        .CE (user_CE),  
                        .CLR (user_CLR),  
                        .D (user_D));
```

```
defparam FDCE_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

INIT

IOB

LOC

REG

RLOC

TIMEGRP

TNM

U\_SET

XBLKNM




## FDCE\_1

### D Flip-Flop with Negative-Edge Clock, Clock Enable, and Asynchronous Clear

#### Architectures Supported

FDCE_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

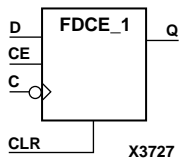

FDCE\_1 is a single D-type flip-flop with data (D), clock enable (CE), asynchronous clear (CLR) inputs, and data output (Q). The asynchronous CLR input, when High, overrides all other inputs and sets the Q output Low. The data on the D input is loaded into the flip-flop when CLR is Low and CE is High on the High-to-Low clock (C) transition. When CE is Low, the clock transitions are ignored.

The flip-flop is asynchronously cleared, output Low, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs				Outputs
CLR	CE	D	C	Q
1	X	X	X	0
0	0	X	↓	No Chg
0	1	1	↓	1
0	1	0	↓	0

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

#### VHDL Inference Code

```
architecture Behavioral of fdce_1 is
begin
  process (C, CLR) begin
```

```

if (CLR = '1') then
  Q <= '0';
elsif (C' event and C = '0') then
  if (CE = '1') then
    Q <= D;
  end if;
end if;
end process;
end Behavioral;

```

## Verilog Inference Code

```

always @ (posedge CLR or negedge C) begin
  if (CLR)
    Q <= 0;
  else if (CE)
    Q <= D;
end

```

## VHDL Instantiation Template

```

-- Component Declaration for FDCE_1 should be placed
-- after architecture statement but before begin keyword

```

```

component FDCE_1
  -- synthesis translate_off
  generic (INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        CE : in STD_ULOGIC;
        CLR : in STD_ULOGIC;
        D : in STD_ULOGIC);
end component;

```

```

-- Component Attribute specification for FDCE_1
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

attribute INIT : string;
attribute INIT of FDCE_1_instance_name : label is "0";
-- values can be (0 or 1)

```

```

-- Component Instantiation for FDCE_1 should be placed
-- in architecture after the begin keyword

```

```

FDCE_1_INSTANCE_NAME : FDCE_1
  -- synthesis translate_off
  generic map (INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
            C => user_C,
            CE => user_CE,
            CLR => user_CLR,
            D => user_D);

```

## Verilog Instantiation Template

```
FDCE_1 FDCE_1_instance_name (.Q (user_Q),  
                             .C (user_C),  
                             .CE (user_CE),  
                             .CLR (user_CLR),  
                             .D (user_D));  
  
defparam FDCE_1_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

INIT

IOB

LOC

REG

RLOC

TIMEGRP

TNM

U\_SET

XBLKNM




## FDCP

### D Flip-Flop Asynchronous Preset and Clear

#### Architectures Supported

FDCP	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No

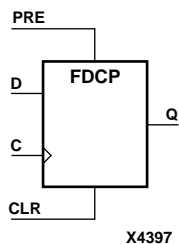

FDCP is a single D-type flip-flop with data (D), asynchronous preset (PRE) and clear (CLR) inputs, and data output (Q). The asynchronous PRE, when High, sets the Q output High; CLR, when High, resets the output Low. Data on the D input is loaded into the flip-flop when PRE and CLR are Low on the Low-to-High clock (C) transition.

The flip-flop is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs				Outputs
CLR	PRE	D	C	Q
1	X	X	X	0
0	1	X	X	1
0	0	0	↑	0
0	0	1	↑	1

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

#### VHDL Inference Code

```
architecture Behavioral of fdcp is
begin
  process (C, CLR, PRE) begin
```

```

if (CLR = '1') then
  Q <= '0';
elsif (PRE = '1') then
  Q <= '1';
elsif (C' event and C = '1') then
  Q <= D;
end if;
end process;
end Behavioral;

```

## Verilog Inference Code

```

always @ (posedge CLR or posedge PRE or posedge C) begin
  if (CLR)
    Q <= 0;
  else if (PRE)
    Q <= 1;
  else
    Q <= D;
end

```

## VHDL Instantiation Template

```

-- Component Declaration for FDCP should be placed
-- after architecture statement but before begin keyword

component FDCP
  -- synthesis translate_off
  generic (INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        CLR : in STD_ULOGIC;
        D : in STD_ULOGIC;
        PRE : in STD_ULOGIC);
end component;

-- Component Attribute specification for FDCP
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of FDCP_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for FDCP should be placed
-- in architecture after the begin keyword

FDCP_INSTANCE_NAME : FDCP
  -- synthesis translate_off
  generic map (INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
           C => user_C,
           CLR => user_CLR,
           D => user_D,
           PRE => user_PRE);

```

## Verilog Instantiation Template

```
FDCP FDCP_instance_name (.Q (user_Q),  
                        .C (user_C),  
                        .CLR (user_CLR),  
                        .D (user_D),  
                        .PRE (user_PRE));  
  
defparam FDCP_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

INIT

IOB

LOC

REG

RLOC

TIMEGRP

TNM

U\_SET

XBLKNM






## FDCP\_1

### D Flip-Flop with Negative-Edge Clock and Asynchronous Preset and Clear

#### Architectures Supported

FDCP_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

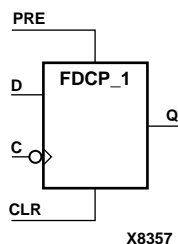

FDCP\_1 is a single D-type flip-flop with data (D), asynchronous preset (PRE) and clear (CLR) inputs, and data output (Q). The asynchronous PRE, when High, sets the Q output High; CLR, when High, resets the output Low. Data on the D input is loaded into the flip-flop when PRE and CLR are Low on the High-to-Low clock (C) transition.

The flip-flop is asynchronously cleared, output Low, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs				Outputs
CLR	PRE	D	C	Q
1	X	X	X	0
0	1	X	X	1
0	0	0	↓	0
0	0	1	↓	1

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

#### VHDL Inference Code

```
architecture Behavioral of fdcp_1 is
begin
  process (C, CLR, PRE) begin
    if (CLR = '1') then
```

```

    Q <= '0';
  elsif (PRE = '1') then
    Q <= '1';
  elsif (C' event and C = '0') then
    Q <= D;
  end if;
end process;
end Behavioral;

```

## Verilog Inference Code

```

always @ (posedge CLR or posedge PRE or negedge C) begin
  if (CLR)
    Q <= 0;
  else if (PRE)
    Q <= 1;
  else
    Q <= D;
end

```

## VHDL Instantiation Template

```

-- Component Declaration for FDCP_1 should be placed
-- after architecture statement but before begin keyword

```

```

component FDCP_1
  -- synthesis translate_off
  generic (INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        CLR : in STD_ULOGIC;
        D : in STD_ULOGIC;
        PRE : in STD_ULOGIC);
end component;

```

```

-- Component Attribute specification for FDCP_1
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

attribute INIT : string;
attribute INIT of FDCP_1_instance_name : label is "0";
-- values can be (0 or 1)

```

```

-- Component Instantiation for FDCP_1 should be placed
-- in architecture after the begin keyword

```

```

FDCP_1_INSTANCE_NAME : FDCP_1
  -- synthesis translate_off
  generic map (INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
            C => user_C,
            CLR => user_CLR,
            D => user_D,
            PRE => user_PRE);

```

## Verilog Instantiation Template

```
FDCP_1 FDCP_1_instance_name (.Q (user_Q),  
                             .C (user_C),  
                             .CLR (user_CLR),  
                             .D (user_D),  
                             .PRE (user_PRE));  
  
defparam FDCP_1_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

INIT

IOB

LOC

REG

RLOC

TIMEGRP

TNM

U\_SET

XBLKNM




## FDCPE

### D Flip-Flop with Clock Enable and Asynchronous Preset and Clear

#### Architectures Supported

FDCPE	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Primitive
CoolRunner-IIS	No

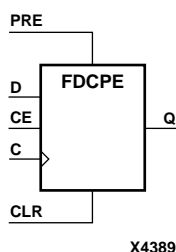

FDCPE is a single D-type flip-flop with data (D), clock enable (CE), asynchronous preset (PRE), and asynchronous clear (CLR) inputs and data output (Q). The asynchronous PRE, when High, sets the Q output High; CLR, when High, resets the output Low. Data on the D input is loaded into the flip-flop when PRE and CLR are Low and CE is High on the Low-to-High clock (C) transition. When CE is Low, the clock transitions are ignored.


The flip-flop is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs					Outputs
CLR	PRE	CE	D	C	Q
1	X	X	X	X	0
0	1	X	X	X	1
0	0	0	X	X	No Chg
0	0	1	0	↑	0
0	0	1	1	↑	1

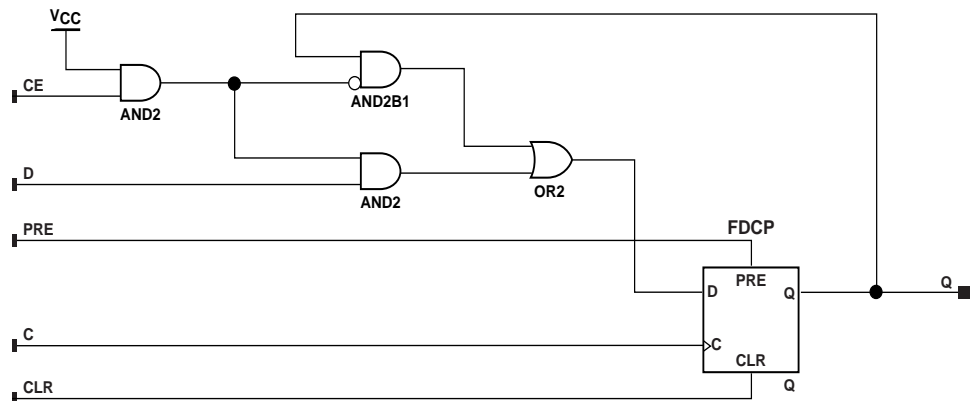

X7804

### FDCPE Implementation XC9500/XV/XL, CoolRunner XPLA3

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

#### VHDL Inference Code

```
architecture Behavioral of fdcpe is
begin
  process (C, CLR, PRE) begin
    if (CLR = '1') then
      Q <= '0';
    elsif (PRE = '1') then
      Q <= '1';
    elsif (C' event and C = '1') then
      if (CE = '1') then
        Q <= D;
      end if;
    end if;
  end process;
end Behavioral;
```

#### Verilog Inference Code

```
always @ (posedge CLR or posedge PRE or posedge C) begin
  if (CLR)
    Q <= 0;
  else if (PRE)
    Q <= 1;
  else if (CE)
    Q <= D;
end
```

#### VHDL Instantiation Template

```
-- Component Declaration for FDCPE should be placed
-- after architecture statement but before begin keyword
```

```

component FDCPE
  -- synthesis translate_off
  generic (INIT : bit:= '1');
  -- synthesis translate_on
  port(Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        CE : in STD_ULOGIC;
        CLR : in STD_ULOGIC;
        D : in STD_ULOGIC;
        PRE : in STD_ULOGIC);
end component;

-- Component Attribute specification for FDCPE
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of FDCPE_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for FDCPE should be placed
-- in architecture after the begin keyword

FDCPE_INSTANCE_NAME : FDCPE
  -- synthesis translate_off
  generic map (INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
            C => user_C,
            CE => user_CE,
            CLR => user_CLR,
            D => user_D,
            PRE => user_PRE);

```

## Verilog Instantiation Template

```

FDCPE FDCPE_instance_name (.Q (user_Q),
                           .C (user_C),
                           .CE (user_CE),
                           .CLR (user_CLR),
                           .D (user_D),
                           .PRE (user_PRE));

defparam FDCPE_instance_name.INIT = bit_value;

```

## Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

INIT

IOB

LOC

REG  
RLOC  
TIMEGRP  
TNM  
U\_SET  
XBLKNM




## FDCPE\_1

### D Flip-Flop with Negative-Edge Clock, Clock Enable, and Asynchronous Preset and Clear

#### Architectures Supported

FDCPE_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

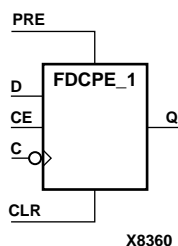

FDCPE\_1 is a single D-type flip-flop with data (D), clock enable (CE), asynchronous preset (PRE), and asynchronous clear (CLR) inputs and data output (Q). The asynchronous PRE, when High, sets the Q output High; CLR, when High, resets the output Low. Data on the D input is loaded into the flip-flop when PRE and CLR are Low and CE is High on the High-to-Low clock (C) transition. When CE is Low, the clock transitions are ignored.

The flip-flop is asynchronously cleared, output Low, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs					Outputs
CLR	PRE	CE	D	C	Q
1	X	X	X	X	0
0	1	X	X	X	1
0	0	0	X	X	No Chg
0	0	1	0	↓	0
0	0	1	1	↓	1

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of fdcpe_1 is
begin
  process (C, CLR, PRE) begin
    if (CLR = '1') then
      Q <= '0';
    elsif (PRE = '1') then
      Q <= '1';
    elsif (C' event and C = '0') then
      if (CE = '1') then
        Q <= D;
      end if;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge CLR or posedge PRE or negedge C) begin
  if (CLR)
    Q <= 0;
  else if (PRE)
    Q <= 1;
  else if (CE)
    Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FDCPE_1 should be placed
-- after architecture statement but before begin keyword

component FDCPE_1
  -- synthesis translate_off
  generic (INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        CE : in STD_ULOGIC;
        CLR : in STD_ULOGIC;
        D : in STD_ULOGIC;
        PRE : in STD_ULOGIC);
end component;

-- Component Attribute specification for FDCPE_1
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of FDCPE_1_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for FDCPE_1 should be placed
-- in architecture after the begin keyword

FDCPE_1_INSTANCE_NAME : FDCPE_1
```

```
-- synthesis translate_off
generic map (INIT => bit_value)
-- synthesis translate_on
port map (Q => user_Q,
          C => user_C,
          CE => user_CE,
          CLR => user_CLR,
          D => user_D,
          PRE => user_PRE);
```

## Verilog Instantiation Template

```
FDCPE_1 FDCPE_1_instance_name (.Q (user_Q),
                                .C (user_C),
                                .CE (user_CE),
                                .CLR (user_CLR),
                                .D (user_D),
                                .PRE (user_PRE));

defparam FDCPE_1_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM  
HBLKNM  
HU\_SET  
INIT  
IOB  
LOC  
REG  
RLOC  
TIMEGRP  
TNM  
U\_SET  
XBLKNM




## FDD

### Dual Edge Triggered D Flip-Flop

#### Architectures Supported

FDD	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

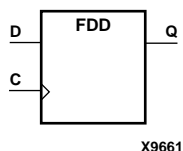


FDD is a single dual edge triggered D-type flip-flop with data input (D) and data output (Q). The data on the D input is loaded into the flip-flop during the Low-to-High and the High-to-Low clock (C) transitions.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated in Verilog by applying a High-level pulse on the PRLD global net.

See [FDD4,8,16](#) for information on multiple D flip-flops for CoolRunner-II.

Inputs		Outputs
D	C	Q
0	↑	0
1	↑	1
0	↓	0
1	↓	1

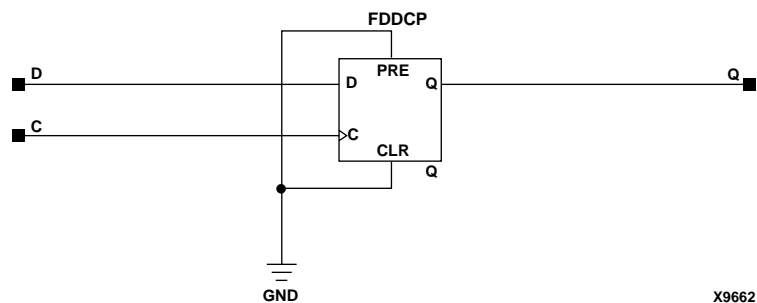

#### FDD Implementation CoolRunner-II

## Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of fdd is
begin
  process (C)
  begin
    if C' event then
      Q <= D;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or negedge C) begin
  Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FDD should be placed
-- after architecture statement but before begin keyword

component FDD
  -- synthesis translate_off
  generic (INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        D : in STD_ULOGIC);
end component;

-- Component Attribute specification for FDD
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of FDD_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for FDD should be placed
-- in architecture after the begin keyword

FDD_INSTANCE_NAME : FDD
  -- synthesis translate_off
  generic map (INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
           C => user_C,
           D => user_D);
```

## Verilog Instantiation Template

```
FDD FDD_instance_name (.Q (user_Q),  
                       .C (user_C),  
                       .D (user_D));  
  
defparam FDD_instance_name.INIT = bit_value;
```




## FDD4,8,16

### Multiple Dual Edge Triggered D Flip-Flops



#### Architectures Supported

FDD4, FDD8, FDD16	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

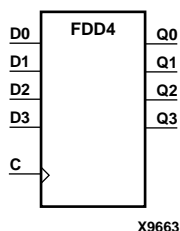


FDD4, FDD8, FDD16 are multiple dual edge triggered D-type flip-flops with data inputs (D) and data outputs (Q). FDD4, FDD8, and FDD16 are, respectively, 4-bit, 8-bit, and 16-bit registers, each with a common clock (C). The data on the D inputs is loaded into the flip-flop during the Low-to-High and High-to-Low clock (C) transitions.

The flip-flops are asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated in Verilog by applying a High-level pulse on the PRLD global net.

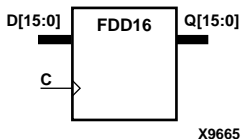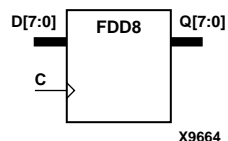

Inputs		Outputs
Dz – D0	C	Qz – Q0
0	↑	0
1	↑	1
0	↓	0
1	↓	1

z = 3 for FDD4; z = 7 for FDD8; z = 15 for FDD16

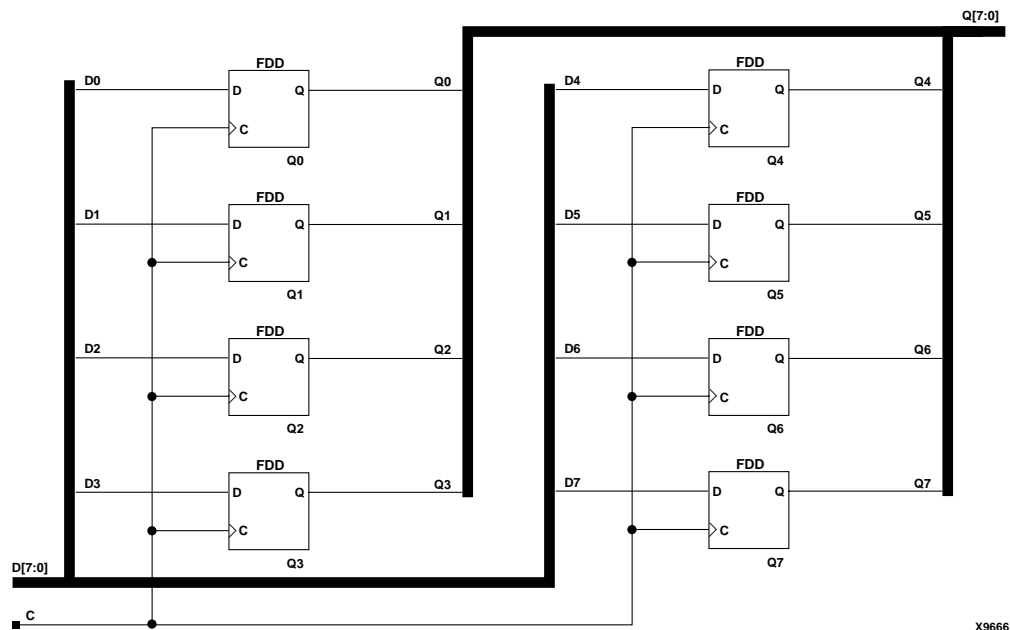

### FDD8 Implementation CoolRunner-II

#### Usage

For HDL, these design elements are inferred rather than instantiated.

#### VHDL Inference Code

```
architecture Behavioral of fdd4 is
begin
  process (C)
  begin
    if C' event then
      Q <= D;
    end if;
  end process;
end Behavioral;
```

#### Verilog Inference Code

```
always @ (posedge C or negedge C) begin
  Q[3:0] <= D[3:0] ;
end
```


X9666

## FDD4CE, FDD8CE, FDD16CE


### 4-, 8-, 16-Bit Dual Edge Triggered Data Registers with Clock Enable and Asynchronous Clear

#### Architectures Supported


FDD4CE, FDD8CE, FDD16CE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

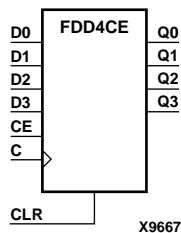

FDD4CE, FDD8CE, and FDD16CE are, respectively, 4-, 8-, and 16-bit data registers with clock enable and asynchronous clear. When clock enable (CE) is High and asynchronous clear (CLR) is Low, the data on the data inputs (D) is transferred to the corresponding data outputs (Q) during the Low-to-High and High-to-Low clock (C) transitions. When CLR is High, it overrides all other inputs and resets the data outputs (Q) Low. When CE is Low, clock transitions are ignored.

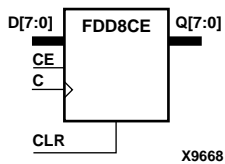


The flip-flops are asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated in Verilog by applying a High-level pulse on the PRLD global net.

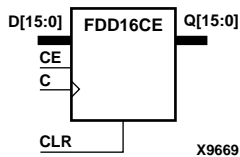

Inputs				Outputs
CLR	CE	Dz – D0	C	Qz – Q0
1	X	X	X	0
0	0	X	X	No Chg
0	1	Dn	↑	Dn
0	1	Dn	↓	Dn

z = 3 for FDD4CE; z = 7 for FDD8CE; z = 15 for FDD16CE.

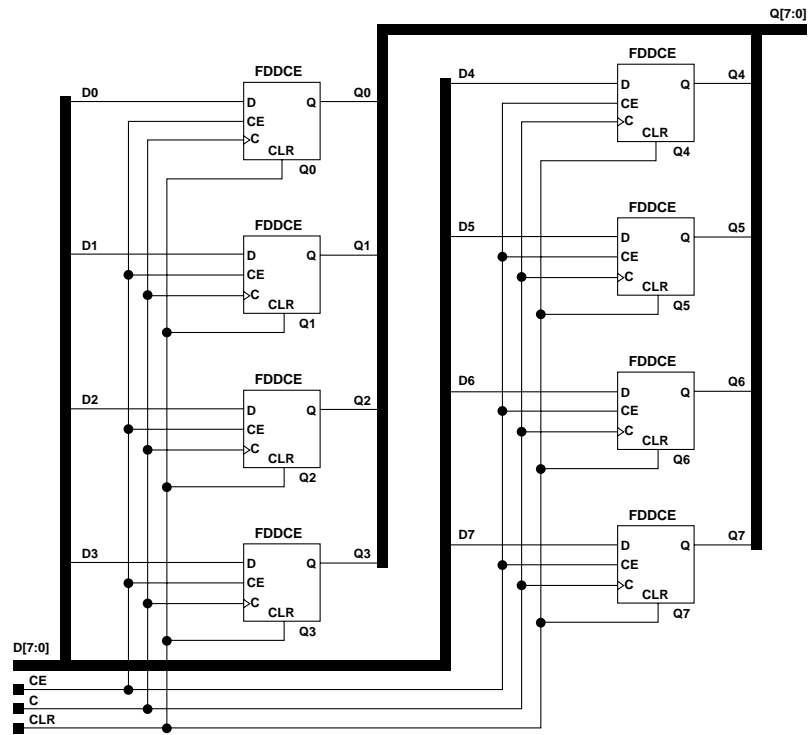

X9670

### FDD8CE Implementation CoolRunner-II

#### Usage

For HDL, these design elements are inferred rather than instantiated.

#### VHDL Inference Code

```
architecture Behavioral of fdd4ce is
begin
  process (C, CLR) begin
    if (CLR = '1') then
      Q <= "0000";
    elsif (C' event) then
      if (CE = '1') then
        Q <= D;
      end if;
    end if;
  end process;
end Behavioral;
```

#### Verilog Inference Code




```
always @(posedge C or negedge C or posedge CLR)
begin
  if (CLR)
    Q <= 4'b0;
  else if (CE)
    Q[3:0] <= D[3:0];
end
```

## FDD4RE, FDD8RE, FDD16RE

### 4-, 8-, 16-Bit Dual Edge Triggered Data Registers with Clock Enable and Synchronous Reset

#### Architectures Supported

FDD4RE, FDD8RE, FDD16RE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

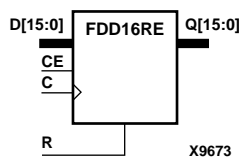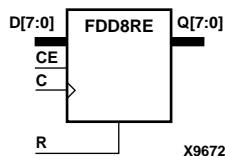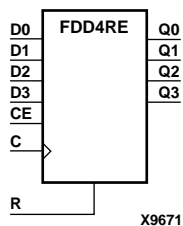


FDD4RE, FDD8RE, and FDD16RE are, respectively, 4-, 8-, and 16-bit data registers. When the clock enable (CE) input is High, and the synchronous reset (R) input is Low, the data on the data inputs (D) is transferred to the corresponding data outputs (Q) during the Low-to-High or High-to-Low clock (C) transition. When R is High, it overrides all other inputs and resets the data outputs (Q) Low on the Low-to-High and High-to-Low clock transitions. When CE is Low, clock transitions are ignored.

The flip-flops are asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated in Verilog by applying a High-level pulse on the PRLD global net.

Inputs				Outputs
R	CE	Dz – D0	C	Qz – Q0
1	X	X	↑	0
1	X	X	↓	0
0	0	X	X	No Chg
0	1	Dn	↑	Dn
0	1	Dn	↓	Dn

z = 3 for FDD4RE; z = 7 for FDD8RE; z = 15 for FDD16RE

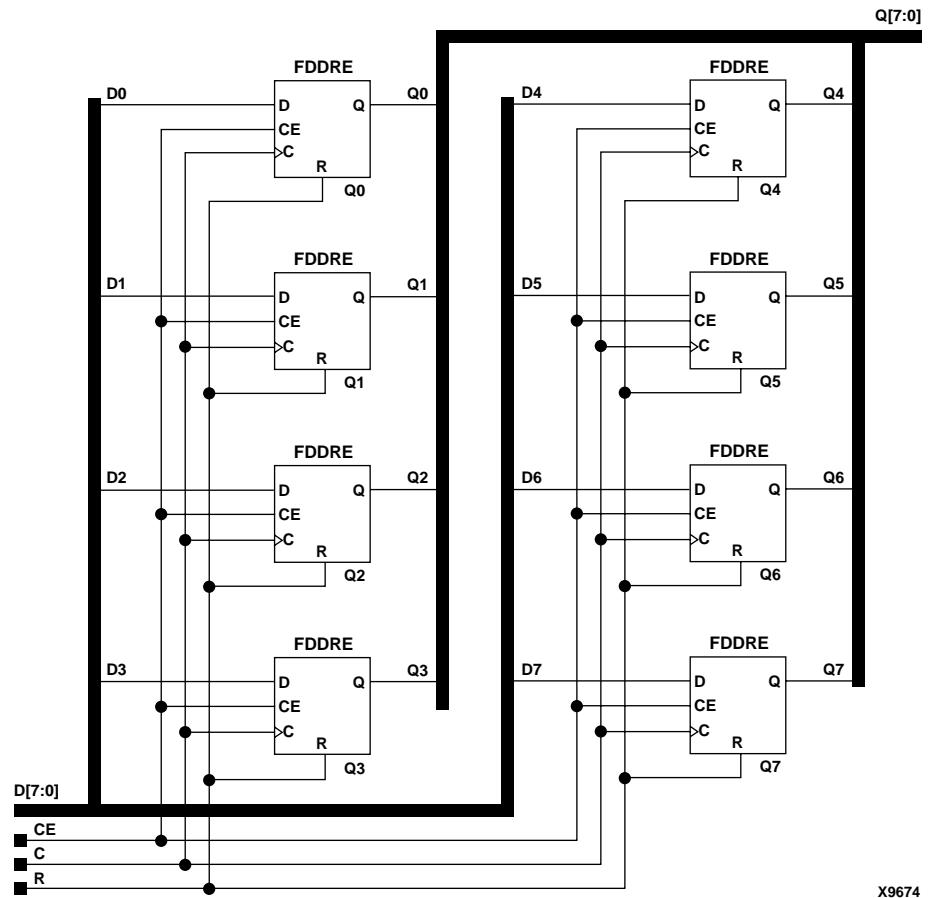

X9674

### FDD8RE Implementation CoolRunner-II

#### Usage

For HDL, these design elements are inferred rather than instantiated.

#### VHDL Inference Code

```
architecture Behavioral of fdd4re is
begin
  process (C) begin
    if (C' event) then
      if (CE = '1') then
        if (R = '1') then
          Q <= "0000";
        else
          Q <= D;
        end if;
      end if;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or negedge C) begin
    if (R)
        Q <= 4'b0;
    else if (CE)
        Q[3:0] <= D[3:0] ;
end
```






# FDDC

## D Dual Edge Triggered Flip-Flop with Asynchronous Clear

### Architectures Supported


FDDC	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

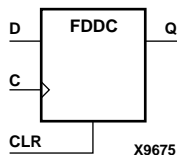

FDDC is a single dual edge triggered D-type flip-flop with data (D) and asynchronous clear (CLR) inputs and data output (Q). The asynchronous CLR, when High, overrides all other inputs and sets the Q output Low. The data on the D input is loaded into the flip-flop when CLR is Low on the Low-to-High and High-to-Low clock (C) transitions.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated in Verilog by applying a High-level pulse on the PRLD global net.

Inputs			Outputs
CLR	D	C	Q
1	X	X	0
0	1	↑	1
0	1	↓	1
0	0	↑	0
0	0	↓	0

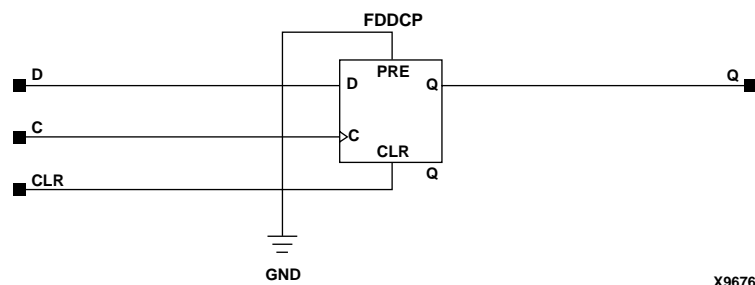

### FDDC Implementation CoolRunner-II

## Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of fddc is
begin
  process (C,CLR) begin
    if (CLR = '1') then
      Q <= '0';
    elsif (C' event) then
      Q <= D;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or negedge C or posedge CLR)
begin
  if (CLR)
    Q <= 1'b0;
  else
    Q <= D ;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FDDC should be placed
-- after architecture statement but before begin keyword
```

```
component FDDC
  -- synthesis translate_off
  generic (INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        CLR : in STD_ULOGIC;
        D : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for FDDC
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
attribute INIT : string;
attribute INIT of FDDC_instance_name : label is "0";
-- values can be (0 or 1)
```

```
-- Component Instantiation for FDDC should be placed
-- in architecture after the begin keyword
```

```
FDDC_INSTANCE_NAME : FDDC
  -- synthesis translate_off
  generic map (INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
           C => user_C,
           CLR => user_CLR,
           D => user_D);
```

## Verilog Instantiation Template


```
FDDC FDDC_instance_name (.Q (user_Q),  
                        .C (user_C),  
                        .CLR (user_CLR),  
                        .D (user_D));  
  
defparam FDDC_instance_name.INIT = bit_value;
```

## FDDCE

### Dual Edge Triggered D Flip-Flop with Clock Enable and Asynchronous Clear

#### Architectures Supported

FDDCE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Primitive
CoolRunner-IIS	No

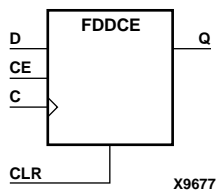

FDDCE is a single dual edge triggered D-type flip-flop with clock enable and asynchronous clear. When clock enable (CE) is High and asynchronous clear (CLR) is Low, the data on the data input (D) of FDDCE is transferred to the corresponding data output (Q) during the Low-to-High and High-to-Low clock (C) transitions. When CLR is High, it overrides all other inputs and resets the data output (Q) Low. When CE is Low, clock transitions are ignored.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated in Verilog by applying a High-level pulse on the PRLD global net.

Logic connected to the clock enable (CE) input may be implemented using the clock enable product term (p-term) in the macrocell, provided the logic can be completely implemented using the single p-term available for clock enable without requiring feedback from another macrocell. Only FDDCE and FDDPE flip-flops primitives may take advantage of the clock-enable p-term.

Inputs				Outputs
CLR	CE	D	C	Q
1	X	X	X	0
0	0	X	X	No Chg
0	1	1	↑	1
0	1	0	↑	0
0	1	1	↓	1
0	1	0	↓	0

## Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of fddce is
begin
  process (C, CLR) begin
    if (CLR = '1') then
      Q <= '0';
    elsif (C' event) then
      if (CE = '1') then
        Q <= D;
      end if;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or negedge C or posedge CLR)
begin
  if (CLR)
    Q <= 1'b0;
  else
    if (CE)
      Q <= D ;
  end
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FDDCE should be placed
-- after architecture statement but before begin keyword

component FDDCE
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        CE : in STD_ULOGIC;
        CLR : in STD_ULOGIC;
        D : in STD_ULOGIC);
end component;

-- Component Attribute specification for FDDCE
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for FDDCE should be placed
-- in architecture after the begin keyword

FDDCE_INSTANCE_NAME : FDDCE
port map (Q => user_Q,
         C => user_C,
         CE => user_CE,
         CLR => user_CLR,
         D => user_D);
```

## Verilog Instantiation Template

```
FDDCE FDDCE_instance_name (.Q (user_Q),  
                           .C (user_C),  
                           .CE (user_CE),  
                           .CLR (user_CLR),  
                           .D (user_D));
```




## FDDCP

### Dual Edge Architectures Supported Triggered D Flip-Flop Asynchronous Preset and Clear

#### Architectures Supported

FDDCP	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Primitive
CoolRunner-IIS	No

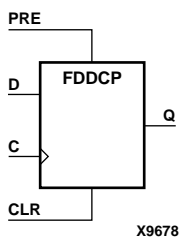

FDDCP is a single dual edge triggered D-type flip-flop with data (D), asynchronous preset (PRE) and clear (CLR) inputs, and data output (Q). The asynchronous PRE, when High, sets the Q output High; CLR, when High, resets the output Low. Data on the D input is loaded into the flip-flop when PRE and CLR are Low on the Low-to-High and High-to-Low clock (C) transitions.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated in Verilog by applying a High-level pulse on the PRLD global net.

Inputs				Outputs
CLR	PRE	D	C	Q
1	X	X	X	0
0	1	X	X	1
0	0	0	↑	0
0	0	1	↑	1
0	0	0	↓	0
0	0	1	↓	1

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

#### VHDL Inference Code

```
architecture Behavioral of fddcp is
begin
  process (C, CLR, PRE) begin
```

```

if (CLR = '1') then
  Q <= '0';
elsif (PRE = '1') then
  Q <= '1';
elsif (C' event) then
  Q <= D;
end if;
end process;
end Behavioral;

```

## Verilog Inference Code

```

always @ (posedge C or negedge C or posedge CLR or posedge PRE)
begin
  if (CLR)
    Q <= 1'b0;
  else
    if (PRE)
      Q <= 1'b1;
    else
      Q <= D ;
end
end

```

## VHDL Instantiation Template

```

-- Component Declaration for FDDCP should be placed
-- after architecture statement but before begin keyword

component FDDCP
  -- synthesis translate_off
  generic (INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        CLR : in STD_ULOGIC;
        D : in STD_ULOGIC;
        PRE : in STD_ULOGIC);
end component;

-- Component Attribute specification for FDDCP
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of FDDCP_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for FDDCP should be placed
-- in architecture after the begin keyword

FDDCP_INSTANCE_NAME : FDDCP
  -- synthesis translate_off
  generic map (INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
           C => user_C,
           CLR => user_CLR,

```

```
D => user_D,  
PRE => user_PRE);
```

## Verilog Instantiation Template


```
FDDCP FDDCP_instance_name (.Q (user_Q),  
                           .C (user_C),  
                           .CLR (user_CLR),  
                           .D (user_D),  
                           .PRE (user_PRE));  
  
defparam FDDCP_instance_name.INIT = bit_value;
```

## FDDCPE

### Dual Edge Triggered D Flip-Flop with Clock Enable and Asynchronous Preset and Clear

#### Architectures Supported


FDDCPE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

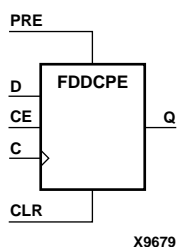

FDDCPE is a single dual edge triggered D-type flip-flop with data (D), clock enable (CE), asynchronous preset (PRE), and asynchronous clear (CLR) inputs and data output (Q). The asynchronous PRE, when High, sets the Q output High; CLR, when High, resets the output Low. Data on the D input is loaded into the flip-flop when PRE and CLR are Low and CE is High on the Low-to-High and High-to-Low clock (C) transitions. When CE is Low, the clock transitions are ignored.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated in Verilog by applying a High-level pulse on the PRLD global net.

Inputs					Outputs
CLR	PRE	CE	D	C	Q
1	X	X	X	X	0
0	1	X	X	X	1
0	0	0	X	X	No Chg
0	0	1	0	↑	0
0	0	1	1	↑	1
0	0	1	0	↓	0
0	0	1	1	↓	1

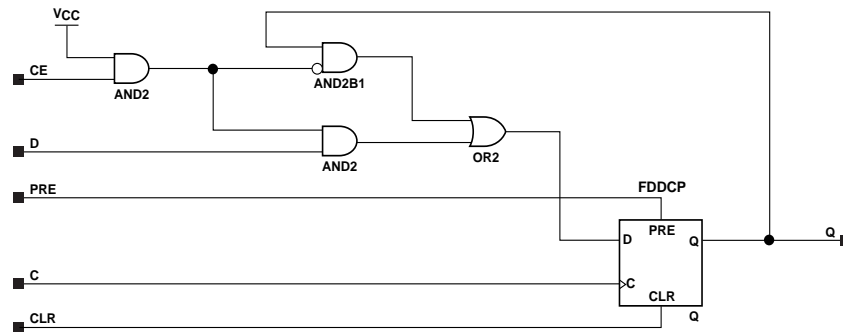

X9680

## FDDCPE Implementation CoolRunner-II

### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

### VHDL Inference Code

```
architecture Behavioral of fddcpe is
begin
  process (C, CLR, PRE) begin
    if (CLR = '1') then
      Q <= '0';
    elsif (PRE = '1') then
      Q <= '1';
    elsif (C' event) then
      if (CE = '1') then
        Q <= D;
      end if;
    end if;
  end process;
end Behavioral;
```

### Verilog Inference Code

```
always @ (posedge C or negedge C or posedge CLR or posedge PRE)
begin
  if (CLR)
    Q <= 1'b0;
  else
    if (PRE)
      Q <= 1'b1;
    else
      if (CE)
        Q <= D ;
      end if;
    end if;
  end if;
end
```

### VHDL Instantiation Template

```
-- Component Declaration for FDDCPE should be placed
-- after architecture statement but before begin keyword
```

```
component FDDCPE
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        CE : in STD_ULOGIC;
        CLR : in STD_ULOGIC;
        D : in STD_ULOGIC;
        PRE : in STD_ULOGIC);
end component;

-- Component Attribute specification for FDDCPE
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter values here

-- Component Instantiation for FDDCPE should be placed
-- in architecture after the begin keyword

FDDCPE_INSTANCE_NAME : FDDCPE
  port map (Q => user_Q,
           C => user_C,
           CE => user_CE,
           CLR => user_CLR,
           D => user_D,
           PRE => user_PRE);
```

## Verilog Instantiation Template

```
FDDCPE FDDCPE_instance_name (.Q (user_Q),
                              .C (user_C),
                              .CE (user_CE),
                              .CLR (user_CLR),
                              .D (user_D),
                              .PRE (user_PRE));
```






# FDDP

## Dual Edge Triggered D Flip-Flop with Asynchronous Preset

### Architectures Supported


FDDP	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

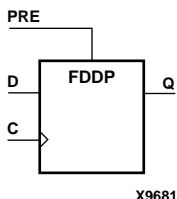

FDDP is a single dual edge triggered D-type flip-flop with data (D) and asynchronous preset (PRE) inputs and data output (Q). The asynchronous PRE, when High, overrides all other inputs and presets the Q output High. The data on the D input is loaded into the flip-flop when PRE is Low on the Low-to-High and High-to-Low clock (C) transitions.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated in Verilog by applying a High-level pulse on the PRLD global net.

Inputs			Outputs
PRE	C	D	Q
1	X	X	1
0	↑	1	1
0	↑	0	0
0	↓	1	1
0	↓	0	0

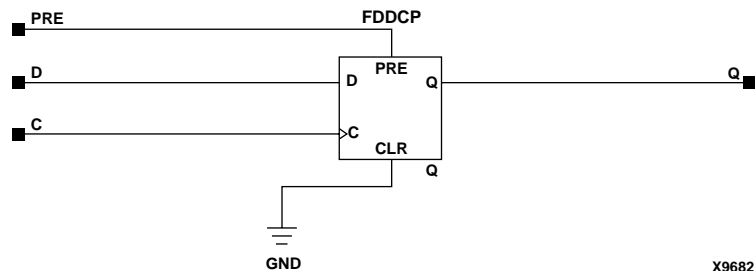

### FDDP Implementation CoolRunner-II

## Usage

For HDL, this design element can be inferred or instantiated.

## VHDL Inference Code

```
architecture Behavioral of fddp is
begin
  process (C,PRE) begin
    if (PRE = '1') then
      Q <= '1';
    elsif (C' event) then
      Q <= D;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or negedge C or posedge PRE)
begin
  if (PRE)
    Q <= 1'b1;
  else
    Q <= D ;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FDDP should be placed
-- after architecture statement but before begin keyword
```

```
component FDDP
  -- synthesis translate_off
  generic (INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        D : in STD_ULOGIC;
        PRE : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for FDDP
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
attribute INIT : string;
attribute INIT of FDDP_instance_name : label is "0";
-- values can be (0 or 1)
```

```
-- Component Instantiation for FDDP should be placed
-- in architecture after the begin keyword
```

```
FDDP_INSTANCE_NAME : FDDP
  -- synthesis translate_off
  generic map (INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
           C => user_C,
           D => user_D,
           PRE => user_PRE);
```

## Verilog Instantiation Template


```
FDDP FDDP_instance_name (.Q (user_Q),  
                        .C (user_C),  
                        .D (user_D),  
                        .PRE (user_PRE));  
  
defparam FDDP_instance_name.INIT = bit_value;
```

## FDDPE

### Dual Edge Triggered D Flip-Flop with Clock Enable and Asynchronous Preset

#### Architectures Supported

FDDPE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Primitive
CoolRunner-IIS	No

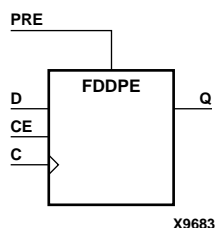

FDDPE is a single dual edge triggered D-type flip-flop with data (D), clock enable (CE), and asynchronous preset (PRE) inputs and data output (Q). The asynchronous PRE, when High, overrides all other inputs and sets the Q output High. Data on the D input is loaded into the flip-flop when PRE is Low and CE is High on the Low-to-High and High-to-Low clock (C) transitions. When CE is Low, the clock transitions are ignored.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated in Verilog by applying a High-level pulse on the PRLD global net.

Logic connected to the clock enable (CE) input may be implemented using the clock enable product term (p-term) in the macrocell, provided the logic can be completely implemented using the single p-term available for clock enable without requiring feedback from another macrocell. Only FDDCE and FDDPE flip-flops primitives may take advantage of the clock-enable p-term.

Inputs				Outputs
PRE	CE	D	C	Q
1	X	X	X	1
0	0	X	X	No Chg
0	1	0	↑	0
0	1	1	↑	1
0	1	0	↓	0
0	1	1	↓	1

## Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of fddpe is
begin
  process (C,PRE) begin
    if (PRE = '1') then
      Q <= '1';
    elsif (C' event) then
      if (CE = '1') then
        Q <= D;
      end if;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or negedge C or posedge PRE)
begin
  if (PRE)
    Q <= 1'b1;
  else
    if (CE)
      Q <= D ;
  end
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FDDPE should be placed
-- after architecture statement but before begin keyword

component FDDPE
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        CE : in STD_ULOGIC;
        D : in STD_ULOGIC;
        PRE : in STD_ULOGIC);
end component;

-- Component Attribute specification for FDDPE
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for FDDPE should be placed
-- in architecture after the begin keyword

FDDPE_INSTANCE_NAME : FDDPE
  port map (Q => user_Q,
           C => user_C,
           CE => user_CE,
           D => user_D,
           PRE => user_PRE);
```

## Verilog Instantiation Template

```
FDDPE FDDPE_instance_name (.Q (user_Q),
```

```
.C (user_C),  
.CE (user_CE),  
.D (user_D),  
.PRE (user_PRE));  
  
defparam FDDPE_instance_name.INIT = bit_value;
```




## FDDR

### Dual Edge Triggered D Flip-Flop with Synchronous Reset

#### Architectures Supported


FDDR	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

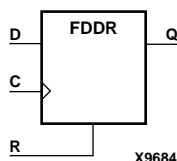

FDDR is a single dual edge triggered D-type flip-flop with data (D) and synchronous reset (R) inputs and data output (Q). The synchronous reset (R) input, when High, overrides all other inputs and resets the Q output Low on the Low-to-High and High-to-Low clock (C) transitions. The data on the D input is loaded into the flip-flop when R is Low during the Low-to-High or High-to-Low clock transitions.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated in Verilog by applying a High-level pulse on the PRLD global net.

Inputs			Outputs
R	D	C	Q
1	X	↑	0
1	X	↓	0
0	1	↑	1
0	0	↑	0
0	1	↓	1
0	0	↓	0

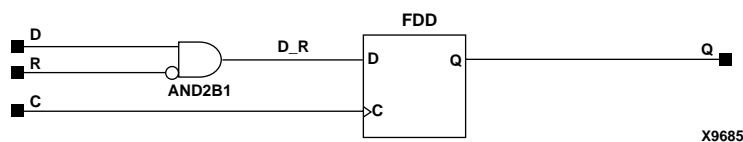

#### FDDR Implementation CoolRunner-II

#### Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of fddr is
begin
  process (C) begin
    if (C' event) then
      if (R = '1') then
        Q <= '0';
      else
        Q <= D;
      end if;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code


```
always @ (posedge C or negedge C)
begin
  if (R)
    Q <= 1'b0;
  else
    Q <= D ;
end
```

## FDDRCPE

### Dual Data Rate D Flip-Flop with Clock Enable and Asynchronous Preset and Clear

#### Architectures Supported

FDDRCPE	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

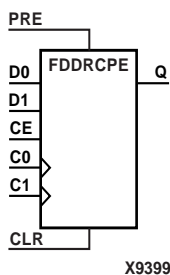

FDDRCPE is a Dual Data Rate (DDR) D flip-flop with two separate clocks (C0 and C1) phase shifted 180 degrees that allow selection of two separate data inputs (D0 and D1). It also has clock enable (CE), asynchronous preset (PRE), and asynchronous clear (CLR) inputs and data output (Q). The asynchronous PRE, when High, sets the Q output High; CLR, when High, resets the output Low. Data on the D0 input is loaded into the flip-flop when PRE and CLR are Low and CE is High on the Low-to-High C0 clock transition. Data on the D1 input is loaded into the flip-flop when PRE and CLR are Low and CE is High on the Low-to-High C1 clock transition. When CE is Low, the clock transitions are ignored.

The flip-flop is asynchronously cleared, output Low, when power is applied.

Use the INIT attribute to initialize FDDRCPE during configuration.

Inputs							Outputs
C0	C1	CE	D0	D1	CLR	PRE	Q
X	X	X	X	X	1	0	0
X	X	X	X	X	0	1	1
X	X	X	X	X	1	1	0
X	X	0	X	X	0	0	No Chg
↑	X	1	D0	X	0	0	D0
X	↑	1	X	D1	0	0	D1

#### Usage

For HDL, this design element is instantiated rather than inferred.

## VHDL Instantiation Template

```
-- Component Declaration for FDDRCPE should be placed
-- after architecture statement but before begin keyword

component FDDRCPE
  -- synthesis translate_off
  generic (INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C0 : in STD_ULOGIC;
        C1 : in STD_ULOGIC;
        CE : in STD_ULOGIC;
        CLR : in STD_ULOGIC;
        D0 : in STD_ULOGIC;
        D1 : in STD_ULOGIC;
        PRE : in STD_ULOGIC);
end component;

-- Component Attribute specification for FDDRCPE
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of FDDRCPE_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for FDDRCPE should be placed
-- in architecture after the begin keyword

FDDRCPE_INSTANCE_NAME : FDDRCPE
  -- synthesis translate_off
  generic map (INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
           C0 => user_C0,
           C1 => user_C1,
           CE => user_CE,
           CLR => user_CLR,
           D0 => user_D0,
           D1 => user_D1,
           PRE => user_PRE);
```

## Verilog Instantiation Template

```
FDDRCPE FDDRCPE_instance_name (.Q (user_Q),  
                                .C0 (user_C0),  
                                .C1 (user_C1),  
                                .CE (user_CE),  
                                .CLR (user_CLR),  
                                .D0 (user_D0),  
                                .D1 (user_D1),  
                                .PRE (user_PRE));  
  
defparam FDDRCPE_instance_name.INIT = bit_value;
```




## FDDRE

### Dual Edge Triggered D Flip-Flop with Clock Enable and Synchronous Reset

#### Architectures Supported


FDDRE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

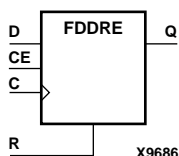

FDDRE is a single dual edge triggered D-type flip-flop with data (D), clock enable (CE), and synchronous reset (R) inputs and data output (Q). The synchronous reset (R) input, when High, overrides all other inputs and resets the Q output Low on the Low-to-High or High-to-Low clock (C) transition. The data on the D input is loaded into the flip-flop when R is Low and CE is High during the Low-to-High and High-to-Low clock transitions.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated in Verilog by applying a High-level pulse on the PRLD global net.

Inputs				Outputs
R	CE	D	C	Q
1	X	X	↑	0
1	X	X	↓	0
0	0	X	X	No Chg
0	1	1	↑	1
0	1	0	↑	0
0	1	1	↓	1
0	1	0	↓	0

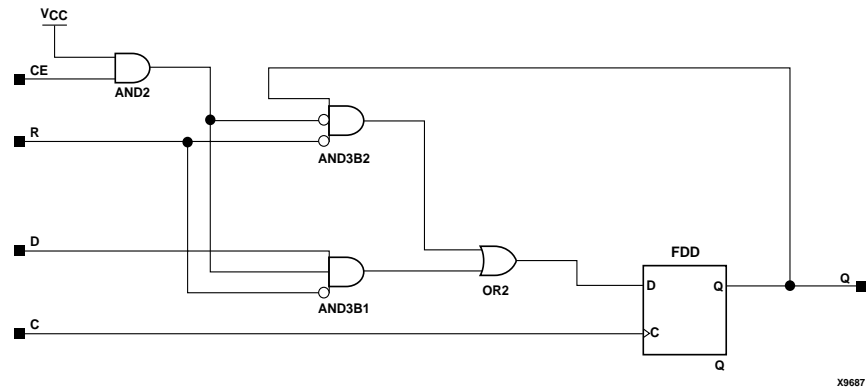

FDDRE Implementation CoolRunner-II



## Usage

For HDL, this design element can be inferred but not instantiated.

## VHDL Inference Code

```
architecture Behavioral of fddre is
begin
    process (C) begin
        if (C' event) then
            if (R = '1') then
                Q <= '0';
            elsif (CE = '1') then
                Q <= D;
            end if;
        end if;
    end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or negedge C)
begin
    if (R)
        Q <= 1'b0;
    else
        if (CE)
            Q <= D ;
    end
end
```




## FDDRRSE

### Dual Data Rate D Flip-Flop with Clock Enable and Synchronous Reset and Set

#### Architectures Supported

FDDRRSE	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

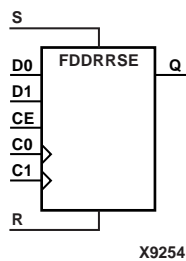

FDDRRSE is a Dual Data Rate (DDR) D flip-flop with two separate clocks (C0 and C1) phase shifted 180 degrees that allow selection of two separate data inputs (D0 and D1). It also has synchronous reset (R), synchronous set (S), and clock enable (CE) inputs and data output (Q). The reset (R) input, when High, overrides all other inputs and resets the Q output Low during any Low-to-High clock transition (C0 or C1). (Reset has precedence over Set.) When the S input is High and R is Low, the flip-flop is set, output High, during a Low-to-High clock transition (C0 or C1). Data on the D0 input is loaded into the flip-flop when R and S are Low and CE is High during the Low-to-High C0 clock transition. Data on the D1 input is loaded into the flip-flop when R and S are Low and CE is High during the Low-to-High C1 clock transition.

The flip-flop is asynchronously cleared, output Low, when power is applied.

Use the INIT attribute to initialize FDDRRSE during configuration.

Inputs							Outputs
C0	C1	CE	D0	D1	R	S	Q
↑	X	X	X	X	1	0	0
↑	X	X	X	X	0	1	1
↑	X	X	X	X	1	1	0
X	↑	X	X	X	1	0	0
X	↑	X	X	X	0	1	1
X	↑	X	X	X	1	1	0
X	X	0	X	X	0	0	No Chg
↑	X	1	D0	X	0	0	D0
X	↑	1	X	D1	0	0	D1

## Usage

For HDL, this design element is instantiated rather than inferred.

## VHDL Instantiation Template

```
-- Component Declaration for FDDRRSE should be placed
-- after architecture statement but before begin keyword
```

```
component FDDRRSE
  -- synthesis translate_off
  generic (INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C0 : in STD_ULOGIC;
        C1 : in STD_ULOGIC;
        CE : in STD_ULOGIC;
        D0 : in STD_ULOGIC;
        D1 : in STD_ULOGIC;
        R : in STD_ULOGIC;
        S : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for FDDRRSE
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
attribute INIT : string;
attribute INIT of FDDRRSE_instance_name : label is "0";
-- values can be (0 or 1)
```

```
-- Component Instantiation for FDDRRSE should be placed
-- in architecture after the begin keyword
```

```
FDDRRSE_INSTANCE_NAME : FDDRRSE
  -- synthesis translate_off
  generic map (INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
            C0 => user_C0,
            C1 => user_C1,
            CE => user_CE,
            D0 => user_D0,
            D1 => user_D1,
            R => user_R,
            S => user_S);
```

## Verilog Instantiation Template


```
FDDRSE FDDRSE_instance_name (.Q (user_Q),  
                             .C0 (user_C0),  
                             .C1 (user_C1),  
                             .CE (user_CE),  
                             .D0 (user_D0),  
                             .D1 (user_D1),  
                             .R (user_R),  
                             .S (user_S));  
  
defparam FDDRSE_instance_name.INIT = bit_value;
```

## FDDRS

### Dual Edge Triggered D Flip-Flop with Synchronous Reset and Set

#### Architectures Supported


FDDRS	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

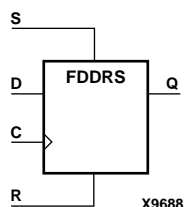

FDDRS is a single dual edge triggered D-type flip-flop with data (D), synchronous set (S), and synchronous reset (R) inputs and data output (Q). The synchronous reset (R) input, when High, overrides all other inputs and resets the Q output Low during the Low-to-High or High-to-Low clock (C) transitions. (Reset has precedence over Set.) When S is High and R is Low, the flip-flop is set, output High, during the Low-to-High or High-to-Low clock transition. When R and S are Low, data on the (D) input is loaded into the flip-flop during the Low-to-High and High-to-Low clock transitions.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated in Verilog by applying a High-level pulse on the PRLD global net.

Inputs				Outputs
R	S	D	C	Q
1	X	X	↑	0
1	X	X	↓	0
0	1	X	↑	1
0	1	X	↓	1
0	0	1	↑	1
0	0	1	↓	1
0	0	0	↑	0
0	0	0	↓	0

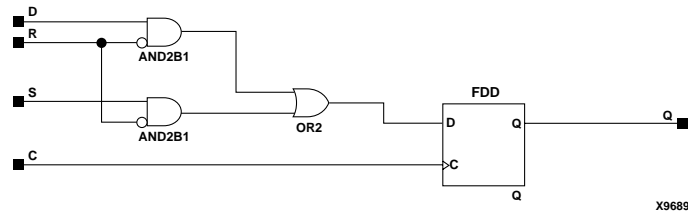

## FDDRS Implementation CoolRunner-II

### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

### VHDL Inference Code

```
architecture Behavioral of fddrs is
begin
  process (C) begin
    if (C' event) then
      if (R = '1') then
        Q <= '0';
      elsif (S = '1') then
        Q <= '1';
      else
        Q <= D;
      end if;
    end if;
  end process;
end Behavioral;
```

### Verilog Inference Code

```
always @ (posedge C or negedge C)
begin
  if (R)
    Q <= 1'b0;
  else
    if (S)
      Q <= 1'b1;
    else
      Q <= D ;
    end if;
  end if;
end
```

### VHDL Instantiation Template

```
-- Component Declaration for FDDRS should be placed
-- after architecture statement but before begin keyword

component FDDRS
  -- synthesis translate_off
  generic (INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
```



```

        D : in STD_ULONGIC;
        R : in STD_ULONGIC;
        S : in STD_ULONGIC);
end component;

-- Component Attribute specification for FDDRS
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of FDDRS_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for FDDRS should be placed
-- in architecture after the begin keyword

FDDRS_INSTANCE_NAME : FDDRS
-- synthesis translate_off
generic map (INIT => bit_value)
-- synthesis translate_on
port map (Q => user_Q,
         C => user_C,
         D => user_D,
         R => user_R,
         S => user_S);

```

## Verilog Instantiation Template

```

FDDRS FDDRS_instance_name (.Q (user_Q),
                          .C (user_C),
                          .D (user_D),
                          .R (user_R),
                          .S (user_S));

defparam FDDRS_instance_name.INIT = bit_value;

```




## FDDRSE

### Dual Edge Triggered D Flip-Flop with Synchronous Reset and Set and Clock Enable

#### Architectures Supported


FDDRSE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

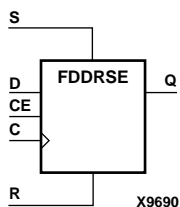

FDDRSE is a single dual edge triggered D-type flip-flop with synchronous reset (R), synchronous set (S), and clock enable (CE) inputs and data output (Q). The reset (R) input, when High, overrides all other inputs and resets the Q output Low during the Low-to-High or High-to-Low clock transitions. (Reset has precedence over Set.) When the set (S) input is High and R is Low, the flip-flop is set, output High, during the Low-to-High or High-to-Low clock (C) transition. Data on the D input is loaded into the flip-flop when R and S are Low and CE is High during the Low-to-High and High-to-Low clock transitions.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated in Verilog by applying a High-level pulse on the PRLD global net.

Inputs					Outputs
R	S	CE	D	C	Q
1	X	X	X	↑	0
1	X	X	X	↓	0
0	1	X	X	↑	1
0	1	X	X	↓	1
0	0	0	X	X	No Chg
0	0	1	1	↑	1
0	0	1	0	↑	0
0	0	1	1	↓	1
0	0	1	0	↓	0

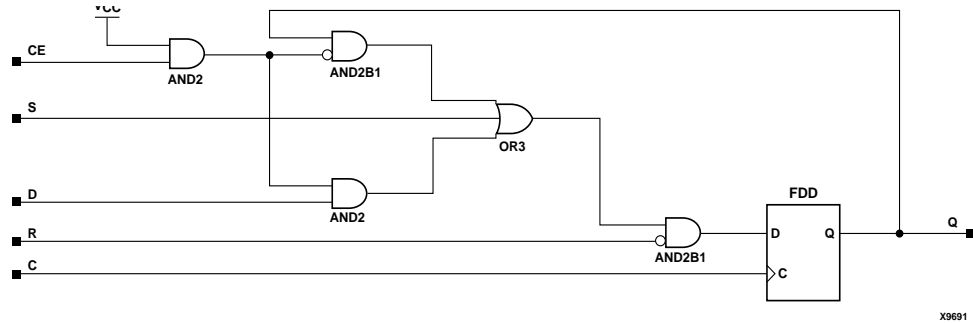

## FDDRSE Implementation CoolRunner-II

### Usage

For HDL, this design element is inferred rather than instantiated.

### VHDL Inference Code

```
architecture Behavioral of fddrse is
begin
  process (C) begin
    if (C' event) then
      if (R = '1') then
        Q <= '0';
      elsif (S = '1') then
        Q <= '1';
      elsif (CE = '1') then
        Q <= D;
      end if;
    end if;
  end process;
end Behavioral;
```

### Verilog Inference Code


```
always @ (posedge C or negedge C)
begin
  if (R)
    Q <= 1'b0;
  else
    if (S)
      Q <= 1'b1;
    else
      if (CE)
        Q <= D ;
      end if;
    end if;
  end if;
end
```

# FDDS

## Dual Edge Triggered D Flip-Flop with Synchronous Set

### Architectures Supported


FDDS	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

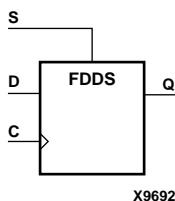

FDDS is a single dual edge triggered D-type flip-flop with data (D) and synchronous set (S) inputs and data output (Q). The synchronous set input, when High, sets the Q output High on the Low-to-High or High-to-Low clock (C) transition. The data on the D input is loaded into the flip-flop when S is Low during the Low-to-High and High-to-Low clock (C) transitions.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated in Verilog by applying a High-level pulse on the PRLD global net.

Inputs			Outputs
S	D	C	Q
1	X	↑	1
1	X	↓	1
0	1	↑	1
0	0	↑	0
0	1	↓	1
0	0	↓	0

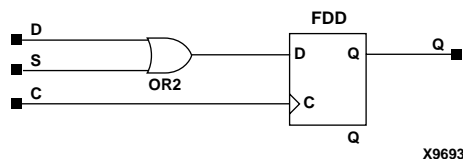

### FDDS Implementation CoolRunner-II

#### Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of fdds is
begin
  process (C) begin
    if (C' event) then
      if (S = '1') then
        Q <= '1';
      else
        Q <= D;
      end if;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code


```
always @ (posedge C or negedge C)
begin
  if (S)
    Q <= 1'b1;
  else
    Q <= D ;
end
```

## FDDSE

### D Flip-Flop with Clock Enable and Synchronous Set

#### Architectures Supported


FDDSE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

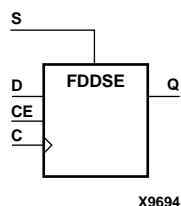

FDDSE is a single dual edge triggered D-type flip-flop with data (D), clock enable (CE), and synchronous set (S) inputs and data output (Q). The synchronous set (S) input, when High, overrides the clock enable (CE) input and sets the Q output High during the Low-to-High or High-to-Low clock (C) transition. The data on the D input is loaded into the flip-flop when S is Low and CE is High during the Low-to-High and High-to-Low clock (C) transitions.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated in Verilog by applying a High-level pulse on the PRLD global net.

Inputs				Outputs
S	CE	D	C	Q
1	X	X	↑	1
1	X	X	↓	1
0	0	X	X	No Chg
0	1	1	↑	1
0	1	0	↑	0
0	1	1	↓	1
0	1	0	↓	0

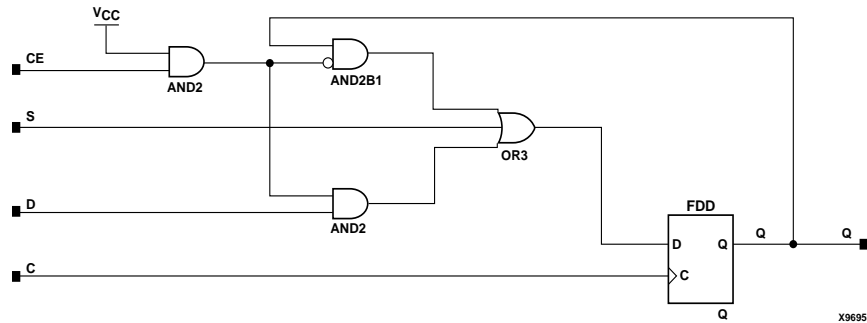

## FDDSE Implementation CoolRunner-II

### Usage

For HDL, this design element is inferred rather than instantiated.

### VHDL Inference Code

```
architecture Behavioral of fddse is
begin
    process (C) begin
        if (C' event) then
            if (S = '1') then
                Q <= '1';
            elsif (CE = '1') then
                Q <= D;
            end if;
        end if;
    end process;
end Behavioral;
```

### Verilog Inference Code

```
always @ (posedge C or negedge C)
begin
    if (S)
        Q <= 1'b1;
    else
        if (CE)
            Q <= D ;
    end
end
```




## FDDSR

### Dual Edge Triggered D Flip-Flop with Synchronous Set and Reset

#### Architectures Supported


FDDSR	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

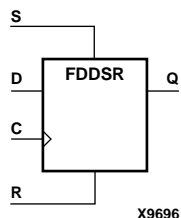

FDDSR is a single dual edge triggered D-type flip-flop with data (D), synchronous reset (R) and synchronous set (S) inputs and data output (Q). When the set (S) input is High, it overrides all other inputs and sets the Q output High during the Low-to-High or High-to-Low clock transition. (Set has precedence over Reset.) When reset (R) is High and S is Low, the flip-flop is reset, output Low, on the Low-to-High or High-to-Low clock transition. Data on the D input is loaded into the flip-flop when S and R are Low on the Low-to-High and High-to-Low clock transitions.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated in Verilog by applying a High-level pulse on the PRLD global net.

Inputs				Outputs
S	R	D	C	Q
1	X	X	↑	1
1	X	X	↓	1
0	1	X	↑	0
0	1	X	↓	0
0	0	1	↑	1
0	0	0	↑	0
0	0	1	↓	1
0	0	0	↓	0

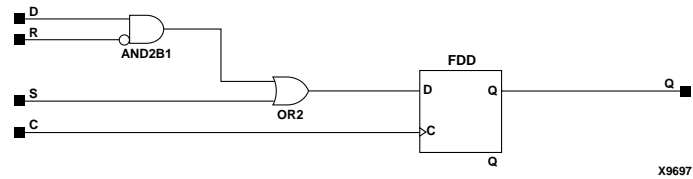

## FDDSR Implementation CoolRunner-II

### Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of fddsr is
begin
    process (C) begin
        if (C' event) then
            if (S = '1') then
                Q <= '1';
            elsif (R = '1') then
                Q <= '0';
            else
                Q <= D;
            end if;
        end if;
    end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or negedge C)
begin
    if (S)
        Q <= 1'b1;
    else
        if (R)
            Q <= 1'b0;
        else
            Q <= D;
        end if;
    end if;
end
```




## FDDSRE

### Dual Edge Triggered D Flip-Flop with Synchronous Set and Reset and Clock Enable

#### Architectures Supported


FDDSRE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

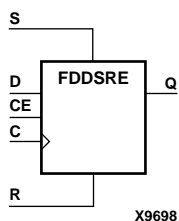

FDDSRE is a single dual edge triggered D-type flip-flop with synchronous set (S), synchronous reset (R), and clock enable (CE) inputs and data output (Q). When synchronous set (S) is High, it overrides all other inputs and sets the Q output High during the Low-to-High or High-to-Low clock transition. (Set has precedence over Reset.) When synchronous reset (R) is High and S is Low, output Q is reset Low during the Low-to-High or High-to-Low clock transition. Data is loaded into the flip-flop when S and R are Low and CE is High during the Low-to-High and High-to-Low clock transitions. When CE is Low, clock transitions are ignored.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated in Verilog by applying a High-level pulse on the PRLD global net.

Inputs					Outputs
S	R	CE	D	C	Q
1	X	X	X	↑	1
1	X	X	X	↓	1
0	1	X	X	↑	0
0	1	X	X	↓	0
0	0	0	X	X	No Chg
0	0	1	1	↑	1
0	0	1	0	↑	0
0	0	1	1	↓	1
0	0	1	0	↓	0

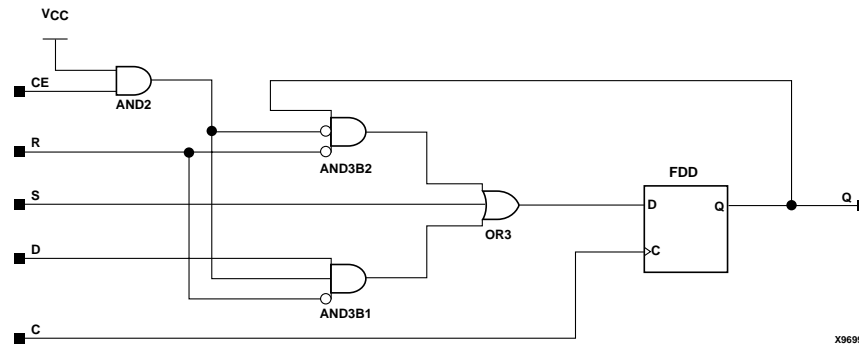

### FDDSRE Implementation CoolRunner-II

### Usage

For HDL, this design element is inferred rather than instantiated.

### VHDL Inference Code

```
architecture Behavioral of fddsre is
begin
    process (C) begin
        if (C' event) then
            if (S = '1') then
                Q <= '1';
            elsif (R = '1') then
                Q <= '0';
            elsif (CE = '1') then
                Q <= D;
            end if;
        end if;
    end process;
end Behavioral;
```

### Verilog Inference Code


```
always @ (posedge C or negedge C)
begin
    if (S)
        Q <= 1'b1;
    else
        if (R)
            Q <= 1'b0;
        else
            if (CE)
                Q <= D;
            end if;
        end if;
    end if;
end
```

## FDE

### D Flip-Flop with Clock Enable

#### Architectures Supported

FDE	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

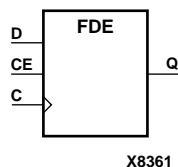

FDE is a single D-type flip-flop with data input (D), clock enable (CE), and data output (Q). When clock enable is High, the data on the D input is loaded into the flip-flop during the Low-to-High clock (C) transition.

The flip-flop is asynchronously cleared, output Low, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
CE	D	C	Q
0	X	X	No Chg
1	0	↑	0
1	1	↑	1

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

#### VHDL Inference Code

```
architecture Behavioral of fde is
begin
  process (C)
  begin
    if (C' event and C='1') then
      if (CE = '1') then
        Q <= D;
      end if;
    end if;
  end process;
end architecture;
```

```
end if;  
end process;  
end Behavioral;
```



## Verilog Inference Code

```
always @ (posedge C) begin
    if (CE)
        Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FDE should be placed
-- after architecture statement but before begin keyword
```

```
component FDE
    -- synthesis translate_off
    generic (INIT : bit := '1');
    -- synthesis translate_on
    port (Q : out STD_ULOGIC;
          C : in STD_ULOGIC;
          CE : in STD_ULOGIC;
          D : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for FDE
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
attribute INIT : string;
attribute INIT of FDE_instance_name : label is "0";
-- values can be (0 or 1)
```

```
-- Component Instantiation for FDE should be placed
-- in architecture after the begin keyword
```

```
FDE_INSTANCE_NAME : FDE
    -- synthesis translate_off
    generic map (INIT => bit_value)
    -- synthesis translate_on
    port map (Q => user_Q,
              C => user_C,
              CE => user_CE,
              D => user_D);
```

## Verilog Instantiation Template

```
FDE FDE_instance_name (.Q (user_Q),
                       .C (user_C),
                       .CE (user_CE),
                       .D (user_D));
```

```
defparam FDE_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM

HBLKNM


HU\_SET  
INIT  
IOB  
LOC  
REG  
RLOC  
TIMEGRP  
TNM  
U\_SET  
XBLKNM

## FDE\_1

### D Flip-Flop with Negative-Edge Clock and Clock Enable

#### Architectures Supported

FDE_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

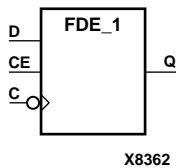

FDE\_1 is a single D-type flip-flop with data input (D), clock enable (CE), and data output (Q). When clock enable is High, the data on the D input is loaded into the flip-flop during the High-to-Low clock (C) transition.

The flip-flop is asynchronously cleared, output Low, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
CE	D	C	Q
0	X	X	No Chg
1	0	↓	0
1	1	↓	1

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

#### VHDL Inference Code

```
architecture Behavioral of fde_1 is
begin
  process (C)
  begin
    if (C' event and C='0') then
      if (CE = '1') then
        Q <= D;
      end if;
    end if;
  end process;
end architecture;
```

```
end if;  
end process;  
end Behavioral;
```

## Verilog Inference Code

```
always @ (negedge C) begin
    if (CE)
        Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FDE_1 should be placed
-- after architecture statement but before begin keyword
```

```
component FDE_1
    -- synthesis translate_off
    generic (INIT : bit := '1');
    -- synthesis translate_on
    port (Q : out STD_ULOGIC;
          C : in STD_ULOGIC;
          CE : in STD_ULOGIC;
          D : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for FDE_1
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
attribute INIT : string;
attribute INIT of FDE_1_instance_name : label is "0";
-- values can be (0 or 1)
```

```
-- Component Instantiation for FDE_1 should be placed
-- in architecture after the begin keyword
```

```
FDE_1_INSTANCE_NAME : FDE_1
    -- synthesis translate_off
    generic map (INIT => bit_value)
    -- synthesis translate_on
    port map (Q => user_Q,
              C => user_C,
              CE => user_CE,
              D => user_D);
```

## Verilog Instantiation Template

```
FDE_1 FDE_1_instance_name (.Q (user_Q),
                           .C (user_C),
                           .CE (user_CE),
                           .D (user_D));
```

```
defparam FDE_1_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

INIT

IOB

LOC

REG

RLOC

TIMEGRP

TNM

U\_SET


XBLKNM

## FDP

### D Flip-Flop with Asynchronous Preset

#### Architectures Supported

FDP	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

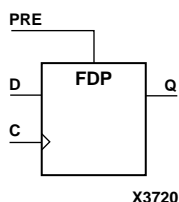

FDP is a single D-type flip-flop with data (D) and asynchronous preset (PRE) inputs and data output (Q). The asynchronous PRE, when High, overrides all other inputs and presets the Q output High. The data on the D input is loaded into the flip-flop when PRE is Low on the Low-to-High clock (C) transition.


For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the flip-flop is asynchronously preset, output High, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

The active level of the GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
PRE	C	D	Q
1	X	X	1
0	↑	1	1
0	↑	0	0

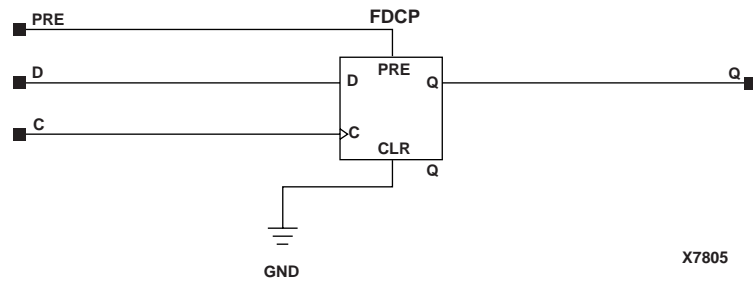

FDP Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II



## Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of fdp is
begin
  process (C,PRE) begin
    if (PRE = '1') then
      Q <= '1';
    elsif (C' event and C = '1') then
      Q <= D;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge PRE or posedge C) begin
  if (PRE)
    Q <= 1;
  else
    Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FDP should be placed
-- after architecture statement but before begin keyword

component FDP
  -- synthesis translate_off
  generic (
    INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        D : in STD_ULOGIC;
        PRE : in STD_ULOGIC);
end component;

-- Component Attribute specification for FDP
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of FDP_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for FDP should be placed
-- in architecture after the begin keyword

FDP_INSTANCE_NAME : FDP
```

```
-- synthesis translate_off
generic map (
    INIT => bit_value)
-- synthesis translate_on
port map (Q => user_Q,
    C => user_C,
    D => user_D,
    PRE => user_PRE);
```

## Verilog Instantiation Template

```
FDP FDP_instance_name (.Q (user_Q),
    .C (user_C),
    .D (user_D),
    .PRE (user_PRE));

defparam FDP_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

INIT

IOB

LOC

REG

RLOC

TIMEGRP

TNM

U\_SET


XBLKNM

## FDP\_1

### D Flip-Flop with Negative-Edge Clock and Asynchronous Preset

#### Architectures Supported

FDP_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

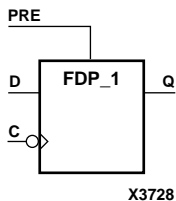

FDP\_1 is a single D-type flip-flop with data (D) and asynchronous preset (PRE) inputs and data output (Q). The asynchronous PRE, when High, overrides all other inputs and presets the Q output High. The data on the D input is loaded into the flip-flop when PRE is Low on the High-to-Low clock (C) transition.

The flip-flop is asynchronously preset, output High, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

The active level of the GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
PRE	C	D	Q
1	X	X	1
0	↓	1	1
0	↓	0	0

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

#### VHDL Inference Code

```
architecture Behavioral of fdp_1 is
begin
  process (C,PRE) begin
    if (PRE = '1') then
      Q <= '1';
    elsif (C' event and C = '0') then
      Q <= D;
    end if;
  end process;
end architecture;
```

```
end if;  
end process;  
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge PRE or negedge C) begin
    if (PRE)
        Q <= 1;
    else
        Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FDP_1 should be placed
-- after architecture statement but before begin keyword
```

```
component FDP_1
    -- synthesis translate_off
    generic (
        INIT : bit := '1');
    -- synthesis translate_on
    port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        D : in STD_ULOGIC;
        PRE : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for FDP_1
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
attribute INIT : string;
attribute INIT of FDP_1_instance_name : label is "0";
-- values can be (0 or 1)
```

```
-- Component Instantiation for FDP_1 should be placed
-- in architecture after the begin keyword
```

```
FDP_1_INSTANCE_NAME : FDP_1
    -- synthesis translate_off
    generic map (
        INIT => bit_value)
    -- synthesis translate_on
    port map (Q => user_Q,
        C => user_C,
        D => user_D,
        PRE => user_PRE);
```

## Verilog Instantiation Template

```
FDP_1 FDP_1_instance_name (.Q (user_Q),
    .C (user_C),
    .D (user_D),
    .PRE (user_PRE));

defparam FDP_1_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

INIT

IOB

LOC

REG

RLOC

TIMEGRP

TNM

U\_SET


XBLKNM

## FDPE

### D Flip-Flop with Clock Enable and Asynchronous Preset

#### Architectures Supported

FDPE	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No

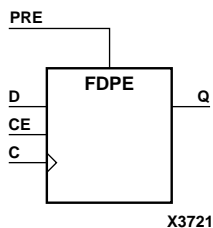

FDPE is a single D-type flip-flop with data (D), clock enable (CE), and asynchronous preset (PRE) inputs and data output (Q). The asynchronous PRE, when High, overrides all other inputs and sets the Q output High. Data on the D input is loaded into the flip-flop when PRE is Low and CE is High on the Low-to-High clock (C) transition. When CE is Low, the clock transitions are ignored.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

For XC9500XL and XC9500XV devices, logic connected to the clock enable (CE) input may be implemented using the clock enable product term (p-term) in the macrocell, provided the logic can be completely implemented using the single p-term available for clock enable without requiring feedback from another macrocell. Only FDCE and FDPE flip-flop primitives may take advantage of the clock-enable p-term.

For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the flip-flop is asynchronously preset, output High, when power is applied. These devices simulate power-on when global set/reset (GSR) is active.

The active level of the GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs				Outputs
PRE	CE	D	C	Q
1	X	X	X	1
0	0	X	X	No Chg
0	1	0	↑	0
0	1	1	↑	1

## Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of fdpe is
begin
  process (C,PRE) begin
    if (PRE = '1') then
      Q <= '1';
    elsif (C' event and C = '1') then
      if (CE = '1') then
        Q <= D;
      end if;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge PRE or posedge C) begin
  if (PRE)
    Q <= 1;
  else if (CE)
    Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FDPE should be placed
-- after architecture statement but before begin keyword

component FDPE
  -- synthesis translate_off
  generic (
    INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        CE : in STD_ULOGIC;
        D : in STD_ULOGIC;
        PRE : in STD_ULOGIC);
end component;

-- Component Attribute specification for FDPE
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of

FDPE_instance_name : label is "0";
-- values can be (0 or 1)
```



```
-- Component Instantiation for FDPE should be placed
-- in architecture after the begin keyword FDPE_INSTANCE_NAME : FDPE
-- synthesis translate_off
generic map (
    INIT => bit_value)
-- synthesis translate_on
port map (Q => user_Q,
          C => user_C,
          CE => user_CE,
          D => user_D,
          PRE => user_PRE);
```

## Verilog Instantiation Template

```
FDPE FDPE_instance_name (.Q (user_Q),
                        .C (user_C),
                        .CE (user_CE),
                        .D (user_D),
                        .PRE (user_PRE));
```

```
defparam
```

```
FDPE_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM, HBLKNM, HU\_SET, INIT, IOB, LOC, REG, RLOC, TIMEGRP, TNM, U\_SET,  
and XBLKNM




## FDPE\_1

### D Flip-Flop with Negative-Edge Clock, Clock Enable, and Asynchronous Preset

#### Architectures Supported

FDPE_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

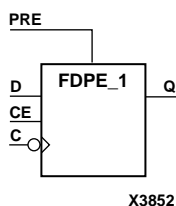

FDPE\_1 is a single D-type flip-flop with data (D), clock enable (CE), and asynchronous preset (PRE) inputs and data output (Q). The asynchronous PRE, when High, overrides all other inputs and sets the Q output High. Data on the D input is loaded into the flip-flop when PRE is Low and CE is High on the High-to-Low clock (C) transition. When CE is Low, the clock transitions are ignored.

The flip-flop is asynchronously preset, output High, when power is applied.

Spartan-II, Spartan-IIE, Spartan-III, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

The active level of the GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs				Outputs
PRE	CE	D	C	Q
1	X	X	X	1
0	0	X	X	No Chg
0	1	1	↓	1
0	1	0	↓	0

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

#### VHDL Inference Code

```
architecture Behavioral of fdpe_1 is
begin
    process (C,PRE) begin
```

```

if (PRE = '1') then
  Q <= '1';
elsif (C' event and C = '0') then
  if (CE = '1') then
    Q <= D;
  end if;
end if;
end process;
end Behavioral;

```

## Verilog Inference Code

```

always @ (posedge PRE or negedge C) begin
  if (PRE)
    Q <= 1;
  else if (CE)
    Q <= D;
end

```

## VHDL Instantiation Template

-- Component Declaration for FDPE\_1 should be placed  
-- after architecture statement but before begin keyword

```

component FDPE_1
  -- synthesis translate_off
  generic (
    INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        CE : in STD_ULOGIC;
        D : in STD_ULOGIC;
        PRE : in STD_ULOGIC);
end component;

```

-- Component Attribute specification for FDPE\_1  
-- should be placed after architecture declaration but  
-- before the begin keyword

```

attribute INIT : string;
attribute INIT of FDPE_1_instance_name : label is "0";
-- values can be (0 or 1)

```

-- Component Instantiation for FDPE\_1 should be placed  
-- in architecture after the begin keyword --

```

FDPE_1_INSTANCE_NAME : FDPE_1
  -- synthesis translate_off
  generic map (
    INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
            C => user_C,
            CE => user_CE,
            D => user_D,
            PRE => user_PRE);

```

## Verilog Instantiation Template

```
FDPE_1 FDPE_1_instance_name (.Q (user_Q),  
                             .C (user_C),  
                             .CE (user_CE),  
                             .D (user_D),  
                             .PRE (user_PRE));  
  
defparam FDPE_1_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

INIT

IOB

LOC

REG

RLOC

TIMEGRP

TNM

U\_SET

XBLKNM




## FDR

### D Flip-Flop with Synchronous Reset

#### Architectures Supported

FDR	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

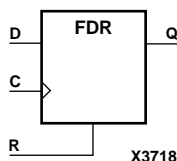

FDR is a single D-type flip-flop with data (D) and synchronous reset (R) inputs and data output (Q). The synchronous reset (R) input, when High, overrides all other inputs and resets the Q output Low on the Low-to-High clock (C) transition. The data on the D input is loaded into the flip-flop when R is Low during the Low-to-High clock transition.

The flip-flop is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
R	D	C	Q
1	X	↑	0
0	1	↑	1
0	0	↑	0

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

#### VHDL Inference Code

```
architecture Behavioral of fdr is
begin
  process (C) begin
```

```

if (C' event and C = '1') then
  if (R = '1') then
    Q <= '0';
  else
    Q <= D;
  end if;
end if;
end process;
end Behavioral;

```

## Verilog Inference Code

```

always @ (posedge C) begin
  if (R)
    Q <= 0;
  else
    Q <= D;
end

```

## VHDL Instantiation Template

```

-- Component Declaration for FDR should be placed
-- after architecture statement but before begin keyword

```

```

component FDR
  -- synthesis translate_off
  generic (
    INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        D : in STD_ULOGIC;
        R : in STD_ULOGIC);
end component;

```

```

-- Component Attribute specification for FDR
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

attribute INIT : string;
attribute INIT of FDR_instance_name : label is "0";
-- values can be (0 or 1)

```

```

-- Component Instantiation for FDR should be placed
-- in architecture after the begin keyword

```

```

FDR_INSTANCE_NAME : FDR
  -- synthesis translate_off
  generic map (
    INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
            C => user_C,
            D => user_D,
            R => user_R);

```



## Verilog Instantiation Template

```
FDR FDR_instance_name (.Q (user_Q),  
                        .C (user_C),  
                        .D (user_D),  
                        .R (user_R));  
  
defparam FDR_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM  
HBLKNM  
HU\_SET  
INIT  
IOB  
LOC  
REG  
RLOC  
TIMEGRP  
TNM  
U\_SET  
XBLKNM




## FDR\_1

### D Flip-Flop with Negative-Edge Clock and Synchronous Reset

#### Architectures Supported

FDR_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

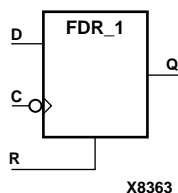

FDR\_1 is a single D-type flip-flop with data (D) and synchronous reset (R) inputs and data output (Q). The synchronous reset (R) input, when High, overrides all other inputs and resets the Q output Low on the High-to-Low clock (C) transition. The data on the D input is loaded into the flip-flop when R is Low during the High-to-Low clock transition.

The flip-flop is asynchronously cleared, output Low, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
R	D	C	Q
1	X	↓	0
0	1	↓	1
0	0	↓	0

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

#### VHDL Inference Code

```
architecture Behavioral of fdr_1 is
begin
  process (C) begin
    if (C' event and C = '0') then
      if (R = '1') then
        Q <= '0';
      end if;
    end if;
  end process;
end architecture;
```

```
    else
      Q <= D;
    end if;
  end if;
end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (negedge C) begin
  if (R)
    Q <= 0;
  else
    Q <= D;
  end
end
```

## VHDL Instantiation Template

-- Component Declaration for FDR\_1 should be placed  
-- after architecture statement but before begin keyword

```
component FDR_1
  -- synthesis translate_off
  generic (
    INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        D : in STD_ULOGIC;
        R : in STD_ULOGIC);
end component;
```

-- Component Attribute specification for FDR\_1  
-- should be placed after architecture declaration but  
-- before the begin keyword

```
attribute INIT : string;
attribute INIT of FDR_1_instance_name : label is "0";
-- values can be (0 or 1)
```

-- Component Instantiation for FDR\_1 should be placed  
-- in architecture after the begin keyword

```
FDR_1_INSTANCE_NAME : FDR_1
  -- synthesis translate_off
  generic map (
    INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
           C => user_C,
           D => user_D,
           R => user_R);
```

## Verilog Instantiation Template

```
FDR_1 FDR_1_instance_name (.Q (user_Q),  
                           .C (user_C),  
                           .D (user_D),  
                           .R (user_R));
```

```
defparam FDR_1_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

INIT

IOB

LOC

REG

RLOC

TIMEGRP

TNM

U\_SET

XBLKNM




## FDRE

### D Flip-Flop with Clock Enable and Synchronous Reset

#### Architectures Supported

FDRE	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

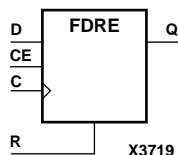

FDRE is a single D-type flip-flop with data (D), clock enable (CE), and synchronous reset (R) inputs and data output (Q). The synchronous reset (R) input, when High, overrides all other inputs and resets the Q output Low on the Low-to-High clock (C) transition. The data on the D input is loaded into the flip-flop when R is Low and CE is High during the Low-to-High clock transition.


The flip-flop is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs				Outputs
R	CE	D	C	Q
1	X	X	↑	0
0	0	X	X	No Chg
0	1	1	↑	1
0	1	0	↑	0

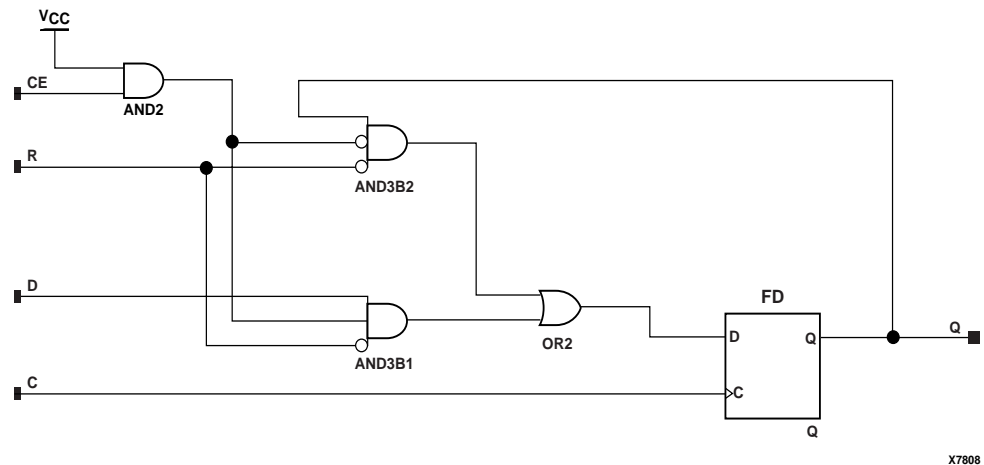

FDRE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

## Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of fdre is
begin
  process (C) begin
    if (C' event and C = '1') then
      if (R = '1') then
        Q <= '0';
      elsif (CE = '1') then
        Q <= D;
      end if;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C) begin
  if (R)
    Q <= 0;
  else if (CE)
    Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FDRE should be placed
-- after architecture statement but before begin keyword

component FDRE
  -- synthesis translate_off
  generic (
```



```

        INIT : bit := '1');
    -- synthesis translate_on
    port (Q : out STD_ULOGIC;
          C : in STD_ULOGIC;
          CE : in STD_ULOGIC;
          D : in STD_ULOGIC;
          R : in STD_ULOGIC);
end component;

-- Component Attribute specification for FDRE
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of FDRE_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for FDRE should be placed
-- in architecture after the begin keyword

FDRE_INSTANCE_NAME : FDRE
    -- synthesis translate_off
    generic map (
        INIT => bit_value)
    -- synthesis translate_on
    port map (Q => user_Q,
              C => user_C,
              CE => user_CE,
              D => user_D,
              R => user_R);

```

## Verilog Instantiation Template

```

FDRE FDRE_instance_name (.Q (user_Q),
                        .C (user_C),
                        .CE (user_CE),
                        .D (user_D),
                        .R (user_R));

defparam FDRE_instance_name.INIT = bit_value;

```

## Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

INIT

IOB

LOC

REG

RLOC

TIMEGRP

TNM

U\_SET


XBLKNM

## FDRE\_1

### D Flip-Flop with Negative-Clock Edge, Clock Enable, and Synchronous Reset

#### Architectures Supported

FDRE_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

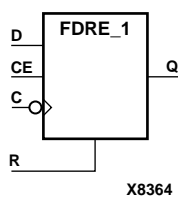

FDRE\_1 is a single D-type flip-flop with data (D), clock enable (CE), and synchronous reset (R) inputs and data output (Q). The synchronous reset (R) input, when High, overrides all other inputs and resets the Q output Low on the High-to-Low clock (C) transition. The data on the D input is loaded into the flip-flop when R is Low and CE is High during the High-to-Low clock transition.

The flip-flop is asynchronously cleared, output Low, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs				Outputs
R	CE	D	C	Q
1	X	X	↓	0
0	0	X	X	No Chg
0	1	1	↓	1
0	1	0	↓	0

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

#### VHDL Inference Code

```
architecture Behavioral of fdre_1 is
begin
    process (C) begin
```

```

        if (C' event and C = '0') then
            if (R = '1') then
                Q <= '0';
            elsif (CE = '1') then
                Q <= D;
            end if;
        end if;
    end process;
end Behavioral;

```

## Verilog Inference Code

```

always @ (negedge C) begin
    if (R)
        Q <= 0;
    else if (CE)
        Q <= D;
    end
end

```

## VHDL Instantiation Template

-- Component Declaration for FDRE\_1 should be placed  
 -- after architecture statement but before begin keyword

```

component FDRE_1
    -- synthesis translate_off
    generic (
        INIT : bit := '1');
    -- synthesis translate_on
    port (Q : out STD_ULOGIC;
          C : in STD_ULOGIC;
          CE : in STD_ULOGIC;
          D : in STD_ULOGIC;
          R : in STD_ULOGIC);
end component;

```

-- Component Attribute specification for FDRE\_1  
 -- should be placed after architecture declaration but  
 -- before the begin keyword

```

attribute INIT : string;
attribute INIT of FDRE_1_instance_name : label is "0";
-- values can be (0 or 1)

```

-- Component Instantiation for FDRE\_1 should be placed  
 -- in architecture after the begin keyword

```

FDRE_1_INSTANCE_NAME : FDRE_1
    -- synthesis translate_off
    generic map (
        INIT => bit_value)
    -- synthesis translate_on
    port map (Q => user_Q,
              C => user_C,
              CE => user_CE,
              D => user_D,
              R => user_R);

```

## Verilog Instantiation Template

```
FDRE_1 FDRE_1_instance_name (.Q (user_Q),  
                             .C (user_C),  
                             .CE (user_CE),  
                             .D (user_D),  
                             .R (user_R));  
  
defparam FDRE_1_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

INIT

IOB

LOC

REG

RLOC

TIMEGRP

TNM

U\_SET

XBLKNM




## FDRS

### D Flip-Flop with Synchronous Reset and Set

#### Architectures Supported

FDRS	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

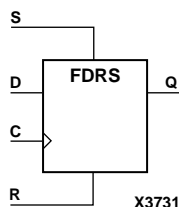

FDRS is a single D-type flip-flop with data (D), synchronous set (S), and synchronous reset (R) inputs and data output (Q). The synchronous reset (R) input, when High, overrides all other inputs and resets the Q output Low during the Low-to-High clock (C) transition. (Reset has precedence over Set.) When S is High and R is Low, the flip-flop is set, output High, during the Low-to-High clock transition. When R and S are Low, data on the (D) input is loaded into the flip-flop during the Low-to-High clock transition.


The flip-flop is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs				Outputs
R	S	D	C	Q
1	X	X	↑	0
0	1	X	↑	1
0	0	1	↑	1
0	0	0	↑	0

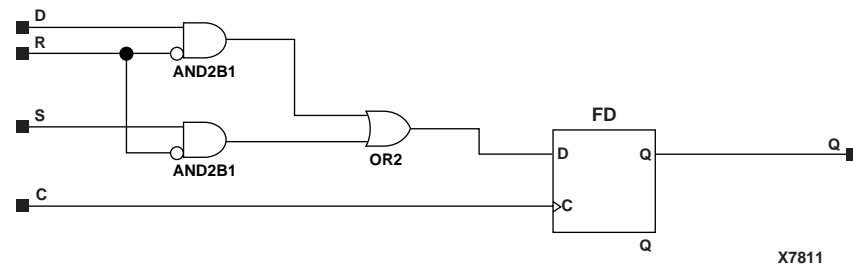

## FDRS Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

### VHDL Inference Code

```
architecture Behavioral of fdrs is
begin
  process (C) begin
    if (C' event and C = '1') then
      if (R = '1') then
        Q <= '0';
      elsif (S = '1') then
        Q <= '1';
      else
        Q <= D;
      end if;
    end if;
  end process;
end Behavioral;
```

### Verilog Inference Code

```
always @ (posedge C) begin
  if (R)
    Q <= 0;
  else if (S)
    Q <= 1;
  else
    Q <= D;
end
```

### VHDL Instantiation Template

```
-- Component Declaration for FDRS should be placed
-- after architecture statement but before begin keyword

component FDRS
  -- synthesis translate_off
  generic (
    INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
```



```

        C : in STD_ULOGIC;
        D : in STD_ULOGIC;
        R : in STD_ULOGIC;
        S : in STD_ULOGIC);
end component;

-- Component Attribute specification for FDRS
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of FDRS_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for FDRS should be placed
-- in architecture after the begin keyword

FDRS_INSTANCE_NAME : FDRS
  -- synthesis translate_off
  generic map (
    INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
            C => user_C,
            D => user_D,
            R => user_R,
            S => user_S);

```

## Verilog Instantiation Template

```

FDRS FDRS_instance_name (.Q (user_Q),
                        .C (user_C),
                        .D (user_D),
                        .R (user_R),
                        .S (user_S));

defparam FDRS_instance_name.INIT = bit_value;

```

## Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

INIT

IOB

LOC

REG

RLOC

TIMEGRP

TNM


U\_SET  
XBLKNM

## FDRS\_1

### D Flip-Flop with Negative-Clock Edge and Synchronous Reset and Set

#### Architectures Supported

FDRS_1	
Spartan-II, Spartan-III	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

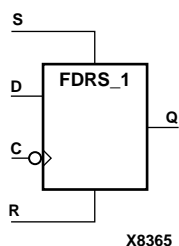

FDRS\_1 is a single D-type flip-flop with data (D), synchronous set (S), and synchronous reset (R) inputs and data output (Q). The synchronous reset (R) input, when High, overrides all other inputs and resets the Q output Low during the High-to-Low clock (C) transition. (Reset has precedence over Set.) When S is High and R is Low, the flip-flop is set, output High, during the High-to-Low clock transition. When R and S are Low, data on the (D) input is loaded into the flip-flop during the High-to-Low clock transition.

The flip-flop is asynchronously cleared, output Low, when power is applied.

Spartan-II, Spartan-III, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs				Outputs
R	S	D	C	Q
1	X	X	↓	0
0	1	X	↓	1
0	0	1	↓	1
0	0	0	↓	0

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of fdrs_1 is
begin
  process (C) begin
    if (C' event and C = '0') then
      if (R = '1') then
        Q <= '0';
      elsif (S = '1') then
        Q <= '1';
      else
        Q <= D;
      end if;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (negedge C) begin
  if (R)
    Q <= 0;
  else if (S)
    Q <= 1;
  else
    Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FDRS_1 should be placed
-- after architecture statement but before begin keyword

component FDRS_1
  -- synthesis translate_off
  generic (
    INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        D : in STD_ULOGIC;
        R : in STD_ULOGIC;
        S : in STD_ULOGIC);
end component;

-- Component Attribute specification for FDRS_1
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of FDRS_1_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for FDRS_1 should be placed
-- in architecture after the begin keyword

FDRS_1_INSTANCE_NAME : FDRS_1
```

```
-- synthesis translate_off
generic map (
    INIT => bit_value)
-- synthesis translate_on
port map (Q => user_Q,
          C => user_C,
          D => user_D,
          R => user_R,
          S => user_S);
```

## Verilog Instantiation Template

```
FDRS_1 FDRS_1_instance_name (.Q (user_Q),
                             .C (user_C),
                             .D (user_D),
                             .R (user_R),
                             .S (user_S));

defparam FDRS_1_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM  
HBLKNM  
HU\_SET  
INIT  
IOB  
LOC  
REG  
RLOC  
TIMEGRP  
TNM  
U\_SET  
XBLKNM




## FDRSE

### D Flip-Flop with Synchronous Reset and Set and Clock Enable

#### Architectures Supported

FDRSE	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

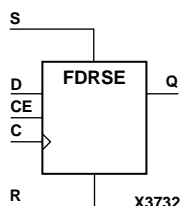

FDRSE is a single D-type flip-flop with synchronous reset (R), synchronous set (S), and clock enable (CE) inputs and data output (Q). The reset (R) input, when High, overrides all other inputs and resets the Q output Low during the Low-to-High clock transition. (Reset has precedence over Set.) When the set (S) input is High and R is Low, the flip-flop is set, output High, during the Low-to-High clock (C) transition. Data on the D input is loaded into the flip-flop when R and S are Low and CE is High during the Low-to-High clock transition.


The flip-flop is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs					Outputs
R	S	CE	D	C	Q
1	X	X	X	↑	0
0	1	X	X	↑	1
0	0	0	X	X	No Chg
0	0	1	1	↑	1
0	0	1	0	↑	0

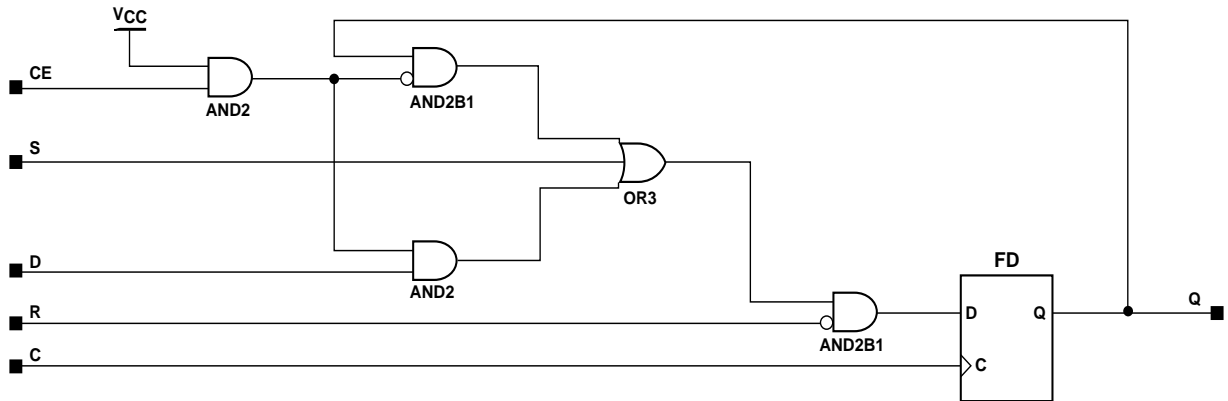

### FDRSE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

#### VHDL Inference Code

```
architecture Behavioral of fdrse is
begin
  process (C) begin
    if (C' event and C = '1') then
      if (R = '1') then
        Q <= '0';
      elsif (S = '1') then
        Q <= '1';
      elsif (CE = '1') then
        Q <= D;
      end if;
    end if;
  end process;
end Behavioral;
```

#### Verilog Inference Code

```
always @ (posedge C) begin
  if (R)
    Q <= 0;
  else if (S)
    Q <= 1;
  else if (CE)
    Q <= D;
end
```



## VHDL Instantiation Template

```
-- Component Declaration for FDRSE should be placed
-- after architecture statement but before begin keyword

component FDRSE
  -- synthesis translate_off
  generic (
    INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        CE : in STD_ULOGIC;
        D : in STD_ULOGIC;
        R : in STD_ULOGIC;
        S : in STD_ULOGIC);
end component;

-- Component Attribute specification for FDRSE
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of FDRSE_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for FDRSE should be placed
-- in architecture after the begin keyword

FDRSE_INSTANCE_NAME : FDRSE
  -- synthesis translate_off
  generic map (
    INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
            C => user_C,
            CE => user_CE,
            D => user_D,
            R => user_R,
            S => user_S);
```

## Verilog Instantiation Template

```
FDRSE FDRSE_instance_name (.Q (user_Q),
                           .C (user_C),
                           .CE (user_CE),
                           .D (user_D),
                           .R (user_R),
                           .S (user_S));

defparam FDRSE_instance_name.INIT = bit_value;
```

## Commonly Used Constraints


BLKNM, HBLKNM, HU\_SET, INIT, IOB, LOC, REG, RLOC, TIMEGRP, TNM, U\_SET and XBLKNM



## FDRSE\_1

### D Flip-Flop with Negative-Clock Edge, Synchronous Reset and Set, and Clock Enable

FDRSE_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

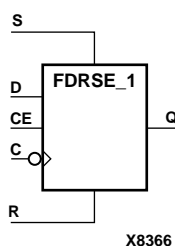

FDRSE\_1 is a single D-type flip-flop with synchronous reset (R), synchronous set (S), and clock enable (CE) inputs and data output (Q). The reset (R) input, when High, overrides all other inputs and resets the Q output Low during the High-to-Low clock transition. (Reset has precedence over Set.) When the set (S) input is High and R is Low, the flip-flop is set, output High, during the High-to-Low clock (C) transition. Data on the D input is loaded into the flip-flop when R and S are Low and CE is High during the High-to-Low clock transition.

The flip-flop is asynchronously cleared, output Low, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs					Outputs
R	S	CE	D	C	Q
1	X	X	X	↓	0
0	1	X	X	↓	1
0	0	0	X	X	No Chg
0	0	1	1	↓	1
0	0	1	0	↓	0

### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of fdrse_1 is
begin
    process (C) begin
        if (C' event and C = '0') then
            if (R = '1') then
                Q <= '0';
            elsif (S = '1') then
                Q <= '1';
            elsif (CE = '1') then
                Q <= D;
            end if;
        end if;
    end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (negedge C) begin
    if (R)
        Q <= 0;
    else if (S)
        Q <= 1;
    else
        Q => D;
    end
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FDRSE_1 should be placed
-- after architecture statement but before begin keyword

component FDRSE_1
    -- synthesis translate_off
    generic (
        INIT : bit := '1');
    -- synthesis translate_on
    port (Q : out STD_ULOGIC;
          C : in STD_ULOGIC;
          CE : in STD_ULOGIC;
          D : in STD_ULOGIC;
          R : in STD_ULOGIC;
          S : in STD_ULOGIC);
end component;

-- Component Attribute specification for FDRSE_1
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of FDRSE_1_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for FDRSE_1 should be placed
-- in architecture after the begin keyword
```

```
FDRSE_1_INSTANCE_NAME : FDRSE_1
-- synthesis translate_off
generic map (
    INIT => bit_value)
-- synthesis translate_on
port map (Q => user_Q,
          C => user_C,
          CE => user_CE,
          D => user_D,
          R => user_R,
          S => user_S);
```

## Verilog Instantiation Template

```
FDRSE_1 FDRSE_1_instance_name (.Q (user_Q),
                               .C (user_C),
                               .CE (user_CE),
                               .D (user_D),
                               .R (user_R),
                               .S (user_S));

defparam FDRSE_1_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM  
HBLKNM  
HU\_SET  
INIT  
IOB  
LOC  
REG  
RLOC  
TIMEGRP  
TNM  
U\_SET  
XBLKNM




## FDS

### D Flip-Flop with Synchronous Set

#### Architectures Supported

FDS	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

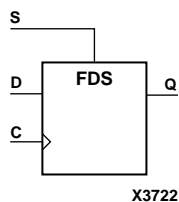

FDS is a single D-type flip-flop with data (D) and synchronous set (S) inputs and data output (Q). The synchronous set input, when High, sets the Q output High on the Low-to-High clock (C) transition. The data on the D input is loaded into the flip-flop when S is Low during the Low-to-High clock (C) transition.

For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the flip-flop is asynchronously preset, output High, when power is applied. For all other devices (XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II), the flip-flop is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol. FDS will set when GSR is active. For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the flip-flop is preset to active high when GSR is active.

Inputs			Outputs
S	D	C	Q
1	X	↑	1
0	1	↑	1
0	0	↑	0

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of fds is
begin
  process (C) begin
    if (C' event and C = '1') then
      if (S = '1') then
        Q <= '1';
      else
        Q <= D;
      end if;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C) begin
  if (S)
    Q <= 1;
  else
    Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FDS should be placed
-- after architecture statement but before begin keyword
```

```
component FDS
  -- synthesis translate_off
  generic (
    INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        D : in STD_ULOGIC;
        S : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for FDS
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
attribute INIT : string;
attribute INIT of FDS_instance_name : label is "0";
-- values can be (0 or 1)
```

```
-- Component Instantiation for FDS should be placed
-- in architecture after the begin keyword
```

```
FDS_INSTANCE_NAME : FDS
  -- synthesis translate_off
  generic map (
    INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
```



```
C => user_C,  
D => user_D,  
S => user_S);
```

## Verilog Instantiation Template

```
FDS FDS_instance_name (.Q (user_Q),  
                       .C (user_C),  
                       .D (user_D),  
                       .S (user_S));
```

```
defparam FDS_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

INIT

IOB

LOC

REG

RLOC

TIMEGRP

TNM

U\_SET

XBLKNM




## FDS\_1

### D Flip-Flop with Negative-Edge Clock and Synchronous Set

#### Architectures Supported

FDS_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

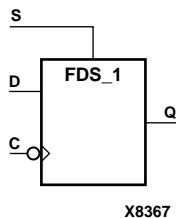

FDS\_1 is a single D-type flip-flop with data (D) and synchronous set (S) inputs and data output (Q). The synchronous set input, when High, sets the Q output High on the High-to-Low clock (C) transition. The data on the D input is loaded into the flip-flop when S is Low during the High-to-Low clock (C) transition.

For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the flip-flop is asynchronously preset, output High, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol. FDS\_1 will set when GSR is active. For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the flip-flop is preset to active high when GSR is active.

Inputs			Outputs
S	D	C	Q
1	X	↓	1
0	1	↓	1
0	0	↓	0

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

#### VHDL Inference Code

```
architecture Behavioral of fds_1 is
begin
```

```

process (C) begin
  if (C' event and C = '0') then
    if (S = '1') then
      Q <= '1';
    else
      Q <= D;
    end if;
  end if;
end process;
end Behavioral;

```

## Verilog Inference Code

```

always @ (negedge C) begin
  if (S)
    Q <= 1;
  else
    Q <= D;
  end
end

```

## VHDL Instantiation Template

```

-- Component Declaration for FDS_1 should be placed
-- after architecture statement but before begin keyword

```

```

component FDS_1
  -- synthesis translate_off
  generic (
    INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        D : in STD_ULOGIC;
        S : in STD_ULOGIC);
end component;

```

```

-- Component Attribute specification for FDS_1
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

attribute INIT : string;
attribute INIT of FDS_1_instance_name : label is "0";
-- values can be (0 or 1)

```

```

-- Component Instantiation for FDS_1 should be placed
-- in architecture after the begin keyword

```

```

FDS_1_INSTANCE_NAME : FDS_1
  -- synthesis translate_off
  generic map (
    INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
            C => user_C,
            D => user_D,
            S => user_S);

```

## Verilog Instantiation Template

```
FDS_1 FDS_1_instance_name (.Q (user_Q),  
                           .C (user_C),  
                           .D (user_D),  
                           .S (user_S));
```

```
defparam FDS_1_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

INIT

IOB

LOC

REG

RLOC

TIMEGRP

TNM

U\_SET

XBLKNM




## FDSE

### D Flip-Flop with Clock Enable and Synchronous Set

#### Architectures Supported

FDSE	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

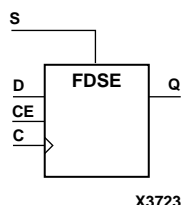

FDSE is a single D-type flip-flop with data (D), clock enable (CE), and synchronous set (S) inputs and data output (Q). The synchronous set (S) input, when High, overrides the clock enable (CE) input and sets the Q output High during the Low-to-High clock (C) transition. The data on the D input is loaded into the flip-flop when S is Low and CE is High during the Low-to-High clock (C) transition.

For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the flip-flop is asynchronously preset, output High, when power is applied.


For all other devices (XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II), the flip-flop is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol. FDSE will set when GSR is active. For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the flip-flop is preset to active high when GSR is active.

Inputs				Outputs
S	CE	D	C	Q
1	X	X	↑	1
0	0	X	X	No Chg
0	1	1	↑	1
0	1	0	↑	0

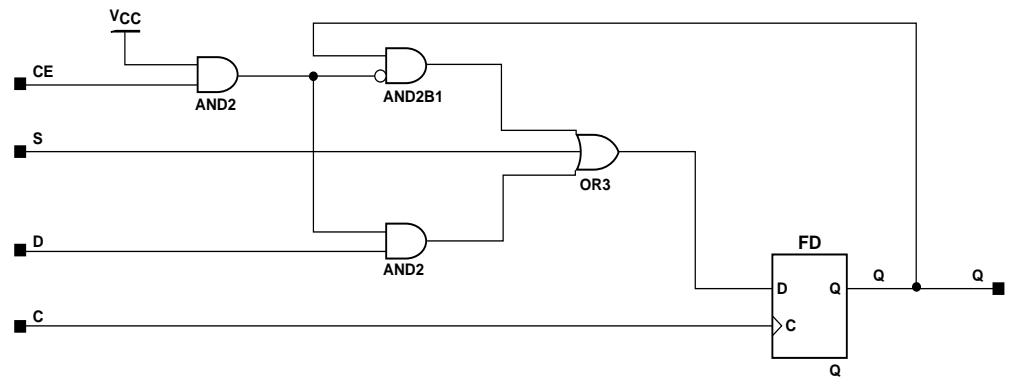

X7815

### FDSE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

#### VHDL Inference Code

```
architecture Behavioral of fdse is
begin
    process (C) begin
        if (C' event and C = '1') then
            if (S = '1') then
                Q <= '1';
            elsif (CE = '1') then
                Q <= D;
            end if;
        end if;
    end process;
end Behavioral;
```

#### Verilog Inference Code

```
always @ (posedge C) begin
    if (S)
        Q <= 1;
    else if (CE)
        Q <= D;
end
```



## VHDL Instantiation Template

```
-- Component Declaration for FDSE should be placed
-- after architecture statement but before begin keyword

component FDSE
  -- synthesis translate_off
  generic (
    INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        CE : in STD_ULOGIC;
        D : in STD_ULOGIC;
        S : in STD_ULOGIC);
end component;

-- Component Attribute specification for FDSE
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of FDSE_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for FDSE should be placed
-- in architecture after the begin keyword

FDSE_INSTANCE_NAME : FDSE
  -- synthesis translate_off
  generic map (
    INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
            C => user_C,
            CE => user_CE,
            D => user_D,
            S => user_S);
```

## Verilog Instantiation Template

```
FDSE FDSE_instance_name (.Q (user_Q),
                        .C (user_C),
                        .CE (user_CE),
                        .D (user_D),
                        .S (user_S));

defparam FDSE_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

INIT

IOB

LOC

REG

RLOC

TIMEGRP

TNM

U\_SET


XBLKNM

## FDSE\_1

### D Flip-Flop with Negative-Edge Clock, Clock Enable, and Synchronous Set

#### Architectures Supported

FDSE_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	N/A
CoolRunner XPLA3	N/A
CoolRunner-II	N/A
CoolRunner-IIS	No

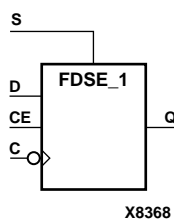

FDSE\_1 is a single D-type flip-flop with data (D), clock enable (CE), and synchronous set (S) inputs and data output (Q). The synchronous set (S) input, when High, overrides the clock enable (CE) input and sets the Q output High during the High-to-Low clock (C) transition. The data on the D input is loaded into the flip-flop when S is Low and CE is High during the High-to-Low clock (C) transition.

For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the flip-flop is asynchronously preset, output High, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol. FDSE\_1 will set when GSR is active. For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the flip-flop is preset to active high when GSR is active.

Inputs				Outputs
S	CE	D	C	Q
1	X	X	↓	1
0	0	X	X	No Chg
0	1	1	↓	1
0	1	0	↓	0

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of fdse_1 is
begin
    process (C) begin
        if (C' event and C = '0') then
            if (S = '1') then
                Q <= '1';
            elsif (CE = '1') then
                Q <= D;
            end if;
        end if;
    end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (negedge C) begin
    if (S)
        Q <= 1;
    else if (CE)
        Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FDSE_1 should be placed
-- after architecture statement but before begin keyword
```

```
component FDSE_1
    -- synthesis translate_off
    generic (INIT : bit := '1');
    -- synthesis translate_on
    port (Q : out STD_ULOGIC;
          C : in STD_ULOGIC;
          CE : in STD_ULOGIC;
          D : in STD_ULOGIC;
          S : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for FDSE_1
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
attribute INIT : string;
attribute INIT of FDSE_1_instance_name : label is "0";
-- values can be (0 or 1)
```

```
-- Component Instantiation for FDSE_1 should be placed
-- in architecture after the begin keyword
```

```
FDSE_1_INSTANCE_NAME : FDSE_1
    -- synthesis translate_off
    generic map (INIT => bit_value)
    -- synthesis translate_on
```

```
port map (Q => user_Q,  
          C => user_C,  
          CE => user_CE,  
          D => user_D,  
          S => user_S);
```

## Verilog Instantiation Template

```
FDSE_1 FDSE_1_instance_name (.Q (user_Q),  
                             .C (user_C),  
                             .CE (user_CE),  
                             .D (user_D),  
                             .S (user_S));  
  
defparam FDSE_1_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

BLKNM  
HBLKNM  
HU\_SET  
INIT  
IOB  
LOC  
REG  
RLOC  
TIMEGRP  
TNM  
U\_SET  
XBLKNM




## FDSR

### D Flip-Flop with Synchronous Set and Reset

#### Architectures Supported


FDSR	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

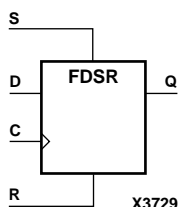

FDSR is a single D-type flip-flop with data (D), synchronous reset (R) and synchronous set (S) inputs and data output (Q). When the set (S) input is High, it overrides all other inputs and sets the Q output High during the Low-to-High clock transition. (Set has precedence over Reset.) When reset (R) is High and S is Low, the flip-flop is reset, output Low, on the Low-to-High clock transition. Data on the D input is loaded into the flip-flop when S and R are Low on the Low-to-High clock transition.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs				Outputs
S	R	D	C	Q
1	X	X	↑	1
0	1	X	↑	0
0	0	1	↑	1
0	0	0	↑	0

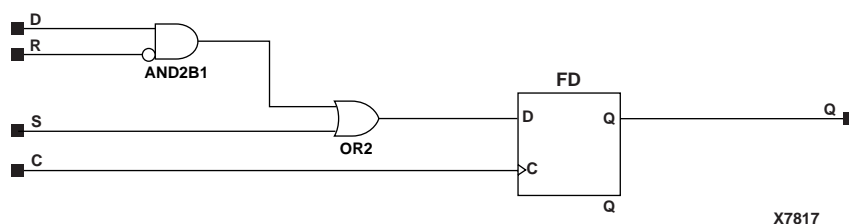

#### FDSR Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

#### Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of fdsr is
begin
    process (C) begin
        if (C' event and C = '1') then
            if (S = '1') then
                Q <= '1';
            elsif (R = '1') then
                Q <= '0';
            else
                Q <= D;
            end if;
        end if;
    end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C) begin
    if (S)
        Q <= 1;
    else if (R)
        Q <= 0;
    else
        Q <= D;
end
```








## FDSRE

### D Flip-Flop with Synchronous Set and Reset and Clock Enable

#### Architectures Supported


FDSRE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

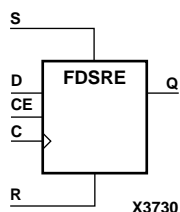

FDSRE is a single D-type flip-flop with synchronous set (S), synchronous reset (R), and clock enable (CE) inputs and data output (Q). When synchronous set (S) is High, it overrides all other inputs and sets the Q output High during the Low-to-High clock transition. (Set has precedence over Reset.) When synchronous reset (R) is High and S is Low, output Q is reset Low during the Low-to-High clock transition. Data is loaded into the flip-flop when S and R are Low and CE is High during the Low-to-high clock transition. When CE is Low, clock transitions are ignored.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs					Outputs
S	R	CE	D	C	Q
1	X	X	X	↑	1
0	1	X	X	↑	0
0	0	0	X	X	No Chg
0	0	1	1	↑	1
0	0	1	0	↑	0

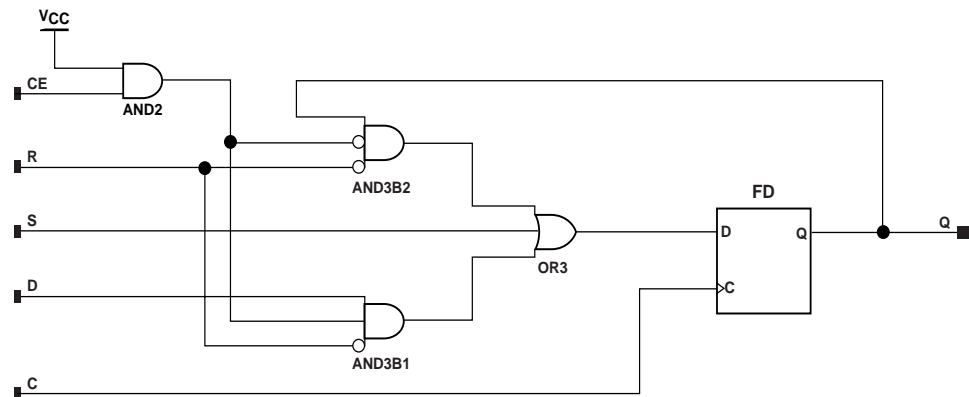

X7819

## FDSRE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

### Usage

For HDL, this design element is inferred rather than instantiated.

### VHDL Inference Code

```
architecture Behavioral of fdsre is
begin
    process (C) begin
        if (C' event and C = '1') then
            if (S = '1') then
                Q <= '1';
            elsif (R = '1') then
                Q <= '0';
            elsif (CE = '1') then
                Q <= D;
            end if;
        end if;
    end process;
end Behavioral;
```

### Verilog Inference Code


```
always @ (posedge C) begin
    if (S)
        Q <= 1;
    else if (R)
        Q <= 0;
    else if (CE)
        Q <= D;
end
```

## FJKC

## J-K Flip-Flop with Asynchronous Clear

## Architectures Supported

FJKC	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

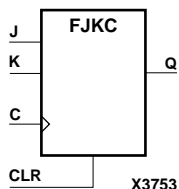

FJKC is a single J-K-type flip-flop with J, K, and asynchronous clear (CLR) inputs and data output (Q). The asynchronous clear (CLR) input, when High, overrides all other inputs and resets the Q output Low. When CLR is Low, the output responds to the state of the J and K inputs, as shown in the following truth table, during the Low-to-High clock (C) transition.


The flip-flop is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs				Outputs
CLR	J	K	C	Q
1	X	X	X	0
0	0	0	↑	No Chg
0	0	1	↑	0
0	1	0	↑	1
0	1	1	↑	Toggle

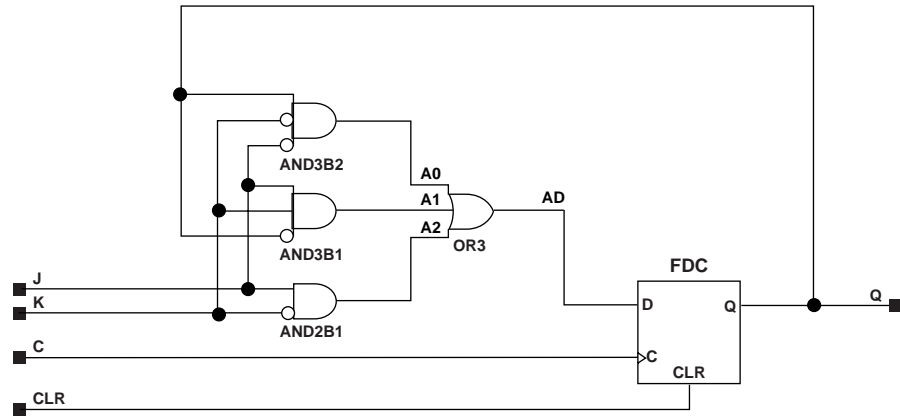

X7820

**FJKC Implementation Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

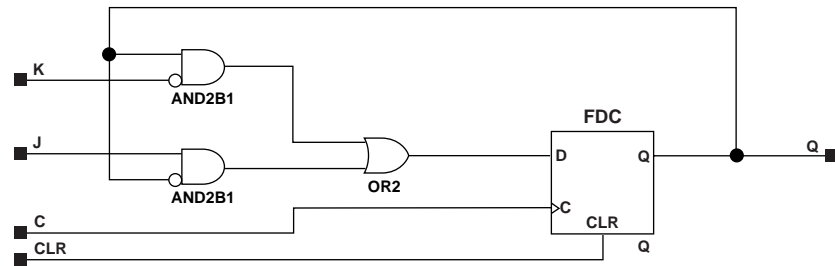

X7821

**FJKC Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

**Usage**

For HDL, this design element is inferred rather than instantiated.

**VHDL Inference Code**

```
architecture Behavioral of fjkC is
begin
process (C, CLR)
begin
    if (CLR='1') then
        Q <= '0';
    elsif (C'event and C='1') then
        if (J='0') then
            if (K='1') then
                Q <= '0';
            end if;
        else
            if (K='0') then
                Q <= '1';
            else
                Q <= not Q;
            end if;
        end if;
    end if;
end process;
```

```
                end if;
            end if;
        end if;
    end process;

    end Behavioral;
```

## Verilog Inference Code

```
always @(posedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else
    begin
        if (!J)
        begin
            if (K)
                Q <= 0;
            end
            else
            begin
                if (!K)
                    Q <= 1;
                else
                    Q <= !Q;
            end
        end
    end
end
end
```






## FJKCE

### J-K Flip-Flop with Clock Enable and Asynchronous Clear

#### Architectures Supported

FJKCE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

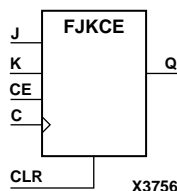

FJKCE is a single J-K-type flip-flop with J, K, clock enable (CE), and asynchronous clear (CLR) inputs and data output (Q). The asynchronous clear (CLR), when High, overrides all other inputs and resets the Q output Low. When CLR is Low and CE is High, Q responds to the state of the J and K inputs, as shown in the following truth table, during the Low-to-High clock transition. When CE is Low, the clock transitions are ignored.


The flip-flop is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs					Outputs
CLR	CE	J	K	C	Q
1	X	X	X	X	0
0	0	X	X	X	No Chg
0	1	0	0	X	No Chg
0	1	0	1	↑	0
0	1	1	0	↑	1
0	1	1	1	↑	Toggle

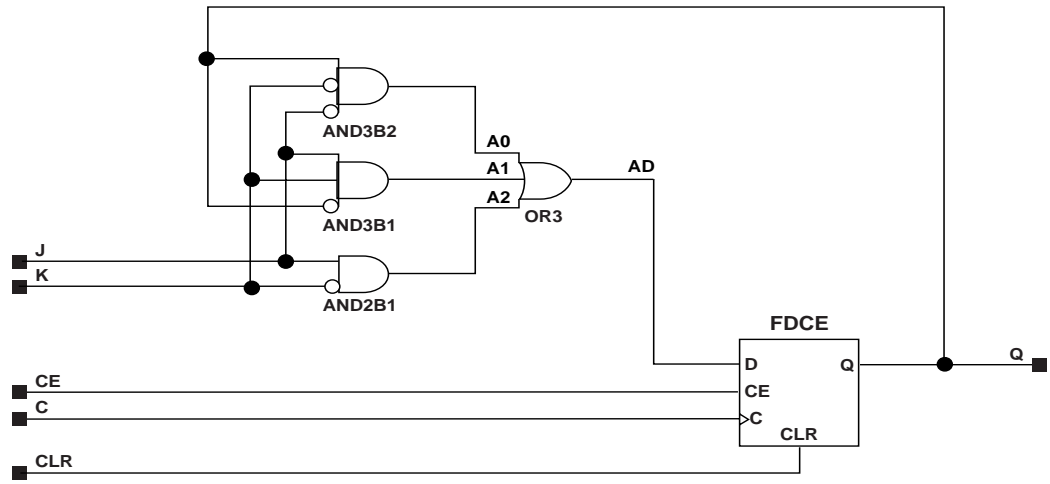

X7822

**FJKCE Implementation Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

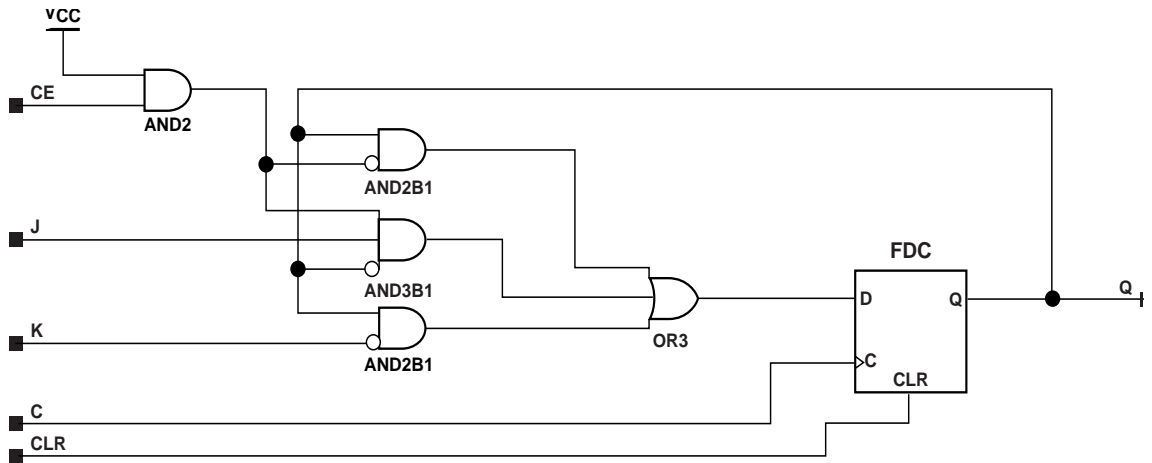

X782

**FJKCE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

**Usage**

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```

architecture Behavioral of fjkce is

begin

process (C, CLR)
begin
    if (CLR='1') then
        Q <= '0';
    elsif (C'event and C='1') then
        if (CE='1') then
            if (J='0') then
                if (K='1') then
                    Q <= '0';
                end if;
            else
                if (K='0') then
                    Q <= '1';
                else
                    Q <= not Q;
                end if;
            end if;
        end if;
    end if;
end process;

end Behavioral;

```

## Verilog Inference Code

```

always @(posedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else if (CE)
    begin
        if (!J)
        begin
            if (K)
                Q <= 0;
            end
            else
            begin
                if (!K)
                    Q <= 1;
                else
                    Q <= !Q;
                end
            end
        end
    end
end
end

```




## FJKCP

### J-K Flip-Flop with Asynchronous Clear and Preset

#### Architectures Supported


FJKCP	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

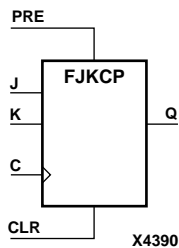

FJKCP is a single J-K-type flip-flop with J, K, asynchronous clear (CLR), and asynchronous preset (PRE) inputs and data output (Q). When the asynchronous preset (PRE) is High and CLR is Low, all other inputs are ignored and Q is set High. The asynchronous preset (PRE), when High, and CLR set to Low overrides all other inputs and sets the Q output High. When CLR and PRE are Low, Q responds to the state of the J and K inputs during the Low-to-High clock transition, as shown in the following truth table.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs					Outputs
CLR	PRE	J	K	C	Q
1	X	X	X	X	0
0	1	X	X	X	1
0	0	0	0	X	No Chg
0	0	0	1	↑	0
0	0	1	0	↑	1
0	0	1	1	↑	Toggle

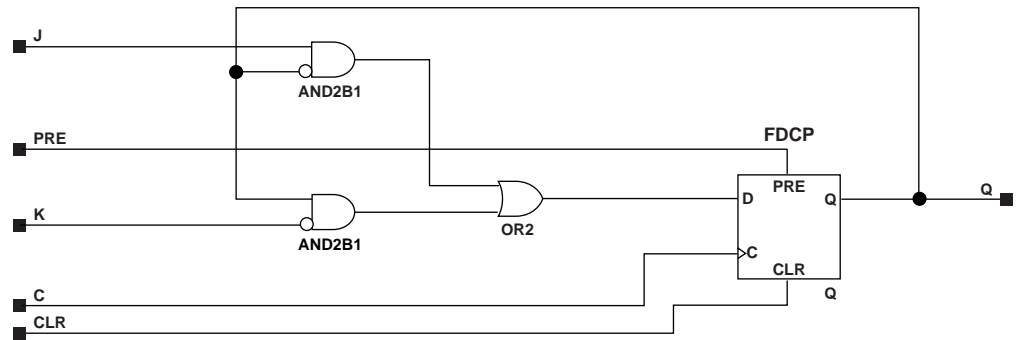

X8124

**FJKCP Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

**Usage**

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```

architecture Behavioral of fjkcp is

begin

process (C, CLR, PRE)
begin
    if (CLR='1') then
        Q <= '0';
    elsif (PRE='1') then
        Q <= '1';
    elsif (C'event and C='1') then
        if (J='0') then
            if (K='1') then
                Q <= '0';
            end if;
        else
            if (K='0') then
                Q <= '1';
            else
                Q <= not Q;
            end if;
        end if;
    end if;
end process;

end Behavioral;

```

## Verilog Inference Code

```

always @(posedge C or posedge CLR or posedge PRE)
begin
    if (CLR)
        Q <= 0;
    else if (PRE)
        Q <= 1;
    else
        begin
            if (!J)
            begin
                if (K)
                    Q <= 0;
                end
            else
            begin
                if (!K)
                    Q <= 1;
                else
                    Q <= !Q;
                end
            end
        end
    end
end

```






## FJKP

### J-K Flip-Flop with Asynchronous Preset

#### Architectures Supported

FJKP	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

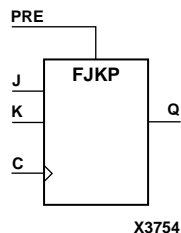

FJKP is a single J-K-type flip-flop with J, K, and asynchronous preset (PRE) inputs and data output (Q). The asynchronous preset (PRE) input, when High, overrides all other inputs and sets the Q output High. When PRE is Low, the Q output responds to the state of the J and K inputs, as shown in the following truth table, during the Low-to-High clock transition.


For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the flip-flop is asynchronously preset, output High, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

The GSR active level defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.


For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs				Outputs
PRE	J	K	C	Q
1	X	X	X	1
0	0	0	X	No Chg
0	0	1	↑	0
0	1	0	↑	1
0	1	1	↑	Toggle

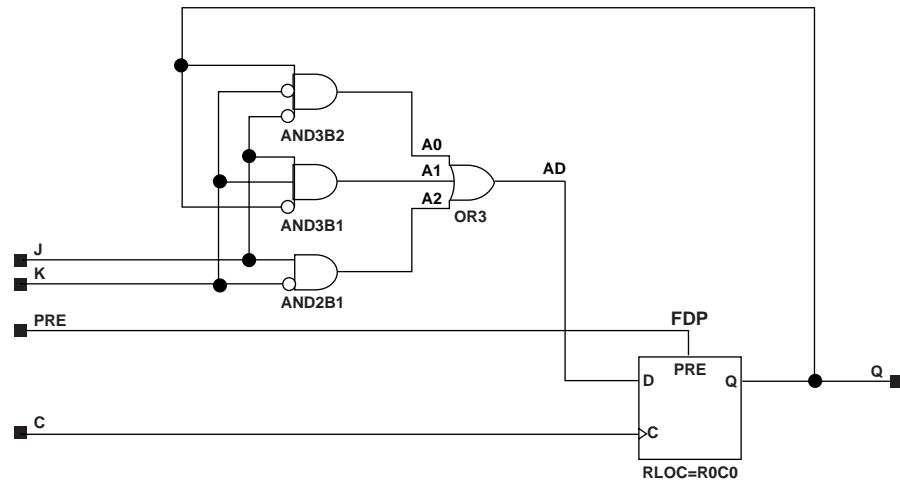


X7824

**FJKP Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E**

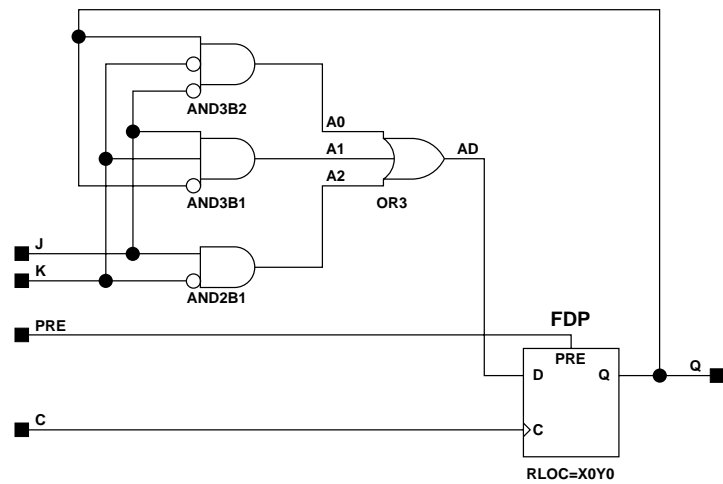

X9317

**FJKP Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

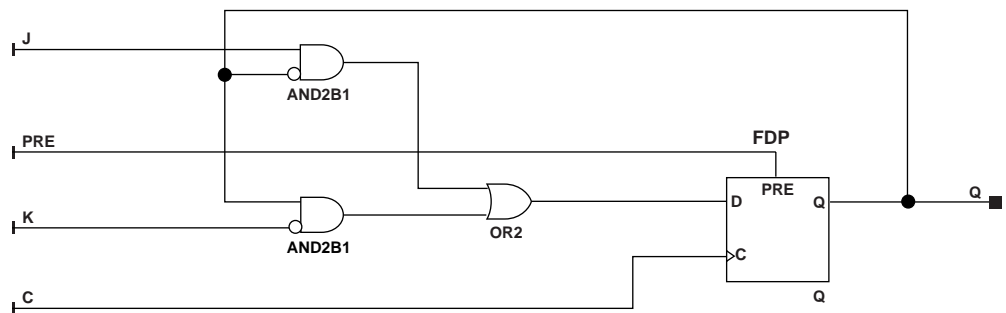

X8125

**FJKP Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

## Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of fjkp is

begin

process (C, PRE)
begin
    if (PRE='1') then
        Q <= '1';
    elsif (C'event and C='1') then
        if (J='0') then
            if (K='1') then
                Q <= '0';
            end if;
        else
            if (K='0') then
                Q <= '1';
            else
                Q <= not Q;
            end if;
        end if;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @(posedge C or posedge PRE)
begin
    if (PRE)
        Q <= 1;
    else
    begin
        if (!J)
        begin
            if (K)
                Q <= 0;
            end
            else
            begin
                if (!K)
                    Q <= 1;
                else
                    Q <= !Q;
                end
            end
        end
    end
end
```




## FJKCPE

### J-K Flip-Flop with Asynchronous Clear and Preset and Clock Enable

#### Architectures Supported


FJKCPE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

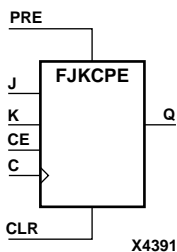

FJKCPE is a single J-K-type flip-flop with J, K, asynchronous clear (CLR), asynchronous preset (PRE), and clock enable (CE) inputs and data output (Q). When the asynchronous preset (PRE) is High and CLR is Low, all other inputs are ignored and Q is set High. The asynchronous preset (PRE), when High, and CLR set to Low overrides all other inputs and sets the Q output High. When CLR and PRE are Low and CE is High, Q responds to the state of the J and K inputs, as shown in the following truth table, during the Low-to-High clock transition. Clock transitions are ignored when CE is Low.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs						Outputs
CLR	PRE	CE	J	K	C	Q
1	X	X	X	X	X	0
0	1	X	X	X	X	1
0	0	0	0	X	X	No Chg
0	0	1	0	0	X	No Chg
0	0	1	0	1	↑	0
0	0	1	1	0	↑	1
0	0	1	1	1	↑	Toggle

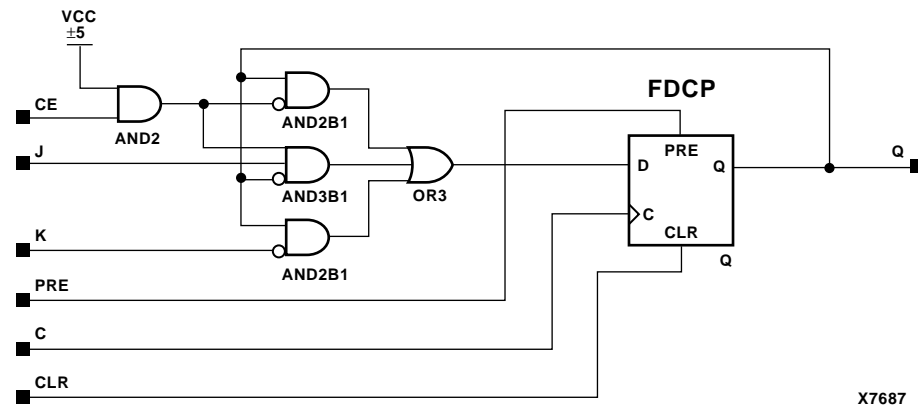

### FJKCPE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

#### Usage

For HDL, this design element is inferred rather than instantiated.

#### VHDL Inference Code

```
architecture Behavioral of fjkcp is
begin
process (C, CLR, PRE)
begin
    if (CLR='1') then
        Q <= '0';
    elsif (PRE='1') then
        Q <= '1';
    elsif (C'event and C='1') then
        if (CE='1') then
            if (J='0') then
                if (K='1') then
                    Q <= '0';
                end if;
            else
                if (K='0') then
                    Q <= '1';
                else
                    Q <= not Q;
                end if;
            end if;
        end if;
    end if;
end process;
end Behavioral;
```

## Verilog Inference Code

```
always @(posedge C or posedge CLR or posedge PRE)
begin
    if (CLR)
        Q <= 0;
    else if (PRE)
        Q <= 1;
    else if (CE)
    begin
        if (!J)
        begin
            if (K)
                Q <= 0;
            end
            else
            begin
                if (!K)
                    Q <= 1;
                else
                    Q <= !Q;
            end
        end
    end
end
```






## FJKPE

### J-K Flip-Flop with Clock Enable and Asynchronous Preset

#### Architectures Supported

FJKPE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

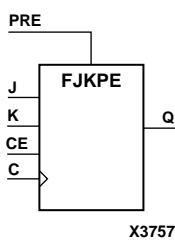

FJKPE is a single J-K-type flip-flop with J, K, clock enable (CE), and asynchronous preset (PRE) inputs and data output (Q). The asynchronous preset (PRE), when High, overrides all other inputs and sets the Q output High. When PRE is Low and CE is High, the Q output responds to the state of the J and K inputs, as shown in the truth table, during the Low-to-High clock (C) transition. When CE is Low, clock transitions are ignored.


For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the flip-flop is asynchronously preset, output High, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

The GSR active level defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.


For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs					Outputs
PRE	CE	J	K	C	Q
1	X	X	X	X	1
0	0	X	X	X	No Chg
0	1	0	0	X	No Chg
0	1	0	1	↑	0
0	1	1	0	↑	1
0	1	1	1	↑	Toggle

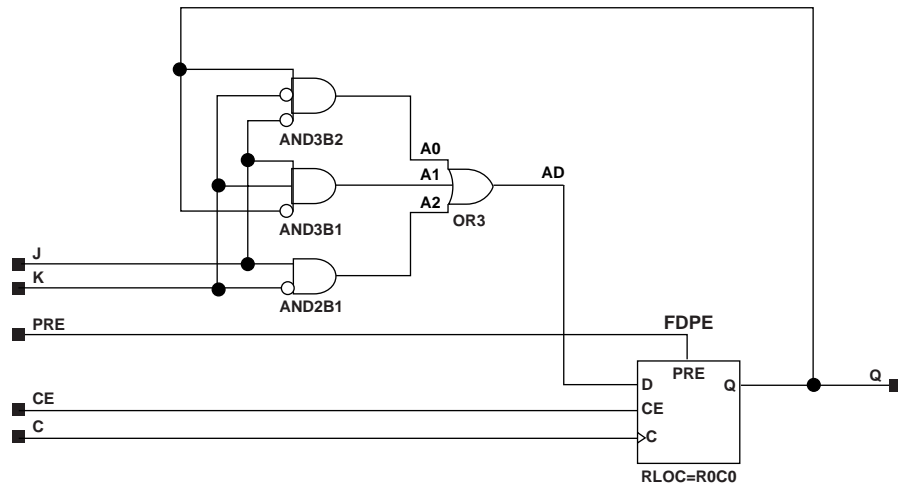


X7825

**FJKPE Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E**

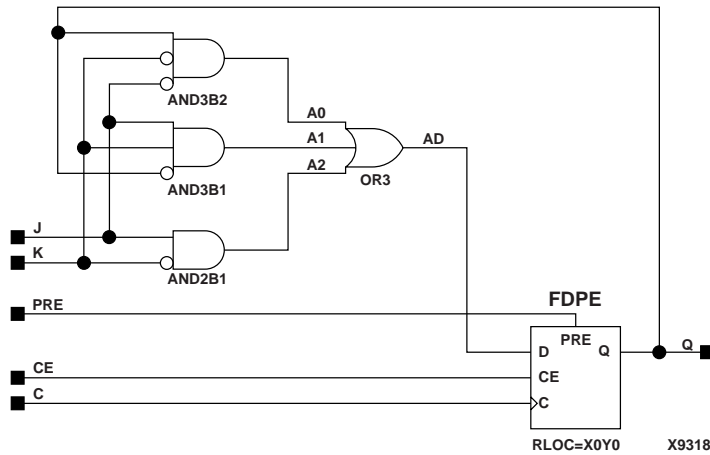

X9318

**FJKPE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

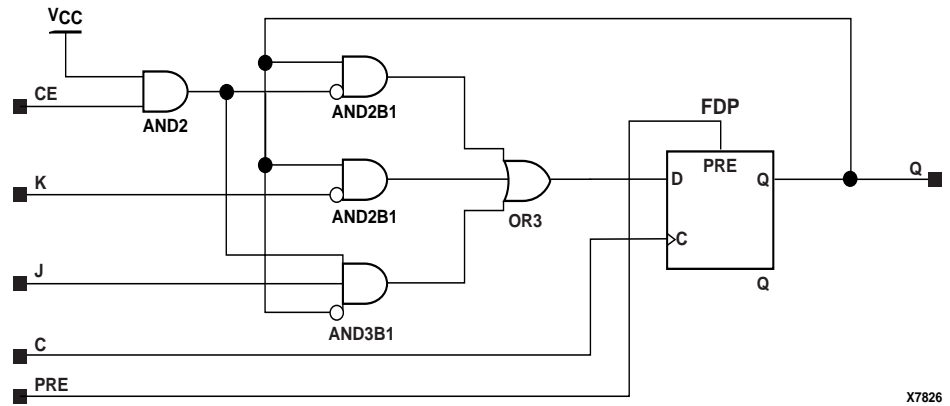

X7826

FJKPE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

## Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of fjkpe is

begin

process (C, PRE)
begin
    if (PRE='1') then
        Q <= '1';
    elsif (C'event and C='1') then
        if (CE='1') then
            if (J='0') then
                if (K='1') then
                    Q <= '0';
                end if;
            else
                if (K='0') then
                    Q <= '1';
                else
                    Q <= not Q;
                end if;
            end if;
        end if;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @(posedge C or posedge PRE)
begin
    if (PRE)
        Q <= 1;
    else if (CE)
        begin
            if (!J)
                begin
                    if (K)
                        Q <= 0;
                    end
                else
                begin
                    if (!K)
                        Q <= 1;
                    else
                        Q <= !Q;
                    end
                end
        end
    end
end
```






## FJKRSE

### J-K Flip-Flop with Clock Enable and Synchronous Reset and Set

#### Architectures Supported

FJKRSE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

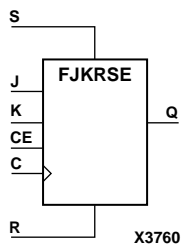

FJKRSE is a single J-K-type flip-flop with J, K, synchronous reset (R), synchronous set (S), and clock enable (CE) inputs and data output (Q). When synchronous reset (R) is High, all other inputs are ignored and output Q is reset Low. (Reset has precedence over Set.) When synchronous set (S) is High and R is Low, output Q is set High. When R and S are Low and CE is High, output Q responds to the state of the J and K inputs, according to the following truth table, during the Low-to-High clock (C) transition. When CE is Low, clock transitions are ignored.


The flip-flop is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.


Inputs						Outputs
R	S	CE	J	K	C	Q
1	X	X	X	X	↑	0
0	1	X	X	X	↑	1
0	0	0	X	X	X	No Chg
0	0	1	0	0	X	No Chg
0	0	1	0	1	↑	0
0	0	1	1	1	↑	Toggle
0	0	1	1	0	↑	1

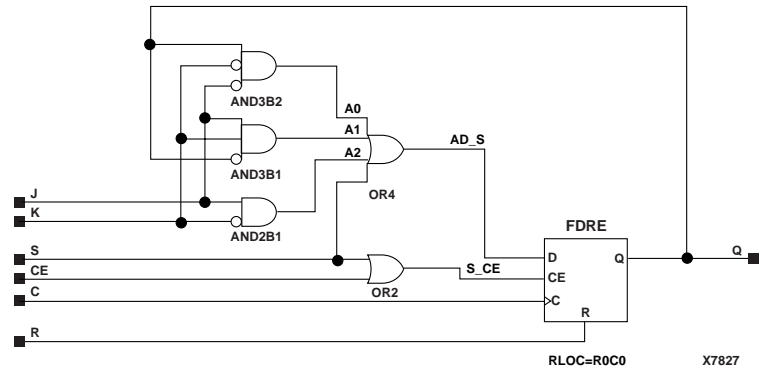

**FJKRSE Implementation Spartan-II, Spartan-II-E, Virtex, Virtex-E**

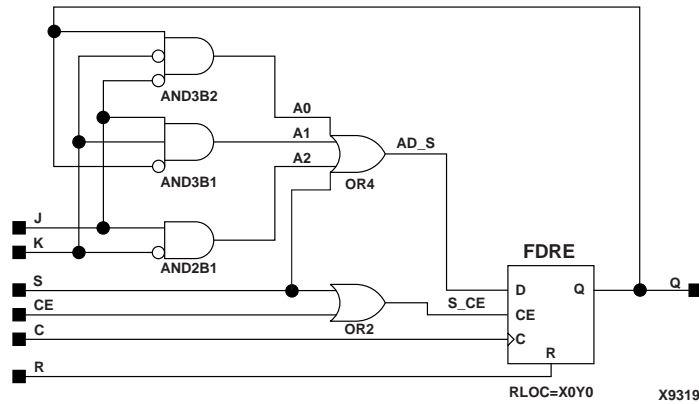

**FJKRSE Implementation Spartan-3, Virtex-II, Virtex-II Pro**

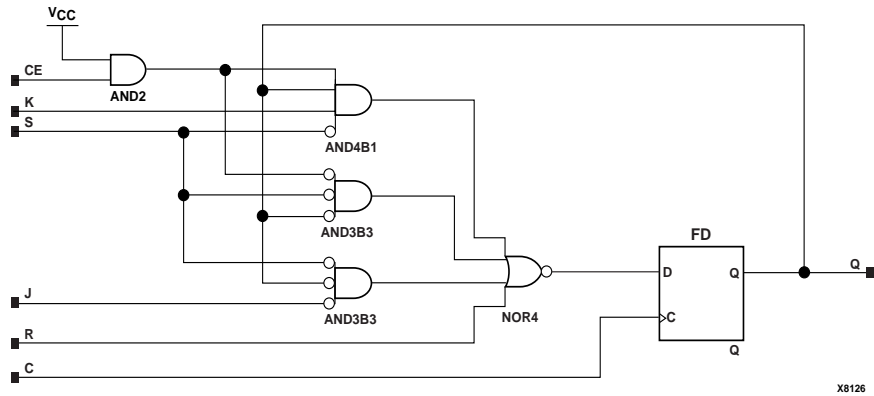

**FJKRSE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

**Usage**

For HDL, this design element is inferred rather than instantiated.



## VHDL Inference Code

```

architecture Behavioral of fjkrse is

begin
process (C)
begin
    if (C'event and C='1') then
        if (R='1') then
            Q <= '0';
        elsif (S='1') then
            Q <= '1';
        elsif (CE='1') then
            if (J='0') then
                if (K='1') then
                    Q <= '0';
                end if;
            else
                if (K='0') then
                    Q <= '1';
                else
                    Q <= not Q;
                end if;
            end if;
        end if;
    end if;
end process;

end Behavioral;

```

## Verilog Inference Code

```

always @(posedge C)
begin
    if (R)
        Q <= 0;
    else if (S)
        Q <= 1;
    else if (CE)
        begin
            if (!J)
                begin
                    if (K)
                        Q <= 0;
                    end
                else
                begin
                    if (!K)
                        Q <= 1;
                    else
                        Q <= !Q;
                    end
                end
        end
    end
end

```




## FJKSRE

### J-K Flip-Flop with Clock Enable and Synchronous Set and Reset

#### Architectures Supported

FJKSRE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

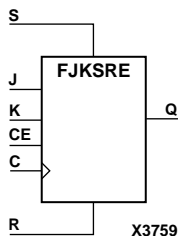

FJKSRE is a single J-K-type flip-flop with J, K, synchronous set (S), synchronous reset (R), and clock enable (CE) inputs and data output (Q). When synchronous set (S) is High, all other inputs are ignored and output Q is set High. (Set has precedence over Reset.) When synchronous reset (R) is High and S is Low, output Q is reset Low. When S and R are Low and CE is High, output Q responds to the state of the J and K inputs, as shown in the following truth table, during the Low-to-High clock (C) transition. When CE is Low, clock transitions are ignored.


The flip-flop is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol. FJKSRE will set when GSR is active. For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the flip-flop is preset to active high when GSR is active.

Inputs						Outputs
S	R	CE	J	K	C	Q
1	X	X	X	X	↑	1
0	1	X	X	X	↑	0
0	0	0	X	X	X	No Chg
0	0	1	0	0	X	No Chg
0	0	1	0	1	↑	0
0	0	1	1	0	↑	1
0	0	1	1	1	↑	Toggle

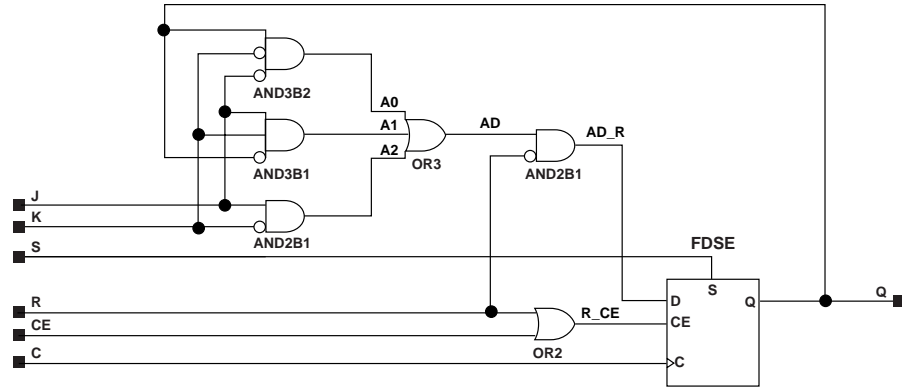


X7828

**FJKSRE Implementation Spartan-II, Spartan-II E, Virtex, Virtex-E**

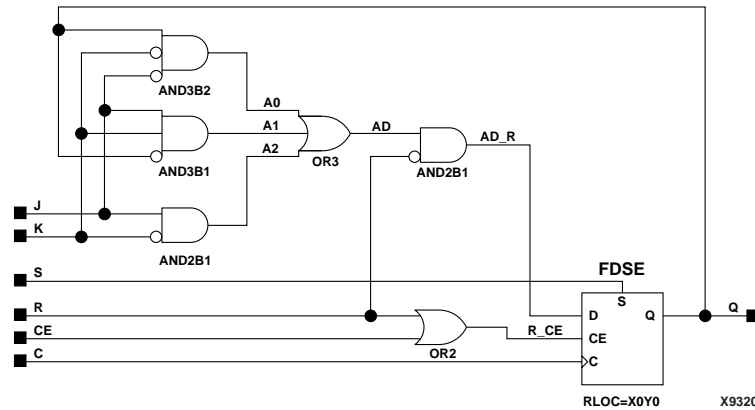

RLOC=X0Y0 X9320

**FJKSRE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

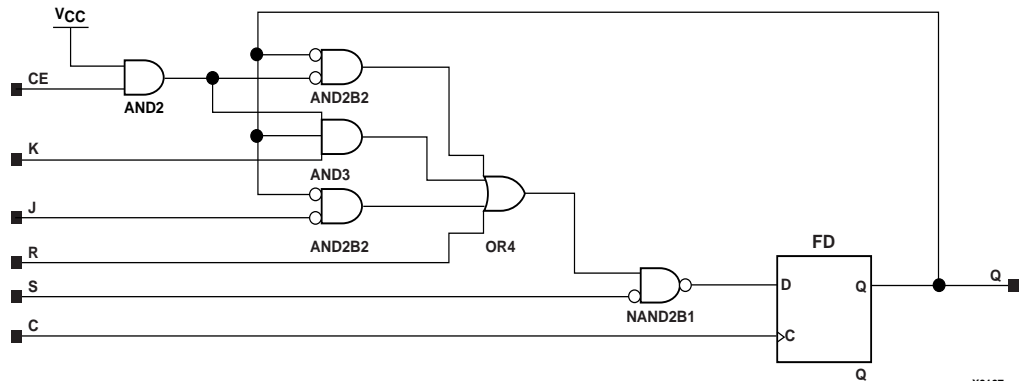

X8127

**FJKSRE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

**Usage**

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```

architecture Behavioral of fjksre is

begin

process (C)
begin
    if (C'event and C='1') then
        if (S='1') then
            Q <= '1';
        elsif (R='1') then
            Q <= '0';
        elsif (CE='1') then
            if (J='0') then
                if (K='1') then
                    Q <= '0';
                end if;
            else
                if (K='0') then
                    Q <= '1';
                else
                    Q <= not Q;
                end if;
            end if;
        end if;
    end if;
end process;

end Behavioral;

```

## Verilog Inference Code

```

always @(posedge C)
begin
    if (S)
        Q <= 1;
    else if (R)
        Q <= 0;
    else if (CE)
    begin
        if (!J)
        begin
            if (K)
                Q <= 0;
            end
            else
            begin
                if (!K)
                    Q <= 1;
                else
                    Q <= !Q;
                end
            end
        end
    end
end
end

```




## FMAP

### F Function Generator Partitioning Control Symbol

#### Architectures Supported

FMAP	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

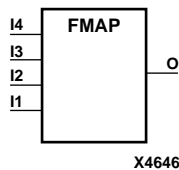

The FMAP symbol is used to map logic to the function generator of a slice. See the appropriate CAE tool interface user guide for information about specifying this attribute in your schematic design editor.

The MAP=*type* parameter can be used with the FMAP symbol to further define how much latitude you want to give the mapping program. The following table shows MAP option characters and their meanings.

MAP Option Character	Function
P	Pins.
C	Closed — Adding logic to or removing logic from the CLB is not allowed.
L	Locked — Locking CLB pins.
O	Open — Adding logic to or removing logic from the CLB is allowed.
U	Unlocked — No locking on CLB pins.

Possible types of MAP parameters for FMAP are MAP=PUC, MAP=PLC, MAP=PLO, and MAP=PUO. The default parameter is PUO. If one of the “open” parameters is used (PLO or PUO), only the output signals must be specified.

**Note:** Currently, only PUC and PUO are observed. PLC and PLO are translated into PUC and PUO, respectively.

The FMAP symbol can be assigned to specific CLB locations using LOC attributes.

#### Usage

FMAPs are generally inferred with the logic portions of the HDL code. Xilinx suggests that you instantiate FMAPs only if you have a need to implicitly specify the logic mapping, or if you need to manually place or relationally place the logic.

## VHDL Instantiation Template

```
-- Component Declaration for FMAP should be placed
-- after architecture statement but before begin keyword

component FMAP
  port (I1 : in STD_ULOGIC;
        I2 : in STD_ULOGIC;
        I3 : in STD_ULOGIC;
        I4 : in STD_ULOGIC;
        O  : in STD_ULOGIC);
end component;

-- Component Attribute specification for FMAP
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter constraints here

-- Component Instantiation for FMAP should be placed
-- in architecture after the begin keyword

FMAP_INSTANCE_NAME : FMAP
  port map (I1 => user_I1,
           I2 => user_I2,
           I3 => user_I3,
           I4 => user_I4,
           O  => user_O);
```

## Verilog Instantiation Template

```
FMAP FMAP_instance_name (.I1 (user_I1),
                        .I2 (user_I2),
                        .I3 (user_I3),
                        .I4 (user_I4),
                        .O (user_O));
```

## Commonly Used Constraints

BEL

BLKNM

HBLKNM

HU\_SET

LOC

MAP

U\_SET








# FTC

## Toggle Flip-Flop with Toggle Enable and Asynchronous Clear

### Architectures Supported

FTC	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

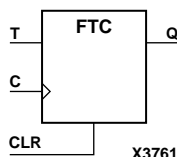

FTC is a synchronous, resettable toggle flip-flop. The asynchronous clear (CLR) input, when High, overrides all other inputs and resets the data output (Q) Low. The Q output toggles, or changes state, when the toggle enable (T) input is High and CLR is Low during the Low-to-High clock transition.


The flip-flop is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.


Inputs			Outputs
CLR	T	C	Q
1	X	X	0
0	0	X	No Chg
0	1	↑	Toggle

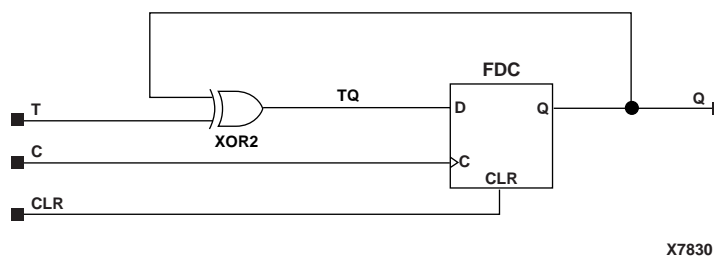

### FTC Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

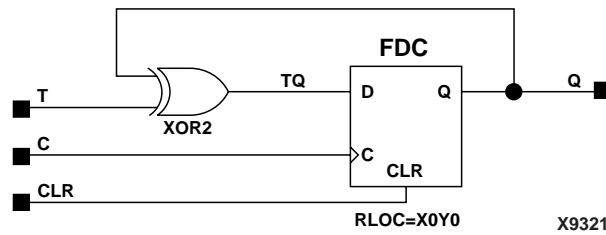

**FTC Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

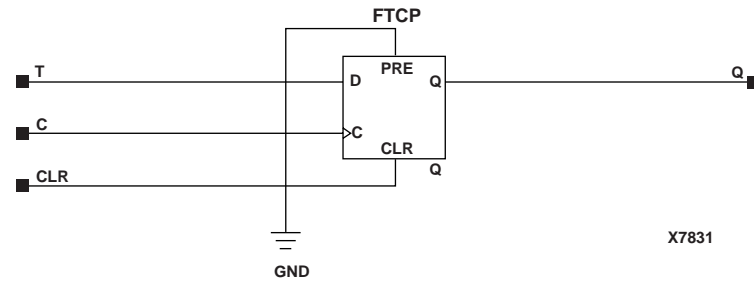

**FTC Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

**Usage**

For HDL, this design element can be instantiated or inferred.

**VHDL Inference Code**

```
architecture Behavioral of ftc is
begin
process (C, CLR)
begin
    if (CLR='1') then
        Q <= '0';
    elsif (C'event and C='1') then
        if (T='1') then
            Q <= not Q;
        end if;
    end if;
end process;
end Behavioral;
```

**Verilog Inference Code**

```
always @(posedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else if (T)
        Q <= !Q;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FTC should be placed
-- after architecture statement but before begin keyword

component FTC
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        CLR : in STD_ULOGIC;
        T : in STD_ULOGIC);
end component;

-- Component Attribute specification for FTC
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for FTC should be placed
-- in architecture after the begin keyword

FTC_INSTANCE_NAME : FTC
  port map (Q => user_Q,
            C => user_C,
            CLR => user_CLR,
            T => user_T);
```

## Verilog Instantiation Template

```
FTC FTC_instance_name (.Q (user_Q),
                      .C (user_C),
                      .CLR (user_CLR),
                      .T (user_T));
```

## Commonly Used Constraints

BLKNM, HBLKNM, HU\_SET, INIT, IOB, LOC, REG, RLOC, TIMEGRP, TNM, U\_SET, XBLKNM




# FTCE

## Toggle Flip-Flop with Toggle and Clock Enable and Asynchronous Clear

### Architectures Supported

FTCE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

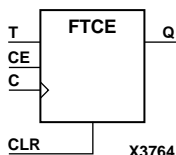

FTCE is a toggle flip-flop with toggle and clock enable and asynchronous clear. When the asynchronous clear (CLR) input is High, all other inputs are ignored and the data output (Q) is reset Low. When CLR is Low and toggle enable (T) and clock enable (CE) are High, Q output toggles, or changes state, during the Low-to-High clock (C) transition. When CE is Low, clock transitions are ignored.


The flip-flop is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.


Inputs				Outputs
CLR	CE	T	C	Q
1	X	X	X	0
0	0	X	X	No Chg
0	1	0	X	No Chg
0	1	1	↑	Toggle

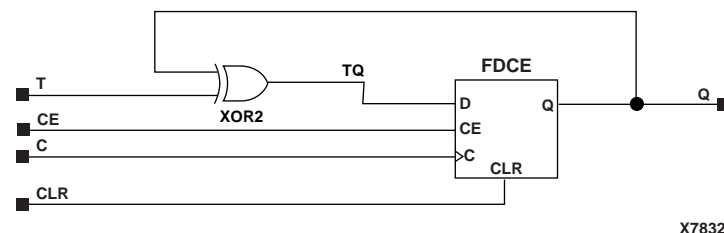

### FTCE Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

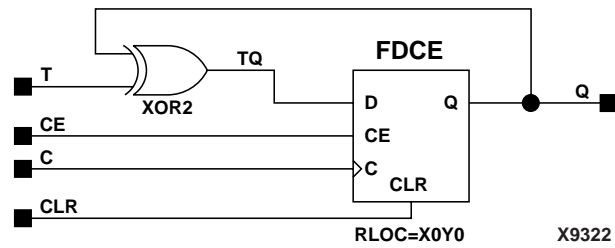

**FTCE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

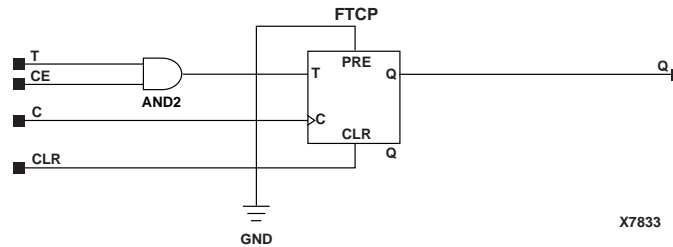

**FTCE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

**Usage**

For HDL, this design element can be inferred or instantiated.

**VHDL Inference Code**

```
architecture Behavioral of ftce is
begin
process (C, CLR)
begin
    if (CLR='1') then
        Q <= '0';
    elsif (C'event and C='1') then
        if (CE='1') then
            if (T='1') then
                Q <= not Q;
            end if;
        end if;
    end if;
end process;

Q <= Q;

end Behavioral;
```



## Verilog Inference Code

```
always @(posedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else if (CE)
        if (T)
            Q <= !Q;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FTCE should be placed
-- after architecture statement but before begin keyword
```

```
component FTCE
    port (Q : out STD_ULOGIC;
          C : in STD_ULOGIC;
          CE : in STD_ULOGIC;
          CLR : in STD_ULOGIC;
          PRE : in STD_ULOGIC;
          T : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for FTCE
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for FTCE should be placed
-- in architecture after the begin keyword
```

```
FTCE_INSTANCE_NAME : FTCE
    port map (Q => user_Q,
              C => user_C,
              CE => user_CE,
              CLR => user_CLR,
              PRE => user_PRE,
              T => user_T);
```

## Verilog Instantiation Template

```
FTCE FTCE_instance_name (.Q (user_Q),
                          .C (user_C),
                          .CE (user_CE),
                          .CLR (user_CLR),
                          .PRE (user_PRE),
                          .T (user_T));
```

## Commonly Used Constraints

BLKNM, HBLKNM, HU\_SET, INIT, IOB, LOC, REG, RLOC, TIMEGRP, TNM, U\_SET, and XBLKNM.




# FTCLE

## Toggle/Loadable Flip-Flop with Toggle and Clock Enable and Asynchronous Clear

### Architectures Supported

FTCLE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

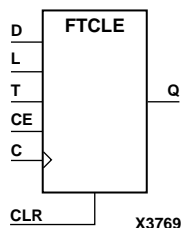

FTCLE is a toggle/loadable flip-flop with toggle and clock enable and asynchronous clear. When the asynchronous clear input (CLR) is High, all other inputs are ignored and output Q is reset Low. When load enable input (L) is High and CLR is Low, clock enable (CE) is overridden and the data on data input (D) is loaded into the flip-flop during the Low-to-High clock (C) transition. When toggle enable (T) and CE are High and L and CLR are Low, output Q toggles, or changes state, during the Low- to-High clock transition. When CE is Low, clock transitions are ignored.


The flip-flop is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.


Inputs						Outputs
CLR	L	CE	T	D	C	Q
1	X	X	X	X	X	0
0	1	X	X	1	↑	1
0	1	X	X	0	↑	0
0	0	0	X	X	X	No Chg
0	0	1	0	X	X	No Chg
0	0	1	1	X	↑	Toggle

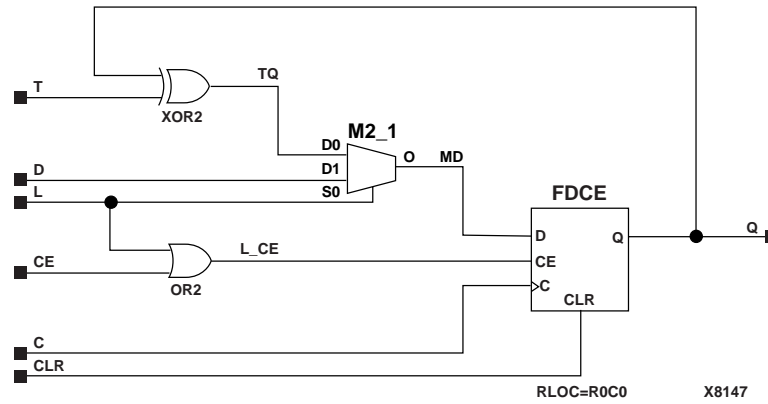

FTCLE Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

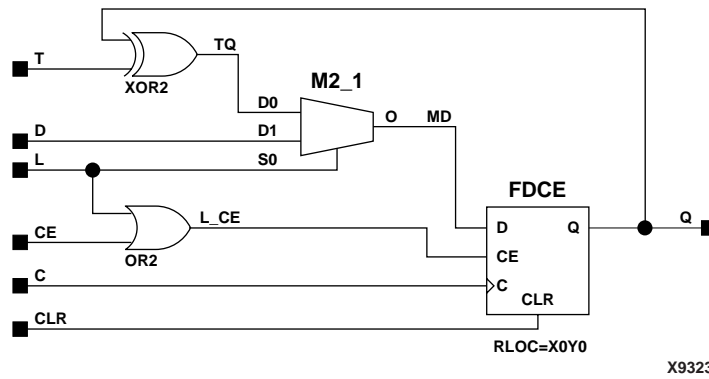

FTCLE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

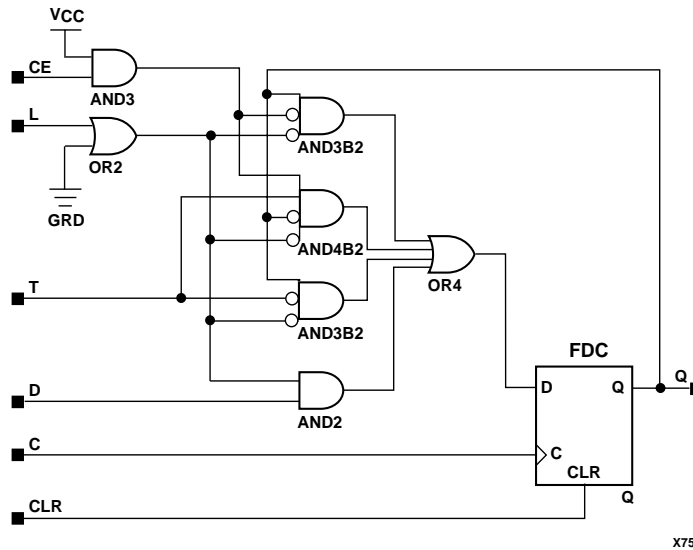

FTCLE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

## Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of ftcle is

begin

process (C, CLR)
begin
    if (CLR='1') then
        Q <= '0';
    elsif (C'event and C='1') then
        if (L='1') then
            Q <= D;
        elsif (CE='1') then
            if (T='1') then
                Q <= not Q;
            end if;
        end if;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @(posedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else if (L)
        Q <= D;
    else if (CE)
        if (T)
            Q <= !Q;
        end if;
end
```




## FTCLEX

### Toggle/Loadable Flip-Flop with Toggle and Clock Enable and Asynchronous Clear

#### Architectures Supported

FTCLEX	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

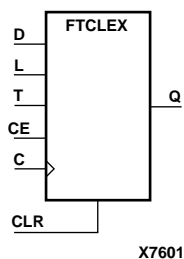


FTCLEX is a toggle/loadable flip-flop with toggle and clock enable and asynchronous clear. When the asynchronous clear input (CLR) is High, all other inputs are ignored and output Q is reset Low. When load enable input (L) is High, CLR is Low, and CE is High, the data on data input (D) is loaded into the flip-flop during the Low-to-High clock (C) transition. When toggle enable (T) and CE are High and L and CLR are Low, output Q toggles, or changes state, during the Low- to-High clock transition. When CE is Low, clock transitions are ignored.

The flip-flop is asynchronously cleared, output Low, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs						Outputs
CLR	L	CE	T	D	C	Q
1	X	X	X	X	X	0
0	1	1	X	1	↑	1
0	1	1	X	0	↑	0
0	0	0	X	X	X	No Chg
0	0	1	0	X	X	No Chg
0	0	1	1	X	↑	Toggle

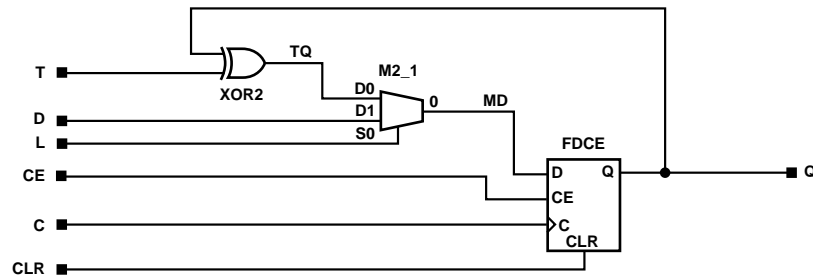

X6995

**FTCLEX Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E**

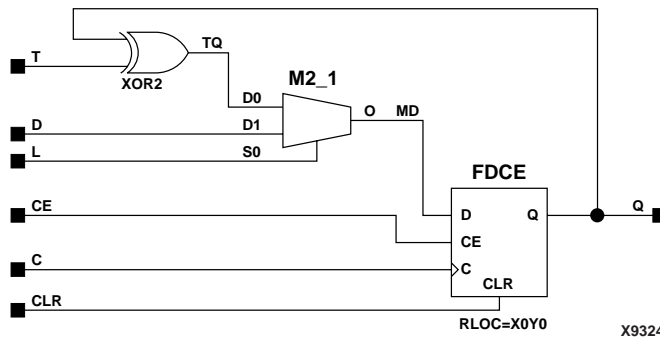

**FTCLEX Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

**Usage**

For HDL, this design element is inferred rather than instantiated.

**VHDL Inference Code**

architecture Behavioral of ftclex is

begin

process (C, CLR)

begin

if (CLR='1') then

Q <= '0';

elsif (C'event and C='1') then

if (CE='1') then

if (L='1') then

Q <= D;

elsif (T='1') then

Q <= not Q;

end if;

end if;

end if;

end process;

end Behavioral;



## Verilog Inference Code

```
always @(posedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else if (L)
        Q <= D;
    else if (CE)
        if (T)
            Q <= !Q;
end
```




## FTCP

### Toggle Flip-Flop with Toggle Enable and Asynchronous Clear and Preset

#### Architectures Supported

FTCP	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No

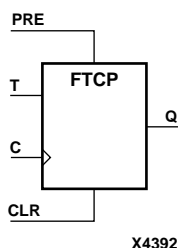

FTCP is a toggle flip-flop with toggle enable and asynchronous clear and preset. When the asynchronous clear (CLR) input is High, all other inputs are ignored and the output (Q) is reset Low. When the asynchronous preset (PRE) is High and CLR is Low, all other inputs are ignored and Q is set High. When the toggle enable input (T) is High and CLR and PRE are Low, output Q toggles, or changes state, during the Low-to-High clock (C) transition.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs				Outputs
CLR	PRE	T	C	Q
1	X	X	X	0
0	1	X	X	1
0	0	0	X	No Chg
0	0	1	↑	Toggle

#### Usage

For HDL, this design element can be inferred or instantiated.

#### VHDL Inference Code

architecture Behavioral of ftcp is

```
begin
process (C, CLR, PRE)
begin
    if (CLR='1') then
        Q <= '0';
    elsif (PRE='1') then
```

```

        Q <= '1';
    elsif (C'event and C='1') then
        if (T='1') then
            Q <= not Q;
        end if;
    end if;
end process;

end Behavioral;

```

## Verilog Inference Code

```

always @(posedge C or posedge CLR or posedge PRE)
begin
    if (CLR)
        Q <= 0;
    else if (PRE)
        Q <= 1;
    else if (T)
        Q <= !Q;
end

```

## VHDL Instantiation Template

```

-- Component Declaration for FTCP should be placed
-- after architecture statement but before begin keyword

component FTCP
port (Q : out STD_ULOGIC;
      C : in STD_ULOGIC;
      CLR : in STD_ULOGIC;
      PRE : in STD_ULOGIC;
      T : in STD_ULOGIC);
end component;

-- Component Attribute specification for FTCP
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for FTCP should be placed
-- in architecture after the begin keyword

FTCP_INSTANCE_NAME : FTCP
    port map (Q => user_Q,
              C => user_C,
              CLR => user_CLR,
              PRE => user_PRE,
              T => user_T);

```

## Verilog Instantiation Template

```
FTCP FTCP_instance_name (.Q (user_Q),  
                          .C (user_C),  
                          .CLR (user_CLR),  
                          .PRE (user_PRE),  
                          .T (user_T));
```

## Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

INIT

IOB

LOC

REG

RLOC

TIMEGRP

TNM

U\_SET

XBLKNM




# FTCPE

## Toggle Flip-Flop with Toggle and Clock Enable and Asynchronous Clear and Preset

### Architectures Supported


FTCPE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

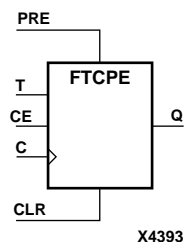

FTCPE is a toggle flip-flop with toggle and clock enable and asynchronous clear and preset. When the asynchronous clear (CLR) input is High, all other inputs are ignored and the output (Q) is reset Low. When the asynchronous preset (PRE) is High and CLR is Low, all other inputs are ignored and Q is set High. When the toggle enable input (T) and the clock enable input (CE) are High and CLR and PRE are Low, output Q toggles, or changes state, during the Low-to-High clock (C) transition. Clock transitions are ignored when CE is Low.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs					Outputs
CLR	PRE	CE	T	C	Q
1	X	X	X	X	0
0	1	X	X	X	1
0	0	0	X	X	No Chg
0	0	1	0	X	No Chg
0	0	1	1	↑	Toggle

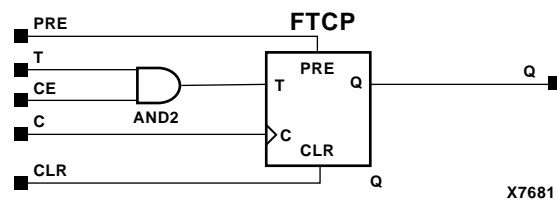

### FTCPE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

## Usage

For HDL, this design element is inferred rather than instantiated.



## VHDL Inference Code

```
architecture Behavioral of ftcpe is
begin
process (C, CLR, PRE)
begin
    if (CLR='1') then
        Q <= '0';
    elsif (PRE='1') then
        Q <= '1';
    elsif (C'event and C='1') then
        if (CE='1') then
            if (T='1') then
                Q <= not Q;
            end if;
        end if;
    end if;
end process;
end Behavioral;
```

## Verilog Inference Code

```
always @(posedge C or posedge CLR or posedge PRE)
begin
    if (CLR)
        Q <= 0;
    else if (PRE)
        Q <= 1;
    else if (CE)
        if (T)
            Q <= !Q;
end
```




## FTCPLE

### Loadable Toggle Flip-Flop with Toggle and Clock Enable and Asynchronous Clear and Preset

#### Architectures Supported


FTCPLE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

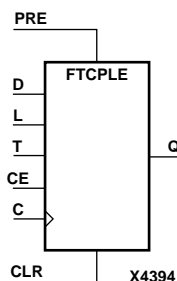

FTCPLE is a loadable toggle flip-flop with toggle and clock enable and asynchronous clear and preset. When the asynchronous clear (CLR) input is High, all other inputs are ignored and the output (Q) is reset Low. When the asynchronous preset (PRE) is High and CLR is Low, all other inputs are ignored and Q is set High. When the load input (L) is High, the clock enable input (CE) is overridden and data on data input (D) is loaded into the flip-flop during the Low-to-High clock transition. When the toggle enable input (T) and the clock enable input (CE) are High and CLR, PRE, and L are Low, output Q toggles, or changes state, during the Low-to-High clock (C) transition. Clock transitions are ignored when CE is Low.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs							Outputs
CLR	PRE	L	CE	T	C	D	Q
1	X	X	X	X	X	X	0
0	1	X	X	X	X	X	1
0	0	1	X	X	↑	0	0
0	0	1	X	X	↑	1	1
0	0	0	0	X	X	X	No Chg
0	0	0	1	0	X	X	No Chg
0	0	0	1	1	↑	X	Toggle

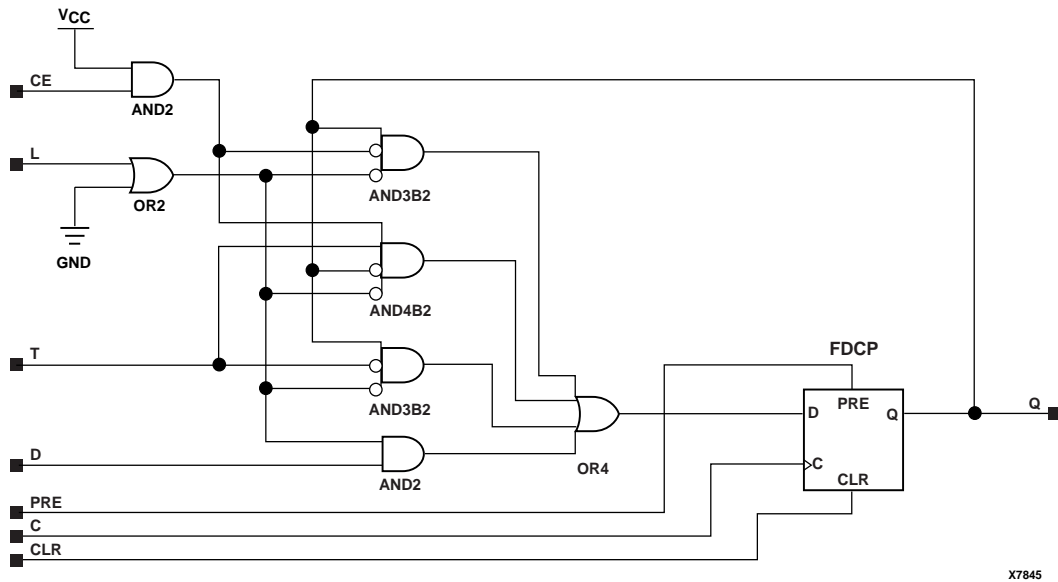

X7845

## FTCPLE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

### Usage

For HDL, this design element is inferred rather than instantiated.

### VHDL Inference Code

```
architecture Behavioral of ftcple is
begin
  process (C, CLR, PRE)
  begin
    if (CLR='1') then
      Q <= '0';
    elsif (PRE='1') then
      Q <= '1';
    elsif (C'event and C='1') then
      if (L='1') then
        Q <= D;
      elsif (CE='1') then
        if (T='1') then
          Q <= not Q;
        end if;
      end if;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @(posedge C or posedge CLR or posedge PRE)
begin
    if (CLR)
        Q <= 0;
    else if (PRE)
        Q <= 1;
    else if (L)
        Q <= D;
    else if (CE)
        if (T)
            Q <= !Q;
end
```




# FTDCE

## Dual Edge Triggered Toggle Flip-Flop with Toggle and Clock Enable and Asynchronous Clear

### Architectures Supported


FTDCE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

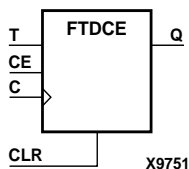

FTDCE is a dual edge triggered toggle flip-flop with toggle and clock enable and asynchronous clear. When the asynchronous clear (CLR) input is High, all other inputs are ignored and the data output (Q) is reset Low. When CLR is Low and toggle enable (T) and clock enable (CE) are High, Q output toggles, or changes state, during the Low-to-High and High-to-Low clock (C) transitions. When CE is Low, clock transitions are ignored.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs				Outputs
CLR	CE	T	C	Q
1	X	X	X	0
0	0	X	X	No Chg
0	1	0	X	No Chg
0	1	1	↑	Toggle
0	1	1	↓	Toggle

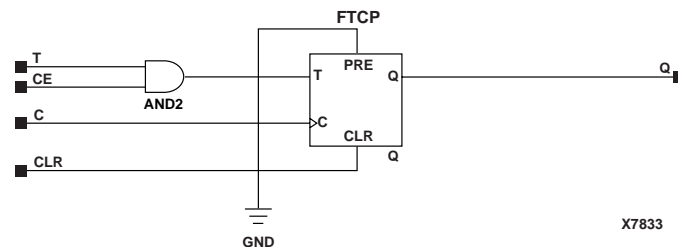

### FTDCE Implementation CoolRunner-II

## Usage

For HDL, this design element is inferred rather than instantiated.



## VHDL Inference Code

```
architecture Behavioral of ftdce is
begin
process (C, CLR)
begin
    if (CLR='1') then
        Q <= '0';
    elsif (C'event) then
        if (CE='1') then
            if (T='1') then
                Q <= not Q;
            end if;
        end if;
    end if;
end process;
end Behavioral;
```

## Verilog Inference Code

```
always @(posedge C or negedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else if (CE)
        if (T)
            Q <= !Q;
end
```




## FTDCLE

### Dual Edge Triggered Toggle/Loadable Flip-Flop with Toggle and Clock Enable and Asynchronous Clear

#### Architectures Supported


FTDCLE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

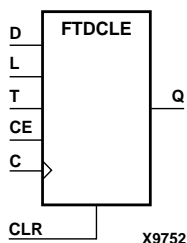

FTDCLE is a dual edge triggered toggle/loadable flip-flop with toggle and clock enable and asynchronous clear. When the asynchronous clear input (CLR) is High, all other inputs are ignored and output Q is reset Low. When load enable input (L) is High and CLR is Low, clock enable (CE) is overridden and the data on data input (D) is loaded into the flip-flop during the Low-to-High and High-to-Low clock (C) transitions. When toggle enable (T) and CE are High and L and CLR are Low, output Q toggles, or changes state, during the Low- to-High and High-to-Low clock transitions. When CE is Low, clock transitions are ignored.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs						Outputs
CLR	L	CE	T	D	C	Q
1	X	X	X	X	X	0
0	1	X	X	1	↑	1
0	1	X	X	1	↓	1
0	1	X	X	0	↑	0
0	1	X	X	0	↓	0
0	0	0	X	X	X	No Chg
0	0	1	0	X	X	No Chg
0	0	1	1	X	↑	Toggle
0	0	1	1	X	↓	Toggle

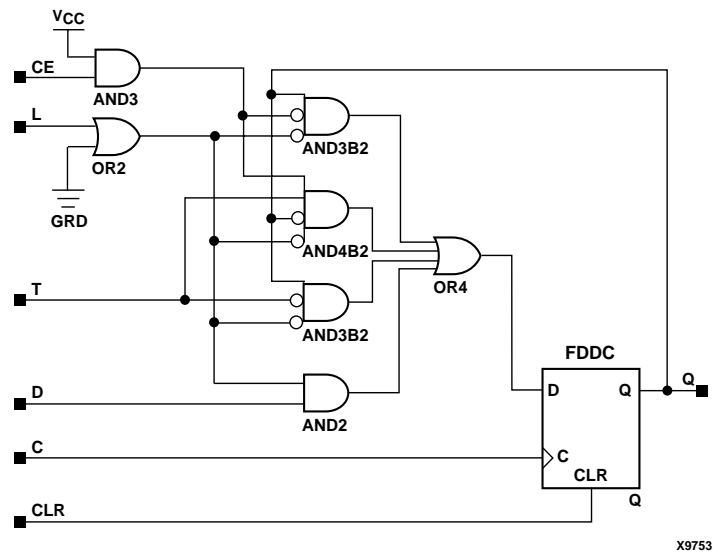

### FTDCLE Implementation CoolRunner-II

#### Usage

For HDL, this design element is inferred rather than instantiated.

#### VHDL Inference Code

```
architecture Behavioral of ftdcle is
begin
process (C, CLR)
begin
    if (CLR='1') then
        Q <= '0';
    elsif (C'event) then
        if (L='1') then
            Q <= D;
        elsif (CE='1') then
            if (T='1') then
                Q <= not Q;
            end if;
        end if;
    end if;
end process;
end Behavioral;
```

## Verilog Inference Code

```
always @(posedge C or negedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else if (L)
        Q <= D;
    else if (CE)
        if (T)
            Q <= !Q;
end
```




## FTDCLEX

### Dual Edge Triggered Toggle/Loadable Flip-Flop with Toggle and Clock Enable and Asynchronous Clear

#### Architectures Supported

FTDCLEX	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

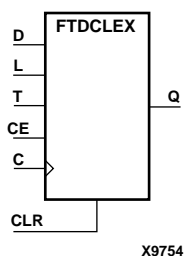

FTDCLEX is a dual edge triggered toggle/loadable flip-flop with toggle and clock enable and asynchronous clear. When the asynchronous clear input (CLR) is High, all other inputs are ignored and output Q is reset Low. When load enable input (L) is High, CLR is Low, and CE is High, the data on data input (D) is loaded into the flip-flop during the Low-to-High and High-to-Low clock (C) transitions. When toggle enable (T) and CE are High and L and CLR are Low, output Q toggles, or changes state, during the Low- to-High and High-to-Low clock transitions. When CE is Low, clock transitions are ignored.

The flip-flop is asynchronously cleared, output Low, when power is applied.

Inputs						Outputs
CLR	L	CE	T	D	C	Q
1	X	X	X	X	X	0
0	1	1	X	1	↑	1
0	1	1	X	1	↓	1
0	1	1	X	0	↑	0
0	1	1	X	0	↓	0
0	0	0	X	X	X	No Chg
0	0	1	0	X	X	No Chg
0	0	1	1	X	↑	Toggle
0	0	1	1	X	↓	Toggle

#### Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of ftdclex is
begin
process (C, CLR)
begin
    if (CLR='1') then
        Q <= '0';
    elsif (C'event) then
        if (CE='1') then
            if (L='1') then
                Q <= D;
            elsif (T='1') then
                Q <= not Q;
            end if;
        end if;
    end if;
end process;
end Behavioral;
```

## Verilog Inference Code

```
always @(posedge C or negedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else if (L)
        Q <= D;
    else if (CE)
        if (T)
            Q <= !Q;
end
```








## FTDCP

### Toggle Flip-Flop with Toggle Enable and Asynchronous Clear and Preset

#### Architectures Supported


FTDCP	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No

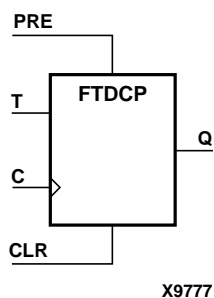

FTDCP is a toggle flip-flop with toggle enable and asynchronous clear and preset. When the asynchronous clear (CLR) input is High, all other inputs are ignored and the output (Q) is reset Low. When the asynchronous preset (PRE) is High and CLR is Low, all other inputs are ignored and Q is set High. When the toggle enable input (T) is High and CLR and PRE are Low, output Q toggles, or changes state, during the Low-to-High and High-to-Low clock (C) transition.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs				Outputs
CLR	PRE	T	C	Q
1	X	X	X	0
0	1	X	X	1
0	0	0	X	No Chg
0	0	1	↑	Toggle
0	0	1	↓	Toggle

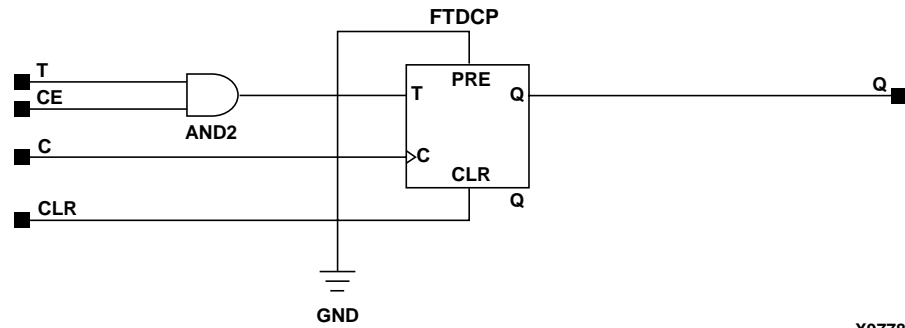

X9778

### FTDCP Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

#### Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of ftdcp is
begin

process (C, CLR, PRE)
begin
    if (CLR='1') then
        Q <= '0';
    elsif (PRE='1') then
        Q <= '1';
    elsif (C'event) then
        if (T='1') then
            Q <= not Q;
        end if;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @(posedge C or negedge C or posedge CLR or posedge PRE)
begin
    if (CLR)
        Q <= 0;
    else if (PRE)
        Q <= 1;
    else if (T)
        Q <= !Q;
end
```




## FTDRSE

### Dual Edge Triggered Toggle Flip-Flop with Toggle and Clock Enable and Synchronous Reset and Set

#### Architectures Supported


FTDRSE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

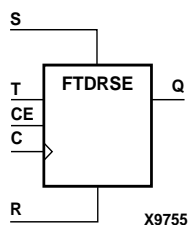

FTDRSE is a dual edge triggered toggle flip-flop with toggle and clock enable and synchronous reset and set. When the synchronous reset input (R) is High, it overrides all other inputs and the data output (Q) is reset Low. When the synchronous set input (S) is High and R is Low, clock enable input (CE) is overridden and output Q is set High. (Reset has precedence over Set.) When toggle enable input (T) and CE are High and R and S are Low, output Q toggles, or changes state, during the Low-to-High and High-to-Low clock transitions.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs					Outputs
R	S	CE	T	C	Q
1	X	X	X	↑	0
1	X	X	X	↓	0
0	1	X	X	↑	1
0	1	X	X	↓	1
0	0	0	X	X	No Chg
0	0	1	0	X	No Chg
0	0	1	1	↑	Toggle
0	0	1	1	↓	Toggle

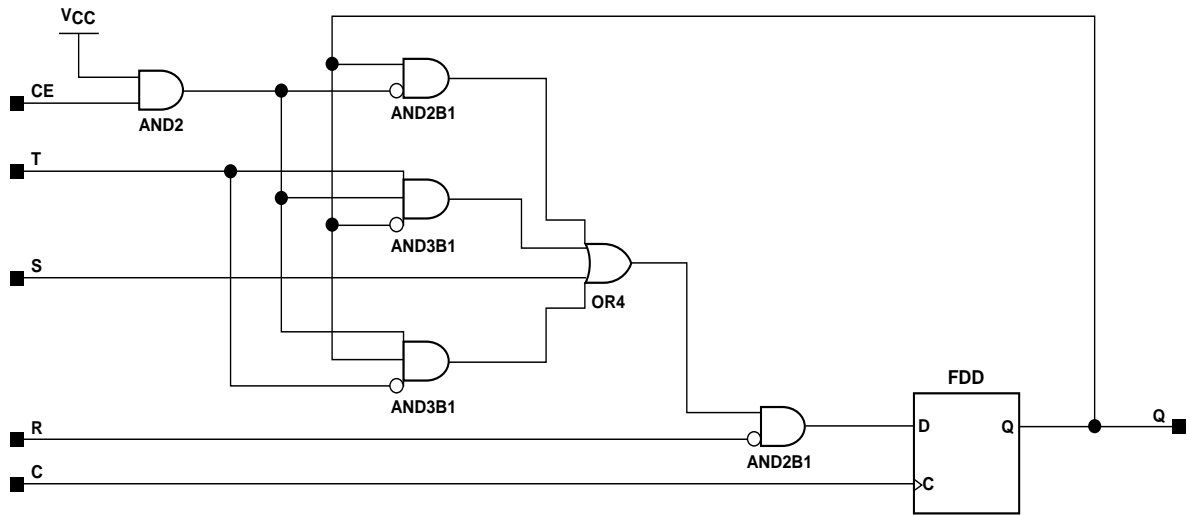

X9756

## FTDRSE Implementation CoolRunner-II

### Usage

For HDL, this design element is inferred rather than instantiated.

### VHDL Inference Code

```
architecture Behavioral of ftdrse is
begin
  process (C)
  begin
    if (C'event) then
      if (R='1') then
        Q <= '0';
      elsif (S='1') then
        Q <= '1';
      elsif (CE='1') then
        if (T='1') then
          Q <= not Q;
        end if;
      end if;
    end if;
  end process;
end Behavioral;
```



## Verilog Inference Code

```
always @(posedge C or negedge C)
begin
    if (R)
        Q <= 0;
    else if (S)
        Q <= 1;
    else if (CE)
        if (T)
            Q <= !Q;
end
```




# FTDRSLE

## Dual Edge Triggered Toggle/Loadable Flip-Flop with Toggle and Clock Enable and Synchronous Reset and Set

### Architectures Supported

FTDRSLE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

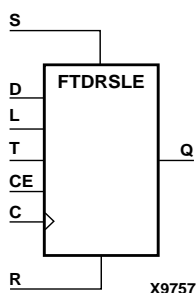


FTDRSLE is a dual edge triggered toggle/loadable flip-flop with toggle and clock enable and synchronous reset and set. The synchronous reset input (R), when High, overrides all other inputs and resets the data output (Q) Low. (Reset has precedence over Set.) When R is Low and synchronous set input (S) is High, the clock enable input (CE) is overridden and output Q is set High. When R and S are Low and load enable input (L) is High, CE is overridden and data on data input (D) is loaded into the flip-flop during the Low-to-High and High-to-Low clock transitions. When R, S, and L are Low and CE is High, output Q toggles, or changes state, during the Low-to-High and High-to-Low clock transitions. When CE is Low, clock transitions are ignored.

The flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs							Outputs
R	S	L	CE	T	D	C	Q
1	0	X	X	X	X	↑	0
1	0	X	X	X	X	↓	0
0	1	X	X	X	X	↑	1
0	1	X	X	X	X	↓	1
0	0	1	X	X	1	↑	1
0	0	1	X	X	1	↓	1
0	0	1	X	X	0	↑	0
0	0	1	X	X	0	↓	0
0	0	0	0	X	X	X	No Chg
0	0	0	1	0	X	X	No Chg

Inputs							Outputs
R	S	L	CE	T	D	C	Q
0	0	0	1	1	X	↑	Toggle
0	0	0	1	1	X	↓	Toggle

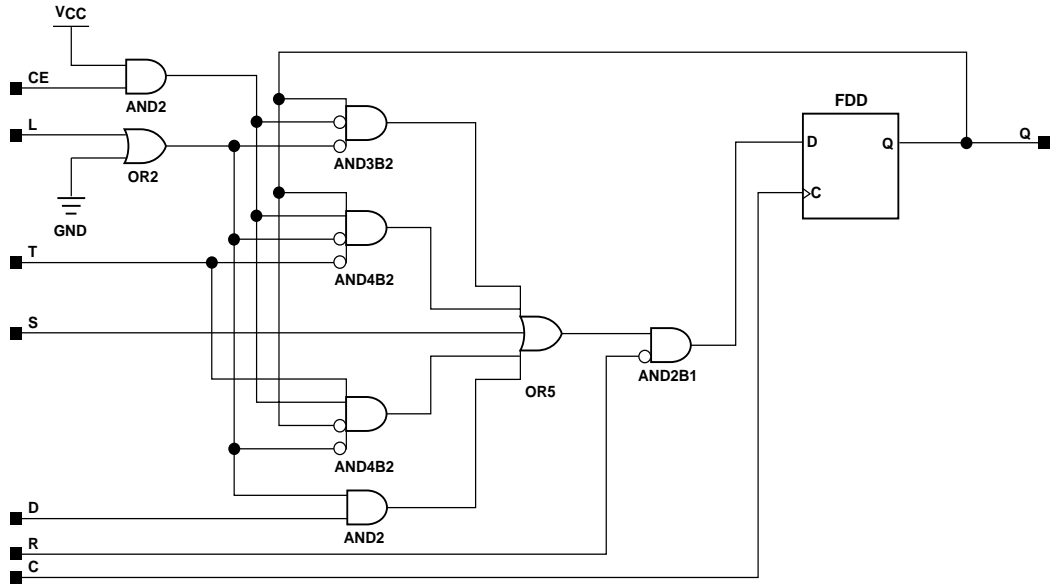

X9758

### FTDRSLE Implementation CoolRunner-II

#### Usage

For HDL, this design element is inferred rather than instantiated.

#### VHDL Inference Code

```

architecture Behavioral of ftdrsle is
begin
process (C)
begin
    if (C'event) then
        if (R='1') then
            Q <= '0';
        elsif (S='1') then
            Q <= '1';
        elsif (L='1') then
            Q <= D;
        elsif (CE='1') then
            if (T='1') then
                Q <= not Q;
            end if;
        end if;
    end if;
end process;
end Behavioral;

```

## Verilog Inference Code

```
always @(posedge C or negedge C)
begin
    if (R)
        Q <= 0;
    else if (S)
        Q <= 1;
    else if (L)
        Q <= D;
    else if (CE)
        if (T)
            Q <= !Q;
end
```




## FTP

### Toggle Flip-Flop with Toggle Enable and Asynchronous Preset

#### Architectures Supported

FTP	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

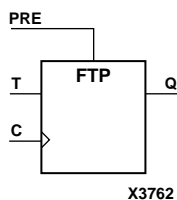

FTP is a toggle flip-flop with toggle enable and asynchronous preset. When the asynchronous preset (PRE) input is High, all other inputs are ignored and output Q is set High. When toggle-enable input (T) is High and PRE is Low, output Q toggles, or changes state, during the Low-to-High clock (C) transition.


For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the flip-flop is asynchronously preset to output High, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


The GSR active level defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_VIRTEX, STARTUP\_SPARTAN3, or the STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
PRE	T	C	Q
1	X	X	1
0	0	X	No Chg
0	1	↑	Toggle

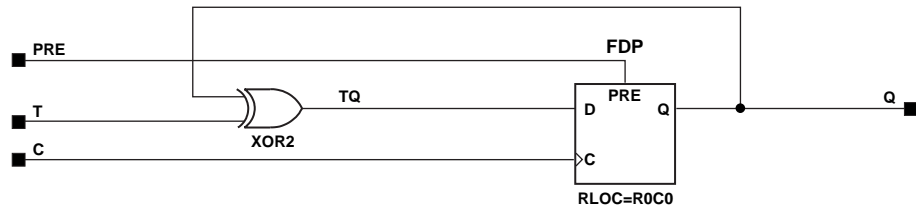


X6371

**FTP Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E**

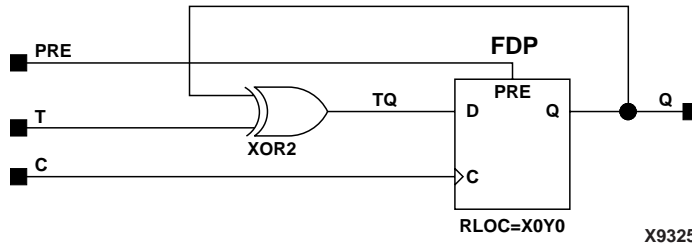

X9325

**FTP Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

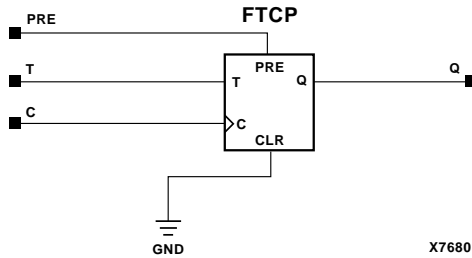

X7680

**FTP Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

**Usage**

For HDL, this design element can be inferred or instantiated.

**VHDL Inference Code**

```
architecture Behavioral of ftp is
begin
process (C, PRE)
begin
    if (PRE='1') then
        Q <= '1';
    elsif (C'event and C='1') then
        if (T='1') then
            Q <= not Q;
        end if;
    end if;
end process;
end Behavioral;
```



## Verilog Inference Code

```
always @(posedge C or posedge PRE)
begin
    if (PRE)
        Q <= 1;
    else if (T)
        Q <= !Q;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for FTP should be placed
-- after architecture statement but before begin keyword
```

```
component FTP
port (Q : out STD_ULOGIC;
      C : in STD_ULOGIC;
      PRE : in STD_ULOGIC;
      T : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for FTP
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for FTP should be placed
-- in architecture after the begin keyword
```

```
FTP_INSTANCE_NAME : FTP
port map (Q => user_Q,
          C => user_C,
          PRE => user_PRE,
          T => user_T);
```

## Verilog Instantiation Template

```
FTP FTP_instance_name (.Q (user_Q),
                      .C (user_C),
                      .PRE (user_PRE),
                      .T (user_T));
```

## Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

INIT

IOB


LOC  
REG  
RLOC  
TIMEGRP  
TNM  
U\_SET, XBLKNM

## FTPE

### Toggle Flip-Flop with Toggle and Clock Enable and Asynchronous Preset

#### Architectures Supported

FTPE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

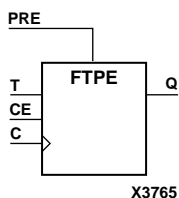

FTPE is a toggle flip-flop with toggle and clock enable and asynchronous preset. When the asynchronous preset (PRE) input is High, all other inputs are ignored and output Q is set High. When the toggle enable input (T) is High, clock enable (CE) is High, and PRE is Low, output Q toggles, or changes state, during the Low-to-High clock transition. When CE is Low, clock transitions are ignored.


For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the flip-flop is asynchronously preset to output High, when power is applied.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

The GSR active level defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.


Inputs				Outputs
PRE	CE	T	C	Q
1	X	X	X	1
0	0	X	X	No Chg
0	1	0	X	No Chg
0	1	1	↑	Toggle

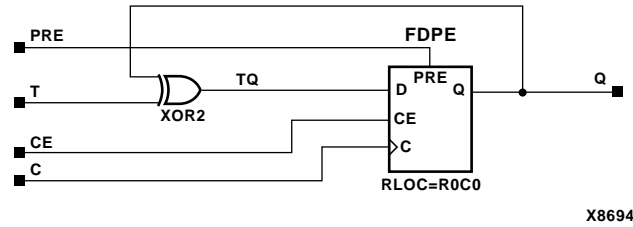

FTPE Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

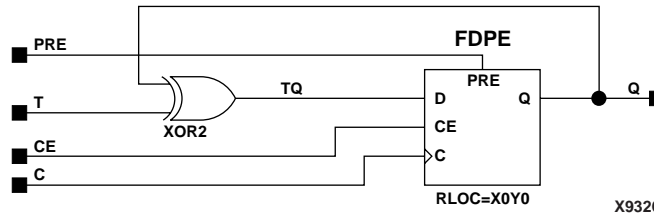

FTPE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

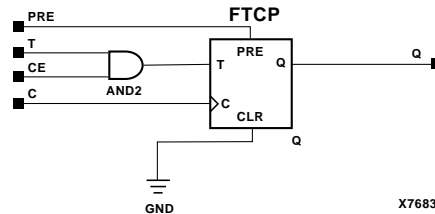

FTPE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

## Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of ftpe is
begin
process (C, PRE)
begin
    if (PRE='1') then
        Q <= '1';
    elsif (C'event and C='1') then
        if (CE='1') then
            if (T='1') then
                Q <= not Q;
            end if;
        end if;
    end if;
end process;
end Behavioral;
```

## Verilog Inference Code

```
always @(posedge C or posedge PRE)
begin
    if (PRE)
        Q <= 1;
    else if (CE)
        if (T)
            Q <= !Q;
end
```




# FTPLE

## Toggle/Loadable Flip-Flop with Toggle and Clock Enable and Asynchronous Preset

### Architectures Supported

FTPLE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

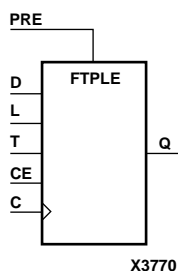

FTPLE is a toggle/loadable flip-flop with toggle and clock enable and asynchronous preset. When the asynchronous preset input (PRE) is High, all other inputs are ignored and output Q is set High. When the load enable input (L) is High and PRE is Low, the clock enable (CE) is overridden and the data (D) is loaded into the flip-flop during the Low-to-High clock transition. When L and PRE are Low and toggle-enable input (T) and CE are High, output Q toggles, or changes state, during the Low-to-High clock transition. When CE is Low, clock transitions are ignored.


For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the flip-flop is asynchronously cleared, output Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the flip-flop is asynchronously preset to output High, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


The GSR active level defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs						Outputs
PRE	L	CE	T	D	C	Q
1	X	X	X	X	X	1
0	1	X	X	1	↑	1
0	1	X	X	0	↑	0
0	0	0	X	X	X	No Chg
0	0	1	0	X	X	No Chg
0	0	1	1	X	↑	Toggle

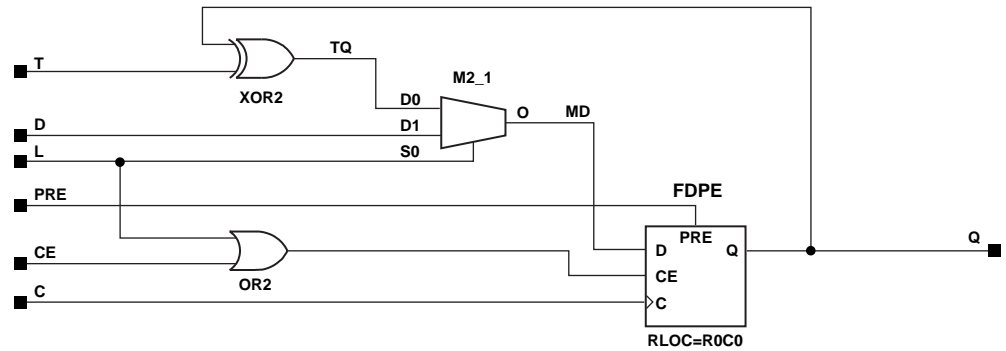


X6372

**FTPLE Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E**

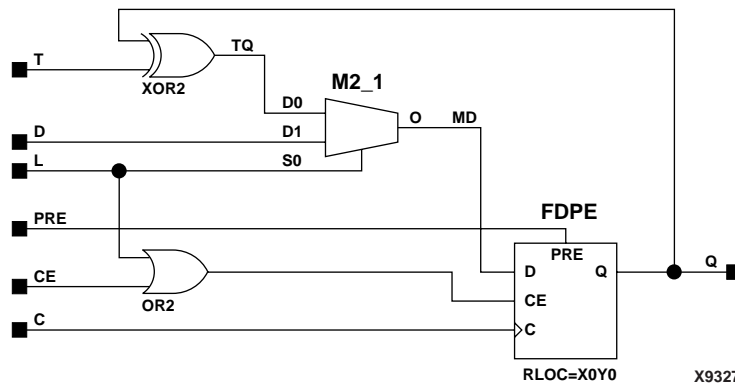

X9327

**FTPLE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

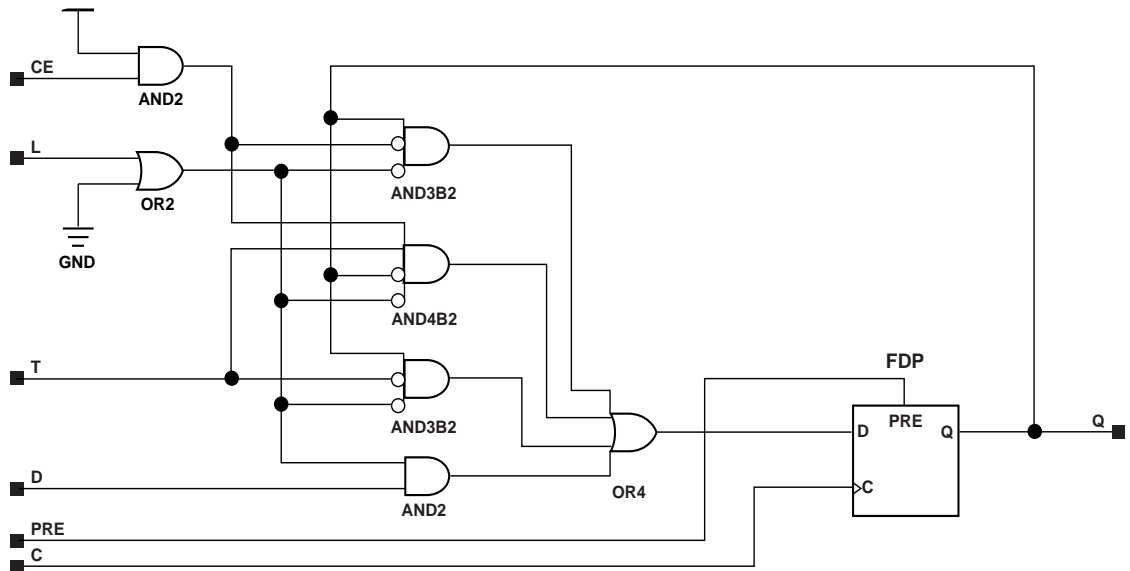

X7846

**FTPLE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**



## Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of ftple is

begin

process (C, PRE)
begin
    if (PRE='1') then
        Q <= '1';
    elsif (C'event and C='1') then
        if (L='1') then
            Q <= D;
        elsif (CE='1') then
            if (T='1') then
                Q <= not Q;
            end if;
        end if;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @(posedge C or posedge PRE)
begin
    if (PRE)
        Q <= 1;
    else if (L)
        Q <= D;
    else if (CE)
        if (T)
            Q <= !Q;
        end if;
    end if;
end
```




## FTRSE

### Toggle Flip-Flop with Toggle and Clock Enable and Synchronous Reset and Set

#### Architectures Supported

FTRSE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

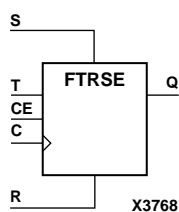

FTRSE is a toggle flip-flop with toggle and clock enable and synchronous reset and set. When the synchronous reset input (R) is High, it overrides all other inputs and the data output (Q) is reset Low. When the synchronous set input (S) is High and R is Low, clock enable input (CE) is overridden and output Q is set High. (Reset has precedence over Set.) When toggle enable input (T) and CE are High and R and S are Low, output Q toggles, or changes state, during the Low-to-High clock transition.


The flip-flop is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs					Outputs
R	S	CE	T	C	Q
1	X	X	X	↑	0
0	1	X	X	↑	1
0	0	0	X	X	No Chg
0	0	1	0	X	No Chg
0	0	1	1	↑	Toggle

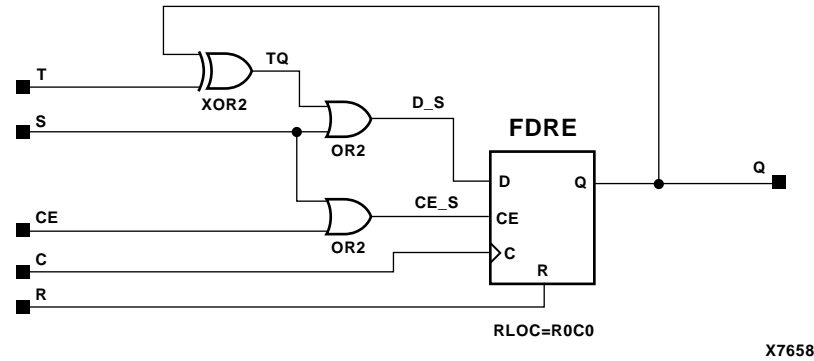


X7658

**FTRSE Implementation Spartan-II, Spartan-II-E, Virtex, Virtex-E**

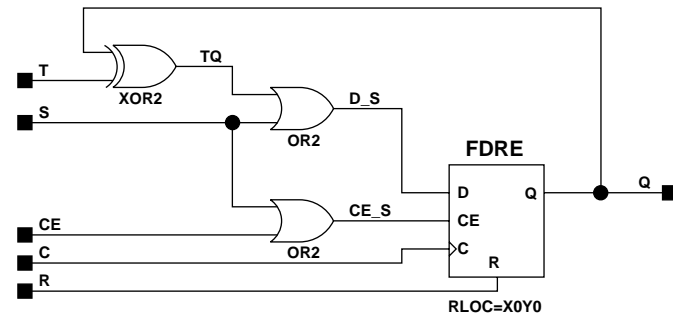

X9328

**FTRSE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

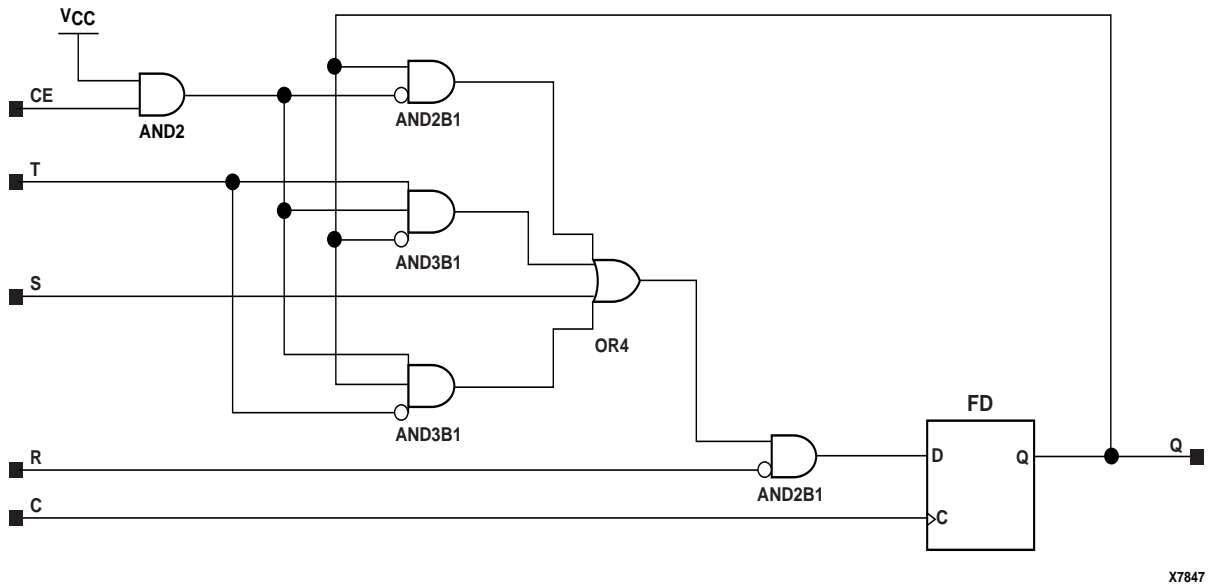

X7847

**FTRSE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

**Usage**

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of ftrse is
begin
process (C)
begin
    if (C'event and C='1') then
        if (R='1') then
            Q <= '0';
        elsif (S='1') then
            Q <= '1';
        elsif (CE='1') then
            if (T='1') then
                Q <= not Q;
            end if;
        end if;
    end if;
end process;
end Behavioral;
```

## Verilog Inference Code

```
always @(posedge C)
begin
    if (R)
        Q <= 0;
    else if (S)
        Q <= 1;
    else if (CE)
        if (T)
            Q <= !Q;
end
```




## FTRSLE

### Toggle/Loadable Flip-Flop with Toggle and Clock Enable and Synchronous Reset and Set

#### Architectures Supported

FTRSLE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

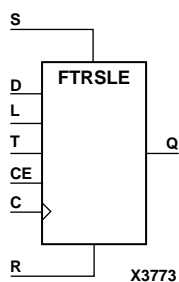

FTRSLE is a toggle/loadable flip-flop with toggle and clock enable and synchronous reset and set. The synchronous reset input (R), when High, overrides all other inputs and resets the data output (Q) Low. (Reset has precedence over Set.) When R is Low and synchronous set input (S) is High, the clock enable input (CE) is overridden and output Q is set High. When R and S are Low and load enable input (L) is High, CE is overridden and data on data input (D) is loaded into the flip-flop during the Low-to-High clock transition. When R, S, and L are Low, CE is High and T is High, output Q toggles, or changes state, during the Low-to-High clock transition. When CE is Low, clock transitions are ignored.


The flip-flop is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.


Inputs							Outputs
R	S	L	CE	T	D	C	Q
1	0	X	X	X	X	↑	0
0	1	X	X	X	X	↑	1
0	0	1	X	X	1	↑	1
0	0	1	X	X	0	↑	0
0	0	0	0	X	X	X	No Chg
0	0	0	1	0	X	X	No Chg
0	0	0	1	1	X	↑	Toggle

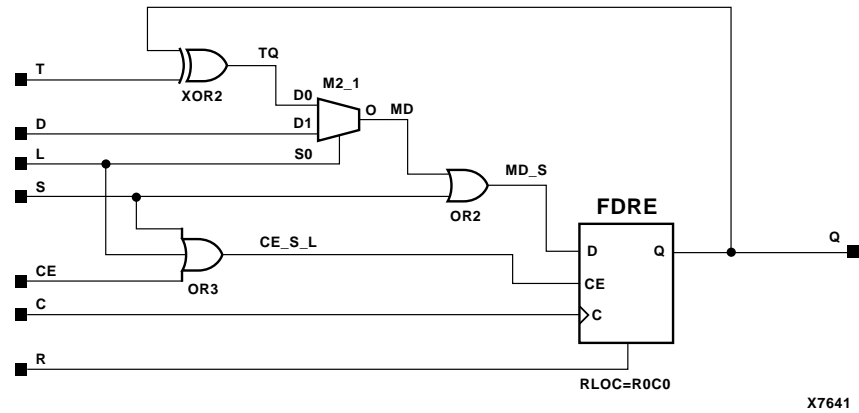

FTRSLE Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

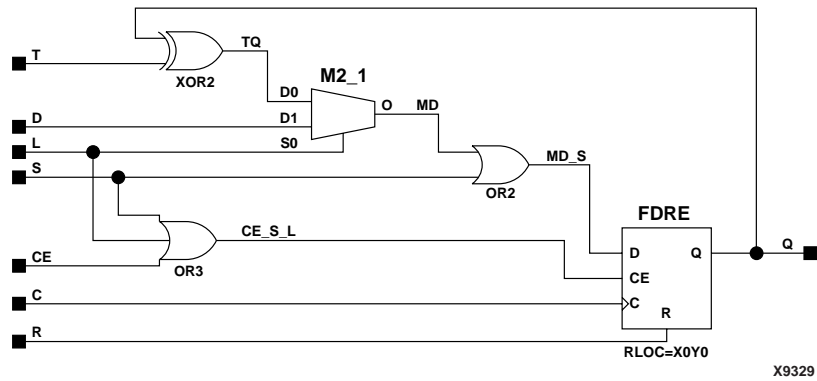

FTRSLE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

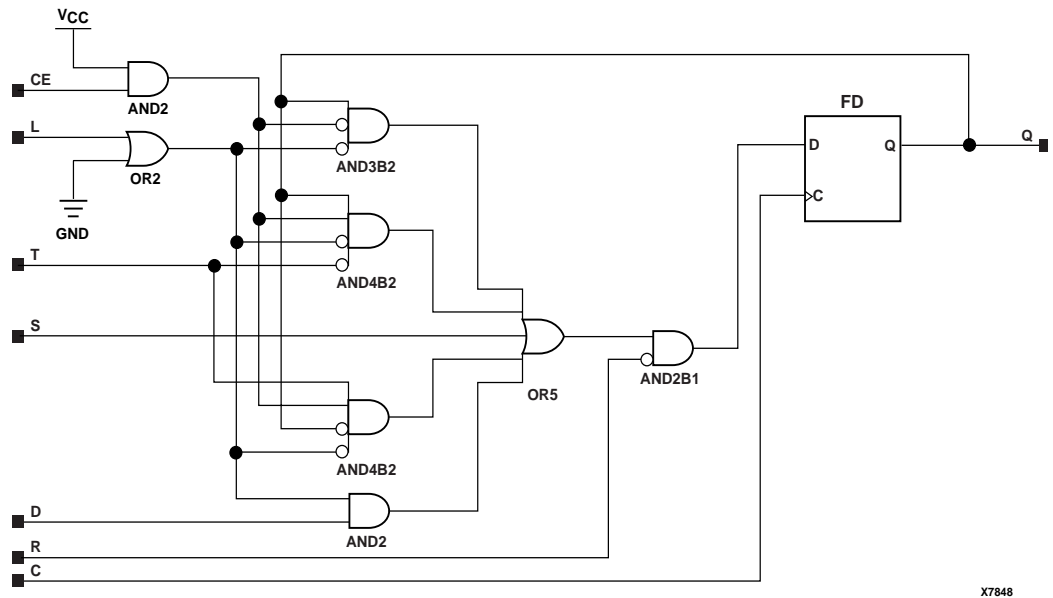

FTRSLE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II



## Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of ftrsle is

begin

process (C)
begin
    if (C'event and C='1') then
        if (R='1') then
            Q <= '0';
        elsif (S='1') then
            Q <= '1';
        elsif (L='1') then
            Q <= D;
        elsif (CE='1') then
            if (T='1') then
                Q <= not Q;
            end if;
        end if;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @(posedge C)
begin
    if (R)
        Q <= 0;
    else if (S)
        Q <= 1;
    else if (L)
        Q <= D;
    else if (CE)
        if (T)
            Q <= !Q;
        end if;
    end if;
end
```




# FTSRE

## Toggle Flip-Flop with Toggle and Clock Enable and Synchronous Set and Reset

### Architectures Supported

FTSRE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

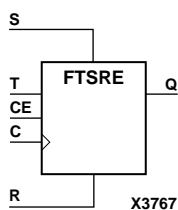

FTSRE is a toggle flip-flop with toggle and clock enable and synchronous set and reset. The synchronous set input, when High, overrides all other inputs and sets data output (Q) High. (Set has precedence over Reset.) When synchronous reset input (R) is High and S is Low, clock enable input (CE) is overridden and output Q is reset Low. When toggle enable input (T) and CE are High and S and R are Low, output Q toggles, or changes state, during the Low-to-High clock transition. When CE is Low, clock transitions are ignored.


The flip-flop is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol. FTSRE will set when GSR is active. For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the flip-flop is preset to active high when GSR is active.


Inputs					Outputs
S	R	CE	T	C	Q
1	X	X	X	↑	1
0	1	X	X	↑	0
0	0	0	X	X	No Chg
0	0	1	0	X	No Chg
0	0	1	1	↑	Toggle

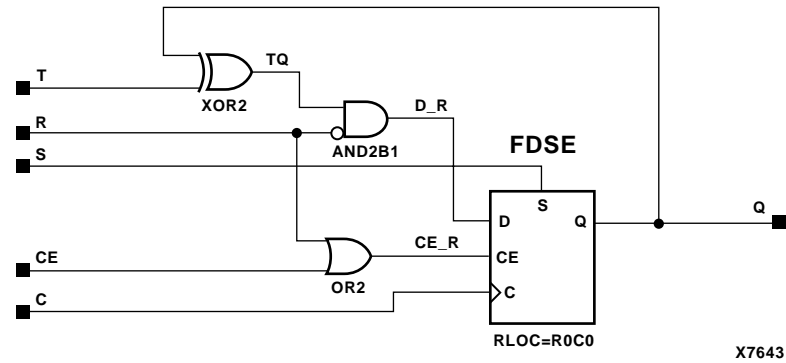

FTSRE Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

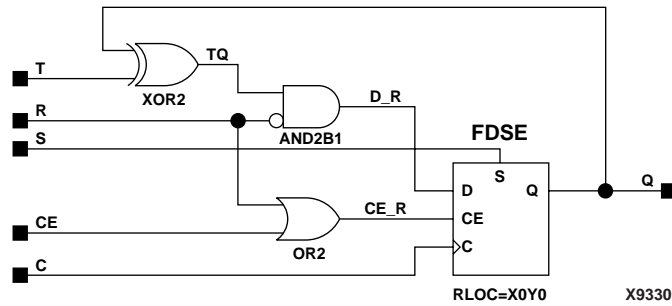

FTSRE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

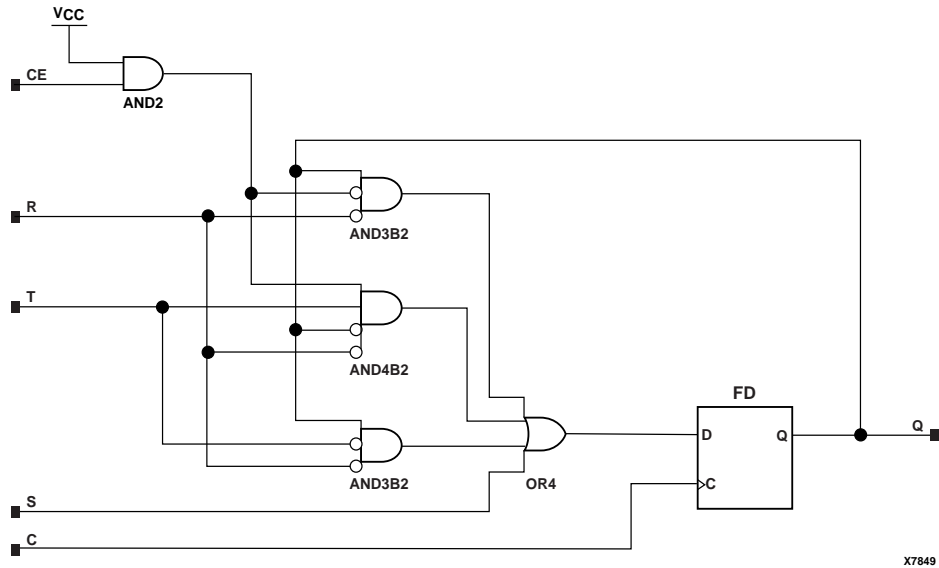

FTSRE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

### Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of ftsre is
begin
process (C)
begin
    if (C'event and C='1') then
        if (S='1') then
            Q <= '1';
        elsif (R='1') then
            Q <= '0';
        elsif (CE='1') then
            if (T='1') then
                Q <= not Q;
            end if;
        end if;
    end if;
end process;
end Behavioral;
```

## Verilog Inference Code

```
always @(posedge C)
begin
    if (S)
        Q <= 1;
    else if (R)
        Q <= 0;
    else if (CE)
        if (T)
            Q <= !Q;
end
```




# FTSRLE

## Toggle/Loadable Flip-Flop with Toggle and Clock Enable and Synchronous Set and Reset

### Architectures Supported

FTSRLE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

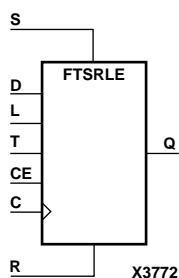

FTSRLE is a toggle/loadable flip-flop with toggle and clock enable and synchronous set and reset. The synchronous set input (S), when High, overrides all other inputs and sets data output (Q) High. (Set has precedence over Reset.) When synchronous reset (R) is High and S is Low, clock enable input (CE) is overridden and output Q is reset Low. When load enable input (L) is High and S and R are Low, CE is overridden and data on data input (D) is loaded into the flip-flop during the Low-to-High clock transition. When the toggle enable input (T) and CE are High and S, R, and L are Low, output Q toggles, or changes state, during the Low-to-High clock transition. When CE is Low, clock transitions are ignored.


For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the flip-flop is asynchronously preset when a High-level pulse is applied on the PRLD global net.

For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the flip-flop is asynchronously cleared, output Low, when global set/reset (GSR) is active.

The GSR active level defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol. FTSRLE will set when GSR is active. For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the flip-flop is preset to active high when GSR is active.


Inputs							Outputs
S	R	L	CE	T	D	C	Q
1	X	X	X	X	X	↑	1
0	1	X	X	X	X	↑	0
0	0	1	X	X	1	↑	1
0	0	1	X	X	0	↑	0
0	0	0	0	X	X	X	No Chg

Inputs							Outputs
S	R	L	CE	T	D	C	Q
0	0	0	1	0	X	X	No Chg
0	0	0	1	1	X	↑	Toggle

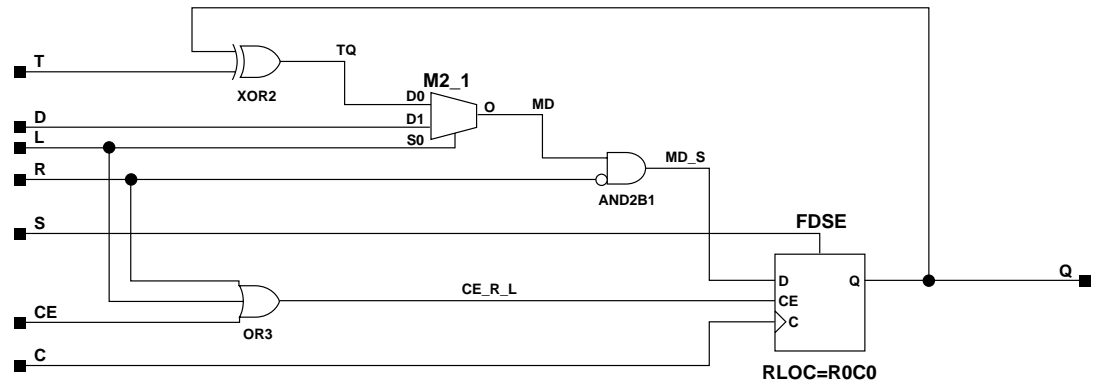

X7642


**FTSRLE Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E**

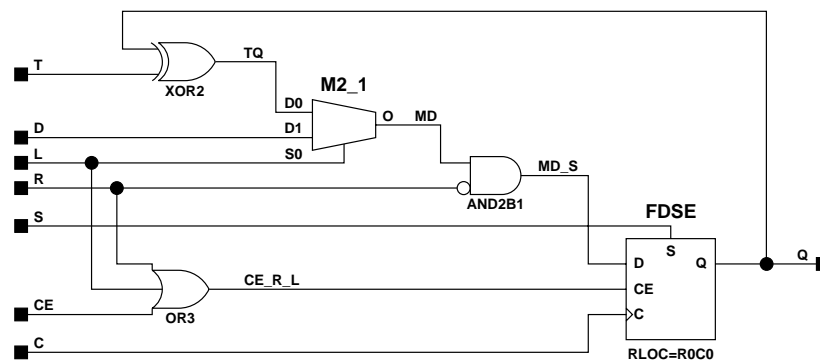

X9331

**FTSRLE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**



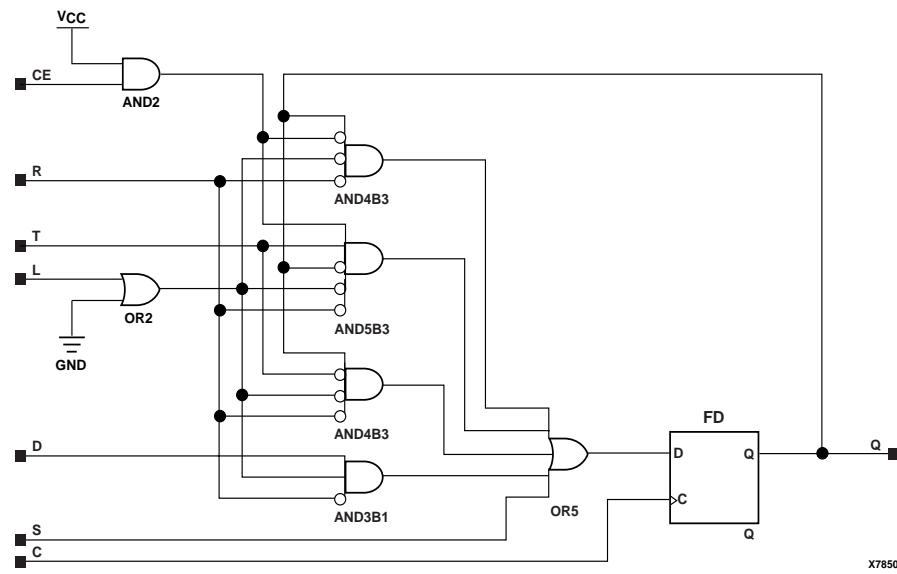

FTSRLE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

## Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of ftsrle is
begin
process (C)
begin
    if (C'event and C='1') then
        if (S='1') then
            Q <= '1';
        elsif (R='1') then
            Q <= '0';
        elsif (L='1') then
            Q <= D;
        elsif (CE='1') then
            if (T='1') then
                Q <= not Q;
            end if;
        end if;
    end if;
end process;
end Behavioral;
```

## Verilog Inference Code

```
always @(posedge C)
begin
    if (S)
        Q <= 1;
```

```
else if (R)
    Q <= 0;
else if (L)
    Q <= D;
else if (CE)
    if (T)
        Q <= !Q;
end
```

## GND

### Ground-Connection Signal Tag

#### Architectures Supported

GND	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No



X3858

The GND signal tag, or parameter, forces a net or input function to a Low logic level. A net tied to GND cannot have any other source.

When the logic-trimming software or fitter encounters a net or input function tied to GND, it removes any logic that is disabled by the GND signal. The GND signal is only implemented when the disabled logic cannot be removed.

#### Usage

For HDL, this design element can be instantiated or inferred.

#### VHDL Inference Code:

```
gnd_signal <= '0';
```

#### Verilog Inference Code:

```
assign gnd_signal = 0;
```

#### VHDL Instantiation Template

```
-- Component Declaration for GND should be placed
-- after architecture statement but before begin keyword

component GND
  port (G : out STD_ULOGIC);
end component;

-- Component Attribute specification for GND
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter constraints here

-- Component Instantiation for GND should be placed
-- in architecture after the begin keyword
```

```
GND_INSTANCE_NAME : GND  
    port map (G => user_G);
```

### Verilog Instantiation Template

```
GND GND_instance_name (.G (user_G));
```

### Commonly Used Constraints

None

## GT\_AURORA\_n

### Gigabit Transceiver for High-Speed I/O

#### Architectures Supported


GT_AURORA_n	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive*
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
*Supported for Virtex-II Pro but not for Virtex-II or Virtex-II Pro X.	

This Xilinx protocol gigabit transceiver supports 1, 2, and 4-byte data paths. The letter *n* represents number of bytes of the data path. Valid values are 1, 2 or 4.


You can also set attributes for the primitives. See the *RocketIO Transceiver User Guide* for a description of these attributes and their default attribute values.

The following figures list the input and output ports for all values of *n*. For a description of each of the ports, see the *RocketIO Transceiver User Guide*.


GT\_AURORA\_1

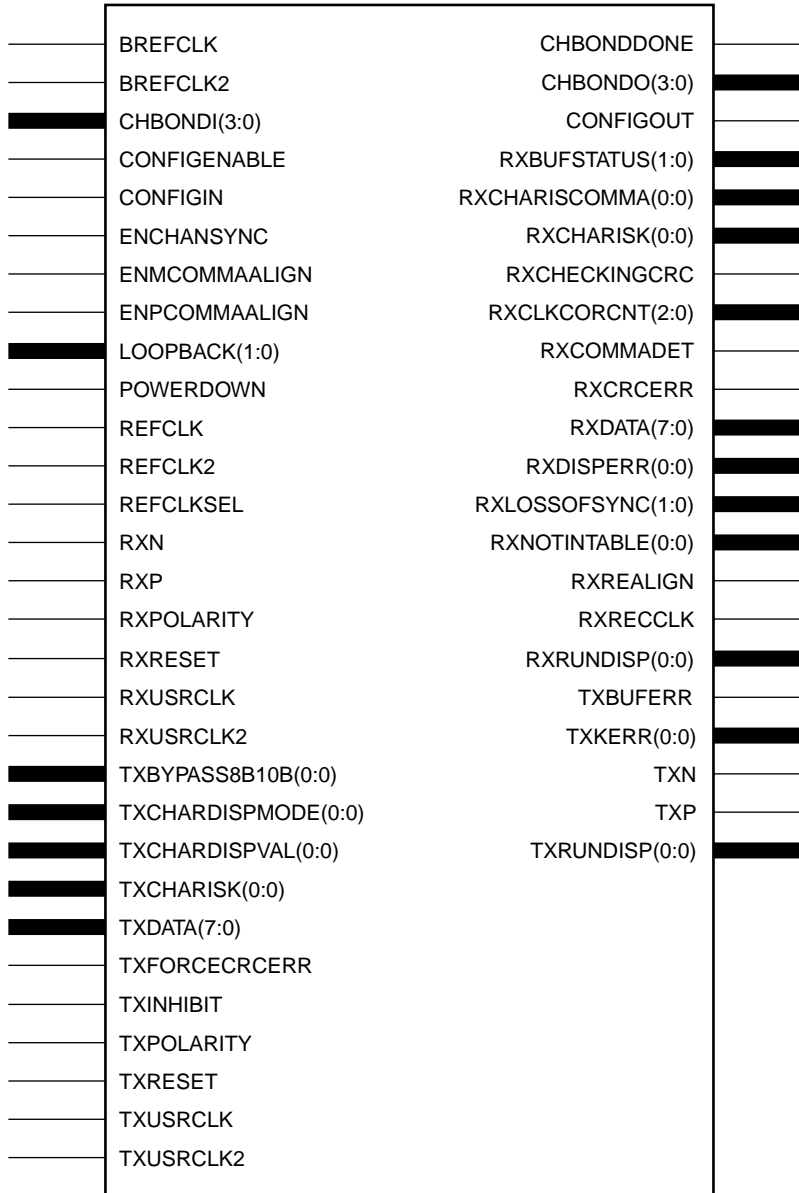

X9888

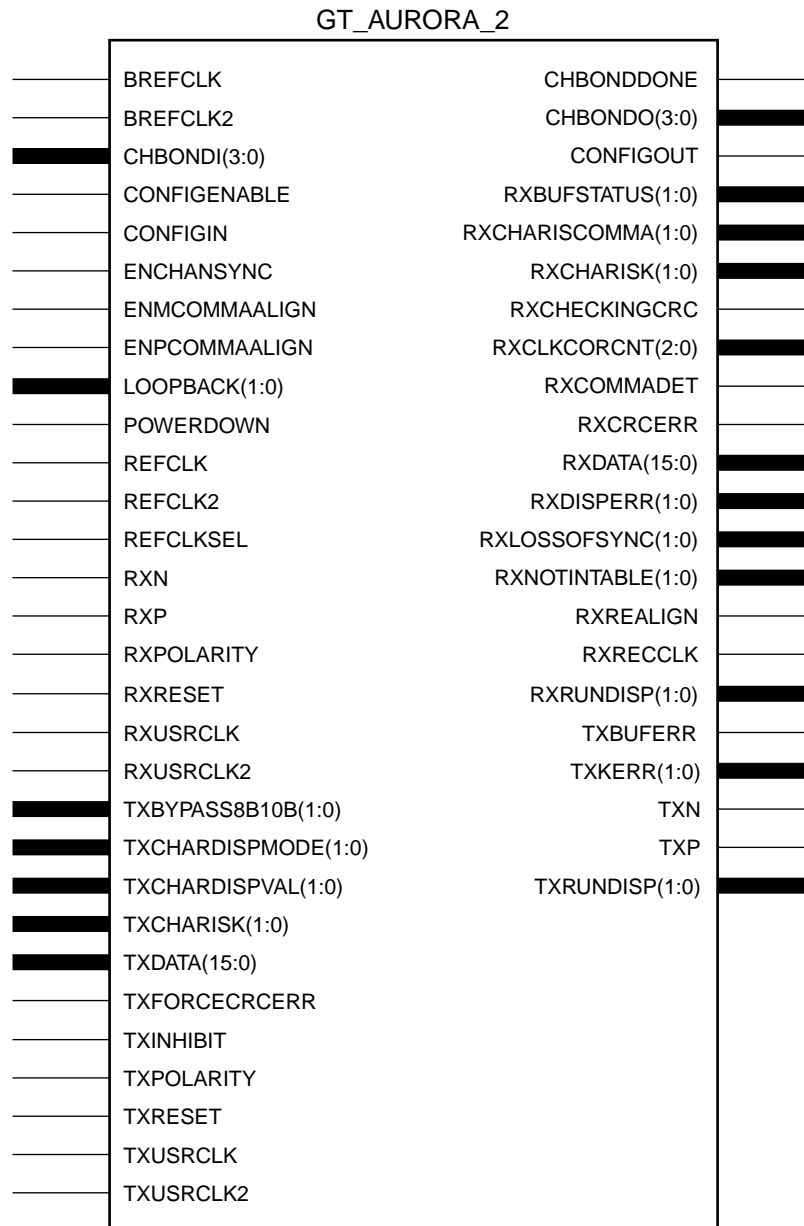

X9889

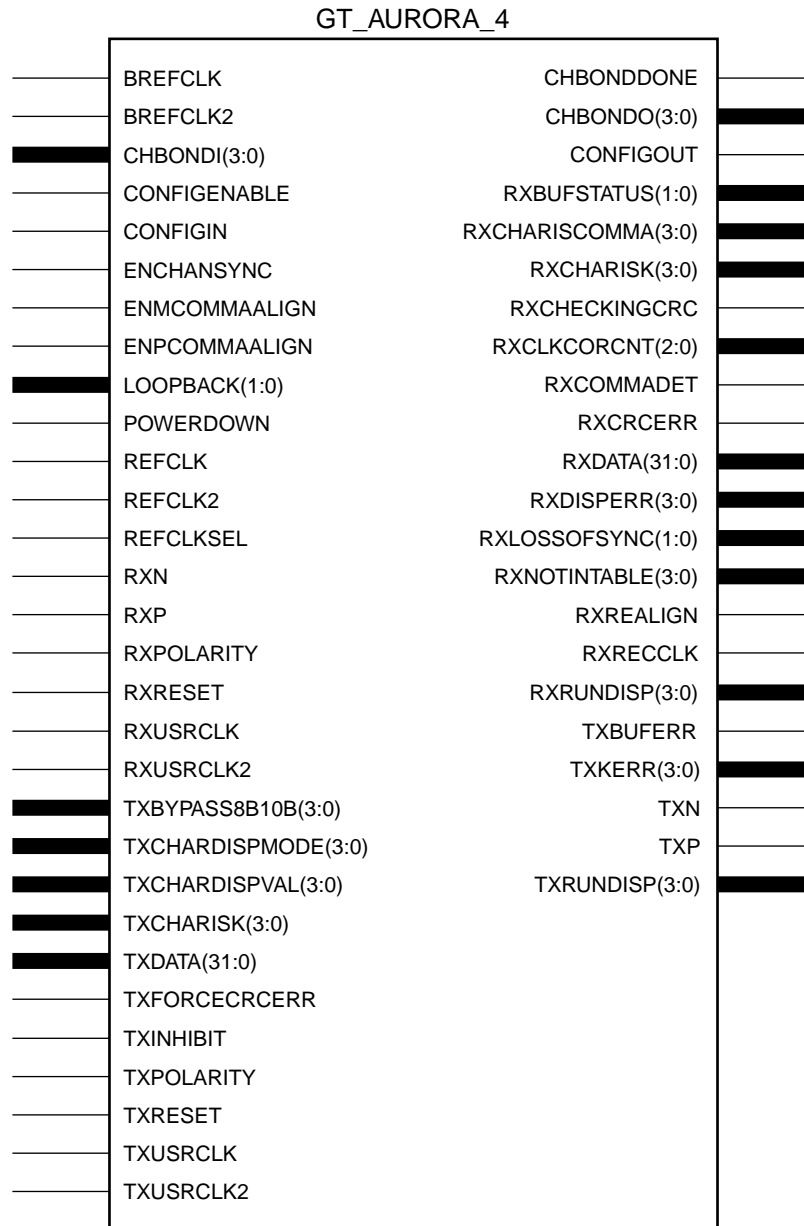

X9890

### Usage

This design element is instantiated rather than inferred in the design code.

### VHDL Instantiation Templates

#### GT\_AURORA\_1 VHDL Code

```
-- Component Attribute specification for GT_AURORA_1
-- should be placed after architecture declaration but
-- before the begin keyword
```



```

component GT_AURORA_1
-- synopsys translate_off
generic (
    ALIGN_COMMA_MSB                : boolean := FALSE;
    CHAN_BOND_LIMIT                 : integer := 16;
    CHAN_BOND_MODE                  : string  := "OFF";
    CHAN_BOND_OFFSET               : integer := 8;
    CHAN_BOND_ONE_SHOT             : boolean := FALSE;
    CHAN_BOND_SEQ_1_1              : bit_vector := "00101111100";
    CHAN_BOND_SEQ_1_2              : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_3              : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_4              : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_1              : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_2              : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_3              : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_4              : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_USE            : boolean := FALSE;
    CHAN_BOND_SEQ_LEN              : integer := 1;
    CHAN_BOND_WAIT                  : integer := 8;
    CLK_COR_INSERT_IDLE_FLAG       : boolean := FALSE;
    CLK_COR_KEEP_IDLE              : boolean := FALSE;
    CLK_COR_REPEAT_WAIT            : integer := 1;
    CLK_COR_SEQ_1_1                : bit_vector := "00111110111";
    CLK_COR_SEQ_1_2                : bit_vector := "00000000000";
    CLK_COR_SEQ_1_3                : bit_vector := "00000000000";
    CLK_COR_SEQ_1_4                : bit_vector := "00000000000";
    CLK_COR_SEQ_2_1                : bit_vector := "00000000000";
    CLK_COR_SEQ_2_2                : bit_vector := "00000000000";
    CLK_COR_SEQ_2_3                : bit_vector := "00000000000";
    CLK_COR_SEQ_2_4                : bit_vector := "00000000000";
    CLK_COR_SEQ_2_USE              : boolean := FALSE;
    CLK_COR_SEQ_LEN                : integer := 1;
    CLK_CORRECT_USE                : boolean := TRUE;
    COMMA_10B_MASK                 : bit_vector := "1111111111";
    CRC_END_OF_PKT                 : string := "K29_7";
    CRC_FORMAT                      : string := "USER_MODE";
    CRC_START_OF_PKT               : string := "K27_7";
    DEC_MCOMMA_DETECT              : boolean := TRUE;
    DEC_PCOMMA_DETECT              : boolean := TRUE;
    DEC_VALID_COMMA_ONLY           : boolean := TRUE;
    MCOMMA_10B_VALUE               : bit_vector := "1100000101";
    MCOMMA_DETECT                  : boolean := TRUE;
    PCOMMA_10B_VALUE               : bit_vector := "0011111010";
    PCOMMA_DETECT                  : boolean := TRUE;
    REF_CLK_V_SEL                  : integer := 0;
    RX_BUFFER_USE                   : boolean := TRUE;
    RX_CRC_USE                      : boolean := FALSE;
    RX_DATA_WIDTH                   : integer := 1;
    RX_DECODE_USE                   : boolean := TRUE;
    RX_LOS_INVALID_INCR            : integer := 1;
    RX_LOS_THRESHOLD                : integer := 4;
    RX_LOSS_OF_SYNC_FSM            : boolean := TRUE;
    SERDES_10B                     : boolean := FALSE;
    TERMINATION_IMP                 : integer := 50;
    TX_BUFFER_USE                   : boolean := TRUE;
    TX_CRC_FORCE_VALUE             : bit_vector := "11010110";
    TX_CRC_USE                      : boolean := FALSE;
    TX_DATA_WIDTH                   : integer := 1;

```

```

TX_DIFF_CTRL           : integer := 500;
TX_PREEMPHASIS        : integer := 0);

-- synopsys translate_on
port (
  CHBONDDONE           : out std_ulogic;
  CHBONDO              : out std_logic_vector(3 downto 0);
  CONFIGOUT           : out std_ulogic;
  RXBUFSTATUS         : out std_logic_vector(1 downto 0);
  RXCHARISCOMMA       : out std_logic_vector(0 downto 0);
  RXCHARISK           : out std_logic_vector(0 downto 0);
  RXCHECKINGCRC       : out std_ulogic;
  RXCLKCORCNT         : out std_logic_vector(2 downto 0);
  RXCOMMADET          : out std_ulogic;
  RXCRCERR            : out std_ulogic;
  RXDATA              : out std_logic_vector(7 downto 0);
  RXDISPERR           : out std_logic_vector(0 downto 0);
  RXLOSSOFSYNC        : out std_logic_vector(1 downto 0);
  RXNOTINTABLE        : out std_logic_vector(0 downto 0);
  RXREALIGN           : out std_ulogic;
  RXRECCLK            : out std_ulogic;
  RXRUNDISP           : out std_logic_vector(0 downto 0);
  TXBUFERR            : out std_ulogic;
  TXKERR              : out std_logic_vector(0 downto 0);
  TXN                  : out std_ulogic;
  TXP                  : out std_ulogic;
  TXRUNDISP           : out std_logic_vector(0 downto 0);
  BREFCLK              : in std_ulogic := 'X';
  BREFCLK2            : in std_ulogic := 'X';
  CHBONDI             : in std_logic_vector(3 downto 0);
  CONFIGENABLE        : in std_ulogic;
  CONFIGIN            : in std_ulogic;
  ENCHANSYNC          : in std_ulogic;
  ENMCOMMAALIGN       : in std_ulogic;
  ENPCOMMAALIGN       : in std_ulogic;
  LOOPBACK            : in std_logic_vector(1 downto 0);
  POWERDOWN           : in std_ulogic;
  REFCLK              : in std_ulogic;
  REFCLK2             : in std_ulogic;
  REFCLKSEL           : in std_ulogic;
  RXN                  : in std_ulogic;
  RXP                  : in std_ulogic;
  RXPOLARITY          : in std_ulogic;
  RXRESET             : in std_ulogic;
  RXUSRCLK            : in std_ulogic;
  RXUSRCLK2           : in std_ulogic;
  TXBYPASS8B10B       : in std_logic_vector(0 downto 0);
  TXCHARDISPMODE      : in std_logic_vector(0 downto 0);
  TXCHARDISPVAL       : in std_logic_vector(0 downto 0);
  TXCHARISK           : in std_logic_vector(0 downto 0);
  TXDATA              : in std_logic_vector(7 downto 0);
  TXFORCECRCERR       : in std_ulogic;
  TXINHIBIT           : in std_ulogic;
  TXPOLARITY          : in std_ulogic;
  TXRESET             : in std_ulogic;
  TXUSRCLK            : in std_ulogic;
  TXUSRCLK2           : in std_ulogic);

```

```

end component ;

-- Component Attribute specification for GT_AURORA_1
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter constraints here

-- Component Instantiation for GT_AURORA_1 should be placed
-- in architecture after the begin keyword

GT_AURORA_1_INSTANCE_NAME : GT_AURORA_1
-- synopsys translate_off
generic map (
    ALIGN_COMMA_MSB           => boolean_value,
    CHAN_BOND_LIMIT           => integer_value,
    CHAN_BOND_MODE             => string_value,
    CHAN_BOND_OFFSET          => integer_value,
    CHAN_BOND_ONE_SHOT        => boolean_value,
    CHAN_BOND_SEQ_1_1         => bit_value,
    CHAN_BOND_SEQ_1_2         => bit_value,
    CHAN_BOND_SEQ_1_3         => bit_value,
    CHAN_BOND_SEQ_1_4         => bit_value,
    CHAN_BOND_SEQ_2_1         => bit_value,
    CHAN_BOND_SEQ_2_2         => bit_value,
    CHAN_BOND_SEQ_2_3         => bit_value,
    CHAN_BOND_SEQ_2_4         => bit_value,
    CHAN_BOND_SEQ_2_USE       => boolean_value,
    CHAN_BOND_SEQ_LEN         => integer_value,
    CHAN_BOND_WAIT            => integer_value,
    CLK_COR_INSERT_IDLE_FLAG  => boolean_value,
    CLK_COR_KEEP_IDLE         => boolean_value,
    CLK_COR_REPEAT_WAIT       => integer_value,
    CLK_COR_SEQ_1_1           => bit_value,
    CLK_COR_SEQ_1_2           => bit_value,
    CLK_COR_SEQ_1_3           => bit_value,
    CLK_COR_SEQ_1_4           => bit_value,
    CLK_COR_SEQ_2_1           => bit_value,
    CLK_COR_SEQ_2_2           => bit_value,
    CLK_COR_SEQ_2_3           => bit_value,
    CLK_COR_SEQ_2_4           => bit_value,
    CLK_COR_SEQ_2_USE         => boolean_value,
    CLK_COR_SEQ_LEN           => integer_value,
    CLK_CORRECT_USE           => boolean_value,
    COMMA_10B_MASK            => bit_value,
    CRC_END_OF_PKT            => string_value,
    CRC_FORMAT                 => string_value,
    CRC_START_OF_PKT          => string_value,
    DEC_MCOMMA_DETECT         => boolean_value,
    DEC_PCOMMA_DETECT         => boolean_value,
    DEC_INVALID_COMMA_ONLY    => boolean_value,
    MCOMMA_10B_VALUE          => bit_value,
    MCOMMA_DETECT             => boolean_value,
    PCOMMA_10B_VALUE          => bit_value,
    PCOMMA_DETECT             => boolean_value,
    REF_CLK_V_SEL             => integer_value,
    RX_BUFFER_USE             => boolean_value,
    RX_CRC_USE                 => boolean_value,

```

```

RX_DATA_WIDTH           => integer_value,
RX_DECODE_USE          => boolean_value,
RX_LOS_INVALID_INCR    => integer_value,
RX_LOS_THRESHOLD       => integer_value,
RX_LOSS_OF_SYNC_FSM   => boolean_value,
SERDES_10B             => boolean_value,
TERMINATION_IMP        => integer_value,
TX_BUFFER_USE          => boolean_value,
TX_CRC_FORCE_VALUE     => bit_value,
TX_CRC_USE             => boolean_value,
TX_DATA_WIDTH          => integer_value,
TX_DIFF_CTRL           => integer_value,
TX_PREEMPHASIS        => integer_value)

-- synopsys translate_on
port map (
  CHBONDDONE            => user_CHBONDDONE,
  CHBONDO               => user_CHBONDO,
  CONFIGOUT             => user_CONFIGOUT,
  RXBUFSTATUS           => user_RXBUFSTATUS,
  RXCHARISCOMMA        => user_RXCHARISCOMMA,
  RXCHARISK             => user_RXCHARISK,
  RXCHECKINGCRC        => user_RXCHECKINGCRC,
  RXCLKCORCNT          => user_RXCLKCORCNT,
  RXCOMMADET           => user_RXCOMMADET,
  RXCRCERR              => user_RXCRCERR,
  RXDATA                => user_RXDATA,
  RXDISPERR            => user_RXDISPERR,
  RXLOSSOFSYNC         => user_RXLOSSOFSYNC,
  RXNOTINTABLE         => user_RXNOTINTABLE,
  RXREALIGN            => user_RXREALIGN,
  RXRECCLK             => user_RXRECCLK,
  RXRUNDISP            => user_RXRUNDISP,
  TXBUFERR             => user_TXBUFERR,
  TXKERR               => user_TXKERR,
  TXN                  => user_TXN,
  TXP                  => user_TXP,
  TXRUNDISP            => user_TXRUNDISP,
  BREFCLK              => user_BREFCLK,
  BREFCLK2             => user_BREFCLK2,
  CHBONDI              => user_CHBONDI,
  CONFIGENABLE        => user_CONFIGENABLE,
  CONFIGIN             => user_CONFIGIN,
  ENCHANSYNC           => user_ENCHANSYNC,
  ENMCOMMAALIGN       => user_ENMCOMMAALIGN,
  ENPCOMMAALIGN       => user_ENPCOMMAALIGN,
  LOOPBACK            => user_LOOPBACK,
  POWERDOWN           => user_POWERDOWN,
  REFCLK               => user_REFCLK,
  REFCLK2              => user_REFCLK2,
  REFCLKSEL           => user_REFCLKSEL,
  RXN                  => user_RXN,
  RXP                  => user_RXP,
  RXPOLARITY          => user_RXPOLARITY,
  RXRESET              => user_RXRESET,
  RXUSRCLK             => user_RXUSRCLK,
  RXUSRCLK2           => user_RXUSRCLK2,
  TXBYPASS8B10B      => user_TXBYPASS8B10B,

```

```

TXCHARDISPMODE      => user_TXCHARDISPMODE,
TXCHARDISPVAL       => user_TXCHARDISPVAL,
TXCHARISK           => user_TXCHARISK,
TXDATA              => user_TXDATA,
TXFORCECRCERR      => user_TXFORCECRCERR,
TXINHIBIT           => user_TXINHIBIT,
TXPOLARITY          => user_TXPOLARITY,
TXRESET             => user_TXRESET,
TXUSRCLK            => user_TXUSRCLK,
TXUSRCLK2           => user_TXUSRCLK2);

```

## GT\_AURORA\_2 VHDL Code

```

-- Component Attribute specification for GT_AURORA_2
-- should be placed after architecture declaration but
-- before the begin keyword

component GT_AURORA_2
-- synopsys translate_off
generic (
    ALIGN_COMMA_MSB          : boolean := FALSE;
    CHAN_BOND_LIMIT          : integer := 16;
    CHAN_BOND_MODE           : string  := "OFF";
    CHAN_BOND_OFFSET        : integer := 8;
    CHAN_BOND_ONE_SHOT      : boolean := FALSE;
    CHAN_BOND_SEQ_1_1       : bit_vector := "00101111100";
    CHAN_BOND_SEQ_1_2       : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_3       : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_4       : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_1       : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_2       : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_3       : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_4       : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_USE     : boolean := FALSE;
    CHAN_BOND_SEQ_LEN       : integer := 1;
    CHAN_BOND_WAIT          : integer := 8;
    CLK_COR_INSERT_IDLE_FLAG : boolean := FALSE;
    CLK_COR_KEEP_IDLE       : boolean := FALSE;
    CLK_COR_REPEAT_WAIT     : integer := 1;
    CLK_COR_SEQ_1_1         : bit_vector := "00111110111";
    CLK_COR_SEQ_1_2         : bit_vector := "00111110111";
    CLK_COR_SEQ_1_3         : bit_vector := "00000000000";
    CLK_COR_SEQ_1_4         : bit_vector := "00000000000";
    CLK_COR_SEQ_2_1         : bit_vector := "00000000000";
    CLK_COR_SEQ_2_2         : bit_vector := "00000000000";
    CLK_COR_SEQ_2_3         : bit_vector := "00000000000";
    CLK_COR_SEQ_2_4         : bit_vector := "00000000000";
    CLK_COR_SEQ_2_USE       : boolean := FALSE;
    CLK_COR_SEQ_LEN         : integer := 2;
    CLK_CORRECT_USE         : boolean := TRUE;
    COMMA_10B_MASK          : bit_vector := "1111111111";
    CRC_END_OF_PKT          : string    := "K29_7";
    CRC_FORMAT               : string    := "USER_MODE";
    CRC_START_OF_PKT        : string    := "K27_7";
    DEC_MCOMMA_DETECT       : boolean := TRUE;
    DEC_PCOMMA_DETECT       : boolean := TRUE;
    DEC_VALID_COMMA_ONLY    : boolean := TRUE;
    MCOMMA_10B_VALUE        : bit_vector := "1100000101";

```

```

MCOMMA_DETECT                : boolean := TRUE;
PCOMMA_10B_VALUE             : bit_vector := "0011111010";
PCOMMA_DETECT                : boolean := TRUE;
REF_CLK_V_SEL                : integer := 0;
RX_BUFFER_USE                : boolean := TRUE;
RX_CRC_USE                   : boolean := FALSE;
RX_DATA_WIDTH                : integer := 2;
RX_DECODE_USE                : boolean := TRUE;
RX_LOS_INVALID_INCR         : integer := 1;
RX_LOS_THRESHOLD             : integer := 4;
RX_LOSS_OF_SYNC_FSM         : boolean := TRUE;
SERDES_10B                   : boolean := FALSE;
TERMINATION_IMP              : integer := 50;
TX_BUFFER_USE                : boolean := TRUE;
TX_CRC_FORCE_VALUE          : bit_vector := "11010110";
TX_CRC_USE                   : boolean := FALSE;
TX_DATA_WIDTH                : integer := 2;
TX_DIFF_CTRL                 : integer := 500;
TX_PREEMPHASIS              : integer := 0);

-- synopsys translate_on
port (
    CHBONDDONE                : out std_ulogic;
    CHBONDO                    : out std_logic_vector(3 downto 0);
    CONFIGOUT                  : out std_ulogic;
    RXBUFSTATUS                : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA              : out std_logic_vector(1 downto 0);
    RXCHARISK                  : out std_logic_vector(1 downto 0);
    RXCHECKINGCRC              : out std_ulogic;
    RXCLKCORCNT                : out std_logic_vector(2 downto 0);
    RXCOMMADET                 : out std_ulogic;
    RXCRCERR                   : out std_ulogic;
    RXDATA                     : out std_logic_vector(15 downto 0);
    RXDISPERR                  : out std_logic_vector(1 downto 0);
    RXLOSSOFSYNC               : out std_logic_vector(1 downto 0);
    RXNOTINTABLE               : out std_logic_vector(1 downto 0);
    RXREALIGN                  : out std_ulogic;
    RXRECCLK                   : out std_ulogic;
    RXRUNDISP                  : out std_logic_vector(1 downto 0);
    TXBUFERR                   : out std_ulogic;
    TXKERR                     : out std_logic_vector(1 downto 0);
    TXN                         : out std_ulogic;
    TXP                         : out std_ulogic;
    TXRUNDISP                  : out std_logic_vector(1 downto 0);
    BREFCLK                    : in std_ulogic := 'X';
    BREFCLK2                   : in std_ulogic := 'X';
    CHBONDI                    : in std_logic_vector(3 downto 0);
    CONFIGENABLE               : in std_ulogic;
    CONFIGIN                   : in std_ulogic;
    ENCHANSYNC                 : in std_ulogic;
    ENMCOMMAALIGN              : in std_ulogic;
    ENPCOMMAALIGN              : in std_ulogic;
    LOOPBACK                   : in std_logic_vector(1 downto 0);
    POWERDOWN                  : in std_ulogic;
    REFCLK                     : in std_ulogic;
    REFCLK2                    : in std_ulogic;
    REFCLKSEL                  : in std_ulogic;
    RXN                         : in std_ulogic;

```

```

RXP                                : in std_ulogic;
RXPOLARITY                         : in std_ulogic;
RXRESET                             : in std_ulogic;
RXUSRCLK                            : in std_ulogic;
RXUSRCLK2                           : in std_ulogic;
TXBYPASS8B10B                      : in std_logic_vector(1 downto 0);
TXCHARDISPMODE                     : in std_logic_vector(1 downto 0);
TXCHARDISPVAL                       : in std_logic_vector(1 downto 0);
TXCHARISK                           : in std_logic_vector(1 downto 0);
TXDATA                              : in std_logic_vector(15 downto 0);
TXFORCECERR                         : in std_ulogic;
TXINHIBIT                           : in std_ulogic;
TXPOLARITY                          : in std_ulogic;
TXRESET                             : in std_ulogic;
TXUSRCLK                            : in std_ulogic;
TXUSRCLK2                           : in std_ulogic);

```

```
end component;
```

```

-- Component Attribute specification for GT_AURORA_2
-- should be placed after architecture declaration but
-- before the begin keyword

```

```
-- Enter constraints here
```

```

-- Component Instantiation for GT_AURORA_2 should be placed
-- in architecture after the begin keyword

```

```
GT_AURORA_2_INSTANCE_NAME : GT_AURORA_2
```

```
-- synopsys translate_off
```

```
generic map (
```

```

ALIGN_COMMA_MSB                    => boolean_value,
CHAN_BOND_LIMIT                    => integer_value,
CHAN_BOND_MODE                     => string_value,
CHAN_BOND_OFFSET                   => integer_value,
CHAN_BOND_ONE_SHOT                 => boolean_value,
CHAN_BOND_SEQ_1_1                   => bit_value,
CHAN_BOND_SEQ_1_2                   => bit_value,
CHAN_BOND_SEQ_1_3                   => bit_value,
CHAN_BOND_SEQ_1_4                   => bit_value,
CHAN_BOND_SEQ_2_1                   => bit_value,
CHAN_BOND_SEQ_2_2                   => bit_value,
CHAN_BOND_SEQ_2_3                   => bit_value,
CHAN_BOND_SEQ_2_4                   => bit_value,
CHAN_BOND_SEQ_2_USE                 => boolean_value,
CHAN_BOND_SEQ_LEN                   => integer_value,
CHAN_BOND_WAIT                      => integer_value,
CLK_COR_INSERT_IDLE_FLAG            => boolean_value,
CLK_COR_KEEP_IDLE                   => boolean_value,
CLK_COR_REPEAT_WAIT                 => integer_value,
CLK_COR_SEQ_1_1                     => bit_value,
CLK_COR_SEQ_1_2                     => bit_value,
CLK_COR_SEQ_1_3                     => bit_value,
CLK_COR_SEQ_1_4                     => bit_value,
CLK_COR_SEQ_2_1                     => bit_value,
CLK_COR_SEQ_2_2                     => bit_value,
CLK_COR_SEQ_2_3                     => bit_value,
CLK_COR_SEQ_2_4                     => bit_value,

```

```

CLK_COR_SEQ_2_USE          => boolean_value,
CLK_COR_SEQ_LEN           => integer_value,
CLK_CORRECT_USE           => boolean_value,
COMMA_10B_MASK            => bit_value,
CRC_END_OF_PKT            => string_value,
CRC_FORMAT                 => string_value,
CRC_START_OF_PKT          => string_value,
DEC_MCOMMA_DETECT         => boolean_value,
DEC_PCOMMA_DETECT         => boolean_value,
DEC_VALID_COMMA_ONLY     => boolean_value,
MCOMMA_10B_VALUE         => bit_value,
MCOMMA_DETECT             => boolean_value,
PCOMMA_10B_VALUE         => bit_value,
PCOMMA_DETECT             => boolean_value,
REF_CLK_V_SEL             => integer_value,
RX_BUFFER_USE             => boolean_value,
RX_CRC_USE                 => boolean_value,
RX_DATA_WIDTH             => integer_value,
RX_DECODE_USE             => boolean_value,
RX_LOS_INVALID_INCR      => integer_value,
RX_LOS_THRESHOLD         => integer_value,
RX_LOSS_OF_SYNC_FSM     => boolean_value,
SERDES_10B                => boolean_value,
TERMINATION_IMP          => integer_value,
TX_BUFFER_USE             => boolean_value,
TX_CRC_FORCE_VALUE       => bit_value,
TX_CRC_USE                 => boolean_value,
TX_DATA_WIDTH             => integer_value,
TX_DIFF_CTRL              => integer_value,
TX_PREEMPHASIS           => integer_value)

-- synopsys translate_on
port map (
  CHBONDDONE              => user_CHBONDDONE,
  CHBONDO                  => user_CHBONDO,
  CONFIGOUT                => user_CONFIGOUT,
  RXBUFSTATUS              => user_RXBUFSTATUS,
  RXCHARISCOMMA            => user_RXCHARISCOMMA,
  RXCHARISK                 => user_RXCHARISK,
  RXCHECKINGCRC            => user_RXCHECKINGCRC,
  RXCLKCORCNT              => user_RXCLKCORCNT,
  RXCOMMADET               => user_RXCOMMADET,
  RXCRCERR                  => user_RXCRCERR,
  RXDATA                    => user_RXDATA,
  RXDISPERR                 => user_RXDISPERR,
  RXLOSSOFSYNC             => user_RXLOSSOFSYNC,
  RXNOTINTABLE             => user_RXNOTINTABLE,
  RXREALIGN                 => user_RXREALIGN,
  RXRECCLK                  => user_RXRECCLK,
  RXRUNDISP                 => user_RXRUNDISP,
  TXBUFERR                  => user_TXBUFERR,
  TXKERR                    => user_TXKERR,
  TXN                       => user_TXN,
  TXP                       => user_TXP,
  TXRUNDISP                 => user_TXRUNDISP,
  BREFCLK                   => user_BREFCLK,
  BREFCLK2                  => user_BREFCLK2,
  CHBONDI                   => user_CHBONDI,

```



```

CONFIGENABLE           => user_CONFIGENABLE,
CONFIGIN               => user_CONFIGIN,
ENCHANSYNC            => user_ENCHANSYNC,
ENMCOMMAALIGN         => user_ENMCOMMAALIGN,
ENPCOMMAALIGN         => user_ENPCOMMAALIGN,
LOOPBACK              => user_LOOPBACK,
POWERDOWN             => user_POWERDOWN,
REFCLK                => user_REFCLK,
REFCLK2               => user_REFCLK2,
REFCLKSEL             => user_REFCLKSEL,
RXN                   => user_RXN,
RXP                   => user_RXP,
RXPOLARITY            => user_RXPOLARITY,
RXRESET              => user_RXRESET,
RXUSRCLK              => user_RXUSRCLK,
RXUSRCLK2             => user_RXUSRCLK2,
TXBYPASS8B10B        => user_TXBYPASS8B10B,
TXCHARDISPMODE       => user_TXCHARDISPMODE,
TXCHARDISPVAL        => user_TXCHARDISPVAL,
TXCHARISK            => user_TXCHARISK,
TXDATA               => user_TXDATA,
TXFORCECERCERR       => user_TXFORCECERCERR,
TXINHIBIT            => user_TXINHIBIT,
TXPOLARITY           => user_TXPOLARITY,
TXRESET              => user_TXRESET,
TXUSRCLK             => user_TXUSRCLK,
TXUSRCLK2            => user_TXUSRCLK2;

```

## GT\_AURORA\_4 VHDL Code

```

-- Component Attribute specification for GT_AURORA_4
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

component GT_AURORA_4
-- synopsis translate_off
generic (
    ALIGN_COMMA_MSB           : boolean := FALSE;
    CHAN_BOND_LIMIT           : integer := 16;
    CHAN_BOND_MODE             : string := "OFF";
    CHAN_BOND_OFFSET          : integer := 8;
    CHAN_BOND_ONE_SHOT        : boolean := FALSE;
    CHAN_BOND_SEQ_1_1         : bit_vector := "001011111100";
    CHAN_BOND_SEQ_1_2         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_3         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_4         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_1         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_2         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_3         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_4         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_USE       : boolean := FALSE;
    CHAN_BOND_SEQ_LEN         : integer := 1;
    CHAN_BOND_WAIT            : integer := 8;
    CLK_COR_INSERT_IDLE_FLAG  : boolean := FALSE;
    CLK_COR_KEEP_IDLE         : boolean := FALSE;
    CLK_COR_REPEAT_WAIT       : integer := 1;
    CLK_COR_SEQ_1_1           : bit_vector := "00111110111";
    CLK_COR_SEQ_1_2           : bit_vector := "00111110111";

```

```

CLK_COR_SEQ_1_3          : bit_vector := "00111110111";
CLK_COR_SEQ_1_4          : bit_vector := "00111110111";
CLK_COR_SEQ_2_1          : bit_vector := "00000000000";
CLK_COR_SEQ_2_2          : bit_vector := "00000000000";
CLK_COR_SEQ_2_3          : bit_vector := "00000000000";
CLK_COR_SEQ_2_4          : bit_vector := "00000000000";
CLK_COR_SEQ_2_USE        : boolean := FALSE;
CLK_COR_SEQ_LEN          : integer := 4;
CLK_CORRECT_USE          : boolean := TRUE;
COMMA_10B_MASK           : bit_vector := "1111111111";
CRC_END_OF_PKT           : string := "K29_7";
CRC_FORMAT                : string := "USER_MODE";
CRC_START_OF_PKT         : string := "K27_7";
DEC_MCOMMA_DETECT        : boolean := TRUE;
DEC_PCOMMA_DETECT        : boolean := TRUE;
DEC_VALID_COMMA_ONLY     : boolean := TRUE;
MCOMMA_10B_VALUE         : bit_vector := "1100000101";
MCOMMA_DETECT            : boolean := TRUE;
PCOMMA_10B_VALUE         : bit_vector := "0011111010";
PCOMMA_DETECT            : boolean := TRUE;
REF_CLK_V_SEL            : integer := 0;
RX_BUFFER_USE            : boolean := TRUE;
RX_CRC_USE               : boolean := FALSE;
RX_DATA_WIDTH            : integer := 4;
RX_DECODE_USE            : boolean := TRUE;
RX_LOS_INVALID_INCR      : integer := 1;
RX_LOS_THRESHOLD         : integer := 4;
RX_LOSS_OF_SYNC_FSM      : boolean := TRUE;
SERDES_10B               : boolean := FALSE;
TERMINATION_IMP          : integer := 50;
TX_BUFFER_USE            : boolean := TRUE;
TX_CRC_FORCE_VALUE       : bit_vector := "11010110";
TX_CRC_USE               : boolean := FALSE;
TX_DATA_WIDTH            : integer := 4;
TX_DIFF_CTRL             : integer := 500;
TX_PREEMPHASIS           : integer := 0);

-- synopsys translate_on
port (
    CHBONDDONE             : out std_ulogic;
    CHBONDO                : out std_logic_vector(3 downto 0);
    CONFIGOUT              : out std_ulogic;
    RXBUFSTATUS            : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA          : out std_logic_vector(3 downto 0);
    RXCHARISK              : out std_logic_vector(3 downto 0);
    RXCHECKINGCRC          : out std_ulogic;
    RXCLKCORCNT            : out std_logic_vector(2 downto 0);
    RXCOMMADET             : out std_ulogic;
    RXCRCERR               : out std_ulogic;
    RXDATA                 : out std_logic_vector(31 downto 0);
    RXDISPERR              : out std_logic_vector(3 downto 0);
    RXLOSSOFSYNC           : out std_logic_vector(1 downto 0);
    RXNOTINTABLE           : out std_logic_vector(3 downto 0);
    RXREALIGN              : out std_ulogic;
    RXRECCLK               : out std_ulogic;
    RXRUNDISP              : out std_logic_vector(3 downto 0);
    TXBUFERR               : out std_ulogic;
    TXKERR                 : out std_logic_vector(3 downto 0);

```

```

TXN                : out std_ulogic;
TXP                : out std_ulogic;
TXRUNDISP         : out std_logic_vector(3 downto 0);
BREFCLK           : in  std_ulogic := 'X';
BREFCLK2          : in  std_ulogic := 'X';
CHBONDI           : in  std_logic_vector(3 downto 0);
CONFIGENABLE      : in  std_ulogic;
CONFIGIN          : in  std_ulogic;
ENCHANSYNC        : in  std_ulogic;
ENMCOMMAALIGN     : in  std_ulogic;
ENPCOMMAALIGN     : in  std_ulogic;
LOOPBACK          : in  std_logic_vector(1 downto 0);
POWERDOWN         : in  std_ulogic;
REFCLK            : in  std_ulogic;
REFCLK2           : in  std_ulogic;
REFCLKSEL         : in  std_ulogic;
RXN               : in  std_ulogic;
RXP               : in  std_ulogic;
RXPOLARITY        : in  std_ulogic;
RXRESET           : in  std_ulogic;
RXUSRCLK          : in  std_ulogic;
RXUSRCLK2         : in  std_ulogic;
TXBYPASS8B10B    : in  std_logic_vector(3 downto 0);
TXCHARDISPMODE    : in  std_logic_vector(3 downto 0);
TXCHARDISPVAL     : in  std_logic_vector(3 downto 0);
TXCHARISK         : in  std_logic_vector(3 downto 0);
TXDATA            : in  std_logic_vector(31 downto 0);
TXFORCECERCERR   : in  std_ulogic;
TXINHIBIT         : in  std_ulogic;
TXPOLARITY        : in  std_ulogic;
TXRESET           : in  std_ulogic;
TXUSRCLK          : in  std_ulogic;
TXUSRCLK2         : in  std_ulogic);

```

```
end component;
```

```
-- Component Attribute specification for GT_AURORA_4
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter constraints here
```

```
-- Component Instantiation for GT_AURORA_4 should be placed
-- in architecture after the begin keyword
```

```
GT_AURORA_4_INSTANCE_NAME : GT_AURORA_4
```

```
-- synopsys translate_off
```

```
generic map (
  ALIGN_COMMA_MSB           => boolean_value,
  CHAN_BOND_LIMIT           => integer_value,
  CHAN_BOND_MODE            => string_value,
  CHAN_BOND_OFFSET          => integer_value,
  CHAN_BOND_ONE_SHOT        => boolean_value,
  CHAN_BOND_SEQ_1_1         => bit_value,
  CHAN_BOND_SEQ_1_2         => bit_value,
  CHAN_BOND_SEQ_1_3         => bit_value,
  CHAN_BOND_SEQ_1_4         => bit_value,
  CHAN_BOND_SEQ_2_1         => bit_value,
```

```

CHAN_BOND_SEQ_2_2          => bit_value,
CHAN_BOND_SEQ_2_3          => bit_value,
CHAN_BOND_SEQ_2_4          => bit_value,
CHAN_BOND_SEQ_2_USE        => boolean_value,
CHAN_BOND_SEQ_LEN          => integer_value,
CHAN_BOND_WAIT              => integer_value,
CLK_COR_INSERT_IDLE_FLAG   => boolean_value,
CLK_COR_KEEP_IDLE          => boolean_value,
CLK_COR_REPEAT_WAIT        => integer_value,
CLK_COR_SEQ_1_1            => bit_value,
CLK_COR_SEQ_1_2            => bit_value,
CLK_COR_SEQ_1_3            => bit_value,
CLK_COR_SEQ_1_4            => bit_value,
CLK_COR_SEQ_2_1            => bit_value,
CLK_COR_SEQ_2_2            => bit_value,
CLK_COR_SEQ_2_3            => bit_value,
CLK_COR_SEQ_2_4            => bit_value,
CLK_COR_SEQ_2_USE          => boolean_value,
CLK_COR_SEQ_LEN            => integer_value,
CLK_CORRECT_USE            => boolean_value,
COMMA_10B_MASK             => bit_value,
CRC_END_OF_PKT             => string_value,
CRC_FORMAT                 => string_value,
CRC_START_OF_PKT           => string_value,
DEC_MCOMMA_DETECT          => boolean_value,
DEC_PCOMMA_DETECT          => boolean_value,
DEC_INVALID_COMMA_ONLY     => boolean_value,
MCOMMA_10B_VALUE           => bit_value,
MCOMMA_DETECT              => boolean_value,
PCOMMA_10B_VALUE           => bit_value,
PCOMMA_DETECT              => boolean_value,
REF_CLK_V_SEL              => integer_value,
RX_BUFFER_USE              => boolean_value,
RX_CRC_USE                  => boolean_value,
RX_DATA_WIDTH              => integer_value,
RX_DECODE_USE              => boolean_value,
RX_LOS_INVALID_INCR        => integer_value,
RX_LOS_THRESHOLD           => integer_value,
RX_LOSS_OF_SYNC_FSM        => boolean_value,
SERDES_10B                 => boolean_value,
TERMINATION_IMP            => integer_value,
TX_BUFFER_USE              => boolean_value,
TX_CRC_FORCE_VALUE         => bit_value,
TX_CRC_USE                  => boolean_value,
TX_DATA_WIDTH              => integer_value,
TX_DIFF_CTRL               => integer_value,
TX_PREEMPHASIS            => integer_value)

-- synopsys translate_on
port map (
  CHBONDDONE                => user_CHBONDDONE,
  CHBONDO                    => user_CHBONDO,
  CONFIGOUT                  => user_CONFIGOUT,
  RXBUFSTATUS                => user_RXBUFSTATUS,
  RXCHARISCOMMA              => user_RXCHARISCOMMA,
  RXCHARISK                  => user_RXCHARISK,
  RXCHECKINGCRC              => user_RXCHECKINGCRC,
  RXCLKCORCNT                => user_RXCLKCORCNT,

```

```

RXCOMMADET          => user_RXCOMMADET,
RXCRCERR            => user_RXCRCERR,
RXDATA              => user_RXDATA,
RXDISPERR           => user_RXDISPERR,
RXLOSSOFFSYNC       => user_RXLOSSOFFSYNC,
RXNOTINTABLE        => user_RXNOTINTABLE,
RXREALIGN           => user_RXREALIGN,
RXRECCLK            => user_RXRECCLK,
RXRUNDISP           => user_RXRUNDISP,
TXBUFERR            => user_TXBUFERR,
TXKERR              => user_TXKERR,
TXN                 => user_TXN,
TXP                 => user_TXP,
TXRUNDISP           => user_TXRUNDISP,
BREFCLK             => user_BREFCLK,
BREFCLK2            => user_BREFCLK2,
CHBONDI             => user_CHBONDI,
CONFIGENABLE        => user_CONFIGENABLE,
CONFIGIN            => user_CONFIGIN,
ENCHANSYNC          => user_ENCHANSYNC,
ENMCOMMAALIGN       => user_ENMCOMMAALIGN,
ENPCOMMAALIGN       => user_ENPCOMMAALIGN,
LOOPBACK            => user_LOOPBACK,
POWERDOWN           => user_POWERDOWN,
REFCLK              => user_REFCLK,
REFCLK2             => user_REFCLK2,
REFCLKSEL           => user_REFCLKSEL,
RXN                 => user_RXN,
RXP                 => user_RXP,
RXPOLARITY          => user_RXPOLARITY,
RXRESET             => user_RXRESET,
RXUSRCLK            => user_RXUSRCLK,
RXUSRCLK2           => user_RXUSRCLK2,
TXBYPASS8B10B       => user_TXBYPASS8B10B,
TXCHARDISPMODE      => user_TXCHARDISPMODE,
TXCHARDISPVAL       => user_TXCHARDISPVAL,
TXCHARISK           => user_TXCHARISK,
TXDATA              => user_TXDATA,
TXFORCECRCERR       => user_TXFORCECRCERR,
TXINHIBIT           => user_TXINHIBIT,
TXPOLARITY          => user_TXPOLARITY,
TXRESET             => user_TXRESET,
TXUSRCLK            => user_TXUSRCLK,
TXUSRCLK2           => user_TXUSRCLK2);

```

## Verilog Instantiation Templates

### GT\_AURORA\_1 Verilog Code

```

GT_AURORA_1 GT_AURORA_1_name(
    .CHBONDDONE (user_CHBONDDONE),
    .CHBONDO (user_CHBONDO),
    .CONFIGOUT (user_CONFIGOUT),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCHECKINGCRC (user_RXCHECKINGCRC),

```

```

.RXCLKCORCNT (user_RXCLKCORCNT),
.RXCOMMADET (user_RXCOMMADET),
.RXRCRCERR (user_RXRCRCERR),
.RXDATA (user_RXDATA),
.RXDISPERR (user_RXDISPERR),
.RXLOSSOFSYNC (user_RXLOSSOFSYNC),
.RXNOTINTABLE (user_RXNOTINTABLE),
.RXREALIGN (user_RXREALIGN),
.RXRECCLK (user_RXRECCLK),
.RXRUNDISP (user_RXRUNDISP),
.TXBUFERR (user_TXBUFERR),
.TXKERR (user_TXKERR),
.TXN (user_TXN),
.TXP (user_TXP),
.TXRUNDISP (user_TXRUNDISP),

.BREFCLK (user_BREFCLK),
.BREFCLK2 (user_BREFCLK2),
.CHBONDI (user_CHBONDI),
.CONFIGENABLE (user_CONFIGENABLE),
.CONFIGIN (user_CONFIGIN),
.ENCHANSYNC (user_ENCHANSYNC),
.ENMCOMMAALIGN (user_ENMCOMMAALIGN),
.ENPCOMMAALIGN (user_ENPCOMMAALIGN),
.LOOPBACK (user_LOOPBACK),
.POWERDOWN (user_POWERDOWN),
.REFCLK (user_REFCLK),
.REFCLK2 (user_REFCLK2),
.REFCLKSEL (user_REFCLKSEL),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXFORCECRCERR (user_TXFORCECRCERR),
.TXINHIBIT (user_TXINHIBIT),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_MSB = "FALSE";
defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_OFFSET = 8;
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b001011111100;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b000000000000;

```

```

defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 1;
defparam user_instance_name.CHAN_BOND_WAIT = 8;
defparam user_instance_name.CLK_COR_INSERT_IDLE_FLAG = "FALSE";
defparam user_instance_name.CLK_COR_KEEP_IDLE = "FALSE";
defparam user_instance_name.CLK_COR_REPEAT_WAIT = 1;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00111110111;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 1;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b1111111111;
defparam user_instance_name.CRC_END_OF_PKT = "K29_7";
defparam user_instance_name.CRC_FORMAT = "USER_MODE";
defparam user_instance_name.CRC_START_OF_PKT = "K27_7";
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b110000101;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0011111010;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.REF_CLK_V_SEL = 0;
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_CRC_USE = "FALSE";
defparam user_instance_name.RX_DATA_WIDTH = 1;
defparam user_instance_name.RX_DECODE_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SERDES_10B = "FALSE";
defparam user_instance_name.TERMINATION_IMP = 50;
defparam user_instance_name.TX_BUFFER_USE = "TRUE";
defparam user_instance_name.TX_CRC_FORCE_VALUE = 8'b11010110;
defparam user_instance_name.TX_CRC_USE = "FALSE";
defparam user_instance_name.TX_DATA_WIDTH = 1;
defparam user_instance_name.TX_DIFF_CTRL = 500;
defparam user_instance_name.TX_PREEMPHASIS = 0;

```

## GT\_AURORA\_2 Verilog Code

```

GT_AURORA_2 GT_AURORA_2_name(
    .CHBONDDONE (user_CHBONDDONE),
    .CHBONDO (user_CHBONDO),
    .CONFIGOUT (user_CONFIGOUT),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCHECKINGCRC (user_RXCHECKINGCRC),
    .RXCLKCORCNT (user_RXCLKCORCNT),

```

```

.RXCOMMADET (user_RXCOMMADET),
.RXCRCERR (user_RXCRCERR),
.RXDATA (user_RXDATA),
.RXDISPERR (user_RXDISPERR),
.RXLOSSOFSYNC (user_RXLOSSOFSYNC),
.RXNOTINTABLE (user_RXNOTINTABLE),
.RXREALIGN (user_RXREALIGN),
.RXRECCLK (user_RXRECCLK),
.RXRUNDISP (user_RXRUNDISP),
.TXBUFERR (user_TXBUFERR),
.TXKERR (user_TXKERR),
.TXN (user_TXN),
.TXP (user_TXP),
.TXRUNDISP (user_TXRUNDISP),

.BREFCLK (user_BREFCLK),
.BREFCLK2 (user_BREFCLK2),
.CHBONDI (user_CHBONDI),
.CONFIGENABLE (user_CONFIGENABLE),
.CONFIGIN (user_CONFIGIN),
.ENCHANSYNC (user_ENCHANSYNC),
.ENMCOMMAALIGN (user_ENMCOMMAALIGN),
.ENPCOMMAALIGN (user_ENPCOMMAALIGN),
.LOOPBACK (user_LOOPBACK),
.POWERDOWN (user_POWERDOWN),
.REFCLK (user_REFCLK),
.REFCLK2 (user_REFCLK2),
.REFCLKSEL (user_REFCLKSEL),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXFORCECRCERR (user_TXFORCECRCERR),
.TXINHIBIT (user_TXINHIBIT),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_MSB = "FALSE";
defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_OFFSET = 8;
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b001011111100;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b000000000000;

```



```

defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 1;
defparam user_instance_name.CHAN_BOND_WAIT = 8;
defparam user_instance_name.CLK_COR_INSERT_IDLE_FLAG = "FALSE";
defparam user_instance_name.CLK_COR_KEEP_IDLE = "FALSE";
defparam user_instance_name.CLK_COR_REPEAT_WAIT = 1;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00111110111;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00111110111;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 2;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b1111111111;
defparam user_instance_name.CRC_END_OF_PKT = "K29_7";
defparam user_instance_name.CRC_FORMAT = "USER_MODE";
defparam user_instance_name.CRC_START_OF_PKT = "K27_7";
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b110000101;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0011111010;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.REF_CLK_V_SEL = 0;
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_CRC_USE = "FALSE";
defparam user_instance_name.RX_DATA_WIDTH = 2;
defparam user_instance_name.RX_DECODE_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SERDES_10B = "FALSE";
defparam user_instance_name.TERMINATION_IMP = 50;
defparam user_instance_name.TX_BUFFER_USE = "TRUE";
defparam user_instance_name.TX_CRC_FORCE_VALUE = 8'b11010110;
defparam user_instance_name.TX_CRC_USE = "FALSE";
defparam user_instance_name.TX_DATA_WIDTH = 2;
defparam user_instance_name.TX_DIFF_CTRL = 500;
defparam user_instance_name.TX_PREEMPHASIS = 0;

```

## GT\_AURORA\_4 Verilog Code

```

GT_AURORA_4 GT_AURORA_4_name(
    .CHBONDDONE (user_CHBONDDONE),
    .CHBONDO (user_CHBONDO),
    .CONFIGOUT (user_CONFIGOUT),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCHECKINGCRC (user_RXCHECKINGCRC),
    .RXCLKCORCNT (user_RXCLKCORCNT),
    .RXCOMMADET (user_RXCOMMADET),

```

```

.RXCRCERR (user_RXCRCERR),
.RXDATA (user_RXDATA),
.RXDISPERR (user_RXDISPERR),
.RXLOSSOFSYNC (user_RXLOSSOFSYNC),
.RXNOTINTABLE (user_RXNOTINTABLE),
.RXREALIGN (user_RXREALIGN),
.RXRECCLK (user_RXRECCLK),
.RXRUNDISP (user_RXRUNDISP),
.TXBUFERR (user_TXBUFERR),
.TXKERR (user_TXKERR),
.TXN (user_TXN),
.TXP (user_TXP),
.TXRUNDISP (user_TXRUNDISP),

.BREFCLK (user_BREFCLK),
.BREFCLK2 (user_BREFCLK2),
.CHBONDI (user_CHBONDI),
.CONFIGENABLE (user_CONFIGENABLE),
.CONFIGIN (user_CONFIGIN),
.ENCHANSYNC (user_ENCHANSYNC),
.ENMCOMMAALIGN (user_ENMCOMMAALIGN),
.ENPCOMMAALIGN (user_ENPCOMMAALIGN),
.LOOPBACK (user_LOOPBACK),
.POWERDOWN (user_POWERDOWN),
.REFCLK (user_REFCLK),
.REFCLK2 (user_REFCLK2),
.REFCLKSEL (user_REFCLKSEL),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXFORCECRCERR (user_TXFORCECRCERR),
.TXINHIBIT (user_TXINHIBIT),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_MSB = "FALSE";
defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_OFFSET = 8;
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b001011111100;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b000000000000;

```

```

defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 1;
defparam user_instance_name.CHAN_BOND_WAIT = 8;
defparam user_instance_name.CLK_COR_INSERT_IDLE_FLAG = "FALSE";
defparam user_instance_name.CLK_COR_KEEP_IDLE = "FALSE";
defparam user_instance_name.CLK_COR_REPEAT_WAIT = 1;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00111110111;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00111110111;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00111110111;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00111110111;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 4;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b1111111111;
defparam user_instance_name.CRC_END_OF_PKT = "K29_7";
defparam user_instance_name.CRC_FORMAT = "USER_MODE";
defparam user_instance_name.CRC_START_OF_PKT = "K27_7";
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b110000101;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0011111010;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.REF_CLK_V_SEL = 0;
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_CRC_USE = "FALSE";
defparam user_instance_name.RX_DATA_WIDTH = 4;
defparam user_instance_name.RX_DECODE_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SERDES_10B = "FALSE";
defparam user_instance_name.TERMINATION_IMP = 50;
defparam user_instance_name.TX_BUFFER_USE = "TRUE";
defparam user_instance_name.TX_CRC_FORCE_VALUE = 8'b11010110;
defparam user_instance_name.TX_CRC_USE = "FALSE";
defparam user_instance_name.TX_DATA_WIDTH = 4;
defparam user_instance_name.TX_DIFF_CTRL = 500;
defparam user_instance_name.TX_PREEMPHASIS = 0;

```

## Commonly Used Constraints

None



## GT\_CUSTOM


### Gigabit Transceiver for High-Speed I/O

#### Architectures Supported

GT_CUSTOM	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive*
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
*Supported for Virtex-II Pro but not for Virtex-II or Virtex-II Pro X.	

This gigabit transceiver is fully customizable. You can set attributes for the primitives. You can also set attributes for the primitives. See the *RocketIO Transceiver User Guide* for a description of these attributes and their default attribute values.

The following figure lists the input and output ports for all values of  $n$ . For a description of each of the ports, see the *RocketIO Transceiver User Guide*.

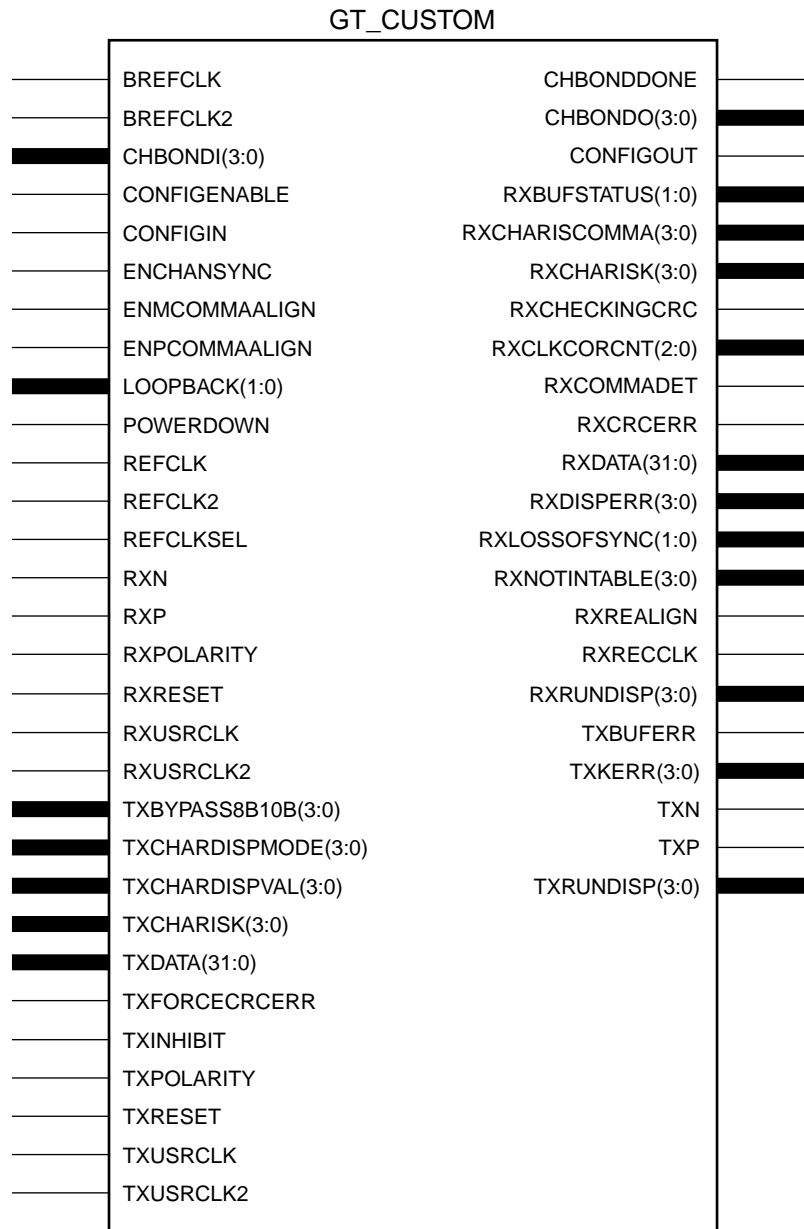

X9891

## Usage

This design element is instantiated rather than inferred in the design code.

## VHDL Instantiation Templates

### GT\_CUSTOM VHDL Code

```
-- Component Attribute specification for GT_CUSTOM
-- should be placed after architecture declaration but
-- before the begin keyword

component GT_CUSTOM
-- synopsys translate_off
generic (
    ALIGN_COMMA_MSB           : boolean := FALSE;
    CHAN_BOND_LIMIT           : integer := 16;
    CHAN_BOND_MODE             : string := "OFF";
    CHAN_BOND_OFFSET          : integer := 8;
    CHAN_BOND_ONE_SHOT        : boolean := FALSE;
    CHAN_BOND_SEQ_1_1         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_2         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_3         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_4         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_1         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_2         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_3         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_4         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_USE       : boolean := FALSE;
    CHAN_BOND_SEQ_LEN         : integer := 1;
    CHAN_BOND_WAIT            : integer := 8;
    CLK_COR_INSERT_IDLE_FLAG  : boolean := FALSE;
    CLK_COR_KEEP_IDLE         : boolean := FALSE;
    CLK_COR_REPEAT_WAIT       : integer := 1;
    CLK_COR_SEQ_1_1           : bit_vector := "000000000000";
    CLK_COR_SEQ_1_2           : bit_vector := "000000000000";
    CLK_COR_SEQ_1_3           : bit_vector := "000000000000";
    CLK_COR_SEQ_1_4           : bit_vector := "000000000000";
    CLK_COR_SEQ_2_1           : bit_vector := "000000000000";
    CLK_COR_SEQ_2_2           : bit_vector := "000000000000";
    CLK_COR_SEQ_2_3           : bit_vector := "000000000000";
    CLK_COR_SEQ_2_4           : bit_vector := "000000000000";
    CLK_COR_SEQ_2_USE         : boolean := FALSE;
    CLK_COR_SEQ_LEN           : integer := 1;
    CLK_CORRECT_USE           : boolean := TRUE;
    COMMA_10B_MASK            : bit_vector := "1111111000";
    CRC_END_OF_PKT            : string := "K29_7";
    CRC_FORMAT                 : string := "USER_MODE";
    CRC_START_OF_PKT          : string := "K27_7";
    DEC_MCOMMA_DETECT         : boolean := TRUE;
    DEC_PCOMMA_DETECT         : boolean := TRUE;
    DEC_VALID_COMMA_ONLY     : boolean := TRUE;
    MCOMMA_10B_VALUE          : bit_vector := "1100000000";
    MCOMMA_DETECT             : boolean := TRUE;
    PCOMMA_10B_VALUE          : bit_vector := "0011111000";
    PCOMMA_DETECT            : boolean := TRUE;
    REF_CLK_V_SEL             : integer := 0;
```

```

RX_BUFFER_USE           : boolean := TRUE;
RX_CRC_USE              : boolean := FALSE;
RX_DATA_WIDTH          : integer := 2;
RX_DECODE_USE          : boolean := TRUE;
RX_LOS_INVALID_INCR    : integer := 1;
RX_LOS_THRESHOLD       : integer := 4;
RX_LOSS_OF_SYNC_FSM    : boolean := TRUE;
SERDES_10B             : boolean := FALSE;
TERMINATION_IMP        : integer := 50;
TX_BUFFER_USE          : boolean := TRUE;
TX_CRC_FORCE_VALUE     : bit_vector := "11010110";
TX_CRC_USE             : boolean := FALSE;
TX_DATA_WIDTH          : integer := 2;
TX_DIFF_CTRL           : integer := 500;
TX_PREEMPHASIS        : integer := 0;

-- synopsys translate_on
port (
  CHBONDDONE           : out std_ulogic;
  CHBONDO              : out std_logic_vector(3 downto 0);
  CONFIGOUT           : out std_ulogic;
  RXBUFSTATUS         : out std_logic_vector(1 downto 0);
  RXCHARISCOMMA       : out std_logic_vector(3 downto 0);
  RXCHARISK           : out std_logic_vector(3 downto 0);
  RXCHECKINGCRC       : out std_ulogic;
  RXCLKCORCNT         : out std_logic_vector(2 downto 0);
  RXCOMMADET          : out std_ulogic;
  RXCRCERR            : out std_ulogic;
  RXDATA              : out std_logic_vector(31 downto 0);
  RXDISPERR           : out std_logic_vector(3 downto 0);
  RXLOSSOFSYNC        : out std_logic_vector(1 downto 0);
  RXNOTINTABLE        : out std_logic_vector(3 downto 0);
  RXREALIGN           : out std_ulogic;
  RXRECLK             : out std_ulogic;
  RXRUNDISP           : out std_logic_vector(3 downto 0);
  TXBUFERR            : out std_ulogic;
  TXKERR              : out std_logic_vector(3 downto 0);
  TXN                 : out std_ulogic;
  TXP                 : out std_ulogic;
  TXRUNDISP           : out std_logic_vector(3 downto 0);
  BREFCLK              : in std_ulogic := 'X';
  BREFCLK2            : in std_ulogic := 'X';
  CHBONDI             : in std_logic_vector(3 downto 0);
  CONFIGENABLE        : in std_ulogic;
  CONFIGIN            : in std_ulogic;
  ENCHANSYNC          : in std_ulogic;
  ENMCOMMAALIGN       : in std_ulogic;
  ENPCOMMAALIGN       : in std_ulogic;
  LOOPBACK            : in std_logic_vector(1 downto 0);
  POWERDOWN           : in std_ulogic;
  REFCLK              : in std_ulogic;
  REFCLK2             : in std_ulogic;
  REFCLKSEL           : in std_ulogic;
  RXN                 : in std_ulogic;
  RXP                 : in std_ulogic;
  RXPOLARITY          : in std_ulogic;
  RXRESET             : in std_ulogic;
  RXUSRCLK            : in std_ulogic;

```



```

RXUSRCLK2                : in std_ulogic;
TXBYPASS8B10B           : in std_logic_vector(3 downto 0);
TXCHARDISPMODE           : in std_logic_vector(3 downto 0);
TXCHARDISPVAL            : in std_logic_vector(3 downto 0);
TXCHARISK                : in std_logic_vector(3 downto 0);
TXDATA                   : in std_logic_vector(31 downto 0);
TXFORCECERCERR           : in std_ulogic;
TXINHIBIT                : in std_ulogic;
TXPOLARITY               : in std_ulogic;
TXRESET                  : in std_ulogic;
TXUSRCLK                 : in std_ulogic;
TXUSRCLK2                : in std_ulogic);

```

```
end component;
```

```

-- Component Attribute specification for GT_CUSTOM
-- should be placed after architecture declaration but
-- before the begin keyword

```

```
-- Enter constraints here
```

```

-- Component Instantiation for GT_CUSTOM should be placed
-- in architecture after the begin keyword

```

```
GT_CUSTOM_INSTANCE_NAME : GT_CUSTOM
```

```
-- synopsys translate_off
```

```
generic map (
```

```

ALIGN_COMMA_MSB          => boolean_value,
CHAN_BOND_LIMIT          => integer_value,
CHAN_BOND_MODE           => string_value,
CHAN_BOND_OFFSET         => integer_value,
CHAN_BOND_ONE_SHOT       => boolean_value,
CHAN_BOND_SEQ_1_1        => bit_value,
CHAN_BOND_SEQ_1_2        => bit_value,
CHAN_BOND_SEQ_1_3        => bit_value,
CHAN_BOND_SEQ_1_4        => bit_value,
CHAN_BOND_SEQ_2_1        => bit_value,
CHAN_BOND_SEQ_2_2        => bit_value,
CHAN_BOND_SEQ_2_3        => bit_value,
CHAN_BOND_SEQ_2_4        => bit_value,
CHAN_BOND_SEQ_2_USE      => boolean_value,
CHAN_BOND_SEQ_LEN        => integer_value,
CHAN_BOND_WAIT           => integer_value,
CLK_COR_INSERT_IDLE_FLAG => boolean_value,
CLK_COR_KEEP_IDLE        => boolean_value,
CLK_COR_REPEAT_WAIT      => integer_value,
CLK_COR_SEQ_1_1          => bit_value,
CLK_COR_SEQ_1_2          => bit_value,
CLK_COR_SEQ_1_3          => bit_value,
CLK_COR_SEQ_1_4          => bit_value,
CLK_COR_SEQ_2_1          => bit_value,
CLK_COR_SEQ_2_2          => bit_value,
CLK_COR_SEQ_2_3          => bit_value,
CLK_COR_SEQ_2_4          => bit_value,
CLK_COR_SEQ_2_USE        => boolean_value,
CLK_COR_SEQ_LEN          => integer_value,
CLK_CORRECT_USE          => boolean_value,
COMMA_10B_MASK           => bit_value,

```

```

CRC_END_OF_PKT           => string_value,
CRC_FORMAT               => string_value,
CRC_START_OF_PKT        => string_value,
DEC_MCOMMA_DETECT        => boolean_value,
DEC_PCOMMA_DETECT        => boolean_value,
DEC_VALID_COMMA_ONLY     => boolean_value,
MCOMMA_10B_VALUE         => bit_value,
MCOMMA_DETECT            => boolean_value,
PCOMMA_10B_VALUE         => bit_value,
PCOMMA_DETECT            => boolean_value,
REF_CLK_V_SEL            => integer_value,
RX_BUFFER_USE            => boolean_value,
RX_CRC_USE                => boolean_value,
RX_DATA_WIDTH            => integer_value,
RX_DECODE_USE            => boolean_value,
RX_LOS_INVALID_INCR      => integer_value,
RX_LOS_THRESHOLD         => integer_value,
RX_LOSS_OF_SYNC_FSM      => boolean_value,
SERDES_10B                => boolean_value,
TERMINATION_IMP           => integer_value,
TX_BUFFER_USE            => boolean_value,
TX_CRC_FORCE_VALUE       => bit_value,
TX_CRC_USE                => boolean_value,
TX_DATA_WIDTH            => integer_value,
TX_DIFF_CTRL             => integer_value,
TX_PREEMPHASIS           => integer_value)

-- synopsys translate_on
port map (
    CHBONDDONE             => user_CHBONDDONE,
    CHBONDO                 => user_CHBONDO,
    CONFIGOUT               => user_CONFIGOUT,
    RXBUFSTATUS             => user_RXBUFSTATUS,
    RXCHARISCOMMA           => user_RXCHARISCOMMA,
    RXCHARISK               => user_RXCHARISK,
    RXCHECKINGCRC           => user_RXCHECKINGCRC,
    RXCLKCORCNT             => user_RXCLKCORCNT,
    RXCOMMADET              => user_RXCOMMADET,
    RXCRCERR                 => user_RXCRCERR,
    RXDATA                   => user_RXDATA,
    RXDISPERR               => user_RXDISPERR,
    RXLOSSOFSYNC            => user_RXLOSSOFSYNC,
    RXNOTINTABLE            => user_RXNOTINTABLE,
    RXREALIGN               => user_RXREALIGN,
    RXRECCLK                 => user_RXRECCLK,
    RXRUNDISP               => user_RXRUNDISP,
    TXBUFERR                 => user_TXBUFERR,
    TXKERR                   => user_TXKERR,
    TXN                       => user_TXN,
    TXP                       => user_TXP,
    TXRUNDISP               => user_TXRUNDISP,
    BREFCLK                  => user_BREFCLK,
    BREFCLK2                 => user_BREFCLK2,
    CHBONDI                  => user_CHBONDI,
    CONFIGENABLE            => user_CONFIGENABLE,
    CONFIGIN                 => user_CONFIGIN,
    ENCHANSYNC               => user_ENCHANSYNC,
    ENMCOMMAALIGN           => user_ENMCOMMAALIGN,

```

```

ENPCOMMAALIGN           => user_ENPCOMMAALIGN,
LOOPBACK                 => user_LOOPBACK,
POWERDOWN               => user_POWERDOWN,
REFCLK                  => user_REFCLK,
REFCLK2                 => user_REFCLK2,
REFCLKSEL               => user_REFCLKSEL,
RXN                     => user_RXN,
RXP                     => user_RXP,
RXPOLARITY              => user_RXPOLARITY,
RXRESET                 => user_RXRESET,
RXUSRCLK                => user_RXUSRCLK,
RXUSRCLK2               => user_RXUSRCLK2,
TXBYPASS8B10B          => user_TXBYPASS8B10B,
TXCHARDISPMODE          => user_TXCHARDISPMODE,
TXCHARDISPVAL           => user_TXCHARDISPVAL,
TXCHARISK               => user_TXCHARISK,
TXDATA                  => user_TXDATA,
TXFORCECRCERR           => user_TXFORCECRCERR,
TXINHIBIT               => user_TXINHIBIT,
TXPOLARITY              => user_TXPOLARITY,
TXRESET                 => user_TXRESET,
TXUSRCLK                => user_TXUSRCLK,
TXUSRCLK2               => user_TXUSRCLK2);

```

## Verilog Instantiation Templates

### GT\_CUSTOM Verilog Code

```

GT_CUSTOM GT_CUSTOM_name(
    .CHBONDDONE (user_CHBONDDONE),
    .CHBONDO (user_CHBONDO),
    .CONFIGOUT (user_CONFIGOUT),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCHECKINGCRC (user_RXCHECKINGCRC),
    .RXCLKCORCNT (user_RXCLKCORCNT),
    .RXCOMMADET (user_RXCOMMADET),
    .RXCRCERR (user_RXCRCERR),
    .RXDATA (user_RXDATA),
    .RXDISPERR (user_RXDISPERR),
    .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
    .RXNOTINTABLE (user_RXNOTINTABLE),
    .RXREALIGN (user_RXREALIGN),
    .RXRECCLK (user_RXRECCLK),
    .RXRUNDISP (user_RXRUNDISP),
    .TXBUFERR (user_TXBUFERR),
    .TXKERR (user_TXKERR),
    .TXN (user_TXN),
    .TXP (user_TXP),
    .TXRUNDISP (user_TXRUNDISP),

    .BREFCLK (user_BREFCLK),
    .BREFCLK2 (user_BREFCLK2),
    .CHBONDI (user_CHBONDI),
    .CONFIGENABLE (user_CONFIGENABLE),
    .CONFIGIN (user_CONFIGIN),

```

```

.ENCHANSYNC (user_ENCHANSYNC),
.ENMCOMMAALIGN (user_ENMCOMMAALIGN),
.ENPCOMMAALIGN (user_ENPCOMMAALIGN),
.LOOPBACK (user_LOOPBACK),
.POWERDOWN (user_POWERDOWN),
.REFCLK (user_REFCLK),
.REFCLK2 (user_REFCLK2),
.REFCLKSEL (user_REFCLKSEL),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXFORCECRCERR (user_TXFORCECRCERR),
.TXINHIBIT (user_TXINHIBIT),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_MSB = "FALSE";
defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_OFFSET = 8;
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 1;
defparam user_instance_name.CHAN_BOND_WAIT = 8;
defparam user_instance_name.CLK_COR_INSERT_IDLE_FLAG = "FALSE";
defparam user_instance_name.CLK_COR_KEEP_IDLE = "FALSE";
defparam user_instance_name.CLK_COR_REPEAT_WAIT = 1;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 1;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b1111111000;
defparam user_instance_name.CRC_END_OF_PKT = "K29_7";

```

```
defparam user_instance_name.CRC_FORMAT = "USER_MODE";
defparam user_instance_name.CRC_START_OF_PKT = "K27_7";
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1100000000;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0011111000;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.REF_CLK_V_SEL = 0;
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_CRC_USE = "FALSE";
defparam user_instance_name.RX_DATA_WIDTH = 2;
defparam user_instance_name.RX_DECODE_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SERDES_10B = "FALSE";
defparam user_instance_name.TERMINATION_IMP = 50;
defparam user_instance_name.TX_BUFFER_USE = "TRUE";
defparam user_instance_name.TX_CRC_FORCE_VALUE = 8'b11010110;
defparam user_instance_name.TX_CRC_USE = "FALSE";
defparam user_instance_name.TX_DATA_WIDTH = 2;
defparam user_instance_name.TX_DIFF_CTRL = 500;
defparam user_instance_name.TX_PREEMPHASIS = 0;
```

## Commonly Used Constraints

None



## GT\_ETHERNET\_n

### Gigabit Transceiver for High-Speed I/O

#### Architectures Supported


GT_ETHERNET_n	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive*
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
*Supported for Virtex-II Pro but not for Virtex-II or Virtex-II Pro X.	

This Ethernet gigabit transceiver supports 1, 2, and 4-byte data paths. The letter *n* represents number of bytes of the data path. Valid values are 1, 2 or 4.

You can also set attributes for the primitives. See the *RocketIO Transceiver User Guide* for a description of these attributes and their default attribute values.


The following figures list the input and output ports for all values of *n*. For a description of each of the ports, see the *RocketIO Transceiver User Guide*.

GT\_ETHERNET\_1

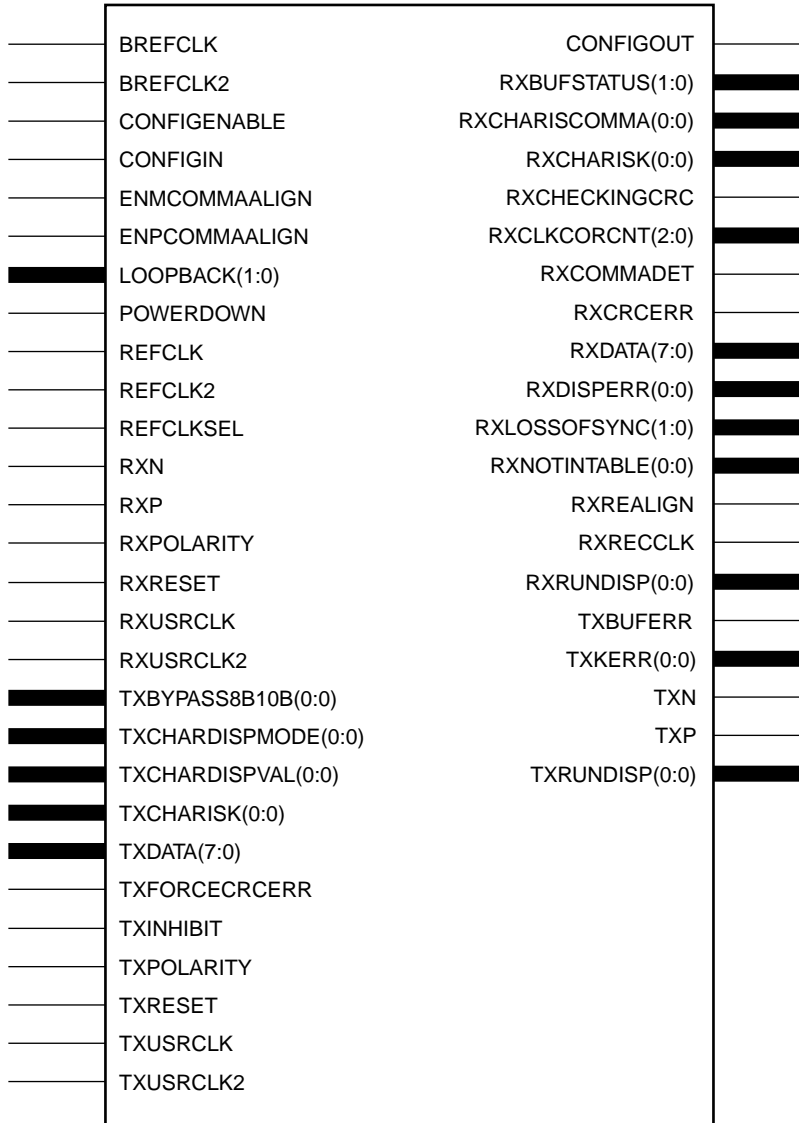


X9892



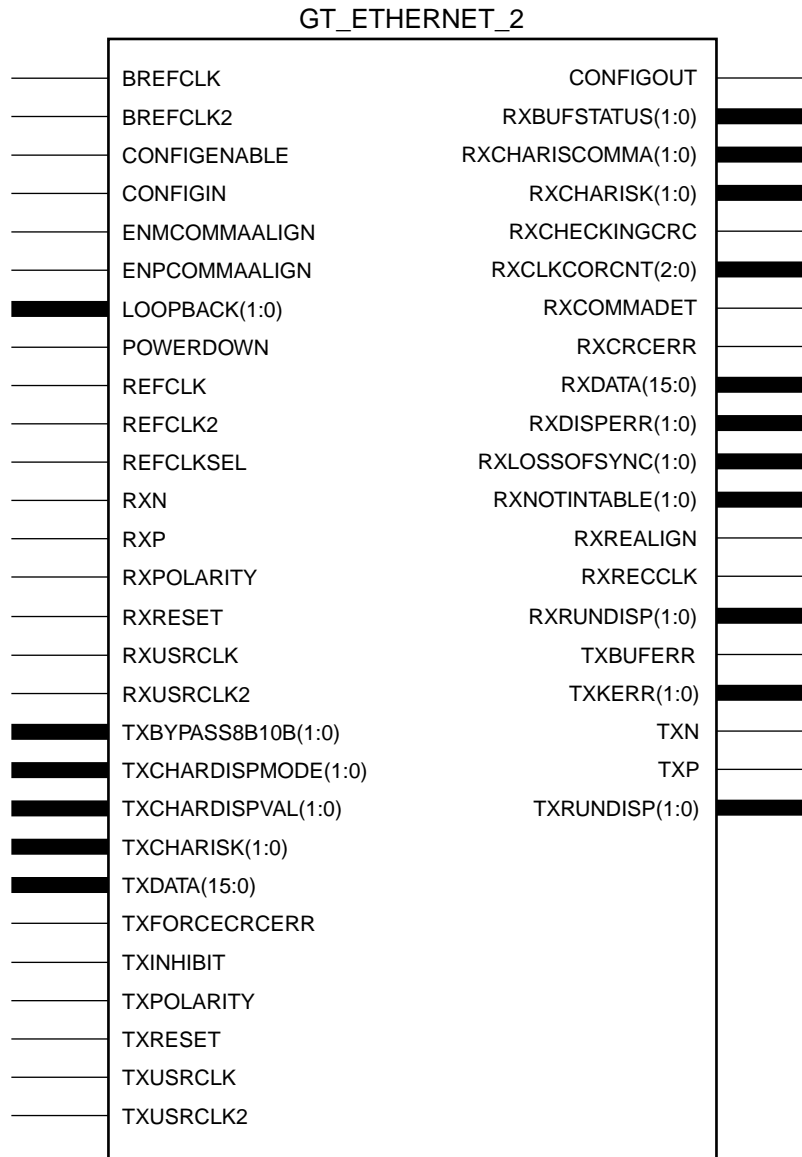

X9893

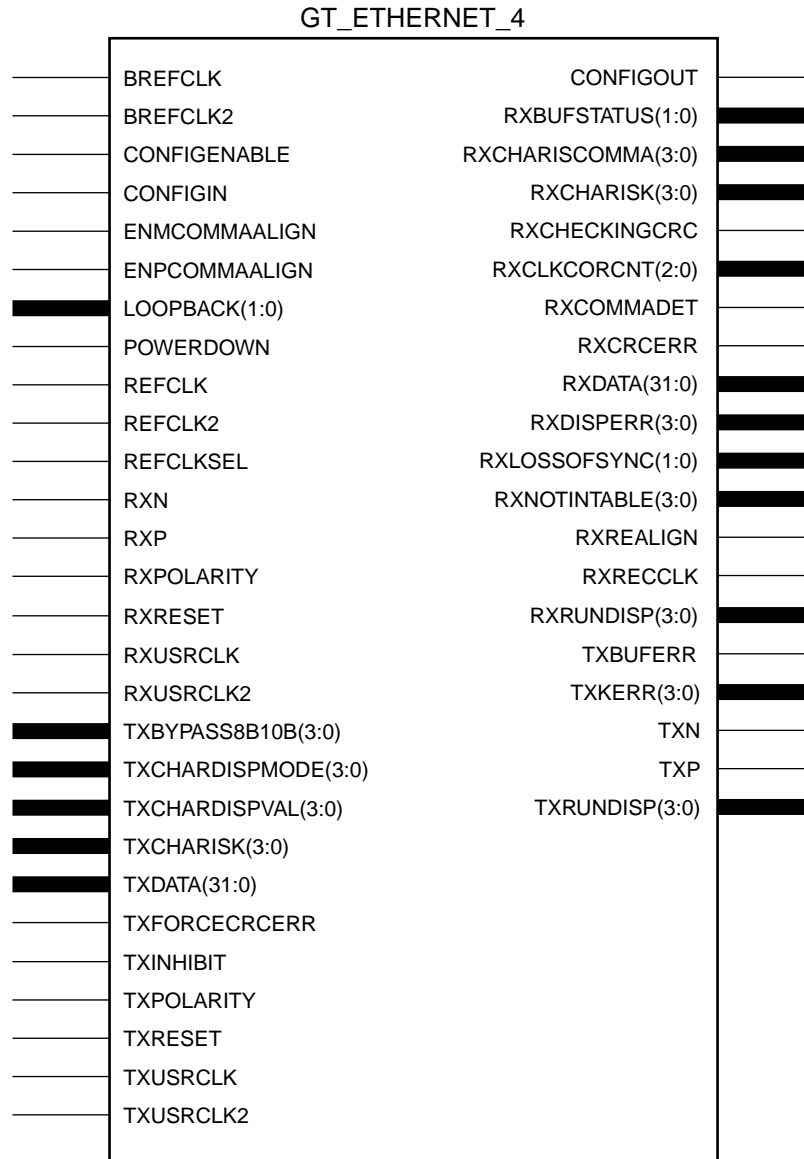

X9894

### Usage

This design element is instantiated rather than inferred in the design code.

## VHDL Instantiation Templates

### GT\_ETHERNET\_1 VHDL Code

```
-- Component Attribute specification for GT_ETHERNET_1
-- should be placed after architecture declaration but
-- before the begin keyword

component GT_ETHERNET_1
-- synopsys translate_off
generic (
    ALIGN_COMMA_MSB           : boolean := FALSE;
    CHAN_BOND_LIMIT           : integer := 1;
    CHAN_BOND_MODE             : string := "OFF";
    CHAN_BOND_OFFSET          : integer := 0;
    CHAN_BOND_ONE_SHOT        : boolean := TRUE;
    CHAN_BOND_SEQ_1_1         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_2         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_3         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_4         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_1         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_2         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_3         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_4         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_USE       : boolean := FALSE;
    CHAN_BOND_SEQ_LEN         : integer := 1;
    CHAN_BOND_WAIT             : integer := 7;
    CLK_COR_INSERT_IDLE_FLAG  : boolean := FALSE;
    CLK_COR_KEEP_IDLE         : boolean := FALSE;
    CLK_COR_REPEAT_WAIT       : integer := 1;
    CLK_COR_SEQ_1_1           : bit_vector := "00110111100";
    CLK_COR_SEQ_1_2           : bit_vector := "00001010000";
    CLK_COR_SEQ_1_3           : bit_vector := "00000000000";
    CLK_COR_SEQ_1_4           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_1           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_2           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_3           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_4           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_USE         : boolean := FALSE;
    CLK_COR_SEQ_LEN           : integer := 2;
    CLK_CORRECT_USE           : boolean := TRUE;
    COMMA_10B_MASK            : bit_vector := "1111111000";
    CRC_END_OF_PKT            : string := "K29_7";
    CRC_FORMAT                 : string := "ETHERNET";
    CRC_START_OF_PKT          : string := "K27_7";
    DEC_MCOMMA_DETECT         : boolean := TRUE;
    DEC_PCOMMA_DETECT         : boolean := TRUE;
    DEC_VALID_COMMA_ONLY     : boolean := TRUE;
    MCOMMA_10B_VALUE          : bit_vector := "1100000000";
    MCOMMA_DETECT             : boolean := TRUE;
    PCOMMA_10B_VALUE          : bit_vector := "0011111000";
    PCOMMA_DETECT             : boolean := TRUE;
    REF_CLK_V_SEL             : integer := 0;
    RX_BUFFER_USE             : boolean := TRUE;
    RX_CRC_USE                 : boolean := FALSE;
    RX_DATA_WIDTH             : integer := 1;
    RX_DECODE_USE             : boolean := TRUE;

```

```

RX_LOS_INVALID_INCR      : integer := 1;
RX_LOS_THRESHOLD        : integer := 4;
RX_LOSS_OF_SYNC_FSM     : boolean := TRUE;
SERDES_10B              : boolean := FALSE;
TERMINATION_IMP         : integer := 50;
TX_BUFFER_USE           : boolean := TRUE;
TX_CRC_FORCE_VALUE      : bit_vector := "11010110";
TX_CRC_USE              : boolean := FALSE;
TX_DATA_WIDTH           : integer := 1;
TX_DIFF_CTRL            : integer := 500;
TX_PREEMPHASIS         : integer := 0);

-- synopsys translate_on
port (
    CONFIGOUT              : out std_ulogic;
    RXBUFSTATUS            : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA         : out std_logic_vector(0 downto 0);
    RXCHARISK              : out std_logic_vector(0 downto 0);
    RXCHECKINGCRC         : out std_ulogic;
    RXCLKCORCNT           : out std_logic_vector(2 downto 0);
    RXCOMMADET            : out std_ulogic;
    RXCRCERR              : out std_ulogic;
    RXDATA                 : out std_logic_vector(7 downto 0);
    RXDISPERR             : out std_logic_vector(0 downto 0);
    RXLOSSOFSYNC          : out std_logic_vector(1 downto 0);
    RXNOTINTABLE          : out std_logic_vector(0 downto 0);
    RXREALIGN              : out std_ulogic;
    RXRECLK               : out std_ulogic;
    RXRUNDISP             : out std_logic_vector(0 downto 0);
    TXBUFERR              : out std_ulogic;
    TXKERR                 : out std_logic_vector(0 downto 0);
    TXN                    : out std_ulogic;
    TXP                    : out std_ulogic;
    TXRUNDISP             : out std_logic_vector(0 downto 0);
    BREFCLK                : in std_ulogic := 'X';
    BREFCLK2               : in std_ulogic := 'X';
    CONFIGENABLE          : in std_ulogic;
    CONFIGIN               : in std_ulogic;
    ENMCOMMAALIGN         : in std_ulogic;
    ENPCOMMAALIGN         : in std_ulogic;
    LOOPBACK              : in std_logic_vector(1 downto 0);
    POWERDOWN             : in std_ulogic;
    REFCLK                 : in std_ulogic;
    REFCLK2                : in std_ulogic;
    REFCLKSEL             : in std_ulogic;
    RXN                    : in std_ulogic;
    RXP                    : in std_ulogic;
    RXPOLARITY            : in std_ulogic;
    RXRESET                : in std_ulogic;
    RXUSRCLK               : in std_ulogic;
    RXUSRCLK2              : in std_ulogic;
    TXBYPASS8B10B         : in std_logic_vector(0 downto 0);
    TXCHARDISPMODE        : in std_logic_vector(0 downto 0);
    TXCHARDISPVAL         : in std_logic_vector(0 downto 0);
    TXCHARISK              : in std_logic_vector(0 downto 0);
    TXDATA                 : in std_logic_vector(7 downto 0);
    TXFORCECRCERR         : in std_ulogic;
    TXINHIBIT              : in std_ulogic;

```

```

        TXPOLARITY                : in std_ulogic;
        TXRESET                   : in std_ulogic;
        TXUSRCLK                   : in std_ulogic;
        TXUSRCLK2                  : in std_ulogic);

end component;

-- Component Attribute specification for GT_ETHERNET_1
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter constraints here

-- Component Instantiation for GT_ETHERNET_1 should be placed
-- in architecture after the begin keyword

GT_ETHERNET_1_INSTANCE_NAME : GT_ETHERNET_1
-- synopsys translate_off
generic map (
    ALIGN_COMMA_MSB                => boolean_value,
    CHAN_BOND_LIMIT                 => integer_value,
    CHAN_BOND_MODE                  => string_value,
    CHAN_BOND_OFFSET                => integer_value,
    CHAN_BOND_ONE_SHOT              => boolean_value,
    CHAN_BOND_SEQ_1_1               => bit_value,
    CHAN_BOND_SEQ_1_2               => bit_value,
    CHAN_BOND_SEQ_1_3               => bit_value,
    CHAN_BOND_SEQ_1_4               => bit_value,
    CHAN_BOND_SEQ_2_1               => bit_value,
    CHAN_BOND_SEQ_2_2               => bit_value,
    CHAN_BOND_SEQ_2_3               => bit_value,
    CHAN_BOND_SEQ_2_4               => bit_value,
    CHAN_BOND_SEQ_2_USE             => boolean_value,
    CHAN_BOND_SEQ_LEN               => integer_value,
    CHAN_BOND_WAIT                  => integer_value,
    CLK_COR_INSERT_IDLE_FLAG        => boolean_value,
    CLK_COR_KEEP_IDLE               => boolean_value,
    CLK_COR_REPEAT_WAIT             => integer_value,
    CLK_COR_SEQ_1_1                 => bit_value,
    CLK_COR_SEQ_1_2                 => bit_value,
    CLK_COR_SEQ_1_3                 => bit_value,
    CLK_COR_SEQ_1_4                 => bit_value,
    CLK_COR_SEQ_2_1                 => bit_value,
    CLK_COR_SEQ_2_2                 => bit_value,
    CLK_COR_SEQ_2_3                 => bit_value,
    CLK_COR_SEQ_2_4                 => bit_value,
    CLK_COR_SEQ_2_USE               => boolean_value,
    CLK_COR_SEQ_LEN                 => integer_value,
    CLK_CORRECT_USE                 => boolean_value,
    COMMA_10B_MASK                  => bit_value,
    CRC_END_OF_PKT                  => string_value,
    CRC_FORMAT                       => string_value,
    CRC_START_OF_PKT                => string_value,
    DEC_MCOMMA_DETECT               => boolean_value,
    DEC_PCOMMA_DETECT               => boolean_value,
    DEC_VALID_COMMA_ONLY            => boolean_value,
    MCOMMA_10B_VALUE                => bit_value,
    MCOMMA_DETECT                   => boolean_value,

```

```

PCOMMA_10B_VALUE           => bit_value,
PCOMMA_DETECT              => boolean_value,
REF_CLK_V_SEL              => integer_value,
RX_BUFFER_USE              => boolean_value,
RX_CRC_USE                 => boolean_value,
RX_DATA_WIDTH              => integer_value,
RX_DECODE_USE              => boolean_value,
RX_LOS_INVALID_INCR       => integer_value,
RX_LOS_THRESHOLD          => integer_value,
RX_LOSS_OF_SYNC_FSM       => boolean_value,
SERDES_10B                 => boolean_value,
TERMINATION_IMP            => integer_value,
TX_BUFFER_USE              => boolean_value,
TX_CRC_FORCE_VALUE        => bit_value,
TX_CRC_USE                 => boolean_value,
TX_DATA_WIDTH              => integer_value,
TX_DIFF_CTRL               => integer_value,
TX_PREEMPHASIS            => integer_value)

-- synopsys translate_on
port map (
    CONFIGOUT                => user_CONFIGOUT,
    RXBUFSTATUS              => user_RXBUFSTATUS,
    RXCHARISCOMMA           => user_RXCHARISCOMMA,
    RXCHARISK                => user_RXCHARISK,
    RXCHECKINGCRC           => user_RXCHECKINGCRC,
    RXCLKCORCNT              => user_RXCLKCORCNT,
    RXCOMMADET              => user_RXCOMMADET,
    RXCRCERR                 => user_RXCRCERR,
    RXDATA                   => user_RXDATA,
    RXDISPERR                => user_RXDISPERR,
    RXLOSSOFSYNC            => user_RXLOSSOFSYNC,
    RXNOTINTABLE            => user_RXNOTINTABLE,
    RXREALIGN                => user_RXREALIGN,
    RXRECCLK                 => user_RXRECCLK,
    RXRUNDISP                => user_RXRUNDISP,
    TXBUFERR                 => user_TXBUFERR,
    TXKERR                   => user_TXKERR,
    TXN                      => user_TXN,
    TXP                      => user_TXP,
    TXRUNDISP                => user_TXRUNDISP,
    BREFCLK                  => user_BREFCLK,
    BREFCLK2                 => user_BREFCLK2,
    CONFIGENABLE            => user_CONFIGENABLE,
    CONFIGIN                 => user_CONFIGIN,
    ENMCOMMAALIGN           => user_ENMCOMMAALIGN,
    ENPCOMMAALIGN           => user_ENPCOMMAALIGN,
    LOOPBACK                 => user_LOOPBACK,
    POWERDOWN                => user_POWERDOWN,
    REFCLK                   => user_REFCLK,
    REFCLK2                  => user_REFCLK2,
    REFCLKSEL                => user_REFCLKSEL,
    RXN                      => user_RXN,
    RXP                      => user_RXP,
    RXPOLARITY              => user_RXPOLARITY,
    RXRESET                  => user_RXRESET,
    RXUSRCLK                 => user_RXUSRCLK,
    RXUSRCLK2                => user_RXUSRCLK2,

```

```

TXBYPASS8B10B           => user_TXBYPASS8B10B,
TXCHARDISPMODE          => user_TXCHARDISPMODE,
TXCHARDISPVAL           => user_TXCHARDISPVAL,
TXCHARISK               => user_TXCHARISK,
TXDATA                  => user_TXDATA,
TXFORCECERCERR         => user_TXFORCECERCERR,
TXINHIBIT               => user_TXINHIBIT,
TXPOLARITY              => user_TXPOLARITY,
TXRESET                 => user_TXRESET,
TXUSRCLK                => user_TXUSRCLK,
TXUSRCLK2               => user_TXUSRCLK2);

```

## GT\_ETHERNET\_2 VHDL Code

```

-- Component Attribute specification for GT_ETHERNET_2
-- should be placed after architecture declaration but
-- before the begin keyword

component GT_ETHERNET_2
-- synopsis translate_off
generic (
    ALIGN_COMMA_MSB           : boolean := FALSE;
    CHAN_BOND_LIMIT           : integer := 1;
    CHAN_BOND_MODE            : string  := "OFF";
    CHAN_BOND_OFFSET         : integer := 0;
    CHAN_BOND_ONE_SHOT       : boolean := TRUE;
    CHAN_BOND_SEQ_1_1        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_2        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_3        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_4        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_1        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_2        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_3        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_4        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_USE      : boolean := FALSE;
    CHAN_BOND_SEQ_LEN        : integer := 1;
    CHAN_BOND_WAIT           : integer := 7;
    CLK_COR_INSERT_IDLE_FLAG : boolean := FALSE;
    CLK_COR_KEEP_IDLE        : boolean := FALSE;
    CLK_COR_REPEAT_WAIT      : integer := 1;
    CLK_COR_SEQ_1_1          : bit_vector := "00110111100";
    CLK_COR_SEQ_1_2          : bit_vector := "00001010000";
    CLK_COR_SEQ_1_3          : bit_vector := "00000000000";
    CLK_COR_SEQ_1_4          : bit_vector := "00000000000";
    CLK_COR_SEQ_2_1          : bit_vector := "00000000000";
    CLK_COR_SEQ_2_2          : bit_vector := "00000000000";
    CLK_COR_SEQ_2_3          : bit_vector := "00000000000";
    CLK_COR_SEQ_2_4          : bit_vector := "00000000000";
    CLK_COR_SEQ_2_USE        : boolean := FALSE;
    CLK_COR_SEQ_LEN          : integer := 2;
    CLK_CORRECT_USE          : boolean := TRUE;
    COMMA_10B_MASK           : bit_vector := "1111111000";
    CRC_END_OF_PKT           : string    := "K29_7";
    CRC_FORMAT                : string    := "ETHERNET";
    CRC_START_OF_PKT         : string    := "K27_7";
    DEC_MCOMMA_DETECT        : boolean := TRUE;
    DEC_PCOMMA_DETECT        : boolean := TRUE;
    DEC_VALID_COMMA_ONLY     : boolean := TRUE;

```

```

MCOMMA_10B_VALUE      : bit_vector := "1100000000";
MCOMMA_DETECT         : boolean := TRUE;
PCOMMA_10B_VALUE      : bit_vector := "0011111000";
PCOMMA_DETECT         : boolean := TRUE;
REF_CLK_V_SEL         : integer := 0;
RX_BUFFER_USE         : boolean := TRUE;
RX_CRC_USE            : boolean := FALSE;
RX_DATA_WIDTH         : integer := 2;
RX_DECODE_USE         : boolean := TRUE;
RX_LOS_INVALID_INCR   : integer := 1;
RX_LOS_THRESHOLD      : integer := 4;
RX_LOSS_OF_SYNC_FSM   : boolean := TRUE;
SERDES_10B            : boolean := FALSE;
TERMINATION_IMP       : integer := 50;
TX_BUFFER_USE         : boolean := TRUE;
TX_CRC_FORCE_VALUE    : bit_vector := "11010110";
TX_CRC_USE            : boolean := FALSE;
TX_DATA_WIDTH         : integer := 2;
TX_DIFF_CTRL          : integer := 500;
TX_PREEMPHASIS       : integer := 0);

-- synopsys translate_on
port (
    CONFIGOUT           : out std_ulogic;
    RXBUFSTATUS         : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA       : out std_logic_vector(1 downto 0);
    RXCHARISK           : out std_logic_vector(1 downto 0);
    RXCHECKINGCRC       : out std_ulogic;
    RXCLKCORCNT         : out std_logic_vector(2 downto 0);
    RXCOMMADET         : out std_ulogic;
    RXCRCERR           : out std_ulogic;
    RXDATA              : out std_logic_vector(15 downto 0);
    RXDISPERR           : out std_logic_vector(1 downto 0);
    RXLOSSOFSYNC        : out std_logic_vector(1 downto 0);
    RXNOTINTABLE        : out std_logic_vector(1 downto 0);
    RXREALIGN           : out std_ulogic;
    RXRECCLK            : out std_ulogic;
    RXRUNDISP           : out std_logic_vector(1 downto 0);
    TXBUFERR            : out std_ulogic;
    TXKERR              : out std_logic_vector(1 downto 0);
    TXN                 : out std_ulogic;
    TXP                 : out std_ulogic;
    TXRUNDISP           : out std_logic_vector(1 downto 0);
    BREFCLK             : in std_ulogic := 'X';
    BREFCLK2            : in std_ulogic := 'X';
    CONFIGENABLE        : in std_ulogic;
    CONFIGIN            : in std_ulogic;
    ENMCOMMAALIGN       : in std_ulogic;
    ENPCOMMAALIGN       : in std_ulogic;
    LOOPBACK            : in std_logic_vector(1 downto 0);
    POWERDOWN           : in std_ulogic;
    REFCLK              : in std_ulogic;
    REFCLK2             : in std_ulogic;
    REFCLKSEL           : in std_ulogic;
    RXN                 : in std_ulogic;
    RXP                 : in std_ulogic;
    RXPOLARITY          : in std_ulogic;
    RXRESET             : in std_ulogic;

```



```

RXUSRCLK                : in std_ulogic;
RXUSRCLK2               : in std_ulogic;
TXBPASS8B10B           : in std_logic_vector(1 downto 0);
TXCHARDISPMODE         : in std_logic_vector(1 downto 0);
TXCHARDISPVAL          : in std_logic_vector(1 downto 0);
TXCHARISK              : in std_logic_vector(1 downto 0);
TXDATA                 : in std_logic_vector(15 downto 0);
TXFORCECRCERR         : in std_ulogic;
TXINHIBIT              : in std_ulogic;
TXPOLARITY             : in std_ulogic;
TXRESET               : in std_ulogic;
TXUSRCLK              : in std_ulogic;
TXUSRCLK2             : in std_ulogic);

```

```
end component;
```

```

-- Component Attribute specification for GT_ETHERNET_2
-- should be placed after architecture declaration but
-- before the begin keyword

```

```
-- Enter constraints here
```

```

-- Component Instantiation for GT_ETHERNET_2 should be placed
-- in architecture after the begin keyword

```

```
GT_ETHERNET_2_INSTANCE_NAME : GT_ETHERNET_2
```

```
-- synopsys translate_off
```

```
generic map (
```

```

    ALIGN_COMMA_MSB           => boolean_value,
    CHAN_BOND_LIMIT           => integer_value,
    CHAN_BOND_MODE            => string_value,
    CHAN_BOND_OFFSET          => integer_value,
    CHAN_BOND_ONE_SHOT        => boolean_value,
    CHAN_BOND_SEQ_1_1         => bit_value,
    CHAN_BOND_SEQ_1_2         => bit_value,
    CHAN_BOND_SEQ_1_3         => bit_value,
    CHAN_BOND_SEQ_1_4         => bit_value,
    CHAN_BOND_SEQ_2_1         => bit_value,
    CHAN_BOND_SEQ_2_2         => bit_value,
    CHAN_BOND_SEQ_2_3         => bit_value,
    CHAN_BOND_SEQ_2_4         => bit_value,
    CHAN_BOND_SEQ_2_USE       => boolean_value,
    CHAN_BOND_SEQ_LEN         => integer_value,
    CHAN_BOND_WAIT            => integer_value,
    CLK_COR_INSERT_IDLE_FLAG  => boolean_value,
    CLK_COR_KEEP_IDLE         => boolean_value,
    CLK_COR_REPEAT_WAIT       => integer_value,
    CLK_COR_SEQ_1_1           => bit_value,
    CLK_COR_SEQ_1_2           => bit_value,
    CLK_COR_SEQ_1_3           => bit_value,
    CLK_COR_SEQ_1_4           => bit_value,
    CLK_COR_SEQ_2_1           => bit_value,
    CLK_COR_SEQ_2_2           => bit_value,
    CLK_COR_SEQ_2_3           => bit_value,
    CLK_COR_SEQ_2_4           => bit_value,
    CLK_COR_SEQ_2_USE         => boolean_value,
    CLK_COR_SEQ_LEN           => integer_value,
    CLK_CORRECT_USE           => boolean_value,

```

```

COMMA_10B_MASK                => bit_value,
CRC_END_OF_PKT                => string_value,
CRC_FORMAT                    => string_value,
CRC_START_OF_PKT              => string_value,
DEC_MCOMMA_DETECT             => boolean_value,
DEC_PCOMMA_DETECT             => boolean_value,
DEC_VALID_COMMA_ONLY          => boolean_value,
MCOMMA_10B_VALUE              => bit_value,
MCOMMA_DETECT                 => boolean_value,
PCOMMA_10B_VALUE              => bit_value,
PCOMMA_DETECT                 => boolean_value,
REF_CLK_V_SEL                 => integer_value,
RX_BUFFER_USE                 => boolean_value,
RX_CRC_USE                     => boolean_value,
RX_DATA_WIDTH                 => integer_value,
RX_DECODE_USE                 => boolean_value,
RX_LOS_INVALID_INCR           => integer_value,
RX_LOS_THRESHOLD              => integer_value,
RX_LOSS_OF_SYNC_FSM           => boolean_value,
SERDES_10B                    => boolean_value,
TERMINATION_IMP               => integer_value,
TX_BUFFER_USE                 => boolean_value,
TX_CRC_FORCE_VALUE            => bit_value,
TX_CRC_USE                     => boolean_value,
TX_DATA_WIDTH                 => integer_value,
TX_DIFF_CTRL                  => integer_value,
TX_PREEMPHASIS                => integer_value)

-- synopsys translate_on
port map (
  CONFIGOUT                    => user_CONFIGOUT,
  RXBUFSTATUS                  => user_RXBUFSTATUS,
  RXCHARISCOMMA                => user_RXCHARISCOMMA,
  RXCHARISK                     => user_RXCHARISK,
  RXCHECKINGCRC                => user_RXCHECKINGCRC,
  RXCLKCORCNT                  => user_RXCLKCORCNT,
  RXCOMMADET                   => user_RXCOMMADET,
  RXCRCERR                      => user_RXCRCERR,
  RXDATA                        => user_RXDATA,
  RXDISPERR                     => user_RXDISPERR,
  RXLOSSOFSYNC                 => user_RXLOSSOFSYNC,
  RXNOTINTABLE                 => user_RXNOTINTABLE,
  RXREALIGN                     => user_RXREALIGN,
  RXRECCLK                      => user_RXRECCLK,
  RXRUNDISP                     => user_RXRUNDISP,
  TXBUFERR                      => user_TXBUFERR,
  TXKERR                        => user_TXKERR,
  TXN                           => user_TXN,
  TXP                           => user_TXP,
  TXRUNDISP                     => user_TXRUNDISP,
  BREFCLK                       => user_BREFCLK,
  BREFCLK2                      => user_BREFCLK2,
  CONFIGENABLE                 => user_CONFIGENABLE,
  CONFIGIN                      => user_CONFIGIN,
  ENMCOMMAALIGN                 => user_ENMCOMMAALIGN,
  ENPCOMMAALIGN                 => user_ENPCOMMAALIGN,
  LOOPBACK                      => user_LOOPBACK,
  POWERDOWN                     => user_POWERDOWN,

```

```

REFCLK                => user_REFCLK,
REFCLK2               => user_REFCLK2,
REFCLKSEL             => user_REFCLKSEL,
RXN                   => user_RXN,
RXP                   => user_RXP,
RXPOLARITY            => user_RXPOLARITY,
RXRESET               => user_RXRESET,
RXUSRCLK              => user_RXUSRCLK,
RXUSRCLK2             => user_RXUSRCLK2,
TXBYPASS8B10B        => user_TXBYPASS8B10B,
TXCHARDISPMODE        => user_TXCHARDISPMODE,
TXCHARDISPVAL         => user_TXCHARDISPVAL,
TXCHARISK             => user_TXCHARISK,
TXDATA                => user_TXDATA,
TXFORCECERCERR       => user_TXFORCECERCERR,
TXINHIBIT             => user_TXINHIBIT,
TXPOLARITY            => user_TXPOLARITY,
TXRESET               => user_TXRESET,
TXUSRCLK              => user_TXUSRCLK,
TXUSRCLK2             => user_TXUSRCLK2);

```

## GT\_ETHERNET\_4 VHDL Code

```

-- Component Attribute specification for GT_ETHERNET_4
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

component GT_ETHERNET_4
-- synopsys translate_off
generic (
    ALIGN_COMMA_MSB           : boolean := FALSE;
    CHAN_BOND_LIMIT           : integer := 1;
    CHAN_BOND_MODE             : string := "OFF";
    CHAN_BOND_OFFSET          : integer := 0;
    CHAN_BOND_ONE_SHOT        : boolean := TRUE;
    CHAN_BOND_SEQ_1_1         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_2         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_3         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_4         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_1         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_2         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_3         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_4         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_USE       : boolean := FALSE;
    CHAN_BOND_SEQ_LEN         : integer := 1;
    CHAN_BOND_WAIT            : integer := 7;
    CLK_COR_INSERT_IDLE_FLAG  : boolean := FALSE;
    CLK_COR_KEEP_IDLE         : boolean := FALSE;
    CLK_COR_REPEAT_WAIT       : integer := 1;
    CLK_COR_SEQ_1_1           : bit_vector := "00110111100";
    CLK_COR_SEQ_1_2           : bit_vector := "00001010000";
    CLK_COR_SEQ_1_3           : bit_vector := "00000000000";
    CLK_COR_SEQ_1_4           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_1           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_2           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_3           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_4           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_USE         : boolean := FALSE;

```

```

CLK_COR_SEQ_LEN           : integer := 2;
CLK_CORRECT_USE          : boolean := TRUE;
COMMA_10B_MASK           : bit_vector := "1111111000";
CRC_END_OF_PKT           : string := "K29_7";
CRC_FORMAT               : string := "ETHERNET";
CRC_START_OF_PKT         : string := "K27_7";
DEC_MCOMMA_DETECT        : boolean := TRUE;
DEC_PCOMMA_DETECT        : boolean := TRUE;
DEC_VALID_COMMA_ONLY     : boolean := TRUE;
MCOMMA_10B_VALUE         : bit_vector := "1100000000";
MCOMMA_DETECT            : boolean := TRUE;
PCOMMA_10B_VALUE         : bit_vector := "0011111000";
PCOMMA_DETECT            : boolean := TRUE;
REF_CLK_V_SEL            : integer := 0;
RX_BUFFER_USE            : boolean := TRUE;
RX_CRC_USE               : boolean := FALSE;
RX_DATA_WIDTH            : integer := 4;
RX_DECODE_USE           : boolean := TRUE;
RX_LOS_INVALID_INCR      : integer := 1;
RX_LOS_THRESHOLD         : integer := 4;
RX_LOSS_OF_SYNC_FSM      : boolean := TRUE;
SERDES_10B               : boolean := FALSE;
TERMINATION_IMP          : integer := 50;
TX_BUFFER_USE            : boolean := TRUE;
TX_CRC_FORCE_VALUE       : bit_vector := "11010110";
TX_CRC_USE               : boolean := FALSE;
TX_DATA_WIDTH            : integer := 4;
TX_DIFF_CTRL             : integer := 500;
TX_PREEMPHASIS          : integer := 0);

-- synopsys translate_on
port (
  CONFIGOUT               : out std_ulogic;
  RXBUFSTATUS             : out std_logic_vector(1 downto 0);
  RXCHARISCOMMA           : out std_logic_vector(3 downto 0);
  RXCHARISK               : out std_logic_vector(3 downto 0);
  RXCHECKINGCRC           : out std_ulogic;
  RXCLKCORCNT             : out std_logic_vector(2 downto 0);
  RXCOMMADET              : out std_ulogic;
  RXCRCERR                : out std_ulogic;
  RXDATA                  : out std_logic_vector(31 downto 0);
  RXDISPERR               : out std_logic_vector(3 downto 0);
  RXLOSSOFSYNC            : out std_logic_vector(1 downto 0);
  RXNOTINTABLE            : out std_logic_vector(3 downto 0);
  RXREALIGN               : out std_ulogic;
  RXRECCLK                : out std_ulogic;
  RXRUNDISP               : out std_logic_vector(3 downto 0);
  TXBUFERR                : out std_ulogic;
  TXKERR                  : out std_logic_vector(3 downto 0);
  TXN                     : out std_ulogic;
  TXP                     : out std_ulogic;
  TXRUNDISP               : out std_logic_vector(3 downto 0);
  BREFCLK                 : in std_ulogic := 'X';
  BREFCLK2                : in std_ulogic := 'X';
  CONFIGENABLE            : in std_ulogic;
  CONFIGIN                : in std_ulogic;
  ENMCOMMAALIGN           : in std_ulogic;
  ENPCOMMAALIGN           : in std_ulogic;

```

```

LOOPBACK                : in std_logic_vector(1 downto 0);
POWERDOWN               : in std_ulogic;
REFCLK                  : in std_ulogic;
REFCLK2                 : in std_ulogic;
REFCLKSEL               : in std_ulogic;
RXN                     : in std_ulogic;
RXP                     : in std_ulogic;
RXPOLARITY              : in std_ulogic;
RXRESET                 : in std_ulogic;
RXUSRCLK                : in std_ulogic;
RXUSRCLK2               : in std_ulogic;
TXBYPASS8B10B          : in std_logic_vector(3 downto 0);
TXCHARDISPMODE          : in std_logic_vector(3 downto 0);
TXCHARDISPVAL           : in std_logic_vector(3 downto 0);
TXCHARISK                : in std_logic_vector(3 downto 0);
TXDATA                  : in std_logic_vector(31 downto 0);
TXFORCECERCERR          : in std_ulogic;
TXINHIBIT               : in std_ulogic;
TXPOLARITY              : in std_ulogic;
TXRESET                 : in std_ulogic;
TXUSRCLK                : in std_ulogic;
TXUSRCLK2               : in std_ulogic);

```

```
end component;
```

```
-- Component Attribute specification for GT_ETHERNET_4
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter constraints here
```

```
-- Component Instantiation for GT_ETHERNET_4 should be placed
-- in architecture after the begin keyword
```

```
GT_ETHERNET_4_INSTANCE_NAME : GT_ETHERNET_4
```

```
-- synopsys translate_off
```

```
generic map (
```

```

ALIGN_COMMA_MSB          => boolean_value,
CHAN_BOND_LIMIT           => integer_value,
CHAN_BOND_MODE            => string_value,
CHAN_BOND_OFFSET          => integer_value,
CHAN_BOND_ONE_SHOT        => boolean_value,
CHAN_BOND_SEQ_1_1         => bit_value,
CHAN_BOND_SEQ_1_2         => bit_value,
CHAN_BOND_SEQ_1_3         => bit_value,
CHAN_BOND_SEQ_1_4         => bit_value,
CHAN_BOND_SEQ_2_1         => bit_value,
CHAN_BOND_SEQ_2_2         => bit_value,
CHAN_BOND_SEQ_2_3         => bit_value,
CHAN_BOND_SEQ_2_4         => bit_value,
CHAN_BOND_SEQ_2_USE        => boolean_value,
CHAN_BOND_SEQ_LEN         => integer_value,
CHAN_BOND_WAIT            => integer_value,
CLK_COR_INSERT_IDLE_FLAG  => boolean_value,
CLK_COR_KEEP_IDLE         => boolean_value,
CLK_COR_REPEAT_WAIT       => integer_value,
CLK_COR_SEQ_1_1           => bit_value,
CLK_COR_SEQ_1_2           => bit_value,

```

```

CLK_COR_SEQ_1_3          => bit_value,
CLK_COR_SEQ_1_4          => bit_value,
CLK_COR_SEQ_2_1          => bit_value,
CLK_COR_SEQ_2_2          => bit_value,
CLK_COR_SEQ_2_3          => bit_value,
CLK_COR_SEQ_2_4          => bit_value,
CLK_COR_SEQ_2_USE        => boolean_value,
CLK_COR_SEQ_LEN          => integer_value,
CLK_CORRECT_USE          => boolean_value,
COMMA_10B_MASK           => bit_value,
CRC_END_OF_PKT           => string_value,
CRC_FORMAT                => string_value,
CRC_START_OF_PKT         => string_value,
DEC_MCOMMA_DETECT        => boolean_value,
DEC_PCOMMA_DETECT        => boolean_value,
DEC_VALID_COMMA_ONLY     => boolean_value,
MCOMMA_10B_VALUE         => bit_value,
MCOMMA_DETECT            => boolean_value,
PCOMMA_10B_VALUE         => bit_value,
PCOMMA_DETECT            => boolean_value,
REF_CLK_V_SEL            => integer_value,
RX_BUFFER_USE            => boolean_value,
RX_CRC_USE                => boolean_value,
RX_DATA_WIDTH            => integer_value,
RX_DECODE_USE            => boolean_value,
RX_LOS_INVALID_INCR      => integer_value,
RX_LOS_THRESHOLD         => integer_value,
RX_LOSS_OF_SYNC_FSM      => boolean_value,
SERDES_10B                => boolean_value,
TERMINATION_IMP          => integer_value,
TX_BUFFER_USE            => boolean_value,
TX_CRC_FORCE_VALUE       => bit_value,
TX_CRC_USE                => boolean_value,
TX_DATA_WIDTH            => integer_value,
TX_DIFF_CTRL             => integer_value,
TX_PREEMPHASIS           => integer_value)

-- synopsys translate_on
port map (
    CONFIGOUT              => user_CONFIGOUT,
    RXBUFSTATUS            => user_RXBUFSTATUS,
    RXCHARISCOMMA          => user_RXCHARISCOMMA,
    RXCHARISK              => user_RXCHARISK,
    RXCHECKINGCRC          => user_RXCHECKINGCRC,
    RXCLKCORCNT            => user_RXCLKCORCNT,
    RXCOMMADET             => user_RXCOMMADET,
    RXCRCERR               => user_RXCRCERR,
    RXDATA                 => user_RXDATA,
    RXDISPERR              => user_RXDISPERR,
    RXLOSSOFSYNC           => user_RXLOSSOFSYNC,
    RXNOTINTABLE           => user_RXNOTINTABLE,
    RXREALIGN              => user_RXREALIGN,
    RXRECCLK               => user_RXRECCLK,
    RXRUNDISP              => user_RXRUNDISP,
    TXBUFERR               => user_TXBUFERR,
    TXKERR                 => user_TXKERR,
    TXN                    => user_TXN,
    TXP                    => user_TXP,

```

```

TXRUNDISP           => user_TXRUNDISP ,
BREFCLK             => user_BREFCLK ,
BREFCLK2           => user_BREFCLK2 ,
CONFIGENABLE       => user_CONFIGENABLE ,
CONFIGIN           => user_CONFIGIN ,
ENMCOMMAALIGN      => user_ENMCOMMAALIGN ,
ENPCOMMAALIGN      => user_ENPCOMMAALIGN ,
LOOPBACK           => user_LOOPBACK ,
POWERDOWN          => user_POWERDOWN ,
REFCLK             => user_REFCLK ,
REFCLK2            => user_REFCLK2 ,
REFCLKSEL          => user_REFCLKSEL ,
RXN                => user_RXN ,
RXP                => user_RXP ,
RXPOLARITY         => user_RXPOLARITY ,
RXRESET            => user_RXRESET ,
RXUSRCLK           => user_RXUSRCLK ,
RXUSRCLK2          => user_RXUSRCLK2 ,
TXBYPASS8B10B     => user_TXBYPASS8B10B ,
TXCHARDISPMODE     => user_TXCHARDISPMODE ,
TXCHARDISPVAL      => user_TXCHARDISPVAL ,
TXCHARISK          => user_TXCHARISK ,
TXDATA             => user_TXDATA ,
TXFORCECRCERR     => user_TXFORCECRCERR ,
TXINHIBIT          => user_TXINHIBIT ,
TXPOLARITY         => user_TXPOLARITY ,
TXRESET           => user_TXRESET ,
TXUSRCLK           => user_TXUSRCLK ,
TXUSRCLK2          => user_TXUSRCLK2 );

```

## Verilog Instantiation Templates

### GT\_ETHERNET\_1 Verilog Code

```

GT_ETHERNET_1 GT_ETHERNET_1_name(
  .CONFIGOUT (user_CONFIGOUT),
  .RXBUFSTATUS (user_RXBUFSTATUS),
  .RXCHARISCOMMA (user_RXCHARISCOMMA),
  .RXCHARISK (user_RXCHARISK),
  .RXCHECKINGCRC (user_RXCHECKINGCRC),
  .RXCLKCORCNT (user_RXCLKCORCNT),
  .RXCOMMADET (user_RXCOMMADET),
  .RXCRCERR (user_RXCRCERR),
  .RXDATA (user_RXDATA),
  .RXDISPERR (user_RXDISPERR),
  .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
  .RXNOTINTABLE (user_RXNOTINTABLE),
  .RXREALIGN (user_RXREALIGN),
  .RXRECCLK (user_RXRECCLK),
  .RXRUNDISP (user_RXRUNDISP),
  .TXBUFERR (user_TXBUFERR),
  .TXKERR (user_TXKERR),
  .TXN (user_TXN),
  .TXP (user_TXP),
  .TXRUNDISP (user_TXRUNDISP),

  .BREFCLK (user_BREFCLK),

```

```

.BREFCLK2 (user_BREFCLK2),
.CONFIGENABLE (user_CONFIGENABLE),
.CONFIGIN (user_CONFIGIN),
.ENMCOMMAALIGN (user_ENMCOMMAALIGN),
.ENPCOMMAALIGN (user_ENPCOMMAALIGN),
.LOOPBACK (user_LOOPBACK),
.POWERDOWN (user_POWERDOWN),
.REFCLK (user_REFCLK),
.REFCLK2 (user_REFCLK2),
.REFCLKSEL (user_REFCLKSEL),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXFORCECERR (user_TXFORCECERR),
.TXINHIBIT (user_TXINHIBIT),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_MSB = "FALSE";
defparam user_instance_name.CHAN_BOND_LIMIT = 1;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_OFFSET = 0;
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "TRUE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 1;
defparam user_instance_name.CHAN_BOND_WAIT = 7;
defparam user_instance_name.CLK_COR_INSERT_IDLE_FLAG = "FALSE";
defparam user_instance_name.CLK_COR_KEEP_IDLE = "FALSE";
defparam user_instance_name.CLK_COR_REPEAT_WAIT = 1;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b001101111100;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00001010000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 2;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";

```



```

defparam user_instance_name.COMMA_10B_MASK = 10'b1111111000;
defparam user_instance_name.CRC_END_OF_PKT = "K29_7";
defparam user_instance_name.CRC_FORMAT = "ETHERNET";
defparam user_instance_name.CRC_START_OF_PKT = "K27_7";
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1100000000;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0011111000;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.REF_CLK_V_SEL = 0;
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_CRC_USE = "FALSE";
defparam user_instance_name.RX_DATA_WIDTH = 1;
defparam user_instance_name.RX_DECODE_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SERDES_10B = "FALSE";
defparam user_instance_name.TERMINATION_IMP = 50;
defparam user_instance_name.TX_BUFFER_USE = "TRUE";
defparam user_instance_name.TX_CRC_FORCE_VALUE = 8'b11010110;
defparam user_instance_name.TX_CRC_USE = "FALSE";
defparam user_instance_name.TX_DATA_WIDTH = 1;
defparam user_instance_name.TX_DIFF_CTRL = 500;
defparam user_instance_name.TX_PREEMPHASIS = 0;

```

## GT\_ETHERNET\_2 Verilog Code

```

GT_ETHERNET_2 GT_ETHERNET_2_name(
    .CONFIGOUT (user_CONFIGOUT),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCHECKINGCRC (user_RXCHECKINGCRC),
    .RXCLKCORCNT (user_RXCLKCORCNT),
    .RXCOMMADET (user_RXCOMMADET),
    .RXCRCERR (user_RXCRCERR),
    .RXDATA (user_RXDATA),
    .RXDISPERR (user_RXDISPERR),
    .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
    .RXNOTINTABLE (user_RXNOTINTABLE),
    .RXREALIGN (user_RXREALIGN),
    .RXRECCLK (user_RXRECCLK),
    .RXRUNDISP (user_RXRUNDISP),
    .TXBUFERR (user_TXBUFERR),
    .TXKERR (user_TXKERR),
    .TXN (user_TXN),
    .TXP (user_TXP),
    .TXRUNDISP (user_TXRUNDISP),

    .BREFCLK (user_BREFCLK),
    .BREFCLK2 (user_BREFCLK2),
    .CONFIGENABLE (user_CONFIGENABLE),
    .CONFIGIN (user_CONFIGIN),
    .ENMCOMMAALIGN (user_ENMCOMMAALIGN),
    .ENPCOMMAALIGN (user_ENPCOMMAALIGN),

```

```

.LOOPBACK (user_LOOPBACK),
.POWERDOWN (user_POWERDOWN),
.REFCLK (user_REFCLK),
.REFCLK2 (user_REFCLK2),
.REFCLKSEL (user_REFCLKSEL),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXFORCECRCERR (user_TXFORCECRCERR),
.TXINHIBIT (user_TXINHIBIT),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_MSB = "FALSE";
defparam user_instance_name.CHAN_BOND_LIMIT = 1;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_OFFSET = 0;
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "TRUE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 1;
defparam user_instance_name.CHAN_BOND_WAIT = 7;
defparam user_instance_name.CLK_COR_INSERT_IDLE_FLAG = "FALSE";
defparam user_instance_name.CLK_COR_KEEP_IDLE = "FALSE";
defparam user_instance_name.CLK_COR_REPEAT_WAIT = 1;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00110111100;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00001010000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 2;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b1111111000;
defparam user_instance_name.CRC_END_OF_PKT = "K29_7";
defparam user_instance_name.CRC_FORMAT = "ETHERNET";
defparam user_instance_name.CRC_START_OF_PKT = "K27_7";
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";

```

```

defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1100000000;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0011111000;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.REF_CLK_V_SEL = 0;
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_CRC_USE = "FALSE";
defparam user_instance_name.RX_DATA_WIDTH = 2;
defparam user_instance_name.RX_DECODE_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SERDES_10B = "FALSE";
defparam user_instance_name.TERMINATION_IMP = 50;
defparam user_instance_name.TX_BUFFER_USE = "TRUE";
defparam user_instance_name.TX_CRC_FORCE_VALUE = 8'b11010110;
defparam user_instance_name.TX_CRC_USE = "FALSE";
defparam user_instance_name.TX_DATA_WIDTH = 2;
defparam user_instance_name.TX_DIFF_CTRL = 500;
defparam user_instance_name.TX_PREEMPHASIS = 0;

```

## GT\_ETHERNET\_4 Verilog Code

```

GT_ETHERNET_4 GT_ETHERNET_4_name(
    .CONFIGOUT (user_CONFIGOUT),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCHECKINGCRC (user_RXCHECKINGCRC),
    .RXCLKCORCNT (user_RXCLKCORCNT),
    .RXCOMMADET (user_RXCOMMADET),
    .RXCRCERR (user_RXCRCERR),
    .RXDATA (user_RXDATA),
    .RXDISPERR (user_RXDISPERR),
    .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
    .RXNOTINTABLE (user_RXNOTINTABLE),
    .RXREALIGN (user_RXREALIGN),
    .RXRECCLK (user_RXRECCLK),
    .RXRUNDISP (user_RXRUNDISP),
    .TXBUFERR (user_TXBUFERR),
    .TXKERR (user_TXKERR),
    .TXN (user_TXN),
    .TXP (user_TXP),
    .TXRUNDISP (user_TXRUNDISP),

    .BREFCLK (user_BREFCLK),
    .BREFCLK2 (user_BREFCLK2),
    .CONFIGENABLE (user_CONFIGENABLE),
    .CONFIGIN (user_CONFIGIN),
    .ENMCOMMAALIGN (user_ENMCOMMAALIGN),
    .ENPCOMMAALIGN (user_ENPCOMMAALIGN),
    .LOOPBACK (user_LOOPBACK),
    .POWERDOWN (user_POWERDOWN),
    .REFCLK (user_REFCLK),
    .REFCLK2 (user_REFCLK2),
    .REFCLKSEL (user_REFCLKSEL),

```

```

.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXFORCECRCERR (user_TXFORCECRCERR),
.TXINHIBIT (user_TXINHIBIT),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_MSB = "FALSE";
defparam user_instance_name.CHAN_BOND_LIMIT = 1;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_OFFSET = 0;
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "TRUE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 1;
defparam user_instance_name.CHAN_BOND_WAIT = 7;
defparam user_instance_name.CLK_COR_INSERT_IDLE_FLAG = "FALSE";
defparam user_instance_name.CLK_COR_KEEP_IDLE = "FALSE";
defparam user_instance_name.CLK_COR_REPEAT_WAIT = 1;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00110111100;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00001010000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 2;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b1111111000;
defparam user_instance_name.CRC_END_OF_PKT = "K29_7";
defparam user_instance_name.CRC_FORMAT = "ETHERNET";
defparam user_instance_name.CRC_START_OF_PKT = "K27_7";
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1100000000;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0011111000;

```

```
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.REF_CLK_V_SEL = 0;
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_CRC_USE = "FALSE";
defparam user_instance_name.RX_DATA_WIDTH = 4;
defparam user_instance_name.RX_DECODE_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SERDES_10B = "FALSE";
defparam user_instance_name.TERMINATION_IMP = 50;
defparam user_instance_name.TX_BUFFER_USE = "TRUE";
defparam user_instance_name.TX_CRC_FORCE_VALUE = 8'b11010110;
defparam user_instance_name.TX_CRC_USE = "FALSE";
defparam user_instance_name.TX_DATA_WIDTH = 4;
defparam user_instance_name.TX_DIFF_CTRL = 500;
defparam user_instance_name.TX_PREEMPHASIS = 0;
```

## Commonly Used Constraints

None



## GT\_FIBRE\_CHAN\_n

### Gigabit Transceiver for High-Speed I/O

#### Architectures Supported


GT10_FIBRERE_CHAN_n	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive*
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
*Supported for Virtex-II Pro but not for Virtex-II or Virtex-II Pro X.	

This Fibre Channel gigabit transceiver supports 1, 2, and 4-byte data paths. The letter *n* represents number of bytes of the data path. Valid values are 1, 2 or 4.

You can also set attributes for the primitives. See the *RocketIO Transceiver User Guide* for a description of these attributes and their default attribute values.


The following figures list the input and output ports for all values of *n*. For a description of each of the ports, see the *RocketIO Transceiver User Guide*.

GT\_FIBRE\_CHAN\_1

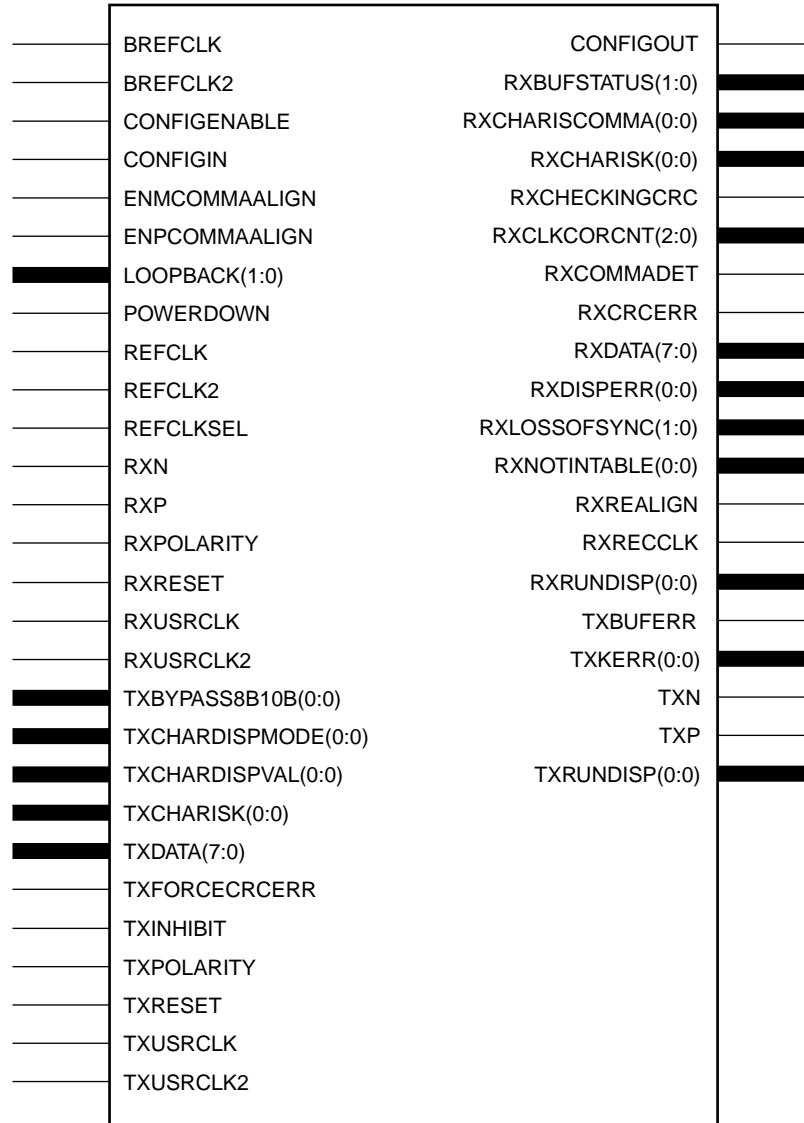


X9895



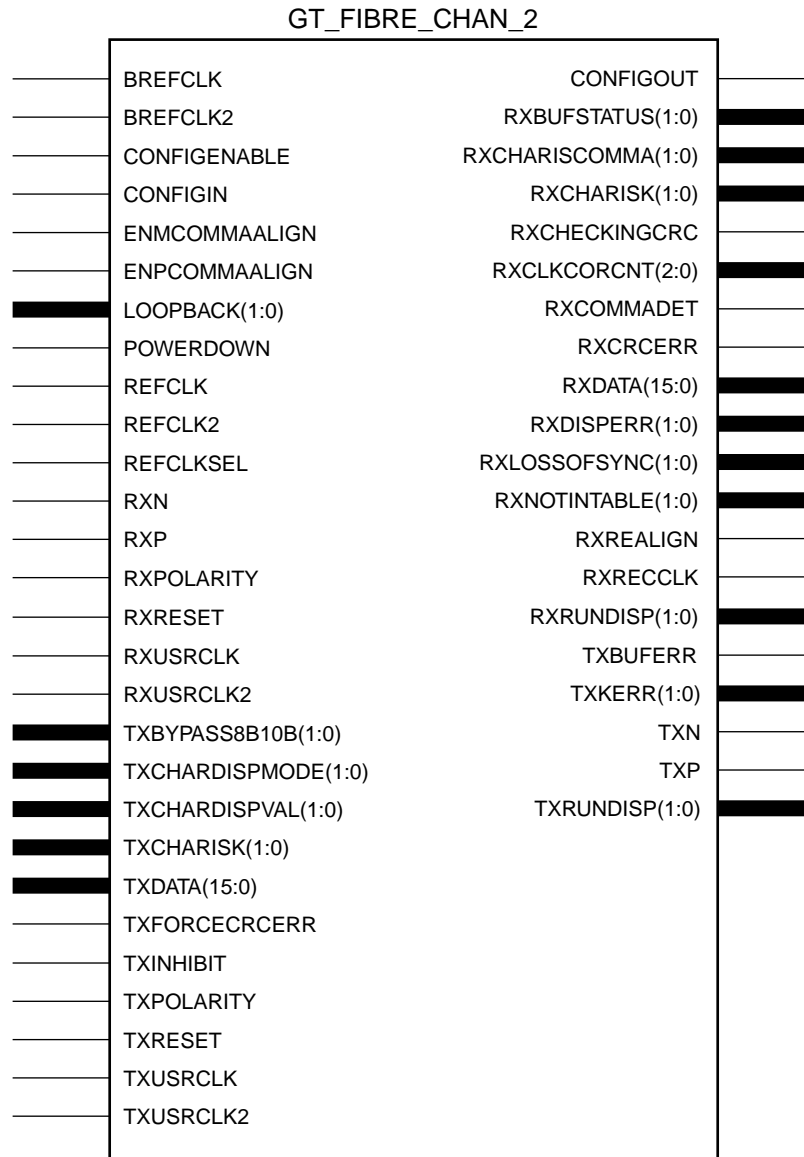

X9896

GT\_FIBRE\_CHAN\_4

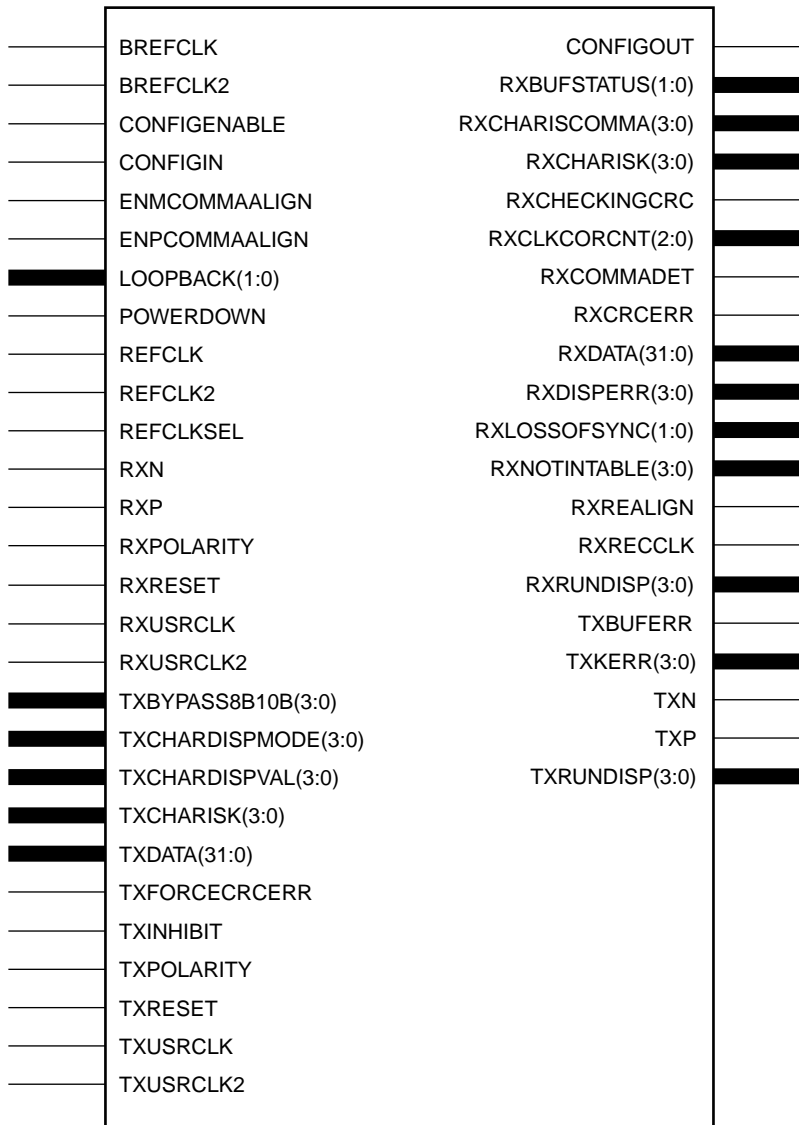

X9897

## Usage

This design element is instantiated rather than inferred in the design code.

## VHDL Instantiation Templates

### GT\_FIBRE\_CHAN\_1 VHDL Code

```
-- Component Attribute specification for GT_FIBRE_CHAN_1
-- should be placed after architecture declaration but
-- before the begin keyword

component GT_FIBRE_CHAN_1
-- synopsys translate_off
generic (
    ALIGN_COMMA_MSB           : boolean := FALSE;
    CHAN_BOND_LIMIT           : integer := 1;
    CHAN_BOND_MODE             : string := "OFF";
    CHAN_BOND_OFFSET          : integer := 0;
    CHAN_BOND_ONE_SHOT        : boolean := TRUE;
    CHAN_BOND_SEQ_1_1         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_2         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_3         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_4         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_1         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_2         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_3         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_4         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_USE       : boolean := FALSE;
    CHAN_BOND_SEQ_LEN         : integer := 1;
    CHAN_BOND_WAIT            : integer := 7;
    CLK_COR_INSERT_IDLE_FLAG  : boolean := FALSE;
    CLK_COR_KEEP_IDLE         : boolean := FALSE;
    CLK_COR_REPEAT_WAIT       : integer := 2;
    CLK_COR_SEQ_1_1           : bit_vector := "00110111100";
    CLK_COR_SEQ_1_2           : bit_vector := "00010010101";
    CLK_COR_SEQ_1_3           : bit_vector := "00010110101";
    CLK_COR_SEQ_1_4           : bit_vector := "00010110101";
    CLK_COR_SEQ_2_1           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_2           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_3           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_4           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_USE         : boolean := FALSE;
    CLK_COR_SEQ_LEN           : integer := 4;
    CLK_CORRECT_USE           : boolean := TRUE;
    COMMA_10B_MASK            : bit_vector := "1111111000";
    CRC_END_OF_PKT            : string := "K29_7";
    CRC_FORMAT                 : string := "FIBRE_CHAN";
    CRC_START_OF_PKT          : string := "K27_7";
    DEC_MCOMMA_DETECT         : boolean := TRUE;
    DEC_PCOMMA_DETECT         : boolean := TRUE;
    DEC_VALID_COMMA_ONLY      : boolean := TRUE;
    MCOMMA_10B_VALUE          : bit_vector := "1100000000";
    MCOMMA_DETECT             : boolean := TRUE;
    PCOMMA_10B_VALUE          : bit_vector := "0011111000";
    PCOMMA_DETECT             : boolean := TRUE;
    REF_CLK_V_SEL             : integer := 0;

```

```

RX_BUFFER_USE           : boolean := TRUE;
RX_CRC_USE              : boolean := FALSE;
RX_DATA_WIDTH          : integer  := 1;
RX_DECODE_USE          : boolean := TRUE;
RX_LOS_INVALID_INCR    : integer  := 1;
RX_LOS_THRESHOLD       : integer  := 4;
RX_LOSS_OF_SYNC_FSM    : boolean := TRUE;
SERDES_10B             : boolean := FALSE;
TERMINATION_IMP        : integer  := 50;
TX_BUFFER_USE          : boolean := TRUE;
TX_CRC_FORCE_VALUE     : bit_vector := "11010110";
TX_CRC_USE             : boolean := FALSE;
TX_DATA_WIDTH          : integer  := 1;
TX_DIFF_CTRL           : integer  := 500;
TX_PREEMPHASIS        : integer  := 0;

-- synopsys translate_on
port (
  CONFIGOUT           : out std_ulogic;
  RXBUFSTATUS         : out std_logic_vector(1 downto 0);
  RXCHARISCOMMA       : out std_logic_vector(0 downto 0);
  RXCHARISK           : out std_logic_vector(0 downto 0);
  RXCHECKINGCRC       : out std_ulogic;
  RXCLKCORCNT         : out std_logic_vector(2 downto 0);
  RXCOMMADET          : out std_ulogic;
  RXCRCERR            : out std_ulogic;
  RXDATA              : out std_logic_vector(7 downto 0);
  RXDISPERR           : out std_logic_vector(0 downto 0);
  RXLOSSOFSYNC        : out std_logic_vector(1 downto 0);
  RXNOTINTABLE        : out std_logic_vector(0 downto 0);
  RXREALIGN           : out std_ulogic;
  RXRECCLK            : out std_ulogic;
  RXRUNDISP           : out std_logic_vector(0 downto 0);
  TXBUFERR            : out std_ulogic;
  TXKERR              : out std_logic_vector(0 downto 0);
  TXN                 : out std_ulogic;
  TXP                 : out std_ulogic;
  TXRUNDISP           : out std_logic_vector(0 downto 0);
  BREFCLK              : in std_ulogic := 'X';
  BREFCLK2            : in std_ulogic := 'X';
  CONFIGENABLE        : in std_ulogic;
  CONFIGIN            : in std_ulogic;
  ENMCOMMAALIGN       : in std_ulogic;
  ENPCOMMAALIGN       : in std_ulogic;
  LOOPBACK            : in std_logic_vector(1 downto 0);
  POWERDOWN           : in std_ulogic;
  REFCLK              : in std_ulogic;
  REFCLK2             : in std_ulogic;
  REFCLKSEL           : in std_ulogic;
  RXN                 : in std_ulogic;
  RXP                 : in std_ulogic;
  RXPOLARITY          : in std_ulogic;
  RXRESET             : in std_ulogic;
  RXUSRCLK            : in std_ulogic;
  RXUSRCLK2           : in std_ulogic;
  TXBYPASS8B10B       : in std_logic_vector(0 downto 0);
  TXCHARDISPMODE      : in std_logic_vector(0 downto 0);
  TXCHARDISPVAL       : in std_logic_vector(0 downto 0);

```

```

TXCHARISK                : in std_logic_vector(0 downto 0);
TXDATA                   : in std_logic_vector(7 downto 0);
TXFORCECERCERR           : in std_ulogic;
TXINHIBIT                : in std_ulogic;
TXPOLARITY               : in std_ulogic;
TXRESET                  : in std_ulogic;
TXUSRCLK                 : in std_ulogic;
TXUSRCLK2                : in std_ulogic);

```

```
end component;
```

```
-- Component Attribute specification for GT_FIBRE_CHAN_1
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter constraints here
```

```
-- Component Instantiation for GT_FIBRE_CHAN_1 should be placed
-- in architecture after the begin keyword
```

```
GT_FIBRE_CHAN_1_INSTANCE_NAME : GT_FIBRE_CHAN_1
```

```
-- synopsys translate_off
```

```
generic map (
  ALIGN_COMMA_MSB        => boolean_value,
  CHAN_BOND_LIMIT        => integer_value,
  CHAN_BOND_MODE         => string_value,
  CHAN_BOND_OFFSET      => integer_value,
  CHAN_BOND_ONE_SHOT    => boolean_value,
  CHAN_BOND_SEQ_1_1     => bit_value,
  CHAN_BOND_SEQ_1_2     => bit_value,
  CHAN_BOND_SEQ_1_3     => bit_value,
  CHAN_BOND_SEQ_1_4     => bit_value,
  CHAN_BOND_SEQ_2_1     => bit_value,
  CHAN_BOND_SEQ_2_2     => bit_value,
  CHAN_BOND_SEQ_2_3     => bit_value,
  CHAN_BOND_SEQ_2_4     => bit_value,
  CHAN_BOND_SEQ_2_USE   => boolean_value,
  CHAN_BOND_SEQ_LEN     => integer_value,
  CHAN_BOND_WAIT        => integer_value,
  CLK_COR_INSERT_IDLE_FLAG => boolean_value,
  CLK_COR_KEEP_IDLE    => boolean_value,
  CLK_COR_REPEAT_WAIT  => integer_value,
  CLK_COR_SEQ_1_1     => bit_value,
  CLK_COR_SEQ_1_2     => bit_value,
  CLK_COR_SEQ_1_3     => bit_value,
  CLK_COR_SEQ_1_4     => bit_value,
  CLK_COR_SEQ_2_1     => bit_value,
  CLK_COR_SEQ_2_2     => bit_value,
  CLK_COR_SEQ_2_3     => bit_value,
  CLK_COR_SEQ_2_4     => bit_value,
  CLK_COR_SEQ_2_USE   => boolean_value,
  CLK_COR_SEQ_LEN     => integer_value,
  CLK_CORRECT_USE     => boolean_value,
  COMMA_10B_MASK      => bit_value,
  CRC_END_OF_PKT      => string_value,
  CRC_FORMAT          => string_value,
  CRC_START_OF_PKT    => string_value,
  DEC_MCOMMA_DETECT   => boolean_value,

```

```

DEC_PCOMMA_DETECT           => boolean_value,
DEC_INVALID_COMMA_ONLY     => boolean_value,
MCOMMA_10B_VALUE           => bit_value,
MCOMMA_DETECT              => boolean_value,
PCOMMA_10B_VALUE           => bit_value,
PCOMMA_DETECT              => boolean_value,
REF_CLK_V_SEL              => integer_value,
RX_BUFFER_USE              => boolean_value,
RX_CRC_USE                 => boolean_value,
RX_DATA_WIDTH              => integer_value,
RX_DECODE_USE              => boolean_value,
RX_LOS_INVALID_INCR       => integer_value,
RX_LOS_THRESHOLD           => integer_value,
RX_LOSS_OF_SYNC_FSM       => boolean_value,
SERDES_10B                 => boolean_value,
TERMINATION_IMP            => integer_value,
TX_BUFFER_USE              => boolean_value,
TX_CRC_FORCE_VALUE        => bit_value,
TX_CRC_USE                 => boolean_value,
TX_DATA_WIDTH              => integer_value,
TX_DIFF_CTRL               => integer_value,
TX_PREEMPHASIS            => integer_value)

-- synopsys translate_on
port map (
  CONFIGOUT                => user_CONFIGOUT,
  RXBUFSTATUS               => user_RXBUFSTATUS,
  RXCHARISCOMMA             => user_RXCHARISCOMMA,
  RXCHARISK                 => user_RXCHARISK,
  RXCHECKINGCRC             => user_RXCHECKINGCRC,
  RXCLKCORCNT               => user_RXCLKCORCNT,
  RXCOMMADET                => user_RXCOMMADET,
  RXCRCERR                  => user_RXCRCERR,
  RXDATA                    => user_RXDATA,
  RXDISPERR                 => user_RXDISPERR,
  RXLOSSOFSYNC              => user_RXLOSSOFSYNC,
  RXNOTINTABLE              => user_RXNOTINTABLE,
  RXREALIGN                 => user_RXREALIGN,
  RXRECCLK                  => user_RXRECCLK,
  RXRUNDISP                 => user_RXRUNDISP,
  TXBUFERR                  => user_TXBUFERR,
  TXKERR                    => user_TXKERR,
  TXN                       => user_TXN,
  TXP                       => user_TXP,
  TXRUNDISP                 => user_TXRUNDISP,
  BREFCLK                   => user_BREFCLK,
  BREFCLK2                  => user_BREFCLK2,
  CONFIGENABLE              => user_CONFIGENABLE,
  CONFIGIN                  => user_CONFIGIN,
  ENMCOMMAALIGN             => user_ENMCOMMAALIGN,
  ENPCOMMAALIGN             => user_ENPCOMMAALIGN,
  LOOPBACK                  => user_LOOPBACK,
  POWERDOWN                 => user_POWERDOWN,
  REFCLK                    => user_REFCLK,
  REFCLK2                   => user_REFCLK2,
  REFCLKSEL                  => user_REFCLKSEL,
  RXN                       => user_RXN,
  RXP                       => user_RXP,

```

```

RXPOLARITY           => user_RXPOLARITY,
RXRESET              => user_RXRESET,
RXUSRCLK             => user_RXUSRCLK,
RXUSRCLK2           => user_RXUSRCLK2,
TXBYPASS8B10B       => user_TXBYPASS8B10B,
TXCHARDISPMODE      => user_TXCHARDISPMODE,
TXCHARDISPVAL       => user_TXCHARDISPVAL,
TXCHARISK           => user_TXCHARISK,
TXDATA              => user_TXDATA,
TXFORCECERCERR     => user_TXFORCECERCERR,
TXINHIBIT           => user_TXINHIBIT,
TXPOLARITY          => user_TXPOLARITY,
TXRESET             => user_TXRESET,
TXUSRCLK            => user_TXUSRCLK,
TXUSRCLK2           => user_TXUSRCLK2;

```

## GT\_FIBRE\_CHAN\_2 VHDL Code

```

-- Component Attribute specification for GT_FIBRE_CHAN_2
-- should be placed after architecture declaration but
-- before the begin keyword

component GT_FIBRE_CHAN_2
-- synopsis translate_off
generic (
    ALIGN_COMMA_MSB           : boolean := FALSE;
    CHAN_BOND_LIMIT           : integer := 1;
    CHAN_BOND_MODE            : string  := "OFF";
    CHAN_BOND_OFFSET          : integer := 0;
    CHAN_BOND_ONE_SHOT        : boolean := TRUE;
    CHAN_BOND_SEQ_1_1         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_2         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_3         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_4         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_1         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_2         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_3         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_4         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_USE       : boolean := FALSE;
    CHAN_BOND_SEQ_LEN         : integer := 1;
    CHAN_BOND_WAIT            : integer := 7;
    CLK_COR_INSERT_IDLE_FLAG  : boolean := FALSE;
    CLK_COR_KEEP_IDLE         : boolean := FALSE;
    CLK_COR_REPEAT_WAIT       : integer := 2;
    CLK_COR_SEQ_1_1           : bit_vector := "00110111100";
    CLK_COR_SEQ_1_2           : bit_vector := "00010010101";
    CLK_COR_SEQ_1_3           : bit_vector := "00010110101";
    CLK_COR_SEQ_1_4           : bit_vector := "00010110101";
    CLK_COR_SEQ_2_1           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_2           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_3           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_4           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_USE         : boolean := FALSE;
    CLK_COR_SEQ_LEN           : integer := 4;
    CLK_CORRECT_USE           : boolean := TRUE;
    COMMA_10B_MASK            : bit_vector := "1111111000";
    CRC_END_OF_PKT            : string    := "K29_7";
    CRC_FORMAT                 : string    := "FIBRE_CHAN";

```

```

CRC_START_OF_PKT           : string := "K27_7";
DEC_MCOMMA_DETECT         : boolean := TRUE;
DEC_PCOMMA_DETECT         : boolean := TRUE;
DEC_VALID_COMMA_ONLY      : boolean := TRUE;
MCOMMA_10B_VALUE          : bit_vector := "1100000000";
MCOMMA_DETECT             : boolean := TRUE;
PCOMMA_10B_VALUE          : bit_vector := "0011111000";
PCOMMA_DETECT             : boolean := TRUE;
REF_CLK_V_SEL             : integer := 0;
RX_BUFFER_USE             : boolean := TRUE;
RX_CRC_USE                : boolean := FALSE;
RX_DATA_WIDTH             : integer := 2;
RX_DECODE_USE            : boolean := TRUE;
RX_LOS_INVALID_INCR      : integer := 1;
RX_LOS_THRESHOLD         : integer := 4;
RX_LOSS_OF_SYNC_FSM      : boolean := TRUE;
SERDES_10B               : boolean := FALSE;
TERMINATION_IMP          : integer := 50;
TX_BUFFER_USE            : boolean := TRUE;
TX_CRC_FORCE_VALUE       : bit_vector := "11010110";
TX_CRC_USE               : boolean := FALSE;
TX_DATA_WIDTH            : integer := 2;
TX_DIFF_CTRL             : integer := 500;
TX_PREEMPHASIS          : integer := 0);

-- synopsys translate_on
port (
    CONFIGOUT              : out std_ulogic;
    RXBUFSTATUS            : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA         : out std_logic_vector(1 downto 0);
    RXCHARISK              : out std_logic_vector(1 downto 0);
    RXCHECKINGCRC         : out std_ulogic;
    RXCLKCORCNT           : out std_logic_vector(2 downto 0);
    RXCOMMADET            : out std_ulogic;
    RXCRCERR              : out std_ulogic;
    RXDATA                 : out std_logic_vector(15 downto 0);
    RXDISPERR             : out std_logic_vector(1 downto 0);
    RXLOSSOFSYNC          : out std_logic_vector(1 downto 0);
    RXNOTINTABLE          : out std_logic_vector(1 downto 0);
    RXREALIGN             : out std_ulogic;
    RXRECCLK              : out std_ulogic;
    RXRUNDISP             : out std_logic_vector(1 downto 0);
    TXBUFERR              : out std_ulogic;
    TXKERR                : out std_logic_vector(1 downto 0);
    TXN                   : out std_ulogic;
    TXP                   : out std_ulogic;
    TXRUNDISP             : out std_logic_vector(1 downto 0);
    BREFCLK               : in std_ulogic := 'X';
    BREFCLK2              : in std_ulogic := 'X';
    CONFIGENABLE          : in std_ulogic;
    CONFIGIN              : in std_ulogic;
    ENMCOMMAALIGN         : in std_ulogic;
    ENPCOMMAALIGN        : in std_ulogic;
    LOOPBACK              : in std_logic_vector(1 downto 0);
    POWERDOWN             : in std_ulogic;
    REFCLK                : in std_ulogic;
    REFCLK2               : in std_ulogic;
    REFCLKSEL             : in std_ulogic;

```



```

RXN                                : in std_ulogic;
RXP                                : in std_ulogic;
RXPOLARITY                          : in std_ulogic;
RXRESET                             : in std_ulogic;
RXUSRCLK                             : in std_ulogic;
RXUSRCLK2                           : in std_ulogic;
TXBYPASS8B10B                       : in std_logic_vector(1 downto 0);
TXCHARDISPMODE                      : in std_logic_vector(1 downto 0);
TXCHARDISPVAL                       : in std_logic_vector(1 downto 0);
TXCHARISK                           : in std_logic_vector(1 downto 0);
TXDATA                              : in std_logic_vector(15 downto 0);
TXFORCECERCERR                      : in std_ulogic;
TXINHIBIT                           : in std_ulogic;
TXPOLARITY                          : in std_ulogic;
TXRESET                             : in std_ulogic;
TXUSRCLK                             : in std_ulogic;
TXUSRCLK2                           : in std_ulogic);

```

```
end component;
```

```

-- Component Attribute specification for GT_FIBRE_CHAN_2
-- should be placed after architecture declaration but
-- before the begin keyword

```

```
-- Enter constraints here
```

```

-- Component Instantiation for GT_FIBRE_CHAN_2 should be placed
-- in architecture after the begin keyword

```

```
GT_FIBRE_CHAN_2_INSTANCE_NAME : GT_FIBRE_CHAN_2
```

```
-- synopsys translate_off
```

```
generic map (
```

```

ALIGN_COMMA_MSB                    => boolean_value,
CHAN_BOND_LIMIT                    => integer_value,
CHAN_BOND_MODE                     => string_value,
CHAN_BOND_OFFSET                   => integer_value,
CHAN_BOND_ONE_SHOT                 => boolean_value,
CHAN_BOND_SEQ_1_1                  => bit_value,
CHAN_BOND_SEQ_1_2                  => bit_value,
CHAN_BOND_SEQ_1_3                  => bit_value,
CHAN_BOND_SEQ_1_4                  => bit_value,
CHAN_BOND_SEQ_2_1                  => bit_value,
CHAN_BOND_SEQ_2_2                  => bit_value,
CHAN_BOND_SEQ_2_3                  => bit_value,
CHAN_BOND_SEQ_2_4                  => bit_value,
CHAN_BOND_SEQ_2_USE                => boolean_value,
CHAN_BOND_SEQ_LEN                  => integer_value,
CHAN_BOND_WAIT                     => integer_value,
CLK_COR_INSERT_IDLE_FLAG          => boolean_value,
CLK_COR_KEEP_IDLE                 => boolean_value,
CLK_COR_REPEAT_WAIT               => integer_value,
CLK_COR_SEQ_1_1                   => bit_value,
CLK_COR_SEQ_1_2                   => bit_value,
CLK_COR_SEQ_1_3                   => bit_value,
CLK_COR_SEQ_1_4                   => bit_value,
CLK_COR_SEQ_2_1                   => bit_value,
CLK_COR_SEQ_2_2                   => bit_value,
CLK_COR_SEQ_2_3                   => bit_value,

```

```

CLK_COR_SEQ_2_4           => bit_value,
CLK_COR_SEQ_2_USE        => boolean_value,
CLK_COR_SEQ_LEN          => integer_value,
CLK_CORRECT_USE          => boolean_value,
COMMA_10B_MASK           => bit_value,
CRC_END_OF_PKT           => string_value,
CRC_FORMAT               => string_value,
CRC_START_OF_PKT         => string_value,
DEC_MCOMMA_DETECT        => boolean_value,
DEC_PCOMMA_DETECT        => boolean_value,
DEC_VALID_COMMA_ONLY     => boolean_value,
MCOMMA_10B_VALUE         => bit_value,
MCOMMA_DETECT            => boolean_value,
PCOMMA_10B_VALUE         => bit_value,
PCOMMA_DETECT            => boolean_value,
REF_CLK_V_SEL            => integer_value,
RX_BUFFER_USE            => boolean_value,
RX_CRC_USE                => boolean_value,
RX_DATA_WIDTH            => integer_value,
RX_DECODE_USE            => boolean_value,
RX_LOS_INVALID_INCR      => integer_value,
RX_LOS_THRESHOLD         => integer_value,
RX_LOSS_OF_SYNC_FSM      => boolean_value,
SERDES_10B               => boolean_value,
TERMINATION_IMP          => integer_value,
TX_BUFFER_USE            => boolean_value,
TX_CRC_FORCE_VALUE       => bit_value,
TX_CRC_USE                => boolean_value,
TX_DATA_WIDTH            => integer_value,
TX_DIFF_CTRL             => integer_value,
TX_PREEMPHASIS           => integer_value)

-- synopsys translate_on
port map (
    CONFIGOUT              => user_CONFIGOUT,
    RXBUFSTATUS            => user_RXBUFSTATUS,
    RXCHARISCOMMA          => user_RXCHARISCOMMA,
    RXCHARISK              => user_RXCHARISK,
    RXCHECKINGCRC          => user_RXCHECKINGCRC,
    RXCLKCORCNT            => user_RXCLKCORCNT,
    RXCOMMADET             => user_RXCOMMADET,
    RXCRCERR               => user_RXCRCERR,
    RXDATA                  => user_RXDATA,
    RXDISPERR              => user_RXDISPERR,
    RXLOSSOFSYNC           => user_RXLOSSOFSYNC,
    RXNOTINTABLE           => user_RXNOTINTABLE,
    RXREALIGN              => user_RXREALIGN,
    RXRECCLK               => user_RXRECCLK,
    RXRUNDISP              => user_RXRUNDISP,
    TXBUFERR               => user_TXBUFERR,
    TXKERR                 => user_TXKERR,
    TXN                    => user_TXN,
    TXP                    => user_TXP,
    TXRUNDISP              => user_TXRUNDISP,
    BREFCLK                => user_BREFCLK,
    BREFCLK2               => user_BREFCLK2,
    CONFIGENABLE           => user_CONFIGENABLE,
    CONFIGIN               => user_CONFIGIN,

```

```

ENMCOMMAALIGN          => user_ENMCOMMAALIGN,
ENPCOMMAALIGN          => user_ENPCOMMAALIGN,
LOOPBACK                => user_LOOPBACK,
POWERDOWN               => user_POWERDOWN,
REFCLK                  => user_REFCLK,
REFCLK2                 => user_REFCLK2,
REFCLKSEL               => user_REFCLKSEL,
RXN                     => user_RXN,
RXP                     => user_RXP,
RXPOLARITY              => user_RXPOLARITY,
RXRESET                 => user_RXRESET,
RXUSRCLK                => user_RXUSRCLK,
RXUSRCLK2               => user_RXUSRCLK2,
TXBYPASS8B10B          => user_TXBYPASS8B10B,
TXCHARDISPMODE         => user_TXCHARDISPMODE,
TXCHARDISPVAL           => user_TXCHARDISPVAL,
TXCHARISK               => user_TXCHARISK,
TXDATA                  => user_TXDATA,
TXFORCECRCERR          => user_TXFORCECRCERR,
TXINHIBIT               => user_TXINHIBIT,
TXPOLARITY              => user_TXPOLARITY,
TXRESET                 => user_TXRESET,
TXUSRCLK                => user_TXUSRCLK,
TXUSRCLK2               => user_TXUSRCLK2);

```

## GT\_FIBRE\_CHAN\_4 VHDL Code

```

-- Component Attribute specification for GT_FIBRE_CHAN_4
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

component GT_FIBRE_CHAN_4
-- synopsys translate_off
generic (
    ALIGN_COMMA_MSB          : boolean := FALSE;
    CHAN_BOND_LIMIT          : integer := 1;
    CHAN_BOND_MODE           : string := "OFF";
    CHAN_BOND_OFFSET         : integer := 0;
    CHAN_BOND_ONE_SHOT       : boolean := TRUE;
    CHAN_BOND_SEQ_1_1        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_2        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_3        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_4        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_1        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_2        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_3        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_4        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_USE      : boolean := FALSE;
    CHAN_BOND_SEQ_LEN        : integer := 1;
    CHAN_BOND_WAIT           : integer := 7;
    CLK_COR_INSERT_IDLE_FLAG : boolean := FALSE;
    CLK_COR_KEEP_IDLE        : boolean := FALSE;
    CLK_COR_REPEAT_WAIT      : integer := 2;
    CLK_COR_SEQ_1_1          : bit_vector := "00110111100";
    CLK_COR_SEQ_1_2          : bit_vector := "00010010101";
    CLK_COR_SEQ_1_3          : bit_vector := "00010110101";
    CLK_COR_SEQ_1_4          : bit_vector := "00010110101";
    CLK_COR_SEQ_2_1          : bit_vector := "00000000000";

```

```

CLK_COR_SEQ_2_2          : bit_vector := "000000000000";
CLK_COR_SEQ_2_3          : bit_vector := "000000000000";
CLK_COR_SEQ_2_4          : bit_vector := "000000000000";
CLK_COR_SEQ_2_USE       : boolean := FALSE;
CLK_COR_SEQ_LEN         : integer := 4;
CLK_CORRECT_USE         : boolean := TRUE;
COMMA_10B_MASK          : bit_vector := "1111111000";
CRC_END_OF_PKT          : string := "K29_7";
CRC_FORMAT              : string := "FIBRE_CHAN";
CRC_START_OF_PKT        : string := "K27_7";
DEC_MCOMMA_DETECT       : boolean := TRUE;
DEC_PCOMMA_DETECT       : boolean := TRUE;
DEC_VALID_COMMA_ONLY    : boolean := TRUE;
MCOMMA_10B_VALUE        : bit_vector := "1100000000";
MCOMMA_DETECT           : boolean := TRUE;
PCOMMA_10B_VALUE        : bit_vector := "0011111000";
PCOMMA_DETECT           : boolean := TRUE;
REF_CLK_V_SEL           : integer := 0;
RX_BUFFER_USE           : boolean := TRUE;
RX_CRC_USE              : boolean := FALSE;
RX_DATA_WIDTH           : integer := 4;
RX_DECODE_USE           : boolean := TRUE;
RX_LOS_INVALID_INCR     : integer := 1;
RX_LOS_THRESHOLD        : integer := 4;
RX_LOSS_OF_SYNC_FSM     : boolean := TRUE;
SERDES_10B              : boolean := FALSE;
TERMINATION_IMP         : integer := 50;
TX_BUFFER_USE           : boolean := TRUE;
TX_CRC_FORCE_VALUE      : bit_vector := "11010110";
TX_CRC_USE              : boolean := FALSE;
TX_DATA_WIDTH           : integer := 4;
TX_DIFF_CTRL            : integer := 500;
TX_PREEMPHASIS          : integer := 0);

-- synopsys translate_on
port (
    CONFIGOUT              : out std_ulogic;
    RXBUFSTATUS            : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA          : out std_logic_vector(3 downto 0);
    RXCHARISK              : out std_logic_vector(3 downto 0);
    RXCHECKINGCRC          : out std_ulogic;
    RXCLKCORCNT            : out std_logic_vector(2 downto 0);
    RXCOMMADET             : out std_ulogic;
    RXCRCERR               : out std_ulogic;
    RXDATA                 : out std_logic_vector(31 downto 0);
    RXDISPERR              : out std_logic_vector(3 downto 0);
    RXLOSSOFSYNC           : out std_logic_vector(1 downto 0);
    RXNOTINTABLE           : out std_logic_vector(3 downto 0);
    RXREALIGN              : out std_ulogic;
    RXRECCLK               : out std_ulogic;
    RXRUNDISP              : out std_logic_vector(3 downto 0);
    TXBUFERR               : out std_ulogic;
    TXKERR                 : out std_logic_vector(3 downto 0);
    TXN                    : out std_ulogic;
    TXP                    : out std_ulogic;
    TXRUNDISP              : out std_logic_vector(3 downto 0);
    BREFCLK                : in std_ulogic := 'X';
    BREFCLK2               : in std_ulogic := 'X';

```

```

CONFIGENABLE           : in std_ulogic;
CONFIGIN               : in std_ulogic;
ENMCOMMAALIGN         : in std_ulogic;
ENPCOMMAALIGN         : in std_ulogic;
LOOPBACK              : in std_logic_vector(1 downto 0);
POWERDOWN             : in std_ulogic;
REFCLK                : in std_ulogic;
REFCLK2               : in std_ulogic;
REFCLKSEL             : in std_ulogic;
RXN                   : in std_ulogic;
RXP                   : in std_ulogic;
RXPOLARITY           : in std_ulogic;
RXRESET              : in std_ulogic;
RXUSRCLK              : in std_ulogic;
RXUSRCLK2             : in std_ulogic;
TXBYPASS8B10B        : in std_logic_vector(3 downto 0);
TXCHARDISPMODE       : in std_logic_vector(3 downto 0);
TXCHARDISPVAL        : in std_logic_vector(3 downto 0);
TXCHARISK             : in std_logic_vector(3 downto 0);
TXDATA                : in std_logic_vector(31 downto 0);
TXFORCECERCERR       : in std_ulogic;
TXINHIBIT            : in std_ulogic;
TXPOLARITY           : in std_ulogic;
TXRESET              : in std_ulogic;
TXUSRCLK              : in std_ulogic;
TXUSRCLK2             : in std_ulogic);

```

```
end component;
```

```
-- Component Attribute specification for GT_FIBRE_CHAN_4
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter constraints here
```

```
-- Component Instantiation for GT_FIBRE_CHAN_4 should be placed
-- in architecture after the begin keyword
```

```
GT_FIBRE_CHAN_4_INSTANCE_NAME : GT_FIBRE_CHAN_4
```

```
-- synopsys translate_off
```

```
generic map (
  ALIGN_COMMA_MSB           => boolean_value,
  CHAN_BOND_LIMIT           => integer_value,
  CHAN_BOND_MODE            => string_value,
  CHAN_BOND_OFFSET         => integer_value,
  CHAN_BOND_ONE_SHOT       => boolean_value,
  CHAN_BOND_SEQ_1_1        => bit_value,
  CHAN_BOND_SEQ_1_2        => bit_value,
  CHAN_BOND_SEQ_1_3        => bit_value,
  CHAN_BOND_SEQ_1_4        => bit_value,
  CHAN_BOND_SEQ_2_1        => bit_value,
  CHAN_BOND_SEQ_2_2        => bit_value,
  CHAN_BOND_SEQ_2_3        => bit_value,
  CHAN_BOND_SEQ_2_4        => bit_value,
  CHAN_BOND_SEQ_2_USE      => boolean_value,
  CHAN_BOND_SEQ_LEN        => integer_value,
  CHAN_BOND_WAIT           => integer_value,
  CLK_COR_INSERT_IDLE_FLAG => boolean_value,

```

```

CLK_COR_KEEP_IDLE           => boolean_value,
CLK_COR_REPEAT_WAIT        => integer_value,
CLK_COR_SEQ_1_1            => bit_value,
CLK_COR_SEQ_1_2            => bit_value,
CLK_COR_SEQ_1_3            => bit_value,
CLK_COR_SEQ_1_4            => bit_value,
CLK_COR_SEQ_2_1            => bit_value,
CLK_COR_SEQ_2_2            => bit_value,
CLK_COR_SEQ_2_3            => bit_value,
CLK_COR_SEQ_2_4            => bit_value,
CLK_COR_SEQ_2_USE          => boolean_value,
CLK_COR_SEQ_LEN            => integer_value,
CLK_CORRECT_USE            => boolean_value,
COMMA_10B_MASK             => bit_value,
CRC_END_OF_PKT             => string_value,
CRC_FORMAT                 => string_value,
CRC_START_OF_PKT           => string_value,
DEC_MCOMMA_DETECT          => boolean_value,
DEC_PCOMMA_DETECT          => boolean_value,
DEC_VALID_COMMA_ONLY       => boolean_value,
MCOMMA_10B_VALUE           => bit_value,
MCOMMA_DETECT              => boolean_value,
PCOMMA_10B_VALUE           => bit_value,
PCOMMA_DETECT              => boolean_value,
REF_CLK_V_SEL              => integer_value,
RX_BUFFER_USE              => boolean_value,
RX_CRC_USE                  => boolean_value,
RX_DATA_WIDTH              => integer_value,
RX_DECODE_USE              => boolean_value,
RX_LOS_INVALID_INCR        => integer_value,
RX_LOS_THRESHOLD           => integer_value,
RX_LOSS_OF_SYNC_FSM        => boolean_value,
SERDES_10B                 => boolean_value,
TERMINATION_IMP            => integer_value,
TX_BUFFER_USE              => boolean_value,
TX_CRC_FORCE_VALUE         => bit_value,
TX_CRC_USE                  => boolean_value,
TX_DATA_WIDTH              => integer_value,
TX_DIFF_CTRL               => integer_value,
TX_PREEMPHASIS             => integer_value)

-- synopsys translate_on
port map (
  CONFIGOUT                 => user_CONFIGOUT,
  RXBUFSTATUS               => user_RXBUFSTATUS,
  RXCHARISCOMMA             => user_RXCHARISCOMMA,
  RXCHARISK                 => user_RXCHARISK,
  RXCHECKINGCRC             => user_RXCHECKINGCRC,
  RXCLKCORCNT               => user_RXCLKCORCNT,
  RXCOMMADET                => user_RXCOMMADET,
  RXCRCERR                  => user_RXCRCERR,
  RXDATA                    => user_RXDATA,
  RXDISPERR                 => user_RXDISPERR,
  RXLOSSOFSYNC              => user_RXLOSSOFSYNC,
  RXNOTINTABLE              => user_RXNOTINTABLE,
  RXREALIGN                 => user_RXREALIGN,
  RXRECCLK                  => user_RXRECCLK,
  RXRUNDISP                 => user_RXRUNDISP,

```

```

TXBUFERR                => user_TXBUFERR,
TXKERR                  => user_TXKERR,
TXN                     => user_TXN,
TXP                     => user_TXP,
TXRUNDISP              => user_TXRUNDISP,
BREFCLK                => user_BREFCLK,
BREFCLK2               => user_BREFCLK2,
CONFIGENABLE           => user_CONFIGENABLE,
CONFIGIN               => user_CONFIGIN,
ENMCOMMAALIGN          => user_ENMCOMMAALIGN,
ENPCOMMAALIGN          => user_ENPCOMMAALIGN,
LOOPBACK               => user_LOOPBACK,
POWERDOWN              => user_POWERDOWN,
REFCLK                 => user_REFCLK,
REFCLK2                => user_REFCLK2,
REFCLKSEL              => user_REFCLKSEL,
RXN                    => user_RXN,
RXP                    => user_RXP,
RXPOLARITY             => user_RXPOLARITY,
RXRESET                => user_RXRESET,
RXUSRCLK               => user_RXUSRCLK,
RXUSRCLK2              => user_RXUSRCLK2,
TXBYPASS8B10B         => user_TXBYPASS8B10B,
TXCHARDISPMODE         => user_TXCHARDISPMODE,
TXCHARDISPVAL          => user_TXCHARDISPVAL,
TXCHARISK              => user_TXCHARISK,
TXDATA                 => user_TXDATA,
TXFORCECERCERR        => user_TXFORCECERCERR,
TXINHIBIT              => user_TXINHIBIT,
TXPOLARITY             => user_TXPOLARITY,
TXRESET                => user_TXRESET,
TXUSRCLK               => user_TXUSRCLK,
TXUSRCLK2              => user_TXUSRCLK2);

```

## Verilog Instantiation Templates

### GT\_FIBRE\_CHAN\_1 Verilog Code

```

GT_FIBRE_CHAN_1 GT_FIBRE_CHAN_1_name(
    .CONFIGOUT (user_CONFIGOUT),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCHECKINGCRC (user_RXCHECKINGCRC),
    .RXCLKCORCNT (user_RXCLKCORCNT),
    .RXCOMMADET (user_RXCOMMADET),
    .RXCRCERR (user_RXCRCERR),
    .RXDATA (user_RXDATA),
    .RXDISPERR (user_RXDISPERR),
    .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
    .RXNOTINTABLE (user_RXNOTINTABLE),
    .RXREALIGN (user_RXREALIGN),
    .RXRECCLK (user_RXRECCLK),
    .RXRUNDISP (user_RXRUNDISP),
    .TXBUFERR (user_TXBUFERR),
    .TXKERR (user_TXKERR),
    .TXN (user_TXN),

```

```

.TXP (user_TXP),
.TXRUNDISP (user_TXRUNDISP),

.BREFCLK (user_BREFCLK),
.BREFCLK2 (user_BREFCLK2),
.CONFIGENABLE (user_CONFIGENABLE),
.CONFIGIN (user_CONFIGIN),
.ENMCOMMAALIGN (user_ENMCOMMAALIGN),
.ENPCOMMAALIGN (user_ENPCOMMAALIGN),
.LOOPBACK (user_LOOPBACK),
.POWERDOWN (user_POWERDOWN),
.REFCLK (user_REFCLK),
.REFCLK2 (user_REFCLK2),
.REFCLKSEL (user_REFCLKSEL),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXFORCECRCERR (user_TXFORCECRCERR),
.TXINHIBIT (user_TXINHIBIT),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_MSB = "FALSE";
defparam user_instance_name.CHAN_BOND_LIMIT = 1;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_OFFSET = 0;
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "TRUE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 1;
defparam user_instance_name.CHAN_BOND_WAIT = 7;
defparam user_instance_name.CLK_COR_INSERT_IDLE_FLAG = "FALSE";
defparam user_instance_name.CLK_COR_KEEP_IDLE = "FALSE";
defparam user_instance_name.CLK_COR_REPEAT_WAIT = 2;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00110111100;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00010010101;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00010110101;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00010110101;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b00000000000;

```



```

defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 4;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b1111111000;
defparam user_instance_name.CRC_END_OF_PKT = "K29_7";
defparam user_instance_name.CRC_FORMAT = "FIBRE_CHAN";
defparam user_instance_name.CRC_START_OF_PKT = "K27_7";
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1100000000;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0011111000;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.REF_CLK_V_SEL = 0;
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_CRC_USE = "FALSE";
defparam user_instance_name.RX_DATA_WIDTH = 1;
defparam user_instance_name.RX_DECODE_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SERDES_10B = "FALSE";
defparam user_instance_name.TERMINATION_IMP = 50;
defparam user_instance_name.TX_BUFFER_USE = "TRUE";
defparam user_instance_name.TX_CRC_FORCE_VALUE = 8'b11010110;
defparam user_instance_name.TX_CRC_USE = "FALSE";
defparam user_instance_name.TX_DATA_WIDTH = 1;
defparam user_instance_name.TX_DIFF_CTRL = 500;
defparam user_instance_name.TX_PREEMPHASIS = 0;

```

## GT\_FIBRE\_CHAN\_2 Verilog Code

```

GT_FIBRE_CHAN_2 GT_FIBRE_CHAN_2_name(
    .CONFIGOUT (user_CONFIGOUT),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCHECKINGCRC (user_RXCHECKINGCRC),
    .RXCLKCORCNT (user_RXCLKCORCNT),
    .RXCOMMADET (user_RXCOMMADET),
    .RXCRCERR (user_RXCRCERR),
    .RXDATA (user_RXDATA),
    .RXDISPERR (user_RXDISPERR),
    .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
    .RXNOTINTABLE (user_RXNOTINTABLE),
    .RXREALIGN (user_RXREALIGN),
    .RXRECCLK (user_RXRECCLK),
    .RXRUNDISP (user_RXRUNDISP),
    .TXBUFERR (user_TXBUFERR),
    .TXKERR (user_TXKERR),
    .TXN (user_TXN),
    .TXP (user_TXP),
    .TXRUNDISP (user_TXRUNDISP),

    .BREFCLK (user_BREFCLK),
    .BREFCLK2 (user_BREFCLK2),

```

```

.CONFIGENABLE (user_CONFIGENABLE),
.CONFIGIN (user_CONFIGIN),
.ENMCOMMAALIGN (user_ENMCOMMAALIGN),
.ENPCOMMAALIGN (user_ENPCOMMAALIGN),
.LOOPBACK (user_LOOPBACK),
.POWERDOWN (user_POWERDOWN),
.REFCLK (user_REFCLK),
.REFCLK2 (user_REFCLK2),
.REFCLKSEL (user_REFCLKSEL),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXFORCECERCERR (user_TXFORCECERCERR),
.TXINHIBIT (user_TXINHIBIT),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_MSB = "FALSE";
defparam user_instance_name.CHAN_BOND_LIMIT = 1;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_OFFSET = 0;
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "TRUE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 1;
defparam user_instance_name.CHAN_BOND_WAIT = 7;
defparam user_instance_name.CLK_COR_INSERT_IDLE_FLAG = "FALSE";
defparam user_instance_name.CLK_COR_KEEP_IDLE = "FALSE";
defparam user_instance_name.CLK_COR_REPEAT_WAIT = 2;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00110111100;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00010010101;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00010110101;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00010110101;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 4;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b1111111000;

```

```

defparam user_instance_name.CRC_END_OF_PKT = "K29_7";
defparam user_instance_name.CRC_FORMAT = "FIBRE_CHAN";
defparam user_instance_name.CRC_START_OF_PKT = "K27_7";
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1100000000;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0011111000;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.REF_CLK_V_SEL = 0;
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_CRC_USE = "FALSE";
defparam user_instance_name.RX_DATA_WIDTH = 2;
defparam user_instance_name.RX_DECODE_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SERDES_10B = "FALSE";
defparam user_instance_name.TERMINATION_IMP = 50;
defparam user_instance_name.TX_BUFFER_USE = "TRUE";
defparam user_instance_name.TX_CRC_FORCE_VALUE = 8'b11010110;
defparam user_instance_name.TX_CRC_USE = "FALSE";
defparam user_instance_name.TX_DATA_WIDTH = 2;
defparam user_instance_name.TX_DIFF_CTRL = 500;
defparam user_instance_name.TX_PREEMPHASIS = 0;

```

### GT\_FIBRE\_CHAN\_4 Verilog Code

```

GT_FIBRE_CHAN_4 GT_FIBRE_CHAN_4_name(
    .CONFIGOUT (user_CONFIGOUT),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCHECKINGCRC (user_RXCHECKINGCRC),
    .RXCLKCORCNT (user_RXCLKCORCNT),
    .RXCOMMADET (user_RXCOMMADET),
    .RXCRCERR (user_RXCRCERR),
    .RXDATA (user_RXDATA),
    .RXDISPERR (user_RXDISPERR),
    .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
    .RXNOTINTABLE (user_RXNOTINTABLE),
    .RXREALIGN (user_RXREALIGN),
    .RXRECCLK (user_RXRECCLK),
    .RXRUNDISP (user_RXRUNDISP),
    .TXBUFERR (user_TXBUFERR),
    .TXKERR (user_TXKERR),
    .TXN (user_TXN),
    .TXP (user_TXP),
    .TXRUNDISP (user_TXRUNDISP),

    .BREFCLK (user_BREFCLK),
    .BREFCLK2 (user_BREFCLK2),
    .CONFIGENABLE (user_CONFIGENABLE),
    .CONFIGIN (user_CONFIGIN),
    .ENMCOMMAALIGN (user_ENMCOMMAALIGN),
    .ENPCOMMAALIGN (user_ENPCOMMAALIGN),
    .LOOPBACK (user_LOOPBACK),

```

```

.POWERDOWN (user_POWERDOWN),
.REFCLK (user_REFCLK),
.REFCLK2 (user_REFCLK2),
.REFCLKSEL (user_REFCLKSEL),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXFORCECRCERR (user_TXFORCECRCERR),
.TXINHIBIT (user_TXINHIBIT),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_MSB = "FALSE";
defparam user_instance_name.CHAN_BOND_LIMIT = 1;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_OFFSET = 0;
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "TRUE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 1;
defparam user_instance_name.CHAN_BOND_WAIT = 7;
defparam user_instance_name.CLK_COR_INSERT_IDLE_FLAG = "FALSE";
defparam user_instance_name.CLK_COR_KEEP_IDLE = "FALSE";
defparam user_instance_name.CLK_COR_REPEAT_WAIT = 2;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00110111100;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00010010101;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00010110101;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00010110101;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 4;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b1111111000;
defparam user_instance_name.CRC_END_OF_PKT = "K29_7";
defparam user_instance_name.CRC_FORMAT = "FIBRE_CHAN";
defparam user_instance_name.CRC_START_OF_PKT = "K27_7";
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";

```

```
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1100000000;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0011111000;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.REF_CLK_V_SEL = 0;
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_CRC_USE = "FALSE";
defparam user_instance_name.RX_DATA_WIDTH = 4;
defparam user_instance_name.RX_DECODE_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SERDES_10B = "FALSE";
defparam user_instance_name.TERMINATION_IMP = 50;
defparam user_instance_name.TX_BUFFER_USE = "TRUE";
defparam user_instance_name.TX_CRC_FORCE_VALUE = 8'b11010110;
defparam user_instance_name.TX_CRC_USE = "FALSE";
defparam user_instance_name.TX_DATA_WIDTH = 4;
defparam user_instance_name.TX_DIFF_CTRL = 500;
defparam user_instance_name.TX_PREEMPHASIS = 0;
```

## Commonly Used Constraints

None



## GT\_INFINIBAND\_n

### Gigabit Transceiver for High-Speed I/O

#### Architectures Supported


GT10_INFINIBAND_n	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive*
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
*Supported for Virtex-II Pro but not for Virtex-II or Virtex-II Pro X.	

This Infiniband gigabit transceiver supports 1, 2, and 4-byte data paths. The letter *n* represents number of bytes of the data path. Valid values are 1, 2 or 4.

You can also set attributes for the primitives. See the *RocketIO Transceiver User Guide* for a description of these attributes and their default attribute values.

The following figures list the input and output ports for all values of *n*. For a description of each of the ports, see the *RocketIO Transceiver User Guide*.


GT\_INFINIBAND\_1

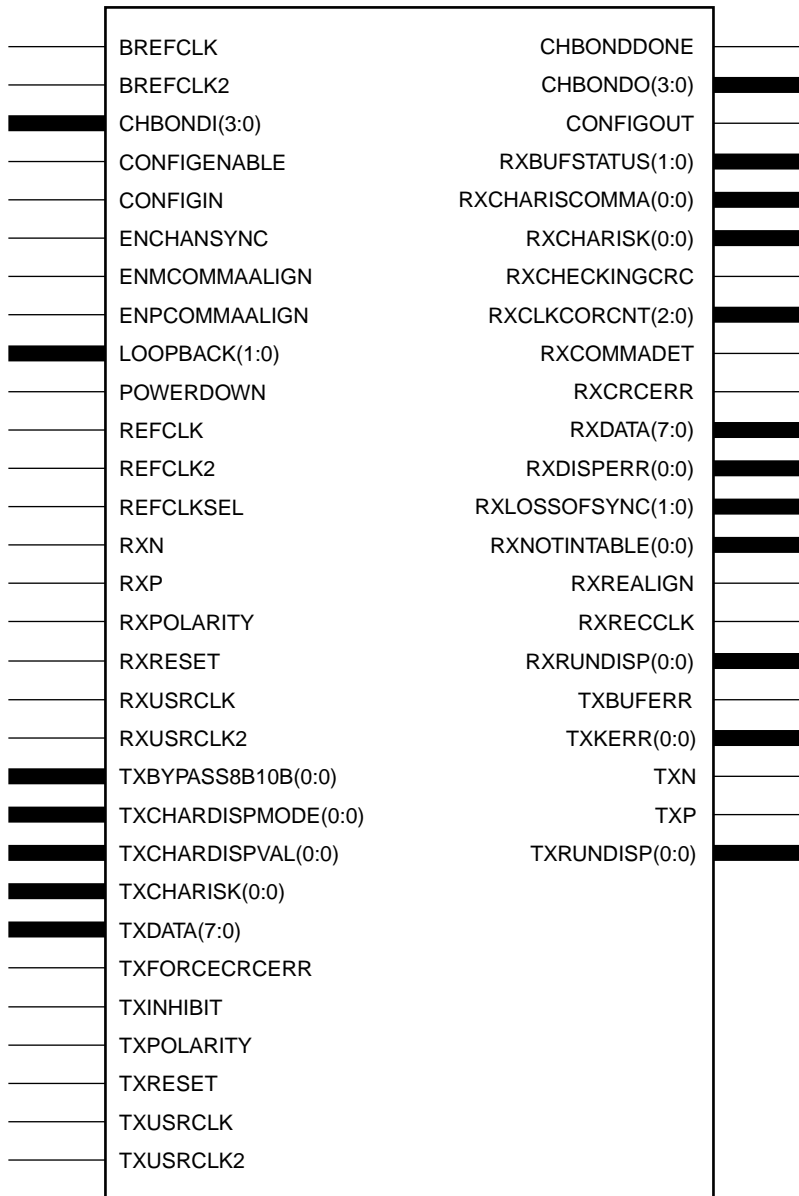

X9898




## GT\_INFINIBAND\_2

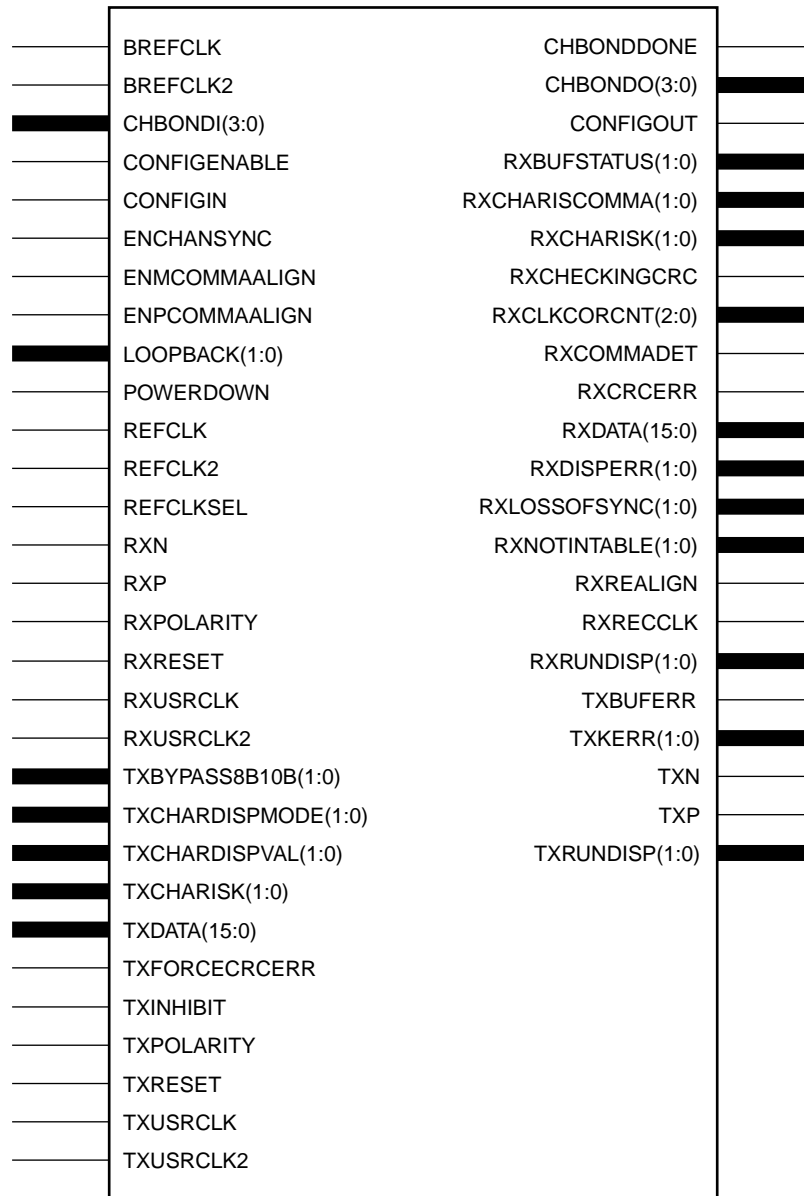

X9899

GT\_INFINIBAND\_4

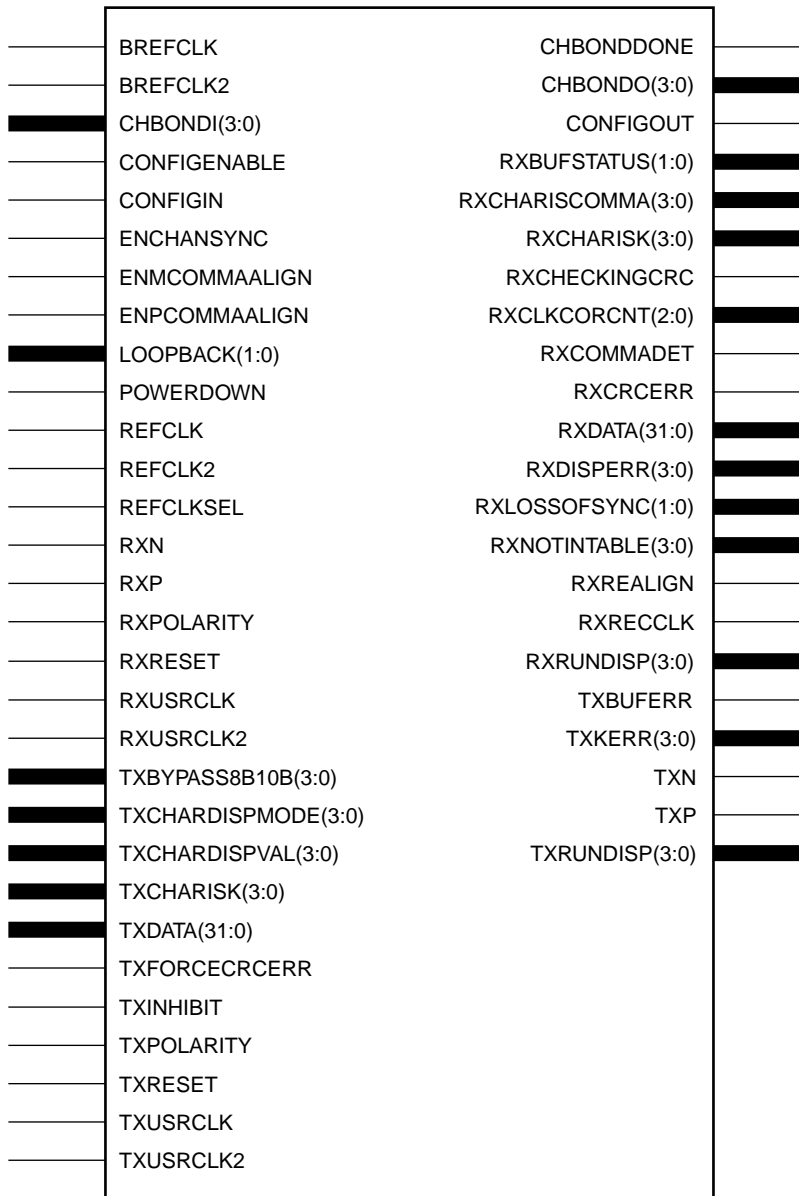

X9900

## Usage

This design element is instantiated rather than inferred in the design code.

## VHDL Instantiation Templates

### GT\_INFINIBAND\_1 VHDL Code

```
-- Component Attribute specification for GT_INFINIBAND_1
-- should be placed after architecture declaration but
-- before the begin keyword

component GT_INFINIBAND_1
-- synopsys translate_off
generic (
    ALIGN_COMMA_MSB           : boolean := FALSE;
    CHAN_BOND_LIMIT           : integer := 16;
    CHAN_BOND_MODE             : string := "OFF";
    CHAN_BOND_OFFSET          : integer := 8;
    CHAN_BOND_ONE_SHOT        : boolean := FALSE;
    CHAN_BOND_SEQ_1_1         : bit_vector := "00110111100";
    CHAN_BOND_SEQ_1_2         : bit_vector := LANE_ID;
    CHAN_BOND_SEQ_1_3         : bit_vector := "00001001010";
    CHAN_BOND_SEQ_1_4         : bit_vector := "00001001010";
    CHAN_BOND_SEQ_2_1         : bit_vector := "00110111100";
    CHAN_BOND_SEQ_2_2         : bit_vector := LANE_ID;
    CHAN_BOND_SEQ_2_3         : bit_vector := "00001000101";
    CHAN_BOND_SEQ_2_4         : bit_vector := "00001000101";
    CHAN_BOND_SEQ_2_USE       : boolean := TRUE;
    CHAN_BOND_SEQ_LEN         : integer := 4;
    CHAN_BOND_WAIT            : integer := 8;
    CLK_COR_INSERT_IDLE_FLAG  : boolean := FALSE;
    CLK_COR_KEEP_IDLE         : boolean := FALSE;
    CLK_COR_REPEAT_WAIT       : integer := 1;
    CLK_COR_SEQ_1_1           : bit_vector := "00100011100";
    CLK_COR_SEQ_1_2           : bit_vector := "00000000000";
    CLK_COR_SEQ_1_3           : bit_vector := "00000000000";
    CLK_COR_SEQ_1_4           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_1           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_2           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_3           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_4           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_USE         : boolean := FALSE;
    CLK_COR_SEQ_LEN           : integer := 1;
    CLK_CORRECT_USE           : boolean := TRUE;
    COMMA_10B_MASK            : bit_vector := "1111111000";
    CRC_END_OF_PKT            : string := "K29_7";
    CRC_FORMAT                 : string := "INFINIBAND";
    CRC_START_OF_PKT          : string := "K27_7";
    DEC_MCOMMA_DETECT         : boolean := TRUE;
    DEC_PCOMMA_DETECT         : boolean := TRUE;
    DEC_VALID_COMMA_ONLY      : boolean := TRUE;
    LANE_ID                    : bit_vector := "00000000000";
    MCOMMA_10B_VALUE          : bit_vector := "1100000000";
    MCOMMA_DETECT             : boolean := TRUE;
    PCOMMA_10B_VALUE          : bit_vector := "0011111000";
    PCOMMA_DETECT             : boolean := TRUE;
```

```

REF_CLK_V_SEL           : integer := 0;
RX_BUFFER_USE           : boolean := TRUE;
RX_CRC_USE              : boolean := FALSE;
RX_DATA_WIDTH           : integer := 1;
RX_DECODE_USE           : boolean := TRUE;
RX_LOS_INVALID_INCR     : integer := 1;
RX_LOS_THRESHOLD        : integer := 4;
RX_LOSS_OF_SYNC_FSM     : boolean := TRUE;
SERDES_10B              : boolean := FALSE;
TERMINATION_IMP         : integer := 50;
TX_BUFFER_USE           : boolean := TRUE;
TX_CRC_FORCE_VALUE      : bit_vector := "11010110";
TX_CRC_USE              : boolean := FALSE;
TX_DATA_WIDTH           : integer := 1;
TX_DIFF_CTRL           : integer := 500;
TX_PREEMPHASIS         : integer := 0);

-- synopsys translate_on
port (
  CHBONDDONE             : out std_ulogic;
  CHBONDO                : out std_logic_vector(3 downto 0);
  CONFIGOUT              : out std_ulogic;
  RXBUFSTATUS            : out std_logic_vector(1 downto 0);
  RXCHARISCOMMA          : out std_logic_vector(0 downto 0);
  RXCHARISK              : out std_logic_vector(0 downto 0);
  RXCHECKINGCRC          : out std_ulogic;
  RXCLKCORCNT            : out std_logic_vector(2 downto 0);
  RXCOMMADET             : out std_ulogic;
  RXCRCERR               : out std_ulogic;
  RXDATA                 : out std_logic_vector(7 downto 0);
  RXDISPERR              : out std_logic_vector(0 downto 0);
  RXLOSSOFSYNC           : out std_logic_vector(1 downto 0);
  RXNOTINTABLE           : out std_logic_vector(0 downto 0);
  RXREALIGN              : out std_ulogic;
  RXRECCLK               : out std_ulogic;
  RXRUNDISP              : out std_logic_vector(0 downto 0);
  TXBUFERR               : out std_ulogic;
  TXKERR                 : out std_logic_vector(0 downto 0);
  TXN                    : out std_ulogic;
  TXP                    : out std_ulogic;
  TXRUNDISP              : out std_logic_vector(0 downto 0);
  BREFCLK                : in std_ulogic := 'X';
  BREFCLK2               : in std_ulogic := 'X';
  CHBONDI                : in std_logic_vector(3 downto 0);
  CONFIGENABLE           : in std_ulogic;
  CONFIGIN               : in std_ulogic;
  ENCHANSYNC             : in std_ulogic;
  ENMCOMMAALIGN          : in std_ulogic;
  ENPCOMMAALIGN          : in std_ulogic;
  LOOPBACK               : in std_logic_vector(1 downto 0);
  POWERDOWN              : in std_ulogic;
  REFCLK                 : in std_ulogic;
  REFCLK2                : in std_ulogic;
  REFCLKSEL              : in std_ulogic;
  RXN                    : in std_ulogic;
  RXP                    : in std_ulogic;
  RXPOLARITY             : in std_ulogic;
  RXRESET                : in std_ulogic;

```

```

RXUSRCLK                : in std_ulogic;
RXUSRCLK2               : in std_ulogic;
TXBPASS8B10B           : in std_logic_vector(0 downto 0);
TXCHARDISPMODE         : in std_logic_vector(0 downto 0);
TXCHARDISPVAL          : in std_logic_vector(0 downto 0);
TXCHARISK               : in std_logic_vector(0 downto 0);
TXDATA                  : in std_logic_vector(7 downto 0);
TXFORCECRCERR          : in std_ulogic;
TXINHIBIT               : in std_ulogic;
TXPOLARITY              : in std_ulogic;
TXRESET                 : in std_ulogic;
TXUSRCLK                : in std_ulogic;
TXUSRCLK2               : in std_ulogic);

```

```
end component;
```

```

-- Component Attribute specification for GT_INFINIBAND_1
-- should be placed after architecture declaration but
-- before the begin keyword

```

```
-- Enter constraints here
```

```

-- Component Instantiation for GT_INFINIBAND_1 should be placed
-- in architecture after the begin keyword

```

```
GT_INFINIBAND_1_INSTANCE_NAME : GT_INFINIBAND_1
```

```
-- synopsys translate_off
```

```
generic map (
```

```

ALIGN_COMMA_MSB        => boolean_value,
CHAN_BOND_LIMIT        => integer_value,
CHAN_BOND_MODE         => string_value,
CHAN_BOND_OFFSET       => integer_value,
CHAN_BOND_ONE_SHOT     => boolean_value,
CHAN_BOND_SEQ_1_1      => bit_value,
CHAN_BOND_SEQ_1_2      => bit_value,
CHAN_BOND_SEQ_1_3      => bit_value,
CHAN_BOND_SEQ_1_4      => bit_value,
CHAN_BOND_SEQ_2_1      => bit_value,
CHAN_BOND_SEQ_2_2      => bit_value,
CHAN_BOND_SEQ_2_3      => bit_value,
CHAN_BOND_SEQ_2_4      => bit_value,
CHAN_BOND_SEQ_2_USE    => boolean_value,
CHAN_BOND_SEQ_LEN      => integer_value,
CHAN_BOND_WAIT         => integer_value,
CLK_COR_INSERT_IDLE_FLAG => boolean_value,
CLK_COR_KEEP_IDLE     => boolean_value,
CLK_COR_REPEAT_WAIT   => integer_value,
CLK_COR_SEQ_1_1       => bit_value,
CLK_COR_SEQ_1_2       => bit_value,
CLK_COR_SEQ_1_3       => bit_value,
CLK_COR_SEQ_1_4       => bit_value,
CLK_COR_SEQ_2_1       => bit_value,
CLK_COR_SEQ_2_2       => bit_value,
CLK_COR_SEQ_2_3       => bit_value,
CLK_COR_SEQ_2_4       => bit_value,
CLK_COR_SEQ_2_USE     => boolean_value,
CLK_COR_SEQ_LEN       => integer_value,
CLK_CORRECT_USE       => boolean_value,

```

```

COMMA_10B_MASK                => bit_value,
CRC_END_OF_PKT                => string_value,
CRC_FORMAT                    => string_value,
CRC_START_OF_PKT             => string_value,
DEC_MCOMMA_DETECT            => boolean_value,
DEC_PCOMMA_DETECT            => boolean_value,
DEC_VALID_COMMA_ONLY         => boolean_value,
LANE_ID                      => bit_value,
MCOMMA_10B_VALUE             => bit_value,
MCOMMA_DETECT                => boolean_value,
PCOMMA_10B_VALUE             => bit_value,
PCOMMA_DETECT                => boolean_value,
REF_CLK_V_SEL                => integer_value,
RX_BUFFER_USE                => boolean_value,
RX_CRC_USE                   => boolean_value,
RX_DATA_WIDTH                => integer_value,
RX_DECODE_USE                => boolean_value,
RX_LOS_INVALID_INCR          => integer_value,
RX_LOS_THRESHOLD             => integer_value,
RX_LOSS_OF_SYNC_FSM          => boolean_value,
SERDES_10B                   => boolean_value,
TERMINATION_IMP              => integer_value,
TX_BUFFER_USE                => boolean_value,
TX_CRC_FORCE_VALUE           => bit_value,
TX_CRC_USE                   => boolean_value,
TX_DATA_WIDTH                => integer_value,
TX_DIFF_CTRL                 => integer_value,
TX_PREEMPHASIS              => integer_value)

-- synopsys translate_on
port map (
  CHBONDDONE                  => user_CHBONDDONE,
  CHBONDO                     => user_CHBONDO,
  CONFIGOUT                   => user_CONFIGOUT,
  RXBUFSTATUS                 => user_RXBUFSTATUS,
  RXCHARISCOMMA               => user_RXCHARISCOMMA,
  RXCHARISK                   => user_RXCHARISK,
  RXCHECKINGCRC               => user_RXCHECKINGCRC,
  RXCLKCORCNT                 => user_RXCLKCORCNT,
  RXCOMMADET                  => user_RXCOMMADET,
  RXCRCERR                    => user_RXCRCERR,
  RXDATA                      => user_RXDATA,
  RXDISPERR                   => user_RXDISPERR,
  RXLOSSOFSYNC                => user_RXLOSSOFSYNC,
  RXNOTINTABLE                => user_RXNOTINTABLE,
  RXREALIGN                   => user_RXREALIGN,
  RXRECCLK                    => user_RXRECCLK,
  RXRUNDISP                   => user_RXRUNDISP,
  TXBUFERR                    => user_TXBUFERR,
  TXKERR                      => user_TXKERR,
  TXN                         => user_TXN,
  TXP                         => user_TXP,
  TXRUNDISP                   => user_TXRUNDISP,
  BREFCLK                     => user_BREFCLK,
  BREFCLK2                    => user_BREFCLK2,
  CHBONDI                     => user_CHBONDI,
  CONFIGENABLE                => user_CONFIGENABLE,
  CONFIGIN                    => user_CONFIGIN,

```

```

ENCHANSYNC                => user_ENCHANSYNC,
ENMCOMMAALIGN             => user_ENMCOMMAALIGN,
ENPCOMMAALIGN             => user_ENPCOMMAALIGN,
LOOPBACK                  => user_LOOPBACK,
POWERDOWN                 => user_POWERDOWN,
REFCLK                    => user_REFCLK,
REFCLK2                   => user_REFCLK2,
REFCLKSEL                 => user_REFCLKSEL,
RXN                       => user_RXN,
RXP                       => user_RXP,
RXPOLARITY                => user_RXPOLARITY,
RXRESET                   => user_RXRESET,
RXUSRCLK                  => user_RXUSRCLK,
RXUSRCLK2                 => user_RXUSRCLK2,
TXBYPASS8B10B            => user_TXBYPASS8B10B,
TXCHARDISPMODE            => user_TXCHARDISPMODE,
TXCHARDISPVAL             => user_TXCHARDISPVAL,
TXCHARISK                 => user_TXCHARISK,
TXDATA                    => user_TXDATA,
TXFORCECRCERR            => user_TXFORCECRCERR,
TXINHIBIT                 => user_TXINHIBIT,
TXPOLARITY                => user_TXPOLARITY,
TXRESET                   => user_TXRESET,
TXUSRCLK                  => user_TXUSRCLK,
TXUSRCLK2                 => user_TXUSRCLK2);

```

## GT\_INFINIBAND\_2 VHDL Code

```

-- Component Attribute specification for GT_INFINIBAND_2
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

component GT_INFINIBAND_2
-- synopsys translate_off
generic (
    ALIGN_COMMA_MSB          : boolean := FALSE;
    CHAN_BOND_LIMIT          : integer := 16;
    CHAN_BOND_MODE           : string := "OFF";
    CHAN_BOND_OFFSET        : integer := 8;
    CHAN_BOND_ONE_SHOT      : boolean := FALSE;
    CHAN_BOND_SEQ_1_1       : bit_vector := "00110111100";
    CHAN_BOND_SEQ_1_2       : bit_vector := LANE_ID;
    CHAN_BOND_SEQ_1_3       : bit_vector := "00001001010";
    CHAN_BOND_SEQ_1_4       : bit_vector := "00001001010";
    CHAN_BOND_SEQ_2_1       : bit_vector := "00110111100";
    CHAN_BOND_SEQ_2_2       : bit_vector := LANE_ID;
    CHAN_BOND_SEQ_2_3       : bit_vector := "00001000101";
    CHAN_BOND_SEQ_2_4       : bit_vector := "00001000101";
    CHAN_BOND_SEQ_2_USE     : boolean := TRUE;
    CHAN_BOND_SEQ_LEN       : integer := 4;
    CHAN_BOND_WAIT          : integer := 8;
    CLK_COR_INSERT_IDLE_FLAG : boolean := FALSE;
    CLK_COR_KEEP_IDLE       : boolean := FALSE;
    CLK_COR_REPEAT_WAIT     : integer := 1;
    CLK_COR_SEQ_1_1         : bit_vector := "00100011100";
    CLK_COR_SEQ_1_2         : bit_vector := "00000000000";
    CLK_COR_SEQ_1_3         : bit_vector := "00000000000";
    CLK_COR_SEQ_1_4         : bit_vector := "00000000000");

```

```

CLK_COR_SEQ_2_1          : bit_vector := "000000000000";
CLK_COR_SEQ_2_2          : bit_vector := "000000000000";
CLK_COR_SEQ_2_3          : bit_vector := "000000000000";
CLK_COR_SEQ_2_4          : bit_vector := "000000000000";
CLK_COR_SEQ_2_USE        : boolean := FALSE;
CLK_COR_SEQ_LEN          : integer := 1;
CLK_CORRECT_USE          : boolean := TRUE;
COMMA_10B_MASK           : bit_vector := "1111111000";
CRC_END_OF_PKT           : string := "K29_7";
CRC_FORMAT                : string := "INFINIBAND";
CRC_START_OF_PKT         : string := "K27_7";
DEC_MCOMMA_DETECT        : boolean := TRUE;
DEC_PCOMMA_DETECT        : boolean := TRUE;
DEC_INVALID_COMMA_ONLY   : boolean := TRUE;
LANE_ID                   : bit_vector := "000000000000";
MCOMMA_10B_VALUE         : bit_vector := "1100000000";
MCOMMA_DETECT            : boolean := TRUE;
PCOMMA_10B_VALUE         : bit_vector := "0011111000";
PCOMMA_DETECT            : boolean := TRUE;
REF_CLK_V_SEL            : integer := 0;
RX_BUFFER_USE            : boolean := TRUE;
RX_CRC_USE                : boolean := FALSE;
RX_DATA_WIDTH            : integer := 2;
RX_DECODE_USE            : boolean := TRUE;
RX_LOS_INVALID_INCR      : integer := 1;
RX_LOS_THRESHOLD         : integer := 4;
RX_LOSS_OF_SYNC_FSM      : boolean := TRUE;
SERDES_10B                : boolean := FALSE;
TERMINATION_IMP          : integer := 50;
TX_BUFFER_USE            : boolean := TRUE;
TX_CRC_FORCE_VALUE       : bit_vector := "11010110";
TX_CRC_USE                : boolean := FALSE;
TX_DATA_WIDTH            : integer := 2;
TX_DIFF_CTRL             : integer := 500;
TX_PREEMPHASIS           : integer := 0);

-- synopsys translate_on
port (
    CHBONDDONE             : out std_ulogic;
    CHBONDO                 : out std_logic_vector(3 downto 0);
    CONFIGOUT              : out std_ulogic;
    RXBUFSTATUS            : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA          : out std_logic_vector(1 downto 0);
    RXCHARISK              : out std_logic_vector(1 downto 0);
    RXCHECKINGCRC          : out std_ulogic;
    RXCLKCORCNT            : out std_logic_vector(2 downto 0);
    RXCOMMADET             : out std_ulogic;
    RXCRCERR               : out std_ulogic;
    RXDATA                 : out std_logic_vector(15 downto 0);
    RXDISPERR              : out std_logic_vector(1 downto 0);
    RXLOSSOFSYNC           : out std_logic_vector(1 downto 0);
    RXNOTINTABLE           : out std_logic_vector(1 downto 0);
    RXREALIGN              : out std_ulogic;
    RXRECCLK               : out std_ulogic;
    RXRUNDISP              : out std_logic_vector(1 downto 0);
    TXBUFERR               : out std_ulogic;
    TXKERR                 : out std_logic_vector(1 downto 0);
    TXN                    : out std_ulogic;

```



```

TXP                                     : out std_ulogic;
TXRUNDISP                               : out std_logic_vector(1 downto 0);
BREFCLK                                 : in std_ulogic := 'X';
BREFCLK2                                : in std_ulogic := 'X';
CHBONDI                                 : in std_logic_vector(3 downto 0);
CONFIGENABLE                            : in std_ulogic;
CONFIGIN                                 : in std_ulogic;
ENCHANSYNC                              : in std_ulogic;
ENMCOMMAALIGN                           : in std_ulogic;
ENPCOMMAALIGN                           : in std_ulogic;
LOOPBACK                                 : in std_logic_vector(1 downto 0);
POWERDOWN                               : in std_ulogic;
REFCLK                                  : in std_ulogic;
REFCLK2                                  : in std_ulogic;
REFCLKSEL                               : in std_ulogic;
RXN                                      : in std_ulogic;
RXP                                      : in std_ulogic;
RXPOLARITY                              : in std_ulogic;
RXRESET                                 : in std_ulogic;
RXUSRCLK                                : in std_ulogic;
RXUSRCLK2                               : in std_ulogic;
TXBPASS8B10B                            : in std_logic_vector(1 downto 0);
TXCHARDISPMODE                          : in std_logic_vector(1 downto 0);
TXCHARDISPVAL                           : in std_logic_vector(1 downto 0);
TXCHARISK                                : in std_logic_vector(1 downto 0);
TXDATA                                  : in std_logic_vector(15 downto 0);
TXFORCECERCERR                          : in std_ulogic;
TXINHIBIT                               : in std_ulogic;
TXPOLARITY                              : in std_ulogic;
TXRESET                                 : in std_ulogic;
TXUSRCLK                                : in std_ulogic;
TXUSRCLK2                               : in std_ulogic);

end component;

-- Component Attribute specification for GT_INFINIBAND_2
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter constraints here

-- Component Instantiation for GT_INFINIBAND_2 should be placed
-- in architecture after the begin keyword

GT_INFINIBAND_2_INSTANCE_NAME : GT_INFINIBAND_2
-- synopsys translate_off
generic map (
    ALIGN_COMMA_MSB           => boolean_value,
    CHAN_BOND_LIMIT           => integer_value,
    CHAN_BOND_MODE            => string_value,
    CHAN_BOND_OFFSET          => integer_value,
    CHAN_BOND_ONE_SHOT        => boolean_value,
    CHAN_BOND_SEQ_1_1         => bit_value,
    CHAN_BOND_SEQ_1_2         => bit_value,
    CHAN_BOND_SEQ_1_3         => bit_value,
    CHAN_BOND_SEQ_1_4         => bit_value,
    CHAN_BOND_SEQ_2_1         => bit_value,
    CHAN_BOND_SEQ_2_2         => bit_value,

```

```

CHAN_BOND_SEQ_2_3          => bit_value,
CHAN_BOND_SEQ_2_4          => bit_value,
CHAN_BOND_SEQ_2_USE        => boolean_value,
CHAN_BOND_SEQ_LEN          => integer_value,
CHAN_BOND_WAIT              => integer_value,
CLK_COR_INSERT_IDLE_FLAG   => boolean_value,
CLK_COR_KEEP_IDLE           => boolean_value,
CLK_COR_REPEAT_WAIT        => integer_value,
CLK_COR_SEQ_1_1             => bit_value,
CLK_COR_SEQ_1_2             => bit_value,
CLK_COR_SEQ_1_3             => bit_value,
CLK_COR_SEQ_1_4             => bit_value,
CLK_COR_SEQ_2_1             => bit_value,
CLK_COR_SEQ_2_2             => bit_value,
CLK_COR_SEQ_2_3             => bit_value,
CLK_COR_SEQ_2_4             => bit_value,
CLK_COR_SEQ_2_USE          => boolean_value,
CLK_COR_SEQ_LEN            => integer_value,
CLK_CORRECT_USE            => boolean_value,
COMMA_10B_MASK             => bit_value,
CRC_END_OF_PKT              => string_value,
CRC_FORMAT                  => string_value,
CRC_START_OF_PKT           => string_value,
DEC_MCOMMA_DETECT          => boolean_value,
DEC_PCOMMA_DETECT          => boolean_value,
DEC_INVALID_COMMA_ONLY     => boolean_value,
LANE_ID                     => bit_value,
MCOMMA_10B_VALUE           => bit_value,
MCOMMA_DETECT              => boolean_value,
PCOMMA_10B_VALUE           => bit_value,
PCOMMA_DETECT              => boolean_value,
REF_CLK_V_SEL              => integer_value,
RX_BUFFER_USE              => boolean_value,
RX_CRC_USE                  => boolean_value,
RX_DATA_WIDTH              => integer_value,
RX_DECODE_USE              => boolean_value,
RX_LOS_INVALID_INCR        => integer_value,
RX_LOS_THRESHOLD           => integer_value,
RX_LOSS_OF_SYNC_FSM        => boolean_value,
SERDES_10B                 => boolean_value,
TERMINATION_IMP            => integer_value,
TX_BUFFER_USE              => boolean_value,
TX_CRC_FORCE_VALUE         => bit_value,
TX_CRC_USE                  => boolean_value,
TX_DATA_WIDTH              => integer_value,
TX_DIFF_CTRL               => integer_value,
TX_PREEMPHASIS            => integer_value)

-- synopsys translate_on
port map (
  CHBONDDONE                => user_CHBONDDONE,
  CHBONDO                   => user_CHBONDO,
  CONFIGOUT                 => user_CONFIGOUT,
  RXBUFSTATUS               => user_RXBUFSTATUS,
  RXCHARISCOMMA             => user_RXCHARISCOMMA,
  RXCHARISK                 => user_RXCHARISK,
  RXCHECKINGCRC             => user_RXCHECKINGCRC,
  RXCLKCORCNT               => user_RXCLKCORCNT,

```

```

RXCOMMADET           => user_RXCOMMADET,
RXCRCERR             => user_RXCRCERR,
RXDATA               => user_RXDATA,
RXDISPERR            => user_RXDISPERR,
RXLOSSOFSYNC         => user_RXLOSSOFSYNC,
RXNOTINTABLE         => user_RXNOTINTABLE,
RXREALIGN             => user_RXREALIGN,
RXRECCLK             => user_RXRECCLK,
RXRUNDISP            => user_RXRUNDISP,
TXBUFERR             => user_TXBUFERR,
TXKERR               => user_TXKERR,
TXN                  => user_TXN,
TXP                  => user_TXP,
TXRUNDISP            => user_TXRUNDISP,
BREFCLK              => user_BREFCLK,
BREFCLK2             => user_BREFCLK2,
CHBONDI              => user_CHBONDI,
CONFIGENABLE         => user_CONFIGENABLE,
CONFIGIN             => user_CONFIGIN,
ENCHANSYNC           => user_ENCHANSYNC,
ENMCOMMAALIGN        => user_ENMCOMMAALIGN,
ENPCOMMAALIGN        => user_ENPCOMMAALIGN,
LOOPBACK             => user_LOOPBACK,
POWERDOWN            => user_POWERDOWN,
REFCLK               => user_REFCLK,
REFCLK2              => user_REFCLK2,
REFCLKSEL            => user_REFCLKSEL,
RXN                  => user_RXN,
RXP                  => user_RXP,
RXPOLARITY           => user_RXPOLARITY,
RXRESET              => user_RXRESET,
RXUSRCLK             => user_RXUSRCLK,
RXUSRCLK2            => user_RXUSRCLK2,
TXBYPASS8B10B        => user_TXBYPASS8B10B,
TXCHARDISPMODE       => user_TXCHARDISPMODE,
TXCHARDISPVAL        => user_TXCHARDISPVAL,
TXCHARISK            => user_TXCHARISK,
TXDATA               => user_TXDATA,
TXFORCECRCERR        => user_TXFORCECRCERR,
TXINHIBIT            => user_TXINHIBIT,
TXPOLARITY           => user_TXPOLARITY,
TXRESET              => user_TXRESET,
TXUSRCLK             => user_TXUSRCLK,
TXUSRCLK2            => user_TXUSRCLK2);

```

### GT\_INFINIBAND\_4 VHDL Code

```

-- Component Attribute specification for GT_INFINIBAND_4
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

component GT_INFINIBAND_4
-- synopsis translate_off
generic (
    ALIGN_COMMA_MSB           : boolean := FALSE;
    CHAN_BOND_LIMIT           : integer := 16;
    CHAN_BOND_MODE            : string := "OFF";
    CHAN_BOND_OFFSET          : integer := 8;

```

```

CHAN_BOND_ONE_SHOT          : boolean := FALSE;
CHAN_BOND_SEQ_1_1          : bit_vector := "00110111100";
CHAN_BOND_SEQ_1_2          : bit_vector := LANE_ID;
CHAN_BOND_SEQ_1_3          : bit_vector := "00001001010";
CHAN_BOND_SEQ_1_4          : bit_vector := "00001001010";
CHAN_BOND_SEQ_2_1          : bit_vector := "00110111100";
CHAN_BOND_SEQ_2_2          : bit_vector := LANE_ID;
CHAN_BOND_SEQ_2_3          : bit_vector := "00001000101";
CHAN_BOND_SEQ_2_4          : bit_vector := "00001000101";
CHAN_BOND_SEQ_2_USE        : boolean := TRUE;
CHAN_BOND_SEQ_LEN          : integer := 4;
CHAN_BOND_WAIT             : integer := 8;
CLK_COR_INSERT_IDLE_FLAG   : boolean := FALSE;
CLK_COR_KEEP_IDLE         : boolean := FALSE;
CLK_COR_REPEAT_WAIT       : integer := 1;
CLK_COR_SEQ_1_1           : bit_vector := "00100011100";
CLK_COR_SEQ_1_2           : bit_vector := "00000000000";
CLK_COR_SEQ_1_3           : bit_vector := "00000000000";
CLK_COR_SEQ_1_4           : bit_vector := "00000000000";
CLK_COR_SEQ_2_1           : bit_vector := "00000000000";
CLK_COR_SEQ_2_2           : bit_vector := "00000000000";
CLK_COR_SEQ_2_3           : bit_vector := "00000000000";
CLK_COR_SEQ_2_4           : bit_vector := "00000000000";
CLK_COR_SEQ_2_USE         : boolean := FALSE;
CLK_COR_SEQ_LEN           : integer := 1;
CLK_CORRECT_USE           : boolean := TRUE;
COMMA_10B_MASK             : bit_vector := "1111111000";
CRC_END_OF_PKT             : string := "K29_7";
CRC_FORMAT                 : string := "INFINIBAND";
CRC_START_OF_PKT           : string := "K27_7";
DEC_MCOMMA_DETECT          : boolean := TRUE;
DEC_PCOMMA_DETECT          : boolean := TRUE;
DEC_VALID_COMMA_ONLY      : boolean := TRUE;
LANE_ID                    : bit_vector := "00000000000";
MCOMMA_10B_VALUE          : bit_vector := "11000000000";
MCOMMA_DETECT              : boolean := TRUE;
PCOMMA_10B_VALUE          : bit_vector := "0011111000";
PCOMMA_DETECT              : boolean := TRUE;
REF_CLK_V_SEL              : integer := 0;
RX_BUFFER_USE              : boolean := TRUE;
RX_CRC_USE                 : boolean := FALSE;
RX_DATA_WIDTH              : integer := 4;
RX_DECODE_USE              : boolean := TRUE;
RX_LOS_INVALID_INCR       : integer := 1;
RX_LOS_THRESHOLD           : integer := 4;
RX_LOSS_OF_SYNC_FSM       : boolean := TRUE;
SERDES_10B                 : boolean := FALSE;
TERMINATION_IMP            : integer := 50;
TX_BUFFER_USE              : boolean := TRUE;
TX_CRC_FORCE_VALUE        : bit_vector := "11010110";
TX_CRC_USE                 : boolean := FALSE;
TX_DATA_WIDTH              : integer := 4;
TX_DIFF_CTRL               : integer := 500;
TX_PREEMPHASIS            : integer := 0);

-- synopsys translate_on
port (
    CHBONDDONE                : out std_ulogic;

```

```

CHBONDO                : out std_logic_vector(3 downto 0);
CONFIGOUT              : out std_ulogic;
RXBUFSTATUS           : out std_logic_vector(1 downto 0);
RXCHARISCOMMA        : out std_logic_vector(3 downto 0);
RXCHARISK             : out std_logic_vector(3 downto 0);
RXCHECKINGCRC        : out std_ulogic;
RXCLKCORCNT          : out std_logic_vector(2 downto 0);
RXCOMMADET           : out std_ulogic;
RXCRCERR             : out std_ulogic;
RXDATA               : out std_logic_vector(31 downto 0);
RXDISPERR            : out std_logic_vector(3 downto 0);
RXLOSSOFSYNC        : out std_logic_vector(1 downto 0);
RXNOTINTABLE         : out std_logic_vector(3 downto 0);
RXREALIGN            : out std_ulogic;
RXRECCLK            : out std_ulogic;
RXRUNDISP           : out std_logic_vector(3 downto 0);
TXBUFERR             : out std_ulogic;
TXKERR              : out std_logic_vector(3 downto 0);
TXN                 : out std_ulogic;
TXP                 : out std_ulogic;
TXRUNDISP           : out std_logic_vector(3 downto 0);
BREFCLK             : in std_ulogic := 'X';
BREFCLK2            : in std_ulogic := 'X';
CHBONDI             : in std_logic_vector(3 downto 0);
CONFIGENABLE        : in std_ulogic;
CONFIGIN            : in std_ulogic;
ENCHANSYNC          : in std_ulogic;
ENMCOMMAALIGN       : in std_ulogic;
ENPCOMMAALIGN       : in std_ulogic;
LOOPBACK            : in std_logic_vector(1 downto 0);
POWERDOWN           : in std_ulogic;
REFCLK              : in std_ulogic;
REFCLK2             : in std_ulogic;
REFCLKSEL           : in std_ulogic;
RXN                 : in std_ulogic;
RXP                 : in std_ulogic;
RXPOLARITY          : in std_ulogic;
RXRESET             : in std_ulogic;
RXUSRCLK            : in std_ulogic;
RXUSRCLK2           : in std_ulogic;
TXBYPASS8B10B      : in std_logic_vector(3 downto 0);
TXCHARDISPMODE      : in std_logic_vector(3 downto 0);
TXCHARDISPVAL       : in std_logic_vector(3 downto 0);
TXCHARISK           : in std_logic_vector(3 downto 0);
TXDATA             : in std_logic_vector(31 downto 0);
TXFORCECRCERR       : in std_ulogic;
TXINHIBIT           : in std_ulogic;
TXPOLARITY          : in std_ulogic;
TXRESET             : in std_ulogic;
TXUSRCLK            : in std_ulogic;
TXUSRCLK2           : in std_ulogic);

end component;

-- Component Attribute specification for GT_INFINIBAND_4
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

-- Enter constraints here

-- Component Instantiation for GT_INFINIBAND_4 should be placed
-- in architecture after the begin keyword

GT_INFINIBAND_4_INSTANCE_NAME : GT_INFINIBAND_4
-- synopsys translate_off
generic map (
    ALIGN_COMMA_MSB           => boolean_value,
    CHAN_BOND_LIMIT           => integer_value,
    CHAN_BOND_MODE             => string_value,
    CHAN_BOND_OFFSET           => integer_value,
    CHAN_BOND_ONE_SHOT        => boolean_value,
    CHAN_BOND_SEQ_1_1          => bit_value,
    CHAN_BOND_SEQ_1_2          => bit_value,
    CHAN_BOND_SEQ_1_3          => bit_value,
    CHAN_BOND_SEQ_1_4          => bit_value,
    CHAN_BOND_SEQ_2_1          => bit_value,
    CHAN_BOND_SEQ_2_2          => bit_value,
    CHAN_BOND_SEQ_2_3          => bit_value,
    CHAN_BOND_SEQ_2_4          => bit_value,
    CHAN_BOND_SEQ_2_USE        => boolean_value,
    CHAN_BOND_SEQ_LEN          => integer_value,
    CHAN_BOND_WAIT             => integer_value,
    CLK_COR_INSERT_IDLE_FLAG   => boolean_value,
    CLK_COR_KEEP_IDLE          => boolean_value,
    CLK_COR_REPEAT_WAIT        => integer_value,
    CLK_COR_SEQ_1_1            => bit_value,
    CLK_COR_SEQ_1_2            => bit_value,
    CLK_COR_SEQ_1_3            => bit_value,
    CLK_COR_SEQ_1_4            => bit_value,
    CLK_COR_SEQ_2_1            => bit_value,
    CLK_COR_SEQ_2_2            => bit_value,
    CLK_COR_SEQ_2_3            => bit_value,
    CLK_COR_SEQ_2_4            => bit_value,
    CLK_COR_SEQ_2_USE          => boolean_value,
    CLK_COR_SEQ_LEN            => integer_value,
    CLK_CORRECT_USE            => boolean_value,
    COMMA_10B_MASK             => bit_value,
    CRC_END_OF_PKT             => string_value,
    CRC_FORMAT                  => string_value,
    CRC_START_OF_PKT           => string_value,
    DEC_MCOMMA_DETECT          => boolean_value,
    DEC_PCOMMA_DETECT          => boolean_value,
    DEC_VALID_COMMA_ONLY       => boolean_value,
    LANE_ID                     => bit_value,
    MCOMMA_10B_VALUE           => bit_value,
    MCOMMA_DETECT              => boolean_value,
    PCOMMA_10B_VALUE           => bit_value,
    PCOMMA_DETECT              => boolean_value,
    REF_CLK_V_SEL              => integer_value,
    RX_BUFFER_USE              => boolean_value,
    RX_CRC_USE                  => boolean_value,
    RX_DATA_WIDTH              => integer_value,
    RX_DECODE_USE              => boolean_value,
    RX_LOS_INVALID_INCR        => integer_value,
    RX_LOS_THRESHOLD           => integer_value,
    RX_LOSS_OF_SYNC_FSM        => boolean_value,

```

```

SERDES_10B                => boolean_value,
TERMINATION_IMP           => integer_value,
TX_BUFFER_USE            => boolean_value,
TX_CRC_FORCE_VALUE      => bit_value,
TX_CRC_USE               => boolean_value,
TX_DATA_WIDTH           => integer_value,
TX_DIFF_CTRL            => integer_value,
TX_PREEMPHASIS          => integer_value)

-- synopsys translate_on
port map (
  CHBONDDONE              => user_CHBONDDONE,
  CHBONDO                 => user_CHBONDO,
  CONFIGOUT              => user_CONFIGOUT,
  RXBUFSTATUS            => user_RXBUFSTATUS,
  RXCHARISCOMMA         => user_RXCHARISCOMMA,
  RXCHARISK              => user_RXCHARISK,
  RXCHECKINGCRC         => user_RXCHECKINGCRC,
  RXCLKCORCNT           => user_RXCLKCORCNT,
  RXCOMMADET            => user_RXCOMMADET,
  RXCRCERR              => user_RXCRCERR,
  RXDATA                 => user_RXDATA,
  RXDISPERR             => user_RXDISPERR,
  RXLOSSOFSYNC          => user_RXLOSSOFSYNC,
  RXNOTINTABLE          => user_RXNOTINTABLE,
  RXREALIGN             => user_RXREALIGN,
  RXRECCLK              => user_RXRECCLK,
  RXRUNDISP             => user_RXRUNDISP,
  TXBUFERR              => user_TXBUFERR,
  TXKERR                => user_TXKERR,
  TXN                   => user_TXN,
  TXP                   => user_TXP,
  TXRUNDISP            => user_TXRUNDISP,
  BREFCLK               => user_BREFCLK,
  BREFCLK2              => user_BREFCLK2,
  CHBONDI               => user_CHBONDI,
  CONFIGENABLE          => user_CONFIGENABLE,
  CONFIGIN              => user_CONFIGIN,
  ENCHANSYNC            => user_ENCHANSYNC,
  ENMCOMMAALIGN         => user_ENMCOMMAALIGN,
  ENPCOMMAALIGN         => user_ENPCOMMAALIGN,
  LOOPBACK              => user_LOOPBACK,
  POWERDOWN             => user_POWERDOWN,
  REFCLK                => user_REFCLK,
  REFCLK2               => user_REFCLK2,
  REFCLKSEL             => user_REFCLKSEL,
  RXN                   => user_RXN,
  RXP                   => user_RXP,
  RXPOLARITY           => user_RXPOLARITY,
  RXRESET              => user_RXRESET,
  RXUSRCLK              => user_RXUSRCLK,
  RXUSRCLK2            => user_RXUSRCLK2,
  TXBYPASS8B10B        => user_TXBYPASS8B10B,
  TXCHARDISPMODE       => user_TXCHARDISPMODE,
  TXCHARDISPVAL        => user_TXCHARDISPVAL,
  TXCHARISK            => user_TXCHARISK,
  TXDATA               => user_TXDATA,
  TXFORCECRCERR       => user_TXFORCECRCERR,

```

```

TXINHIBIT           => user_TXINHIBIT,
TXPOLARITY          => user_TXPOLARITY,
TXRESET             => user_TXRESET,
TXUSRCLK            => user_TXUSRCLK,
TXUSRCLK2           => user_TXUSRCLK2);

```

## Verilog Instantiation Templates

### GT\_INFINIBAND\_1 Verilog Code

```

GT_INFINIBAND_1 GT_INFINIBAND_1_name(
  .CHBONDDONE (user_CHBONDDONE),
  .CHBONDO (user_CHBONDO),
  .CONFIGOUT (user_CONFIGOUT),
  .RXBUFSTATUS (user_RXBUFSTATUS),
  .RXCHARISCOMMA (user_RXCHARISCOMMA),
  .RXCHARISK (user_RXCHARISK),
  .RXCHECKINGCRC (user_RXCHECKINGCRC),
  .RXCLKCORCNT (user_RXCLKCORCNT),
  .RXCOMMADET (user_RXCOMMADET),
  .RXCRCERR (user_RXCRCERR),
  .RXDATA (user_RXDATA),
  .RXDISPERR (user_RXDISPERR),
  .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
  .RXNOTINTABLE (user_RXNOTINTABLE),
  .RXREALIGN (user_RXREALIGN),
  .RXRECCLK (user_RXRECCLK),
  .RXRUNDISP (user_RXRUNDISP),
  .TXBUFERR (user_TXBUFERR),
  .TXKERR (user_TXKERR),
  .TXN (user_TXN),
  .TXP (user_TXP),
  .TXRUNDISP (user_TXRUNDISP),

  .BREFCLK (user_BREFCLK),
  .BREFCLK2 (user_BREFCLK2),
  .CHBONDI (user_CHBONDI),
  .CONFIGENABLE (user_CONFIGENABLE),
  .CONFIGIN (user_CONFIGIN),
  .ENCHANSYNC (user_ENCHANSYNC),
  .ENMCOMMAALIGN (user_ENMCOMMAALIGN),
  .ENPCOMMAALIGN (user_ENPCOMMAALIGN),
  .LOOPBACK (user_LOOPBACK),
  .POWERDOWN (user_POWERDOWN),
  .REFCLK (user_REFCLK),
  .REFCLK2 (user_REFCLK2),
  .REFCLKSEL (user_REFCLKSEL),
  .RXN (user_RXN),
  .RXP (user_RXP),
  .RXPOLARITY (user_RXPOLARITY),
  .RXRESET (user_RXRESET),
  .RXUSRCLK (user_RXUSRCLK),
  .RXUSRCLK2 (user_RXUSRCLK2),
  .TXBYPASS8B10B (user_TXBYPASS8B10B),
  .TXCHARDISPMODE (user_TXCHARDISPMODE),
  .TXCHARDISPVAL (user_TXCHARDISPVAL),
  .TXCHARISK (user_TXCHARISK),

```



```

.TXDATA (user_TXDATA),
.TXFORCECRCERR (user_TXFORCECRCERR),
.TXINHIBIT (user_TXINHIBIT),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_MSB = "FALSE";
defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_OFFSET = 8;
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b00110111100;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = LANE_ID;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b00110111100;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = LANE_ID;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b00001000101;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b00001000101;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "TRUE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 4;
defparam user_instance_name.CHAN_BOND_WAIT = 8;
defparam user_instance_name.CLK_COR_INSERT_IDLE_FLAG = "FALSE";
defparam user_instance_name.CLK_COR_KEEP_IDLE = "FALSE";
defparam user_instance_name.CLK_COR_REPEAT_WAIT = 1;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00100011100;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 1;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b1111111000;
defparam user_instance_name.CRC_END_OF_PKT = "K29_7";
defparam user_instance_name.CRC_FORMAT = "INFINIBAND";
defparam user_instance_name.CRC_START_OF_PKT = "K27_7";
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1100000000;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0011111000;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.REF_CLK_V_SEL = 0;
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_CRC_USE = "FALSE";
defparam user_instance_name.RX_DATA_WIDTH = 1;
defparam user_instance_name.RX_DECODE_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SERDES_10B = "FALSE";

```

```

defparam user_instance_name.TERMINATION_IMP = 50;
defparam user_instance_name.TX_BUFFER_USE = "TRUE";
defparam user_instance_name.TX_CRC_FORCE_VALUE = 8'b11010110;
defparam user_instance_name.TX_CRC_USE = "FALSE";
defparam user_instance_name.TX_DATA_WIDTH = 1;
defparam user_instance_name.TX_DIFF_CTRL = 500;
defparam user_instance_name.TX_PREEMPHASIS = 0;

```

## GT\_INFINIBAND\_2 Verilog Code

```

GT_INFINIBAND_2 GT_INFINIBAND_2_name(
    .CHBONDDONE (user_CHBONDDONE),
    .CHBONDO (user_CHBONDO),
    .CONFIGOUT (user_CONFIGOUT),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCHECKINGCRC (user_RXCHECKINGCRC),
    .RXCLKCORCNT (user_RXCLKCORCNT),
    .RXCOMMADET (user_RXCOMMADET),
    .RXCRCERR (user_RXCRCERR),
    .RXDATA (user_RXDATA),
    .RXDISPERR (user_RXDISPERR),
    .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
    .RXNOTINTABLE (user_RXNOTINTABLE),
    .RXREALIGN (user_RXREALIGN),
    .RXRECCLK (user_RXRECCLK),
    .RXRUNDISP (user_RXRUNDISP),
    .TXBUFERR (user_TXBUFERR),
    .TXKERR (user_TXKERR),
    .TXN (user_TXN),
    .TXP (user_TXP),
    .TXRUNDISP (user_TXRUNDISP),

    .BREFCLK (user_BREFCLK),
    .BREFCLK2 (user_BREFCLK2),
    .CHBONDI (user_CHBONDI),
    .CONFIGENABLE (user_CONFIGENABLE),
    .CONFIGIN (user_CONFIGIN),
    .ENCHANSYNC (user_ENCHANSYNC),
    .ENMCOMMAALIGN (user_ENMCOMMAALIGN),
    .ENPCOMMAALIGN (user_ENPCOMMAALIGN),
    .LOOPBACK (user_LOOPBACK),
    .POWERDOWN (user_POWERDOWN),
    .REFCLK (user_REFCLK),
    .REFCLK2 (user_REFCLK2),
    .REFCLKSEL (user_REFCLKSEL),
    .RXN (user_RXN),
    .RXP (user_RXP),
    .RXPOLARITY (user_RXPOLARITY),
    .RXRESET (user_RXRESET),
    .RXUSRCLK (user_RXUSRCLK),
    .RXUSRCLK2 (user_RXUSRCLK2),
    .TXBYPASS8B10B (user_TXBYPASS8B10B),
    .TXCHARDISPMODE (user_TXCHARDISPMODE),
    .TXCHARDISPVAL (user_TXCHARDISPVAL),
    .TXCHARISK (user_TXCHARISK),
    .TXDATA (user_TXDATA),

```

```

.TXFORCECERR (user_TXFORCECERR),
.TXINHIBIT (user_TXINHIBIT),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_MSB = "FALSE";
defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_OFFSET = 8;
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b00110111100;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = LANE_ID;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b00110111100;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = LANE_ID;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b00001000101;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b00001000101;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "TRUE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 4;
defparam user_instance_name.CHAN_BOND_WAIT = 8;
defparam user_instance_name.CLK_COR_INSERT_IDLE_FLAG = "FALSE";
defparam user_instance_name.CLK_COR_KEEP_IDLE = "FALSE";
defparam user_instance_name.CLK_COR_REPEAT_WAIT = 1;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00100011100;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 1;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b1111111000;
defparam user_instance_name.CRC_END_OF_PKT = "K29_7";
defparam user_instance_name.CRC_FORMAT = "INFINIBAND";
defparam user_instance_name.CRC_START_OF_PKT = "K27_7";
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1100000000;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0011111000;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.REF_CLK_V_SEL = 0;
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_CRC_USE = "FALSE";
defparam user_instance_name.RX_DATA_WIDTH = 2;
defparam user_instance_name.RX_DECODE_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SERDES_10B = "FALSE";
defparam user_instance_name.TERMINATION_IMP = 50;

```

```

defparam user_instance_name.TX_BUFFER_USE = "TRUE";
defparam user_instance_name.TX_CRC_FORCE_VALUE = 8'b11010110;
defparam user_instance_name.TX_CRC_USE = "FALSE";
defparam user_instance_name.TX_DATA_WIDTH = 2;
defparam user_instance_name.TX_DIFF_CTRL = 500;
defparam user_instance_name.TX_PREEMPHASIS = 0;

```

## GT\_INFINIBAND\_4 Verilog Code

```

GT_INFINIBAND_4 GT_INFINIBAND_4_name(
    .CHBONDDONE (user_CHBONDDONE),
    .CHBONDO (user_CHBONDO),
    .CONFIGOUT (user_CONFIGOUT),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCHECKINGCRC (user_RXCHECKINGCRC),
    .RXCLKCORCNT (user_RXCLKCORCNT),
    .RXCOMMADET (user_RXCOMMADET),
    .RXCRCERR (user_RXCRCERR),
    .RXDATA (user_RXDATA),
    .RXDISPERR (user_RXDISPERR),
    .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
    .RXNOTINTABLE (user_RXNOTINTABLE),
    .RXREALIGN (user_RXREALIGN),
    .RXRECCLK (user_RXRECCLK),
    .RXRUNDISP (user_RXRUNDISP),
    .TXBUFERR (user_TXBUFERR),
    .TXKERR (user_TXKERR),
    .TXN (user_TXN),
    .TXP (user_TXP),
    .TXRUNDISP (user_TXRUNDISP),

    .BREFCLK (user_BREFCLK),
    .BREFCLK2 (user_BREFCLK2),
    .CHBONDI (user_CHBONDI),
    .CONFIGENABLE (user_CONFIGENABLE),
    .CONFIGIN (user_CONFIGIN),
    .ENCHANSYNC (user_ENCHANSYNC),
    .ENMCOMMAALIGN (user_ENMCOMMAALIGN),
    .ENPCOMMAALIGN (user_ENPCOMMAALIGN),
    .LOOPBACK (user_LOOPBACK),
    .POWERDOWN (user_POWERDOWN),
    .REFCLK (user_REFCLK),
    .REFCLK2 (user_REFCLK2),
    .REFCLKSEL (user_REFCLKSEL),
    .RXN (user_RXN),
    .RXP (user_RXP),
    .RXPOLARITY (user_RXPOLARITY),
    .RXRESET (user_RXRESET),
    .RXUSRCLK (user_RXUSRCLK),
    .RXUSRCLK2 (user_RXUSRCLK2),
    .TXBYPASS8B10B (user_TXBYPASS8B10B),
    .TXCHARDISPMODE (user_TXCHARDISPMODE),
    .TXCHARDISPVAL (user_TXCHARDISPVAL),
    .TXCHARISK (user_TXCHARISK),
    .TXDATA (user_TXDATA),
    .TXFORCECRCERR (user_TXFORCECRCERR),

```

```

.TXINHIBIT (user_TXINHIBIT),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_MSB = "FALSE";
defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_OFFSET = 8;
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b00110111100;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = LANE_ID;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b00110111100;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = LANE_ID;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b00001000101;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b00001000101;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "TRUE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 4;
defparam user_instance_name.CHAN_BOND_WAIT = 8;
defparam user_instance_name.CLK_COR_INSERT_IDLE_FLAG = "FALSE";
defparam user_instance_name.CLK_COR_KEEP_IDLE = "FALSE";
defparam user_instance_name.CLK_COR_REPEAT_WAIT = 1;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00100011100;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 1;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b1111111000;
defparam user_instance_name.CRC_END_OF_PKT = "K29_7";
defparam user_instance_name.CRC_FORMAT = "INFINIBAND";
defparam user_instance_name.CRC_START_OF_PKT = "K27_7";
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1100000000;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0011111000;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.REF_CLK_V_SEL = 0;
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_CRC_USE = "FALSE";
defparam user_instance_name.RX_DATA_WIDTH = 4;
defparam user_instance_name.RX_DECODE_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SERDES_10B = "FALSE";
defparam user_instance_name.TERMINATION_IMP = 50;
defparam user_instance_name.TX_BUFFER_USE = "TRUE";

```

```
defparam user_instance_name.TX_CRC_FORCE_VALUE = 8'b11010110;  
defparam user_instance_name.TX_CRC_USE = "FALSE";  
defparam user_instance_name.TX_DATA_WIDTH = 4;  
defparam user_instance_name.TX_DIFF_CTRL = 500;  
defparam user_instance_name.TX_PREEMPHASIS = 0;
```

## Commonly Used Constraints

None

## GT\_XAUI\_n

### Gigabit Transceiver for High-Speed I/O


#### Architectures Supported

GT_XAUI_n	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive*
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
*Supported for Virtex-II Pro but not for Virtex-II or Virtex-II Pro X.	

This XAUI gigabit transceiver supports 1, 2, and 4-byte data paths. The letter *n* represents number of bytes of the data path. Valid values are 1, 2 or 4.


You can also set attributes for the primitives. See the *RocketIO Transceiver User Guide* for a description of these attributes and their default attribute values.

The following figures list the input and output ports for all values of *n*. For a description of each of the ports, see the *RocketIO Transceiver User Guide*.

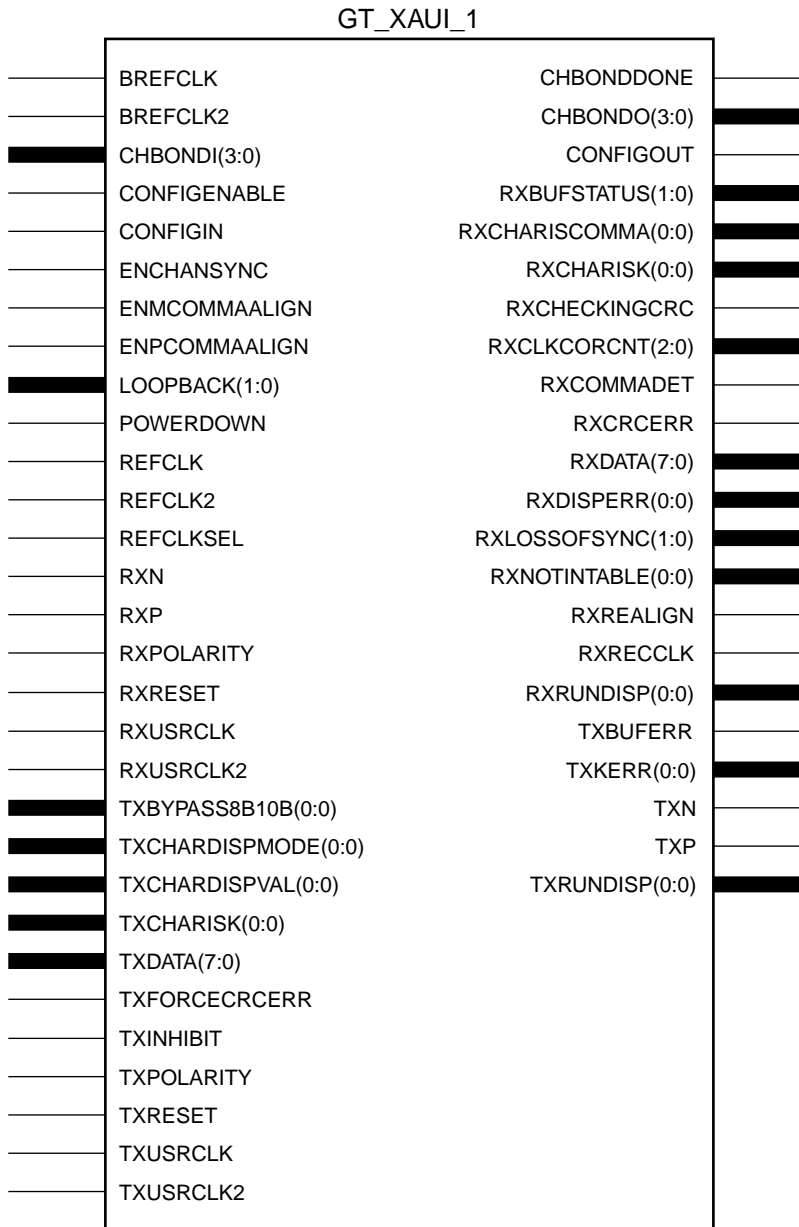


X9902



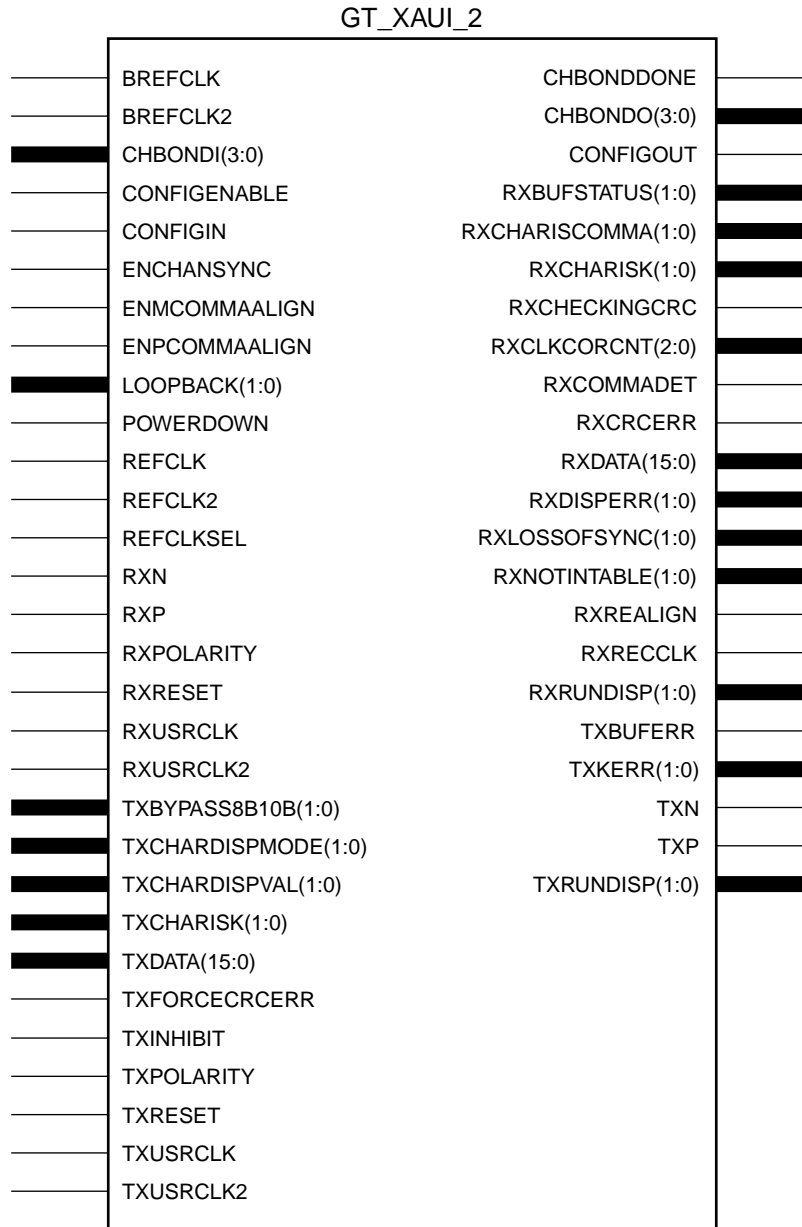

X9903

GT\_XAUI\_4

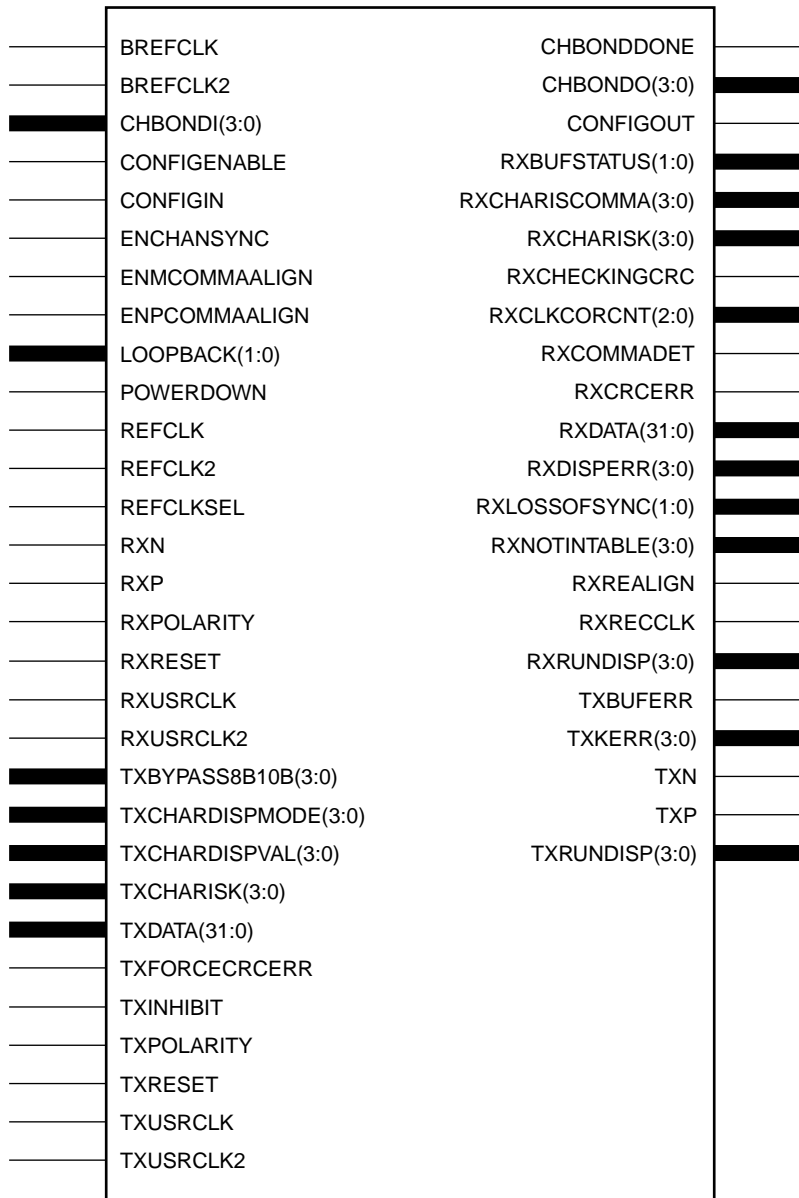

X9904

## Usage

This design element is instantiated rather than inferred in the design code.

## VHDL Instantiation Templates

### GT\_XAUI\_1 VHDL Code

```
-- Component Attribute specification for GT_XAUI_1
-- should be placed after architecture declaration but
-- before the begin keyword

component GT_XAUI_1
-- synopsys translate_off
generic (
    ALIGN_COMMA_MSB           : boolean := FALSE;
    CHAN_BOND_LIMIT           : integer := 16;
    CHAN_BOND_MODE            : string := "OFF";
    CHAN_BOND_OFFSET          : integer := 8;
    CHAN_BOND_ONE_SHOT        : boolean := FALSE;
    CHAN_BOND_SEQ_1_1         : bit_vector := "00101111100";
    CHAN_BOND_SEQ_1_2         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_3         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_4         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_1         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_2         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_3         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_4         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_USE       : boolean := FALSE;
    CHAN_BOND_SEQ_LEN         : integer := 1;
    CHAN_BOND_WAIT            : integer := 8;
    CLK_COR_INSERT_IDLE_FLAG  : boolean := FALSE;
    CLK_COR_KEEP_IDLE         : boolean := FALSE;
    CLK_COR_REPEAT_WAIT       : integer := 1;
    CLK_COR_SEQ_1_1           : bit_vector := "00100011100";
    CLK_COR_SEQ_1_2           : bit_vector := "00000000000";
    CLK_COR_SEQ_1_3           : bit_vector := "00000000000";
    CLK_COR_SEQ_1_4           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_1           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_2           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_3           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_4           : bit_vector := "00000000000";
    CLK_COR_SEQ_2_USE         : boolean := FALSE;
    CLK_COR_SEQ_LEN           : integer := 1;
    CLK_CORRECT_USE           : boolean := TRUE;
    COMMA_10B_MASK            : bit_vector := "1111111000";
    CRC_END_OF_PKT            : string := "K29_7";
    CRC_FORMAT                 : string := "USER_MODE";
    CRC_START_OF_PKT          : string := "K27_7";
    DEC_MCOMMA_DETECT         : boolean := TRUE;
    DEC_PCOMMA_DETECT         : boolean := TRUE;
    DEC_VALID_COMMA_ONLY      : boolean := TRUE;
    MCOMMA_10B_VALUE          : bit_vector := "1100000000";
    MCOMMA_DETECT             : boolean := TRUE;
    PCOMMA_10B_VALUE          : bit_vector := "0011111000";
    PCOMMA_DETECT             : boolean := TRUE;
    REF_CLK_V_SEL             : integer := 0;
```

```

RX_BUFFER_USE           : boolean := TRUE;
RX_CRC_USE              : boolean := FALSE;
RX_DATA_WIDTH           : integer  := 1;
RX_DECODE_USE          : boolean  := TRUE;
RX_LOS_INVALID_INCR    : integer  := 1;
RX_LOS_THRESHOLD       : integer  := 4;
RX_LOSS_OF_SYNC_FSM   : boolean  := TRUE;
SERDES_10B             : boolean  := FALSE;
TERMINATION_IMP        : integer  := 50;
TX_BUFFER_USE          : boolean  := TRUE;
TX_CRC_FORCE_VALUE     : bit_vector := "11010110";
TX_CRC_USE             : boolean  := FALSE;
TX_DATA_WIDTH          : integer  := 1;
TX_DIFF_CTRL           : integer  := 500;
TX_PREEMPHASIS        : integer  := 0;

-- synopsys translate_on
port (
  CHBONDDONE           : out std_ulogic;
  CHBONDO              : out std_logic_vector(3 downto 0);
  CONFIGOUT           : out std_ulogic;
  RXBUFSTATUS         : out std_logic_vector(1 downto 0);
  RXCHARISCOMMA       : out std_logic_vector(0 downto 0);
  RXCHARISK           : out std_logic_vector(0 downto 0);
  RXCHECKINGCRC       : out std_ulogic;
  RXCLKCORCNT         : out std_logic_vector(2 downto 0);
  RXCOMMADET          : out std_ulogic;
  RXCRCERR            : out std_ulogic;
  RXDATA              : out std_logic_vector(7 downto 0);
  RXDISPERR           : out std_logic_vector(0 downto 0);
  RXLOSSOFSYNC        : out std_logic_vector(1 downto 0);
  RXNOTINTABLE        : out std_logic_vector(0 downto 0);
  RXREALIGN           : out std_ulogic;
  RXRECLK             : out std_ulogic;
  RXRUNDISP           : out std_logic_vector(0 downto 0);
  TXBUFERR            : out std_ulogic;
  TXKERR              : out std_logic_vector(0 downto 0);
  TXN                 : out std_ulogic;
  TXP                 : out std_ulogic;
  TXRUNDISP           : out std_logic_vector(0 downto 0);
  BREFCLK              : in  std_ulogic := 'X';
  BREFCLK2             : in  std_ulogic := 'X';
  CHBONDI              : in  std_logic_vector(3 downto 0);
  CONFIGENABLE        : in  std_ulogic;
  CONFIGIN            : in  std_ulogic;
  ENCHANSYNC          : in  std_ulogic;
  ENMCOMMAALIGN       : in  std_ulogic;
  ENPCOMMAALIGN       : in  std_ulogic;
  LOOPBACK            : in  std_logic_vector(1 downto 0);
  POWERDOWN           : in  std_ulogic;
  REFCLK              : in  std_ulogic;
  REFCLK2             : in  std_ulogic;
  REFCLKSEL           : in  std_ulogic;
  RXN                 : in  std_ulogic;
  RXP                 : in  std_ulogic;
  RXPOLARITY         : in  std_ulogic;
  RXRESET             : in  std_ulogic;
  RXUSRCLK            : in  std_ulogic;

```

```

RXUSRCLK2                : in std_ulogic;
TXBYPASS8B10B           : in std_logic_vector(0 downto 0);
TXCHARDISPMODE          : in std_logic_vector(0 downto 0);
TXCHARDISPVAL           : in std_logic_vector(0 downto 0);
TXCHARISK                : in std_logic_vector(0 downto 0);
TXDATA                  : in std_logic_vector(7 downto 0);
TXFORCECERCERR         : in std_ulogic;
TXINHIBIT               : in std_ulogic;
TXPOLARITY              : in std_ulogic;
TXRESET                 : in std_ulogic;
TXUSRCLK                : in std_ulogic;
TXUSRCLK2               : in std_ulogic);

```

```
end component;
```

```

-- Component Attribute specification for GT_XAUI_1
-- should be placed after architecture declaration but
-- before the begin keyword

```

```
-- Enter constraints here
```

```

-- Component Instantiation for GT_XAUI_1 should be placed
-- in architecture after the begin keyword

```

```
GT_XAUI_1_INSTANCE_NAME : GT_XAUI_1
```

```
-- synopsys translate_off
```

```
generic map (
  ALIGN_COMMA_MSB           => boolean_value,
  CHAN_BOND_LIMIT           => integer_value,
  CHAN_BOND_MODE            => string_value,
  CHAN_BOND_OFFSET         => integer_value,
  CHAN_BOND_ONE_SHOT       => boolean_value,
  CHAN_BOND_SEQ_1_1        => bit_value,
  CHAN_BOND_SEQ_1_2        => bit_value,
  CHAN_BOND_SEQ_1_3        => bit_value,
  CHAN_BOND_SEQ_1_4        => bit_value,
  CHAN_BOND_SEQ_2_1        => bit_value,
  CHAN_BOND_SEQ_2_2        => bit_value,
  CHAN_BOND_SEQ_2_3        => bit_value,
  CHAN_BOND_SEQ_2_4        => bit_value,
  CHAN_BOND_SEQ_2_USE      => boolean_value,
  CHAN_BOND_SEQ_LEN        => integer_value,
  CHAN_BOND_WAIT           => integer_value,
  CLK_COR_INSERT_IDLE_FLAG => boolean_value,
  CLK_COR_KEEP_IDLE        => boolean_value,
  CLK_COR_REPEAT_WAIT      => integer_value,
  CLK_COR_SEQ_1_1          => bit_value,
  CLK_COR_SEQ_1_2          => bit_value,
  CLK_COR_SEQ_1_3          => bit_value,
  CLK_COR_SEQ_1_4          => bit_value,
  CLK_COR_SEQ_2_1          => bit_value,
  CLK_COR_SEQ_2_2          => bit_value,
  CLK_COR_SEQ_2_3          => bit_value,
  CLK_COR_SEQ_2_4          => bit_value,
  CLK_COR_SEQ_2_USE        => boolean_value,
  CLK_COR_SEQ_LEN          => integer_value,
  CLK_CORRECT_USE          => boolean_value,
  COMMA_10B_MASK           => bit_value,

```

```

CRC_END_OF_PKT           => string_value,
CRC_FORMAT               => string_value,
CRC_START_OF_PKT        => string_value,
DEC_MCOMMA_DETECT        => boolean_value,
DEC_PCOMMA_DETECT        => boolean_value,
DEC_VALID_COMMA_ONLY    => boolean_value,
MCOMMA_10B_VALUE        => bit_value,
MCOMMA_DETECT            => boolean_value,
PCOMMA_10B_VALUE        => bit_value,
PCOMMA_DETECT            => boolean_value,
REF_CLK_V_SEL           => integer_value,
RX_BUFFER_USE           => boolean_value,
RX_CRC_USE               => boolean_value,
RX_DATA_WIDTH           => integer_value,
RX_DECODE_USE           => boolean_value,
RX_LOS_INVALID_INCR     => integer_value,
RX_LOS_THRESHOLD        => integer_value,
RX_LOSS_OF_SYNC_FSM     => boolean_value,
SERDES_10B              => boolean_value,
TERMINATION_IMP         => integer_value,
TX_BUFFER_USE           => boolean_value,
TX_CRC_FORCE_VALUE      => bit_value,
TX_CRC_USE               => boolean_value,
TX_DATA_WIDTH           => integer_value,
TX_DIFF_CTRL            => integer_value,
TX_PREEMPHASIS          => integer_value)

-- synopsys translate_on
port map (
    CHBONDDONE           => user_CHBONDDONE,
    CHBONDO              => user_CHBONDO,
    CONFIGOUT            => user_CONFIGOUT,
    RXBUFSTATUS          => user_RXBUFSTATUS,
    RXCHARISCOMMA        => user_RXCHARISCOMMA,
    RXCHARISK            => user_RXCHARISK,
    RXCHECKINGCRC        => user_RXCHECKINGCRC,
    RXCLKCORCNT          => user_RXCLKCORCNT,
    RXCOMMADET           => user_RXCOMMADET,
    RXCRCERR             => user_RXCRCERR,
    RXDATA               => user_RXDATA,
    RXDISPERR            => user_RXDISPERR,
    RXLOSSOFSYNC         => user_RXLOSSOFSYNC,
    RXNOTINTABLE         => user_RXNOTINTABLE,
    RXREALIGN            => user_RXREALIGN,
    RXRECCLK             => user_RXRECCLK,
    RXRUNDISP           => user_RXRUNDISP,
    TXBUFERR             => user_TXBUFERR,
    TXKERR               => user_TXKERR,
    TXN                  => user_TXN,
    TXP                  => user_TXP,
    TXRUNDISP           => user_TXRUNDISP,
    BREFCLK              => user_BREFCLK,
    BREFCLK2             => user_BREFCLK2,
    CHBONDI              => user_CHBONDI,
    CONFIGENABLE         => user_CONFIGENABLE,
    CONFIGIN             => user_CONFIGIN,
    ENCHANSYNC           => user_ENCHANSYNC,
    ENMCOMMAALIGN        => user_ENMCOMMAALIGN,

```

```

ENPCOMMAALIGN          => user_ENPCOMMAALIGN,
LOOPBACK               => user_LOOPBACK,
POWERDOWN              => user_POWERDOWN,
REFCLK                 => user_REFCLK,
REFCLK2                => user_REFCLK2,
REFCLKSEL              => user_REFCLKSEL,
RXN                    => user_RXN,
RXP                    => user_RXP,
RXPOLARITY             => user_RXPOLARITY,
RXRESET                => user_RXRESET,
RXUSRCLK               => user_RXUSRCLK,
RXUSRCLK2              => user_RXUSRCLK2,
TXBYPASS8B10B         => user_TXBYPASS8B10B,
TXCHARDISPMODE         => user_TXCHARDISPMODE,
TXCHARDISPVAL          => user_TXCHARDISPVAL,
TXCHARISK              => user_TXCHARISK,
TXDATA                 => user_TXDATA,
TXFORCECERCERR         => user_TXFORCECERCERR,
TXINHIBIT              => user_TXINHIBIT,
TXPOLARITY             => user_TXPOLARITY,
TXRESET                => user_TXRESET,
TXUSRCLK               => user_TXUSRCLK,
TXUSRCLK2              => user_TXUSRCLK2);

```

## GT\_XAUI\_2 VHDL Code

```

-- Component Attribute specification for GT_XAUI_2
-- should be placed after architecture declaration but
-- before the begin keyword

component GT_XAUI_2
-- synopsys translate_off
generic (
    ALIGN_COMMA_MSB          : boolean := FALSE;
    CHAN_BOND_LIMIT          : integer := 16;
    CHAN_BOND_MODE           : string := "OFF";
    CHAN_BOND_OFFSET         : integer := 8;
    CHAN_BOND_ONE_SHOT       : boolean := FALSE;
    CHAN_BOND_SEQ_1_1        : bit_vector := "00101111100";
    CHAN_BOND_SEQ_1_2        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_3        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_4        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_1        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_2        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_3        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_4        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_USE      : boolean := FALSE;
    CHAN_BOND_SEQ_LEN        : integer := 1;
    CHAN_BOND_WAIT           : integer := 8;
    CLK_COR_INSERT_IDLE_FLAG : boolean := FALSE;
    CLK_COR_KEEP_IDLE        : boolean := FALSE;
    CLK_COR_REPEAT_WAIT      : integer := 1;
    CLK_COR_SEQ_1_1          : bit_vector := "00100011100";
    CLK_COR_SEQ_1_2          : bit_vector := "00000000000";
    CLK_COR_SEQ_1_3          : bit_vector := "00000000000";
    CLK_COR_SEQ_1_4          : bit_vector := "00000000000";
    CLK_COR_SEQ_2_1          : bit_vector := "00000000000";
    CLK_COR_SEQ_2_2          : bit_vector := "00000000000";

```

```

CLK_COR_SEQ_2_3           : bit_vector := "000000000000";
CLK_COR_SEQ_2_4           : bit_vector := "000000000000";
CLK_COR_SEQ_2_USE         : boolean := FALSE;
CLK_COR_SEQ_LEN           : integer := 1;
CLK_CORRECT_USE           : boolean := TRUE;
COMMA_10B_MASK            : bit_vector := "1111111000";
CRC_END_OF_PKT            : string := "K29_7";
CRC_FORMAT                 : string := "USER_MODE";
CRC_START_OF_PKT          : string := "K27_7";
DEC_MCOMMA_DETECT         : boolean := TRUE;
DEC_PCOMMA_DETECT         : boolean := TRUE;
DEC_VALID_COMMA_ONLY     : boolean := TRUE;
MCOMMA_10B_VALUE          : bit_vector := "1100000000";
MCOMMA_DETECT             : boolean := TRUE;
PCOMMA_10B_VALUE          : bit_vector := "0011111000";
PCOMMA_DETECT             : boolean := TRUE;
REF_CLK_V_SEL             : integer := 0;
RX_BUFFER_USE             : boolean := TRUE;
RX_CRC_USE                 : boolean := FALSE;
RX_DATA_WIDTH             : integer := 2;
RX_DECODE_USE             : boolean := TRUE;
RX_LOS_INVALID_INCR      : integer := 1;
RX_LOS_THRESHOLD          : integer := 4;
RX_LOSS_OF_SYNC_FSM      : boolean := TRUE;
SERDES_10B                : boolean := FALSE;
TERMINATION_IMP           : integer := 50;
TX_BUFFER_USE             : boolean := TRUE;
TX_CRC_FORCE_VALUE        : bit_vector := "11010110";
TX_CRC_USE                 : boolean := FALSE;
TX_DATA_WIDTH             : integer := 2;
TX_DIFF_CTRL              : integer := 500;
TX_PREEMPHASIS           : integer := 0);

-- synopsys translate_on
port (
    CHBONDDONE             : out std_ulogic;
    CHBONDO                 : out std_logic_vector(3 downto 0);
    CONFIGOUT              : out std_ulogic;
    RXBUFSTATUS            : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA          : out std_logic_vector(1 downto 0);
    RXCHARISK              : out std_logic_vector(1 downto 0);
    RXCHECKINGCRC          : out std_ulogic;
    RXCLKCORCNT            : out std_logic_vector(2 downto 0);
    RXCOMMADET             : out std_ulogic;
    RXCRCERR               : out std_ulogic;
    RXDATA                  : out std_logic_vector(15 downto 0);
    RXDISPERR              : out std_logic_vector(1 downto 0);
    RXLOSSOFSYNC           : out std_logic_vector(1 downto 0);
    RXNOTINTABLE           : out std_logic_vector(1 downto 0);
    RXREALIGN              : out std_ulogic;
    RXRECCLK               : out std_ulogic;
    RXRUNDISP              : out std_logic_vector(1 downto 0);
    TXBUFERR               : out std_ulogic;
    TXKERR                 : out std_logic_vector(1 downto 0);
    TXN                    : out std_ulogic;
    TXP                    : out std_ulogic;
    TXRUNDISP              : out std_logic_vector(1 downto 0);
    BREFCLK                : in std_ulogic := 'X';

```



```

BREFCLK2           : in std_ulogic := 'X';
CHBONDI           : in std_logic_vector(3 downto 0);
CONFIGENABLE      : in std_ulogic;
CONFIGIN          : in std_ulogic;
ENCHANSYNC        : in std_ulogic;
ENMCOMMAALIGN     : in std_ulogic;
ENPCOMMAALIGN     : in std_ulogic;
LOOPBACK          : in std_logic_vector(1 downto 0);
POWERDOWN         : in std_ulogic;
REFCLK            : in std_ulogic;
REFCLK2           : in std_ulogic;
REFCLKSEL         : in std_ulogic;
RXN               : in std_ulogic;
RXP               : in std_ulogic;
RXPOLARITY        : in std_ulogic;
RXRESET           : in std_ulogic;
RXUSRCLK          : in std_ulogic;
RXUSRCLK2         : in std_ulogic;
TXBYPASS8B10B    : in std_logic_vector(1 downto 0);
TXCHARDISPMODE    : in std_logic_vector(1 downto 0);
TXCHARDISPVAL     : in std_logic_vector(1 downto 0);
TXCHARISK         : in std_logic_vector(1 downto 0);
TXDATA            : in std_logic_vector(15 downto 0);
TXFORCECERR       : in std_ulogic;
TXINHIBIT         : in std_ulogic;
TXPOLARITY        : in std_ulogic;
TXRESET           : in std_ulogic;
TXUSRCLK          : in std_ulogic;
TXUSRCLK2         : in std_ulogic);

```

```
end component;
```

```

-- Component Attribute specification for GT_XAUI_2
-- should be placed after architecture declaration but
-- before the begin keyword

```

```
-- Enter constraints here
```

```

-- Component Instantiation for GT_XAUI_2 should be placed
-- in architecture after the begin keyword

```

```
GT_XAUI_2_INSTANCE_NAME : GT_XAUI_2
```

```
-- synopsys translate_off
```

```
generic map (
```

```

    ALIGN_COMMA_MSB           => boolean_value,
    CHAN_BOND_LIMIT           => integer_value,
    CHAN_BOND_MODE             => string_value,
    CHAN_BOND_OFFSET           => integer_value,
    CHAN_BOND_ONE_SHOT        => boolean_value,
    CHAN_BOND_SEQ_1_1          => bit_value,
    CHAN_BOND_SEQ_1_2          => bit_value,
    CHAN_BOND_SEQ_1_3          => bit_value,
    CHAN_BOND_SEQ_1_4          => bit_value,
    CHAN_BOND_SEQ_2_1          => bit_value,
    CHAN_BOND_SEQ_2_2          => bit_value,
    CHAN_BOND_SEQ_2_3          => bit_value,
    CHAN_BOND_SEQ_2_4          => bit_value,
    CHAN_BOND_SEQ_2_USE        => boolean_value,

```

```

CHAN_BOND_SEQ_LEN           => integer_value,
CHAN_BOND_WAIT              => integer_value,
CLK_COR_INSERT_IDLE_FLAG   => boolean_value,
CLK_COR_KEEP_IDLE          => boolean_value,
CLK_COR_REPEAT_WAIT        => integer_value,
CLK_COR_SEQ_1_1            => bit_value,
CLK_COR_SEQ_1_2            => bit_value,
CLK_COR_SEQ_1_3            => bit_value,
CLK_COR_SEQ_1_4            => bit_value,
CLK_COR_SEQ_2_1            => bit_value,
CLK_COR_SEQ_2_2            => bit_value,
CLK_COR_SEQ_2_3            => bit_value,
CLK_COR_SEQ_2_4            => bit_value,
CLK_COR_SEQ_2_USE          => boolean_value,
CLK_COR_SEQ_LEN            => integer_value,
CLK_CORRECT_USE            => boolean_value,
COMMA_10B_MASK             => bit_value,
CRC_END_OF_PKT             => string_value,
CRC_FORMAT                 => string_value,
CRC_START_OF_PKT          => string_value,
DEC_MCOMMA_DETECT         => boolean_value,
DEC_PCOMMA_DETECT         => boolean_value,
DEC_VALID_COMMA_ONLY      => boolean_value,
MCOMMA_10B_VALUE          => bit_value,
MCOMMA_DETECT             => boolean_value,
PCOMMA_10B_VALUE          => bit_value,
PCOMMA_DETECT             => boolean_value,
REF_CLK_V_SEL             => integer_value,
RX_BUFFER_USE             => boolean_value,
RX_CRC_USE                => boolean_value,
RX_DATA_WIDTH             => integer_value,
RX_DECODE_USE            => boolean_value,
RX_LOS_INVALID_INCR       => integer_value,
RX_LOS_THRESHOLD          => integer_value,
RX_LOSS_OF_SYNC_FSM      => boolean_value,
SERDES_10B                => boolean_value,
TERMINATION_IMP           => integer_value,
TX_BUFFER_USE             => boolean_value,
TX_CRC_FORCE_VALUE        => bit_value,
TX_CRC_USE                => boolean_value,
TX_DATA_WIDTH             => integer_value,
TX_DIFF_CTRL             => integer_value,
TX_PREEMPHASIS           => integer_value)

-- synopsys translate_on
port map (
    CHBONDDONE              => user_CHBONDDONE,
    CHBONDO                 => user_CHBONDO,
    CONFIGOUT               => user_CONFIGOUT,
    RXBUFSTATUS             => user_RXBUFSTATUS,
    RXCHARISCOMMA          => user_RXCHARISCOMMA,
    RXCHARISK               => user_RXCHARISK,
    RXCHECKINGCRC          => user_RXCHECKINGCRC,
    RXCLKCORCNT            => user_RXCLKCORCNT,
    RXCOMMADET             => user_RXCOMMADET,
    RXCRCERR               => user_RXCRCERR,
    RXDATA                 => user_RXDATA,
    RXDISPERR              => user_RXDISPERR,

```

```

RXLOSSOFSYNC          => user_RXLOSSOFSYNC,
RXNOTINTABLE          => user_RXNOTINTABLE,
RXREALIGN              => user_RXREALIGN,
RXRECCLK              => user_RXRECCLK,
RXRUNDISP             => user_RXRUNDISP,
TXBUFERR              => user_TXBUFERR,
TXKERR                => user_TXKERR,
TXN                   => user_TXN,
TXP                   => user_TXP,
TXRUNDISP             => user_TXRUNDISP,
BREFCLK               => user_BREFCLK,
BREFCLK2              => user_BREFCLK2,
CHBONDI               => user_CHBONDI,
CONFIGENABLE          => user_CONFIGENABLE,
CONFIGIN              => user_CONFIGIN,
ENCHANSYNC            => user_ENCHANSYNC,
ENMCOMMAALIGN         => user_ENMCOMMAALIGN,
ENPCOMMAALIGN         => user_ENPCOMMAALIGN,
LOOPBACK              => user_LOOPBACK,
POWERDOWN             => user_POWERDOWN,
REFCLK                => user_REFCLK,
REFCLK2               => user_REFCLK2,
REFCLKSEL             => user_REFCLKSEL,
RXN                   => user_RXN,
RXP                   => user_RXP,
RXPOLARITY            => user_RXPOLARITY,
RXRESET              => user_RXRESET,
RXUSRCLK              => user_RXUSRCLK,
RXUSRCLK2             => user_RXUSRCLK2,
TXBYPASS8B10B        => user_TXBYPASS8B10B,
TXCHARDISPMODE        => user_TXCHARDISPMODE,
TXCHARDISPVAL         => user_TXCHARDISPVAL,
TXCHARISK             => user_TXCHARISK,
TXDATA                => user_TXDATA,
TXFORCECERCERR       => user_TXFORCECERCERR,
TXINHIBIT             => user_TXINHIBIT,
TXPOLARITY            => user_TXPOLARITY,
TXRESET              => user_TXRESET,
TXUSRCLK              => user_TXUSRCLK,
TXUSRCLK2             => user_TXUSRCLK2);

```

## GT\_XAUI\_4 VHDL Code

```

-- Component Attribute specification for GT_XAUI_4
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

component GT_XAUI_4
-- synopsis translate_off
generic (
    ALIGN_COMMA_MSB          : boolean := FALSE;
    CHAN_BOND_LIMIT          : integer := 16;
    CHAN_BOND_MODE           : string := "OFF";
    CHAN_BOND_OFFSET         : integer := 8;
    CHAN_BOND_ONE_SHOT       : boolean := FALSE;
    CHAN_BOND_SEQ_1_1        : bit_vector := "00101111100";
    CHAN_BOND_SEQ_1_2        : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_3        : bit_vector := "00000000000");

```

```

CHAN_BOND_SEQ_1_4          : bit_vector := "00000000000";
CHAN_BOND_SEQ_2_1          : bit_vector := "00000000000";
CHAN_BOND_SEQ_2_2          : bit_vector := "00000000000";
CHAN_BOND_SEQ_2_3          : bit_vector := "00000000000";
CHAN_BOND_SEQ_2_4          : bit_vector := "00000000000";
CHAN_BOND_SEQ_2_USE        : boolean := FALSE;
CHAN_BOND_SEQ_LEN          : integer := 1;
CHAN_BOND_WAIT              : integer := 8;
CLK_COR_INSERT_IDLE_FLAG   : boolean := FALSE;
CLK_COR_KEEP_IDLE          : boolean := FALSE;
CLK_COR_REPEAT_WAIT        : integer := 1;
CLK_COR_SEQ_1_1            : bit_vector := "00100011100";
CLK_COR_SEQ_1_2            : bit_vector := "00000000000";
CLK_COR_SEQ_1_3            : bit_vector := "00000000000";
CLK_COR_SEQ_1_4            : bit_vector := "00000000000";
CLK_COR_SEQ_2_1            : bit_vector := "00000000000";
CLK_COR_SEQ_2_2            : bit_vector := "00000000000";
CLK_COR_SEQ_2_3            : bit_vector := "00000000000";
CLK_COR_SEQ_2_4            : bit_vector := "00000000000";
CLK_COR_SEQ_2_USE          : boolean := FALSE;
CLK_COR_SEQ_LEN            : integer := 1;
CLK_CORRECT_USE            : boolean := TRUE;
COMMA_10B_MASK             : bit_vector := "1111111000";
CRC_END_OF_PKT              : string := "K29_7";
CRC_FORMAT                  : string := "USER_MODE";
CRC_START_OF_PKT           : string := "K27_7";
DEC_MCOMMA_DETECT          : boolean := TRUE;
DEC_PCOMMA_DETECT          : boolean := TRUE;
DEC_VALID_COMMA_ONLY       : boolean := TRUE;
MCOMMA_10B_VALUE           : bit_vector := "1100000000";
MCOMMA_DETECT              : boolean := TRUE;
PCOMMA_10B_VALUE           : bit_vector := "0011111000";
PCOMMA_DETECT              : boolean := TRUE;
REF_CLK_V_SEL              : integer := 0;
RX_BUFFER_USE              : boolean := TRUE;
RX_CRC_USE                  : boolean := FALSE;
RX_DATA_WIDTH              : integer := 4;
RX_DECODE_USE              : boolean := TRUE;
RX_LOS_INVALID_INCR        : integer := 1;
RX_LOS_THRESHOLD           : integer := 4;
RX_LOSS_OF_SYNC_FSM        : boolean := TRUE;
SERDES_10B                 : boolean := FALSE;
TERMINATION_IMP            : integer := 50;
TX_BUFFER_USE              : boolean := TRUE;
TX_CRC_FORCE_VALUE         : bit_vector := "11010110";
TX_CRC_USE                  : boolean := FALSE;
TX_DATA_WIDTH              : integer := 4;
TX_DIFF_CTRL               : integer := 500;
TX_PREEMPHASIS             : integer := 0);

-- synopsys translate_on
port (
    CHBONDDONE                : out std_ulogic;
    CHBONDO                    : out std_logic_vector(3 downto 0);
    CONFIGOUT                  : out std_ulogic;
    RXBUFSTATUS                : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA              : out std_logic_vector(3 downto 0);
    RXCHARISK                  : out std_logic_vector(3 downto 0);

```

```

RXCHECKINGCRC           : out std_ulogic;
RXCLKCORCNT             : out std_logic_vector(2 downto 0);
RXCOMMADET             : out std_ulogic;
RXCRCERR               : out std_ulogic;
RXDATA                 : out std_logic_vector(31 downto 0);
RXDISPERR              : out std_logic_vector(3 downto 0);
RXLOSSOFSYNC           : out std_logic_vector(1 downto 0);
RXNOTINTABLE           : out std_logic_vector(3 downto 0);
RXREALIGN              : out std_ulogic;
RXRECCLK              : out std_ulogic;
RXRUNDISP              : out std_logic_vector(3 downto 0);
TXBUFERR              : out std_ulogic;
TXKERR                : out std_logic_vector(3 downto 0);
TXN                   : out std_ulogic;
TXP                   : out std_ulogic;
TXRUNDISP              : out std_logic_vector(3 downto 0);
BREFCLK               : in  std_ulogic := 'X';
BREFCLK2              : in  std_ulogic := 'X';
CHBONDI               : in  std_logic_vector(3 downto 0);
CONFIGENABLE          : in  std_ulogic;
CONFIGIN              : in  std_ulogic;
ENCHANSYNC            : in  std_ulogic;
ENMCOMMAALIGN         : in  std_ulogic;
ENPCOMMAALIGN         : in  std_ulogic;
LOOPBACK              : in  std_logic_vector(1 downto 0);
POWERDOWN             : in  std_ulogic;
REFCLK                : in  std_ulogic;
REFCLK2               : in  std_ulogic;
REFCLKSEL             : in  std_ulogic;
RXN                   : in  std_ulogic;
RXP                   : in  std_ulogic;
RXPOLARITY            : in  std_ulogic;
RXRESET               : in  std_ulogic;
RXUSRCLK              : in  std_ulogic;
RXUSRCLK2             : in  std_ulogic;
TXBYPASS8B10B        : in  std_logic_vector(3 downto 0);
TXCHARDISPMODE        : in  std_logic_vector(3 downto 0);
TXCHARDISPVAL         : in  std_logic_vector(3 downto 0);
TXCHARISK             : in  std_logic_vector(3 downto 0);
TXDATA                : in  std_logic_vector(31 downto 0);
TXFORCECRCERR        : in  std_ulogic;
TXINHIBIT             : in  std_ulogic;
TXPOLARITY            : in  std_ulogic;
TXRESET               : in  std_ulogic;
TXUSRCLK              : in  std_ulogic;
TXUSRCLK2             : in  std_ulogic);

end component;

-- Component Attribute specification for GT_XAUI_4
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter constraints here

-- Component Instantiation for GT_XAUI_4 should be placed
-- in architecture after the begin keyword

```

```

GT_XAUI_4_INSTANCE_NAME : GT_XAUI_4
-- synopsys translate_off
generic map (
    ALIGN_COMMA_MSB           => boolean_value,
    CHAN_BOND_LIMIT           => integer_value,
    CHAN_BOND_MODE             => string_value,
    CHAN_BOND_OFFSET          => integer_value,
    CHAN_BOND_ONE_SHOT        => boolean_value,
    CHAN_BOND_SEQ_1_1         => bit_value,
    CHAN_BOND_SEQ_1_2         => bit_value,
    CHAN_BOND_SEQ_1_3         => bit_value,
    CHAN_BOND_SEQ_1_4         => bit_value,
    CHAN_BOND_SEQ_2_1         => bit_value,
    CHAN_BOND_SEQ_2_2         => bit_value,
    CHAN_BOND_SEQ_2_3         => bit_value,
    CHAN_BOND_SEQ_2_4         => bit_value,
    CHAN_BOND_SEQ_2_USE       => boolean_value,
    CHAN_BOND_SEQ_LEN         => integer_value,
    CHAN_BOND_WAIT            => integer_value,
    CLK_COR_INSERT_IDLE_FLAG  => boolean_value,
    CLK_COR_KEEP_IDLE         => boolean_value,
    CLK_COR_REPEAT_WAIT       => integer_value,
    CLK_COR_SEQ_1_1           => bit_value,
    CLK_COR_SEQ_1_2           => bit_value,
    CLK_COR_SEQ_1_3           => bit_value,
    CLK_COR_SEQ_1_4           => bit_value,
    CLK_COR_SEQ_2_1           => bit_value,
    CLK_COR_SEQ_2_2           => bit_value,
    CLK_COR_SEQ_2_3           => bit_value,
    CLK_COR_SEQ_2_4           => bit_value,
    CLK_COR_SEQ_2_USE         => boolean_value,
    CLK_COR_SEQ_LEN           => integer_value,
    CLK_CORRECT_USE           => boolean_value,
    COMMA_10B_MASK            => bit_value,
    CRC_END_OF_PKT            => string_value,
    CRC_FORMAT                 => string_value,
    CRC_START_OF_PKT          => string_value,
    DEC_MCOMMA_DETECT         => boolean_value,
    DEC_PCOMMA_DETECT         => boolean_value,
    DEC_VALID_COMMA_ONLY     => boolean_value,
    MCOMMA_10B_VALUE          => bit_value,
    MCOMMA_DETECT             => boolean_value,
    PCOMMA_10B_VALUE          => bit_value,
    PCOMMA_DETECT             => boolean_value,
    REF_CLK_V_SEL             => integer_value,
    RX_BUFFER_USE             => boolean_value,
    RX_CRC_USE                 => boolean_value,
    RX_DATA_WIDTH             => integer_value,
    RX_DECODE_USE             => boolean_value,
    RX_LOS_INVALID_INCR       => integer_value,
    RX_LOS_THRESHOLD          => integer_value,
    RX_LOSS_OF_SYNC_FSM       => boolean_value,
    SERDES_10B                => boolean_value,
    TERMINATION_IMP           => integer_value,
    TX_BUFFER_USE             => boolean_value,
    TX_CRC_FORCE_VALUE        => bit_value,
    TX_CRC_USE                 => boolean_value,
    TX_DATA_WIDTH             => integer_value,

```

```

TX_DIFF_CTRL          => integer_value,
TX_PREEMPHASIS       => integer_value)

-- synopsys translate_on
port map (
  CHBONDDONE          => user_CHBONDDONE,
  CHBONDO             => user_CHBONDO,
  CONFIGOUT          => user_CONFIGOUT,
  RXBUFSTATUS        => user_RXBUFSTATUS,
  RXCHARISCOMMA      => user_RXCHARISCOMMA,
  RXCHARISK          => user_RXCHARISK,
  RXCHECKINGCRC      => user_RXCHECKINGCRC,
  RXCLKCORCNT        => user_RXCLKCORCNT,
  RXCOMMADET         => user_RXCOMMADET,
  RXCRCERR           => user_RXCRCERR,
  RXDATA             => user_RXDATA,
  RXDISPERR          => user_RXDISPERR,
  RXLOSSOFSYNC       => user_RXLOSSOFSYNC,
  RXNOTINTABLE       => user_RXNOTINTABLE,
  RXREALIGN          => user_RXREALIGN,
  RXRECCLK           => user_RXRECCLK,
  RXRUNDISP          => user_RXRUNDISP,
  TXBUFERR           => user_TXBUFERR,
  TXKERR             => user_TXKERR,
  TXN                => user_TXN,
  TXP                => user_TXP,
  TXRUNDISP          => user_TXRUNDISP,
  BREFCLK            => user_BREFCLK,
  BREFCLK2           => user_BREFCLK2,
  CHBONDI            => user_CHBONDI,
  CONFIGENABLE       => user_CONFIGENABLE,
  CONFIGIN           => user_CONFIGIN,
  ENCHANSYNC         => user_ENCHANSYNC,
  ENMCOMMAALIGN      => user_ENMCOMMAALIGN,
  ENPCOMMAALIGN      => user_ENPCOMMAALIGN,
  LOOPBACK           => user_LOOPBACK,
  POWERDOWN          => user_POWERDOWN,
  REFCLK             => user_REFCLK,
  REFCLK2            => user_REFCLK2,
  REFCLKSEL          => user_REFCLKSEL,
  RXN                => user_RXN,
  RXP                => user_RXP,
  RXPOLARITY         => user_RXPOLARITY,
  RXRESET            => user_RXRESET,
  RXUSRCLK           => user_RXUSRCLK,
  RXUSRCLK2          => user_RXUSRCLK2,
  TXBYPASS8B10B     => user_TXBYPASS8B10B,
  TXCHARDISPMODE     => user_TXCHARDISPMODE,
  TXCHARDISPVAL      => user_TXCHARDISPVAL,
  TXCHARISK          => user_TXCHARISK,
  TXDATA             => user_TXDATA,
  TXFORCECRCERR      => user_TXFORCECRCERR,
  TXINHIBIT          => user_TXINHIBIT,
  TXPOLARITY         => user_TXPOLARITY,
  TXRESET            => user_TXRESET,
  TXUSRCLK           => user_TXUSRCLK,
  TXUSRCLK2          => user_TXUSRCLK2);

```

## Verilog Instantiation Templates

### GT\_XAUI\_1 Verilog Code

```

GT_XAUI_1 GT_XAUI_1_name(
    .CHBONDDONE (user_CHBONDDONE),
    .CHBONDO (user_CHBONDO),
    .CONFIGOUT (user_CONFIGOUT),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCHECKINGCRC (user_RXCHECKINGCRC),
    .RXCLKCORCNT (user_RXCLKCORCNT),
    .RXCOMMADET (user_RXCOMMADET),
    .RXCRCERR (user_RXCRCERR),
    .RXDATA (user_RXDATA),
    .RXDISPERR (user_RXDISPERR),
    .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
    .RXNOTINTABLE (user_RXNOTINTABLE),
    .RXREALIGN (user_RXREALIGN),
    .RXRECCLK (user_RXRECCLK),
    .RXRUNDISP (user_RXRUNDISP),
    .TXBUFERR (user_TXBUFERR),
    .TXKERR (user_TXKERR),
    .TXN (user_TXN),
    .TXP (user_TXP),
    .TXRUNDISP (user_TXRUNDISP),

    .BREFCLK (user_BREFCLK),
    .BREFCLK2 (user_BREFCLK2),
    .CHBONDI (user_CHBONDI),
    .CONFIGENABLE (user_CONFIGENABLE),
    .CONFIGIN (user_CONFIGIN),
    .ENCHANSYNC (user_ENCHANSYNC),
    .ENMCOMMAALIGN (user_ENMCOMMAALIGN),
    .ENPCOMMAALIGN (user_ENPCOMMAALIGN),
    .LOOPBACK (user_LOOPBACK),
    .POWERDOWN (user_POWERDOWN),
    .REFCLK (user_REFCLK),
    .REFCLK2 (user_REFCLK2),
    .REFCLKSEL (user_REFCLKSEL),
    .RXN (user_RXN),
    .RXP (user_RXP),
    .RXPOLARITY (user_RXPOLARITY),
    .RXRESET (user_RXRESET),
    .RXUSRCLK (user_RXUSRCLK),
    .RXUSRCLK2 (user_RXUSRCLK2),
    .TXBYPASS8B10B (user_TXBYPASS8B10B),
    .TXCHARDISPMODE (user_TXCHARDISPMODE),
    .TXCHARDISPVAL (user_TXCHARDISPVAL),
    .TXCHARISK (user_TXCHARISK),
    .TXDATA (user_TXDATA),
    .TXFORCECRCERR (user_TXFORCECRCERR),
    .TXINHIBIT (user_TXINHIBIT),
    .TXPOLARITY (user_TXPOLARITY),
    .TXRESET (user_TXRESET),
    .TXUSRCLK (user_TXUSRCLK),

```



```

.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_MSB = "FALSE";
defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_OFFSET = 8;
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b00101111100;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 1;
defparam user_instance_name.CHAN_BOND_WAIT = 8;
defparam user_instance_name.CLK_COR_INSERT_IDLE_FLAG = "FALSE";
defparam user_instance_name.CLK_COR_KEEP_IDLE = "FALSE";
defparam user_instance_name.CLK_COR_REPEAT_WAIT = 1;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00100011100;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 1;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b1111111000;
defparam user_instance_name.CRC_END_OF_PKT = "K29_7";
defparam user_instance_name.CRC_FORMAT = "USER_MODE";
defparam user_instance_name.CRC_START_OF_PKT = "K27_7";
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1100000000;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0011111000;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.REF_CLK_V_SEL = 0;
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_CRC_USE = "FALSE";
defparam user_instance_name.RX_DATA_WIDTH = 1;
defparam user_instance_name.RX_DECODE_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SERDES_10B = "FALSE";
defparam user_instance_name.TERMINATION_IMP = 50;
defparam user_instance_name.TX_BUFFER_USE = "TRUE";
defparam user_instance_name.TX_CRC_FORCE_VALUE = 8'b11010110;
defparam user_instance_name.TX_CRC_USE = "FALSE";
defparam user_instance_name.TX_DATA_WIDTH = 1;
defparam user_instance_name.TX_DIFF_CTRL = 500;

```

```
defparam user_instance_name.TX_PREEMPHASIS = 0;
```

## GT\_XAUI\_2 Verilog Code

```
GT_XAUI_2 GT_XAUI_2_name(
    .CHBONDDONE (user_CHBONDDONE),
    .CHBONDO (user_CHBONDO),
    .CONFIGOUT (user_CONFIGOUT),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCHECKINGCRC (user_RXCHECKINGCRC),
    .RXCLKCORCNT (user_RXCLKCORCNT),
    .RXCOMMADET (user_RXCOMMADET),
    .RXCRCERR (user_RXCRCERR),
    .RXDATA (user_RXDATA),
    .RXDISPERR (user_RXDISPERR),
    .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
    .RXNOTINTABLE (user_RXNOTINTABLE),
    .RXREALIGN (user_RXREALIGN),
    .RXRECCLK (user_RXRECCLK),
    .RXRUNDISP (user_RXRUNDISP),
    .TXBUFERR (user_TXBUFERR),
    .TXKERR (user_TXKERR),
    .TXN (user_TXN),
    .TXP (user_TXP),
    .TXRUNDISP (user_TXRUNDISP),

    .BREFCLK (user_BREFCLK),
    .BREFCLK2 (user_BREFCLK2),
    .CHBONDI (user_CHBONDI),
    .CONFIGENABLE (user_CONFIGENABLE),
    .CONFIGIN (user_CONFIGIN),
    .ENCHANSYNC (user_ENCHANSYNC),
    .ENMCOMMAALIGN (user_ENMCOMMAALIGN),
    .ENPCOMMAALIGN (user_ENPCOMMAALIGN),
    .LOOPBACK (user_LOOPBACK),
    .POWERDOWN (user_POWERDOWN),
    .REFCLK (user_REFCLK),
    .REFCLK2 (user_REFCLK2),
    .REFCLKSEL (user_REFCLKSEL),
    .RXN (user_RXN),
    .RXP (user_RXP),
    .RXPOLARITY (user_RXPOLARITY),
    .RXRESET (user_RXRESET),
    .RXUSRCLK (user_RXUSRCLK),
    .RXUSRCLK2 (user_RXUSRCLK2),
    .TXBYPASS8B10B (user_TXBYPASS8B10B),
    .TXCHARDISPMODE (user_TXCHARDISPMODE),
    .TXCHARDISPVAL (user_TXCHARDISPVAL),
    .TXCHARISK (user_TXCHARISK),
    .TXDATA (user_TXDATA),
    .TXFORCECRCERR (user_TXFORCECRCERR),
    .TXINHIBIT (user_TXINHIBIT),
    .TXPOLARITY (user_TXPOLARITY),
    .TXRESET (user_TXRESET),
    .TXUSRCLK (user_TXUSRCLK),
    .TXUSRCLK2 (user_TXUSRCLK2));
```

```

defparam user_instance_name.ALIGN_COMMA_MSB = "FALSE";
defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_OFFSET = 8;
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b00101111100;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 1;
defparam user_instance_name.CHAN_BOND_WAIT = 8;
defparam user_instance_name.CLK_COR_INSERT_IDLE_FLAG = "FALSE";
defparam user_instance_name.CLK_COR_KEEP_IDLE = "FALSE";
defparam user_instance_name.CLK_COR_REPEAT_WAIT = 1;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00100011100;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 1;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b1111111000;
defparam user_instance_name.CRC_END_OF_PKT = "K29_7";
defparam user_instance_name.CRC_FORMAT = "USER_MODE";
defparam user_instance_name.CRC_START_OF_PKT = "K27_7";
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b110000000;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0011111000;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.REF_CLK_V_SEL = 0;
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_CRC_USE = "FALSE";
defparam user_instance_name.RX_DATA_WIDTH = 2;
defparam user_instance_name.RX_DECODE_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SERDES_10B = "FALSE";
defparam user_instance_name.TERMINATION_IMP = 50;
defparam user_instance_name.TX_BUFFER_USE = "TRUE";
defparam user_instance_name.TX_CRC_FORCE_VALUE = 8'b11010110;
defparam user_instance_name.TX_CRC_USE = "FALSE";
defparam user_instance_name.TX_DATA_WIDTH = 2;
defparam user_instance_name.TX_DIFF_CTRL = 500;
defparam user_instance_name.TX_PREEMPHASIS = 0;

```

## GT\_XAUI\_4 Verilog Code

```

GT_XAUI_4 GT_XAUI_4_name(
    .CHBONDDONE (user_CHBONDDONE),
    .CHBONDO (user_CHBONDO),
    .CONFIGOUT (user_CONFIGOUT),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCHECKINGCRC (user_RXCHECKINGCRC),
    .RXCLKCORCNT (user_RXCLKCORCNT),
    .RXCOMMADET (user_RXCOMMADET),
    .RXCRCERR (user_RXCRCERR),
    .RXDATA (user_RXDATA),
    .RXDISPERR (user_RXDISPERR),
    .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
    .RXNOTINTABLE (user_RXNOTINTABLE),
    .RXREALIGN (user_RXREALIGN),
    .RXRECCLK (user_RXRECCLK),
    .RXRUNDISP (user_RXRUNDISP),
    .TXBUFERR (user_TXBUFERR),
    .TXKERR (user_TXKERR),
    .TXN (user_TXN),
    .TXP (user_TXP),
    .TXRUNDISP (user_TXRUNDISP),

    .BREFCLK (user_BREFCLK),
    .BREFCLK2 (user_BREFCLK2),
    .CHBONDI (user_CHBONDI),
    .CONFIGENABLE (user_CONFIGENABLE),
    .CONFIGIN (user_CONFIGIN),
    .ENCHANSYNC (user_ENCHANSYNC),
    .ENMCOMMAALIGN (user_ENMCOMMAALIGN),
    .ENPCOMMAALIGN (user_ENPCOMMAALIGN),
    .LOOPBACK (user_LOOPBACK),
    .POWERDOWN (user_POWERDOWN),
    .REFCLK (user_REFCLK),
    .REFCLK2 (user_REFCLK2),
    .REFCLKSEL (user_REFCLKSEL),
    .RXN (user_RXN),
    .RXP (user_RXP),
    .RXPOLARITY (user_RXPOLARITY),
    .RXRESET (user_RXRESET),
    .RXUSRCLK (user_RXUSRCLK),
    .RXUSRCLK2 (user_RXUSRCLK2),
    .TXBYPASS8B10B (user_TXBYPASS8B10B),
    .TXCHARDISPMODE (user_TXCHARDISPMODE),
    .TXCHARDISPVAL (user_TXCHARDISPVAL),
    .TXCHARISK (user_TXCHARISK),
    .TXDATA (user_TXDATA),
    .TXFORCECRCERR (user_TXFORCECRCERR),
    .TXINHIBIT (user_TXINHIBIT),
    .TXPOLARITY (user_TXPOLARITY),
    .TXRESET (user_TXRESET),
    .TXUSRCLK (user_TXUSRCLK),
    .TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_MSB = "FALSE";

```

```

defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_OFFSET = 8;
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b00101111100;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 1;
defparam user_instance_name.CHAN_BOND_WAIT = 8;
defparam user_instance_name.CLK_COR_INSERT_IDLE_FLAG = "FALSE";
defparam user_instance_name.CLK_COR_KEEP_IDLE = "FALSE";
defparam user_instance_name.CLK_COR_REPEAT_WAIT = 1;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00100011100;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 1;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b1111111000;
defparam user_instance_name.CRC_END_OF_PKT = "K29_7";
defparam user_instance_name.CRC_FORMAT = "USER_MODE";
defparam user_instance_name.CRC_START_OF_PKT = "K27_7";
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1100000000;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0011111000;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.REF_CLK_V_SEL = 0;
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_CRC_USE = "FALSE";
defparam user_instance_name.RX_DATA_WIDTH = 4;
defparam user_instance_name.RX_DECODE_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SERDES_10B = "FALSE";
defparam user_instance_name.TERMINATION_IMP = 50;
defparam user_instance_name.TX_BUFFER_USE = "TRUE";
defparam user_instance_name.TX_CRC_FORCE_VALUE = 8'b11010110;
defparam user_instance_name.TX_CRC_USE = "FALSE";
defparam user_instance_name.TX_DATA_WIDTH = 4;
defparam user_instance_name.TX_DIFF_CTRL = 500;
defparam user_instance_name.TX_PREEMPHASIS = 0;

```

## Commonly Used Constraints

None

## GT10\_AURORA\_n

### 10-Gigabit Transceiver for High-Speed I/O


#### Architectures Supported

GT10_AURORA_n	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive*
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
*Supported for Virtex-II Pro X but not for Virtex-II or Virtex-II Pro.	

This Xilinx protocol 10-gigabit transceiver supports 1, 2, and 4-byte data paths. The letter *n* represents number of bytes of the data path. Valid values are 1, 2, or 4.


You can also set attributes for the primitives. See the *RocketIO Transceiver User Guide* for a description of these attributes and their default attribute values.

The following figures list the input and output ports for all values of *n*. For a description of each of the ports, see the *RocketIO Transceiver User Guide*.

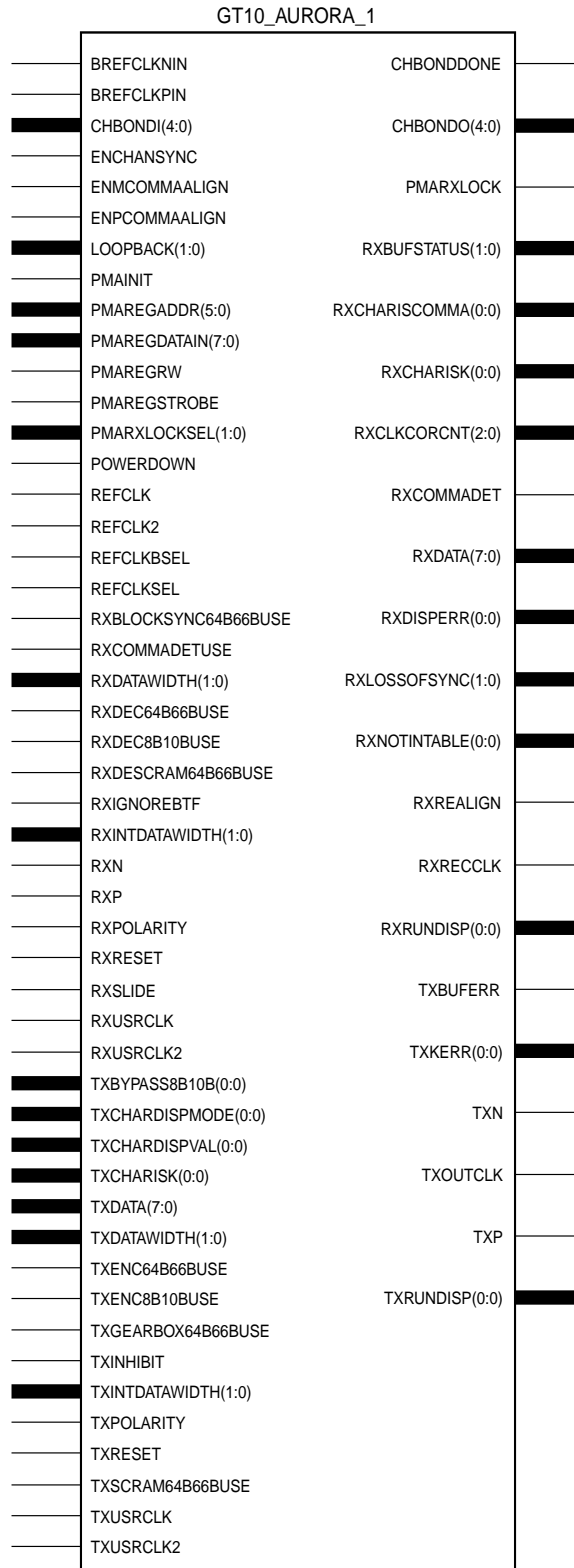


X10045



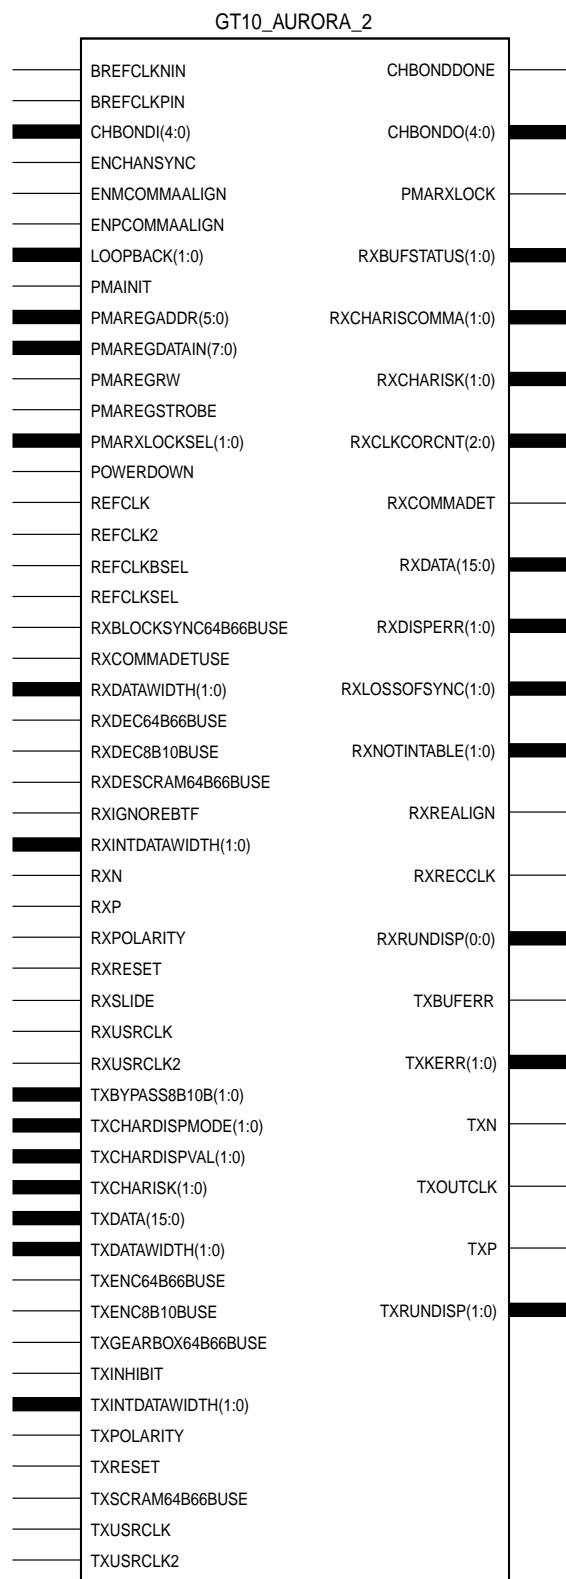

X10046

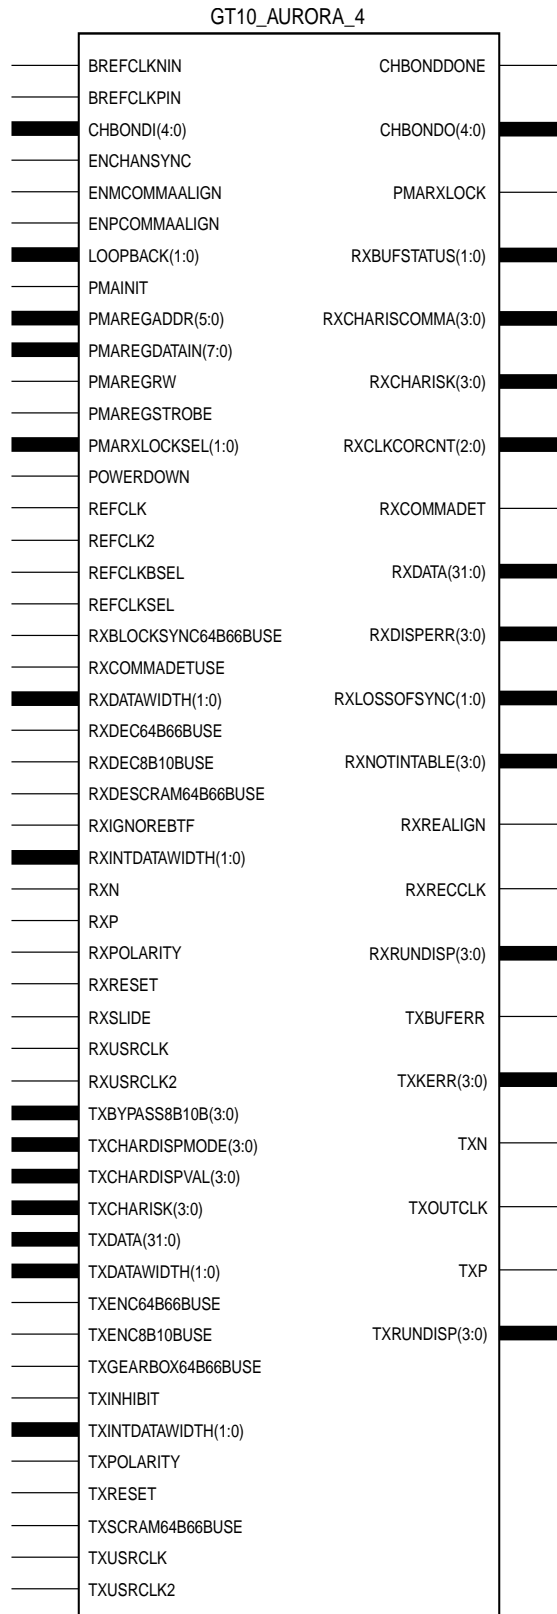

X10047

## Usage

This design element is instantiated rather than inferred in the design code.

## VHDL Instantiation Template

### GT10\_AURORA\_1 VHDL Code

```
-- Component Attribute specification for GT10_AURORA_1
-- should be placed after architecture declaration but
-- before the begin keyword

component GT10_AURORA_1
-- synopsys translate_off
generic (
    ALIGN_COMMA_WORD           : integer := 1;
    CHAN_BOND_LIMIT            : integer := 16;
    CHAN_BOND_MODE              : string := "OFF";
    CHAN_BOND_ONE_SHOT         : boolean := FALSE;
    CHAN_BOND_SEQ_1_1          : bit_vector := "001101111100";
    CHAN_BOND_SEQ_1_2          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_3          : bit_vector := "00001001010";
    CHAN_BOND_SEQ_1_4          : bit_vector := "00001001010";
    CHAN_BOND_SEQ_1_MASK       : bit_vector := "0000";
    CHAN_BOND_SEQ_2_1          : bit_vector := "001101111100";
    CHAN_BOND_SEQ_2_2          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_3          : bit_vector := "00001000101";
    CHAN_BOND_SEQ_2_4          : bit_vector := "00001000101";
    CHAN_BOND_SEQ_2_MASK       : bit_vector := "0000";
    CHAN_BOND_SEQ_2_USE        : boolean := FALSE;
    CHAN_BOND_SEQ_LEN          : integer := 2;
    CLK_COR_8B10B_DE           : boolean := FALSE;
    CLK_COR_MAX_LAT            : integer := 36;
    CLK_COR_MIN_LAT            : integer := 28;
    CLK_COR_SEQ_1_1            : bit_vector := "001000111100";
    CLK_COR_SEQ_1_2            : bit_vector := "001000111100";
    CLK_COR_SEQ_1_3            : bit_vector := "000000000000";
    CLK_COR_SEQ_1_4            : bit_vector := "000000000000";
    CLK_COR_SEQ_1_MASK         : bit_vector := "0000";
    CLK_COR_SEQ_2_1            : bit_vector := "000000000000";
    CLK_COR_SEQ_2_2            : bit_vector := "000000000000";
    CLK_COR_SEQ_2_3            : bit_vector := "000000000000";
    CLK_COR_SEQ_2_4            : bit_vector := "000000000000";
    CLK_COR_SEQ_2_MASK         : bit_vector := "0000";
    CLK_COR_SEQ_2_USE          : boolean := FALSE;
    CLK_COR_SEQ_DROP           : boolean := FALSE;
    CLK_COR_SEQ_LEN            : integer := 2;
    CLK_CORRECT_USE            : boolean := TRUE;
    COMMA_10B_MASK             : bit_vector := "0001111111";
    DEC_MCOMMA_DETECT           : boolean := TRUE;
    DEC_PCOMMA_DETECT          : boolean := TRUE;
    DEC_VALID_COMMA_ONLY       : boolean := TRUE;
    MCOMMA_10B_VALUE           : bit_vector := "1010000011";
    MCOMMA_DETECT              : boolean := TRUE;
    PCOMMA_10B_VALUE           : bit_vector := "0101111100";
    PCOMMA_DETECT              : boolean := TRUE;
    PMA_PWR_CNTRL              : bit_vector := "11111111";
```

```

PMA_SPEED                : string := "25_10";
RX_BUFFER_USE            : boolean := TRUE;
RX_LOS_INVALID_INCR     : integer := 1;
RX_LOS_THRESHOLD        : integer := 4;
RX_LOSS_OF_SYNC_FSM     : boolean := TRUE;
TX_BUFFER_USE            : boolean := TRUE);

-- synopsys translate_on
port (
    BREFCLKNOUT           : out std_ulogic;
    BREFCLKPOUT          : out std_ulogic;
    CHBONDDONE           : out std_ulogic;
    CHBONDO              : out std_logic_vector(4 downto 0);
    PMARXLOCK            : out std_ulogic;
    RXBUFSTATUS          : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA        : out std_logic_vector(0 downto 0);
    RXCHARISK            : out std_logic_vector(0 downto 0);
    RXCLKCORCNT          : out std_logic_vector(2 downto 0);
    RXCOMMADET           : out std_ulogic;
    RXDATA               : out std_logic_vector(7 downto 0);
    RXDISPERR            : out std_logic_vector(0 downto 0);
    RXLOSSOFSYNC         : out std_logic_vector(1 downto 0);
    RXNOTINTABLE         : out std_logic_vector(0 downto 0);
    RXREALIGN            : out std_ulogic;
    RXRECCLK             : out std_ulogic;
    RXRUNDISP            : out std_logic_vector(0 downto 0);
    TXBUFERR             : out std_ulogic;
    TXKERR               : out std_logic_vector(0 downto 0);
    TXN                  : out std_ulogic;
    TXOUTCLK             : out std_ulogic;
    TXP                  : out std_ulogic;
    TXRUNDISP            : out std_logic_vector(0 downto 0);
    BREFCLKNIN           : in std_ulogic;
    BREFCLKPIN           : in std_ulogic;
    CHBONDI              : in std_logic_vector(4 downto 0);
    ENCHANSYNC           : in std_ulogic;
    ENMCOMMAALIGN        : in std_ulogic;
    ENPCOMMAALIGN        : in std_ulogic;
    LOOPBACK             : in std_logic_vector(1 downto 0);
    PMAINIT              : in std_ulogic;
    PMAREGADDR           : in std_logic_vector(5 downto 0);
    PMAREGDATAIN         : in std_logic_vector(7 downto 0);
    PMAREGRW             : in std_ulogic;
    PMAREGSTROBE         : in std_ulogic;
    PMARXLOCKSEL         : in std_logic_vector(1 downto 0);
    POWERDOWN            : in std_ulogic;
    REFCLK               : in std_ulogic;
    REFCLK2              : in std_ulogic;
    REFCLKBSEL           : in std_ulogic;
    REFCLKSEL            : in std_ulogic;
    RXBLOCKSYNC64B66BUSE : in std_ulogic;
    RXCOMMADETUSE        : in std_ulogic;
    RXDATAWIDTH          : in std_logic_vector(1 downto 0);
    RXDEC64B66BUSE       : in std_ulogic;
    RXDEC8B10BUSE        : in std_ulogic;
    RXDESCRAM64B66BUSE   : in std_ulogic;
    RXIGNOREBTF          : in std_ulogic;
    RXINTDATAWIDTH       : in std_logic_vector(1 downto 0);

```

```

RXN                                : in std_ulogic;
RXP                                : in std_ulogic;
RXPOLARITY                          : in std_ulogic;
RXRESET                             : in std_ulogic;
RXSLIDE                             : in std_ulogic;
RXUSRCLK                            : in std_ulogic;
RXUSRCLK2                           : in std_ulogic;
TXBYPASS8B10B                       : in std_logic_vector(0 downto 0);
TXCHARDISPMODE                      : in std_logic_vector(0 downto 0);
TXCHARDISPVAL                       : in std_logic_vector(0 downto 0);
TXCHARISK                           : in std_logic_vector(0 downto 0);
TXDATA                              : in std_logic_vector(7 downto 0);
TXDATAWIDTH                         : in std_logic_vector(1 downto 0);
TXENC64B66BUSE                      : in std_ulogic;
TXENC8B10BUSE                       : in std_ulogic;
TXGEARBOX64B66BUSE                 : in std_ulogic;
TXINHIBIT                           : in std_ulogic;
TXINTDATAWIDTH                     : in std_logic_vector(1 downto 0);
TXPOLARITY                          : in std_ulogic;
TXRESET                             : in std_ulogic;
TXSCRAM64B66BUSE                   : in std_ulogic;
TXUSRCLK                            : in std_ulogic;
TXUSRCLK2                           : in std_ulogic);

```

```
end component;
```

```
-- Component Attribute specification for GT10_AURORA_1
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter constraints here
```

```
-- Component Instantiation for GT10_AURORA_1 should be placed
-- in architecture after the begin keyword
```

```
GT10_AURORA_1_INSTANCE_NAME : GT10_AURORA_1
```

```
-- synopsys translate_off
```

```
generic map (
```

```

ALIGN_COMMA_WORD                    => integer_value,
CHAN_BOND_LIMIT                     => integer_value,
CHAN_BOND_MODE                      => string_value,
CHAN_BOND_ONE_SHOT                  => boolean_value,
CHAN_BOND_SEQ_1_1                   => bit_value,
CHAN_BOND_SEQ_1_2                   => bit_value,
CHAN_BOND_SEQ_1_3                   => bit_value,
CHAN_BOND_SEQ_1_4                   => bit_value,
CHAN_BOND_SEQ_1_MASK                => bit_value,
CHAN_BOND_SEQ_2_1                   => bit_value,
CHAN_BOND_SEQ_2_2                   => bit_value,
CHAN_BOND_SEQ_2_3                   => bit_value,
CHAN_BOND_SEQ_2_4                   => bit_value,
CHAN_BOND_SEQ_2_MASK                => bit_value,
CHAN_BOND_SEQ_2_USE                  => boolean_value,
CHAN_BOND_SEQ_LEN                   => integer_value,
CLK_COR_8B10B_DE                    => boolean_value,
CLK_COR_MAX_LAT                     => integer_value,
CLK_COR_MIN_LAT                     => integer_value,
CLK_COR_SEQ_1_1                     => bit_value,

```

```

CLK_COR_SEQ_1_2           => bit_value,
CLK_COR_SEQ_1_3           => bit_value,
CLK_COR_SEQ_1_4           => bit_value,
CLK_COR_SEQ_1_MASK        => bit_value,
CLK_COR_SEQ_2_1           => bit_value,
CLK_COR_SEQ_2_2           => bit_value,
CLK_COR_SEQ_2_3           => bit_value,
CLK_COR_SEQ_2_4           => bit_value,
CLK_COR_SEQ_2_MASK        => bit_value,
CLK_COR_SEQ_2_USE         => boolean_value,
CLK_COR_SEQ_DROP          => boolean_value,
CLK_COR_SEQ_LEN           => integer_value,
CLK_CORRECT_USE           => boolean_value,
COMMA_10B_MASK            => bit_value,
DEC_MCOMMA_DETECT         => boolean_value,
DEC_PCOMMA_DETECT         => boolean_value,
DEC_VALID_COMMA_ONLY      => boolean_value,
MCOMMA_10B_VALUE          => bit_value,
MCOMMA_DETECT             => boolean_value,
PCOMMA_10B_VALUE          => bit_value,
PCOMMA_DETECT             => boolean_value,
PMA_PWR_CNTRL             => bit_value,
PMA_SPEED                 => string_value,
RX_BUFFER_USE             => boolean_value,
RX_LOS_INVALID_INCR       => integer_value,
RX_LOS_THRESHOLD          => integer_value,
RX_LOSS_OF_SYNC_FSM       => boolean_value,
TX_BUFFER_USE             => boolean_value)

-- synopsys translate_on
port map (
  BREFCLKNOUT              => user_BREFCLKNOUT,
  BREFCLKPOUT              => user_BREFCLKPOUT,
  CHBONDDONE               => user_CHBONDDONE,
  CHBONDO                  => user_CHBONDO,
  PMARXLOCK                => user_PMARXLOCK,
  RXBUFSTATUS              => user_RXBUFSTATUS,
  RXCHARISCOMMA            => user_RXCHARISCOMMA,
  RXCHARISK                 => user_RXCHARISK,
  RXCLKCORCNT              => user_RXCLKCORCNT,
  RXCOMMADET               => user_RXCOMMADET,
  RXDATA                   => user_RXDATA,
  RXDISPERR                => user_RXDISPERR,
  RXLOSSOFSYNC             => user_RXLOSSOFSYNC,
  RXNOTINTABLE             => user_RXNOTINTABLE,
  RXREALIGN                => user_RXREALIGN,
  RXRECCLK                 => user_RXRECCLK,
  RXRUNDISP                => user_RXRUNDISP,
  TXBUFERR                 => user_TXBUFERR,
  TXKERR                   => user_TXKERR,
  TXN                      => user_TXN,
  TXOUTCLK                 => user_TXOUTCLK,
  TXP                      => user_TXP,
  TXRUNDISP                => user_TXRUNDISP,
  BREFCLKNIN               => user_BREFCLKNIN,
  BREFCLKPIN               => user_BREFCLKPIN,
  CHBONDI                  => user_CHBONDI,
  ENCHANSYNC               => user_ENCHANSYNC,

```

```

ENMCOMMAALIGN          => user_ENMCOMMAALIGN,
ENPCOMMAALIGN          => user_ENPCOMMAALIGN,
LOOPBACK                => user_LOOPBACK,
PMAINIT                 => user_PMAINIT,
PMAREGADDR              => user_PMAREGADDR,
PMAREGDATAIN            => user_PMAREGDATAIN,
PMAREGRW                => user_PMAREGRW,
PMAREGSTROBE            => user_PMAREGSTROBE,
PMARXLOCKSEL            => user_PMARXLOCKSEL,
POWERDOWN               => user_POWERDOWN,
REFCLK                  => user_REFCLK,
REFCLK2                  => user_REFCLK2,
REFCLKBSEL              => user_REFCLKBSEL,
REFCLKSEL                => user_REFCLKSEL,
RXBLOCKSYNC64B66BUSE   => user_RXBLOCKSYNC64B66BUSE,
RXCOMMADETUSE           => user_RXCOMMADETUSE,
RXDATAWIDTH             => user_RXDATAWIDTH,
RXDEC64B66BUSE          => user_RXDEC64B66BUSE,
RXDEC8B10BUSE           => user_RXDEC8B10BUSE,
RXDESCRAM64B66BUSE     => user_RXDESCRAM64B66BUSE,
RXIGNOREBTF             => user_RXIGNOREBTF,
RXINTDATAWIDTH          => user_RXINTDATAWIDTH,
RXN                      => user_RXN,
RXP                      => user_RXP,
RXPOLARITY              => user_RXPOLARITY,
RXRESET                 => user_RXRESET,
RXSLIDE                  => user_RXSLIDE,
RXUSRCLK                => user_RXUSRCLK,
RXUSRCLK2                => user_RXUSRCLK2,
TXBYPASS8B10B           => user_TXBYPASS8B10B,
TXCHARDISPMODE          => user_TXCHARDISPMODE,
TXCHARDISPVAL           => user_TXCHARDISPVAL,
TXCHARISK                => user_TXCHARISK,
TXDATA                  => user_TXDATA,
TXDATAWIDTH             => user_TXDATAWIDTH,
TXENC64B66BUSE          => user_TXENC64B66BUSE,
TXENC8B10BUSE           => user_TXENC8B10BUSE,
TXGEARBOX64B66BUSE     => user_TXGEARBOX64B66BUSE,
TXINHIBIT                => user_TXINHIBIT,
TXINTDATAWIDTH          => user_TXINTDATAWIDTH,
TXPOLARITY              => user_TXPOLARITY,
TXRESET                 => user_TXRESET,
TXSCRAM64B66BUSE       => user_TXSCRAM64B66BUSE,
TXUSRCLK                => user_TXUSRCLK,
TXUSRCLK2                => user_TXUSRCLK2);

```

## GT10\_AURORA\_2 Code

```

-- Component Attribute specification for GT10_AURORA_2
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

component GT10_AURORA_2
-- synopsys translate_off
generic (
    ALIGN_COMMA_WORD          : integer := 1;
    CHAN_BOND_LIMIT           : integer := 16;

```

```

CHAN_BOND_MODE                : string := "OFF";
CHAN_BOND_ONE_SHOT           : boolean := FALSE;
CHAN_BOND_SEQ_1_1            : bit_vector := "00110111100";
CHAN_BOND_SEQ_1_2            : bit_vector := "00000000000";
CHAN_BOND_SEQ_1_3            : bit_vector := "00001001010";
CHAN_BOND_SEQ_1_4            : bit_vector := "00001001010";
CHAN_BOND_SEQ_1_MASK         : bit_vector := "0000";
CHAN_BOND_SEQ_2_1            : bit_vector := "00110111100";
CHAN_BOND_SEQ_2_2            : bit_vector := "00000000000";
CHAN_BOND_SEQ_2_3            : bit_vector := "00001000101";
CHAN_BOND_SEQ_2_4            : bit_vector := "00001000101";
CHAN_BOND_SEQ_2_MASK         : bit_vector := "0000";
CHAN_BOND_SEQ_2_USE          : boolean := FALSE;
CHAN_BOND_SEQ_LEN            : integer := 2;
CLK_COR_8B10B_DE             : boolean := FALSE;
CLK_COR_MAX_LAT              : integer := 36;
CLK_COR_MIN_LAT              : integer := 28;
CLK_COR_SEQ_1_1              : bit_vector := "00100011100";
CLK_COR_SEQ_1_2              : bit_vector := "00100011100";
CLK_COR_SEQ_1_3              : bit_vector := "00000000000";
CLK_COR_SEQ_1_4              : bit_vector := "00000000000";
CLK_COR_SEQ_1_MASK           : bit_vector := "0000";
CLK_COR_SEQ_2_1              : bit_vector := "00000000000";
CLK_COR_SEQ_2_2              : bit_vector := "00000000000";
CLK_COR_SEQ_2_3              : bit_vector := "00000000000";
CLK_COR_SEQ_2_4              : bit_vector := "00000000000";
CLK_COR_SEQ_2_MASK           : bit_vector := "0000";
CLK_COR_SEQ_2_USE            : boolean := FALSE;
CLK_COR_SEQ_DROP             : boolean := FALSE;
CLK_COR_SEQ_LEN              : integer := 2;
CLK_CORRECT_USE              : boolean := TRUE;
COMMA_10B_MASK               : bit_vector := "0001111111";
DEC_MCOMMA_DETECT            : boolean := TRUE;
DEC_PCOMMA_DETECT            : boolean := TRUE;
DEC_VALID_COMMA_ONLY         : boolean := TRUE;
MCOMMA_10B_VALUE             : bit_vector := "1010000011";
MCOMMA_DETECT                : boolean := TRUE;
PCOMMA_10B_VALUE             : bit_vector := "0101111100";
PCOMMA_DETECT                : boolean := TRUE;
PMA_PWR_CNTRL                : bit_vector := "11111111";
PMA_SPEED                    : string := "25_20";
RX_BUFFER_USE                : boolean := TRUE;
RX_LOS_INVALID_INCR          : integer := 1;
RX_LOS_THRESHOLD             : integer := 4;
RX_LOSS_OF_SYNC_FSM          : boolean := TRUE;
TX_BUFFER_USE                 : boolean := TRUE);

-- synopsys translate_on
port (
    BREFCLKNOUT                : out std_ulogic;
    BREFCLKPOUT                : out std_ulogic;
    CHBONDDONE                 : out std_ulogic;
    CHBONDO                     : out std_logic_vector(4 downto 0);
    PMARXLOCK                  : out std_ulogic;
    RXBUFSTATUS                 : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA              : out std_logic_vector(1 downto 0);
    RXCHARISK                   : out std_logic_vector(1 downto 0);
    RXCLKCORCNT                : out std_logic_vector(2 downto 0);

```



```

RXCOMMADET           : out std_ulogic;
RXDATA               : out std_logic_vector(15 downto 0);
RXDISPERR            : out std_logic_vector(1 downto 0);
RXLOSSOFFSYNC        : out std_logic_vector(1 downto 0);
RXNOTINTABLE         : out std_logic_vector(1 downto 0);
RXREALIGN            : out std_ulogic;
RXRECCLK             : out std_ulogic;
RXRUNDISP            : out std_logic_vector(1 downto 0);
TXBUFERR             : out std_ulogic;
TXKERR               : out std_logic_vector(1 downto 0);
TXN                  : out std_ulogic;
TXOUTCLK             : out std_ulogic;
TXP                  : out std_ulogic;
TXRUNDISP            : out std_logic_vector(1 downto 0);
BREFCLKNIN           : in std_ulogic;
BREFCLKPIN           : in std_ulogic;
CHBONDI              : in std_logic_vector(4 downto 0);
ENCHANSYNC           : in std_ulogic;
ENMCOMMAALIGN        : in std_ulogic;
ENPCOMMAALIGN        : in std_ulogic;
LOOPBACK             : in std_logic_vector(1 downto 0);
PMAINIT              : in std_ulogic;
PMAREGADDR           : in std_logic_vector(5 downto 0);
PMAREGDATAIN         : in std_logic_vector(7 downto 0);
PMAREGRW             : in std_ulogic;
PMAREGSTROBE         : in std_ulogic;
PMARXLOCKSEL         : in std_logic_vector(1 downto 0);
POWERDOWN            : in std_ulogic;
REFCLK               : in std_ulogic;
REFCLK2              : in std_ulogic;
REFCLKBSEL           : in std_ulogic;
REFCLKSEL            : in std_ulogic;
RXBLOCKSYNC64B66BUSE : in std_ulogic;
RXCOMMADETUSE        : in std_ulogic;
RXDATAWIDTH          : in std_logic_vector(1 downto 0);
RXDEC64B66BUSE       : in std_ulogic;
RXDEC8B10BUSE        : in std_ulogic;
RXDESCRAM64B66BUSE   : in std_ulogic;
RXIGNOREBTF          : in std_ulogic;
RXINTDATAWIDTH       : in std_logic_vector(1 downto 0);
RXN                  : in std_ulogic;
RXP                  : in std_ulogic;
RXPOLARITY           : in std_ulogic;
RXRESET              : in std_ulogic;
RXSLIDE              : in std_ulogic;
RXUSRCLK             : in std_ulogic;
RXUSRCLK2            : in std_ulogic;
TXBYPASS8B10B        : in std_logic_vector(1 downto 0);
TXCHARDISPMODE       : in std_logic_vector(1 downto 0);
TXCHARDISPVAL        : in std_logic_vector(1 downto 0);
TXCHARISK            : in std_logic_vector(1 downto 0);
TXDATA               : in std_logic_vector(15 downto 0);
TXDATAWIDTH          : in std_logic_vector(1 downto 0);
TXENC64B66BUSE       : in std_ulogic;
TXENC8B10BUSE        : in std_ulogic;
TXGEARBOX64B66BUSE   : in std_ulogic;
TXINHIBIT            : in std_ulogic;
TXINTDATAWIDTH       : in std_logic_vector(1 downto 0);

```

```

        TXPOLARITY                : in std_ulogic;
        TXRESET                   : in std_ulogic;
        TXSCRAM64B66BUSE         : in std_ulogic;
        TXUSRCLK                  : in std_ulogic;
        TXUSRCLK2                 : in std_ulogic);

end component;

-- Component Attribute specification for GT10_AURORA_2
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter constraints here

-- Component Instantiation for GT10_AURORA_2 should be placed
-- in architecture after the begin keyword

GT10_AURORA_2_INSTANCE_NAME : GT10_AURORA_2
-- synopsys translate_off
generic map (
    ALIGN_COMMA_WORD           => integer_value,
    CHAN_BOND_LIMIT            => integer_value,
    CHAN_BOND_MODE              => string_value,
    CHAN_BOND_ONE_SHOT         => boolean_value,
    CHAN_BOND_SEQ_1_1          => bit_value,
    CHAN_BOND_SEQ_1_2          => bit_value,
    CHAN_BOND_SEQ_1_3          => bit_value,
    CHAN_BOND_SEQ_1_4          => bit_value,
    CHAN_BOND_SEQ_1_MASK       => bit_value,
    CHAN_BOND_SEQ_2_1          => bit_value,
    CHAN_BOND_SEQ_2_2          => bit_value,
    CHAN_BOND_SEQ_2_3          => bit_value,
    CHAN_BOND_SEQ_2_4          => bit_value,
    CHAN_BOND_SEQ_2_MASK       => bit_value,
    CHAN_BOND_SEQ_2_USE        => boolean_value,
    CHAN_BOND_SEQ_LEN          => integer_value,
    CLK_COR_8B10B_DE           => boolean_value,
    CLK_COR_MAX_LAT            => integer_value,
    CLK_COR_MIN_LAT            => integer_value,
    CLK_COR_SEQ_1_1            => bit_value,
    CLK_COR_SEQ_1_2            => bit_value,
    CLK_COR_SEQ_1_3            => bit_value,
    CLK_COR_SEQ_1_4            => bit_value,
    CLK_COR_SEQ_1_MASK         => bit_value,
    CLK_COR_SEQ_2_1            => bit_value,
    CLK_COR_SEQ_2_2            => bit_value,
    CLK_COR_SEQ_2_3            => bit_value,
    CLK_COR_SEQ_2_4            => bit_value,
    CLK_COR_SEQ_2_MASK         => bit_value,
    CLK_COR_SEQ_2_USE          => boolean_value,
    CLK_COR_SEQ_DROP           => boolean_value,
    CLK_COR_SEQ_LEN            => integer_value,
    CLK_CORRECT_USE            => boolean_value,
    COMMA_10B_MASK             => bit_value,
    DEC_MCOMMA_DETECT          => boolean_value,
    DEC_PCOMMA_DETECT          => boolean_value,
    DEC_VALID_COMMA_ONLY       => boolean_value,
    MCOMMA_10B_VALUE           => bit_value,

```

```

MCOMMA_DETECT           => boolean_value,
PCOMMA_10B_VALUE       => bit_value,
PCOMMA_DETECT           => boolean_value,
PMA_PWR_CNTRL          => bit_value,
PMA_SPEED              => string_value,
RX_BUFFER_USE          => boolean_value,
RX_LOS_INVALID_INCR    => integer_value,
RX_LOS_THRESHOLD       => integer_value,
RX_LOSS_OF_SYNC_FSM    => boolean_value,
TX_BUFFER_USE          => boolean_value)

-- synopsys translate_on
port map (
  BREFCLKNOUT           => user_BREFCLKNOUT,
  BREFCLKPOUT          => user_BREFCLKPOUT,
  CHBONDDONE           => user_CHBONDDONE,
  CHBONDO              => user_CHBONDO,
  PMARXLOCK            => user_PMARXLOCK,
  RXBUFSTATUS          => user_RXBUFSTATUS,
  RXCHARISCOMMA       => user_RXCHARISCOMMA,
  RXCHARISK            => user_RXCHARISK,
  RXCLKCORCNT          => user_RXCLKCORCNT,
  RXCOMMADET          => user_RXCOMMADET,
  RXDATA               => user_RXDATA,
  RXDISPERR            => user_RXDISPERR,
  RXLOSSOFSYNC        => user_RXLOSSOFSYNC,
  RXNOTINTABLE        => user_RXNOTINTABLE,
  RXREALIGN            => user_RXREALIGN,
  RXRECCLK             => user_RXRECCLK,
  RXRUNDISP           => user_RXRUNDISP,
  TXBUFERR             => user_TXBUFERR,
  TXKERR               => user_TXKERR,
  TXN                  => user_TXN,
  TXOUTCLK             => user_TXOUTCLK,
  TXP                  => user_TXP,
  TXRUNDISP           => user_TXRUNDISP,
  BREFCLKNIN          => user_BREFCLKNIN,
  BREFCLKPIN          => user_BREFCLKPIN,
  CHBONDI              => user_CHBONDI,
  ENCHANSYNC           => user_ENCHANSYNC,
  ENMCOMMAALIGN       => user_ENMCOMMAALIGN,
  ENPCOMMAALIGN       => user_ENPCOMMAALIGN,
  LOOPBACK             => user_LOOPBACK,
  PMAINIT              => user_PMAINIT,
  PMAREGADDR           => user_PMAREGADDR,
  PMAREGDATAIN        => user_PMAREGDATAIN,
  PMAREGRW             => user_PMAREGRW,
  PMAREGSTROBE        => user_PMAREGSTROBE,
  PMARXLOCKSEL        => user_PMARXLOCKSEL,
  POWERDOWN            => user_POWERDOWN,
  REFCLK               => user_REFCLK,
  REFCLK2              => user_REFCLK2,
  REFCLKBSEL          => user_REFCLKBSEL,
  REFCLKSEL            => user_REFCLKSEL,
  RXBLOCKSYNC64B66BUSE => user_RXBLOCKSYNC64B66BUSE,
  RXCOMMADETUSE       => user_RXCOMMADETUSE,
  RXDATAWIDTH         => user_RXDATAWIDTH,
  RXDEC64B66BUSE     => user_RXDEC64B66BUSE,

```

```

RXDEC8B10BUSE           => user_RXDEC8B10BUSE,
RXDESCRAM64B66BUSE     => user_RXDESCRAM64B66BUSE,
RXIGNOREBTF            => user_RXIGNOREBTF,
RXINTDATAWIDTH         => user_RXINTDATAWIDTH,
RXN                     => user_RXN,
RXP                     => user_RXP,
RXPOLARITY             => user_RXPOLARITY,
RXRESET                => user_RXRESET,
RXSLIDE                => user_RXSLIDE,
RXUSRCLK               => user_RXUSRCLK,
RXUSRCLK2              => user_RXUSRCLK2,
TXBYPASS8B10B         => user_TXBYPASS8B10B,
TXCHARDISPMODE         => user_TXCHARDISPMODE,
TXCHARDISPVAL          => user_TXCHARDISPVAL,
TXCHARISK              => user_TXCHARISK,
TXDATA                 => user_TXDATA,
TXDATAWIDTH            => user_TXDATAWIDTH,
TXENC64B66BUSE        => user_TXENC64B66BUSE,
TXENC8B10BUSE          => user_TXENC8B10BUSE,
TXGEARBOX64B66BUSE    => user_TXGEARBOX64B66BUSE,
TXINHIBIT              => user_TXINHIBIT,
TXINTDATAWIDTH        => user_TXINTDATAWIDTH,
TXPOLARITY             => user_TXPOLARITY,
TXRESET                => user_TXRESET,
TXSCRAM64B66BUSE      => user_TXSCRAM64B66BUSE,
TXUSRCLK               => user_TXUSRCLK,
TXUSRCLK2              => user_TXUSRCLK2);

```

## GT10\_AURORA\_2 VHDL Code

```

-- Component Attribute specification for GT10_AURORA_4
-- should be placed after architecture declaration but
-- before the begin keyword

component GT10_AURORA_4
-- synopsis translate_off
generic (
    ALIGN_COMMA_WORD           : integer := 1;
    CHAN_BOND_LIMIT            : integer := 16;
    CHAN_BOND_MODE              : string := "OFF";
    CHAN_BOND_ONE_SHOT         : boolean := FALSE;
    CHAN_BOND_SEQ_1_1          : bit_vector := "00110111100";
    CHAN_BOND_SEQ_1_2          : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_3          : bit_vector := "00001001010";
    CHAN_BOND_SEQ_1_4          : bit_vector := "00001001010";
    CHAN_BOND_SEQ_1_MASK       : bit_vector := "0000";
    CHAN_BOND_SEQ_2_1          : bit_vector := "00110111100";
    CHAN_BOND_SEQ_2_2          : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_3          : bit_vector := "00001000101";
    CHAN_BOND_SEQ_2_4          : bit_vector := "00001000101";
    CHAN_BOND_SEQ_2_MASK       : bit_vector := "0000";
    CHAN_BOND_SEQ_2_USE        : boolean := FALSE;
    CHAN_BOND_SEQ_LEN          : integer := 4;
    CLK_COR_8B10B_DE           : boolean := FALSE;
    CLK_COR_MAX_LAT            : integer := 36;
    CLK_COR_MIN_LAT            : integer := 28;
    CLK_COR_SEQ_1_1            : bit_vector := "00100011100";
    CLK_COR_SEQ_1_2            : bit_vector := "00100011100";

```

```

CLK_COR_SEQ_1_3           : bit_vector := "00100011100";
CLK_COR_SEQ_1_4           : bit_vector := "00100011100";
CLK_COR_SEQ_1_MASK       : bit_vector := "0000";
CLK_COR_SEQ_2_1           : bit_vector := "000000000000";
CLK_COR_SEQ_2_2           : bit_vector := "000000000000";
CLK_COR_SEQ_2_3           : bit_vector := "000000000000";
CLK_COR_SEQ_2_4           : bit_vector := "000000000000";
CLK_COR_SEQ_2_MASK       : bit_vector := "0000";
CLK_COR_SEQ_2_USE        : boolean := FALSE;
CLK_COR_SEQ_DROP         : boolean := FALSE;
CLK_COR_SEQ_LEN          : integer := 4;
CLK_CORRECT_USE          : boolean := TRUE;
COMMA_10B_MASK           : bit_vector := "0001111111";
DEC_MCOMMA_DETECT        : boolean := TRUE;
DEC_PCOMMA_DETECT        : boolean := TRUE;
DEC_VALID_COMMA_ONLY     : boolean := TRUE;
MCOMMA_10B_VALUE         : bit_vector := "1010000011";
MCOMMA_DETECT            : boolean := TRUE;
PCOMMA_10B_VALUE         : bit_vector := "0101111100";
PCOMMA_DETECT            : boolean := TRUE;
PMA_PWR_CNTRL            : bit_vector := "11111111";
PMA_SPEED                : string := "25_40";
RX_BUFFER_USE            : boolean := TRUE;
RX_LOS_INVALID_INCR      : integer := 1;
RX_LOS_THRESHOLD         : integer := 4;
RX_LOSS_OF_SYNC_FSM      : boolean := TRUE;
TX_BUFFER_USE            : boolean := TRUE);

-- synopsys translate_on
port (
  BREFCLKNOUT              : out std_ulogic;
  BREFCLKPOUT              : out std_ulogic;
  CHBONDDONE               : out std_ulogic;
  CHBONDO                  : out std_logic_vector(4 downto 0);
  PMARXLOCK                : out std_ulogic;
  RXBUFSTATUS              : out std_logic_vector(1 downto 0);
  RXCHARISCOMMA            : out std_logic_vector(3 downto 0);
  RXCHARISK                : out std_logic_vector(3 downto 0);
  RXCLKCORCNT              : out std_logic_vector(2 downto 0);
  RXCOMMADET              : out std_ulogic;
  RXDATA                   : out std_logic_vector(31 downto 0);
  RXDISPERR                : out std_logic_vector(3 downto 0);
  RXLOSSOFSYNC             : out std_logic_vector(1 downto 0);
  RXNOTINTABLE             : out std_logic_vector(3 downto 0);
  RXREALIGN                : out std_ulogic;
  RXRECCLK                 : out std_ulogic;
  RXRUNDISP                : out std_logic_vector(3 downto 0);
  TXBUFERR                 : out std_ulogic;
  TXKERR                   : out std_logic_vector(3 downto 0);
  TXN                      : out std_ulogic;
  TXOUTCLK                 : out std_ulogic;
  TXP                      : out std_ulogic;
  TXRUNDISP                : out std_logic_vector(3 downto 0);
  BREFCLKNIN               : in std_ulogic;
  BREFCLKPIN               : in std_ulogic;
  CHBONDI                  : in std_logic_vector(4 downto 0);
  ENCHANSYNC               : in std_ulogic;
  ENMCOMMAALIGN            : in std_ulogic;

```

```

ENPCOMMAALIGN           : in std_ulogic;
LOOPBACK                 : in std_logic_vector(1 downto 0);
PMAINIT                  : in std_ulogic;
PMAREGADDR               : in std_logic_vector(5 downto 0);
PMAREGDATAIN             : in std_logic_vector(7 downto 0);
PMAREGRW                 : in std_ulogic;
PMAREGSTROBE             : in std_ulogic;
PMARXLOCKSEL             : in std_logic_vector(1 downto 0);
POWERDOWN                : in std_ulogic;
REFCLK                   : in std_ulogic;
REFCLK2                  : in std_ulogic;
REFCLKBSEL               : in std_ulogic;
REFCLKSEL                : in std_ulogic;
RXBLOCKSYNC64B66BUSE    : in std_ulogic;
RXCOMMADETUSE            : in std_ulogic;
RXDATAWIDTH              : in std_logic_vector(1 downto 0);
RXDEC64B66BUSE           : in std_ulogic;
RXDEC8B10BUSE            : in std_ulogic;
RXDESCRAM64B66BUSE      : in std_ulogic;
RXIGNOREBTF              : in std_ulogic;
RXINTDATAWIDTH           : in std_logic_vector(1 downto 0);
RXN                      : in std_ulogic;
RXP                      : in std_ulogic;
RXPOLARITY               : in std_ulogic;
RXRESET                  : in std_ulogic;
RXSLIDE                  : in std_ulogic;
RXUSRCLK                 : in std_ulogic;
RXUSRCLK2                : in std_ulogic;
TXBYPASS8B10B           : in std_logic_vector(3 downto 0);
TXCHARDISPMODE           : in std_logic_vector(3 downto 0);
TXCHARDISPVAL            : in std_logic_vector(3 downto 0);
TXCHARISK                : in std_logic_vector(3 downto 0);
TXDATA                   : in std_logic_vector(31 downto 0);
TXDATAWIDTH              : in std_logic_vector(1 downto 0);
TXENC64B66BUSE           : in std_ulogic;
TXENC8B10BUSE            : in std_ulogic;
TXGEARBOX64B66BUSE      : in std_ulogic;
TXINHIBIT                : in std_ulogic;
TXINTDATAWIDTH           : in std_logic_vector(1 downto 0);
TXPOLARITY               : in std_ulogic;
TXRESET                  : in std_ulogic;
TXSCRAM64B66BUSE        : in std_ulogic;
TXUSRCLK                 : in std_ulogic;
TXUSRCLK2                : in std_ulogic);

```

```
end component;
```

```
-- Component Attribute specification for GT10_AURORA_4
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter constraints here
```

```
-- Component Instantiation for GT10_AURORA_4 should be placed
-- in architecture after the begin keyword
```

```
GT10_AURORA_4_INSTANCE_NAME : GT10_AURORA_4
-- synopsys translate_off
```

```

generic map (
    ALIGN_COMMA_WORD           => integer_value,
    CHAN_BOND_LIMIT           => integer_value,
    CHAN_BOND_MODE            => string_value,
    CHAN_BOND_ONE_SHOT       => boolean_value,
    CHAN_BOND_SEQ_1_1        => bit_value,
    CHAN_BOND_SEQ_1_2        => bit_value,
    CHAN_BOND_SEQ_1_3        => bit_value,
    CHAN_BOND_SEQ_1_4        => bit_value,
    CHAN_BOND_SEQ_1_MASK     => bit_value,
    CHAN_BOND_SEQ_2_1        => bit_value,
    CHAN_BOND_SEQ_2_2        => bit_value,
    CHAN_BOND_SEQ_2_3        => bit_value,
    CHAN_BOND_SEQ_2_4        => bit_value,
    CHAN_BOND_SEQ_2_MASK     => bit_value,
    CHAN_BOND_SEQ_2_USE      => boolean_value,
    CHAN_BOND_SEQ_LEN        => integer_value,
    CLK_COR_8B10B_DE         => boolean_value,
    CLK_COR_MAX_LAT          => integer_value,
    CLK_COR_MIN_LAT          => integer_value,
    CLK_COR_SEQ_1_1          => bit_value,
    CLK_COR_SEQ_1_2          => bit_value,
    CLK_COR_SEQ_1_3          => bit_value,
    CLK_COR_SEQ_1_4          => bit_value,
    CLK_COR_SEQ_1_MASK       => bit_value,
    CLK_COR_SEQ_2_1          => bit_value,
    CLK_COR_SEQ_2_2          => bit_value,
    CLK_COR_SEQ_2_3          => bit_value,
    CLK_COR_SEQ_2_4          => bit_value,
    CLK_COR_SEQ_2_MASK       => bit_value,
    CLK_COR_SEQ_2_USE        => boolean_value,
    CLK_COR_SEQ_DROP         => boolean_value,
    CLK_COR_SEQ_LEN          => integer_value,
    CLK_CORRECT_USE          => boolean_value,
    COMMA_10B_MASK           => bit_value,
    DEC_MCOMMA_DETECT        => boolean_value,
    DEC_PCOMMA_DETECT        => boolean_value,
    DEC_VALID_COMMA_ONLY    => boolean_value,
    MCOMMA_10B_VALUE         => bit_value,
    MCOMMA_DETECT            => boolean_value,
    PCOMMA_10B_VALUE         => bit_value,
    PCOMMA_DETECT            => boolean_value,
    PMA_PWR_CNTRL            => bit_value,
    PMA_SPEED                 => string_value,
    RX_BUFFER_USE            => boolean_value,
    RX_LOS_INVALID_INCR      => integer_value,
    RX_LOS_THRESHOLD         => integer_value,
    RX_LOSS_OF_SYNC_FSM     => boolean_value,
    TX_BUFFER_USE            => boolean_value)

-- synopsys translate_on
port map (
    BREFCLKNOUT              => user_BREFCLKNOUT,
    BREFCLKPOUT              => user_BREFCLKPOUT,
    CHBONDDONE               => user_CHBONDDONE,
    CHBONDO                  => user_CHBONDO,
    PMARXLOCK                => user_PMARXLOCK,
    RXBUFSTATUS              => user_RXBUFSTATUS,

```

RXCHARISCOMMA	=> user_RXCHARISCOMMA,
RXCHARISK	=> user_RXCHARISK,
RXCLKCORCNT	=> user_RXCLKCORCNT,
RXCOMMADET	=> user_RXCOMMADET,
RXDATA	=> user_RXDATA,
RXDISPERR	=> user_RXDISPERR,
RXLOSSOFSYNC	=> user_RXLOSSOFSYNC,
RXNOTINTABLE	=> user_RXNOTINTABLE,
RXREALIGN	=> user_RXREALIGN,
RXRECCLK	=> user_RXRECCLK,
RXRUNDISP	=> user_RXRUNDISP,
TXBUFERR	=> user_TXBUFERR,
TXKERR	=> user_TXKERR,
TXN	=> user_TXN,
TXOUTCLK	=> user_TXOUTCLK,
TXP	=> user_TXP,
TXRUNDISP	=> user_TXRUNDISP,
BREFCLKNIN	=> user_BREFCLKNIN,
BREFCLKPIN	=> user_BREFCLKPIN,
CHBONDI	=> user_CHBONDI,
ENCHANSYNC	=> user_ENCHANSYNC,
ENMCOMMAALIGN	=> user_ENMCOMMAALIGN,
ENPCOMMAALIGN	=> user_ENPCOMMAALIGN,
LOOPBACK	=> user_LOOPBACK,
PMAINIT	=> user_PMAINIT,
PMAREGADDR	=> user_PMAREGADDR,
PMAREGDATAIN	=> user_PMAREGDATAIN,
PMAREGRW	=> user_PMAREGRW,
PMAREGSTROBE	=> user_PMAREGSTROBE,
PMARXLOCKSEL	=> user_PMARXLOCKSEL,
POWERDOWN	=> user_POWERDOWN,
REFCLK	=> user_REFCLK,
REFCLK2	=> user_REFCLK2,
REFCLKBSEL	=> user_REFCLKBSEL,
REFCLKSEL	=> user_REFCLKSEL,
RXBLOCKSYNC64B66BUSE	=> user_RXBLOCKSYNC64B66BUSE,
RXCOMMADETUSE	=> user_RXCOMMADETUSE,
RXDATAWIDTH	=> user_RXDATAWIDTH,
RXDEC64B66BUSE	=> user_RXDEC64B66BUSE,
RXDEC8B10BUSE	=> user_RXDEC8B10BUSE,
RXDESCRAM64B66BUSE	=> user_RXDESCRAM64B66BUSE,
RXIGNOREBTF	=> user_RXIGNOREBTF,
RXINTDATAWIDTH	=> user_RXINTDATAWIDTH,
RXN	=> user_RXN,
RXP	=> user_RXP,
RXPOLARITY	=> user_RXPOLARITY,
RXRESET	=> user_RXRESET,
RXSLIDE	=> user_RXSLIDE,
RXUSRCLK	=> user_RXUSRCLK,
RXUSRCLK2	=> user_RXUSRCLK2,
TXBYPASS8B10B	=> user_TXBYPASS8B10B,
TXCHARDISPMODE	=> user_TXCHARDISPMODE,
TXCHARDISPVAL	=> user_TXCHARDISPVAL,
TXCHARISK	=> user_TXCHARISK,
TXDATA	=> user_TXDATA,
TXDATAWIDTH	=> user_TXDATAWIDTH,
TXENC64B66BUSE	=> user_TXENC64B66BUSE,
TXENC8B10BUSE	=> user_TXENC8B10BUSE,



```

TXGEARBOX64B66BUSE      => user_TXGEARBOX64B66BUSE,
TXINHIBIT                => user_TXINHIBIT,
TXINTDATAWIDTH          => user_TXINTDATAWIDTH,
TXPOLARITY              => user_TXPOLARITY,
TXRESET                 => user_TXRESET,
TXSCRAM64B66BUSE       => user_TXSCRAM64B66BUSE,
TXUSRCLK                => user_TXUSRCLK,
TXUSRCLK2               => user_TXUSRCLK2);

```

## Verilog Instantiation Templates

### GT10\_AURORA\_1 Verilog Code

```

GT10_AURORA_1 GT10_AURORA_1_name(
  .BREFCLKNOUT (user_BREFCLKNOUT),
  .BREFCLKPOUT (user_BREFCLKPOUT),
  .CHBONDDONE (user_CHBONDDONE),
  .CHBONDO (user_CHBONDO),
  .PMARXLOCK (user_PMARXLOCK),
  .RXBUFSTATUS (user_RXBUFSTATUS),
  .RXCHARISCOMMA (user_RXCHARISCOMMA),
  .RXCHARISK (user_RXCHARISK),
  .RXCLKCORCNT (user_RXCLKCORCNT),
  .RXCOMMADET (user_RXCOMMADET),
  .RXDATA (user_RXDATA),
  .RXDISPERR (user_RXDISPERR),
  .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
  .RXNOTINTABLE (user_RXNOTINTABLE),
  .RXREALIGN (user_RXREALIGN),
  .RXRECCLK (user_RXRECCLK),
  .RXRUNDISP (user_RXRUNDISP),
  .TXBUFERR (user_TXBUFERR),
  .TXKERR (user_TXKERR),
  .TXN (user_TXN),
  .TXOUTCLK (user_TXOUTCLK),
  .TXP (user_TXP),
  .TXRUNDISP (user_TXRUNDISP),

  .BREFCLKNIN (user_BREFCLKNIN),
  .BREFCLKPIN (user_BREFCLKPIN),
  .CHBONDI (user_CHBONDI),
  .ENCHANSYNC (user_ENCHANSYNC),
  .ENMCOMMAALIGN (user_ENMCOMMAALIGN),
  .ENPCOMMAALIGN (user_ENPCOMMAALIGN),
  .LOOPBACK (user_LOOPBACK),
  .PMAINIT (user_PMAINIT),
  .PMAREGADDR (user_PMAREGADDR),
  .PMAREGDATAIN (user_PMAREGDATAIN),
  .PMAREGRW (user_PMAREGRW),
  .PMAREGSTROBE (user_PMAREGSTROBE),
  .PMARXLOCKSEL (user_PMARXLOCKSEL),
  .POWERDOWN (user_POWERDOWN),
  .REFCLK (user_REFCLK),
  .REFCLK2 (user_REFCLK2),
  .REFCLKBSEL (user_REFCLKBSEL),
  .REFCLKSEL (user_REFCLKSEL),

```

```
.RXBLOCKSYN64B66BUSE (user_RXBLOCKSYN64B66BUSE),
.RXCOMMADETUSE (user_RXCOMMADETUSE),
.RXDATAWIDTH (user_RXDATAWIDTH),
.RXDEC64B66BUSE (user_RXDEC64B66BUSE),
.RXDEC8B10BUSE (user_RXDEC8B10BUSE),
.RXDESCRAM64B66BUSE (user_RXDESCRAM64B66BUSE),
.RXIGNOREBTF (user_RXIGNOREBTF),
.RXINTDATAWIDTH (user_RXINTDATAWIDTH),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXSLIDE (user_RXSLIDE),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXDATAWIDTH (user_TXDATAWIDTH),
.TXENC64B66BUSE (user_TXENC64B66BUSE),
.TXENC8B10BUSE (user_TXENC8B10BUSE),
.TXGEARBOX64B66BUSE (user_TXGEARBOX64B66BUSE),
.TXINHIBIT (user_TXINHIBIT),
.TXINTDATAWIDTH (user_TXINTDATAWIDTH),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXSCRAM64B66BUSE (user_TXSCRAM64B66BUSE),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));
```

```
defparam user_instance_name.ALIGN_COMMA_WORD = 1;
defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b00110111100;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b00110111100;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 2;
defparam user_instance_name.CLK_COR_8B10B_DE = "FALSE";
defparam user_instance_name.CLK_COR_MAX_LAT = 36;
defparam user_instance_name.CLK_COR_MIN_LAT = 28;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00100011100;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00100011100;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b00000000000;
```

```

defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_DROP = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 2;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b0001111111;
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1010000011;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0101111100;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.PMA_PWR_CNTRL = 8'b11111111;
defparam user_instance_name.PMA_SPEED = "25_10";
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.TX_BUFFER_USE = "TRUE";

```

## GT10\_AURORA\_2 Verilog Code

```

GT10_AURORA_2 GT10_AURORA_2_name(
    .BREFCLKNOUT (user_BREFCLKNOUT),
    .BREFCLKPOUT (user_BREFCLKPOUT),
    .CHBONDDONE (user_CHBONDDONE),
    .CHBONDO (user_CHBONDO),
    .PMARXLOCK (user_PMARXLOCK),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCLKCORCNT (user_RXCLKCORCNT),
    .RXCOMMADET (user_RXCOMMADET),
    .RXDATA (user_RXDATA),
    .RXDISPERR (user_RXDISPERR),
    .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
    .RXNOTINTABLE (user_RXNOTINTABLE),
    .RXREALIGN (user_RXREALIGN),
    .RXRECCLK (user_RXRECCLK),
    .RXRUNDISP (user_RXRUNDISP),
    .TXBUFERR (user_TXBUFERR),
    .TXKERR (user_TXKERR),
    .TXN (user_TXN),
    .TXOUTCLK (user_TXOUTCLK),
    .TXP (user_TXP),
    .TXRUNDISP (user_TXRUNDISP),

    .BREFCLKNIN (user_BREFCLKNIN),
    .BREFCLKPIN (user_BREFCLKPIN),
    .CHBONDI (user_CHBONDI),
    .ENCHANSYNC (user_ENCHANSYNC),
    .ENMCOMMAALIGN (user_ENMCOMMAALIGN),
    .ENPCOMMAALIGN (user_ENPCOMMAALIGN),
    .LOOPBACK (user_LOOPBACK),
    .PMAINIT (user_PMAINIT),

```

```

.PMAREGADDR (user_PMAREGADDR),
.PMAREGDATAIN (user_PMAREGDATAIN),
.PMAREGRW (user_PMAREGRW),
.PMAREGSTROBE (user_PMAREGSTROBE),
.PMARXLOCKSEL (user_PMARXLOCKSEL),
.POWERDOWN (user_POWERDOWN),
.REFCLK (user_REFCLK),
.REFCLK2 (user_REFCLK2),
.REFCLKBSEL (user_REFCLKBSEL),
.REFCLKSEL (user_REFCLKSEL),
.RXBLOCKSYNC64B66BUSE (user_RXBLOCKSYNC64B66BUSE),
.RXCOMMADETUSE (user_RXCOMMADETUSE),
.RXDATAWIDTH (user_RXDATAWIDTH),
.RXDEC64B66BUSE (user_RXDEC64B66BUSE),
.RXDEC8B10BUSE (user_RXDEC8B10BUSE),
.RXDESCRAM64B66BUSE (user_RXDESCRAM64B66BUSE),
.RXIGNOREBTF (user_RXIGNOREBTF),
.RXINTDATAWIDTH (user_RXINTDATAWIDTH),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXSLIDE (user_RXSLIDE),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXDATAWIDTH (user_TXDATAWIDTH),
.TXENC64B66BUSE (user_TXENC64B66BUSE),
.TXENC8B10BUSE (user_TXENC8B10BUSE),
.TXGEARBOX64B66BUSE (user_TXGEARBOX64B66BUSE),
.TXINHIBIT (user_TXINHIBIT),
.TXINTDATAWIDTH (user_TXINTDATAWIDTH),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXSCRAM64B66BUSE (user_TXSCRAM64B66BUSE),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_WORD = 1;
defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b00110111100;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b00110111100;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 2;

```

```

defparam user_instance_name.CLK_COR_8B10B_DE = "FALSE";
defparam user_instance_name.CLK_COR_MAX_LAT = 36;
defparam user_instance_name.CLK_COR_MIN_LAT = 28;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00100011100;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00100011100;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_DROP = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 2;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b0001111111;
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1010000011;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0101111100;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.PMA_PWR_CNTRL = 8'b11111111;
defparam user_instance_name.PMA_SPEED = "25_20";
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.TX_BUFFER_USE = "TRUE";

```

## GT10\_AURORA\_4 Verilog Code

```

GT10_AURORA_4 GT10_AURORA_4_name(
    .BREFCLKNOUT (user_BREFCLKNOUT),
    .BREFCLKPOUT (user_BREFCLKPOUT),
    .CHBONDDONE (user_CHBONDDONE),
    .CHBONDO (user_CHBONDO),
    .PMARXLOCK (user_PMARXLOCK),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCLKCORCNT (user_RXCLKCORCNT),
    .RXCOMMADET (user_RXCOMMADET),
    .RXDATA (user_RXDATA),
    .RXDISPERR (user_RXDISPERR),
    .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
    .RXNOTINTABLE (user_RXNOTINTABLE),
    .RXREALIGN (user_RXREALIGN),
    .RXRECCLK (user_RXRECCLK),
    .RXRUNDISP (user_RXRUNDISP),
    .TXBUFERR (user_TXBUFERR),
    .TXKERR (user_TXKERR),
    .TXN (user_TXN),
    .TXOUTCLK (user_TXOUTCLK),

```

```
.TXP (user_TXP),
.TXRUNDISP (user_TXRUNDISP),

.BREFCLKNIN (user_BREFCLKNIN),
.BREFCLKPIN (user_BREFCLKPIN),
.CHBONDI (user_CHBONDI),
.ENCHANSYNC (user_ENCHANSYNC),
.ENMCOMMAALIGN (user_ENMCOMMAALIGN),
.ENPCOMMAALIGN (user_ENPCOMMAALIGN),
.LOOPBACK (user_LOOPBACK),
.PMAINIT (user_PMAINIT),
.PMAREGADDR (user_PMAREGADDR),
.PMAREGDATAIN (user_PMAREGDATAIN),
.PMAREGRW (user_PMAREGRW),
.PMAREGSTROBE (user_PMAREGSTROBE),
.PMARXLOCKSEL (user_PMARXLOCKSEL),
.POWERDOWN (user_POWERDOWN),
.REFCLK (user_REFCLK),
.REFCLK2 (user_REFCLK2),
.REFCLKBSEL (user_REFCLKBSEL),
.REFCLKSEL (user_REFCLKSEL),
.RXBLOCKSYNC64B66BUSE (user_RXBLOCKSYNC64B66BUSE),
.RXCOMMADETUSE (user_RXCOMMADETUSE),
.RXDATAWIDTH (user_RXDATAWIDTH),
.RXDEC64B66BUSE (user_RXDEC64B66BUSE),
.RXDEC8B10BUSE (user_RXDEC8B10BUSE),
.RXDESCRAM64B66BUSE (user_RXDESCRAM64B66BUSE),
.RXIGNOREBTF (user_RXIGNOREBTF),
.RXINTDATAWIDTH (user_RXINTDATAWIDTH),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXSLIDE (user_RXSLIDE),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXDATAWIDTH (user_TXDATAWIDTH),
.TXENC64B66BUSE (user_TXENC64B66BUSE),
.TXENC8B10BUSE (user_TXENC8B10BUSE),
.TXGEARBOX64B66BUSE (user_TXGEARBOX64B66BUSE),
.TXINHIBIT (user_TXINHIBIT),
.TXINTDATAWIDTH (user_TXINTDATAWIDTH),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXSCRAM64B66BUSE (user_TXSCRAM64B66BUSE),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));
```







## GT10\_AURORAX\_n

### 10-Gigabit Transceiver for High-Speed I/O

#### Architectures Supported


GT10_AURORAX_n	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive*
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
*Supported for Virtex-II Pro X but not for Virtex-II or Virtex-II Pro.	

This Xilinx protocol 10-gigabit transceiver supports 4 and 8-byte data paths. The letter *n* represents number of bytes of the data path. Valid values are 4 or 8.


You can also set attributes for the primitives. See the *RocketIO Transceiver User Guide* for a description of these attributes and their default attribute values.

The following figures list the input and output ports for all values of *n*. For a description of each of the ports, see the *RocketIO Transceiver User Guide*.

GT10\_AURORAX\_4

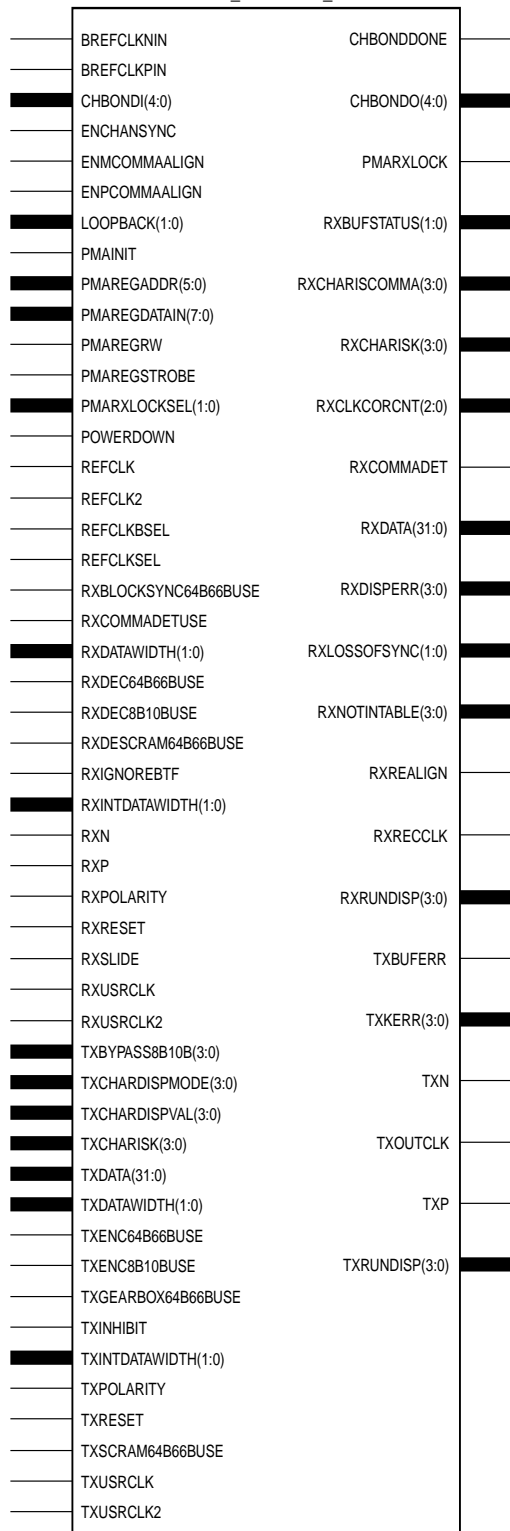

X10048

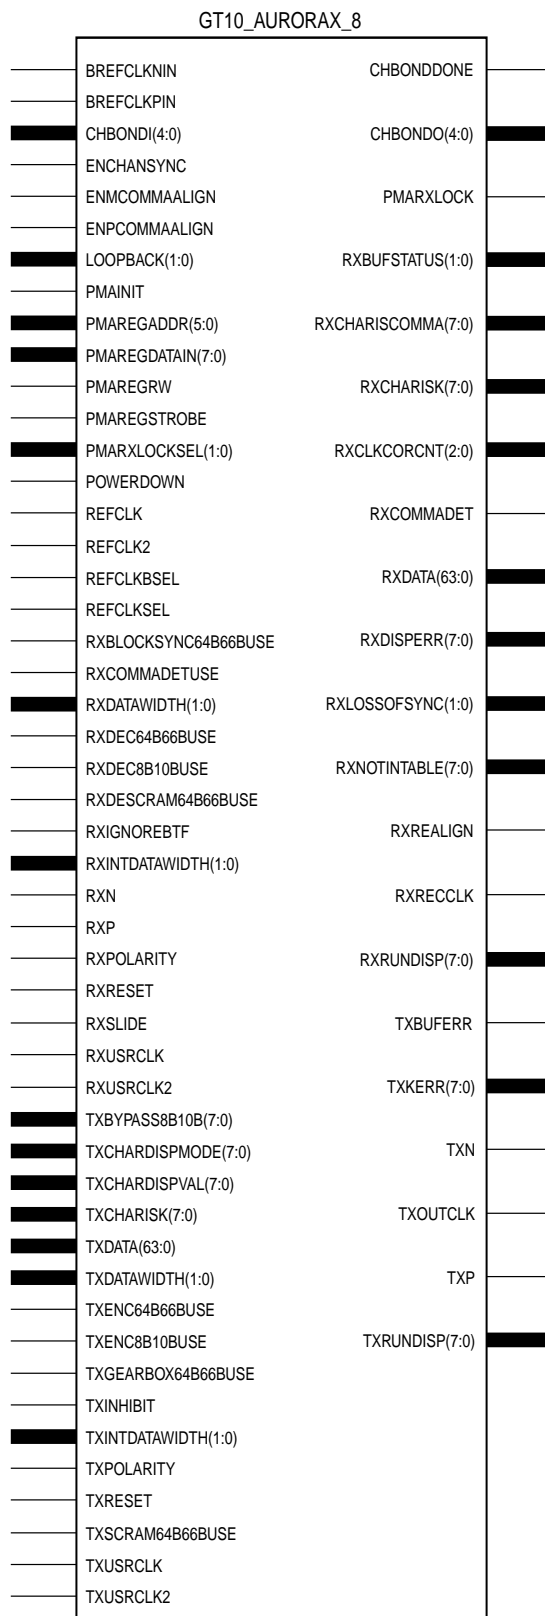

X10049

## Usage

This design element is instantiated rather than inferred in the design code.

## VHDL Instantiation Template

### GT10\_AURORAX\_4 VHDL Code

```
-- Component Attribute specification for GT10_AURORAX_4
-- should be placed after architecture declaration but
-- before the begin keyword

component GT10_AURORAX_4
-- synopsys translate_off
generic (
    CHAN_BOND_LIMIT           : integer := 16;
    CHAN_BOND_MODE            : string  := "OFF";
    CHAN_BOND_ONE_SHOT        : boolean := FALSE;
    CHAN_BOND_SEQ_1_1         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_2         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_3         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_4         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_MASK     : bit_vector := "0000";
    CHAN_BOND_SEQ_2_1         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_2         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_3         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_4         : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_MASK     : bit_vector := "0000";
    CHAN_BOND_SEQ_2_USE      : boolean := FALSE;
    CHAN_BOND_SEQ_LEN        : integer := 8;
    CHAN_BOND_64B66B_SV     : boolean := FALSE;
    CLK_COR_MAX_LAT          : integer := 36;
    CLK_COR_MIN_LAT          : integer := 28;
    CLK_COR_SEQ_1_1          : bit_vector := "10000011110";
    CLK_COR_SEQ_1_2          : bit_vector := "00000000000";
    CLK_COR_SEQ_1_3          : bit_vector := "00000000000";
    CLK_COR_SEQ_1_4          : bit_vector := "00000000000";
    CLK_COR_SEQ_1_MASK      : bit_vector := "0000";
    CLK_COR_SEQ_2_1          : bit_vector := "00000000000";
    CLK_COR_SEQ_2_2          : bit_vector := "00000000000";
    CLK_COR_SEQ_2_3          : bit_vector := "00000000000";
    CLK_COR_SEQ_2_4          : bit_vector := "00000000000";
    CLK_COR_SEQ_2_MASK      : bit_vector := "0000";
    CLK_COR_SEQ_2_USE        : boolean := TRUE;
    CLK_COR_SEQ_DROP        : boolean := FALSE;
    CLK_COR_SEQ_LEN         : integer := 8;
    CLK_CORRECT_USE         : boolean := TRUE;
    PMA_PWR_CNTRL           : bit_vector := "11111111";
    PMA_SPEED                : string  := "0_32";
    RX_BUFFER_USE           : boolean := TRUE;
    RX_LOS_INVALID_INCR     : integer := 1;
    RX_LOS_THRESHOLD        : integer := 4;
    RX_LOSS_OF_SYNC_FSM     : boolean := TRUE;
    SH_CNT_MAX              : integer := 64;
    SH_INVALID_CNT_MAX      : integer := 16;
    TX_BUFFER_USE           : boolean := TRUE);
```

```

-- synopsys translate_on
port (
    BREFCLKNOUT           : out std_ulogic;
    BREFCLKPOUT           : out std_ulogic;
    CHBONDDONE            : out std_ulogic;
    CHBONDO               : out std_logic_vector(4 downto 0);
    PMARXLOCK             : out std_ulogic;
    RXBUFSTATUS           : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA         : out std_logic_vector(3 downto 0);
    RXCHARISK             : out std_logic_vector(3 downto 0);
    RXCLKCORCNT           : out std_logic_vector(2 downto 0);
    RXCOMMADET            : out std_ulogic;
    RXDATA                : out std_logic_vector(31 downto 0);
    RXDISPERR             : out std_logic_vector(3 downto 0);
    RXLOSSOFSYNC          : out std_logic_vector(1 downto 0);
    RXNOTINTABLE          : out std_logic_vector(3 downto 0);
    RXREALIGN             : out std_ulogic;
    RXRECCLK              : out std_ulogic;
    RXRUNDISP             : out std_logic_vector(3 downto 0);
    TXBUFERR              : out std_ulogic;
    TXKERR                : out std_logic_vector(3 downto 0);
    TXN                   : out std_ulogic;
    TXOUTCLK              : out std_ulogic;
    TXP                   : out std_ulogic;
    TXRUNDISP             : out std_logic_vector(3 downto 0);
    BREFCLKNIN            : in std_ulogic;
    BREFCLKPIN            : in std_ulogic;
    CHBONDI               : in std_logic_vector(4 downto 0);
    ENCHANSYNC            : in std_ulogic;
    ENMCOMMAALIGN         : in std_ulogic;
    ENPCOMMAALIGN         : in std_ulogic;
    LOOPBACK              : in std_logic_vector(1 downto 0);
    PMAINIT               : in std_ulogic;
    PMAREGADDR            : in std_logic_vector(5 downto 0);
    PMAREGDATAIN          : in std_logic_vector(7 downto 0);
    PMAREGRW              : in std_ulogic;
    PMAREGSTROBE          : in std_ulogic;
    PMARXLOCKSEL          : in std_logic_vector(1 downto 0);
    POWERDOWN             : in std_ulogic;
    REFCLK                : in std_ulogic;
    REFCLK2               : in std_ulogic;
    REFCLKBSEL            : in std_ulogic;
    REFCLKSEL             : in std_ulogic;
    RXBLOCKSYNCS64B66BUSE : in std_ulogic;
    RXCOMMADETUSE         : in std_ulogic;
    RXDATAWIDTH           : in std_logic_vector(1 downto 0);
    RXDEC64B66BUSE        : in std_ulogic;
    RXDEC8B10BUSE         : in std_ulogic;
    RXDESCRAM64B66BUSE    : in std_ulogic;
    RXIGNOREBTF           : in std_ulogic;
    RXINTDATAWIDTH        : in std_logic_vector(1 downto 0);
    RXN                   : in std_ulogic;
    RXP                   : in std_ulogic;
    RXPOLARITY            : in std_ulogic;
    RXRESET               : in std_ulogic;
    RXSLIDE               : in std_ulogic;
    RXUSRCLK              : in std_ulogic;
    RXUSRCLK2             : in std_ulogic;

```

```

TXBYPASS8B10B           : in std_logic_vector(3 downto 0);
TXCHARDISPMODE          : in std_logic_vector(3 downto 0);
TXCHARDISPVAL           : in std_logic_vector(3 downto 0);
TXCHARISK               : in std_logic_vector(3 downto 0);
TXDATA                  : in std_logic_vector(31 downto 0);
TXDATAWIDTH             : in std_logic_vector(1 downto 0);
TXENC64B66BUSE         : in std_ulogic;
TXENC8B10BUSE          : in std_ulogic;
TXGEARBOX64B66BUSE     : in std_ulogic;
TXINHIBIT               : in std_ulogic;
TXINTDATAWIDTH         : in std_logic_vector(1 downto 0);
TXPOLARITY              : in std_ulogic;
TXRESET                 : in std_ulogic;
TXSCRAM64B66BUSE       : in std_ulogic;
TXUSRCLK                : in std_ulogic;
TXUSRCLK2               : in std_ulogic);

```

```
end component;
```

```

-- Component Attribute specification for GT10_AURORAX_4
-- should be placed after architecture declaration but
-- before the begin keyword

```

```
-- Enter constraints here
```

```

-- Component Instantiation for GT10_AURORAX_4 should be placed
-- in architecture after the begin keyword

```

```
GT10_AURORAX_4_INSTANCE_NAME : GT10_AURORAX_4
```

```
-- synopsys translate_off
```

```
generic map (
```

```

  CHAN_BOND_LIMIT           => integer_value,
  CHAN_BOND_MODE            => string_value,
  CHAN_BOND_ONE_SHOT        => boolean_value,
  CHAN_BOND_SEQ_1_1         => bit_value,
  CHAN_BOND_SEQ_1_2         => bit_value,
  CHAN_BOND_SEQ_1_3         => bit_value,
  CHAN_BOND_SEQ_1_4         => bit_value,
  CHAN_BOND_SEQ_1_MASK      => bit_value,
  CHAN_BOND_SEQ_2_1         => bit_value,
  CHAN_BOND_SEQ_2_2         => bit_value,
  CHAN_BOND_SEQ_2_3         => bit_value,
  CHAN_BOND_SEQ_2_4         => bit_value,
  CHAN_BOND_SEQ_2_MASK      => bit_value,
  CHAN_BOND_SEQ_2_USE       => boolean_value,
  CHAN_BOND_SEQ_LEN         => integer_value,
  CHAN_BOND_64B66B_SV      => boolean_value,
  CLK_COR_MAX_LAT           => integer_value,
  CLK_COR_MIN_LAT           => integer_value,
  CLK_COR_SEQ_1_1           => bit_value,
  CLK_COR_SEQ_1_2           => bit_value,
  CLK_COR_SEQ_1_3           => bit_value,
  CLK_COR_SEQ_1_4           => bit_value,
  CLK_COR_SEQ_1_MASK        => bit_value,
  CLK_COR_SEQ_2_1           => bit_value,
  CLK_COR_SEQ_2_2           => bit_value,
  CLK_COR_SEQ_2_3           => bit_value,
  CLK_COR_SEQ_2_4           => bit_value,

```

```

CLK_COR_SEQ_2_MASK           => bit_value,
CLK_COR_SEQ_2_USE           => boolean_value,
CLK_COR_SEQ_DROP            => boolean_value,
CLK_COR_SEQ_LEN             => integer_value,
CLK_CORRECT_USE             => boolean_value,
PMA_PWR_CNTRL               => bit_value,
PMA_SPEED                   => string_value,
RX_BUFFER_USE               => boolean_value,
RX_LOS_INVALID_INCR         => integer_value,
RX_LOS_THRESHOLD            => integer_value,
RX_LOSS_OF_SYNC_FSM         => boolean_value,
SH_CNT_MAX                  => integer_value,
SH_INVALID_CNT_MAX          => integer_value,
TX_BUFFER_USE               => boolean_value)

-- synopsys translate_on
port map (
  BREFCLKNOUT                => user_BREFCLKNOUT,
  BREFCLKPOUT                => user_BREFCLKPOUT,
  CHBONDDONE                 => user_CHBONDDONE,
  CHBONDO                    => user_CHBONDO,
  PMARXLOCK                  => user_PMARXLOCK,
  RXBUFSTATUS                => user_RXBUFSTATUS,
  RXCHARISCOMMA              => user_RXCHARISCOMMA,
  RXCHARISK                  => user_RXCHARISK,
  RXCLKCORCNT                => user_RXCLKCORCNT,
  RXCOMMADET                 => user_RXCOMMADET,
  RXDATA                     => user_RXDATA,
  RXDISPERR                  => user_RXDISPERR,
  RXLOSSOFSYNC               => user_RXLOSSOFSYNC,
  RXNOTINTABLE               => user_RXNOTINTABLE,
  RXREALIGN                  => user_RXREALIGN,
  RXRECCLK                   => user_RXRECCLK,
  RXRUNDISP                  => user_RXRUNDISP,
  TXBUFERR                   => user_TXBUFERR,
  TXKERR                     => user_TXKERR,
  TXN                        => user_TXN,
  TXOUTCLK                   => user_TXOUTCLK,
  TXP                        => user_TXP,
  TXRUNDISP                  => user_TXRUNDISP,
  BREFCLKNIN                 => user_BREFCLKNIN,
  BREFCLKPIN                 => user_BREFCLKPIN,
  CHBONDI                    => user_CHBONDI,
  ENCHANSYNC                 => user_ENCHANSYNC,
  ENMCOMMAALIGN              => user_ENMCOMMAALIGN,
  ENPCOMMAALIGN              => user_ENPCOMMAALIGN,
  LOOPBACK                   => user_LOOPBACK,
  PMAINIT                    => user_PMAINIT,
  PMAREGADDR                 => user_PMAREGADDR,
  PMAREGDATAIN               => user_PMAREGDATAIN,
  PMAREGRW                   => user_PMAREGRW,
  PMAREGSTROBE               => user_PMAREGSTROBE,
  PMARXLOCKSEL               => user_PMARXLOCKSEL,
  POWERDOWN                  => user_POWERDOWN,
  REFCLK                     => user_REFCLK,
  REFCLK2                    => user_REFCLK2,
  REFCLKBSEL                 => user_REFCLKBSEL,
  REFCLKSEL                  => user_REFCLKSEL,

```

```

RXBLOCKSYNC64B66BUSE      => user_RXBLOCKSYNC64B66BUSE,
RXCOMMADETUSE             => user_RXCOMMADETUSE,
RXDATAWIDTH               => user_RXDATAWIDTH,
RXDEC64B66BUSE           => user_RXDEC64B66BUSE,
RXDEC8B10BUSE            => user_RXDEC8B10BUSE,
RXDESCRAM64B66BUSE       => user_RXDESCRAM64B66BUSE,
RXIGNOREBTF              => user_RXIGNOREBTF,
RXINTDATAWIDTH           => user_RXINTDATAWIDTH,
RXN                       => user_RXN,
RXP                       => user_RXP,
RXPOLARITY               => user_RXPOLARITY,
RXRESET                  => user_RXRESET,
RXSLIDE                  => user_RXSLIDE,
RXUSRCLK                 => user_RXUSRCLK,
RXUSRCLK2                => user_RXUSRCLK2,
TXBYPASS8B10B           => user_TXBYPASS8B10B,
TXCHARDISPMODE           => user_TXCHARDISPMODE,
TXCHARDISPVAL            => user_TXCHARDISPVAL,
TXCHARISK                => user_TXCHARISK,
TXDATA                   => user_TXDATA,
TXDATAWIDTH              => user_TXDATAWIDTH,
TXENC64B66BUSE           => user_TXENC64B66BUSE,
TXENC8B10BUSE            => user_TXENC8B10BUSE,
TXGEARBOX64B66BUSE      => user_TXGEARBOX64B66BUSE,
TXINHIBIT                => user_TXINHIBIT,
TXINTDATAWIDTH           => user_TXINTDATAWIDTH,
TXPOLARITY               => user_TXPOLARITY,
TXRESET                  => user_TXRESET,
TXSCRAM64B66BUSE        => user_TXSCRAM64B66BUSE,
TXUSRCLK                 => user_TXUSRCLK,
TXUSRCLK2                => user_TXUSRCLK2);

```

## GT10\_AURORAX\_8 Code

```

-- Component Attribute specification for GT10_AURORAX_8
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

component GT10_AURORAX_8
-- synopsys translate_off
generic (
    CHAN_BOND_LIMIT          : integer := 16;
    CHAN_BOND_MODE           : string  := "OFF";
    CHAN_BOND_ONE_SHOT      : boolean  := FALSE;
    CHAN_BOND_SEQ_1_1       : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_2       : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_3       : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_4       : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_MASK    : bit_vector := "0000";
    CHAN_BOND_SEQ_2_1       : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_2       : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_3       : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_4       : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_MASK    : bit_vector := "0000";
    CHAN_BOND_SEQ_2_USE     : boolean  := FALSE;
    CHAN_BOND_SEQ_LEN       : integer  := 8;
    CHAN_BOND_64B66B_SV    : boolean  := FALSE;

```



```

CLK_COR_MAX_LAT           : integer := 36;
CLK_COR_MIN_LAT           : integer := 28;
CLK_COR_SEQ_1_1           : bit_vector := "10000011110";
CLK_COR_SEQ_1_2           : bit_vector := "00000000000";
CLK_COR_SEQ_1_3           : bit_vector := "00000000000";
CLK_COR_SEQ_1_4           : bit_vector := "00000000000";
CLK_COR_SEQ_1_MASK       : bit_vector := "0000";
CLK_COR_SEQ_2_1           : bit_vector := "00000000000";
CLK_COR_SEQ_2_2           : bit_vector := "00000000000";
CLK_COR_SEQ_2_3           : bit_vector := "00000000000";
CLK_COR_SEQ_2_4           : bit_vector := "00000000000";
CLK_COR_SEQ_2_MASK       : bit_vector := "0000";
CLK_COR_SEQ_2_USE        : boolean := TRUE;
CLK_COR_SEQ_DROP         : boolean := FALSE;
CLK_COR_SEQ_LEN          : integer := 8;
CLK_CORRECT_USE          : boolean := TRUE;
PMA_PWR_CNTRL            : bit_vector := "11111111";
PMA_SPEED                 : string := "0_64";
RX_BUFFER_USE            : boolean := TRUE;
RX_LOS_INVALID_INCR      : integer := 1;
RX_LOS_THRESHOLD         : integer := 4;
RX_LOSS_OF_SYNC_FSM      : boolean := TRUE;
SH_CNT_MAX               : integer := 64;
SH_INVALID_CNT_MAX       : integer := 16;
TX_BUFFER_USE            : boolean := TRUE);

-- synopsys translate_on
port (
    BREFCLKNOUT            : out std_ulogic;
    BREFCLKPOUT            : out std_ulogic;
    CHBONDDONE             : out std_ulogic;
    CHBONDO                : out std_logic_vector(4 downto 0);
    PMARXLOCK              : out std_ulogic;
    RXBUFSTATUS            : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA          : out std_logic_vector(7 downto 0);
    RXCHARISK              : out std_logic_vector(7 downto 0);
    RXCLKCORCNT            : out std_logic_vector(2 downto 0);
    RXCOMMADET             : out std_ulogic;
    RXDATA                 : out std_logic_vector(63 downto 0);
    RXDISPERR              : out std_logic_vector(7 downto 0);
    RXLOSSOFSYNC           : out std_logic_vector(1 downto 0);
    RXNOTINTABLE           : out std_logic_vector(7 downto 0);
    RXREALIGN              : out std_ulogic;
    RXRECCLK               : out std_ulogic;
    RXRUNDISP              : out std_logic_vector(7 downto 0);
    TXBUFERR               : out std_ulogic;
    TXKERR                 : out std_logic_vector(7 downto 0);
    TXN                    : out std_ulogic;
    TXOUTCLK               : out std_ulogic;
    TXP                    : out std_ulogic;
    TXRUNDISP              : out std_logic_vector(7 downto 0);
    BREFCLKNIN             : in std_ulogic;
    BREFCLKPIN             : in std_ulogic;
    CHBONDI                : in std_logic_vector(4 downto 0);
    ENCHANSYNC             : in std_ulogic;
    ENMCOMMAALIGN          : in std_ulogic;
    ENPCOMMAALIGN          : in std_ulogic;
    LOOPBACK               : in std_logic_vector(1 downto 0);

```

```

        PMAINIT                : in std_ulogic;
        PMAREGADDR              : in std_logic_vector(5 downto 0);
        PMAREGDATAIN            : in std_logic_vector(7 downto 0);
        PMAREGRW                : in std_ulogic;
        PMAREGSTROBE            : in std_ulogic;
        PMARXLOCKSEL            : in std_logic_vector(1 downto 0);
        POWERDOWN               : in std_ulogic;
        REFCLK                   : in std_ulogic;
        REFCLK2                  : in std_ulogic;
        REFCLKBSEL              : in std_ulogic;
        REFCLKSEL                : in std_ulogic;
        RXBLOCKSYNCP64B66BUSE   : in std_ulogic;
        RXCOMMADETUSE           : in std_ulogic;
        RXDATAWIDTH              : in std_logic_vector(1 downto 0);
        RXDEC64B66BUSE          : in std_ulogic;
        RXDEC8B10BUSE           : in std_ulogic;
        RXDESCRAM64B66BUSE     : in std_ulogic;
        RXIGNOREBTF             : in std_ulogic;
        RXINTDATAWIDTH          : in std_logic_vector(1 downto 0);
        RXN                      : in std_ulogic;
        RXP                      : in std_ulogic;
        RXPOLARITY              : in std_ulogic;
        RXRESET                  : in std_ulogic;
        RXSLIDE                  : in std_ulogic;
        RXUSRCLK                 : in std_ulogic;
        RXUSRCLK2                : in std_ulogic;
        TXBYPASS8B10B           : in std_logic_vector(7 downto 0);
        TXCHARDISPMODE          : in std_logic_vector(7 downto 0);
        TXCHARDISPVAL           : in std_logic_vector(7 downto 0);
        TXCHARISK                : in std_logic_vector(7 downto 0);
        TXDATA                   : in std_logic_vector(63 downto 0);
        TXDATAWIDTH              : in std_logic_vector(1 downto 0);
        TXENC64B66BUSE          : in std_ulogic;
        TXENC8B10BUSE           : in std_ulogic;
        TXGEARBOX64B66BUSE     : in std_ulogic;
        TXINHIBIT                : in std_ulogic;
        TXINTDATAWIDTH          : in std_logic_vector(1 downto 0);
        TXPOLARITY              : in std_ulogic;
        TXRESET                  : in std_ulogic;
        TXSCRAM64B66BUSE       : in std_ulogic;
        TXUSRCLK                 : in std_ulogic;
        TXUSRCLK2                : in std_ulogic);

```

```
end component;
```

```

-- Component Attribute specification for GT10_AURORAX_8
-- should be placed after architecture declaration but
-- before the begin keyword

```

```
-- Enter constraints here
```

```

-- Component Instantiation for GT10_AURORAX_8 should be placed
-- in architecture after the begin keyword

```

```

GT10_AURORAX_8_INSTANCE_NAME : GT10_AURORAX_8
-- synopsys translate_off
generic map (
    CHAN_BOND_LIMIT            => integer_value,

```

```

CHAN_BOND_MODE                => string_value,
CHAN_BOND_ONE_SHOT           => boolean_value,
CHAN_BOND_SEQ_1_1            => bit_value,
CHAN_BOND_SEQ_1_2            => bit_value,
CHAN_BOND_SEQ_1_3            => bit_value,
CHAN_BOND_SEQ_1_4            => bit_value,
CHAN_BOND_SEQ_1_MASK         => bit_value,
CHAN_BOND_SEQ_2_1            => bit_value,
CHAN_BOND_SEQ_2_2            => bit_value,
CHAN_BOND_SEQ_2_3            => bit_value,
CHAN_BOND_SEQ_2_4            => bit_value,
CHAN_BOND_SEQ_2_MASK         => bit_value,
CHAN_BOND_SEQ_2_USE          => boolean_value,
CHAN_BOND_SEQ_LEN            => integer_value,
CHAN_BOND_64B66B_SV         => boolean_value,
CLK_COR_MAX_LAT              => integer_value,
CLK_COR_MIN_LAT              => integer_value,
CLK_COR_SEQ_1_1              => bit_value,
CLK_COR_SEQ_1_2              => bit_value,
CLK_COR_SEQ_1_3              => bit_value,
CLK_COR_SEQ_1_4              => bit_value,
CLK_COR_SEQ_1_MASK          => bit_value,
CLK_COR_SEQ_2_1              => bit_value,
CLK_COR_SEQ_2_2              => bit_value,
CLK_COR_SEQ_2_3              => bit_value,
CLK_COR_SEQ_2_4              => bit_value,
CLK_COR_SEQ_2_MASK          => bit_value,
CLK_COR_SEQ_2_USE           => boolean_value,
CLK_COR_SEQ_DROP             => boolean_value,
CLK_COR_SEQ_LEN              => integer_value,
CLK_CORRECT_USE              => boolean_value,
PMA_PWR_CNTRL                => bit_value,
PMA_SPEED                     => string_value,
RX_BUFFER_USE                 => boolean_value,
RX_LOS_INVALID_INCR          => integer_value,
RX_LOS_THRESHOLD             => integer_value,
RX_LOSS_OF_SYNC_FSM         => boolean_value,
SH_CNT_MAX                    => integer_value,
SH_INVALID_CNT_MAX           => integer_value,
TX_BUFFER_USE                 => boolean_value)

-- synopsys translate_on
port map (
  BREFCLKNOUT                  => user_BREFCLKNOUT,
  BREFCLKPOUT                  => user_BREFCLKPOUT,
  CHBONDDONE                    => user_CHBONDDONE,
  CHBONDO                       => user_CHBONDO,
  PMARXLOCK                     => user_PMARXLOCK,
  RXBUFSTATUS                   => user_RXBUFSTATUS,
  RXCHARISCOMMA                 => user_RXCHARISCOMMA,
  RXCHARISK                      => user_RXCHARISK,
  RXCLKCORCNT                    => user_RXCLKCORCNT,
  RXCOMMADET                     => user_RXCOMMADET,
  RXDATA                          => user_RXDATA,
  RXDISPERR                       => user_RXDISPERR,
  RXLOSSOFSYNC                   => user_RXLOSSOFSYNC,
  RXNOTINTABLE                   => user_RXNOTINTABLE,
  RXREALIGN                       => user_RXREALIGN,

```

```

RXRECCLK                => user_RXRECCLK ,
RXRUNDISP               => user_RXRUNDISP ,
TXBUFERR                => user_TXBUFERR ,
TXKERR                  => user_TXKERR ,
TXN                     => user_TXN ,
TXOUTCLK                => user_TXOUTCLK ,
TXP                     => user_TXP ,
TXRUNDISP               => user_TXRUNDISP ,
BREFCLKKNIN            => user_BREFCLKKNIN ,
BREFCLKPIN              => user_BREFCLKPIN ,
CHBONDI                 => user_CHBONDI ,
ENCHANSYNC              => user_ENCHANSYNC ,
ENMCOMMAALIGN           => user_ENMCOMMAALIGN ,
ENPCOMMAALIGN           => user_ENPCOMMAALIGN ,
LOOPBACK                => user_LOOPBACK ,
PMAINIT                 => user_PMAINIT ,
PMAREGADDR              => user_PMAREGADDR ,
PMAREGDATAIN            => user_PMAREGDATAIN ,
PMAREGRW                 => user_PMAREGRW ,
PMAREGSTROBE            => user_PMAREGSTROBE ,
PMARXLOCKSEL            => user_PMARXLOCKSEL ,
POWERDOWN               => user_POWERDOWN ,
REFCLK                  => user_REFCLK ,
REFCLK2                 => user_REFCLK2 ,
REFCLKBSEL              => user_REFCLKBSEL ,
REFCLKSEL               => user_REFCLKSEL ,
RXBLOCKSYNC64B66BUSE   => user_RXBLOCKSYNC64B66BUSE ,
RXCOMMADETUSE           => user_RXCOMMADETUSE ,
RXDATAWIDTH             => user_RXDATAWIDTH ,
RXDEC64B66BUSE          => user_RXDEC64B66BUSE ,
RXDEC8B10BUSE           => user_RXDEC8B10BUSE ,
RXDESCRAM64B66BUSE     => user_RXDESCRAM64B66BUSE ,
RXIGNOREBTF             => user_RXIGNOREBTF ,
RXINTDATAWIDTH          => user_RXINTDATAWIDTH ,
RXN                     => user_RXN ,
RXP                     => user_RXP ,
RXPOLARITY              => user_RXPOLARITY ,
RXRESET                 => user_RXRESET ,
RXSLIDE                 => user_RXSLIDE ,
RXUSRCLK                => user_RXUSRCLK ,
RXUSRCLK2               => user_RXUSRCLK2 ,
TXBYPASS8B10B           => user_TXBYPASS8B10B ,
TXCHARDISPMODE          => user_TXCHARDISPMODE ,
TXCHARDISPVAL           => user_TXCHARDISPVAL ,
TXCHARISK                => user_TXCHARISK ,
TXDATA                  => user_TXDATA ,
TXDATAWIDTH             => user_TXDATAWIDTH ,
TXENC64B66BUSE          => user_TXENC64B66BUSE ,
TXENC8B10BUSE           => user_TXENC8B10BUSE ,
TXGEARBOX64B66BUSE     => user_TXGEARBOX64B66BUSE ,
TXINHIBIT               => user_TXINHIBIT ,
TXINTDATAWIDTH          => user_TXINTDATAWIDTH ,
TXPOLARITY              => user_TXPOLARITY ,
TXRESET                 => user_TXRESET ,
TXSCRAM64B66BUSE       => user_TXSCRAM64B66BUSE ,
TXUSRCLK                => user_TXUSRCLK ,
TXUSRCLK2               => user_TXUSRCLK2 ) ;

```

## Verilog Instantiation Templates

### GT10\_AURORAX\_4 Verilog Code

```

GT10_AURORAX_4 GT10_AURORAX_4_name(
  .BREFCLKNOUT (user_BREFCLKNOUT),
  .BREFCLKPOUT (user_BREFCLKPOUT),
  .CHBONDDONE (user_CHBONDDONE),
  .CHBONDO (user_CHBONDO),
  .PMARXLOCK (user_PMARXLOCK),
  .RXBUFSTATUS (user_RXBUFSTATUS),
  .RXCHARISCOMMA (user_RXCHARISCOMMA),
  .RXCHARISK (user_RXCHARISK),
  .RXCLKCORCNT (user_RXCLKCORCNT),
  .RXCOMMADET (user_RXCOMMADET),
  .RXDATA (user_RXDATA),
  .RXDISPERR (user_RXDISPERR),
  .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
  .RXNOTINTABLE (user_RXNOTINTABLE),
  .RXREALIGN (user_RXREALIGN),
  .RXRECCLK (user_RXRECCLK),
  .RXRUNDISP (user_RXRUNDISP),
  .TXBUFERR (user_TXBUFERR),
  .TXKERR (user_TXKERR),
  .TXN (user_TXN),
  .TXOUTCLK (user_TXOUTCLK),
  .TXP (user_TXP),
  .TXRUNDISP (user_TXRUNDISP),

  .BREFCLKNIN (user_BREFCLKNIN),
  .BREFCLKPIN (user_BREFCLKPIN),
  .CHBONDI (user_CHBONDI),
  .ENCHANSYNC (user_ENCHANSYNC),
  .ENMCOMMAALIGN (user_ENMCOMMAALIGN),
  .ENPCOMMAALIGN (user_ENPCOMMAALIGN),
  .LOOPBACK (user_LOOPBACK),
  .PMAINIT (user_PMAINIT),
  .PMAREGADDR (user_PMAREGADDR),
  .PMAREGDATAIN (user_PMAREGDATAIN),
  .PMAREGRW (user_PMAREGRW),
  .PMAREGSTROBE (user_PMAREGSTROBE),
  .PMARXLOCKSEL (user_PMARXLOCKSEL),
  .POWERDOWN (user_POWERDOWN),
  .REFCLK (user_REFCLK),
  .REFCLK2 (user_REFCLK2),
  .REFCLKBSEL (user_REFCLKBSEL),
  .REFCLKSEL (user_REFCLKSEL),
  .RXBLOCKSYNC64B66BUSE (user_RXBLOCKSYNC64B66BUSE),
  .RXCOMMADETUSE (user_RXCOMMADETUSE),
  .RXDATAWIDTH (user_RXDATAWIDTH),
  .RXDEC64B66BUSE (user_RXDEC64B66BUSE),
  .RXDEC8B10BUSE (user_RXDEC8B10BUSE),
  .RXDESCRAM64B66BUSE (user_RXDESCRAM64B66BUSE),
  .RXIGNOREBTF (user_RXIGNOREBTF),
  .RXINTDATAWIDTH (user_RXINTDATAWIDTH),
  .RXN (user_RXN),
  .RXP (user_RXP),

```

```

.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXSLIDE (user_RXSLIDE),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXDATAWIDTH (user_TXDATAWIDTH),
.TXENC64B66BUSE (user_TXENC64B66BUSE),
.TXENC8B10BUSE (user_TXENC8B10BUSE),
.TXGEARBOX64B66BUSE (user_TXGEARBOX64B66BUSE),
.TXINHIBIT (user_TXINHIBIT),
.TXINTDATAWIDTH (user_TXINTDATAWIDTH),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXSCRAM64B66BUSE (user_TXSCRAM64B66BUSE),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 8;
defparam user_instance_name.CHAN_BOND_64B66B_SV = "FALSE";
defparam user_instance_name.CLK_COR_MAX_LAT = 36;
defparam user_instance_name.CLK_COR_MIN_LAT = 28;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b10000011110;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "TRUE";
defparam user_instance_name.CLK_COR_SEQ_DROP = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 8;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.PMA_PWR_CNTRL = 8'b11111111;
defparam user_instance_name.PMA_SPEED = "0_32";
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;

```

```

defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SH_CNT_MAX = 64;
defparam user_instance_name.SH_INVALID_CNT_MAX = 16;
defparam user_instance_name.TX_BUFFER_USE = "TRUE";

```

## GT10\_AURORAX\_8 Verilog Code

```

GT10_AURORAX_8 GT10_AURORAX_8_name(
    .BREFCLKNOUT (user_BREFCLKNOUT),
    .BREFCLKPOUT (user_BREFCLKPOUT),
    .CHBONDDONE (user_CHBONDDONE),
    .CHBONDO (user_CHBONDO),
    .PMARXLOCK (user_PMARXLOCK),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCLKCORCNT (user_RXCLKCORCNT),
    .RXCOMMADET (user_RXCOMMADET),
    .RXDATA (user_RXDATA),
    .RXDISPERR (user_RXDISPERR),
    .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
    .RXNOTINTABLE (user_RXNOTINTABLE),
    .RXREALIGN (user_RXREALIGN),
    .RXRECCLK (user_RXRECCLK),
    .RXRUNDISP (user_RXRUNDISP),
    .TXBUFERR (user_TXBUFERR),
    .TXKERR (user_TXKERR),
    .TXN (user_TXN),
    .TXOUTCLK (user_TXOUTCLK),
    .TXP (user_TXP),
    .TXRUNDISP (user_TXRUNDISP),

    .BREFCLKNIN (user_BREFCLKNIN),
    .BREFCLKPIN (user_BREFCLKPIN),
    .CHBONDI (user_CHBONDI),
    .ENCHANSYNC (user_ENCHANSYNC),
    .ENMCOMMAALIGN (user_ENMCOMMAALIGN),
    .ENPCOMMAALIGN (user_ENPCOMMAALIGN),
    .LOOPBACK (user_LOOPBACK),
    .PMAINIT (user_PMAINIT),
    .PMAREGADDR (user_PMAREGADDR),
    .PMAREGDATAIN (user_PMAREGDATAIN),
    .PMAREGRW (user_PMAREGRW),
    .PMAREGSTROBE (user_PMAREGSTROBE),
    .PMARXLOCKSEL (user_PMARXLOCKSEL),
    .POWERDOWN (user_POWERDOWN),
    .REFCLK (user_REFCLK),
    .REFCLK2 (user_REFCLK2),
    .REFCLKBSEL (user_REFCLKBSEL),
    .REFCLKSEL (user_REFCLKSEL),
    .RXBLOCKSYNC64B66BUSE (user_RXBLOCKSYNC64B66BUSE),
    .RXCOMMADETUSE (user_RXCOMMADETUSE),
    .RXDATAWIDTH (user_RXDATAWIDTH),
    .RXDEC64B66BUSE (user_RXDEC64B66BUSE),
    .RXDEC8B10BUSE (user_RXDEC8B10BUSE),
    .RXDESCRAM64B66BUSE (user_RXDESCRAM64B66BUSE),
    .RXIGNOREBTF (user_RXIGNOREBTF),

```

```

.RXINTDATAWIDTH (user_RXINTDATAWIDTH),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXSLIDE (user_RXSLIDE),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXDATAWIDTH (user_TXDATAWIDTH),
.TXENC64B66BUSE (user_TXENC64B66BUSE),
.TXENC8B10BUSE (user_TXENC8B10BUSE),
.TXGEARBOX64B66BUSE (user_TXGEARBOX64B66BUSE),
.TXINHIBIT (user_TXINHIBIT),
.TXINTDATAWIDTH (user_TXINTDATAWIDTH),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXSCRAM64B66BUSE (user_TXSCRAM64B66BUSE),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 8;
defparam user_instance_name.CHAN_BOND_64B66B_SV = "FALSE";
defparam user_instance_name.CLK_COR_MAX_LAT = 36;
defparam user_instance_name.CLK_COR_MIN_LAT = 28;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b10000011110;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "TRUE";
defparam user_instance_name.CLK_COR_SEQ_DROP = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 8;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.PMA_PWR_CNTRL = 8'b11111111;

```



```
defparam user_instance_name.PMA_SPEED = "0_64";
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SH_CNT_MAX = 64;
defparam user_instance_name.SH_INVALID_CNT_MAX = 16;
defparam user_instance_name.TX_BUFFER_USE = "TRUE";
```

## Commonly Used Constraints

None



## GT10\_CUSTOM


### 10-Gigabit Transceiver for High-Speed I/O

#### Architectures Supported

GT10_CUSTOM	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive*
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
*Supported for Virtex-II Pro X but not for Virtex-II or Virtex-II Pro.	

This 10-gigabit transceiver is fully customizable. You can also set attributes for the primitives. See the *RocketIO Transceiver User Guide* for a description of these attributes and their default attribute values.

The following figure lists the input and output ports for all values of  $n$ . For a description of each of the ports, see the *RocketIO Transceiver User Guide*.

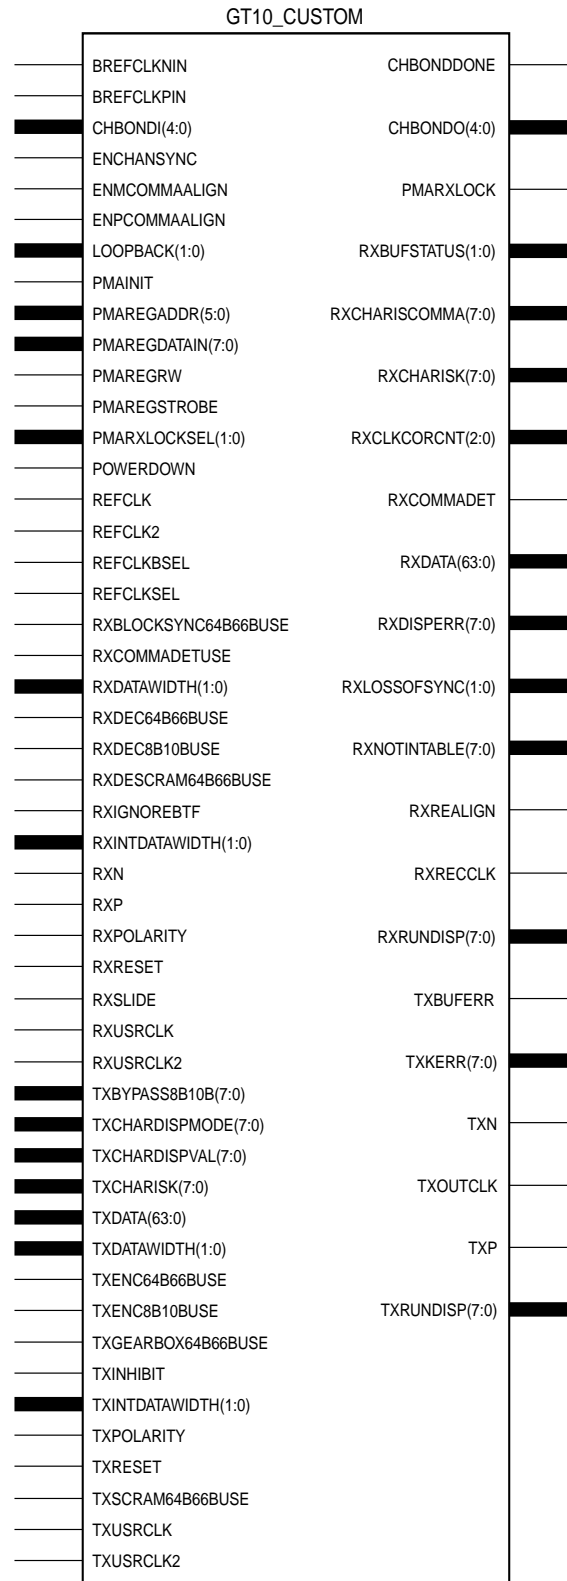

X10050

## Usage

This design element is instantiated rather than inferred in the design code.

## VHDL Instantiation Template

### GT10\_CUSTOM VHDL Code

```
-- Component Attribute specification for GT10_CUSTOM
-- should be placed after architecture declaration but
-- before the begin keyword

component GT10_CUSTOM
-- synopsys translate_off
generic (
    ALIGN_COMMA_WORD           : integer := 1;
    CHAN_BOND_LIMIT            : integer := 16;
    CHAN_BOND_MODE              : string := "OFF";
    CHAN_BOND_ONE_SHOT         : boolean := FALSE;
    CHAN_BOND_SEQ_1_1          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_2          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_3          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_4          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_MASK      : bit_vector := "0000";
    CHAN_BOND_SEQ_2_1          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_2          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_3          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_4          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_MASK      : bit_vector := "0000";
    CHAN_BOND_SEQ_2_USE       : boolean := FALSE;
    CHAN_BOND_SEQ_LEN         : integer := 1;
    CHAN_BOND_64B66B_SV       : boolean := FALSE;
    CLK_COR_8B10B_DE          : boolean := FALSE;
    CLK_COR_MAX_LAT           : integer := 36;
    CLK_COR_MIN_LAT           : integer := 28;
    CLK_COR_SEQ_1_1           : bit_vector := "000000000000";
    CLK_COR_SEQ_1_2           : bit_vector := "000000000000";
    CLK_COR_SEQ_1_3           : bit_vector := "000000000000";
    CLK_COR_SEQ_1_4           : bit_vector := "000000000000";
    CLK_COR_SEQ_1_MASK       : bit_vector := "0000";
    CLK_COR_SEQ_2_1           : bit_vector := "000000000000";
    CLK_COR_SEQ_2_2           : bit_vector := "000000000000";
    CLK_COR_SEQ_2_3           : bit_vector := "000000000000";
    CLK_COR_SEQ_2_4           : bit_vector := "000000000000";
    CLK_COR_SEQ_2_MASK       : bit_vector := "0000";
    CLK_COR_SEQ_2_USE        : boolean := FALSE;
    CLK_COR_SEQ_DROP          : boolean := FALSE;
    CLK_COR_SEQ_LEN          : integer := 1;
    CLK_CORRECT_USE           : boolean := TRUE;
    COMMA_10B_MASK            : bit_vector := "0001111111";
    DEC_MCOMMA_DETECT         : boolean := TRUE;
    DEC_PCOMMA_DETECT         : boolean := TRUE;
    DEC_VALID_COMMA_ONLY     : boolean := TRUE;
    MCOMMA_10B_VALUE          : bit_vector := "1010000011";
    MCOMMA_DETECT             : boolean := TRUE;
    PCOMMA_10B_VALUE          : bit_vector := "0101111100";
    PCOMMA_DETECT             : boolean := TRUE;

```

```

PMA_PWR_CNTRL           : bit_vector := "11111111";
PMA_SPEED               : string := "0_32";
RX_BUFFER_USE           : boolean := TRUE;
RX_LOS_INVALID_INCR     : integer := 1;
RX_LOS_THRESHOLD        : integer := 4;
RX_LOSS_OF_SYNC_FSM     : boolean := TRUE;
SH_CNT_MAX              : integer := 64;
SH_INVALID_CNT_MAX      : integer := 16;
TX_BUFFER_USE           : boolean := TRUE);

-- synopsys translate_on
port (
    BREFCLKNOUT           : out std_ulogic;
    BREFCLKPOUT           : out std_ulogic;
    CHBONDDONE            : out std_ulogic;
    CHBONDO               : out std_logic_vector(4 downto 0);
    PMARXLOCK             : out std_ulogic;
    RXBUFSTATUS           : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA         : out std_logic_vector(7 downto 0);
    RXCHARISK             : out std_logic_vector(7 downto 0);
    RXCLKCORCNT           : out std_logic_vector(2 downto 0);
    RXCOMMADET            : out std_ulogic;
    RXDATA                : out std_logic_vector(63 downto 0);
    RXDISPERR             : out std_logic_vector(7 downto 0);
    RXLOSSOFSYNC          : out std_logic_vector(1 downto 0);
    RXNOTINTABLE          : out std_logic_vector(7 downto 0);
    RXREALIGN             : out std_ulogic;
    RXRECLK               : out std_ulogic;
    RXRUNDISP             : out std_logic_vector(7 downto 0);
    TXBUFERR              : out std_ulogic;
    TXKERR                : out std_logic_vector(7 downto 0);
    TXN                   : out std_ulogic;
    TXOUTCLK              : out std_ulogic;
    TXP                   : out std_ulogic;
    TXRUNDISP             : out std_logic_vector(7 downto 0);
    BREFCLKNIN           : in std_ulogic;
    BREFCLKPIN           : in std_ulogic;
    CHBONDI               : in std_logic_vector(4 downto 0);
    ENCHANSYNC            : in std_ulogic;
    ENMCOMMAALIGN         : in std_ulogic;
    ENPCOMMAALIGN         : in std_ulogic;
    LOOPBACK              : in std_logic_vector(1 downto 0);
    PMAINIT               : in std_ulogic;
    PMAREGADDR            : in std_logic_vector(5 downto 0);
    PMAREGDATAIN          : in std_logic_vector(7 downto 0);
    PMAREGRW              : in std_ulogic;
    PMAREGSTROBE          : in std_ulogic;
    PMARXLOCKSEL          : in std_logic_vector(1 downto 0);
    POWERDOWN             : in std_ulogic;
    REFCLK                : in std_ulogic;
    REFCLK2               : in std_ulogic;
    REFCLKBSEL            : in std_ulogic;
    REFCLKSEL             : in std_ulogic;
    RXBLOCKSYNCS64B66BUSE : in std_ulogic;
    RXCOMMADETUSE         : in std_ulogic;
    RXDATAWIDTH           : in std_logic_vector(1 downto 0);
    RXDEC64B66BUSE        : in std_ulogic;
    RXDEC8B10BUSE         : in std_ulogic;

```

```

RXDESCRAM64B66BUSE      : in std_ulogic;
RXIGNOREBTF             : in std_ulogic;
RXINTDATAWIDTH          : in std_logic_vector(1 downto 0);
RXN                      : in std_ulogic;
RXP                      : in std_ulogic;
RXPOLARITY              : in std_ulogic;
RXRESET                 : in std_ulogic;
RXSLIDE                 : in std_ulogic;
RXUSRCLK                 : in std_ulogic;
RXUSRCLK2                : in std_ulogic;
TXBYPASS8B10B           : in std_logic_vector(7 downto 0);
TXCHARDISPMODE          : in std_logic_vector(7 downto 0);
TXCHARDISPVAL           : in std_logic_vector(7 downto 0);
TXCHARISK                : in std_logic_vector(7 downto 0);
TXDATA                  : in std_logic_vector(63 downto 0);
TXDATAWIDTH             : in std_logic_vector(1 downto 0);
TXENC64B66BUSE          : in std_ulogic;
TXENC8B10BUSE           : in std_ulogic;
TXGEARBOX64B66BUSE     : in std_ulogic;
TXINHIBIT               : in std_ulogic;
TXINTDATAWIDTH          : in std_logic_vector(1 downto 0);
TXPOLARITY              : in std_ulogic;
TXRESET                 : in std_ulogic;
TXSCRAM64B66BUSE       : in std_ulogic;
TXUSRCLK                 : in std_ulogic;
TXUSRCLK2                : in std_ulogic);

```

```
end component;
```

```
-- Component Attribute specification for GT10_CUSTOM
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter constraints here
```

```
-- Component Instantiation for GT10_CUSTOM should be placed
-- in architecture after the begin keyword
```

```
GT10_CUSTOM_INSTANCE_NAME : GT10_CUSTOM
```

```
-- synopsys translate_off
```

```
generic map (
```

```

ALIGN_COMMA_WORD        => integer_value,
CHAN_BOND_LIMIT          => integer_value,
CHAN_BOND_MODE           => string_value,
CHAN_BOND_ONE_SHOT      => boolean_value,
CHAN_BOND_SEQ_1_1        => bit_value,
CHAN_BOND_SEQ_1_2        => bit_value,
CHAN_BOND_SEQ_1_3        => bit_value,
CHAN_BOND_SEQ_1_4        => bit_value,
CHAN_BOND_SEQ_1_MASK     => bit_value,
CHAN_BOND_SEQ_2_1        => bit_value,
CHAN_BOND_SEQ_2_2        => bit_value,
CHAN_BOND_SEQ_2_3        => bit_value,
CHAN_BOND_SEQ_2_4        => bit_value,
CHAN_BOND_SEQ_2_MASK     => bit_value,
CHAN_BOND_SEQ_2_USE      => boolean_value,
CHAN_BOND_SEQ_LEN        => integer_value,
CHAN_BOND_64B66B_SV     => boolean_value,

```

```

CLK_COR_8B10B_DE           => boolean_value,
CLK_COR_MAX_LAT           => integer_value,
CLK_COR_MIN_LAT           => integer_value,
CLK_COR_SEQ_1_1           => bit_value,
CLK_COR_SEQ_1_2           => bit_value,
CLK_COR_SEQ_1_3           => bit_value,
CLK_COR_SEQ_1_4           => bit_value,
CLK_COR_SEQ_1_MASK        => bit_value,
CLK_COR_SEQ_2_1           => bit_value,
CLK_COR_SEQ_2_2           => bit_value,
CLK_COR_SEQ_2_3           => bit_value,
CLK_COR_SEQ_2_4           => bit_value,
CLK_COR_SEQ_2_MASK        => bit_value,
CLK_COR_SEQ_2_USE         => boolean_value,
CLK_COR_SEQ_DROP          => boolean_value,
CLK_COR_SEQ_LEN           => integer_value,
CLK_CORRECT_USE           => boolean_value,
COMMA_10B_MASK            => bit_value,
DEC_MCOMMA_DETECT         => boolean_value,
DEC_PCOMMA_DETECT         => boolean_value,
DEC_VALID_COMMA_ONLY      => boolean_value,
MCOMMA_10B_VALUE          => bit_value,
MCOMMA_DETECT             => boolean_value,
PCOMMA_10B_VALUE          => bit_value,
PCOMMA_DETECT             => boolean_value,
PMA_PWR_CNTRL             => bit_value,
PMA_SPEED                 => string_value,
RX_BUFFER_USE             => boolean_value,
RX_LOS_INVALID_INCR       => integer_value,
RX_LOS_THRESHOLD          => integer_value,
RX_LOSS_OF_SYNC_FSM       => boolean_value,
SH_CNT_MAX                => integer_value,
SH_INVALID_CNT_MAX        => integer_value,
TX_BUFFER_USE             => boolean_value)

-- synopsys translate_on
port map (
  BREFCLKNOUT              => user_BREFCLKNOUT,
  BREFCLKPOUT              => user_BREFCLKPOUT,
  CHBONDDONE               => user_CHBONDDONE,
  CHBONDO                  => user_CHBONDO,
  PMARXLOCK                => user_PMARXLOCK,
  RXBUFSTATUS              => user_RXBUFSTATUS,
  RXCHARISCOMMA            => user_RXCHARISCOMMA,
  RXCHARISK                => user_RXCHARISK,
  RXCLKCORCNT              => user_RXCLKCORCNT,
  RXCOMMADET               => user_RXCOMMADET,
  RXDATA                   => user_RXDATA,
  RXDISPERR                => user_RXDISPERR,
  RXLOSSOFSYNC             => user_RXLOSSOFSYNC,
  RXNOTINTABLE             => user_RXNOTINTABLE,
  RXREALIGN                => user_RXREALIGN,
  RXRECCLK                 => user_RXRECCLK,
  RXRUNDISP                => user_RXRUNDISP,
  TXBUFERR                 => user_TXBUFERR,
  TXKERR                   => user_TXKERR,
  TXN                       => user_TXN,
  TXOUTCLK                 => user_TXOUTCLK,

```



```

TXP                                => user_TXP ,
TXRUNDISP                          => user_TXRUNDISP ,
BREFCLKNIN                         => user_BREFCLKNIN ,
BREFCLKPIN                         => user_BREFCLKPIN ,
CHBONDI                            => user_CHBONDI ,
ENCHANSYNC                         => user_ENCHANSYNC ,
ENMCOMMAALIGN                     => user_ENMCOMMAALIGN ,
ENPCOMMAALIGN                     => user_ENPCOMMAALIGN ,
LOOPBACK                           => user_LOOPBACK ,
PMAINIT                            => user_PMAINIT ,
PMAREGADDR                         => user_PMAREGADDR ,
PMAREGDATAIN                      => user_PMAREGDATAIN ,
PMAREGRW                           => user_PMAREGRW ,
PMAREGSTROBE                      => user_PMAREGSTROBE ,
PMARXLOCKSEL                      => user_PMARXLOCKSEL ,
POWERDOWN                         => user_POWERDOWN ,
REFCLK                             => user_REFCLK ,
REFCLK2                           => user_REFCLK2 ,
REFCLKBSEL                        => user_REFCLKBSEL ,
REFCLKSEL                          => user_REFCLKSEL ,
RXBLOCKSYNC64B66BUSE             => user_RXBLOCKSYNC64B66BUSE ,
RXCOMMADETUSE                    => user_RXCOMMADETUSE ,
RXDATAWIDTH                      => user_RXDATAWIDTH ,
RXDEC64B66BUSE                   => user_RXDEC64B66BUSE ,
RXDEC8B10BUSE                    => user_RXDEC8B10BUSE ,
RXDESCRAM64B66BUSE              => user_RXDESCRAM64B66BUSE ,
RXIGNOREBTF                      => user_RXIGNOREBTF ,
RXINTDATAWIDTH                   => user_RXINTDATAWIDTH ,
RXN                                => user_RXN ,
RXP                                => user_RXP ,
RXPOLARITY                       => user_RXPOLARITY ,
RXRESET                           => user_RXRESET ,
RXSLIDE                           => user_RXSLIDE ,
RXUSRCLK                          => user_RXUSRCLK ,
RXUSRCLK2                        => user_RXUSRCLK2 ,
TXBYPASS8B10B                   => user_TXBYPASS8B10B ,
TXCHARDISPMODE                   => user_TXCHARDISPMODE ,
TXCHARDISPVAL                    => user_TXCHARDISPVAL ,
TXCHARISK                        => user_TXCHARISK ,
TXDATA                            => user_TXDATA ,
TXDATAWIDTH                      => user_TXDATAWIDTH ,
TXENC64B66BUSE                   => user_TXENC64B66BUSE ,
TXENC8B10BUSE                    => user_TXENC8B10BUSE ,
TXGEARBOX64B66BUSE              => user_TXGEARBOX64B66BUSE ,
TXINHIBIT                        => user_TXINHIBIT ,
TXINTDATAWIDTH                   => user_TXINTDATAWIDTH ,
TXPOLARITY                       => user_TXPOLARITY ,
TXRESET                           => user_TXRESET ,
TXSCRAM64B66BUSE                 => user_TXSCRAM64B66BUSE ,
TXUSRCLK                          => user_TXUSRCLK ,
TXUSRCLK2                        => user_TXUSRCLK2 ;

```

## Verilog Instantiation Template

### GT10\_CUSTOM Verilog Code

```

GT10_CUSTOM GT10_CUSTOM_name(
    .BREFCLKNOUT (user_BREFCLKNOUT),
    .BREFCLKPOUT (user_BREFCLKPOUT),
    .CHBONDDONE (user_CHBONDDONE),
    .CHBONDO (user_CHBONDO),
    .PMARXLOCK (user_PMARXLOCK),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCLKCORCNT (user_RXCLKCORCNT),
    .RXCOMMADET (user_RXCOMMADET),
    .RXDATA (user_RXDATA),
    .RXDISPERR (user_RXDISPERR),
    .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
    .RXNOTINTABLE (user_RXNOTINTABLE),
    .RXREALIGN (user_RXREALIGN),
    .RXRECCLK (user_RXRECCLK),
    .RXRUNDISP (user_RXRUNDISP),
    .TXBUFERR (user_TXBUFERR),
    .TXKERR (user_TXKERR),
    .TXN (user_TXN),
    .TXOUTCLK (user_TXOUTCLK),
    .TXP (user_TXP),
    .TXRUNDISP (user_TXRUNDISP),

    .BREFCLKNIN (user_BREFCLKNIN),
    .BREFCLKPIN (user_BREFCLKPIN),
    .CHBONDI (user_CHBONDI),
    .ENCHANSYNC (user_ENCHANSYNC),
    .ENMCOMMAALIGN (user_ENMCOMMAALIGN),
    .ENPCOMMAALIGN (user_ENPCOMMAALIGN),
    .LOOPBACK (user_LOOPBACK),
    .PMAINIT (user_PMAINIT),
    .PMAREGADDR (user_PMAREGADDR),
    .PMAREGDATAIN (user_PMAREGDATAIN),
    .PMAREGRW (user_PMAREGRW),
    .PMAREGSTROBE (user_PMAREGSTROBE),
    .PMARXLOCKSEL (user_PMARXLOCKSEL),
    .POWERDOWN (user_POWERDOWN),
    .REFCLK (user_REFCLK),
    .REFCLK2 (user_REFCLK2),
    .REFCLKBSEL (user_REFCLKBSEL),
    .REFCLKSEL (user_REFCLKSEL),
    .RXBLOCKSYNC64B66BUSE (user_RXBLOCKSYNC64B66BUSE),
    .RXCOMMADETUSE (user_RXCOMMADETUSE),
    .RXDATAWIDTH (user_RXDATAWIDTH),
    .RXDEC64B66BUSE (user_RXDEC64B66BUSE),
    .RXDEC8B10BUSE (user_RXDEC8B10BUSE),
    .RXDESCRAM64B66BUSE (user_RXDESCRAM64B66BUSE),
    .RXIGNOREBTF (user_RXIGNOREBTF),
    .RXINTDATAWIDTH (user_RXINTDATAWIDTH),
    .RXN (user_RXN),
    .RXP (user_RXP),

```

```

.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXSLIDE (user_RXSLIDE),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXDATAWIDTH (user_TXDATAWIDTH),
.TXENC64B66BUSE (user_TXENC64B66BUSE),
.TXENC8B10BUSE (user_TXENC8B10BUSE),
.TXGEARBOX64B66BUSE (user_TXGEARBOX64B66BUSE),
.TXINHIBIT (user_TXINHIBIT),
.TXINTDATAWIDTH (user_TXINTDATAWIDTH),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXSCRAM64B66BUSE (user_TXSCRAM64B66BUSE),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_WORD = 1;
defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 1;
defparam user_instance_name.CHAN_BOND_64B66B_SV = "FALSE";
defparam user_instance_name.CLK_COR_8B10B_DE = "FALSE";
defparam user_instance_name.CLK_COR_MAX_LAT = 36;
defparam user_instance_name.CLK_COR_MIN_LAT = 28;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_DROP = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 1;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b0001111111;
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";

```

```
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1010000011;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0101111100;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.PMA_PWR_CNTRL = 8'b11111111;
defparam user_instance_name.PMA_SPEED = "0_32";
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SH_CNT_MAX = 64;
defparam user_instance_name.SH_INVALID_CNT_MAX = 16;
defparam user_instance_name.TX_BUFFER_USE = "TRUE";
```

## GT10\_INFINIBAND\_n

### 10-Gigabit Transceiver for High-Speed I/O


#### Architectures Supported

GT10_INFINIBAND_n	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive*
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
*Supported for Virtex-II Pro X but not for Virtex-II or Virtex-II Pro.	


This Infiniband 10-gigabit transceiver supports 1, 2, and 4-byte data paths. The letter *n* represents number of bytes of the data path. Valid values are 1, 2 or 4.

You can also set attributes for the primitives. See the *RocketIO Transceiver User Guide* for a description of these attributes and their default attribute values.

The following figures lists the input and output ports for all values of *n*. For a description of each of the ports, see the *RocketIO Transceiver User Guide*.

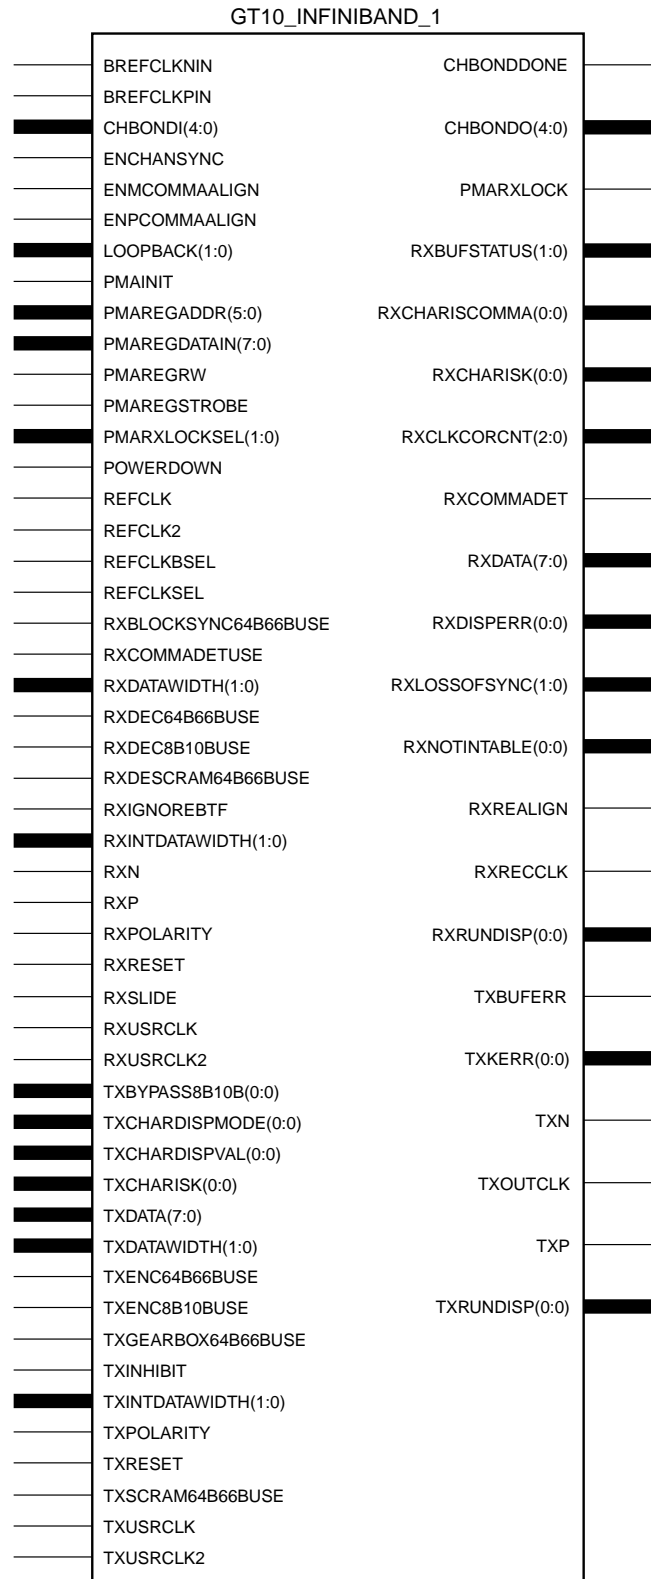


X10051

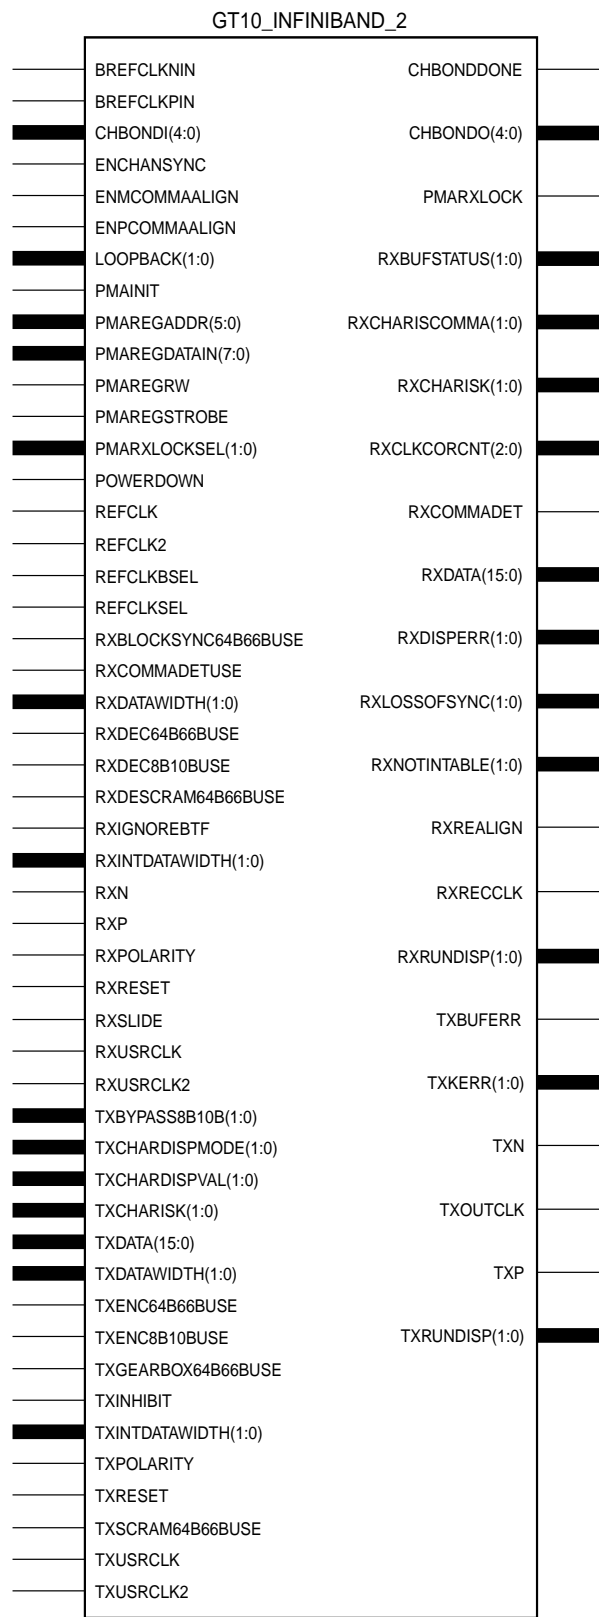

X10052

GT10\_INFINIBAND\_4

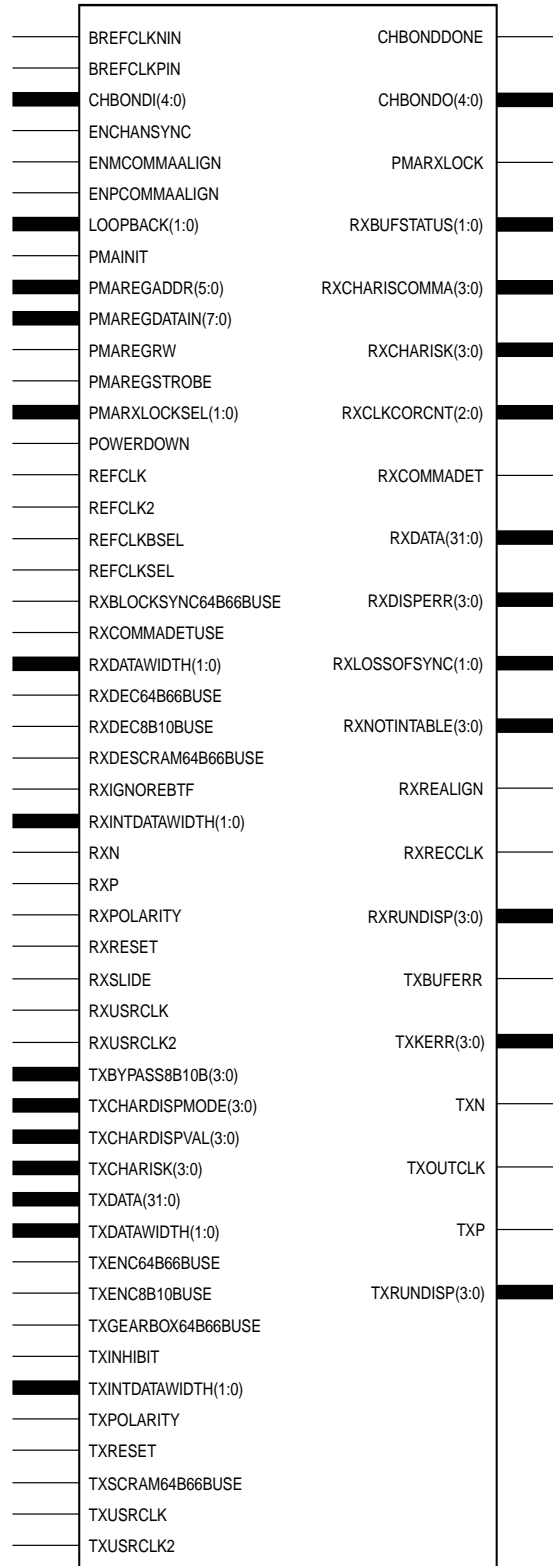

X10053







## GT10\_XAUI\_n

### 10-Gigabit Transceiver for High-Speed I/O


#### Architectures Supported

GT10_XAUI_n	
Spartan-II, Spartan-III	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive*
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
*Supported for Virtex-II Pro but not for Virtex-II or Virtex-II Pro X.	


This XAUI 10-gigabit transceiver supports 1, 2, and 4-byte data paths. The letter *n* represents number of bytes of the data path. Valid values are 1, 2 or 4.

You can also set attributes for the primitives. See the *RocketIO Transceiver User Guide* for a description of these attributes and their default attribute values.


The following figures list the input and output ports for all values of *n*. For a description of each of the ports, see the *RocketIO Transceiver User Guide*.

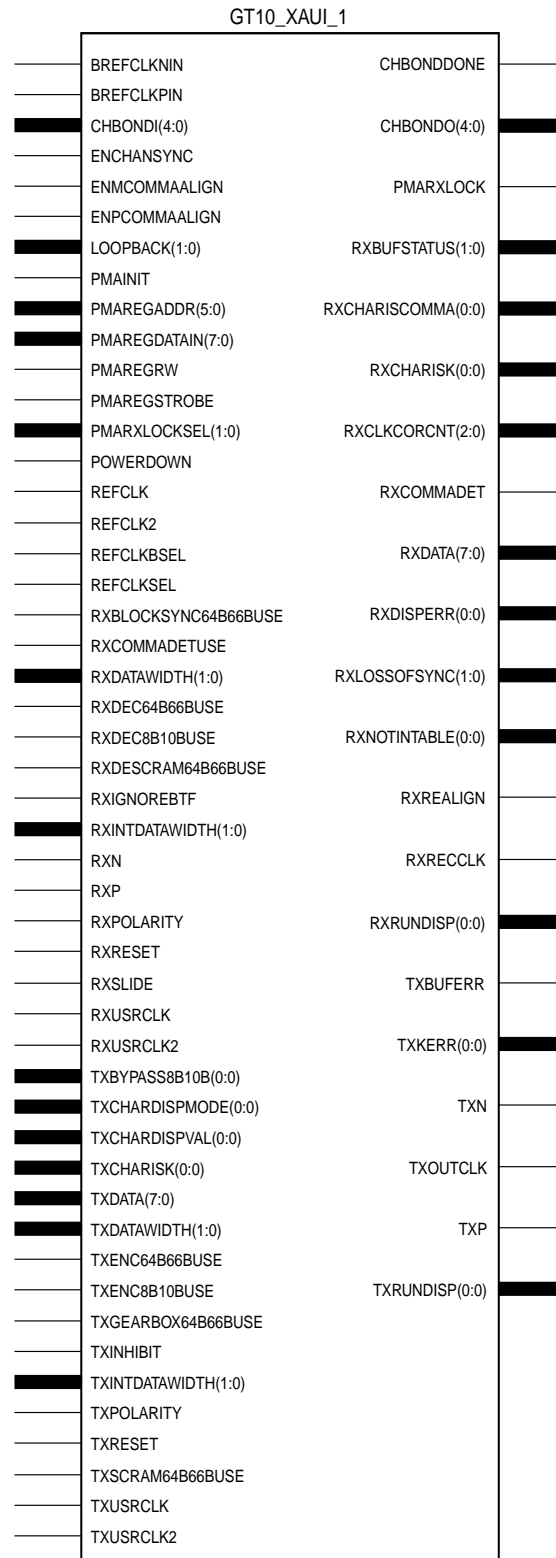

X10062

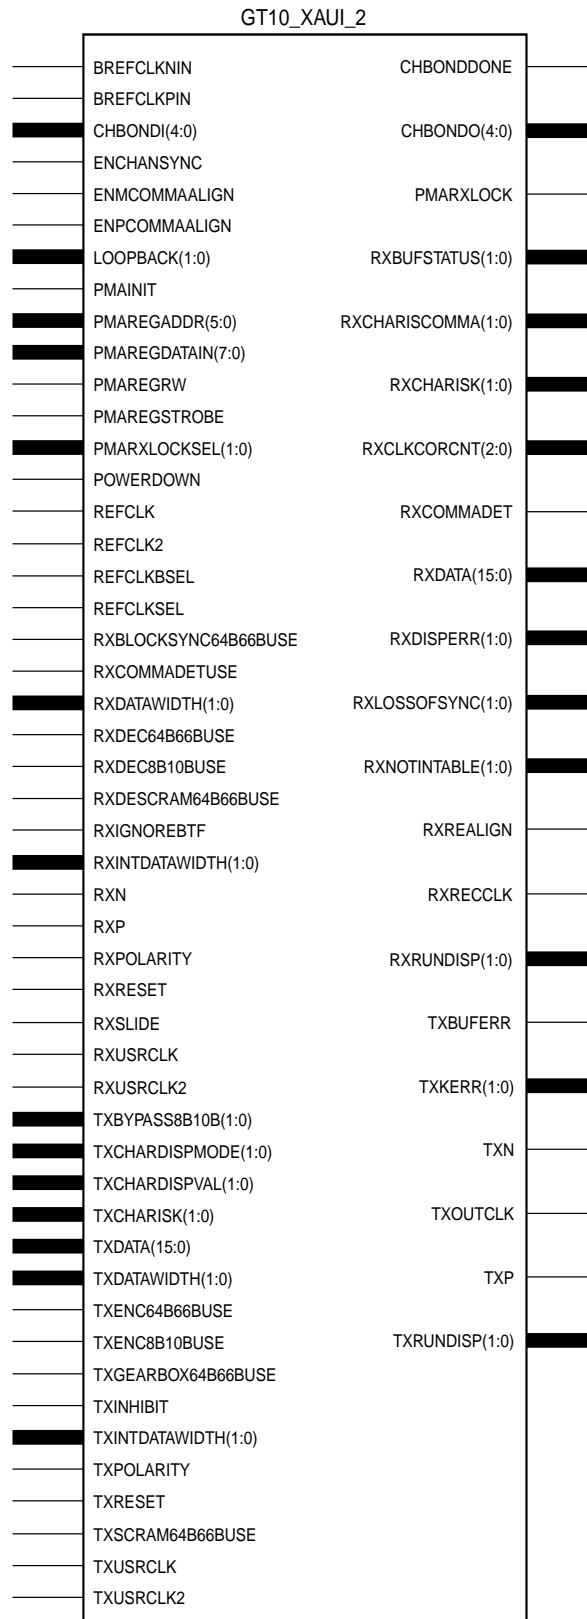

X10063

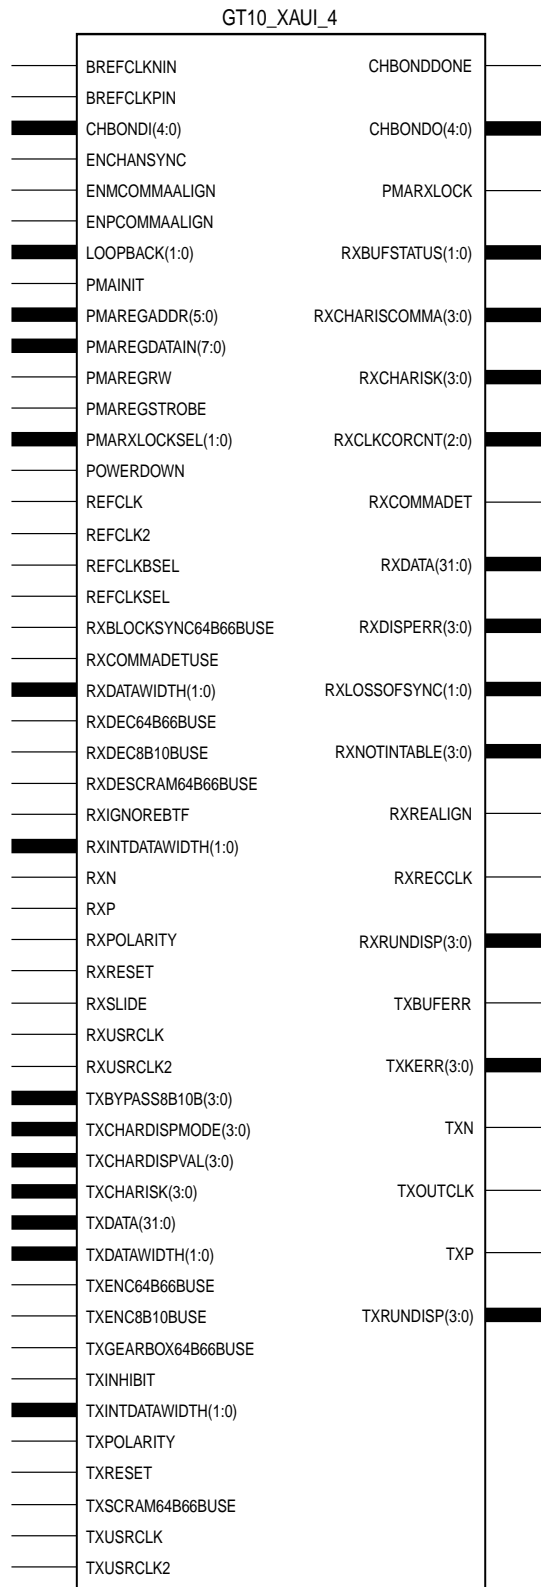

X10064

## Usage

This design element is instantiated rather than inferred in the design code.

## VHDL Instantiation Templates

### GT10\_XAUI\_1 VHDL Code

```
-- Component Attribute specification for GT10_XAUI_1
-- should be placed after architecture declaration but
-- before the begin keyword

component GT10_XAUI_1
-- synopsys translate_off
generic (
    ALIGN_COMMA_WORD           : integer := 2;
    CHAN_BOND_LIMIT            : integer := 16;
    CHAN_BOND_MODE              : string := "OFF";
    CHAN_BOND_ONE_SHOT         : boolean := FALSE;
    CHAN_BOND_SEQ_1_1          : bit_vector := "001011111100";
    CHAN_BOND_SEQ_1_2          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_3          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_4          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_MASK       : bit_vector := "0000";
    CHAN_BOND_SEQ_2_1          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_2          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_3          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_4          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_MASK       : bit_vector := "0000";
    CHAN_BOND_SEQ_2_USE        : boolean := FALSE;
    CHAN_BOND_SEQ_LEN          : integer := 2;
    CLK_COR_8B10B_DE           : boolean := FALSE;
    CLK_COR_MAX_LAT             : integer := 36;
    CLK_COR_MIN_LAT             : integer := 28;
    CLK_COR_SEQ_1_1            : bit_vector := "001000111100";
    CLK_COR_SEQ_1_2            : bit_vector := "000000000000";
    CLK_COR_SEQ_1_3            : bit_vector := "000000000000";
    CLK_COR_SEQ_1_4            : bit_vector := "000000000000";
    CLK_COR_SEQ_1_MASK         : bit_vector := "0000";
    CLK_COR_SEQ_2_1            : bit_vector := "000000000000";
    CLK_COR_SEQ_2_2            : bit_vector := "000000000000";
    CLK_COR_SEQ_2_3            : bit_vector := "000000000000";
    CLK_COR_SEQ_2_4            : bit_vector := "000000000000";
    CLK_COR_SEQ_2_MASK         : bit_vector := "0000";
    CLK_COR_SEQ_2_USE          : boolean := FALSE;
    CLK_COR_SEQ_DROP           : boolean := FALSE;
    CLK_COR_SEQ_LEN            : integer := 2;
    CLK_CORRECT_USE            : boolean := TRUE;
    COMMA_10B_MASK             : bit_vector := "0001111111";
    DEC_MCOMMA_DETECT           : boolean := TRUE;
    DEC_PCOMMA_DETECT          : boolean := TRUE;
    DEC_VALID_COMMA_ONLY       : boolean := TRUE;
    MCOMMA_10B_VALUE           : bit_vector := "1010000011";
    MCOMMA_DETECT              : boolean := TRUE;
    PCOMMA_10B_VALUE           : bit_vector := "0101111100";
    PCOMMA_DETECT              : boolean := TRUE;
    PMA_PWR_CNTRL              : bit_vector := "11111111";
```

```

PMA_SPEED                : string := "25_10";
RX_BUFFER_USE            : boolean := TRUE;
RX_LOS_INVALID_INCR     : integer := 1;
RX_LOS_THRESHOLD        : integer := 4;
RX_LOSS_OF_SYNC_FSM     : boolean := TRUE;
TX_BUFFER_USE            : boolean := TRUE);

-- synopsys translate_on
port (
    BREFCLKNOUT           : out std_ulogic;
    BREFCLKPOUT           : out std_ulogic;
    CHBONDDONE           : out std_ulogic;
    CHBONDO               : out std_logic_vector(4 downto 0);
    PMARXLOCK            : out std_ulogic;
    RXBUFSTATUS           : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA        : out std_logic_vector(0 downto 0);
    RXCHARISK             : out std_logic_vector(0 downto 0);
    RXCLKCORCNT          : out std_logic_vector(2 downto 0);
    RXCOMMADET           : out std_ulogic;
    RXDATA                : out std_logic_vector(7 downto 0);
    RXDISPERR            : out std_logic_vector(0 downto 0);
    RXLOSSOFSYNC         : out std_logic_vector(1 downto 0);
    RXNOTINTABLE         : out std_logic_vector(0 downto 0);
    RXREALIGN            : out std_ulogic;
    RXRECCLK             : out std_ulogic;
    RXRUNDISP            : out std_logic_vector(0 downto 0);
    TXBUFERR              : out std_ulogic;
    TXKERR                : out std_logic_vector(0 downto 0);
    TXN                   : out std_ulogic;
    TXOUTCLK             : out std_ulogic;
    TXP                   : out std_ulogic;
    TXRUNDISP            : out std_logic_vector(0 downto 0);
    BREFCLKNIN           : in std_ulogic;
    BREFCLKPIN           : in std_ulogic;
    CHBONDI              : in std_logic_vector(4 downto 0);
    ENCHANSYNC           : in std_ulogic;
    ENMCOMMAALIGN        : in std_ulogic;
    ENPCOMMAALIGN        : in std_ulogic;
    LOOPBACK             : in std_logic_vector(1 downto 0);
    PMAINIT              : in std_ulogic;
    PMAREGADDR           : in std_logic_vector(5 downto 0);
    PMAREGDATAIN         : in std_logic_vector(7 downto 0);
    PMAREGRW             : in std_ulogic;
    PMAREGSTROBE         : in std_ulogic;
    PMARXLOCKSEL         : in std_logic_vector(1 downto 0);
    POWERDOWN            : in std_ulogic;
    REFCLK                : in std_ulogic;
    REFCLK2              : in std_ulogic;
    REFCLKBSEL           : in std_ulogic;
    REFCLKSEL            : in std_ulogic;
    RXBLOCKSYNC64B66BUSE : in std_ulogic;
    RXCOMMADETUSE        : in std_ulogic;
    RXDATAWIDTH          : in std_logic_vector(1 downto 0);
    RXDEC64B66BUSE       : in std_ulogic;
    RXDEC8B10BUSE        : in std_ulogic;
    RXDESCRAM64B66BUSE   : in std_ulogic;
    RXIGNOREBTF          : in std_ulogic;
    RXINTDATAWIDTH       : in std_logic_vector(1 downto 0);

```



```

RXN                                : in std_ulogic;
RXP                                : in std_ulogic;
RXPOLARITY                         : in std_ulogic;
RXRESET                            : in std_ulogic;
RXSLIDE                            : in std_ulogic;
RXUSRCLK                           : in std_ulogic;
RXUSRCLK2                          : in std_ulogic;
TXBYPASS8B10B                     : in std_logic_vector(0 downto 0);
TXCHARDISPMODE                    : in std_logic_vector(0 downto 0);
TXCHARDISPVAL                     : in std_logic_vector(0 downto 0);
TXCHARISK                          : in std_logic_vector(0 downto 0);
TXDATA                             : in std_logic_vector(7 downto 0);
TXDATAWIDTH                       : in std_logic_vector(1 downto 0);
TXENC64B66BUSE                    : in std_ulogic;
TXENC8B10BUSE                     : in std_ulogic;
TXGEARBOX64B66BUSE               : in std_ulogic;
TXINHIBIT                         : in std_ulogic;
TXINTDATAWIDTH                    : in std_logic_vector(1 downto 0);
TXPOLARITY                         : in std_ulogic;
TXRESET                            : in std_ulogic;
TXSCRAM64B66BUSE                 : in std_ulogic;
TXUSRCLK                           : in std_ulogic;
TXUSRCLK2                          : in std_ulogic);

```

```
end component;
```

```
-- Component Attribute specification for GT10_XAUI_1
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter constraints here
```

```
-- Component Instantiation for GT10_XAUI_1 should be placed
-- in architecture after the begin keyword
```

```
GT10_XAUI_1_INSTANCE_NAME : GT10_XAUI_1
```

```
-- synopsys translate_off
```

```
generic map (
```

```

ALIGN_COMMA_WORD                   => integer_value,
CHAN_BOND_LIMIT                    => integer_value,
CHAN_BOND_MODE                     => string_value,
CHAN_BOND_ONE_SHOT                 => boolean_value,
CHAN_BOND_SEQ_1_1                  => bit_value,
CHAN_BOND_SEQ_1_2                  => bit_value,
CHAN_BOND_SEQ_1_3                  => bit_value,
CHAN_BOND_SEQ_1_4                  => bit_value,
CHAN_BOND_SEQ_1_MASK               => bit_value,
CHAN_BOND_SEQ_2_1                  => bit_value,
CHAN_BOND_SEQ_2_2                  => bit_value,
CHAN_BOND_SEQ_2_3                  => bit_value,
CHAN_BOND_SEQ_2_4                  => bit_value,
CHAN_BOND_SEQ_2_MASK               => bit_value,
CHAN_BOND_SEQ_2_USE                => boolean_value,
CHAN_BOND_SEQ_LEN                  => integer_value,
CLK_COR_8B10B_DE                   => boolean_value,
CLK_COR_MAX_LAT                    => integer_value,
CLK_COR_MIN_LAT                    => integer_value,
CLK_COR_SEQ_1_1                    => bit_value,

```

```

CLK_COR_SEQ_1_2           => bit_value,
CLK_COR_SEQ_1_3           => bit_value,
CLK_COR_SEQ_1_4           => bit_value,
CLK_COR_SEQ_1_MASK       => bit_value,
CLK_COR_SEQ_2_1           => bit_value,
CLK_COR_SEQ_2_2           => bit_value,
CLK_COR_SEQ_2_3           => bit_value,
CLK_COR_SEQ_2_4           => bit_value,
CLK_COR_SEQ_2_MASK       => bit_value,
CLK_COR_SEQ_2_USE        => boolean_value,
CLK_COR_SEQ_DROP         => boolean_value,
CLK_COR_SEQ_LEN          => integer_value,
CLK_CORRECT_USE          => boolean_value,
COMMA_10B_MASK           => bit_value,
DEC_MCOMMA_DETECT        => boolean_value,
DEC_PCOMMA_DETECT        => boolean_value,
DEC_VALID_COMMA_ONLY     => boolean_value,
MCOMMA_10B_VALUE         => bit_value,
MCOMMA_DETECT            => boolean_value,
PCOMMA_10B_VALUE         => bit_value,
PCOMMA_DETECT            => boolean_value,
PMA_PWR_CNTRL           => bit_value,
PMA_SPEED                => string_value,
RX_BUFFER_USE            => boolean_value,
RX_LOS_INVALID_INCR      => integer_value,
RX_LOS_THRESHOLD         => integer_value,
RX_LOSS_OF_SYNC_FSM     => boolean_value,
TX_BUFFER_USE            => boolean_value)

-- synopsys translate_on
port map (
  BREFCLKNOUT             => user_BREFCLKNOUT,
  BREFCLKPOUT             => user_BREFCLKPOUT,
  CHBONDDONE              => user_CHBONDDONE,
  CHBONDO                 => user_CHBONDO,
  PMARXLOCK               => user_PMARXLOCK,
  RXBUFSTATUS             => user_RXBUFSTATUS,
  RXCHARISCOMMA           => user_RXCHARISCOMMA,
  RXCHARISK               => user_RXCHARISK,
  RXCLKCORCNT             => user_RXCLKCORCNT,
  RXCOMMADET              => user_RXCOMMADET,
  RXDATA                  => user_RXDATA,
  RXDISPERR               => user_RXDISPERR,
  RXLOSSOFSYNC            => user_RXLOSSOFSYNC,
  RXNOTINTABLE           => user_RXNOTINTABLE,
  RXREALIGN               => user_RXREALIGN,
  RXRECCLK                => user_RXRECCLK,
  RXRUNDISP               => user_RXRUNDISP,
  TXBUFERR                => user_TXBUFERR,
  TXKERR                  => user_TXKERR,
  TXN                     => user_TXN,
  TXOUTCLK                => user_TXOUTCLK,
  TXP                     => user_TXP,
  TXRUNDISP               => user_TXRUNDISP,
  BREFCLKNIN              => user_BREFCLKNIN,
  BREFCLKPIN              => user_BREFCLKPIN,
  CHBONDI                 => user_CHBONDI,
  ENCHANSYNC              => user_ENCHANSYNC,

```

```

ENMCOMMAALIGN          => user_ENMCOMMAALIGN,
ENPCOMMAALIGN          => user_ENPCOMMAALIGN,
LOOPBACK                => user_LOOPBACK,
PMAINIT                => user_PMAINIT,
PMAREGADDR              => user_PMAREGADDR,
PMAREGDATAIN           => user_PMAREGDATAIN,
PMAREGRW                => user_PMAREGRW,
PMAREGSTROBE           => user_PMAREGSTROBE,
PMARXLOCKSEL           => user_PMARXLOCKSEL,
POWERDOWN              => user_POWERDOWN,
REFCLK                  => user_REFCLK,
REFCLK2                 => user_REFCLK2,
REFCLKBSEL             => user_REFCLKBSEL,
REFCLKSEL              => user_REFCLKSEL,
RXBLOCKSYNC64B66BUSE  => user_RXBLOCKSYNC64B66BUSE,
RXCOMMADETUSE          => user_RXCOMMADETUSE,
RXDATAWIDTH            => user_RXDATAWIDTH,
RXDEC64B66BUSE         => user_RXDEC64B66BUSE,
RXDEC8B10BUSE         => user_RXDEC8B10BUSE,
RXDESCRAM64B66BUSE    => user_RXDESCRAM64B66BUSE,
RXIGNOREBTF            => user_RXIGNOREBTF,
RXINTDATAWIDTH        => user_RXINTDATAWIDTH,
RXN                     => user_RXN,
RXP                     => user_RXP,
RXPOLARITY             => user_RXPOLARITY,
RXRESET                => user_RXRESET,
RXSLIDE                => user_RXSLIDE,
RXUSRCLK                => user_RXUSRCLK,
RXUSRCLK2              => user_RXUSRCLK2,
TXBYPASS8B10B         => user_TXBYPASS8B10B,
TXCHARDISPMODE         => user_TXCHARDISPMODE,
TXCHARDISPVAL          => user_TXCHARDISPVAL,
TXCHARISK              => user_TXCHARISK,
TXDATA                 => user_TXDATA,
TXDATAWIDTH            => user_TXDATAWIDTH,
TXENC64B66BUSE        => user_TXENC64B66BUSE,
TXENC8B10BUSE         => user_TXENC8B10BUSE,
TXGEARBOX64B66BUSE    => user_TXGEARBOX64B66BUSE,
TXINHIBIT              => user_TXINHIBIT,
TXINTDATAWIDTH        => user_TXINTDATAWIDTH,
TXPOLARITY             => user_TXPOLARITY,
TXRESET                => user_TXRESET,
TXSCRAM64B66BUSE      => user_TXSCRAM64B66BUSE,
TXUSRCLK                => user_TXUSRCLK,
TXUSRCLK2              => user_TXUSRCLK2);

```

## GT10\_XAUI\_2 Code

```

-- Component Attribute specification for GT10_XAUI_2
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

component GT10_XAUI_2
-- synopsys translate_off
generic (
    ALIGN_COMMA_WORD          : integer := 2;
    CHAN_BOND_LIMIT           : integer := 16;
    CHAN_BOND_MODE             : string := "OFF";

```

```

CHAN_BOND_ONE_SHOT          : boolean := FALSE;
CHAN_BOND_SEQ_1_1           : bit_vector := "00101111100";
CHAN_BOND_SEQ_1_2           : bit_vector := "00000000000";
CHAN_BOND_SEQ_1_3           : bit_vector := "00000000000";
CHAN_BOND_SEQ_1_4           : bit_vector := "00000000000";
CHAN_BOND_SEQ_1_MASK        : bit_vector := "0000";
CHAN_BOND_SEQ_2_1           : bit_vector := "00000000000";
CHAN_BOND_SEQ_2_2           : bit_vector := "00000000000";
CHAN_BOND_SEQ_2_3           : bit_vector := "00000000000";
CHAN_BOND_SEQ_2_4           : bit_vector := "00000000000";
CHAN_BOND_SEQ_2_MASK        : bit_vector := "0000";
CHAN_BOND_SEQ_2_USE         : boolean := FALSE;
CHAN_BOND_SEQ_LEN           : integer := 2;
CLK_COR_8B10B_DE            : boolean := FALSE;
CLK_COR_MAX_LAT             : integer := 36;
CLK_COR_MIN_LAT             : integer := 28;
CLK_COR_SEQ_1_1             : bit_vector := "00100011100";
CLK_COR_SEQ_1_2             : bit_vector := "00000000000";
CLK_COR_SEQ_1_3             : bit_vector := "00000000000";
CLK_COR_SEQ_1_4             : bit_vector := "00000000000";
CLK_COR_SEQ_1_MASK          : bit_vector := "0000";
CLK_COR_SEQ_2_1             : bit_vector := "00000000000";
CLK_COR_SEQ_2_2             : bit_vector := "00000000000";
CLK_COR_SEQ_2_3             : bit_vector := "00000000000";
CLK_COR_SEQ_2_4             : bit_vector := "00000000000";
CLK_COR_SEQ_2_MASK          : bit_vector := "0000";
CLK_COR_SEQ_2_USE           : boolean := FALSE;
CLK_COR_SEQ_DROP            : boolean := FALSE;
CLK_COR_SEQ_LEN             : integer := 2;
CLK_CORRECT_USE             : boolean := TRUE;
COMMA_10B_MASK              : bit_vector := "0001111111";
DEC_MCOMMA_DETECT           : boolean := TRUE;
DEC_PCOMMA_DETECT           : boolean := TRUE;
DEC_VALID_COMMA_ONLY        : boolean := TRUE;
MCOMMA_10B_VALUE            : bit_vector := "1010000011";
MCOMMA_DETECT               : boolean := TRUE;
PCOMMA_10B_VALUE            : bit_vector := "0101111100";
PCOMMA_DETECT               : boolean := TRUE;
PMA_PWR_CNTRL               : bit_vector := "11111111";
PMA_SPEED                    : string := "25_20";
RX_BUFFER_USE               : boolean := TRUE;
RX_LOS_INVALID_INCR         : integer := 1;
RX_LOS_THRESHOLD            : integer := 4;
RX_LOSS_OF_SYNC_FSM         : boolean := TRUE;
TX_BUFFER_USE                : boolean := TRUE;

-- synopsys translate_on
port (
    BREFCLKNOUT               : out std_ulogic;
    BREFCLKPOUT               : out std_ulogic;
    CHBONDDONE                : out std_ulogic;
    CHBONDO                   : out std_logic_vector(4 downto 0);
    PMARXLOCK                 : out std_ulogic;
    RXBUFSTATUS               : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA             : out std_logic_vector(1 downto 0);
    RXCHARISK                 : out std_logic_vector(1 downto 0);
    RXCLKCORCNT               : out std_logic_vector(2 downto 0);
    RXCOMMADET                : out std_ulogic;

```

```

RXDATA                : out std_logic_vector(15 downto 0);
RXDISPERR             : out std_logic_vector(1 downto 0);
RXLOSSOFSYNC         : out std_logic_vector(1 downto 0);
RXNOTINTABLE         : out std_logic_vector(1 downto 0);
RXREALIGN            : out std_ulogic;
RXRECCLK             : out std_ulogic;
RXRUNDISP           : out std_logic_vector(1 downto 0);
TXBUFERR            : out std_ulogic;
TXKERR              : out std_logic_vector(1 downto 0);
TXN                 : out std_ulogic;
TXOUTCLK            : out std_ulogic;
TXP                 : out std_ulogic;
TXRUNDISP           : out std_logic_vector(1 downto 0);
BREFCLKNIN          : in std_ulogic;
BREFCLKPIN          : in std_ulogic;
CHBONDI             : in std_logic_vector(4 downto 0);
ENCHANSYNC          : in std_ulogic;
ENMCOMMAALIGN       : in std_ulogic;
ENPCOMMAALIGN       : in std_ulogic;
LOOPBACK            : in std_logic_vector(1 downto 0);
PMAINIT             : in std_ulogic;
PMAREGADDR          : in std_logic_vector(5 downto 0);
PMAREGDATAIN        : in std_logic_vector(7 downto 0);
PMAREGRW            : in std_ulogic;
PMAREGSTROBE        : in std_ulogic;
PMARXLOCKSEL        : in std_logic_vector(1 downto 0);
POWERDOWN           : in std_ulogic;
REFCLK              : in std_ulogic;
REFCLK2             : in std_ulogic;
REFCLKBSEL          : in std_ulogic;
REFCLKSEL           : in std_ulogic;
RXBLOCKSYNC64B66BUSE : in std_ulogic;
RXCOMMADETUSE       : in std_ulogic;
RXDATAWIDTH         : in std_logic_vector(1 downto 0);
RXDEC64B66BUSE      : in std_ulogic;
RXDEC8B10BUSE       : in std_ulogic;
RXDESCRAM64B66BUSE : in std_ulogic;
RXIGNOREBTF         : in std_ulogic;
RXINTDATAWIDTH      : in std_logic_vector(1 downto 0);
RXN                 : in std_ulogic;
RXP                 : in std_ulogic;
RXPOLARITY          : in std_ulogic;
RXRESET             : in std_ulogic;
RXSLIDE             : in std_ulogic;
RXUSRCLK            : in std_ulogic;
RXUSRCLK2           : in std_ulogic;
TXBYPASS8B10B       : in std_logic_vector(1 downto 0);
TXCHARDISPMODE      : in std_logic_vector(1 downto 0);
TXCHARDISPVAL       : in std_logic_vector(1 downto 0);
TXCHARISK           : in std_logic_vector(1 downto 0);
TXDATA              : in std_logic_vector(15 downto 0);
TXDATAWIDTH         : in std_logic_vector(1 downto 0);
TXENC64B66BUSE      : in std_ulogic;
TXENC8B10BUSE       : in std_ulogic;
TXGEARBOX64B66BUSE : in std_ulogic;
TXINHIBIT           : in std_ulogic;
TXINTDATAWIDTH      : in std_logic_vector(1 downto 0);
TXPOLARITY          : in std_ulogic;

```

```

        TXRESET                : in std_ulogic;
        TXSCRAM64B66BUSE      : in std_ulogic;
        TXUSRCLK               : in std_ulogic;
        TXUSRCLK2              : in std_ulogic);

end component;

-- Component Attribute specification for GT10_XAUI_2
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter constraints here

-- Component Instantiation for GT10_XAUI_2 should be placed
-- in architecture after the begin keyword

GT10_XAUI_2_INSTANCE_NAME : GT10_XAUI_2
-- synopsys translate_off
generic map (
    ALIGN_COMMA_WORD           => integer_value,
    CHAN_BOND_LIMIT            => integer_value,
    CHAN_BOND_MODE              => string_value,
    CHAN_BOND_ONE_SHOT         => boolean_value,
    CHAN_BOND_SEQ_1_1          => bit_value,
    CHAN_BOND_SEQ_1_2          => bit_value,
    CHAN_BOND_SEQ_1_3          => bit_value,
    CHAN_BOND_SEQ_1_4          => bit_value,
    CHAN_BOND_SEQ_1_MASK       => bit_value,
    CHAN_BOND_SEQ_2_1          => bit_value,
    CHAN_BOND_SEQ_2_2          => bit_value,
    CHAN_BOND_SEQ_2_3          => bit_value,
    CHAN_BOND_SEQ_2_4          => bit_value,
    CHAN_BOND_SEQ_2_MASK       => bit_value,
    CHAN_BOND_SEQ_2_USE        => boolean_value,
    CHAN_BOND_SEQ_LEN          => integer_value,
    CLK_COR_8B10B_DE           => boolean_value,
    CLK_COR_MAX_LAT            => integer_value,
    CLK_COR_MIN_LAT            => integer_value,
    CLK_COR_SEQ_1_1            => bit_value,
    CLK_COR_SEQ_1_2            => bit_value,
    CLK_COR_SEQ_1_3            => bit_value,
    CLK_COR_SEQ_1_4            => bit_value,
    CLK_COR_SEQ_1_MASK         => bit_value,
    CLK_COR_SEQ_2_1            => bit_value,
    CLK_COR_SEQ_2_2            => bit_value,
    CLK_COR_SEQ_2_3            => bit_value,
    CLK_COR_SEQ_2_4            => bit_value,
    CLK_COR_SEQ_2_MASK         => bit_value,
    CLK_COR_SEQ_2_USE          => boolean_value,
    CLK_COR_SEQ_DROP           => boolean_value,
    CLK_COR_SEQ_LEN            => integer_value,
    CLK_CORRECT_USE            => boolean_value,
    COMMA_10B_MASK             => bit_value,
    DEC_MCOMMA_DETECT          => boolean_value,
    DEC_PCOMMA_DETECT          => boolean_value,
    DEC_VALID_COMMA_ONLY       => boolean_value,
    MCOMMA_10B_VALUE           => bit_value,
    MCOMMA_DETECT              => boolean_value,

```

```

PCOMMA_10B_VALUE          => bit_value,
PCOMMA_DETECT             => boolean_value,
PMA_PWR_CNTRL            => bit_value,
PMA_SPEED                => string_value,
RX_BUFFER_USE            => boolean_value,
RX_LOS_INVALID_INCR      => integer_value,
RX_LOS_THRESHOLD         => integer_value,
RX_LOSS_OF_SYNC_FSM     => boolean_value,
TX_BUFFER_USE            => boolean_value)

-- synopsys translate_on
port map (
  BREFCLKNOUT             => user_BREFCLKNOUT,
  BREFCLKPOUT            => user_BREFCLKPOUT,
  CHBONDDONE             => user_CHBONDDONE,
  CHBONDO                => user_CHBONDO,
  PMARXLOCK              => user_PMARXLOCK,
  RXBUFSTATUS            => user_RXBUFSTATUS,
  RXCHARISCOMMA         => user_RXCHARISCOMMA,
  RXCHARISK              => user_RXCHARISK,
  RXCLKCORCNT           => user_RXCLKCORCNT,
  RXCOMMADET            => user_RXCOMMADET,
  RXDATA                 => user_RXDATA,
  RXDISPERR              => user_RXDISPERR,
  RXLOSSOFSYNC          => user_RXLOSSOFSYNC,
  RXNOTINTABLE          => user_RXNOTINTABLE,
  RXREALIGN              => user_RXREALIGN,
  RXRECLK                => user_RXRECLK,
  RXRUNDISP             => user_RXRUNDISP,
  TXBUFERR               => user_TXBUFERR,
  TXKERR                 => user_TXKERR,
  TXN                    => user_TXN,
  TXOUTCLK               => user_TXOUTCLK,
  TXP                    => user_TXP,
  TXRUNDISP             => user_TXRUNDISP,
  BREFCLKNIN            => user_BREFCLKNIN,
  BREFCLKPIN            => user_BREFCLKPIN,
  CHBONDI                => user_CHBONDI,
  ENCHANSYNC            => user_ENCHANSYNC,
  ENMCOMMAALIGN         => user_ENMCOMMAALIGN,
  ENPCOMMAALIGN         => user_ENPCOMMAALIGN,
  LOOPBACK               => user_LOOPBACK,
  PMAINIT                => user_PMAINIT,
  PMAREGADDR            => user_PMAREGADDR,
  PMAREGDATAIN          => user_PMAREGDATAIN,
  PMAREGRW              => user_PMAREGRW,
  PMAREGSTROBE          => user_PMAREGSTROBE,
  PMARXLOCKSEL          => user_PMARXLOCKSEL,
  POWERDOWN             => user_POWERDOWN,
  REFCLK                 => user_REFCLK,
  REFCLK2                => user_REFCLK2,
  REFCLKBSEL            => user_REFCLKBSEL,
  REFCLKSEL             => user_REFCLKSEL,
  RXBLOCKSYNC64B66BUSE => user_RXBLOCKSYNC64B66BUSE,
  RXCOMMADETUSE         => user_RXCOMMADETUSE,
  RXDATAWIDTH           => user_RXDATAWIDTH,
  RXDEC64B66BUSE        => user_RXDEC64B66BUSE,
  RXDEC8B10BUSE         => user_RXDEC8B10BUSE,

```

```

RXDESCRAM64B66BUSE      => user_RXDESCRAM64B66BUSE,
RXIGNOREBTF             => user_RXIGNOREBTF,
RXINTDATAWIDTH         => user_RXINTDATAWIDTH,
RXN                     => user_RXN,
RXP                     => user_RXP,
RXPOLARITY             => user_RXPOLARITY,
RXRESET                => user_RXRESET,
RXSLIDE                => user_RXSLIDE,
RXUSRCLK               => user_RXUSRCLK,
RXUSRCLK2              => user_RXUSRCLK2,
TXBYPASS8B10B         => user_TXBYPASS8B10B,
TXCHARDISPMODE        => user_TXCHARDISPMODE,
TXCHARDISPVAL         => user_TXCHARDISPVAL,
TXCHARISK              => user_TXCHARISK,
TXDATA                 => user_TXDATA,
TXDATAWIDTH           => user_TXDATAWIDTH,
TXENC64B66BUSE        => user_TXENC64B66BUSE,
TXENC8B10BUSE         => user_TXENC8B10BUSE,
TXGEARBOX64B66BUSE   => user_TXGEARBOX64B66BUSE,
TXINHIBIT              => user_TXINHIBIT,
TXINTDATAWIDTH        => user_TXINTDATAWIDTH,
TXPOLARITY            => user_TXPOLARITY,
TXRESET                => user_TXRESET,
TXSCRAM64B66BUSE     => user_TXSCRAM64B66BUSE,
TXUSRCLK               => user_TXUSRCLK,
TXUSRCLK2              => user_TXUSRCLK2);

-- Component Attribute specification for GT10_XAUI_4
-- should be placed after architecture declaration but
-- before the begin keyword

component GT10_XAUI_4
-- synopsys translate_off
generic (
    ALIGN_COMMA_WORD      : integer := 2;
    CHAN_BOND_LIMIT       : integer := 16;
    CHAN_BOND_MODE        : string  := "OFF";
    CHAN_BOND_ONE_SHOT    : boolean  := FALSE;
    CHAN_BOND_SEQ_1_1     : bit_vector := "00101111100";
    CHAN_BOND_SEQ_1_2     : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_3     : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_4     : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_MASK  : bit_vector := "0000";
    CHAN_BOND_SEQ_2_1     : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_2     : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_3     : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_4     : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_MASK  : bit_vector := "0000";
    CHAN_BOND_SEQ_2_USE   : boolean  := FALSE;
    CHAN_BOND_SEQ_LEN     : integer  := 2;
    CLK_COR_8B10B_DE      : boolean  := FALSE;
    CLK_COR_MAX_LAT       : integer  := 36;
    CLK_COR_MIN_LAT       : integer  := 28;
    CLK_COR_SEQ_1_1       : bit_vector := "00100011100";
    CLK_COR_SEQ_1_2       : bit_vector := "00000000000";
    CLK_COR_SEQ_1_3       : bit_vector := "00000000000";
    CLK_COR_SEQ_1_4       : bit_vector := "00000000000";
    CLK_COR_SEQ_1_MASK    : bit_vector := "0000";

```



```

CLK_COR_SEQ_2_1           : bit_vector := "000000000000";
CLK_COR_SEQ_2_2           : bit_vector := "000000000000";
CLK_COR_SEQ_2_3           : bit_vector := "000000000000";
CLK_COR_SEQ_2_4           : bit_vector := "000000000000";
CLK_COR_SEQ_2_MASK       : bit_vector := "0000";
CLK_COR_SEQ_2_USE        : boolean := FALSE;
CLK_COR_SEQ_DROP         : boolean := FALSE;
CLK_COR_SEQ_LEN          : integer := 2;
CLK_CORRECT_USE          : boolean := TRUE;
COMMA_10B_MASK           : bit_vector := "0001111111";
DEC_MCOMMA_DETECT        : boolean := TRUE;
DEC_PCOMMA_DETECT        : boolean := TRUE;
DEC_VALID_COMMA_ONLY     : boolean := TRUE;
MCOMMA_10B_VALUE         : bit_vector := "1010000011";
MCOMMA_DETECT            : boolean := TRUE;
PCOMMA_10B_VALUE         : bit_vector := "0101111100";
PCOMMA_DETECT            : boolean := TRUE;
PMA_PWR_CNTRL            : bit_vector := "11111111";
PMA_SPEED                : string := "25_40";
RX_BUFFER_USE            : boolean := TRUE;
RX_LOS_INVALID_INCR      : integer := 1;
RX_LOS_THRESHOLD         : integer := 4;
RX_LOSS_OF_SYNC_FSM     : boolean := TRUE;
TX_BUFFER_USE            : boolean := TRUE);

-- synopsys translate_on
port (
    BREFCLKNOUT            : out std_ulogic;
    BREFCLKPOUT           : out std_ulogic;
    CHBONDDONE            : out std_ulogic;
    CHBONDO                : out std_logic_vector(4 downto 0);
    PMARXLOCK             : out std_ulogic;
    RXBUFSTATUS           : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA         : out std_logic_vector(3 downto 0);
    RXCHARISK             : out std_logic_vector(3 downto 0);
    RXCLKCORCNT           : out std_logic_vector(2 downto 0);
    RXCOMMADET            : out std_ulogic;
    RXDATA                : out std_logic_vector(31 downto 0);
    RXDISPERR             : out std_logic_vector(3 downto 0);
    RXLOSSOFSYNC          : out std_logic_vector(1 downto 0);
    RXNOTINTABLE          : out std_logic_vector(3 downto 0);
    RXREALIGN             : out std_ulogic;
    RXRECCLK              : out std_ulogic;
    RXRUNDISP            : out std_logic_vector(3 downto 0);
    TXBUFERR              : out std_ulogic;
    TXKERR                : out std_logic_vector(3 downto 0);
    TXN                   : out std_ulogic;
    TXOUTCLK              : out std_ulogic;
    TXP                   : out std_ulogic;
    TXRUNDISP            : out std_logic_vector(3 downto 0);
    BREFCLKNIN            : in std_ulogic;
    BREFCLKPIN            : in std_ulogic;
    CHBONDI               : in std_logic_vector(4 downto 0);
    ENCHANSYNC            : in std_ulogic;
    ENMCOMMAALIGN         : in std_ulogic;
    ENPCOMMAALIGN         : in std_ulogic;
    LOOPBACK              : in std_logic_vector(1 downto 0);
    PMAINIT               : in std_ulogic;

```

```

PMAREGADDR           : in std_logic_vector(5 downto 0);
PMAREGDATAIN        : in std_logic_vector(7 downto 0);
PMAREGRW            : in std_ulogic;
PMAREGSTROBE        : in std_ulogic;
PMARXLOCKSEL        : in std_logic_vector(1 downto 0);
POWERDOWN           : in std_ulogic;
REFCLK              : in std_ulogic;
REFCLK2            : in std_ulogic;
REFCLKBSEL         : in std_ulogic;
REFCLKSEL          : in std_ulogic;
RXBLOCKSYNC64B66BUSE : in std_ulogic;
RXCOMMADETUSE      : in std_ulogic;
RXDATAWIDTH        : in std_logic_vector(1 downto 0);
RXDEC64B66BUSE     : in std_ulogic;
RXDEC8B10BUSE      : in std_ulogic;
RXDESCRAM64B66BUSE : in std_ulogic;
RXIGNOREBTF        : in std_ulogic;
RXINTDATAWIDTH     : in std_logic_vector(1 downto 0);
RXN                 : in std_ulogic;
RXP                 : in std_ulogic;
RXPOLARITY         : in std_ulogic;
RXRESET            : in std_ulogic;
RXSLIDE            : in std_ulogic;
RXUSRCLK           : in std_ulogic;
RXUSRCLK2          : in std_ulogic;
TXBYPASS8B10B      : in std_logic_vector(3 downto 0);
TXCHARDISPMODE     : in std_logic_vector(3 downto 0);
TXCHARDISPVAL      : in std_logic_vector(3 downto 0);
TXCHARISK          : in std_logic_vector(3 downto 0);
TXDATA             : in std_logic_vector(31 downto 0);
TXDATAWIDTH        : in std_logic_vector(1 downto 0);
TXENC64B66BUSE     : in std_ulogic;
TXENC8B10BUSE      : in std_ulogic;
TXGEARBOX64B66BUSE : in std_ulogic;
TXINHIBIT          : in std_ulogic;
TXINTDATAWIDTH     : in std_logic_vector(1 downto 0);
TXPOLARITY         : in std_ulogic;
TXRESET            : in std_ulogic;
TXSCRAM64B66BUSE   : in std_ulogic;
TXUSRCLK           : in std_ulogic;
TXUSRCLK2          : in std_ulogic);

```

```
end component;
```

```
-- Component Attribute specification for GT10_XAUI_4
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter constraints here
```

```
-- Component Instantiation for GT10_XAUI_4 should be placed
-- in architecture after the begin keyword
```

```
GT10_XAUI_4_INSTANCE_NAME : GT10_XAUI_4
```

```
-- synopsys translate_off
```

```
generic map (
```

```
    ALIGN_COMMA_WORD           => integer_value,
```

```
    CHAN_BOND_LIMIT            => integer_value,
```

```

CHAN_BOND_MODE                => string_value,
CHAN_BOND_ONE_SHOT            => boolean_value,
CHAN_BOND_SEQ_1_1             => bit_value,
CHAN_BOND_SEQ_1_2             => bit_value,
CHAN_BOND_SEQ_1_3             => bit_value,
CHAN_BOND_SEQ_1_4             => bit_value,
CHAN_BOND_SEQ_1_MASK          => bit_value,
CHAN_BOND_SEQ_2_1             => bit_value,
CHAN_BOND_SEQ_2_2             => bit_value,
CHAN_BOND_SEQ_2_3             => bit_value,
CHAN_BOND_SEQ_2_4             => bit_value,
CHAN_BOND_SEQ_2_MASK          => bit_value,
CHAN_BOND_SEQ_2_USE           => boolean_value,
CHAN_BOND_SEQ_LEN             => integer_value,
CLK_COR_8B10B_DE              => boolean_value,
CLK_COR_MAX_LAT               => integer_value,
CLK_COR_MIN_LAT               => integer_value,
CLK_COR_SEQ_1_1               => bit_value,
CLK_COR_SEQ_1_2               => bit_value,
CLK_COR_SEQ_1_3               => bit_value,
CLK_COR_SEQ_1_4               => bit_value,
CLK_COR_SEQ_1_MASK            => bit_value,
CLK_COR_SEQ_2_1               => bit_value,
CLK_COR_SEQ_2_2               => bit_value,
CLK_COR_SEQ_2_3               => bit_value,
CLK_COR_SEQ_2_4               => bit_value,
CLK_COR_SEQ_2_MASK            => bit_value,
CLK_COR_SEQ_2_USE             => boolean_value,
CLK_COR_SEQ_DROP              => boolean_value,
CLK_COR_SEQ_LEN               => integer_value,
CLK_CORRECT_USE               => boolean_value,
COMMA_10B_MASK                => bit_value,
DEC_MCOMMA_DETECT             => boolean_value,
DEC_PCOMMA_DETECT             => boolean_value,
DEC_VALID_COMMA_ONLY          => boolean_value,
MCOMMA_10B_VALUE              => bit_value,
MCOMMA_DETECT                 => boolean_value,
PCOMMA_10B_VALUE              => bit_value,
PCOMMA_DETECT                 => boolean_value,
PMA_PWR_CNTRL                 => bit_value,
PMA_SPEED                     => string_value,
RX_BUFFER_USE                  => boolean_value,
RX_LOS_INVALID_INCR           => integer_value,
RX_LOS_THRESHOLD              => integer_value,
RX_LOSS_OF_SYNC_FSM           => boolean_value,
TX_BUFFER_USE                  => boolean_value)

-- synopsys translate_on
port map (
    BREFCLKNOUT                 => user_BREFCLKNOUT,
    BREFCLKPOUT                 => user_BREFCLKPOUT,
    CHBONDDONE                  => user_CHBONDDONE,
    CHBONDO                      => user_CHBONDO,
    PMARXLOCK                   => user_PMARXLOCK,
    RXBUFSTATUS                 => user_RXBUFSTATUS,
    RXCHARISCOMMA               => user_RXCHARISCOMMA,
    RXCHARISK                   => user_RXCHARISK,
    RXCLKCORCNT                 => user_RXCLKCORCNT,

```

```

RXCOMMADET                => user_RXCOMMADET,
RXDATA                    => user_RXDATA,
RXDISPERR                 => user_RXDISPERR,
RXLOSSOFSYNC              => user_RXLOSSOFSYNC,
RXNOTINTABLE              => user_RXNOTINTABLE,
RXREALIGN                 => user_RXREALIGN,
RXRECCLK                  => user_RXRECCLK,
RXRUNDISP                 => user_RXRUNDISP,
TXBUFERR                  => user_TXBUFERR,
TXKERR                    => user_TXKERR,
TXN                       => user_TXN,
TXOUTCLK                  => user_TXOUTCLK,
TXP                       => user_TXP,
TXRUNDISP                 => user_TXRUNDISP,
BREFCLKNIN                => user_BREFCLKNIN,
BREFCLKPIN                => user_BREFCLKPIN,
CHBONDI                   => user_CHBONDI,
ENCHANSYNC                => user_ENCHANSYNC,
ENMCOMMAALIGN             => user_ENMCOMMAALIGN,
ENPCOMMAALIGN             => user_ENPCOMMAALIGN,
LOOPBACK                  => user_LOOPBACK,
PMAINIT                   => user_PMAINIT,
PMAREGADDR                => user_PMAREGADDR,
PMAREGDATAIN              => user_PMAREGDATAIN,
PMAREGRW                  => user_PMAREGRW,
PMAREGSTROBE              => user_PMAREGSTROBE,
PMARXLOCKSEL              => user_PMARXLOCKSEL,
POWERDOWN                 => user_POWERDOWN,
REFCLK                    => user_REFCLK,
REFCLK2                   => user_REFCLK2,
REFCLKBSEL                => user_REFCLKBSEL,
REFCLKSEL                 => user_REFCLKSEL,
RXBLOCKSYNC64B66BUSE     => user_RXBLOCKSYNC64B66BUSE,
RXCOMMADETUSE             => user_RXCOMMADETUSE,
RXDATAWIDTH               => user_RXDATAWIDTH,
RXDEC64B66BUSE            => user_RXDEC64B66BUSE,
RXDEC8B10BUSE             => user_RXDEC8B10BUSE,
RXDESCRAM64B66BUSE       => user_RXDESCRAM64B66BUSE,
RXIGNOREBTF               => user_RXIGNOREBTF,
RXINTDATAWIDTH            => user_RXINTDATAWIDTH,
RXN                        => user_RXN,
RXP                       => user_RXP,
RXPOLARITY                => user_RXPOLARITY,
RXRESET                   => user_RXRESET,
RXSLIDE                   => user_RXSLIDE,
RXUSRCLK                  => user_RXUSRCLK,
RXUSRCLK2                 => user_RXUSRCLK2,
TXBYPASS8B10B            => user_TXBYPASS8B10B,
TXCHARDISPMODE            => user_TXCHARDISPMODE,
TXCHARDISPVAL             => user_TXCHARDISPVAL,
TXCHARISK                 => user_TXCHARISK,
TXDATA                    => user_TXDATA,
TXDATAWIDTH               => user_TXDATAWIDTH,
TXENC64B66BUSE            => user_TXENC64B66BUSE,
TXENC8B10BUSE             => user_TXENC8B10BUSE,
TXGEARBOX64B66BUSE       => user_TXGEARBOX64B66BUSE,
TXINHIBIT                 => user_TXINHIBIT,
TXINTDATAWIDTH            => user_TXINTDATAWIDTH,

```

```

TXPOLARITY           => user_TXPOLARITY,
TXRESET              => user_TXRESET,
TXSCRAM64B66BUSE    => user_TXSCRAM64B66BUSE,
TXUSRCLK             => user_TXUSRCLK,
TXUSRCLK2            => user_TXUSRCLK2);

```

End Here

## Verilog Instantiation Templates

### GT10\_XAUI\_1 Verilog Code

```

GT10_XAUI_1 GT10_XAUI_1_name(
  .BREFCLKNOUT (user_BREFCLKNOUT),
  .BREFCLKPOUT (user_BREFCLKPOUT),
  .CHBONDDONE (user_CHBONDDONE),
  .CHBONDO (user_CHBONDO),
  .PMARXLOCK (user_PMARXLOCK),
  .RXBUFSTATUS (user_RXBUFSTATUS),
  .RXCHARISCOMMA (user_RXCHARISCOMMA),
  .RXCHARISK (user_RXCHARISK),
  .RXCLKCORCNT (user_RXCLKCORCNT),
  .RXCOMMADET (user_RXCOMMADET),
  .RXDATA (user_RXDATA),
  .RXDISPERR (user_RXDISPERR),
  .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
  .RXNOTINTABLE (user_RXNOTINTABLE),
  .RXREALIGN (user_RXREALIGN),
  .RXRECCLK (user_RXRECCLK),
  .RXRUNDISP (user_RXRUNDISP),
  .TXBUFERR (user_TXBUFERR),
  .TXKERR (user_TXKERR),
  .TXN (user_TXN),
  .TXOUTCLK (user_TXOUTCLK),
  .TXP (user_TXP),
  .TXRUNDISP (user_TXRUNDISP),

  .BREFCLKNIN (user_BREFCLKNIN),
  .BREFCLKPIN (user_BREFCLKPIN),
  .CHBONDI (user_CHBONDI),
  .ENCHANSYNC (user_ENCHANSYNC),
  .ENMCOMMAALIGN (user_ENMCOMMAALIGN),
  .ENPCOMMAALIGN (user_ENPCOMMAALIGN),
  .LOOPBACK (user_LOOPBACK),
  .PMAINIT (user_PMAINIT),
  .PMAREGADDR (user_PMAREGADDR),
  .PMAREGDATAIN (user_PMAREGDATAIN),
  .PMAREGRW (user_PMAREGRW),
  .PMAREGSTROBE (user_PMAREGSTROBE),
  .PMARXLOCKSEL (user_PMARXLOCKSEL),
  .POWERDOWN (user_POWERDOWN),
  .REFCLK (user_REFCLK),
  .REFCLK2 (user_REFCLK2),
  .REFCLKBSEL (user_REFCLKBSEL),
  .REFCLKSEL (user_REFCLKSEL),
  .RXBLOCKSYNC64B66BUSE (user_RXBLOCKSYNC64B66BUSE),
  .RXCOMMADETUSE (user_RXCOMMADETUSE),

```

```

.RXDATAWIDTH (user_RXDATAWIDTH),
.RXDEC64B66BUSE (user_RXDEC64B66BUSE),
.RXDEC8B10BUSE (user_RXDEC8B10BUSE),
.RXDESCRAM64B66BUSE (user_RXDESCRAM64B66BUSE),
.RXIGNOREBTF (user_RXIGNOREBTF),
.RXINTDATAWIDTH (user_RXINTDATAWIDTH),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXSLIDE (user_RXSLIDE),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXDATAWIDTH (user_TXDATAWIDTH),
.TXENC64B66BUSE (user_TXENC64B66BUSE),
.TXENC8B10BUSE (user_TXENC8B10BUSE),
.TXGEARBOX64B66BUSE (user_TXGEARBOX64B66BUSE),
.TXINHIBIT (user_TXINHIBIT),
.TXINTDATAWIDTH (user_TXINTDATAWIDTH),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXSCRAM64B66BUSE (user_TXSCRAM64B66BUSE),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_WORD = 2;
defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b00101111100;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 2;
defparam user_instance_name.CLK_COR_8B10B_DE = "FALSE";
defparam user_instance_name.CLK_COR_MAX_LAT = 36;
defparam user_instance_name.CLK_COR_MIN_LAT = 28;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00100011100;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b00000000000;

```

```

defparam user_instance_name.CLK_COR_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_DROP = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 2;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b0001111111;
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1010000011;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0101111100;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.PMA_PWR_CNTRL = 8'b11111111;
defparam user_instance_name.PMA_SPEED = "25_10";
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.TX_BUFFER_USE = "TRUE";

```

## GT10\_XAUI\_2 Verilog Code

```

GT10_XAUI_2 GT10_XAUI_2_name(
    .BREFCLKNOUT (user_BREFCLKNOUT),
    .BREFCLKPOUT (user_BREFCLKPOUT),
    .CHBONDDONE (user_CHBONDDONE),
    .CHBONDO (user_CHBONDO),
    .PMARXLOCK (user_PMARXLOCK),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCLKCORCNT (user_RXCLKCORCNT),
    .RXCOMMADET (user_RXCOMMADET),
    .RXDATA (user_RXDATA),
    .RXDISPERR (user_RXDISPERR),
    .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
    .RXNOTINTABLE (user_RXNOTINTABLE),
    .RXREALIGN (user_RXREALIGN),
    .RXRECCLK (user_RXRECCLK),
    .RXRUNDISP (user_RXRUNDISP),
    .TXBUFERR (user_TXBUFERR),
    .TXKERR (user_TXKERR),
    .TXN (user_TXN),
    .TXOUTCLK (user_TXOUTCLK),
    .TXP (user_TXP),
    .TXRUNDISP (user_TXRUNDISP),

    .BREFCLKNIN (user_BREFCLKNIN),
    .BREFCLKPIN (user_BREFCLKPIN),
    .CHBONDI (user_CHBONDI),
    .ENCHANSYNC (user_ENCHANSYNC),
    .ENMCOMMAALIGN (user_ENMCOMMAALIGN),
    .ENPCOMMAALIGN (user_ENPCOMMAALIGN),
    .LOOPBACK (user_LOOPBACK),
    .PMAINIT (user_PMAINIT),
    .PMAREGADDR (user_PMAREGADDR),
    .PMAREGDATAIN (user_PMAREGDATAIN),

```

```

.PMAREGRW (user_PMAREGRW),
.PMAREGSTROBE (user_PMAREGSTROBE),
.PMARXLOCKSEL (user_PMARXLOCKSEL),
.POWERDOWN (user_POWERDOWN),
.REFCLK (user_REFCLK),
.REFCLK2 (user_REFCLK2),
.REFCLKBSEL (user_REFCLKBSEL),
.REFCLKSEL (user_REFCLKSEL),
.RXBLOCKSYNC64B66BUSE (user_RXBLOCKSYNC64B66BUSE),
.RXCOMMADETUSE (user_RXCOMMADETUSE),
.RXDATAWIDTH (user_RXDATAWIDTH),
.RXDEC64B66BUSE (user_RXDEC64B66BUSE),
.RXDEC8B10BUSE (user_RXDEC8B10BUSE),
.RXDESCRAM64B66BUSE (user_RXDESCRAM64B66BUSE),
.RXIGNOREBTF (user_RXIGNOREBTF),
.RXINTDATAWIDTH (user_RXINTDATAWIDTH),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXSLIDE (user_RXSLIDE),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXDATAWIDTH (user_TXDATAWIDTH),
.TXENC64B66BUSE (user_TXENC64B66BUSE),
.TXENC8B10BUSE (user_TXENC8B10BUSE),
.TXGEARBOX64B66BUSE (user_TXGEARBOX64B66BUSE),
.TXINHIBIT (user_TXINHIBIT),
.TXINTDATAWIDTH (user_TXINTDATAWIDTH),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXSCRAM64B66BUSE (user_TXSCRAM64B66BUSE),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_WORD = 2;
defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b001011111100;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 2;
defparam user_instance_name.CLK_COR_8B10B_DE = "FALSE";
defparam user_instance_name.CLK_COR_MAX_LAT = 36;

```



```

defparam user_instance_name.CLK_COR_MIN_LAT = 28;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00100011100;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_DROP = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 2;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b0001111111;
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1010000011;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0101111100;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.PMA_PWR_CNTRL = 8'b11111111;
defparam user_instance_name.PMA_SPEED = "25_20";
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.TX_BUFFER_USE = "TRUE";

```

## GT10\_XAUI\_4 Verilog Code

```

GT10_XAUI_4 GT10_XAUI_4_name(
    .BREFCLKNOUT (user_BREFCLKNOUT),
    .BREFCLKPOUT (user_BREFCLKPOUT),
    .CHBONDDONE (user_CHBONDDONE),
    .CHBONDO (user_CHBONDO),
    .PMARXLOCK (user_PMARXLOCK),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCLKCORCNT (user_RXCLKCORCNT),
    .RXCOMMADET (user_RXCOMMADET),
    .RXDATA (user_RXDATA),
    .RXDISPERR (user_RXDISPERR),
    .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
    .RXNOTINTABLE (user_RXNOTINTABLE),
    .RXREALIGN (user_RXREALIGN),
    .RXRECCLK (user_RXRECCLK),
    .RXRUNDISP (user_RXRUNDISP),
    .TXBUFERR (user_TXBUFERR),
    .TXKERR (user_TXKERR),
    .TXN (user_TXN),
    .TXOUTCLK (user_TXOUTCLK),
    .TXP (user_TXP),
    .TXRUNDISP (user_TXRUNDISP),

```

```

.BREFCLKNIN (user_BREFCLKNIN),
.BREFCLKPIN (user_BREFCLKPIN),
.CHBONDI (user_CHBONDI),
.ENCHANSYNC (user_ENCHANSYNC),
.ENMCOMMAALIGN (user_ENMCOMMAALIGN),
.ENPCOMMAALIGN (user_ENPCOMMAALIGN),
.LOOPBACK (user_LOOPBACK),
.PMAINIT (user_PMAINIT),
.PMAREGADDR (user_PMAREGADDR),
.PMAREGDATAIN (user_PMAREGDATAIN),
.PMAREGRW (user_PMAREGRW),
.PMAREGSTROBE (user_PMAREGSTROBE),
.PMARXLOCKSEL (user_PMARXLOCKSEL),
.POWERDOWN (user_POWERDOWN),
.REFCLK (user_REFCLK),
.REFCLK2 (user_REFCLK2),
.REFCLKBSEL (user_REFCLKBSEL),
.REFCLKSEL (user_REFCLKSEL),
.RXBLOCKSYNC64B66BUSE (user_RXBLOCKSYNC64B66BUSE),
.RXCOMMADETUSE (user_RXCOMMADETUSE),
.RXDATAWIDTH (user_RXDATAWIDTH),
.RXDEC64B66BUSE (user_RXDEC64B66BUSE),
.RXDEC8B10BUSE (user_RXDEC8B10BUSE),
.RXDESCRAM64B66BUSE (user_RXDESCRAM64B66BUSE),
.RXIGNOREBTF (user_RXIGNOREBTF),
.RXINTDATAWIDTH (user_RXINTDATAWIDTH),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXSLIDE (user_RXSLIDE),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXDATAWIDTH (user_TXDATAWIDTH),
.TXENC64B66BUSE (user_TXENC64B66BUSE),
.TXENC8B10BUSE (user_TXENC8B10BUSE),
.TXGEARBOX64B66BUSE (user_TXGEARBOX64B66BUSE),
.TXINHIBIT (user_TXINHIBIT),
.TXINTDATAWIDTH (user_TXINTDATAWIDTH),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXSCRAM64B66BUSE (user_TXSCRAM64B66BUSE),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_WORD = 2;
defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b00101111100;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b00000000000;

```

```

defparam user_instance_name.CHAN_BOND_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 2;
defparam user_instance_name.CLK_COR_8B10B_DE = "FALSE";
defparam user_instance_name.CLK_COR_MAX_LAT = 36;
defparam user_instance_name.CLK_COR_MIN_LAT = 28;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b001000111100;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_DROP = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 2;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b0001111111;
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1010000011;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0101111100;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.PMA_PWR_CNTRL = 8'b11111111;
defparam user_instance_name.PMA_SPEED = "25_40";
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.TX_BUFFER_USE = "TRUE";

```

## Commonly Used Constraints

None



## GT10\_10GE\_n

### 10-Gigabit Transceiver for High-Speed I/O


#### Architectures Supported

GT10_10GE_n	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive*
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
*Supported for Virtex-II Pro X but not for Virtex-II or Virtex-II Pro.	


This Xilinx protocol 10-gigabit transceiver supports 4 and 8-byte data paths. The letter *n* represents number of bytes of the data path. Valid values are 4 or 8.

You can also set attributes for the primitives. See the *RocketIO X Transceiver User Guide* for a description of these attributes and their default attribute values.

The following figures list the input and output ports for all values of *n*. For a description of each of the ports, see the *RocketIO X Transceiver User Guide*.

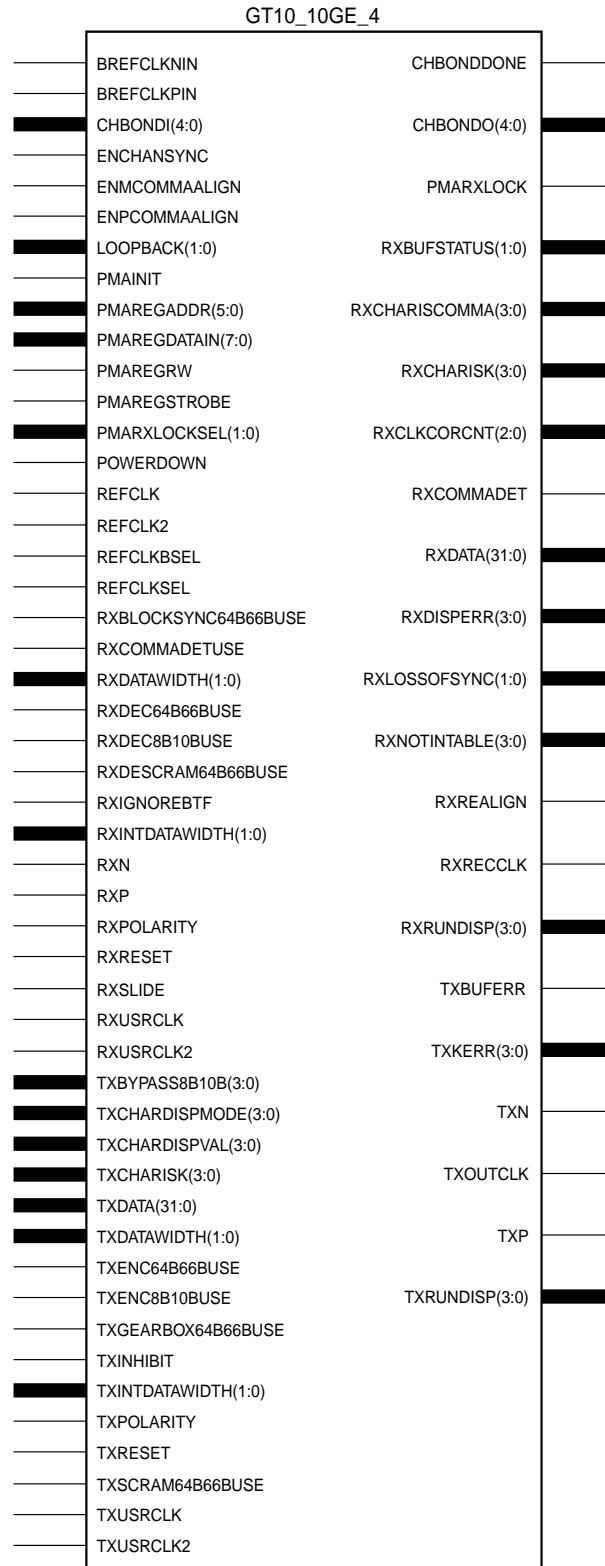

X10041

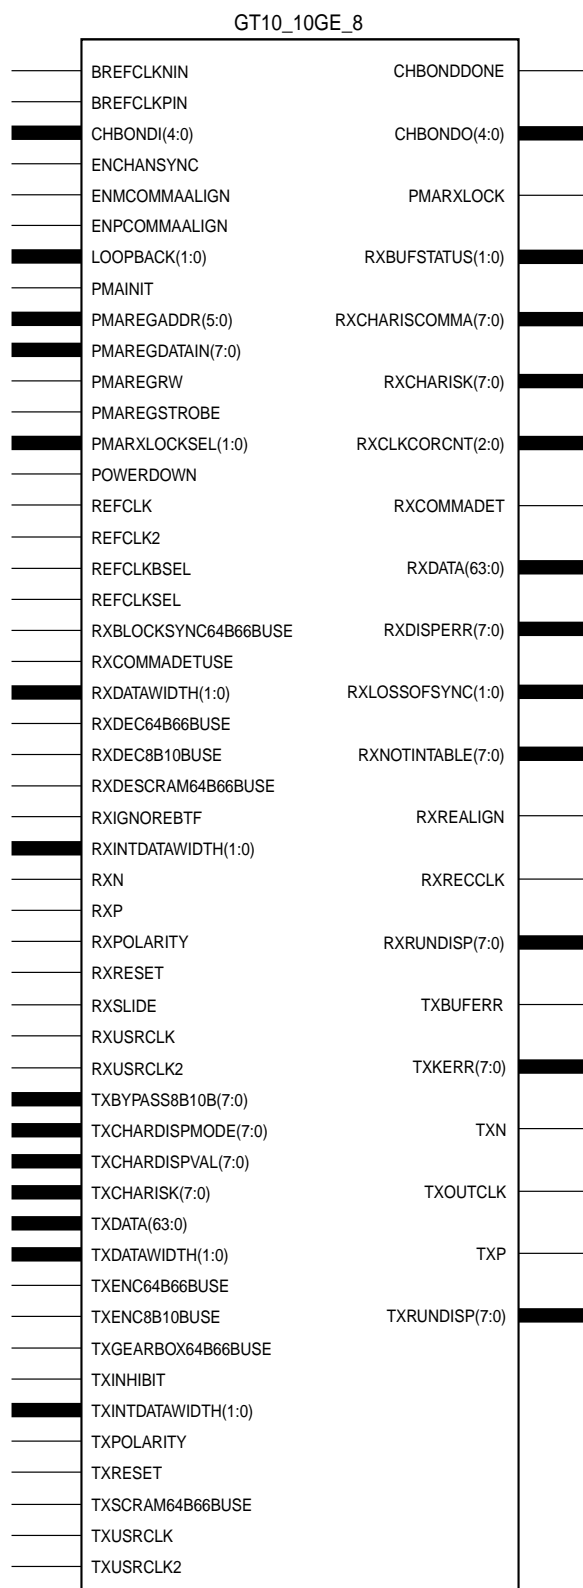

X10042

## Usage

This design element is instantiated rather than inferred in the design code.

## VHDL Instantiation Templates

### GT10\_10GE\_4 VHDL Code

```
-- Component Attribute specification for GT10_10GE_4
-- should be placed after architecture declaration but
-- before the begin keyword

component GT10_10GE_4
-- synopsys translate_off
generic (
    CHAN_BOND_LIMIT           : integer := 16;
    CHAN_BOND_MODE            : string  := "OFF";
    CHAN_BOND_ONE_SHOT        : boolean := FALSE;
    CHAN_BOND_SEQ_1_1         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_2         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_3         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_4         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_MASK     : bit_vector := "0000";
    CHAN_BOND_SEQ_2_1         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_2         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_3         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_4         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_MASK     : bit_vector := "0000";
    CHAN_BOND_SEQ_2_USE      : boolean := TRUE;
    CHAN_BOND_SEQ_LEN        : integer := 8;
    CHAN_BOND_64B66B_SV     : boolean := FALSE;
    CLK_COR_MAX_LAT          : integer := 36;
    CLK_COR_MIN_LAT          : integer := 28;
    CLK_COR_SEQ_1_1          : bit_vector := "10000011110";
    CLK_COR_SEQ_1_2          : bit_vector := "000000000000";
    CLK_COR_SEQ_1_3          : bit_vector := "000000000000";
    CLK_COR_SEQ_1_4          : bit_vector := "000000000000";
    CLK_COR_SEQ_1_MASK      : bit_vector := "0000";
    CLK_COR_SEQ_2_1          : bit_vector := "000000000000";
    CLK_COR_SEQ_2_2          : bit_vector := "000000000000";
    CLK_COR_SEQ_2_3          : bit_vector := "000000000000";
    CLK_COR_SEQ_2_4          : bit_vector := "000000000000";
    CLK_COR_SEQ_2_MASK      : bit_vector := "0000";
    CLK_COR_SEQ_2_USE      : boolean := TRUE;
    CLK_COR_SEQ_DROP        : boolean := FALSE;
    CLK_COR_SEQ_LEN        : integer := 8;
    CLK_CORRECT_USE        : boolean := TRUE;
    PMA_PWR_CNTRL           : bit_vector := "11111111";
    PMA_SPEED                : string  := "6_32";
    RX_BUFFER_USE           : boolean := TRUE;
    RX_LOS_INVALID_INCR     : integer := 1;
    RX_LOS_THRESHOLD        : integer := 4;
    RX_LOSS_OF_SYNC_FSM    : boolean := TRUE;
    SH_CNT_MAX               : integer := 64;
    SH_INVALID_CNT_MAX      : integer := 16;
    TX_BUFFER_USE           : boolean := TRUE);
```



```

-- synopsys translate_on
port (
    BREFCLKNOUT           : out std_ulogic;
    BREFCLKPOUT           : out std_ulogic;
    CHBONDDONE            : out std_ulogic;
    CHBONDO                : out std_logic_vector(4 downto 0);
    PMARXLOCK             : out std_ulogic;
    RXBUFSTATUS           : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA         : out std_logic_vector(3 downto 0);
    RXCHARISK             : out std_logic_vector(3 downto 0);
    RXCLKCORCNT           : out std_logic_vector(2 downto 0);
    RXCOMMADET            : out std_ulogic;
    RXDATA                : out std_logic_vector(31 downto 0);
    RXDISPERR             : out std_logic_vector(3 downto 0);
    RXLOSSOFSYNC          : out std_logic_vector(1 downto 0);
    RXNOTINTABLE          : out std_logic_vector(3 downto 0);
    RXREALIGN             : out std_ulogic;
    RXRECCLK              : out std_ulogic;
    RXRUNDISP             : out std_logic_vector(3 downto 0);
    TXBUFERR              : out std_ulogic;
    TXKERR                : out std_logic_vector(3 downto 0);
    TXN                   : out std_ulogic;
    TXOUTCLK              : out std_ulogic;
    TXP                   : out std_ulogic;
    TXRUNDISP             : out std_logic_vector(3 downto 0);
    BREFCLKNIN            : in std_ulogic;
    BREFCLKPIN            : in std_ulogic;
    CHBONDI                : in std_logic_vector(4 downto 0);
    ENCHANSYNC            : in std_ulogic;
    ENMCOMMAALIGN         : in std_ulogic;
    ENPCOMMAALIGN         : in std_ulogic;
    LOOPBACK              : in std_logic_vector(1 downto 0);
    PMAINIT               : in std_ulogic;
    PMAREGADDR            : in std_logic_vector(5 downto 0);
    PMAREGDATAIN          : in std_logic_vector(7 downto 0);
    PMAREGRW              : in std_ulogic;
    PMAREGSTROBE          : in std_ulogic;
    PMARXLOCKSEL          : in std_logic_vector(1 downto 0);
    POWERDOWN             : in std_ulogic;
    REFCLK                : in std_ulogic;
    REFCLK2               : in std_ulogic;
    REFCLKBSEL            : in std_ulogic;
    REFCLKSEL             : in std_ulogic;
    RXBLOCKSYNCS64B66BUSE : in std_ulogic;
    RXCOMMADETUSE         : in std_ulogic;
    RXDATAWIDTH           : in std_logic_vector(1 downto 0);
    RXDEC64B66BUSE        : in std_ulogic;
    RXDEC8B10BUSE         : in std_ulogic;
    RXDESCRAM64B66BUSE    : in std_ulogic;
    RXIGNOREBTF           : in std_ulogic;
    RXINTDATAWIDTH        : in std_logic_vector(1 downto 0);
    RXN                   : in std_ulogic;
    RXP                   : in std_ulogic;
    RXPOLARITY            : in std_ulogic;
    RXRESET               : in std_ulogic;
    RXSLIDE               : in std_ulogic;
    RXUSRCLK              : in std_ulogic;
    RXUSRCLK2             : in std_ulogic;

```

```

TXBYPASS8B10B           : in std_logic_vector(3 downto 0);
TXCHARDISPMODE          : in std_logic_vector(3 downto 0);
TXCHARDISPVAL           : in std_logic_vector(3 downto 0);
TXCHARISK                : in std_logic_vector(3 downto 0);
TXDATA                  : in std_logic_vector(31 downto 0);
TXDATAWIDTH             : in std_logic_vector(1 downto 0);
TXENC64B66BUSE         : in std_ulogic;
TXENC8B10BUSE           : in std_ulogic;
TXGEARBOX64B66BUSE     : in std_ulogic;
TXINHIBIT                : in std_ulogic;
TXINTDATAWIDTH          : in std_logic_vector(1 downto 0);
TXPOLARITY              : in std_ulogic;
TXRESET                 : in std_ulogic;
TXSCRAM64B66BUSE       : in std_ulogic;
TXUSRCLK                : in std_ulogic;
TXUSRCLK2               : in std_ulogic);

```

```
end component;
```

```

-- Component Attribute specification for GT10_10GE_4
-- should be placed after architecture declaration but
-- before the begin keyword

```

```
-- Enter constraints here
```

```

-- Component Instantiation for GT10_10GE_4 should be placed
-- in architecture after the begin keyword

```

```
GT10_10GE_4_INSTANCE_NAME : GT10_10GE_4
```

```
-- synopsys translate_off
```

```
generic map (
```

```

  CHAN_BOND_LIMIT           => integer_value,
  CHAN_BOND_MODE            => string_value,
  CHAN_BOND_ONE_SHOT        => boolean_value,
  CHAN_BOND_SEQ_1_1         => bit_value,
  CHAN_BOND_SEQ_1_2         => bit_value,
  CHAN_BOND_SEQ_1_3         => bit_value,
  CHAN_BOND_SEQ_1_4         => bit_value,
  CHAN_BOND_SEQ_1_MASK      => bit_value,
  CHAN_BOND_SEQ_2_1         => bit_value,
  CHAN_BOND_SEQ_2_2         => bit_value,
  CHAN_BOND_SEQ_2_3         => bit_value,
  CHAN_BOND_SEQ_2_4         => bit_value,
  CHAN_BOND_SEQ_2_MASK      => bit_value,
  CHAN_BOND_SEQ_2_USE       => boolean_value,
  CHAN_BOND_SEQ_LEN         => integer_value,
  CHAN_BOND_64B66B_SV      => boolean_value,
  CLK_COR_MAX_LAT           => integer_value,
  CLK_COR_MIN_LAT           => integer_value,
  CLK_COR_SEQ_1_1           => bit_value,
  CLK_COR_SEQ_1_2           => bit_value,
  CLK_COR_SEQ_1_3           => bit_value,
  CLK_COR_SEQ_1_4           => bit_value,
  CLK_COR_SEQ_1_MASK        => bit_value,
  CLK_COR_SEQ_2_1           => bit_value,
  CLK_COR_SEQ_2_2           => bit_value,
  CLK_COR_SEQ_2_3           => bit_value,
  CLK_COR_SEQ_2_4           => bit_value,

```

```

CLK_COR_SEQ_2_MASK           => bit_value,
CLK_COR_SEQ_2_USE           => boolean_value,
CLK_COR_SEQ_DROP            => boolean_value,
CLK_COR_SEQ_LEN             => integer_value,
CLK_CORRECT_USE             => boolean_value,
PMA_PWR_CNTRL               => bit_value,
PMA_SPEED                   => string_value,
RX_BUFFER_USE               => boolean_value,
RX_LOS_INVALID_INCR        => integer_value,
RX_LOS_THRESHOLD           => integer_value,
RX_LOSS_OF_SYNC_FSM        => boolean_value,
SH_CNT_MAX                  => integer_value,
SH_INVALID_CNT_MAX         => integer_value,
TX_BUFFER_USE               => boolean_value)

-- synopsys translate_on
port map (
  BREFCLKNOUT                => user_BREFCLKNOUT,
  BREFCLKPOUT                => user_BREFCLKPOUT,
  CHBONDDONE                 => user_CHBONDDONE,
  CHBONDO                    => user_CHBONDO,
  PMARXLOCK                  => user_PMARXLOCK,
  RXBUFSTATUS                => user_RXBUFSTATUS,
  RXCHARISCOMMA              => user_RXCHARISCOMMA,
  RXCHARISK                  => user_RXCHARISK,
  RXCLKCORCNT                => user_RXCLKCORCNT,
  RXCOMMADET                 => user_RXCOMMADET,
  RXDATA                     => user_RXDATA,
  RXDISPERR                  => user_RXDISPERR,
  RXLOSSOFSYNC               => user_RXLOSSOFSYNC,
  RXNOTINTABLE               => user_RXNOTINTABLE,
  RXREALIGN                  => user_RXREALIGN,
  RXRECCLK                   => user_RXRECCLK,
  RXRUNDISP                  => user_RXRUNDISP,
  TXBUFERR                   => user_TXBUFERR,
  TXKERR                     => user_TXKERR,
  TXN                        => user_TXN,
  TXOUTCLK                   => user_TXOUTCLK,
  TXP                        => user_TXP,
  TXRUNDISP                  => user_TXRUNDISP,
  BREFCLKNIN                 => user_BREFCLKNIN,
  BREFCLKPIN                 => user_BREFCLKPIN,
  CHBONDI                    => user_CHBONDI,
  ENCHANSYNC                 => user_ENCHANSYNC,
  ENMCOMMAALIGN              => user_ENMCOMMAALIGN,
  ENPCOMMAALIGN              => user_ENPCOMMAALIGN,
  LOOPBACK                   => user_LOOPBACK,
  PMAINIT                    => user_PMAINIT,
  PMAREGADDR                 => user_PMAREGADDR,
  PMAREGDATAIN               => user_PMAREGDATAIN,
  PMAREGRW                   => user_PMAREGRW,
  PMAREGSTROBE               => user_PMAREGSTROBE,
  PMARXLOCKSEL               => user_PMARXLOCKSEL,
  POWERDOWN                  => user_POWERDOWN,
  REFCLK                     => user_REFCLK,
  REFCLK2                    => user_REFCLK2,
  REFCLKBSEL                 => user_REFCLKBSEL,
  REFCLKSEL                  => user_REFCLKSEL,

```

```

RXBLOCKSYNC64B66BUSE => user_RXBLOCKSYNC64B66BUSE,
RXCOMMADETUSE         => user_RXCOMMADETUSE,
RXDATAWIDTH           => user_RXDATAWIDTH,
RXDEC64B66BUSE        => user_RXDEC64B66BUSE,
RXDEC8B10BUSE         => user_RXDEC8B10BUSE,
RXDESCRAM64B66BUSE   => user_RXDESCRAM64B66BUSE,
RXIGNOREBTF           => user_RXIGNOREBTF,
RXINTDATAWIDTH        => user_RXINTDATAWIDTH,
RXN                    => user_RXN,
RXP                    => user_RXP,
RXPOLARITY            => user_RXPOLARITY,
RXRESET               => user_RXRESET,
RXSLIDE                => user_RXSLIDE,
RXUSRCLK               => user_RXUSRCLK,
RXUSRCLK2              => user_RXUSRCLK2,
TXBYPASS8B10B         => user_TXBYPASS8B10B,
TXCHARDISPMODE        => user_TXCHARDISPMODE,
TXCHARDISPVAL         => user_TXCHARDISPVAL,
TXCHARISK              => user_TXCHARISK,
TXDATA                 => user_TXDATA,
TXDATAWIDTH           => user_TXDATAWIDTH,
TXENC64B66BUSE        => user_TXENC64B66BUSE,
TXENC8B10BUSE         => user_TXENC8B10BUSE,
TXGEARBOX64B66BUSE   => user_TXGEARBOX64B66BUSE,
TXINHIBIT              => user_TXINHIBIT,
TXINTDATAWIDTH        => user_TXINTDATAWIDTH,
TXPOLARITY            => user_TXPOLARITY,
TXRESET               => user_TXRESET,
TXSCRAM64B66BUSE     => user_TXSCRAM64B66BUSE,
TXUSRCLK               => user_TXUSRCLK,
TXUSRCLK2              => user_TXUSRCLK2);
    
```

### GT10\_10GE\_8 Code

```

-- Component Attribute specification for GT10_10GE_8
-- should be placed after architecture declaration but
-- before the begin keyword
    
```

```

component GT10_10GE_8
-- synopsis translate_off
generic (
    CHAN_BOND_LIMIT           : integer := 16;
    CHAN_BOND_MODE             : string := "OFF";
    CHAN_BOND_ONE_SHOT        : boolean := FALSE;
    CHAN_BOND_SEQ_1_1          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_2          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_3          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_4          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_MASK      : bit_vector := "0000";
    CHAN_BOND_SEQ_2_1          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_2          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_3          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_4          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_MASK      : bit_vector := "0000";
    CHAN_BOND_SEQ_2_USE        : boolean := TRUE;
    CHAN_BOND_SEQ_LEN          : integer := 8;
    CHAN_BOND_64B66B_SV       : boolean := FALSE;
    CLK_COR_MAX_LAT            : integer := 36;
    
```

```

CLK_COR_MIN_LAT           : integer := 28;
CLK_COR_SEQ_1_1          : bit_vector := "10000011110";
CLK_COR_SEQ_1_2          : bit_vector := "00000000000";
CLK_COR_SEQ_1_3          : bit_vector := "00000000000";
CLK_COR_SEQ_1_4          : bit_vector := "00000000000";
CLK_COR_SEQ_1_MASK       : bit_vector := "0000";
CLK_COR_SEQ_2_1          : bit_vector := "00000000000";
CLK_COR_SEQ_2_2          : bit_vector := "00000000000";
CLK_COR_SEQ_2_3          : bit_vector := "00000000000";
CLK_COR_SEQ_2_4          : bit_vector := "00000000000";
CLK_COR_SEQ_2_MASK       : bit_vector := "0000";
CLK_COR_SEQ_2_USE        : boolean := TRUE;
CLK_COR_SEQ_DROP         : boolean := FALSE;
CLK_COR_SEQ_LEN          : integer := 8;
CLK_CORRECT_USE          : boolean := TRUE;
PMA_PWR_CNTRL            : bit_vector := "11111111";
PMA_SPEED                : string := "6_64";
RX_BUFFER_USE            : boolean := TRUE;
RX_LOS_INVALID_INCR     : integer := 1;
RX_LOS_THRESHOLD         : integer := 4;
RX_LOSS_OF_SYNC_FSM     : boolean := TRUE;
SH_CNT_MAX               : integer := 64;
SH_INVALID_CNT_MAX       : integer := 16;
TX_BUFFER_USE            : boolean := TRUE);

-- synopsys translate_on
port (
    BREFCLKNOUT           : out std_ulogic;
    BREFCLKPOUT           : out std_ulogic;
    CHBONDDONE            : out std_ulogic;
    CHBONDO               : out std_logic_vector(4 downto 0);
    PMARXLOCK             : out std_ulogic;
    RXBUFSTATUS           : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA         : out std_logic_vector(7 downto 0);
    RXCHARISK             : out std_logic_vector(7 downto 0);
    RXCLKCORCNT           : out std_logic_vector(2 downto 0);
    RXCOMMADET            : out std_ulogic;
    RXDATA                : out std_logic_vector(63 downto 0);
    RXDISPERR             : out std_logic_vector(7 downto 0);
    RXLOSSOFSYNC          : out std_logic_vector(1 downto 0);
    RXNOTINTABLE          : out std_logic_vector(7 downto 0);
    RXREALIGN             : out std_ulogic;
    RXRECCLK              : out std_ulogic;
    RXRUNDISP             : out std_logic_vector(7 downto 0);
    TXBUFERR              : out std_ulogic;
    TXKERR                : out std_logic_vector(7 downto 0);
    TXN                   : out std_ulogic;
    TXOUTCLK              : out std_ulogic;
    TXP                   : out std_ulogic;
    TXRUNDISP             : out std_logic_vector(7 downto 0);
    BREFCLKNIN            : in std_ulogic;
    BREFCLKPIN            : in std_ulogic;
    CHBONDI               : in std_logic_vector(4 downto 0);
    ENCHANSYNC            : in std_ulogic;
    ENMCOMMAALIGN         : in std_ulogic;
    ENPCOMMAALIGN         : in std_ulogic;
    LOOPBACK              : in std_logic_vector(1 downto 0);
    PMAINIT               : in std_ulogic;

```

```

PMAREGADDR           : in std_logic_vector(5 downto 0);
PMAREGDATAIN        : in std_logic_vector(7 downto 0);
PMAREGRW            : in std_ulogic;
PMAREGSTROBE        : in std_ulogic;
PMARXLOCKSEL        : in std_logic_vector(1 downto 0);
POWERDOWN           : in std_ulogic;
REFCLK              : in std_ulogic;
REFCLK2             : in std_ulogic;
REFCLKBSEL          : in std_ulogic;
REFCLKSEL           : in std_ulogic;
RXBLOCKSYNC64B66BUSE : in std_ulogic;
RXCOMMADETUSE       : in std_ulogic;
RXDATAWIDTH         : in std_logic_vector(1 downto 0);
RXDEC64B66BUSE      : in std_ulogic;
RXDEC8B10BUSE       : in std_ulogic;
RXDESCRAM64B66BUSE  : in std_ulogic;
RXIGNOREBTF         : in std_ulogic;
RXINTDATAWIDTH      : in std_logic_vector(1 downto 0);
RXN                 : in std_ulogic;
RXP                 : in std_ulogic;
RXPOLARITY          : in std_ulogic;
RXRESET             : in std_ulogic;
RXSLIDE             : in std_ulogic;
RXUSRCLK            : in std_ulogic;
RXUSRCLK2           : in std_ulogic;
TXBYPASS8B10B       : in std_logic_vector(7 downto 0);
TXCHARDISPMODE      : in std_logic_vector(7 downto 0);
TXCHARDISPVAL       : in std_logic_vector(7 downto 0);
TXCHARISK           : in std_logic_vector(7 downto 0);
TXDATA              : in std_logic_vector(63 downto 0);
TXDATAWIDTH         : in std_logic_vector(1 downto 0);
TXENC64B66BUSE      : in std_ulogic;
TXENC8B10BUSE       : in std_ulogic;
TXGEARBOX64B66BUSE  : in std_ulogic;
TXINHIBIT           : in std_ulogic;
TXINTDATAWIDTH      : in std_logic_vector(1 downto 0);
TXPOLARITY          : in std_ulogic;
TXRESET             : in std_ulogic;
TXSCRAM64B66BUSE    : in std_ulogic;
TXUSRCLK            : in std_ulogic;
TXUSRCLK2           : in std_ulogic);

```

```
end component;
```

```
-- Component Attribute specification for GT10_10GE_8
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter constraints here
```

```
-- Component Instantiation for GT10_10GE_8 should be placed
-- in architecture after the begin keyword
```

```
GT10_10GE_8_INSTANCE_NAME : GT10_10GE_8
-- synopsys translate_off
generic map (
    CHAN_BOND_LIMIT           => integer_value,
    CHAN_BOND_MODE            => string_value,
```

```

CHAN_BOND_ONE_SHOT          => boolean_value,
CHAN_BOND_SEQ_1_1           => bit_value,
CHAN_BOND_SEQ_1_2           => bit_value,
CHAN_BOND_SEQ_1_3           => bit_value,
CHAN_BOND_SEQ_1_4           => bit_value,
CHAN_BOND_SEQ_1_MASK        => bit_value,
CHAN_BOND_SEQ_2_1           => bit_value,
CHAN_BOND_SEQ_2_2           => bit_value,
CHAN_BOND_SEQ_2_3           => bit_value,
CHAN_BOND_SEQ_2_4           => bit_value,
CHAN_BOND_SEQ_2_MASK        => bit_value,
CHAN_BOND_SEQ_2_USE         => boolean_value,
CHAN_BOND_SEQ_LEN           => integer_value,
CHAN_BOND_64B66B_SV        => boolean_value,
CLK_COR_MAX_LAT             => integer_value,
CLK_COR_MIN_LAT             => integer_value,
CLK_COR_SEQ_1_1             => bit_value,
CLK_COR_SEQ_1_2             => bit_value,
CLK_COR_SEQ_1_3             => bit_value,
CLK_COR_SEQ_1_4             => bit_value,
CLK_COR_SEQ_1_MASK          => bit_value,
CLK_COR_SEQ_2_1             => bit_value,
CLK_COR_SEQ_2_2             => bit_value,
CLK_COR_SEQ_2_3             => bit_value,
CLK_COR_SEQ_2_4             => bit_value,
CLK_COR_SEQ_2_MASK          => bit_value,
CLK_COR_SEQ_2_USE           => boolean_value,
CLK_COR_SEQ_DROP            => boolean_value,
CLK_COR_SEQ_LEN             => integer_value,
CLK_CORRECT_USE             => boolean_value,
PMA_PWR_CNTRL               => bit_value,
PMA_SPEED                   => string_value,
RX_BUFFER_USE               => boolean_value,
RX_LOS_INVALID_INCR         => integer_value,
RX_LOS_THRESHOLD            => integer_value,
RX_LOSS_OF_SYNC_FSM         => boolean_value,
SH_CNT_MAX                  => integer_value,
SH_INVALID_CNT_MAX          => integer_value,
TX_BUFFER_USE               => boolean_value)

-- synopsys translate_on
port map (
  BREFCLKNOUT                => user_BREFCLKNOUT,
  BREFCLKPOUT                => user_BREFCLKPOUT,
  CHBONDDONE                 => user_CHBONDDONE,
  CHBONDO                    => user_CHBONDO,
  PMARXLOCK                  => user_PMARXLOCK,
  RXBUFSTATUS                => user_RXBUFSTATUS,
  RXCHARISCOMMA              => user_RXCHARISCOMMA,
  RXCHARISK                  => user_RXCHARISK,
  RXCLKCORCNT                => user_RXCLKCORCNT,
  RXCOMMADET                 => user_RXCOMMADET,
  RXDATA                     => user_RXDATA,
  RXDISPERR                  => user_RXDISPERR,
  RXLOSSOFSYNC               => user_RXLOSSOFSYNC,
  RXNOTINTABLE               => user_RXNOTINTABLE,
  RXREALIGN                  => user_RXREALIGN,
  RXRECCLK                   => user_RXRECCLK,

```

```

RXRUNDISP                => user_RXRUNDISP ,
TXBUFERR                 => user_TXBUFERR ,
TXKERR                   => user_TXKERR ,
TXN                      => user_TXN ,
TXOUTCLK                 => user_TXOUTCLK ,
TXP                      => user_TXP ,
TXRUNDISP                => user_TXRUNDISP ,
BREFCLKNIN               => user_BREFCLKNIN ,
BREFCLKPIN               => user_BREFCLKPIN ,
CHBONDI                  => user_CHBONDI ,
ENCHANSYNC               => user_ENCHANSYNC ,
ENMCOMMAALIGN            => user_ENMCOMMAALIGN ,
ENPCOMMAALIGN            => user_ENPCOMMAALIGN ,
LOOPBACK                  => user_LOOPBACK ,
PMAINIT                  => user_PMAINIT ,
PMAREGADDR               => user_PMAREGADDR ,
PMAREGDATAIN             => user_PMAREGDATAIN ,
PMAREGRW                  => user_PMAREGRW ,
PMAREGSTROBE             => user_PMAREGSTROBE ,
PMARXLOCKSEL             => user_PMARXLOCKSEL ,
POWERDOWN                 => user_POWERDOWN ,
REFCLK                    => user_REFCLK ,
REFCLK2                   => user_REFCLK2 ,
REFCLKBSEL                => user_REFCLKBSEL ,
REFCLKSEL                 => user_REFCLKSEL ,
RXBLOCKSYNCS64B66BUSE   => user_RXBLOCKSYNCS64B66BUSE ,
RXCOMMADETUSE            => user_RXCOMMADETUSE ,
RXDATAWIDTH              => user_RXDATAWIDTH ,
RXDEC64B66BUSE           => user_RXDEC64B66BUSE ,
RXDEC8B10BUSE            => user_RXDEC8B10BUSE ,
RXDESCRAM64B66BUSE      => user_RXDESCRAM64B66BUSE ,
RXIGNOREBTF              => user_RXIGNOREBTF ,
RXINTDATAWIDTH           => user_RXINTDATAWIDTH ,
RXN                       => user_RXN ,
RXP                       => user_RXP ,
RXPOLARITY                => user_RXPOLARITY ,
RXRESET                   => user_RXRESET ,
RXSLIDE                   => user_RXSLIDE ,
RXUSRCLK                  => user_RXUSRCLK ,
RXUSRCLK2                 => user_RXUSRCLK2 ,
TXBYPASS8B10B            => user_TXBYPASS8B10B ,
TXCHARDISPMODE           => user_TXCHARDISPMODE ,
TXCHARDISPVAL            => user_TXCHARDISPVAL ,
TXCHARISK                 => user_TXCHARISK ,
TXDATA                    => user_TXDATA ,
TXDATAWIDTH              => user_TXDATAWIDTH ,
TXENC64B66BUSE           => user_TXENC64B66BUSE ,
TXENC8B10BUSE            => user_TXENC8B10BUSE ,
TXGEARBOX64B66BUSE      => user_TXGEARBOX64B66BUSE ,
TXINHIBIT                 => user_TXINHIBIT ,
TXINTDATAWIDTH           => user_TXINTDATAWIDTH ,
TXPOLARITY                => user_TXPOLARITY ,
TXRESET                   => user_TXRESET ,
TXSCRAM64B66BUSE        => user_TXSCRAM64B66BUSE ,
TXUSRCLK                  => user_TXUSRCLK ,
TXUSRCLK2                 => user_TXUSRCLK2 ) ;

```

End Here



## Verilog Instantiation Templates

### GT10\_10GE\_4 Verilog Code

```

GT10_10GE_4 GT10_10GE_4_name(
  .BREFCLKNOUT (user_BREFCLKNOUT),
  .BREFCLKPOUT (user_BREFCLKPOUT),
  .CHBONDDONE (user_CHBONDDONE),
  .CHBONDO (user_CHBONDO),
  .PMARXLOCK (user_PMARXLOCK),
  .RXBUFSTATUS (user_RXBUFSTATUS),
  .RXCHARISCOMMA (user_RXCHARISCOMMA),
  .RXCHARISK (user_RXCHARISK),
  .RXCLKCORCNT (user_RXCLKCORCNT),
  .RXCOMMADET (user_RXCOMMADET),
  .RXDATA (user_RXDATA),
  .RXDISPERR (user_RXDISPERR),
  .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
  .RXNOTINTABLE (user_RXNOTINTABLE),
  .RXREALIGN (user_RXREALIGN),
  .RXRECCLK (user_RXRECCLK),
  .RXRUNDISP (user_RXRUNDISP),
  .TXBUFERR (user_TXBUFERR),
  .TXKERR (user_TXKERR),
  .TXN (user_TXN),
  .TXOUTCLK (user_TXOUTCLK),
  .TXP (user_TXP),
  .TXRUNDISP (user_TXRUNDISP),

  .BREFCLKNIN (user_BREFCLKNIN),
  .BREFCLKPIN (user_BREFCLKPIN),
  .CHBONDI (user_CHBONDI),
  .ENCHANSYNC (user_ENCHANSYNC),
  .ENMCOMMAALIGN (user_ENMCOMMAALIGN),
  .ENPCOMMAALIGN (user_ENPCOMMAALIGN),
  .LOOPBACK (user_LOOPBACK),
  .PMAINIT (user_PMAINIT),
  .PMAREGADDR (user_PMAREGADDR),
  .PMAREGDATAIN (user_PMAREGDATAIN),
  .PMAREGRW (user_PMAREGRW),
  .PMAREGSTROBE (user_PMAREGSTROBE),
  .PMARXLOCKSEL (user_PMARXLOCKSEL),
  .POWERDOWN (user_POWERDOWN),
  .REFCLK (user_REFCLK),
  .REFCLK2 (user_REFCLK2),
  .REFCLKBSEL (user_REFCLKBSEL),
  .REFCLKSEL (user_REFCLKSEL),
  .RXBLOCKSYNC64B66BUSE (user_RXBLOCKSYNC64B66BUSE),
  .RXCOMMADETUSE (user_RXCOMMADETUSE),
  .RXDATAWIDTH (user_RXDATAWIDTH),
  .RXDEC64B66BUSE (user_RXDEC64B66BUSE),
  .RXDEC8B10BUSE (user_RXDEC8B10BUSE),
  .RXDESCRAM64B66BUSE (user_RXDESCRAM64B66BUSE),
  .RXIGNOREBTF (user_RXIGNOREBTF),
  .RXINTDATAWIDTH (user_RXINTDATAWIDTH),
  .RXN (user_RXN),
  .RXP (user_RXP),

```

```

.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXSLIDE (user_RXSLIDE),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXDATAWIDTH (user_TXDATAWIDTH),
.TXENC64B66BUSE (user_TXENC64B66BUSE),
.TXENC8B10BUSE (user_TXENC8B10BUSE),
.TXGEARBOX64B66BUSE (user_TXGEARBOX64B66BUSE),
.TXINHIBIT (user_TXINHIBIT),
.TXINTDATAWIDTH (user_TXINTDATAWIDTH),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXSCRAM64B66BUSE (user_TXSCRAM64B66BUSE),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "TRUE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 8;
defparam user_instance_name.CHAN_BOND_64B66B_SV = "FALSE";
defparam user_instance_name.CLK_COR_MAX_LAT = 36;
defparam user_instance_name.CLK_COR_MIN_LAT = 28;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b10000011110;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "TRUE";
defparam user_instance_name.CLK_COR_SEQ_DROP = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 8;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.PMA_PWR_CNTRL = 8'b11111111;
defparam user_instance_name.PMA_SPEED = "6_32";
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;

```

```

defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SH_CNT_MAX = 64;
defparam user_instance_name.SH_INVALID_CNT_MAX = 16;
defparam user_instance_name.TX_BUFFER_USE = "TRUE";

```

## GT10\_10GE\_8 Verilog Code

```

GT10_10GE_8 GT10_10GE_8_name(
    .BREFCLKNOUT (user_BREFCLKNOUT),
    .BREFCLKPOUT (user_BREFCLKPOUT),
    .CHBONDDONE (user_CHBONDDONE),
    .CHBONDO (user_CHBONDO),
    .PMARXLOCK (user_PMARXLOCK),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCLKCORCNT (user_RXCLKCORCNT),
    .RXCOMMADET (user_RXCOMMADET),
    .RXDATA (user_RXDATA),
    .RXDISPERR (user_RXDISPERR),
    .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
    .RXNOTINTABLE (user_RXNOTINTABLE),
    .RXREALIGN (user_RXREALIGN),
    .RXRECCLK (user_RXRECCLK),
    .RXRUNDISP (user_RXRUNDISP),
    .TXBUFERR (user_TXBUFERR),
    .TXKERR (user_TXKERR),
    .TXN (user_TXN),
    .TXOUTCLK (user_TXOUTCLK),
    .TXP (user_TXP),
    .TXRUNDISP (user_TXRUNDISP),

    .BREFCLKNIN (user_BREFCLKNIN),
    .BREFCLKPIN (user_BREFCLKPIN),
    .CHBONDI (user_CHBONDI),
    .ENCHANSYNC (user_ENCHANSYNC),
    .ENMCOMMAALIGN (user_ENMCOMMAALIGN),
    .ENPCOMMAALIGN (user_ENPCOMMAALIGN),
    .LOOPBACK (user_LOOPBACK),
    .PMAINIT (user_PMAINIT),
    .PMAREGADDR (user_PMAREGADDR),
    .PMAREGDATAIN (user_PMAREGDATAIN),
    .PMAREGRW (user_PMAREGRW),
    .PMAREGSTROBE (user_PMAREGSTROBE),
    .PMARXLOCKSEL (user_PMARXLOCKSEL),
    .POWERDOWN (user_POWERDOWN),
    .REFCLK (user_REFCLK),
    .REFCLK2 (user_REFCLK2),
    .REFCLKBSEL (user_REFCLKBSEL),
    .REFCLKSEL (user_REFCLKSEL),
    .RXBLOCKSYNC64B66BUSE (user_RXBLOCKSYNC64B66BUSE),
    .RXCOMMADETUSE (user_RXCOMMADETUSE),
    .RXDATAWIDTH (user_RXDATAWIDTH),
    .RXDEC64B66BUSE (user_RXDEC64B66BUSE),
    .RXDEC8B10BUSE (user_RXDEC8B10BUSE),
    .RXDESCRAM64B66BUSE (user_RXDESCRAM64B66BUSE),
    .RXIGNOREBTF (user_RXIGNOREBTF),

```

```

.RXINTDATAWIDTH (user_RXINTDATAWIDTH),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXSLIDE (user_RXSLIDE),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXDATAWIDTH (user_TXDATAWIDTH),
.TXENC64B66BUSE (user_TXENC64B66BUSE),
.TXENC8B10BUSE (user_TXENC8B10BUSE),
.TXGEARBOX64B66BUSE (user_TXGEARBOX64B66BUSE),
.TXINHIBIT (user_TXINHIBIT),
.TXINTDATAWIDTH (user_TXINTDATAWIDTH),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXSCRAM64B66BUSE (user_TXSCRAM64B66BUSE),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "TRUE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 8;
defparam user_instance_name.CHAN_BOND_64B66B_SV = "FALSE";
defparam user_instance_name.CLK_COR_MAX_LAT = 36;
defparam user_instance_name.CLK_COR_MIN_LAT = 28;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b10000011110;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b000000000000;
defparam user_instance_name.CLK_COR_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "TRUE";
defparam user_instance_name.CLK_COR_SEQ_DROP = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 8;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.PMA_PWR_CNTRL = 8'b11111111;

```

```
defparam user_instance_name.PMA_SPEED = "6_64";
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.SH_CNT_MAX = 64;
defparam user_instance_name.SH_INVALID_CNT_MAX = 16;
defparam user_instance_name.TX_BUFFER_USE = "TRUE";
```



## GT10\_10GFC\_n

### 10-Gigabit Transceiver for High-Speed I/O

#### Architectures Supported


GT10_10GFC_n	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive*
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
*Supported for Virtex-II Pro X but not for Virtex-II or Virtex-II Pro.	

This Xilinx protocol 10-gigabit transceiver supports 4 and 8-byte data paths. The letter *n* represents number of bytes of the data path. Valid values are 4 or 8.

You can also set attributes for the primitives. See the *RocketIO X Transceiver User Guide* for a description of these attributes and their default attribute values.

For a description of the input and output ports for all values of *n*, see the *RocketIO X Transceiver User Guide*.


GT10\_10GFC\_4

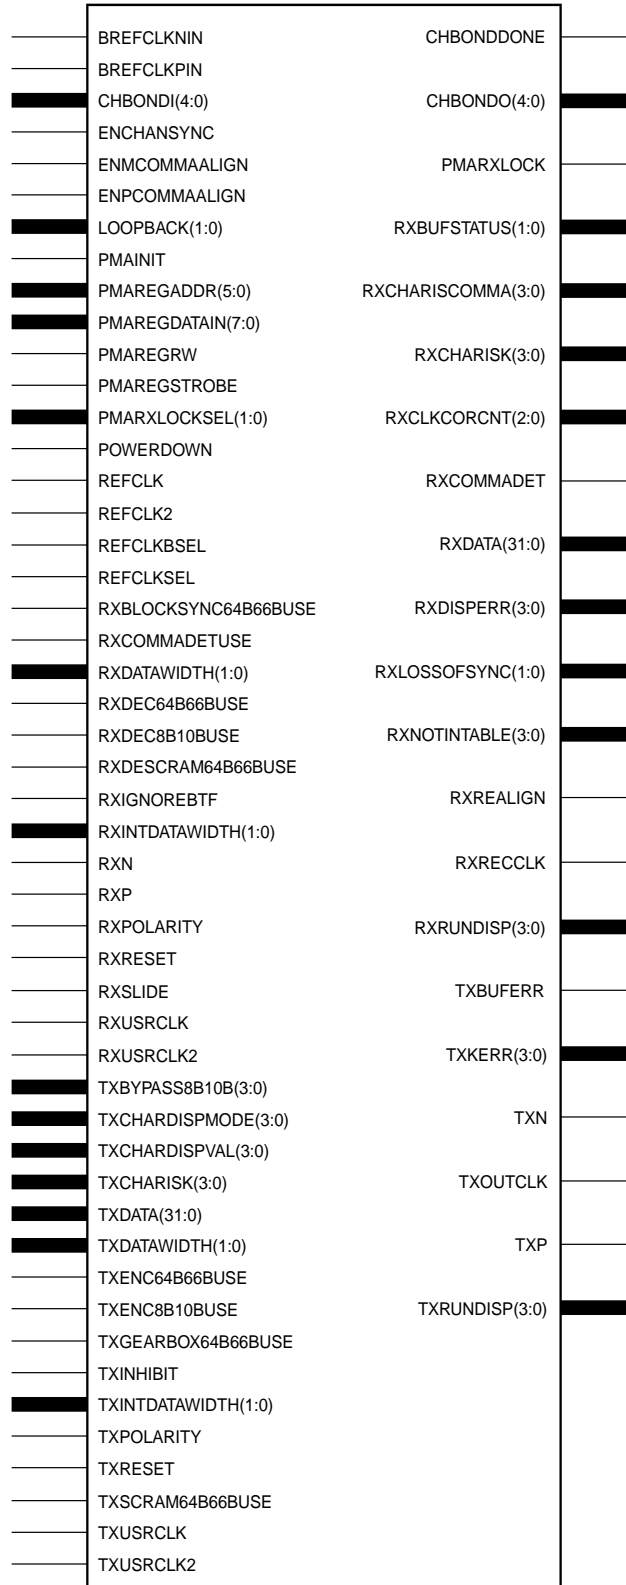

X10043



## GT10\_10GFC\_8

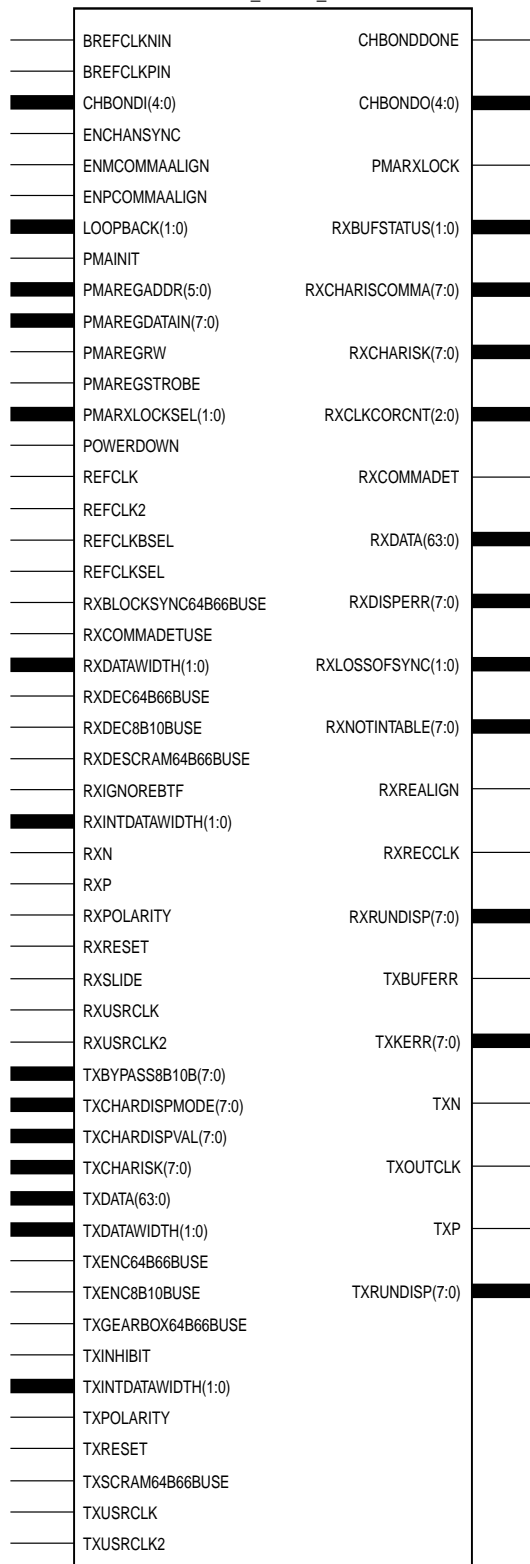

X10044

## Usage

This design element is instantiated rather than inferred in the design code.

## VHDL Instantiation Templates

### GT10\_10GFC\_4 VHDL Code

```
-- Component Attribute specification for GT10_10GFC_4
-- should be placed after architecture declaration but
-- before the begin keyword

component GT10_10GFC_4
-- synopsys translate_off
generic (
    CHAN_BOND_LIMIT           : integer := 16;
    CHAN_BOND_MODE            : string := "OFF";
    CHAN_BOND_ONE_SHOT       : boolean := FALSE;
    CHAN_BOND_SEQ_1_1        : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_2        : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_3        : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_4        : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_MASK     : bit_vector := "0000";
    CHAN_BOND_SEQ_2_1        : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_2        : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_3        : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_4        : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_MASK     : bit_vector := "0000";
    CHAN_BOND_SEQ_2_USE      : boolean := TRUE;
    CHAN_BOND_SEQ_LEN        : integer := 8;
    CHAN_BOND_64B66B_SV     : boolean := FALSE;
    CLK_COR_MAX_LAT          : integer := 36;
    CLK_COR_MIN_LAT          : integer := 28;
    CLK_COR_SEQ_1_1          : bit_vector := "10000011110";
    CLK_COR_SEQ_1_2          : bit_vector := "000000000000";
    CLK_COR_SEQ_1_3          : bit_vector := "000000000000";
    CLK_COR_SEQ_1_4          : bit_vector := "000000000000";
    CLK_COR_SEQ_1_MASK       : bit_vector := "0000";
    CLK_COR_SEQ_2_1          : bit_vector := "000000000000";
    CLK_COR_SEQ_2_2          : bit_vector := "000000000000";
    CLK_COR_SEQ_2_3          : bit_vector := "000000000000";
    CLK_COR_SEQ_2_4          : bit_vector := "000000000000";
    CLK_COR_SEQ_2_MASK       : bit_vector := "0000";
    CLK_COR_SEQ_2_USE        : boolean := TRUE;
    CLK_COR_SEQ_DROP         : boolean := FALSE;
    CLK_COR_SEQ_LEN          : integer := 8;
    CLK_CORRECT_USE          : boolean := TRUE;
    PMA_PWR_CNTRL            : bit_vector := "11111111";
    PMA_SPEED                 : string := "0_32";
    RX_BUFFER_USE             : boolean := TRUE;
    RX_LOS_INVALID_INCR      : integer := 1;
    RX_LOS_THRESHOLD         : integer := 4;
    RX_LOSS_OF_SYNC_FSM     : boolean := TRUE;
    SH_CNT_MAX                : integer := 64;
    SH_INVALID_CNT_MAX       : integer := 16;
    TX_BUFFER_USE             : boolean := TRUE);
```

```

-- synopsys translate_on
port (
    BREFCLKNOUT           : out std_ulogic;
    BREFCLKPOUT          : out std_ulogic;
    CHBONDDONE           : out std_ulogic;
    CHBONDO              : out std_logic_vector(4 downto 0);
    PMARXLOCK            : out std_ulogic;
    RXBUFSTATUS          : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA       : out std_logic_vector(3 downto 0);
    RXCHARISK            : out std_logic_vector(3 downto 0);
    RXCLKCORCNT         : out std_logic_vector(2 downto 0);
    RXCOMMADET          : out std_ulogic;
    RXDATA               : out std_logic_vector(31 downto 0);
    RXDISPERR            : out std_logic_vector(3 downto 0);
    RXLOSSOFSYNC        : out std_logic_vector(1 downto 0);
    RXNOTINTABLE        : out std_logic_vector(3 downto 0);
    RXREALIGN            : out std_ulogic;
    RXRECCLK             : out std_ulogic;
    RXRUNDISP           : out std_logic_vector(3 downto 0);
    TXBUFERR             : out std_ulogic;
    TXKERR               : out std_logic_vector(3 downto 0);
    TXN                  : out std_ulogic;
    TXOUTCLK             : out std_ulogic;
    TXP                  : out std_ulogic;
    TXRUNDISP           : out std_logic_vector(3 downto 0);
    BREFCLKNIN          : in std_ulogic;
    BREFCLKPIN          : in std_ulogic;
    CHBONDI              : in std_logic_vector(4 downto 0);
    ENCHANSYNC           : in std_ulogic;
    ENMCOMMAALIGN       : in std_ulogic;
    ENPCOMMAALIGN       : in std_ulogic;
    LOOPBACK             : in std_logic_vector(1 downto 0);
    PMAINIT             : in std_ulogic;
    PMAREGADDR          : in std_logic_vector(5 downto 0);
    PMAREGDATAIN        : in std_logic_vector(7 downto 0);
    PMAREGRW            : in std_ulogic;
    PMAREGSTROBE        : in std_ulogic;
    PMARXLOCKSEL        : in std_logic_vector(1 downto 0);
    POWERDOWN           : in std_ulogic;
    REFCLK               : in std_ulogic;
    REFCLK2              : in std_ulogic;
    REFCLKBSEL          : in std_ulogic;
    REFCLKSEL           : in std_ulogic;
    RXBLOCKSYNCS64B66BUSE : in std_ulogic;
    RXCOMMADETUSE       : in std_ulogic;
    RXDATAWIDTH         : in std_logic_vector(1 downto 0);
    RXDEC64B66BUSE      : in std_ulogic;
    RXDEC8B10BUSE       : in std_ulogic;
    RXDESCRAM64B66BUSE : in std_ulogic;
    RXIGNOREBTF         : in std_ulogic;
    RXINTDATAWIDTH      : in std_logic_vector(1 downto 0);
    RXN                  : in std_ulogic;
    RXP                  : in std_ulogic;
    RXPOLARITY          : in std_ulogic;
    RXRESET             : in std_ulogic;
    RXSLIDE              : in std_ulogic;
    RXUSRCLK             : in std_ulogic;
    RXUSRCLK2           : in std_ulogic;

```

```

TXBYPASS8B10B           : in std_logic_vector(3 downto 0);
TXCHARDISPMODE          : in std_logic_vector(3 downto 0);
TXCHARDISPVAL           : in std_logic_vector(3 downto 0);
TXCHARISK                : in std_logic_vector(3 downto 0);
TXDATA                  : in std_logic_vector(31 downto 0);
TXDATAWIDTH             : in std_logic_vector(1 downto 0);
TXENC64B66BUSE         : in std_ulogic;
TXENC8B10BUSE           : in std_ulogic;
TXGEARBOX64B66BUSE     : in std_ulogic;
TXINHIBIT               : in std_ulogic;
TXINTDATAWIDTH          : in std_logic_vector(1 downto 0);
TXPOLARITY              : in std_ulogic;
TXRESET                 : in std_ulogic;
TXSCRAM64B66BUSE       : in std_ulogic;
TXUSRCLK                : in std_ulogic;
TXUSRCLK2               : in std_ulogic);

```

```
end component;
```

```

-- Component Attribute specification for GT10_10GFC_4
-- should be placed after architecture declaration but
-- before the begin keyword

```

```
-- Enter constraints here
```

```

-- Component Instantiation for GT10_10GFC_4 should be placed
-- in architecture after the begin keyword

```

```
GT10_10GFC_4_INSTANCE_NAME : GT10_10GFC_4
```

```
-- synopsys translate_off
```

```
generic map (
```

```

  CHAN_BOND_LIMIT           => integer_value,
  CHAN_BOND_MODE            => string_value,
  CHAN_BOND_ONE_SHOT        => boolean_value,
  CHAN_BOND_SEQ_1_1         => bit_value,
  CHAN_BOND_SEQ_1_2         => bit_value,
  CHAN_BOND_SEQ_1_3         => bit_value,
  CHAN_BOND_SEQ_1_4         => bit_value,
  CHAN_BOND_SEQ_1_MASK      => bit_value,
  CHAN_BOND_SEQ_2_1         => bit_value,
  CHAN_BOND_SEQ_2_2         => bit_value,
  CHAN_BOND_SEQ_2_3         => bit_value,
  CHAN_BOND_SEQ_2_4         => bit_value,
  CHAN_BOND_SEQ_2_MASK      => bit_value,
  CHAN_BOND_SEQ_2_USE       => boolean_value,
  CHAN_BOND_SEQ_LEN         => integer_value,
  CHAN_BOND_64B66B_SV      => boolean_value,
  CLK_COR_MAX_LAT           => integer_value,
  CLK_COR_MIN_LAT           => integer_value,
  CLK_COR_SEQ_1_1          => bit_value,
  CLK_COR_SEQ_1_2          => bit_value,
  CLK_COR_SEQ_1_3          => bit_value,
  CLK_COR_SEQ_1_4          => bit_value,
  CLK_COR_SEQ_1_MASK       => bit_value,
  CLK_COR_SEQ_2_1          => bit_value,
  CLK_COR_SEQ_2_2          => bit_value,
  CLK_COR_SEQ_2_3          => bit_value,
  CLK_COR_SEQ_2_4          => bit_value,

```

```

CLK_COR_SEQ_2_MASK           => bit_value,
CLK_COR_SEQ_2_USE           => boolean_value,
CLK_COR_SEQ_DROP            => boolean_value,
CLK_COR_SEQ_LEN             => integer_value,
CLK_CORRECT_USE             => boolean_value,
PMA_PWR_CNTRL               => bit_value,
PMA_SPEED                   => string_value,
RX_BUFFER_USE               => boolean_value,
RX_LOS_INVALID_INCR        => integer_value,
RX_LOS_THRESHOLD           => integer_value,
RX_LOSS_OF_SYNC_FSM        => boolean_value,
SH_CNT_MAX                  => integer_value,
SH_INVALID_CNT_MAX         => integer_value,
TX_BUFFER_USE               => boolean_value)

-- synopsys translate_on
port map (
  BREFCLKNOUT                => user_BREFCLKNOUT,
  BREFCLKPOUT                => user_BREFCLKPOUT,
  CHBONDDONE                 => user_CHBONDDONE,
  CHBONDO                    => user_CHBONDO,
  PMARXLOCK                  => user_PMARXLOCK,
  RXBUFSTATUS                => user_RXBUFSTATUS,
  RXCHARISCOMMA              => user_RXCHARISCOMMA,
  RXCHARISK                  => user_RXCHARISK,
  RXCLKCORCNT                => user_RXCLKCORCNT,
  RXCOMMADET                 => user_RXCOMMADET,
  RXDATA                     => user_RXDATA,
  RXDISPERR                  => user_RXDISPERR,
  RXLOSSOFSYNC               => user_RXLOSSOFSYNC,
  RXNOTINTABLE               => user_RXNOTINTABLE,
  RXREALIGN                  => user_RXREALIGN,
  RXRECCLK                   => user_RXRECCLK,
  RXRUNDISP                  => user_RXRUNDISP,
  TXBUFERR                   => user_TXBUFERR,
  TXKERR                     => user_TXKERR,
  TXN                        => user_TXN,
  TXOUTCLK                   => user_TXOUTCLK,
  TXP                        => user_TXP,
  TXRUNDISP                  => user_TXRUNDISP,
  BREFCLKNIN                 => user_BREFCLKNIN,
  BREFCLKPIN                 => user_BREFCLKPIN,
  CHBONDI                    => user_CHBONDI,
  ENCHANSYNC                 => user_ENCHANSYNC,
  ENMCOMMAALIGN              => user_ENMCOMMAALIGN,
  ENPCOMMAALIGN              => user_ENPCOMMAALIGN,
  LOOPBACK                   => user_LOOPBACK,
  PMAINIT                    => user_PMAINIT,
  PMAREGADDR                 => user_PMAREGADDR,
  PMAREGDATAIN               => user_PMAREGDATAIN,
  PMAREGRW                   => user_PMAREGRW,
  PMAREGSTROBE               => user_PMAREGSTROBE,
  PMARXLOCKSEL               => user_PMARXLOCKSEL,
  POWERDOWN                  => user_POWERDOWN,
  REFCLK                     => user_REFCLK,
  REFCLK2                    => user_REFCLK2,
  REFCLKBSEL                 => user_REFCLKBSEL,
  REFCLKSEL                  => user_REFCLKSEL,

```

```

RXBLOCKSYNC64B66BUSE => user_RXBLOCKSYNC64B66BUSE,
RXCOMMADETUSE         => user_RXCOMMADETUSE,
RXDATAWIDTH          => user_RXDATAWIDTH,
RXDEC64B66BUSE       => user_RXDEC64B66BUSE,
RXDEC8B10BUSE        => user_RXDEC8B10BUSE,
RXDESCRAM64B66BUSE  => user_RXDESCRAM64B66BUSE,
RXIGNOREBTF          => user_RXIGNOREBTF,
RXINTDATAWIDTH       => user_RXINTDATAWIDTH,
RXN                   => user_RXN,
RXP                   => user_RXP,
RXPOLARITY           => user_RXPOLARITY,
RXRESET              => user_RXRESET,
RXSLIDE              => user_RXSLIDE,
RXUSRCLK             => user_RXUSRCLK,
RXUSRCLK2            => user_RXUSRCLK2,
TXBYPASS8B10B        => user_TXBYPASS8B10B,
TXCHARDISPMODE       => user_TXCHARDISPMODE,
TXCHARDISPVAL        => user_TXCHARDISPVAL,
TXCHARISK            => user_TXCHARISK,
TXDATA               => user_TXDATA,
TXDATAWIDTH          => user_TXDATAWIDTH,
TXENC64B66BUSE       => user_TXENC64B66BUSE,
TXENC8B10BUSE        => user_TXENC8B10BUSE,
TXGEARBOX64B66BUSE  => user_TXGEARBOX64B66BUSE,
TXINHIBIT            => user_TXINHIBIT,
TXINTDATAWIDTH       => user_TXINTDATAWIDTH,
TXPOLARITY           => user_TXPOLARITY,
TXRESET              => user_TXRESET,
TXSCRAM64B66BUSE    => user_TXSCRAM64B66BUSE,
TXUSRCLK             => user_TXUSRCLK,
TXUSRCLK2            => user_TXUSRCLK2);

```

### GT10\_10GFC\_8 VHDL Code

```

-- Component Attribute specification for GT10_10GE_8
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

component GT10_10GE_8
-- synopsys translate_off
generic (
    CHAN_BOND_LIMIT           : integer := 16;
    CHAN_BOND_MODE            : string := "OFF";
    CHAN_BOND_ONE_SHOT        : boolean := FALSE;
    CHAN_BOND_SEQ_1_1         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_2         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_3         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_4         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_MASK      : bit_vector := "0000";
    CHAN_BOND_SEQ_2_1         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_2         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_3         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_4         : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_MASK      : bit_vector := "0000";
    CHAN_BOND_SEQ_2_USE       : boolean := TRUE;
    CHAN_BOND_SEQ_LEN         : integer := 8;
    CHAN_BOND_64B66B_SV      : boolean := FALSE;
    CLK_COR_MAX_LAT           : integer := 36;

```

```

CLK_COR_MIN_LAT           : integer := 28;
CLK_COR_SEQ_1_1           : bit_vector := "100000111110";
CLK_COR_SEQ_1_2           : bit_vector := "000000000000";
CLK_COR_SEQ_1_3           : bit_vector := "000000000000";
CLK_COR_SEQ_1_4           : bit_vector := "000000000000";
CLK_COR_SEQ_1_MASK        : bit_vector := "0000";
CLK_COR_SEQ_2_1           : bit_vector := "000000000000";
CLK_COR_SEQ_2_2           : bit_vector := "000000000000";
CLK_COR_SEQ_2_3           : bit_vector := "000000000000";
CLK_COR_SEQ_2_4           : bit_vector := "000000000000";
CLK_COR_SEQ_2_MASK        : bit_vector := "0000";
CLK_COR_SEQ_2_USE         : boolean := TRUE;
CLK_COR_SEQ_DROP          : boolean := FALSE;
CLK_COR_SEQ_LEN           : integer := 8;
CLK_CORRECT_USE           : boolean := TRUE;
PMA_PWR_CNTRL             : bit_vector := "11111111";
PMA_SPEED                  : string := "6_64";
RX_BUFFER_USE             : boolean := TRUE;
RX_LOS_INVALID_INCR       : integer := 1;
RX_LOS_THRESHOLD          : integer := 4;
RX_LOSS_OF_SYNC_FSM      : boolean := TRUE;
SH_CNT_MAX                : integer := 64;
SH_INVALID_CNT_MAX        : integer := 16;
TX_BUFFER_USE             : boolean := TRUE);

-- synopsys translate_on
port (
    BREFCLKNOUT             : out std_ulogic;
    BREFCLKPOUT            : out std_ulogic;
    CHBONDDONE             : out std_ulogic;
    CHBONDO                : out std_logic_vector(4 downto 0);
    PMARXLOCK              : out std_ulogic;
    RXBUFSTATUS            : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA          : out std_logic_vector(7 downto 0);
    RXCHARISK              : out std_logic_vector(7 downto 0);
    RXCLKCORCNT            : out std_logic_vector(2 downto 0);
    RXCOMMADET             : out std_ulogic;
    RXDATA                 : out std_logic_vector(63 downto 0);
    RXDISPERR              : out std_logic_vector(7 downto 0);
    RXLOSSOFSYNC           : out std_logic_vector(1 downto 0);
    RXNOTINTABLE           : out std_logic_vector(7 downto 0);
    RXREALIGN              : out std_ulogic;
    RXRECCLK               : out std_ulogic;
    RXRUNDISP              : out std_logic_vector(7 downto 0);
    TXBUFERR               : out std_ulogic;
    TXKERR                 : out std_logic_vector(7 downto 0);
    TXN                    : out std_ulogic;
    TXOUTCLK               : out std_ulogic;
    TXP                    : out std_ulogic;
    TXRUNDISP              : out std_logic_vector(7 downto 0);
    BREFCLKNIN             : in std_ulogic;
    BREFCLKPIN             : in std_ulogic;
    CHBONDI                : in std_logic_vector(4 downto 0);
    ENCHANSYNC             : in std_ulogic;
    ENMCOMMAALIGN          : in std_ulogic;
    ENPCOMMAALIGN          : in std_ulogic;
    LOOPBACK               : in std_logic_vector(1 downto 0);
    PMAINIT                : in std_ulogic;

```

```

PMAREGADDR           : in std_logic_vector(5 downto 0);
PMAREGDATAIN         : in std_logic_vector(7 downto 0);
PMAREGRW             : in std_ulogic;
PMAREGSTROBE         : in std_ulogic;
PMARXLOCKSEL         : in std_logic_vector(1 downto 0);
POWERDOWN            : in std_ulogic;
REFCLK               : in std_ulogic;
REFCLK2              : in std_ulogic;
REFCLKBSEL           : in std_ulogic;
REFCLKSEL            : in std_ulogic;
RXBLOCKSYNCS64B66BUSE : in std_ulogic;
RXCOMMADETUSE        : in std_ulogic;
RXDATAWIDTH          : in std_logic_vector(1 downto 0);
RXDEC64B66BUSE       : in std_ulogic;
RXDEC8B10BUSE        : in std_ulogic;
RXDESCRAM64B66BUSE  : in std_ulogic;
RXIGNOREBTF          : in std_ulogic;
RXINTDATAWIDTH       : in std_logic_vector(1 downto 0);
RXN                  : in std_ulogic;
RXP                  : in std_ulogic;
RXPOLARITY           : in std_ulogic;
RXRESET              : in std_ulogic;
RXSLIDE              : in std_ulogic;
RXUSRCLK             : in std_ulogic;
RXUSRCLK2            : in std_ulogic;
TXBYPASS8B10B        : in std_logic_vector(7 downto 0);
TXCHARDISPMODE       : in std_logic_vector(7 downto 0);
TXCHARDISPVAL        : in std_logic_vector(7 downto 0);
TXCHARISK            : in std_logic_vector(7 downto 0);
TXDATA               : in std_logic_vector(63 downto 0);
TXDATAWIDTH          : in std_logic_vector(1 downto 0);
TXENC64B66BUSE       : in std_ulogic;
TXENC8B10BUSE        : in std_ulogic;
TXGEARBOX64B66BUSE  : in std_ulogic;
TXINHIBIT            : in std_ulogic;
TXINTDATAWIDTH       : in std_logic_vector(1 downto 0);
TXPOLARITY           : in std_ulogic;
TXRESET              : in std_ulogic;
TXSCRAM64B66BUSE     : in std_ulogic;
TXUSRCLK             : in std_ulogic;
TXUSRCLK2            : in std_ulogic);

```

```
end component;
```

```
-- Component Attribute specification for GT10_10GE_8
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter constraints here
```

```
-- Component Instantiation for GT10_10GE_8 should be placed
-- in architecture after the begin keyword
```

```
GT10_10GE_8_INSTANCE_NAME : GT10_10GE_8
-- synopsys translate_off
generic map (
    CHAN_BOND_LIMIT           => integer_value,
    CHAN_BOND_MODE            => string_value,
```



```

CHAN_BOND_ONE_SHOT           => boolean_value,
CHAN_BOND_SEQ_1_1           => bit_value,
CHAN_BOND_SEQ_1_2           => bit_value,
CHAN_BOND_SEQ_1_3           => bit_value,
CHAN_BOND_SEQ_1_4           => bit_value,
CHAN_BOND_SEQ_1_MASK        => bit_value,
CHAN_BOND_SEQ_2_1           => bit_value,
CHAN_BOND_SEQ_2_2           => bit_value,
CHAN_BOND_SEQ_2_3           => bit_value,
CHAN_BOND_SEQ_2_4           => bit_value,
CHAN_BOND_SEQ_2_MASK        => bit_value,
CHAN_BOND_SEQ_2_USE         => boolean_value,
CHAN_BOND_SEQ_LEN           => integer_value,
CHAN_BOND_64B66B_SV        => boolean_value,
CLK_COR_MAX_LAT             => integer_value,
CLK_COR_MIN_LAT             => integer_value,
CLK_COR_SEQ_1_1             => bit_value,
CLK_COR_SEQ_1_2             => bit_value,
CLK_COR_SEQ_1_3             => bit_value,
CLK_COR_SEQ_1_4             => bit_value,
CLK_COR_SEQ_1_MASK          => bit_value,
CLK_COR_SEQ_2_1             => bit_value,
CLK_COR_SEQ_2_2             => bit_value,
CLK_COR_SEQ_2_3             => bit_value,
CLK_COR_SEQ_2_4             => bit_value,
CLK_COR_SEQ_2_MASK          => bit_value,
CLK_COR_SEQ_2_USE           => boolean_value,
CLK_COR_SEQ_DROP            => boolean_value,
CLK_COR_SEQ_LEN             => integer_value,
CLK_CORRECT_USE             => boolean_value,
PMA_PWR_CNTRL               => bit_value,
PMA_SPEED                   => string_value,
RX_BUFFER_USE                => boolean_value,
RX_LOS_INVALID_INCR         => integer_value,
RX_LOS_THRESHOLD            => integer_value,
RX_LOSS_OF_SYNC_FSM         => boolean_value,
SH_CNT_MAX                   => integer_value,
SH_INVALID_CNT_MAX          => integer_value,
TX_BUFFER_USE                => boolean_value)

-- synopsys translate_on
port map (
  BREFCLKNOUT                 => user_BREFCLKNOUT,
  BREFCLKPOUT                 => user_BREFCLKPOUT,
  CHBONDDONE                  => user_CHBONDDONE,
  CHBONDO                     => user_CHBONDO,
  PMARXLOCK                   => user_PMARXLOCK,
  RXBUFSTATUS                 => user_RXBUFSTATUS,
  RXCHARISCOMMA               => user_RXCHARISCOMMA,
  RXCHARISK                   => user_RXCHARISK,
  RXCLKCORCNT                 => user_RXCLKCORCNT,
  RXCOMMADET                  => user_RXCOMMADET,
  RXDATA                      => user_RXDATA,
  RXDISPERR                   => user_RXDISPERR,
  RXLOSSOFSYNC                => user_RXLOSSOFSYNC,
  RXNOTINTABLE                => user_RXNOTINTABLE,
  RXREALIGN                   => user_RXREALIGN,
  RXRECCLK                    => user_RXRECCLK,

```

```

RXRUNDISP                => user_RXRUNDISP ,
TXBUFERR                  => user_TXBUFERR ,
TXKERR                    => user_TXKERR ,
TXN                       => user_TXN ,
TXOUTCLK                  => user_TXOUTCLK ,
TXP                       => user_TXP ,
TXRUNDISP                 => user_TXRUNDISP ,
BREFCLKNIN                => user_BREFCLKNIN ,
BREFCLKPIN                => user_BREFCLKPIN ,
CHBONDI                   => user_CHBONDI ,
ENCHANSYNC                => user_ENCHANSYNC ,
ENMCOMMAALIGN             => user_ENMCOMMAALIGN ,
ENPCOMMAALIGN             => user_ENPCOMMAALIGN ,
LOOPBACK                  => user_LOOPBACK ,
PMAINIT                   => user_PMAINIT ,
PMAREGADDR                => user_PMAREGADDR ,
PMAREGDATAIN              => user_PMAREGDATAIN ,
PMAREGRW                  => user_PMAREGRW ,
PMAREGSTROBE              => user_PMAREGSTROBE ,
PMARXLOCKSEL              => user_PMARXLOCKSEL ,
POWERDOWN                 => user_POWERDOWN ,
REFCLK                    => user_REFCLK ,
REFCLK2                   => user_REFCLK2 ,
REFCLKBSEL                => user_REFCLKBSEL ,
REFCLKSEL                 => user_REFCLKSEL ,
RXBLOCKSYNCS64B66BUSE    => user_RXBLOCKSYNCS64B66BUSE ,
RXCOMMADETUSE             => user_RXCOMMADETUSE ,
RXDATAWIDTH               => user_RXDATAWIDTH ,
RXDEC64B66BUSE            => user_RXDEC64B66BUSE ,
RXDEC8B10BUSE             => user_RXDEC8B10BUSE ,
RXDESCRAM64B66BUSE       => user_RXDESCRAM64B66BUSE ,
RXIGNOREBTF               => user_RXIGNOREBTF ,
RXINTDATAWIDTH            => user_RXINTDATAWIDTH ,
RXN                        => user_RXN ,
RXP                        => user_RXP ,
RXPOLARITY                => user_RXPOLARITY ,
RXRESET                   => user_RXRESET ,
RXSLIDE                   => user_RXSLIDE ,
RXUSRCLK                  => user_RXUSRCLK ,
RXUSRCLK2                 => user_RXUSRCLK2 ,
TXBYPASS8B10B            => user_TXBYPASS8B10B ,
TXCHARDISPMODE            => user_TXCHARDISPMODE ,
TXCHARDISPVAL             => user_TXCHARDISPVAL ,
TXCHARISK                 => user_TXCHARISK ,
TXDATA                    => user_TXDATA ,
TXDATAWIDTH               => user_TXDATAWIDTH ,
TXENC64B66BUSE            => user_TXENC64B66BUSE ,
TXENC8B10BUSE             => user_TXENC8B10BUSE ,
TXGEARBOX64B66BUSE       => user_TXGEARBOX64B66BUSE ,
TXINHIBIT                 => user_TXINHIBIT ,
TXINTDATAWIDTH            => user_TXINTDATAWIDTH ,
TXPOLARITY                => user_TXPOLARITY ,
TXRESET                   => user_TXRESET ,
TXSCRAM64B66BUSE         => user_TXSCRAM64B66BUSE ,
TXUSRCLK                  => user_TXUSRCLK ,
TXUSRCLK2                 => user_TXUSRCLK2 ) ;

```

## Commonly Used Constraints

None



## GT10\_OC48\_n

### 10-Gigabit Transceiver for High-Speed I/O


#### Architectures Supported

GT10_OC48_n	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive*
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
*Supported for Virtex-II Pro X but not for Virtex-II or Virtex-II Pro.	


This Xilinx protocol 10-gigabit transceiver supports 1, 2 and 4-byte data paths. The letter *n* represents number of bytes of the data path. Valid values are 1, 2, or 4.

You can also set attributes for the primitives. See the *RocketIO X Transceiver User Guide* for a description of these attributes and their default attribute values.

The following figures list the input and output ports for all values of *n*. For a description of each of the ports, see the *RocketIO X Transceiver User Guide*.

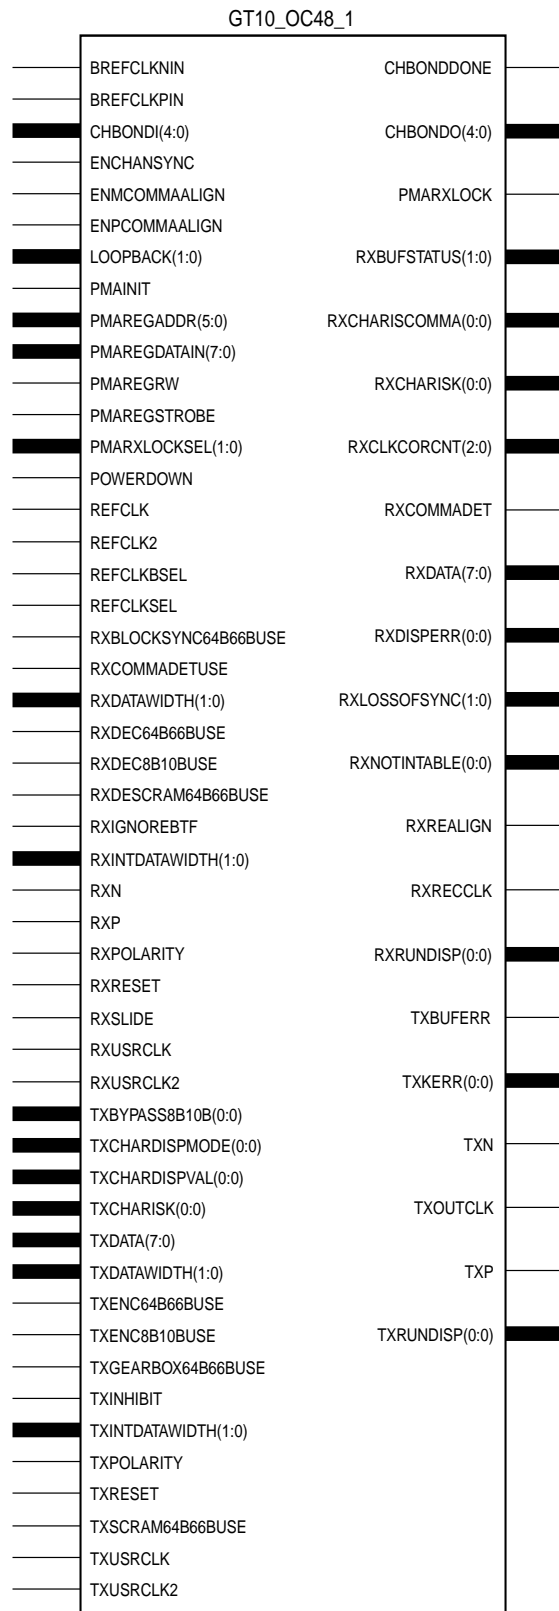


X10056

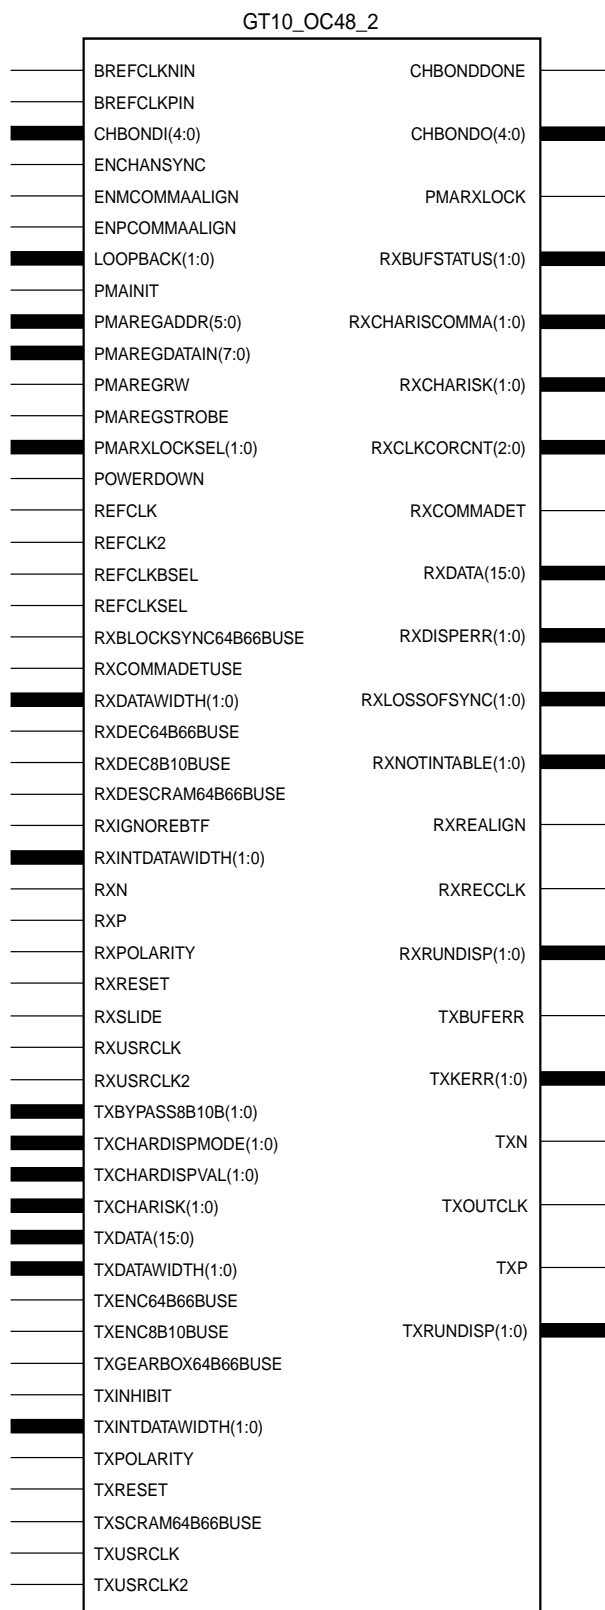

X10057

GT10\_OC48\_4

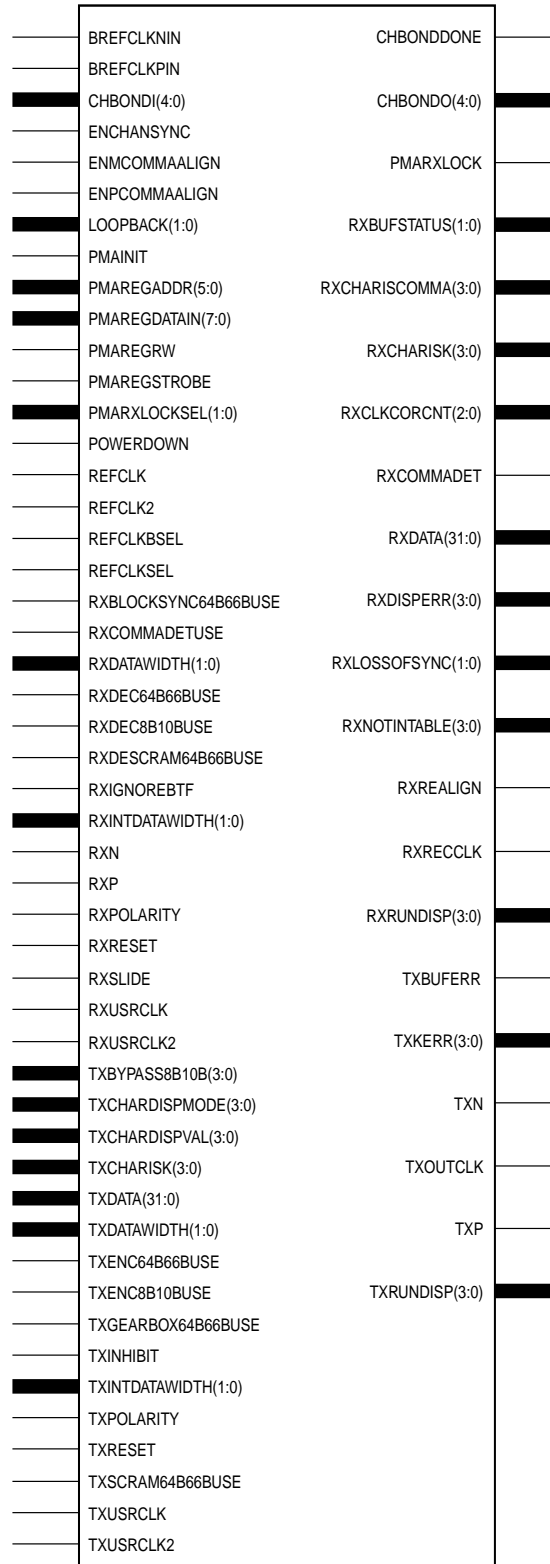

X10058



## Usage

This design element is instantiated rather than inferred in the design code.

## VHDL Instantiation Templates

### GT10\_OC48\_1 VHDL Code

```
-- Component Attribute specification for GT10_OC48_1
-- should be placed after architecture declaration but
-- before the begin keyword

component GT10_OC48_1
-- synopsys translate_off
generic (
    ALIGN_COMMA_WORD           : integer := 1;
    COMMA_10B_MASK             : bit_vector := "0011111111";
    DEC_MCOMMA_DETECT          : boolean := TRUE;
    DEC_PCOMMA_DETECT          : boolean := TRUE;
    MCOMMA_10B_VALUE           : bit_vector := "0010101010";
    MCOMMA_DETECT              : boolean := TRUE;
    PCOMMA_10B_VALUE           : bit_vector := "0010101010";
    PCOMMA_DETECT              : boolean := TRUE;
    PMA_PWR_CNTRL              : bit_vector := "11111111";
    PMA_SPEED                   : string := "31_8";
    RX_BUFFER_USE               : boolean := TRUE;
    RX_LOS_INVALID_INCR        : integer := 1;
    RX_LOS_THRESHOLD           : integer := 4;
    RX_LOSS_OF_SYNC_FSM        : boolean := TRUE;
    TX_BUFFER_USE               : boolean := TRUE);

-- synopsys translate_on
port (
    BREFCLKNOUT                 : out std_ulogic;
    BREFCLKPOUT                 : out std_ulogic;
    CHBONDDONE                  : out std_ulogic;
    CHBONDO                     : out std_logic_vector(4 downto 0);
    PMARXLOCK                   : out std_ulogic;
    RXBUFSTATUS                 : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA               : out std_logic_vector(0 downto 0);
    RXCHARISK                   : out std_logic_vector(0 downto 0);
    RXCLKCORCNT                 : out std_logic_vector(2 downto 0);
    RXCOMMADET                  : out std_ulogic;
    RXDATA                      : out std_logic_vector(7 downto 0);
    RXDISPERR                   : out std_logic_vector(0 downto 0);
    RXLOSSOFSYNC                : out std_logic_vector(1 downto 0);
    RXNOTINTABLE                : out std_logic_vector(0 downto 0);
    RXREALIGN                   : out std_ulogic;
    RXRECCLK                    : out std_ulogic;
    RXRUNDISP                   : out std_logic_vector(0 downto 0);
    TXBUFERR                    : out std_ulogic;
    TXKERR                      : out std_logic_vector(0 downto 0);
    TXN                         : out std_ulogic;
    TXOUTCLK                    : out std_ulogic;
    TXP                         : out std_ulogic;
    TXRUNDISP                   : out std_logic_vector(0 downto 0);
    BREFCLKNIN                  : in std_ulogic;
```

```

BREFCLKPIN           : in std_ulogic;
CHBONDI              : in std_logic_vector(4 downto 0);
ENCHANSYNC           : in std_ulogic;
ENMCOMMAALIGN       : in std_ulogic;
ENPCOMMAALIGN       : in std_ulogic;
LOOPBACK             : in std_logic_vector(1 downto 0);
PMAINIT              : in std_ulogic;
PMAREGADDR           : in std_logic_vector(5 downto 0);
PMAREGDATAIN        : in std_logic_vector(7 downto 0);
PMAREGRW             : in std_ulogic;
PMAREGSTROBE        : in std_ulogic;
PMARXLOCKSEL        : in std_logic_vector(1 downto 0);
POWERDOWN            : in std_ulogic;
REFCLK               : in std_ulogic;
REFCLK2              : in std_ulogic;
REFCLKBSEL           : in std_ulogic;
REFCLKSEL            : in std_ulogic;
RXBLOCKSYNC64B66BUSE : in std_ulogic;
RXCOMMADETUSE       : in std_ulogic;
RXDATAWIDTH         : in std_logic_vector(1 downto 0);
RXDEC64B66BUSE      : in std_ulogic;
RXDEC8B10BUSE       : in std_ulogic;
RXDESCRAM64B66BUSE  : in std_ulogic;
RXIGNOREBTF         : in std_ulogic;
RXINTDATAWIDTH      : in std_logic_vector(1 downto 0);
RXN                  : in std_ulogic;
RXP                  : in std_ulogic;
RXPOLARITY          : in std_ulogic;
RXRESET             : in std_ulogic;
RXSLIDE              : in std_ulogic;
RXUSRCLK             : in std_ulogic;
RXUSRCLK2            : in std_ulogic;
TXBYPASS8B10B       : in std_logic_vector(0 downto 0);
TXCHARDISPMODE      : in std_logic_vector(0 downto 0);
TXCHARDISPVAL       : in std_logic_vector(0 downto 0);
TXCHARISK            : in std_logic_vector(0 downto 0);
TXDATA               : in std_logic_vector(7 downto 0);
TXDATAWIDTH         : in std_logic_vector(1 downto 0);
TXENC64B66BUSE      : in std_ulogic;
TXENC8B10BUSE       : in std_ulogic;
TXGEARBOX64B66BUSE  : in std_ulogic;
TXINHIBIT           : in std_ulogic;
TXINTDATAWIDTH      : in std_logic_vector(1 downto 0);
TXPOLARITY          : in std_ulogic;
TXRESET             : in std_ulogic;
TXSCRAM64B66BUSE    : in std_ulogic;
TXUSRCLK             : in std_ulogic;
TXUSRCLK2            : in std_ulogic);

```

```
end component;
```

```
-- Component Attribute specification for GT10_OC48_1
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter constraints here
```

```
-- Component Instantiation for GT10_OC48_1 should be placed
```

```

-- in architecture after the begin keyword

GT10_OC48_1_INSTANCE_NAME : GT10_OC48_1
-- synopsys translate_off
generic map (
    ALIGN_COMMA_WORD           => integer_value,
    COMMA_10B_MASK             => bit_value,
    DEC_MCOMMA_DETECT          => boolean_value,
    DEC_PCOMMA_DETECT          => boolean_value,
    MCOMMA_10B_VALUE           => bit_value,
    MCOMMA_DETECT              => boolean_value,
    PCOMMA_10B_VALUE           => bit_value,
    PCOMMA_DETECT              => boolean_value,
    PMA_PWR_CNTRL              => bit_value,
    PMA_SPEED                   => string_value,
    RX_BUFFER_USE              => boolean_value,
    RX_LOS_INVALID_INCR        => integer_value,
    RX_LOS_THRESHOLD           => integer_value,
    RX_LOSS_OF_SYNC_FSM        => boolean_value,
    TX_BUFFER_USE              => boolean_value)

-- synopsys translate_on
port map (
    BREFCLKNOUT                 => user_BREFCLKNOUT,
    BREFCLKPOUT                 => user_BREFCLKPOUT,
    CHBONDDONE                  => user_CHBONDDONE,
    CHBONDO                     => user_CHBONDO,
    PMARXLOCK                   => user_PMARXLOCK,
    RXBUFSTATUS                 => user_RXBUFSTATUS,
    RXCHARISCOMMA               => user_RXCHARISCOMMA,
    RXCHARISK                   => user_RXCHARISK,
    RXCLKCORCNT                 => user_RXCLKCORCNT,
    RXCOMMADET                  => user_RXCOMMADET,
    RXDATA                      => user_RXDATA,
    RXDISPERR                   => user_RXDISPERR,
    RXLOSSOFSYNC                => user_RXLOSSOFSYNC,
    RXNOTINTABLE                => user_RXNOTINTABLE,
    RXREALIGN                   => user_RXREALIGN,
    RXRECCLK                    => user_RXRECCLK,
    RXRUNDISP                   => user_RXRUNDISP,
    TXBUFERR                    => user_TXBUFERR,
    TXKERR                      => user_TXKERR,
    TXN                         => user_TXN,
    TXOUTCLK                    => user_TXOUTCLK,
    TXP                         => user_TXP,
    TXRUNDISP                   => user_TXRUNDISP,
    BREFCLKNIN                  => user_BREFCLKNIN,
    BREFCLKPIN                  => user_BREFCLKPIN,
    CHBONDI                     => user_CHBONDI,
    ENCHANSYNC                  => user_ENCHANSYNC,
    ENMCOMMAALIGN               => user_ENMCOMMAALIGN,
    ENPCOMMAALIGN               => user_ENPCOMMAALIGN,
    LOOPBACK                    => user_LOOPBACK,
    PMAINIT                     => user_PMAINIT,
    PMAREGADDR                  => user_PMAREGADDR,
    PMAREGDATAIN                => user_PMAREGDATAIN,
    PMAREGRW                    => user_PMAREGRW,
    PMAREGSTROBE                => user_PMAREGSTROBE,

```

```

PMARXLOCKSEL           => user_PMARXLOCKSEL,
POWERDOWN              => user_POWERDOWN,
REFCLK                 => user_REFCLK,
REFCLK2               => user_REFCLK2,
REFCLKBSEL            => user_REFCLKBSEL,
REFCLKSEL             => user_REFCLKSEL,
RXBLOCKSYNC64B66BUSE => user_RXBLOCKSYNC64B66BUSE,
RXCOMMADETUSE         => user_RXCOMMADETUSE,
RXDATAWIDTH           => user_RXDATAWIDTH,
RXDEC64B66BUSE        => user_RXDEC64B66BUSE,
RXDEC8B10BUSE         => user_RXDEC8B10BUSE,
RXDESCRAM64B66BUSE   => user_RXDESCRAM64B66BUSE,
RXIGNOREBTF           => user_RXIGNOREBTF,
RXINTDATAWIDTH        => user_RXINTDATAWIDTH,
RXN                   => user_RXN,
RXP                   => user_RXP,
RXPOLARITY            => user_RXPOLARITY,
RXRESET               => user_RXRESET,
RXSLIDE               => user_RXSLIDE,
RXUSRCLK              => user_RXUSRCLK,
RXUSRCLK2             => user_RXUSRCLK2,
TXBYPASS8B10B         => user_TXBYPASS8B10B,
TXCHARDISPMODE        => user_TXCHARDISPMODE,
TXCHARDISPVAL         => user_TXCHARDISPVAL,
TXCHARISK             => user_TXCHARISK,
TXDATA                => user_TXDATA,
TXDATAWIDTH           => user_TXDATAWIDTH,
TXENC64B66BUSE        => user_TXENC64B66BUSE,
TXENC8B10BUSE         => user_TXENC8B10BUSE,
TXGEARBOX64B66BUSE   => user_TXGEARBOX64B66BUSE,
TXINHIBIT             => user_TXINHIBIT,
TXINTDATAWIDTH        => user_TXINTDATAWIDTH,
TXPOLARITY            => user_TXPOLARITY,
TXRESET               => user_TXRESET,
TXSCRAM64B66BUSE     => user_TXSCRAM64B66BUSE,
TXUSRCLK              => user_TXUSRCLK,
TXUSRCLK2             => user_TXUSRCLK2);

```

## GT10\_OC48\_2 VHDL Code

```

-- Component Attribute specification for GT10_OC48_2
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

component GT10_OC48_2
-- synopsys translate_off
generic (
    ALIGN_COMMA_WORD           : integer := 1;
    COMMA_10B_MASK             : bit_vector := "0011111111";
    DEC_MCOMMA_DETECT          : boolean := TRUE;
    DEC_PCOMMA_DETECT          : boolean := TRUE;
    MCOMMA_10B_VALUE           : bit_vector := "0010101010";
    MCOMMA_DETECT              : boolean := TRUE;
    PCOMMA_10B_VALUE           : bit_vector := "0010101010";
    PCOMMA_DETECT              : boolean := TRUE;
    PMA_PWR_CNTRL              : bit_vector := "11111111";
    PMA_SPEED                   : string := "31_16";
    RX_BUFFER_USE              : boolean := TRUE;

```

```

RX_LOS_INVALID_INCR      : integer := 1;
RX_LOS_THRESHOLD        : integer := 4;
RX_LOSS_OF_SYNC_FSM     : boolean := TRUE;
TX_BUFFER_USE           : boolean := TRUE);

-- synopsys translate_on
port (
  BREFCLKNOUT            : out std_ulogic;
  BREFCLKPOUT           : out std_ulogic;
  CHBONDDONE            : out std_ulogic;
  CHBONDO               : out std_logic_vector(4 downto 0);
  PMARXLOCK            : out std_ulogic;
  RXBUFSTATUS          : out std_logic_vector(1 downto 0);
  RXCHARISCOMMA        : out std_logic_vector(1 downto 0);
  RXCHARISK            : out std_logic_vector(1 downto 0);
  RXCLKCORCNT          : out std_logic_vector(2 downto 0);
  RXCOMMADET           : out std_ulogic;
  RXDATA               : out std_logic_vector(15 downto 0);
  RXDISPERR            : out std_logic_vector(1 downto 0);
  RXLOSSOFSYNC         : out std_logic_vector(1 downto 0);
  RXNOTINTABLE         : out std_logic_vector(1 downto 0);
  RXREALIGN            : out std_ulogic;
  RXRECCLK             : out std_ulogic;
  RXRUNDISP            : out std_logic_vector(1 downto 0);
  TXBUFERR             : out std_ulogic;
  TXKERR               : out std_logic_vector(1 downto 0);
  TXN                  : out std_ulogic;
  TXOUTCLK             : out std_ulogic;
  TXP                  : out std_ulogic;
  TXRUNDISP            : out std_logic_vector(1 downto 0);
  BREFCLKNIN           : in std_ulogic;
  BREFCLKPIN           : in std_ulogic;
  CHBONDI              : in std_logic_vector(4 downto 0);
  ENCHANSYNC           : in std_ulogic;
  ENMCOMMAALIGN        : in std_ulogic;
  ENPCOMMAALIGN        : in std_ulogic;
  LOOPBACK             : in std_logic_vector(1 downto 0);
  PMAINIT              : in std_ulogic;
  PMAREGADDR           : in std_logic_vector(5 downto 0);
  PMAREGDATAIN         : in std_logic_vector(7 downto 0);
  PMAREGRW             : in std_ulogic;
  PMAREGSTROBE         : in std_ulogic;
  PMARXLOCKSEL         : in std_logic_vector(1 downto 0);
  POWERDOWN            : in std_ulogic;
  REFCLK               : in std_ulogic;
  REFCLK2              : in std_ulogic;
  REFCLKBSEL           : in std_ulogic;
  REFCLKSEL            : in std_ulogic;
  RXBLOCKSYNCS64B66BUSE : in std_ulogic;
  RXCOMMADETUSE        : in std_ulogic;
  RXDATAWIDTH          : in std_logic_vector(1 downto 0);
  RXDEC64B66BUSE      : in std_ulogic;
  RXDEC8B10BUSE       : in std_ulogic;
  RXDESCRAM64B66BUSE  : in std_ulogic;
  RXIGNOREBTF          : in std_ulogic;
  RXINTDATAWIDTH       : in std_logic_vector(1 downto 0);
  RXN                  : in std_ulogic;
  RXP                  : in std_ulogic;

```

```

    RXPOLARITY           : in std_ulogic;
    RXRESET              : in std_ulogic;
    RXSLIDE              : in std_ulogic;
    RXUSRCLK             : in std_ulogic;
    RXUSRCLK2           : in std_ulogic;
    TXBYPASS8B10B       : in std_logic_vector(1 downto 0);
    TXCHARDISPMODE      : in std_logic_vector(1 downto 0);
    TXCHARDISPVAL       : in std_logic_vector(1 downto 0);
    TXCHARISK           : in std_logic_vector(1 downto 0);
    TXDATA               : in std_logic_vector(15 downto 0);
    TXDATAWIDTH         : in std_logic_vector(1 downto 0);
    TXENC64B66BUSE      : in std_ulogic;
    TXENC8B10BUSE       : in std_ulogic;
    TXGEARBOX64B66BUSE : in std_ulogic;
    TXINHIBIT           : in std_ulogic;
    TXINTDATAWIDTH      : in std_logic_vector(1 downto 0);
    TXPOLARITY          : in std_ulogic;
    TXRESET             : in std_ulogic;
    TXSCRAM64B66BUSE    : in std_ulogic;
    TXUSRCLK            : in std_ulogic;
    TXUSRCLK2           : in std_ulogic);

end component;

-- Component Attribute specification for GT10_OC48_2
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter constraints here

-- Component Instantiation for GT10_OC48_2 should be placed
-- in architecture after the begin keyword

GT10_OC48_2_INSTANCE_NAME : GT10_OC48_2
-- synopsys translate_off
generic map (
    ALIGN_COMMA_WORD           => integer_value,
    COMMA_10B_MASK             => bit_value,
    DEC_MCOMMA_DETECT          => boolean_value,
    DEC_PCOMMA_DETECT          => boolean_value,
    MCOMMA_10B_VALUE           => bit_value,
    MCOMMA_DETECT              => boolean_value,
    PCOMMA_10B_VALUE           => bit_value,
    PCOMMA_DETECT              => boolean_value,
    PMA_PWR_CNTRL              => bit_value,
    PMA_SPEED                   => string_value,
    RX_BUFFER_USE              => boolean_value,
    RX_LOS_INVALID_INCR        => integer_value,
    RX_LOS_THRESHOLD           => integer_value,
    RX_LOSS_OF_SYNC_FSM        => boolean_value,
    TX_BUFFER_USE              => boolean_value)
-- synopsys translate_on
port map (
    BREFCLKNOUT                => user_BREFCLKNOUT,
    BREFCLKPOUT                => user_BREFCLKPOUT,
    CHBONDDONE                 => user_CHBONDDONE,
    CHBONDO                    => user_CHBONDO,

```

PMARXLOCK	=> user_PMARXLOCK,
RXBUFSTATUS	=> user_RXBUFSTATUS,
RXCHARISCOMMA	=> user_RXCHARISCOMMA,
RXCHARISK	=> user_RXCHARISK,
RXCLKCORCNT	=> user_RXCLKCORCNT,
RXCOMMADET	=> user_RXCOMMADET,
RXDATA	=> user_RXDATA,
RXDISPERR	=> user_RXDISPERR,
RXLOSSOFSYNC	=> user_RXLOSSOFSYNC,
RXNOTINTABLE	=> user_RXNOTINTABLE,
RXREALIGN	=> user_RXREALIGN,
RXRECCLK	=> user_RXRECCLK,
RXRUNDISP	=> user_RXRUNDISP,
TXBUFERR	=> user_TXBUFERR,
TXKERR	=> user_TXKERR,
TXN	=> user_TXN,
TXOUTCLK	=> user_TXOUTCLK,
TXP	=> user_TXP,
TXRUNDISP	=> user_TXRUNDISP,
BREFCLKNIN	=> user_BREFCLKNIN,
BREFCLKPIN	=> user_BREFCLKPIN,
CHBONDI	=> user_CHBONDI,
ENCHANSYNC	=> user_ENCHANSYNC,
ENMCOMMAALIGN	=> user_ENMCOMMAALIGN,
ENPCOMMAALIGN	=> user_ENPCOMMAALIGN,
LOOPBACK	=> user_LOOPBACK,
PMAINIT	=> user_PMAINIT,
PMAREGADDR	=> user_PMAREGADDR,
PMAREGDATAIN	=> user_PMAREGDATAIN,
PMAREGRW	=> user_PMAREGRW,
PMAREGSTROBE	=> user_PMAREGSTROBE,
PMARXLOCKSEL	=> user_PMARXLOCKSEL,
POWERDOWN	=> user_POWERDOWN,
REFCLK	=> user_REFCLK,
REFCLK2	=> user_REFCLK2,
REFCLKBSEL	=> user_REFCLKBSEL,
REFCLKSEL	=> user_REFCLKSEL,
RXBLOCKS SYNC64B66BUSE	=> user_RXBLOCKS SYNC64B66BUSE,
RXCOMMADETUSE	=> user_RXCOMMADETUSE,
RXDATAWIDTH	=> user_RXDATAWIDTH,
RXDEC64B66BUSE	=> user_RXDEC64B66BUSE,
RXDEC8B10BUSE	=> user_RXDEC8B10BUSE,
RXDESCRAM64B66BUSE	=> user_RXDESCRAM64B66BUSE,
RXIGNOREBTF	=> user_RXIGNOREBTF,
RXINTDATAWIDTH	=> user_RXINTDATAWIDTH,
RXN	=> user_RXN,
RXP	=> user_RXP,
RXPOLARITY	=> user_RXPOLARITY,
RXRESET	=> user_RXRESET,
RXSLIDE	=> user_RXSLIDE,
RXUSRCLK	=> user_RXUSRCLK,
RXUSRCLK2	=> user_RXUSRCLK2,
TXBYPASS8B10B	=> user_TXBYPASS8B10B,
TXCHARDISPMODE	=> user_TXCHARDISPMODE,
TXCHARDISPVAL	=> user_TXCHARDISPVAL,
TXCHARISK	=> user_TXCHARISK,
TXDATA	=> user_TXDATA,
TXDATAWIDTH	=> user_TXDATAWIDTH,

```

TXENC64B66BUSE      => user_TXENC64B66BUSE,
TXENC8B10BUSE       => user_TXENC8B10BUSE,
TXGEARBOX64B66BUSE => user_TXGEARBOX64B66BUSE,
TXINHIBIT           => user_TXINHIBIT,
TXINTDATAWIDTH      => user_TXINTDATAWIDTH,
TXPOLARITY          => user_TXPOLARITY,
TXRESET             => user_TXRESET,
TXSCRAM64B66BUSE   => user_TXSCRAM64B66BUSE,
TXUSRCLK            => user_TXUSRCLK,
TXUSRCLK2           => user_TXUSRCLK2);

```

## GT10\_OC48\_4 VHDL Code

```

-- Component Attribute specification for GT10_OC48_4
-- should be placed after architecture declaration but
-- before the begin keyword

component GT10_OC48_4
-- synopsys translate_off
generic (
    ALIGN_COMMA_WORD      : integer := 1;
    COMMA_10B_MASK        : bit_vector := "0011111111";
    DEC_MCOMMA_DETECT     : boolean := TRUE;
    DEC_PCOMMA_DETECT     : boolean := TRUE;
    MCOMMA_10B_VALUE      : bit_vector := "0010101010";
    MCOMMA_DETECT         : boolean := TRUE;
    PCOMMA_10B_VALUE      : bit_vector := "0010101010";
    PCOMMA_DETECT         : boolean := TRUE;
    PMA_PWR_CNTRL         : bit_vector := "11111111";
    PMA_SPEED              : string := "31_32";
    RX_BUFFER_USE         : boolean := TRUE;
    RX_LOS_INVALID_INCR   : integer := 1;
    RX_LOS_THRESHOLD      : integer := 4;
    RX_LOSS_OF_SYNC_FSM  : boolean := TRUE;
    TX_BUFFER_USE         : boolean := TRUE);
-- synopsys translate_on
port (
    BREFCLKNOUT           : out std_ulogic;
    BREFCLKPOUT           : out std_ulogic;
    CHBONDDONE            : out std_ulogic;
    CHBONDO               : out std_logic_vector(4 downto 0);
    PMARXLOCK             : out std_ulogic;
    RXBUFSTATUS           : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA         : out std_logic_vector(3 downto 0);
    RXCHARISK             : out std_logic_vector(3 downto 0);
    RXCLKCORCNT           : out std_logic_vector(2 downto 0);
    RXCOMMADET            : out std_ulogic;
    RXDATA                : out std_logic_vector(31 downto 0);
    RXDISPERR             : out std_logic_vector(3 downto 0);
    RXLOSSOFSYNC          : out std_logic_vector(1 downto 0);
    RXNOTINTABLE          : out std_logic_vector(3 downto 0);
    RXREALIGN             : out std_ulogic;
    RXRECCLK              : out std_ulogic;
    RXRUNDISP             : out std_logic_vector(3 downto 0);
    TXBUFERR              : out std_ulogic;
    TXKERR                : out std_logic_vector(3 downto 0);
    TXN                   : out std_ulogic;

```



```

TXOUTCLK           : out std_ulogic;
TXP                : out std_ulogic;
TXRUNDISP         : out std_logic_vector(3 downto 0);
BREFCLKNIN        : in std_ulogic;
BREFCLKPIN        : in std_ulogic;
CHBONDI           : in std_logic_vector(4 downto 0);
ENCHANSYNC        : in std_ulogic;
ENMCOMMAALIGN     : in std_ulogic;
ENPCOMMAALIGN     : in std_ulogic;
LOOPBACK          : in std_logic_vector(1 downto 0);
PMAINIT           : in std_ulogic;
PMAREGADDR        : in std_logic_vector(5 downto 0);
PMAREGDATAIN     : in std_logic_vector(7 downto 0);
PMAREGRW          : in std_ulogic;
PMAREGSTROBE      : in std_ulogic;
PMARXLOCKSEL      : in std_logic_vector(1 downto 0);
POWERDOWN         : in std_ulogic;
REFCLK            : in std_ulogic;
REFCLK2           : in std_ulogic;
REFCLKBSEL        : in std_ulogic;
REFCLKSEL         : in std_ulogic;
RXBLOCKSYNC64B66BUSE : in std_ulogic;
RXCOMMADETUSE     : in std_ulogic;
RXDATAWIDTH       : in std_logic_vector(1 downto 0);
RXDEC64B66BUSE    : in std_ulogic;
RXDEC8B10BUSE     : in std_ulogic;
RXDESCRAM64B66BUSE : in std_ulogic;
RXIGNOREBTF       : in std_ulogic;
RXINTDATAWIDTH    : in std_logic_vector(1 downto 0);
RXN               : in std_ulogic;
RXP               : in std_ulogic;
RXPOLARITY        : in std_ulogic;
RXRESET           : in std_ulogic;
RXSLIDE           : in std_ulogic;
RXUSRCLK          : in std_ulogic;
RXUSRCLK2         : in std_ulogic;
TXBYPASS8B10B     : in std_logic_vector(3 downto 0);
TXCHARDISPMODE    : in std_logic_vector(3 downto 0);
TXCHARDISPVAL     : in std_logic_vector(3 downto 0);
TXCHARISK         : in std_logic_vector(3 downto 0);
TXDATA            : in std_logic_vector(31 downto 0);
TXDATAWIDTH       : in std_logic_vector(1 downto 0);
TXENC64B66BUSE    : in std_ulogic;
TXENC8B10BUSE     : in std_ulogic;
TXGEARBOX64B66BUSE : in std_ulogic;
TXINHIBIT         : in std_ulogic;
TXINTDATAWIDTH    : in std_logic_vector(1 downto 0);
TXPOLARITY        : in std_ulogic;
TXRESET           : in std_ulogic;
TXSCRAM64B66BUSE  : in std_ulogic;
TXUSRCLK          : in std_ulogic;
TXUSRCLK2         : in std_ulogic);

```

```
end component;
```

```

-- Component Attribute specification for GT10_OC48_4
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

-- Enter constraints here

-- Component Instantiation for GT10_OC48_4 should be placed
-- in architecture after the begin keyword

GT10_OC48_4_INSTANCE_NAME : GT10_OC48_4
-- synopsys translate_off
generic map (
    ALIGN_COMMA_WORD           => integer_value,
    COMMA_10B_MASK             => bit_value,
    DEC_MCOMMA_DETECT          => boolean_value,
    DEC_PCOMMA_DETECT          => boolean_value,
    MCOMMA_10B_VALUE           => bit_value,
    MCOMMA_DETECT              => boolean_value,
    PCOMMA_10B_VALUE           => bit_value,
    PCOMMA_DETECT              => boolean_value,
    PMA_PWR_CNTRL              => bit_value,
    PMA_SPEED                   => string_value,
    RX_BUFFER_USE               => boolean_value,
    RX_LOS_INVALID_INCR        => integer_value,
    RX_LOS_THRESHOLD           => integer_value,
    RX_LOSS_OF_SYNC_FSM        => boolean_value,
    TX_BUFFER_USE               => boolean_value)

-- synopsys translate_on
port map (
    BREFCLKNOUT                 => user_BREFCLKNOUT,
    BREFCLKPOUT                 => user_BREFCLKPOUT,
    CHBONDDONE                  => user_CHBONDDONE,
    CHBONDO                     => user_CHBONDO,
    PMARXLOCK                   => user_PMARXLOCK,
    RXBUFSTATUS                 => user_RXBUFSTATUS,
    RXCHARISCOMMA               => user_RXCHARISCOMMA,
    RXCHARISK                   => user_RXCHARISK,
    RXCLKCORCNT                 => user_RXCLKCORCNT,
    RXCOMMADET                  => user_RXCOMMADET,
    RXDATA                      => user_RXDATA,
    RXDISPERR                   => user_RXDISPERR,
    RXLOSSOFSYNC                => user_RXLOSSOFSYNC,
    RXNOTINTABLE                => user_RXNOTINTABLE,
    RXREALIGN                   => user_RXREALIGN,
    RXRECCLK                    => user_RXRECCLK,
    RXRUNDISP                   => user_RXRUNDISP,
    TXBUFERR                    => user_TXBUFERR,
    TXKERR                      => user_TXKERR,
    TXN                         => user_TXN,
    TXOUTCLK                    => user_TXOUTCLK,
    TXP                         => user_TXP,
    TXRUNDISP                   => user_TXRUNDISP,
    BREFCLKNIN                  => user_BREFCLKNIN,
    BREFCLKPIN                  => user_BREFCLKPIN,
    CHBONDI                     => user_CHBONDI,
    ENCHANSYNC                  => user_ENCHANSYNC,
    ENMCOMMAALIGN               => user_ENMCOMMAALIGN,
    ENPCOMMAALIGN               => user_ENPCOMMAALIGN,
    LOOPBACK                    => user_LOOPBACK,
    PMAINIT                     => user_PMAINIT,

```

```

PMAREGADDR           => user_PMAREGADDR ,
PMAREGDATAIN         => user_PMAREGDATAIN ,
PMAREGRW             => user_PMAREGRW ,
PMAREGSTROBE        => user_PMAREGSTROBE ,
PMARXLOCKSEL        => user_PMARXLOCKSEL ,
POWERDOWN           => user_POWERDOWN ,
REFCLK              => user_REFCLK ,
REFCLK2             => user_REFCLK2 ,
REFCLKBSEL         => user_REFCLKBSEL ,
REFCLKSEL          => user_REFCLKSEL ,
RXBLOCKSYNCS64B66BUSE => user_RXBLOCKSYNCS64B66BUSE ,
RXCOMMADETUSE      => user_RXCOMMADETUSE ,
RXDATAWIDTH        => user_RXDATAWIDTH ,
RXDEC64B66BUSE     => user_RXDEC64B66BUSE ,
RXDEC8B10BUSE      => user_RXDEC8B10BUSE ,
RXDESCRAM64B66BUSE => user_RXDESCRAM64B66BUSE ,
RXIGNOREBTF        => user_RXIGNOREBTF ,
RXINTDATAWIDTH     => user_RXINTDATAWIDTH ,
RXN                 => user_RXN ,
RXP                 => user_RXP ,
RXPOLARITY         => user_RXPOLARITY ,
RXRESET            => user_RXRESET ,
RXSLIDE            => user_RXSLIDE ,
RXUSRCLK           => user_RXUSRCLK ,
RXUSRCLK2          => user_RXUSRCLK2 ,
TXBYPASS8B10B      => user_TXBYPASS8B10B ,
TXCHARDISPMODE     => user_TXCHARDISPMODE ,
TXCHARDISPVAL      => user_TXCHARDISPVAL ,
TXCHARISK          => user_TXCHARISK ,
TXDATA             => user_TXDATA ,
TXDATAWIDTH        => user_TXDATAWIDTH ,
TXENC64B66BUSE     => user_TXENC64B66BUSE ,
TXENC8B10BUSE      => user_TXENC8B10BUSE ,
TXGEARBOX64B66BUSE => user_TXGEARBOX64B66BUSE ,
TXINHIBIT          => user_TXINHIBIT ,
TXINTDATAWIDTH     => user_TXINTDATAWIDTH ,
TXPOLARITY         => user_TXPOLARITY ,
TXRESET            => user_TXRESET ,
TXSCRAM64B66BUSE  => user_TXSCRAM64B66BUSE ,
TXUSRCLK           => user_TXUSRCLK ,
TXUSRCLK2          => user_TXUSRCLK2 );

```

## Verilog Instantiation Templates

### GT10\_OC48\_1 Verilog Code

```

GT10_OC48_1 GT10_OC48_1_name(
    .BREFCLKNOUT (user_BREFCLKNOUT),
    .BREFCLKPOUT (user_BREFCLKPOUT),
    .CHBONDDONE (user_CHBONDDONE),
    .CHBONDO (user_CHBONDO),
    .PMARXLOCK (user_PMARXLOCK),
    .RXBUFSTATUS (user_RXBUFSTATUS),
    .RXCHARISCOMMA (user_RXCHARISCOMMA),
    .RXCHARISK (user_RXCHARISK),
    .RXCLKCORCNT (user_RXCLKCORCNT),
    .RXCOMMADET (user_RXCOMMADET),

```

```
.RXDATA (user_RXDATA),
.RXDISPERR (user_RXDISPERR),
.RXLOSSOFSYNC (user_RXLOSSOFSYNC),
.RXNOTINTABLE (user_RXNOTINTABLE),
.RXREALIGN (user_RXREALIGN),
.RXRECCLK (user_RXRECCLK),
.RXRUNDISP (user_RXRUNDISP),
.TXBUFERR (user_TXBUFERR),
.TXKERR (user_TXKERR),
.TXN (user_TXN),
.TXOUTCLK (user_TXOUTCLK),
.TXP (user_TXP),
.TXRUNDISP (user_TXRUNDISP),

.BREFCLKNIN (user_BREFCLKNIN),
.BREFCLKPIN (user_BREFCLKPIN),
.CHBONDI (user_CHBONDI),
.ENCHANSYNC (user_ENCHANSYNC),
.ENMCOMMAALIGN (user_ENMCOMMAALIGN),
.ENPCOMMAALIGN (user_ENPCOMMAALIGN),
.LOOPBACK (user_LOOPBACK),
.PMAINIT (user_PMAINIT),
.PMAREGADDR (user_PMAREGADDR),
.PMAREGDATAIN (user_PMAREGDATAIN),
.PMAREGRW (user_PMAREGRW),
.PMAREGSTROBE (user_PMAREGSTROBE),
.PMARXLOCKSEL (user_PMARXLOCKSEL),
.POWERDOWN (user_POWERDOWN),
.REFCLK (user_REFCLK),
.REFCLK2 (user_REFCLK2),
.REFCLKBSEL (user_REFCLKBSEL),
.REFCLKSEL (user_REFCLKSEL),
.RXBLOCKSYNC64B66BUSE (user_RXBLOCKSYNC64B66BUSE),
.RXCOMMADETUSE (user_RXCOMMADETUSE),
.RXDATAWIDTH (user_RXDATAWIDTH),
.RXDEC64B66BUSE (user_RXDEC64B66BUSE),
.RXDEC8B10BUSE (user_RXDEC8B10BUSE),
.RXDESCRAM64B66BUSE (user_RXDESCRAM64B66BUSE),
.RXIGNOREBTF (user_RXIGNOREBTF),
.RXINTDATAWIDTH (user_RXINTDATAWIDTH),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXSLIDE (user_RXSLIDE),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXDATAWIDTH (user_TXDATAWIDTH),
.TXENC64B66BUSE (user_TXENC64B66BUSE),
.TXENC8B10BUSE (user_TXENC8B10BUSE),
.TXGEARBOX64B66BUSE (user_TXGEARBOX64B66BUSE),
.TXINHIBIT (user_TXINHIBIT),
.TXINTDATAWIDTH (user_TXINTDATAWIDTH),
```

```

.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXSCRAM64B66BUSE (user_TXSCRAM64B66BUSE),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_WORD = 1;
defparam user_instance_name.COMMA_10B_MASK = 10'b0011111111;
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b0010101010;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0010101010;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.PMA_PWR_CNTRL = 8'b11111111;
defparam user_instance_name.PMA_SPEED = "31_8";
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.TX_BUFFER_USE = "TRUE";

```

## GT10\_OC48\_2 Verilog Code

```

GT10_OC48_2 GT10_OC48_2_name(
.BREFCLKNOUT (user_BREFCLKNOUT),
.BREFCLKPOUT (user_BREFCLKPOUT),
.CHBONDDONE (user_CHBONDDONE),
.CHBONDO (user_CHBONDO),
.PMARXLOCK (user_PMARXLOCK),
.RXBUFSTATUS (user_RXBUFSTATUS),
.RXCHARISCOMMA (user_RXCHARISCOMMA),
.RXCHARISK (user_RXCHARISK),
.RXCLKCORCNT (user_RXCLKCORCNT),
.RXCOMMADET (user_RXCOMMADET),
.RXDATA (user_RXDATA),
.RXDISPERR (user_RXDISPERR),
.RXLOSSOFSYNC (user_RXLOSSOFSYNC),
.RXNOTINTABLE (user_RXNOTINTABLE),
.RXREALIGN (user_RXREALIGN),
.RXRECCLK (user_RXRECCLK),
.RXRUNDISP (user_RXRUNDISP),
.TXBUFERR (user_TXBUFERR),
.TXKERR (user_TXKERR),
.TXN (user_TXN),
.TXOUTCLK (user_TXOUTCLK),
.TXP (user_TXP),
.TXRUNDISP (user_TXRUNDISP),

.BREFCLKNIN (user_BREFCLKNIN),
.BREFCLKPIN (user_BREFCLKPIN),
.CHBONDI (user_CHBONDI),
.ENCHANSYNC (user_ENCHANSYNC),
.ENMCOMMAALIGN (user_ENMCOMMAALIGN),
.ENPCOMMAALIGN (user_ENPCOMMAALIGN),
.LOOPBACK (user_LOOPBACK),
.PMAINIT (user_PMAINIT),
.PMAREGADDR (user_PMAREGADDR),

```

```

.PMAREGDATAIN (user_PMAREGDATAIN),
.PMAREGRW (user_PMAREGRW),
.PMAREGSTROBE (user_PMAREGSTROBE),
.PMARXLOCKSEL (user_PMARXLOCKSEL),
.POWERDOWN (user_POWERDOWN),
.REFCLK (user_REFCLK),
.REFCLK2 (user_REFCLK2),
.REFCLKBSEL (user_REFCLKBSEL),
.REFCLKSEL (user_REFCLKSEL),
.RXBLOCKSYNC64B66BUSE (user_RXBLOCKSYNC64B66BUSE),
.RXCOMMADETUSE (user_RXCOMMADETUSE),
.RXDATAWIDTH (user_RXDATAWIDTH),
.RXDEC64B66BUSE (user_RXDEC64B66BUSE),
.RXDEC8B10BUSE (user_RXDEC8B10BUSE),
.RXDESCRAM64B66BUSE (user_RXDESCRAM64B66BUSE),
.RXIGNOREBTF (user_RXIGNOREBTF),
.RXINTDATAWIDTH (user_RXINTDATAWIDTH),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXSLIDE (user_RXSLIDE),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXDATAWIDTH (user_TXDATAWIDTH),
.TXENC64B66BUSE (user_TXENC64B66BUSE),
.TXENC8B10BUSE (user_TXENC8B10BUSE),
.TXGEARBOX64B66BUSE (user_TXGEARBOX64B66BUSE),
.TXINHIBIT (user_TXINHIBIT),
.TXINTDATAWIDTH (user_TXINTDATAWIDTH),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXSCRAM64B66BUSE (user_TXSCRAM64B66BUSE),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_WORD = 1;
defparam user_instance_name.COMMA_10B_MASK = 10'b0011111111;
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b0010101010;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0010101010;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.PMA_PWR_CNTRL = 8'b11111111;
defparam user_instance_name.PMA_SPEED = "31_16";
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.TX_BUFFER_USE = "TRUE";

```

## GT10\_OC48\_4 Code

```

GT10_OC48_4 GT10_OC48_4_name(
  .BREFCLKNOUT (user_BREFCLKNOUT),
  .BREFCLKPOUT (user_BREFCLKPOUT),
  .CHBONDDONE (user_CHBONDDONE),
  .CHBONDO (user_CHBONDO),
  .PMARXLOCK (user_PMARXLOCK),
  .RXBUFSTATUS (user_RXBUFSTATUS),
  .RXCHARISCOMMA (user_RXCHARISCOMMA),
  .RXCHARISK (user_RXCHARISK),
  .RXCLKCORCNT (user_RXCLKCORCNT),
  .RXCOMMADET (user_RXCOMMADET),
  .RXDATA (user_RXDATA),
  .RXDISPERR (user_RXDISPERR),
  .RXLOSSOFSYNC (user_RXLOSSOFSYNC),
  .RXNOTINTABLE (user_RXNOTINTABLE),
  .RXREALIGN (user_RXREALIGN),
  .RXRECCLK (user_RXRECCLK),
  .RXRUNDISP (user_RXRUNDISP),
  .TXBUFERR (user_TXBUFERR),
  .TXKERR (user_TXKERR),
  .TXN (user_TXN),
  .TXOUTCLK (user_TXOUTCLK),
  .TXP (user_TXP),
  .TXRUNDISP (user_TXRUNDISP),

  .BREFCLKNIN (user_BREFCLKNIN),
  .BREFCLKPIN (user_BREFCLKPIN),
  .CHBONDI (user_CHBONDI),
  .ENCHANSYNC (user_ENCHANSYNC),
  .ENMCOMMAALIGN (user_ENMCOMMAALIGN),
  .ENPCOMMAALIGN (user_ENPCOMMAALIGN),
  .LOOPBACK (user_LOOPBACK),
  .PMAINIT (user_PMAINIT),
  .PMAREGADDR (user_PMAREGADDR),
  .PMAREGDATAIN (user_PMAREGDATAIN),
  .PMAREGRW (user_PMAREGRW),
  .PMAREGSTROBE (user_PMAREGSTROBE),
  .PMARXLOCKSEL (user_PMARXLOCKSEL),
  .POWERDOWN (user_POWERDOWN),
  .REFCLK (user_REFCLK),
  .REFCLK2 (user_REFCLK2),
  .REFCLKBSEL (user_REFCLKBSEL),
  .REFCLKSEL (user_REFCLKSEL),
  .RXBLOCKSYNC64B66BUSE (user_RXBLOCKSYNC64B66BUSE),
  .RXCOMMADETUSE (user_RXCOMMADETUSE),
  .RXDATAWIDTH (user_RXDATAWIDTH),
  .RXDEC64B66BUSE (user_RXDEC64B66BUSE),
  .RXDEC8B10BUSE (user_RXDEC8B10BUSE),
  .RXDESCRAM64B66BUSE (user_RXDESCRAM64B66BUSE),
  .RXIGNOREBTF (user_RXIGNOREBTF),
  .RXINTDATAWIDTH (user_RXINTDATAWIDTH),
  .RXN (user_RXN),
  .RXP (user_RXP),
  .RXPOLARITY (user_RXPOLARITY),
  .RXRESET (user_RXRESET),
  .RXSLIDE (user_RXSLIDE),

```

```
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXDATAWIDTH (user_TXDATAWIDTH),
.TXENC64B66BUSE (user_TXENC64B66BUSE),
.TXENC8B10BUSE (user_TXENC8B10BUSE),
.TXGEARBOX64B66BUSE (user_TXGEARBOX64B66BUSE),
.TXINHIBIT (user_TXINHIBIT),
.TXINTDATAWIDTH (user_TXINTDATAWIDTH),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXSCRAM64B66BUSE (user_TXSCRAM64B66BUSE),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_WORD = 1;
defparam user_instance_name.COMMA_10B_MASK = 10'b0011111111;
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b0010101010;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0010101010;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.PMA_PWR_CNTRL = 8'b11111111;
defparam user_instance_name.PMA_SPEED = "31_32";
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.TX_BUFFER_USE = "TRUE";
```

## Commonly Used Constraints

None



## GT10\_OC192\_n

### 10-Gigabit Transceiver for High-Speed I/O

#### Architectures Supported


GT10_OC192_n	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive*
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
*Supported for Virtex-II Pro X but not for Virtex-II or Virtex-II Pro.	

This Xilinx protocol 10-gigabit transceiver supports 4 and 8-byte data paths. The letter *n* represents number of bytes of the data path. Valid values are 4 or 8.


You can also set attributes for the primitives. See the *RocketIO X Transceiver User Guide* for a description of these attributes and their default attribute values.

The following figures list the input and output ports for all values of *n*. For a description of each of the ports, see the *RocketIO X Transceiver User Guide*.

GT10\_OC192\_4

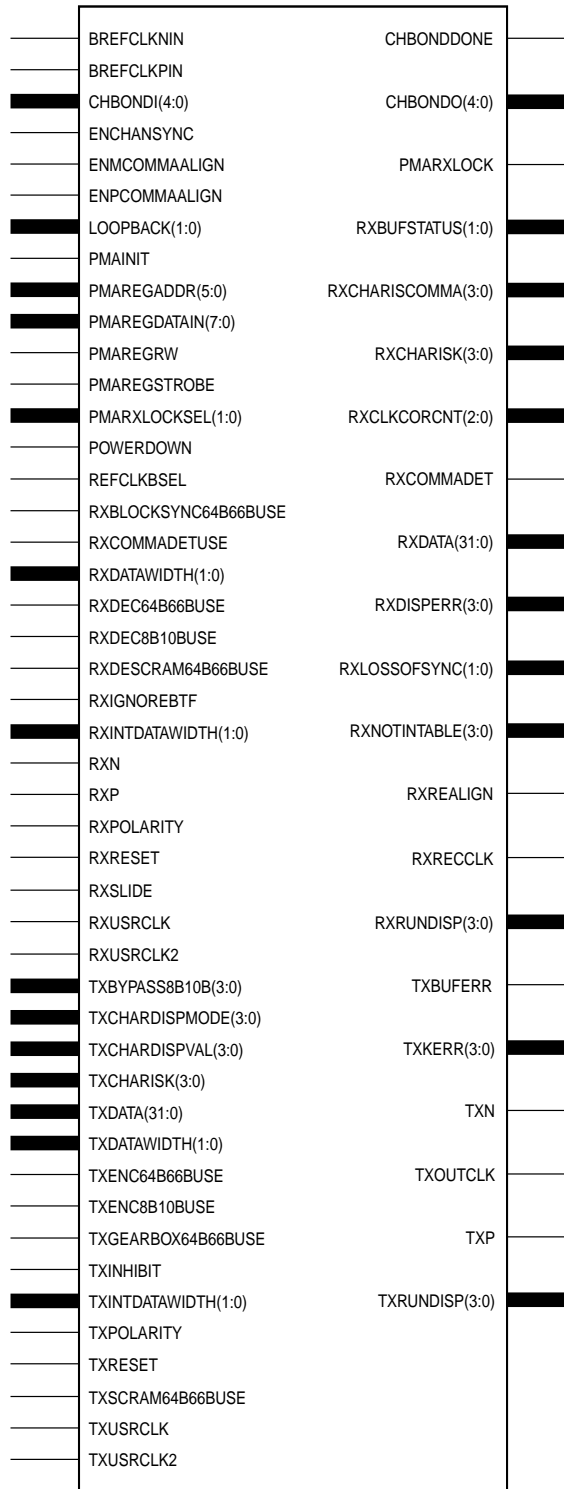

X10054

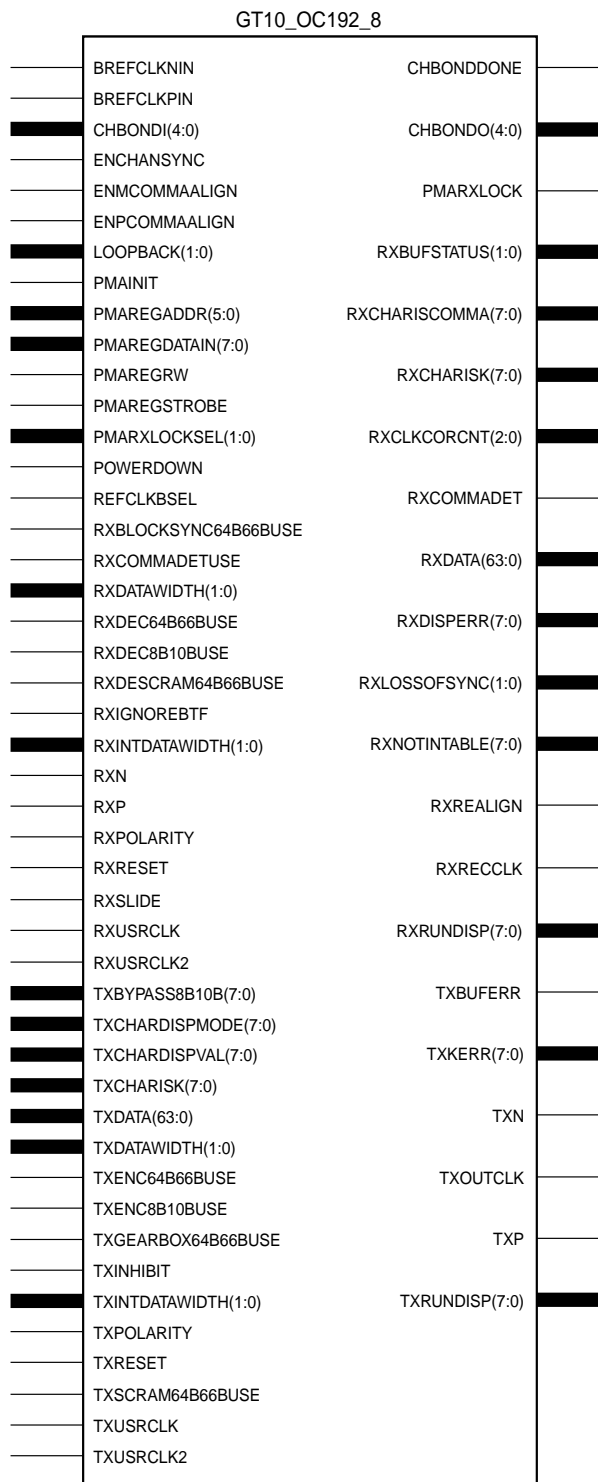

X10055

## Usage

This design element is instantiated rather than inferred in the design code.

## VHDL Instantiation Templates

### GT10\_OC192\_4 VHDL Code

```
-- Component Attribute specification for GT10_OC192_4
-- should be placed after architecture declaration but
-- before the begin keyword

component GT10_OC192_4
-- synopsys translate_off
generic (
    ALIGN_COMMA_WORD           : integer := 1;
    COMMA_10B_MASK             : bit_vector := "0011111111";
    DEC_MCOMMA_DETECT          : boolean := TRUE;
    DEC_PCOMMA_DETECT          : boolean := TRUE;
    MCOMMA_10B_VALUE           : bit_vector := "0010101010";
    MCOMMA_DETECT              : boolean := TRUE;
    PCOMMA_10B_VALUE           : bit_vector := "0010101010";
    PCOMMA_DETECT              : boolean := TRUE;
    PMA_PWR_CNTRL              : bit_vector := "11111111";
    PMA_SPEED                   : string := "15_32";
    RX_BUFFER_USE              : boolean := TRUE;
    RX_LOS_INVALID_INCR        : integer := 1;
    RX_LOS_THRESHOLD           : integer := 4;
    RX_LOSS_OF_SYNC_FSM        : boolean := TRUE;
    TX_BUFFER_USE              : boolean := TRUE);

-- synopsys translate_on
port (
    BREFCLKNOUT                 : out std_ulogic;
    BREFCLKPOUT                 : out std_ulogic;
    CHBONDDONE                  : out std_ulogic;
    CHBONDO                     : out std_logic_vector(4 downto 0);
    PMARXLOCK                   : out std_ulogic;
    RXBUFSTATUS                 : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA               : out std_logic_vector(3 downto 0);
    RXCHARISK                   : out std_logic_vector(3 downto 0);
    RXCLKCORCNT                 : out std_logic_vector(2 downto 0);
    RXCOMMADET                  : out std_ulogic;
    RXDATA                      : out std_logic_vector(31 downto 0);
    RXDISPERR                   : out std_logic_vector(3 downto 0);
    RXLOSSOFSYNC                : out std_logic_vector(1 downto 0);
    RXNOTINTABLE                : out std_logic_vector(3 downto 0);
    RXREALIGN                   : out std_ulogic;
    RXRECCLK                    : out std_ulogic;
    RXRUNDISP                   : out std_logic_vector(3 downto 0);
    TXBUFERR                    : out std_ulogic;
    TXKERR                      : out std_logic_vector(3 downto 0);
    TXN                         : out std_ulogic;
    TXOUTCLK                    : out std_ulogic;
    TXP                         : out std_ulogic;
    TXRUNDISP                   : out std_logic_vector(3 downto 0);
    BREFCLKNIN                  : in std_ulogic;
```

```

BREFCLKPIN           : in std_ulogic;
CHBONDI              : in std_logic_vector(4 downto 0);
ENCHANSYNC           : in std_ulogic;
ENMCOMMAALIGN        : in std_ulogic;
ENPCOMMAALIGN        : in std_ulogic;
LOOPBACK             : in std_logic_vector(1 downto 0);
PMAINIT              : in std_ulogic;
PMAREGADDR           : in std_logic_vector(5 downto 0);
PMAREGDATAIN         : in std_logic_vector(7 downto 0);
PMAREGRW             : in std_ulogic;
PMAREGSTROBE         : in std_ulogic;
PMARXLOCKSEL         : in std_logic_vector(1 downto 0);
POWERDOWN            : in std_ulogic;
REFCLKBSEL           : in std_ulogic;
RXBLOCKSYNC64B66BUSE : in std_ulogic;
RXCOMMADETUSE        : in std_ulogic;
RXDATAWIDTH          : in std_logic_vector(1 downto 0);
RXDEC64B66BUSE       : in std_ulogic;
RXDEC8B10BUSE        : in std_ulogic;
RXDESCRAM64B66BUSE  : in std_ulogic;
RXIGNOREBTF          : in std_ulogic;
RXINTDATAWIDTH       : in std_logic_vector(1 downto 0);
RXN                   : in std_ulogic;
RXP                   : in std_ulogic;
RXPOLARITY           : in std_ulogic;
RXRESET              : in std_ulogic;
RXSLIDE              : in std_ulogic;
RXUSRCLK              : in std_ulogic;
RXUSRCLK2            : in std_ulogic;
TXBYPASS8B10B        : in std_logic_vector(3 downto 0);
TXCHARDISPMODE        : in std_logic_vector(3 downto 0);
TXCHARDISPVAL         : in std_logic_vector(3 downto 0);
TXCHARISK             : in std_logic_vector(3 downto 0);
TXDATA                : in std_logic_vector(31 downto 0);
TXDATAWIDTH           : in std_logic_vector(1 downto 0);
TXENC64B66BUSE        : in std_ulogic;
TXENC8B10BUSE         : in std_ulogic;
TXGEARBOX64B66BUSE   : in std_ulogic;
TXINHIBIT             : in std_ulogic;
TXINTDATAWIDTH        : in std_logic_vector(1 downto 0);
TXPOLARITY            : in std_ulogic;
TXRESET              : in std_ulogic;
TXSCRAM64B66BUSE     : in std_ulogic;
TXUSRCLK              : in std_ulogic;
TXUSRCLK2            : in std_ulogic);

```

```
end component;
```

```
-- Component Attribute specification for GT10_OC192_4
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter constraints here
```

```
-- Component Instantiation for GT10_OC192_4 should be placed
-- in architecture after the begin keyword
```

```
GT10_OC192_4_INSTANCE_NAME : GT10_OC192_4
```

```

-- synopsys translate_off
generic map (
    ALIGN_COMMA_WORD           => integer_value,
    COMMA_10B_MASK             => bit_value,
    DEC_MCOMMA_DETECT          => boolean_value,
    DEC_PCOMMA_DETECT          => boolean_value,
    MCOMMA_10B_VALUE           => bit_value,
    MCOMMA_DETECT              => boolean_value,
    PCOMMA_10B_VALUE           => bit_value,
    PCOMMA_DETECT              => boolean_value,
    PMA_PWR_CNTRL              => bit_value,
    PMA_SPEED                   => string_value,
    RX_BUFFER_USE              => boolean_value,
    RX_LOS_INVALID_INCR        => integer_value,
    RX_LOS_THRESHOLD           => integer_value,
    RX_LOSS_OF_SYNC_FSM        => boolean_value,
    TX_BUFFER_USE              => boolean_value)

-- synopsys translate_on
port map (
    BREFCLKNOUT                 => user_BREFCLKNOUT,
    BREFCLKPOUT                 => user_BREFCLKPOUT,
    CHBONDDONE                  => user_CHBONDDONE,
    CHBONDO                     => user_CHBONDO,
    PMARXLOCK                   => user_PMARXLOCK,
    RXBUFSTATUS                 => user_RXBUFSTATUS,
    RXCHARISCOMMA               => user_RXCHARISCOMMA,
    RXCHARISK                   => user_RXCHARISK,
    RXCLKCORCNT                 => user_RXCLKCORCNT,
    RXCOMMADET                 => user_RXCOMMADET,
    RXDATA                      => user_RXDATA,
    RXDISPERR                   => user_RXDISPERR,
    RXLOSSOFSYNC                => user_RXLOSSOFSYNC,
    RXNOTINTABLE               => user_RXNOTINTABLE,
    RXREALIGN                   => user_RXREALIGN,
    RXRECCLK                    => user_RXRECCLK,
    RXRUNDISP                   => user_RXRUNDISP,
    TXBUFERR                    => user_TXBUFERR,
    TXKERR                      => user_TXKERR,
    TXN                         => user_TXN,
    TXOUTCLK                    => user_TXOUTCLK,
    TXP                         => user_TXP,
    TXRUNDISP                   => user_TXRUNDISP,
    BREFCLKNIN                  => user_BREFCLKNIN,
    BREFCLKPIN                  => user_BREFCLKPIN,
    CHBONDI                     => user_CHBONDI,
    ENCHANSYNC                  => user_ENCHANSYNC,
    ENMCOMMAALIGN              => user_ENMCOMMAALIGN,
    ENPCOMMAALIGN              => user_ENPCOMMAALIGN,
    LOOPBACK                    => user_LOOPBACK,
    PMAINIT                     => user_PMAINIT,
    PMAREGADDR                  => user_PMAREGADDR,
    PMAREGDATAIN               => user_PMAREGDATAIN,
    PMAREGRW                    => user_PMAREGRW,
    PMAREGSTROBE                => user_PMAREGSTROBE,
    PMARXLOCKSEL                => user_PMARXLOCKSEL,
    POWERDOWN                   => user_POWERDOWN,
    REFCLKBSEL                  => user_REFCLKBSEL,

```

```

RXBLOCKSYNC64B66BUSE => user_RXBLOCKSYNC64B66BUSE,
RXCOMMADETUSE         => user_RXCOMMADETUSE,
RXDATAWIDTH          => user_RXDATAWIDTH,
RXDEC64B66BUSE       => user_RXDEC64B66BUSE,
RXDEC8B10BUSE        => user_RXDEC8B10BUSE,
RXDESCRAM64B66BUSE   => user_RXDESCRAM64B66BUSE,
RXIGNOREBTF          => user_RXIGNOREBTF,
RXINTDATAWIDTH       => user_RXINTDATAWIDTH,
RXN                   => user_RXN,
RXP                   => user_RXP,
RXPOLARITY           => user_RXPOLARITY,
RXRESET              => user_RXRESET,
RXSLIDE              => user_RXSLIDE,
RXUSRCLK             => user_RXUSRCLK,
RXUSRCLK2            => user_RXUSRCLK2,
TXBYPASS8B10B        => user_TXBYPASS8B10B,
TXCHARDISPMODE       => user_TXCHARDISPMODE,
TXCHARDISPVAL        => user_TXCHARDISPVAL,
TXCHARISK            => user_TXCHARISK,
TXDATA               => user_TXDATA,
TXDATAWIDTH          => user_TXDATAWIDTH,
TXENC64B66BUSE       => user_TXENC64B66BUSE,
TXENC8B10BUSE        => user_TXENC8B10BUSE,
TXGEARBOX64B66BUSE  => user_TXGEARBOX64B66BUSE,
TXINHIBIT            => user_TXINHIBIT,
TXINTDATAWIDTH       => user_TXINTDATAWIDTH,
TXPOLARITY           => user_TXPOLARITY,
TXRESET              => user_TXRESET,
TXSCRAM64B66BUSE    => user_TXSCRAM64B66BUSE,
TXUSRCLK             => user_TXUSRCLK,
TXUSRCLK2            => user_TXUSRCLK2);

```

## GT10\_OC192\_8 VHDL Code

```

-- Component Attribute specification for GT10_OC192_8
-- should be placed after architecture declaration but
-- before the begin keyword

component GT10_OC192_8
-- synopsys translate_off
generic (
    ALIGN_COMMA_WORD           : integer := 1;
    COMMA_10B_MASK             : bit_vector := "0011111111";
    DEC_MCOMMA_DETECT          : boolean := TRUE;
    DEC_PCOMMA_DETECT          : boolean := TRUE;
    MCOMMA_10B_VALUE           : bit_vector := "0010101010";
    MCOMMA_DETECT              : boolean := TRUE;
    PCOMMA_10B_VALUE           : bit_vector := "0010101010";
    PCOMMA_DETECT              : boolean := TRUE;
    PMA_PWR_CNTRL              : bit_vector := "11111111";
    PMA_SPEED                   : string := "15_64";
    RX_BUFFER_USE              : boolean := TRUE;
    RX_LOS_INVALID_INCR        : integer := 1;
    RX_LOS_THRESHOLD           : integer := 4;
    RX_LOSS_OF_SYNC_FSM       : boolean := TRUE;
    TX_BUFFER_USE              : boolean := TRUE);
-- synopsys translate_on

```

```

port (
    BREFCLKNOUT                : out std_ulogic;
    BREFCLKPOUT                : out std_ulogic;
    CHBONDDONE                 : out std_ulogic;
    CHBONDO                    : out std_logic_vector(4 downto 0);
    PMARXLOCK                  : out std_ulogic;
    RXBUFSTATUS                : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA              : out std_logic_vector(7 downto 0);
    RXCHARISK                   : out std_logic_vector(7 downto 0);
    RXCLKCORCNT                : out std_logic_vector(2 downto 0);
    RXCOMMADET                 : out std_ulogic;
    RXDATA                     : out std_logic_vector(63 downto 0);
    RXDISPERR                  : out std_logic_vector(7 downto 0);
    RXLOSSOFSYNC               : out std_logic_vector(1 downto 0);
    RXNOTINTABLE               : out std_logic_vector(7 downto 0);
    RXREALIGN                   : out std_ulogic;
    RXRECCLK                   : out std_ulogic;
    RXRUNDISP                  : out std_logic_vector(7 downto 0);
    TXBUFERR                    : out std_ulogic;
    TXKERR                      : out std_logic_vector(7 downto 0);
    TXN                         : out std_ulogic;
    TXOUTCLK                   : out std_ulogic;
    TXP                         : out std_ulogic;
    TXRUNDISP                  : out std_logic_vector(7 downto 0);
    BREFCLKNIN                 : in std_ulogic;
    BREFCLKPIN                  : in std_ulogic;
    CHBONDI                     : in std_logic_vector(4 downto 0);
    ENCHANSYNC                  : in std_ulogic;
    ENMCOMMAALIGN              : in std_ulogic;
    ENPCOMMAALIGN              : in std_ulogic;
    LOOPBACK                    : in std_logic_vector(1 downto 0);
    PMAINIT                     : in std_ulogic;
    PMAREGADDR                  : in std_logic_vector(5 downto 0);
    PMAREGDATAIN                : in std_logic_vector(7 downto 0);
    PMAREGRW                    : in std_ulogic;
    PMAREGSTROBE                : in std_ulogic;
    PMARXLOCKSEL                : in std_logic_vector(1 downto 0);
    POWERDOWN                   : in std_ulogic;
    REFCLKBSEL                  : in std_ulogic;
    RXBLOCKSYNC64B66BUSE       : in std_ulogic;
    RXCOMMADETUSE               : in std_ulogic;
    RXDATAWIDTH                 : in std_logic_vector(1 downto 0);
    RXDEC64B66BUSE              : in std_ulogic;
    RXDEC8B10BUSE               : in std_ulogic;
    RXDESCRAM64B66BUSE         : in std_ulogic;
    RXIGNOREBTF                 : in std_ulogic;
    RXINTDATAWIDTH              : in std_logic_vector(1 downto 0);
    RXN                         : in std_ulogic;
    RXP                         : in std_ulogic;
    RXPOLARITY                  : in std_ulogic;
    RXRESET                     : in std_ulogic;
    RXSLIDE                      : in std_ulogic;
    RXUSRCLK                     : in std_ulogic;
    RXUSRCLK2                    : in std_ulogic;
    TXBYPASS8B10B               : in std_logic_vector(7 downto 0);
    TXCHARDISPMODE              : in std_logic_vector(7 downto 0);
    TXCHARDISPVAL                : in std_logic_vector(7 downto 0);
    TXCHARISK                    : in std_logic_vector(7 downto 0);

```



```

TXDATA                : in std_logic_vector(63 downto 0);
TXDATAWIDTH           : in std_logic_vector(1 downto 0);
TXENC64B66BUSE       : in std_ulogic;
TXENC8B10BUSE        : in std_ulogic;
TXGEARBOX64B66BUSE   : in std_ulogic;
TXINHIBIT             : in std_ulogic;
TXINTDATAWIDTH        : in std_logic_vector(1 downto 0);
TXPOLARITY            : in std_ulogic;
TXRESET               : in std_ulogic;
TXSCRAM64B66BUSE     : in std_ulogic;
TXUSRCLK              : in std_ulogic;
TXUSRCLK2             : in std_ulogic);

```

```
end component;
```

```

-- Component Attribute specification for GT10_OC192_8
-- should be placed after architecture declaration but
-- before the begin keyword

```

```
-- Enter constraints here
```

```

-- Component Instantiation for GT10_OC192_8 should be placed
-- in architecture after the begin keyword

```

```
GT10_OC192_8_INSTANCE_NAME : GT10_OC192_8
```

```
-- synopsys translate_off
```

```
generic map (
```

```

ALIGN_COMMA_WORD      => integer_value,
COMMA_10B_MASK        => bit_value,
DEC_MCOMMA_DETECT     => boolean_value,
DEC_PCOMMA_DETECT     => boolean_value,
MCOMMA_10B_VALUE      => bit_value,
MCOMMA_DETECT         => boolean_value,
PCOMMA_10B_VALUE      => bit_value,
PCOMMA_DETECT         => boolean_value,
PMA_PWR_CNTRL        => bit_value,
PMA_SPEED             => string_value,
RX_BUFFER_USE        => boolean_value,
RX_LOS_INVALID_INCR  => integer_value,
RX_LOS_THRESHOLD     => integer_value,
RX_LOSS_OF_SYNC_FSM  => boolean_value,
TX_BUFFER_USE        => boolean_value)

```

```
-- synopsys translate_on
```

```
port map (
```

```

BREFCLKNOUT           => user_BREFCLKNOUT,
BREFCLKPOUT          => user_BREFCLKPOUT,
CHBONDDONE           => user_CHBONDDONE,
CHBONDO              => user_CHBONDO,
PMARXLOCK            => user_PMARXLOCK,
RXBUFSTATUS          => user_RXBUFSTATUS,
RXCHARISCOMMA        => user_RXCHARISCOMMA,
RXCHARISK            => user_RXCHARISK,
RXCLKCORCNT          => user_RXCLKCORCNT,
RXCOMMADET           => user_RXCOMMADET,
RXDATA               => user_RXDATA,
RXDISPERR            => user_RXDISPERR,
RXLOSSOFSYNC         => user_RXLOSSOFSYNC,

```

```

RXNOTINTABLE          => user_RXNOTINTABLE,
RXREALIGN             => user_RXREALIGN,
RXRECCLK              => user_RXRECCLK,
RXRUNDISP             => user_RXRUNDISP,
TXBUFERR              => user_TXBUFERR,
TXKERR                => user_TXKERR,
TXN                   => user_TXN,
TXOUTCLK              => user_TXOUTCLK,
TXP                   => user_TXP,
TXRUNDISP             => user_TXRUNDISP,
BREFCLKNIN            => user_BREFCLKNIN,
BREFCLKPIN            => user_BREFCLKPIN,
CHBONDI               => user_CHBONDI,
ENCHANSYNC            => user_ENCHANSYNC,
ENMCOMMAALIGN         => user_ENMCOMMAALIGN,
ENPCOMMAALIGN         => user_ENPCOMMAALIGN,
LOOPBACK              => user_LOOPBACK,
PMAINIT               => user_PMAINIT,
PMAREGADDR            => user_PMAREGADDR,
PMAREGDATAIN          => user_PMAREGDATAIN,
PMAREGRW              => user_PMAREGRW,
PMAREGSTROBE          => user_PMAREGSTROBE,
PMARXLOCKSEL          => user_PMARXLOCKSEL,
POWERDOWN             => user_POWERDOWN,
REFCLKBSEL            => user_REFCLKBSEL,
RXBLOCKSYNC64B66BUSE => user_RXBLOCKSYNC64B66BUSE,
RXCOMMADETUSE         => user_RXCOMMADETUSE,
RXDATAWIDTH           => user_RXDATAWIDTH,
RXDEC64B66BUSE        => user_RXDEC64B66BUSE,
RXDEC8B10BUSE         => user_RXDEC8B10BUSE,
RXDESCRAM64B66BUSE   => user_RXDESCRAM64B66BUSE,
RXIGNOREBTF           => user_RXIGNOREBTF,
RXINTDATAWIDTH        => user_RXINTDATAWIDTH,
RXN                   => user_RXN,
RXP                   => user_RXP,
RXPOLARITY            => user_RXPOLARITY,
RXRESET               => user_RXRESET,
RXSLIDE               => user_RXSLIDE,
RXUSRCLK              => user_RXUSRCLK,
RXUSRCLK2             => user_RXUSRCLK2,
TXBYPASS8B10B         => user_TXBYPASS8B10B,
TXCHARDISPMODE        => user_TXCHARDISPMODE,
TXCHARDISPVAL         => user_TXCHARDISPVAL,
TXCHARISK             => user_TXCHARISK,
TXDATA                => user_TXDATA,
TXDATAWIDTH           => user_TXDATAWIDTH,
TXENC64B66BUSE        => user_TXENC64B66BUSE,
TXENC8B10BUSE         => user_TXENC8B10BUSE,
TXGEARBOX64B66BUSE   => user_TXGEARBOX64B66BUSE,
TXINHIBIT             => user_TXINHIBIT,
TXINTDATAWIDTH        => user_TXINTDATAWIDTH,
TXPOLARITY            => user_TXPOLARITY,
TXRESET               => user_TXRESET,
TXSCRAM64B66BUSE     => user_TXSCRAM64B66BUSE,
TXUSRCLK              => user_TXUSRCLK,
TXUSRCLK2             => user_TXUSRCLK2);

```

## Verilog Instantiation Templates

### GT10\_OC192\_4 Verilog Code

```

GT10_OC192_4 GT10_OC192_4_name(
.BREFCLKNOUT (user_BREFCLKNOUT),
.BREFCLKPOUT (user_BREFCLKPOUT),
.CHBONDDONE (user_CHBONDDONE),
.CHBONDO (user_CHBONDO),
.PMARXLOCK (user_PMARXLOCK),
.RXBUFSTATUS (user_RXBUFSTATUS),
.RXCHARISCOMMA (user_RXCHARISCOMMA),
.RXCHARISK (user_RXCHARISK),
.RXCLKCORCNT (user_RXCLKCORCNT),
.RXCOMMADET (user_RXCOMMADET),
.RXDATA (user_RXDATA),
.RXDISPERR (user_RXDISPERR),
.RXLOSSOFSYNC (user_RXLOSSOFSYNC),
.RXNOTINTABLE (user_RXNOTINTABLE),
.RXREALIGN (user_RXREALIGN),
.RXRECCLK (user_RXRECCLK),
.RXRUNDISP (user_RXRUNDISP),
.TXBUFERR (user_TXBUFERR),
.TXKERR (user_TXKERR),
.TXN (user_TXN),
.TXOUTCLK (user_TXOUTCLK),
.TXP (user_TXP),
.TXRUNDISP (user_TXRUNDISP),

.BREFCLKNIN (user_BREFCLKNIN),
.BREFCLKPIN (user_BREFCLKPIN),
.CHBONDI (user_CHBONDI),
.ENCHANSYNC (user_ENCHANSYNC),
.ENMCOMMAALIGN (user_ENMCOMMAALIGN),
.ENPCOMMAALIGN (user_ENPCOMMAALIGN),
.LOOPBACK (user_LOOPBACK),
.PMAINIT (user_PMAINIT),
.PMAREGADDR (user_PMAREGADDR),
.PMAREGDATAIN (user_PMAREGDATAIN),
.PMAREGRW (user_PMAREGRW),
.PMAREGSTROBE (user_PMAREGSTROBE),
.PMARXLOCKSEL (user_PMARXLOCKSEL),
.POWERDOWN (user_POWERDOWN),
.REFCLKBSEL (user_REFCLKBSEL),
.RXBLOCKSYNC64B66BUSE (user_RXBLOCKSYNC64B66BUSE),
.RXCOMMADETUSE (user_RXCOMMADETUSE),
.RXDATAWIDTH (user_RXDATAWIDTH),
.RXDEC64B66BUSE (user_RXDEC64B66BUSE),
.RXDEC8B10BUSE (user_RXDEC8B10BUSE),
.RXDESCRAM64B66BUSE (user_RXDESCRAM64B66BUSE),
.RXIGNOREBTF (user_RXIGNOREBTF),
.RXINTDATAWIDTH (user_RXINTDATAWIDTH),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXSLIDE (user_RXSLIDE),

```

```

.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXDATAWIDTH (user_TXDATAWIDTH),
.TXENC64B66BUSE (user_TXENC64B66BUSE),
.TXENC8B10BUSE (user_TXENC8B10BUSE),
.TXGEARBOX64B66BUSE (user_TXGEARBOX64B66BUSE),
.TXINHIBIT (user_TXINHIBIT),
.TXINTDATAWIDTH (user_TXINTDATAWIDTH),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXSCRAM64B66BUSE (user_TXSCRAM64B66BUSE),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_WORD = 1;
defparam user_instance_name.COMMA_10B_MASK = 10'b0011111111;
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b0010101010;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0010101010;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.PMA_PWR_CNTRL = 8'b11111111;
defparam user_instance_name.PMA_SPEED = "15_32";
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.TX_BUFFER_USE = "TRUE";

```

## GT10\_OC192\_8 Verilog Code

```

GT10_OC192_8 GT10_OC192_8_name(
.BREFCLKNOUT (user_BREFCLKNOUT),
.BREFCLKPOUT (user_BREFCLKPOUT),
.CHBONDDONE (user_CHBONDDONE),
.CHBONDO (user_CHBONDO),
.PMARXLOCK (user_PMARXLOCK),
.RXBUFSTATUS (user_RXBUFSTATUS),
.RXCHARISCOMMA (user_RXCHARISCOMMA),
.RXCHARISK (user_RXCHARISK),
.RXCLKCORCNT (user_RXCLKCORCNT),
.RXCOMMADET (user_RXCOMMADET),
.RXDATA (user_RXDATA),
.RXDISPERR (user_RXDISPERR),
.RXLOSSOFSYNC (user_RXLOSSOFSYNC),
.RXNOTINTABLE (user_RXNOTINTABLE),
.RXREALIGN (user_RXREALIGN),
.RXRECCLK (user_RXRECCLK),
.RXRUNDISP (user_RXRUNDISP),
.TXBUFERR (user_TXBUFERR),
.TXKERR (user_TXKERR),
.TXN (user_TXN),

```

```

.TXOUTCLK (user_TXOUTCLK),
.TXP (user_TXP),
.TXRUNDISP (user_TXRUNDISP),

.BREFCLKNIN (user_BREFCLKNIN),
.BREFCLKPIN (user_BREFCLKPIN),
.CHBONDI (user_CHBONDI),
.ENCHANSYNC (user_ENCHANSYNC),
.ENMCOMMAALIGN (user_ENMCOMMAALIGN),
.ENPCOMMAALIGN (user_ENPCOMMAALIGN),
.LOOPBACK (user_LOOPBACK),
.PMAINIT (user_PMAINIT),
.PMAREGADDR (user_PMAREGADDR),
.PMAREGDATAIN (user_PMAREGDATAIN),
.PMAREGRW (user_PMAREGRW),
.PMAREGSTROBE (user_PMAREGSTROBE),
.PMARXLOCKSEL (user_PMARXLOCKSEL),
.POWERDOWN (user_POWERDOWN),
.REFCLKBSEL (user_REFCLKBSEL),
.RXBLOCKSYNC64B66BUSE (user_RXBLOCKSYNC64B66BUSE),
.RXCOMMADETUSE (user_RXCOMMADETUSE),
.RXDATAWIDTH (user_RXDATAWIDTH),
.RXDEC64B66BUSE (user_RXDEC64B66BUSE),
.RXDEC8B10BUSE (user_RXDEC8B10BUSE),
.RXDESCRAM64B66BUSE (user_RXDESCRAM64B66BUSE),
.RXIGNOREBTF (user_RXIGNOREBTF),
.RXINTDATAWIDTH (user_RXINTDATAWIDTH),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXSLIDE (user_RXSLIDE),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXDATAWIDTH (user_TXDATAWIDTH),
.TXENC64B66BUSE (user_TXENC64B66BUSE),
.TXENC8B10BUSE (user_TXENC8B10BUSE),
.TXGEARBOX64B66BUSE (user_TXGEARBOX64B66BUSE),
.TXINHIBIT (user_TXINHIBIT),
.TXINTDATAWIDTH (user_TXINTDATAWIDTH),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXSCRAM64B66BUSE (user_TXSCRAM64B66BUSE),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_WORD = 1;
defparam user_instance_name.COMMA_10B_MASK = 10'b0011111111;
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b0010101010;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0010101010;

```

```
defparam user_instance_name.PCOMMA_DETECT = "TRUE";  
defparam user_instance_name.PMA_PWR_CNTRL = 8'b11111111;  
defparam user_instance_name.PMA_SPEED = "15_64";  
defparam user_instance_name.RX_BUFFER_USE = "TRUE";  
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;  
defparam user_instance_name.RX_LOS_THRESHOLD = 4;  
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";  
defparam user_instance_name.TX_BUFFER_USE = "TRUE";
```

## Commonly Used Constraints

None

## GT10\_PCI\_EXPRESS\_n

### 10-Gigabit Transceiver for High-Speed I/O


#### Architectures Supported

GT10_PCI_EXPRESS_n	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive*
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
*Supported for Virtex-II Pro X but not for Virtex-II or Virtex-II Pro.	

This Xilinx protocol 10-gigabit transceiver supports 1, 2 and 4-byte data paths. The letter *n* represents number of bytes of the data path. Valid values are 1, 2, or 4.

You can also set attributes for the primitives. See the *RocketIO X Transceiver User Guide* for a description of these attributes and their default attribute values.


The following figures list the input and output ports for all values of *n*. For a description of each of the ports, see the *RocketIO X Transceiver User Guide*.

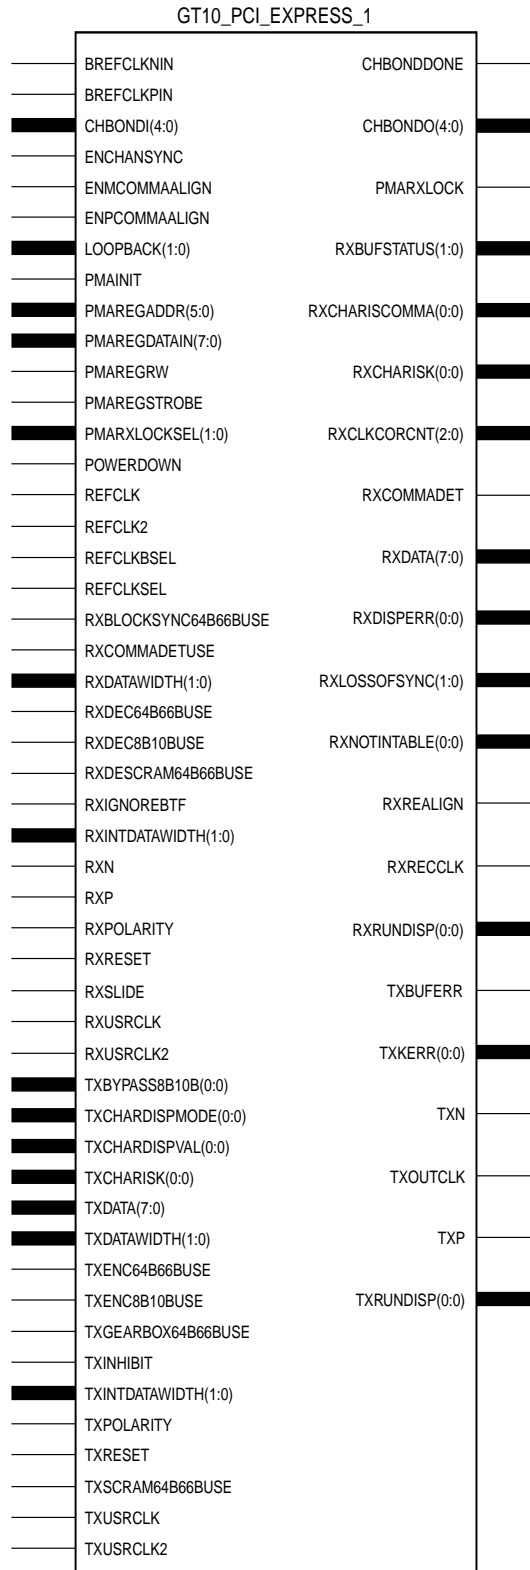

X10059




## GT10\_PCI\_EXPRESS\_2

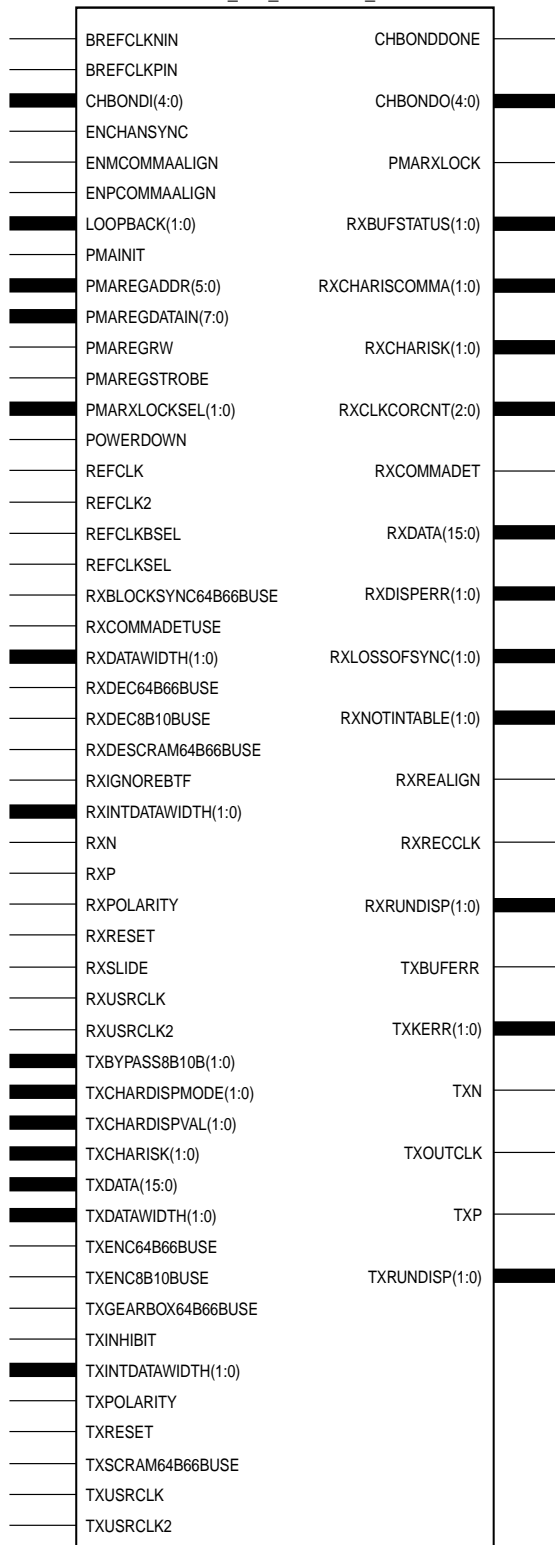

X10060

GT10\_PCI\_EXPRESS\_4

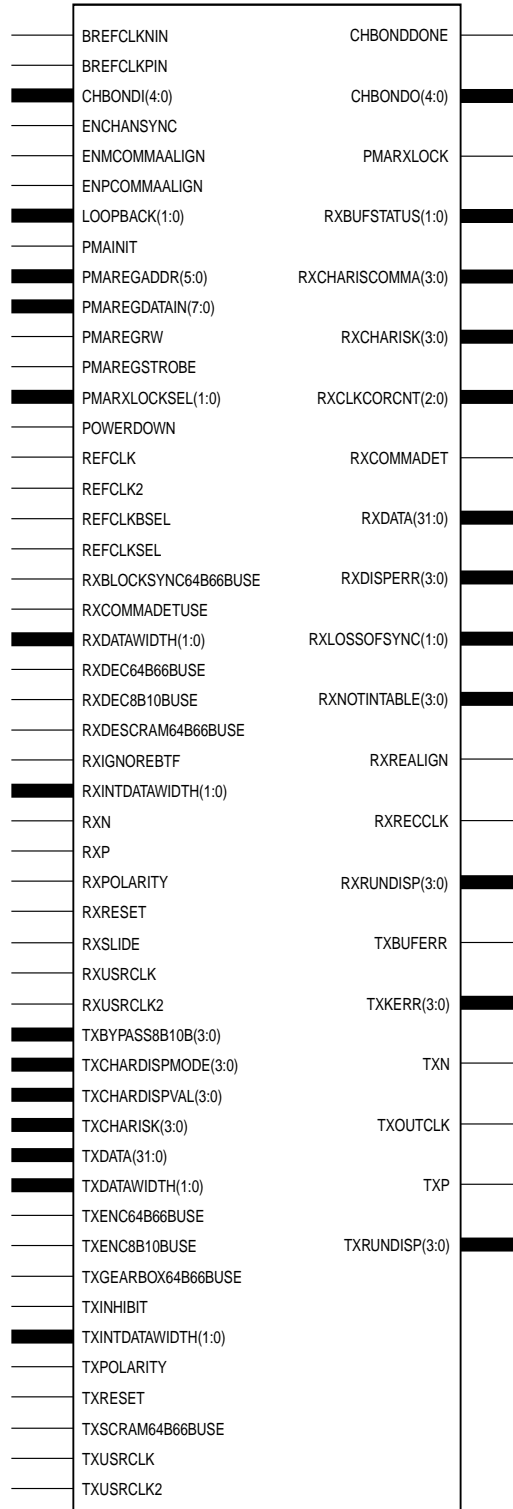

X10061

## Usage

This design element is instantiated rather than inferred in the design code.

## VHDL Start

## VHDL Instantiation Templates

### GT10\_PCI\_EXPRESS\_1 Code

```
-- Component Attribute specification for GT10_PCI_EXPRESS_1
-- should be placed after architecture declaration but
-- before the begin keyword

component GT10_PCI_EXPRESS_1
-- synopsys translate_off
generic (
    ALIGN_COMMA_WORD           : integer := 2;
    CHAN_BOND_LIMIT            : integer := 16;
    CHAN_BOND_MODE              : string := "OFF";
    CHAN_BOND_ONE_SHOT         : boolean := FALSE;
    CHAN_BOND_SEQ_1_1          : bit_vector := "001101111100";
    CHAN_BOND_SEQ_1_2          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_1_3          : bit_vector := "000010010101";
    CHAN_BOND_SEQ_1_4          : bit_vector := "000010010101";
    CHAN_BOND_SEQ_1_MASK       : bit_vector := "0000";
    CHAN_BOND_SEQ_2_1          : bit_vector := "001101111100";
    CHAN_BOND_SEQ_2_2          : bit_vector := "000000000000";
    CHAN_BOND_SEQ_2_3          : bit_vector := "000010001011";
    CHAN_BOND_SEQ_2_4          : bit_vector := "000010001011";
    CHAN_BOND_SEQ_2_MASK       : bit_vector := "0000";
    CHAN_BOND_SEQ_2_USE        : boolean := FALSE;
    CHAN_BOND_SEQ_LEN          : integer := 2;
    CLK_COR_8B10B_DE           : boolean := FALSE;
    CLK_COR_MAX_LAT            : integer := 36;
    CLK_COR_MIN_LAT            : integer := 28;
    CLK_COR_SEQ_1_1            : bit_vector := "001000111100";
    CLK_COR_SEQ_1_2            : bit_vector := "000000000000";
    CLK_COR_SEQ_1_3            : bit_vector := "000000000000";
    CLK_COR_SEQ_1_4            : bit_vector := "000000000000";
    CLK_COR_SEQ_1_MASK         : bit_vector := "0000";
    CLK_COR_SEQ_2_1            : bit_vector := "000000000000";
    CLK_COR_SEQ_2_2            : bit_vector := "000000000000";
    CLK_COR_SEQ_2_3            : bit_vector := "000000000000";
    CLK_COR_SEQ_2_4            : bit_vector := "000000000000";
    CLK_COR_SEQ_2_MASK         : bit_vector := "0000";
    CLK_COR_SEQ_2_USE          : boolean := FALSE;
    CLK_COR_SEQ_DROP           : boolean := FALSE;
    CLK_COR_SEQ_LEN            : integer := 2;
    CLK_CORRECT_USE            : boolean := TRUE;
    COMMA_10B_MASK             : bit_vector := "000111111111";
    DEC_MCOMMA_DETECT           : boolean := TRUE;
    DEC_PCOMMA_DETECT          : boolean := TRUE;
    DEC_VALID_COMMA_ONLY       : boolean := TRUE;
    MCOMMA_10B_VALUE           : bit_vector := "1010000011";
    MCOMMA_DETECT              : boolean := TRUE;
    PCOMMA_10B_VALUE           : bit_vector := "01011111100";
    PCOMMA_DETECT              : boolean := TRUE;

```

```

PMA_PWR_CNTRL           : bit_vector := "11111111";
PMA_SPEED               : string := "28_10";
RX_BUFFER_USE          : boolean := TRUE;
RX_LOS_INVALID_INCR    : integer := 1;
RX_LOS_THRESHOLD       : integer := 4;
RX_LOSS_OF_SYNC_FSM   : boolean := TRUE;
TX_BUFFER_USE          : boolean := TRUE);

-- synopsys translate_on
port (
    BREFCLKNOUT          : out std_ulogic;
    BREFCLKPOUT         : out std_ulogic;
    CHBONDDONE          : out std_ulogic;
    CHBONDO              : out std_logic_vector(4 downto 0);
    PMARXLOCK           : out std_ulogic;
    RXBUFSTATUS         : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA       : out std_logic_vector(0 downto 0);
    RXCHARISK           : out std_logic_vector(0 downto 0);
    RXCLKCORCNT         : out std_logic_vector(2 downto 0);
    RXCOMMADET         : out std_ulogic;
    RXDATA              : out std_logic_vector(7 downto 0);
    RXDISPERR           : out std_logic_vector(0 downto 0);
    RXLOSSOFFSYNC      : out std_logic_vector(1 downto 0);
    RXNOTINTABLE       : out std_logic_vector(0 downto 0);
    RXREALIGN           : out std_ulogic;
    RXRECCLK            : out std_ulogic;
    RXRUNDISP          : out std_logic_vector(0 downto 0);
    TXBUFERR            : out std_ulogic;
    TXKERR              : out std_logic_vector(0 downto 0);
    TXN                 : out std_ulogic;
    TXOUTCLK            : out std_ulogic;
    TXP                 : out std_ulogic;
    TXRUNDISP          : out std_logic_vector(0 downto 0);
    BREFCLKNIN          : in std_ulogic;
    BREFCLKPIN          : in std_ulogic;
    CHBONDI             : in std_logic_vector(4 downto 0);
    ENCHANSYNC          : in std_ulogic;
    ENMCOMMAALIGN      : in std_ulogic;
    ENPCOMMAALIGN      : in std_ulogic;
    LOOPBACK           : in std_logic_vector(1 downto 0);
    PMAINIT             : in std_ulogic;
    PMAREGADDR          : in std_logic_vector(5 downto 0);
    PMAREGDATAIN        : in std_logic_vector(7 downto 0);
    PMAREGRW            : in std_ulogic;
    PMAREGSTROBE        : in std_ulogic;
    PMARXLOCKSEL        : in std_logic_vector(1 downto 0);
    POWERDOWN           : in std_ulogic;
    REFCLK              : in std_ulogic;
    REFCLK2             : in std_ulogic;
    REFCLKBSEL          : in std_ulogic;
    REFCLKSEL           : in std_ulogic;
    RXBLOCKSYNC64B66BUSE : in std_ulogic;
    RXCOMMADETUSE       : in std_ulogic;
    RXDATAWIDTH         : in std_logic_vector(1 downto 0);
    RXDEC64B66BUSE      : in std_ulogic;
    RXDEC8B10BUSE       : in std_ulogic;
    RXDESCRAM64B66BUSE : in std_ulogic;
    RXIGNOREBTF         : in std_ulogic;

```

```

RXINTDATAWIDTH      : in std_logic_vector(1 downto 0);
RXN                  : in std_ulogic;
RXP                  : in std_ulogic;
RXPOLARITY           : in std_ulogic;
RXRESET              : in std_ulogic;
RXSLIDE              : in std_ulogic;
RXUSRCLK             : in std_ulogic;
RXUSRCLK2            : in std_ulogic;
TXBYPASS8B10B       : in std_logic_vector(0 downto 0);
TXCHARDISPMODE       : in std_logic_vector(0 downto 0);
TXCHARDISPVAL        : in std_logic_vector(0 downto 0);
TXCHARISK            : in std_logic_vector(0 downto 0);
TXDATA               : in std_logic_vector(7 downto 0);
TXDATAWIDTH         : in std_logic_vector(1 downto 0);
TXENC64B66BUSE      : in std_ulogic;
TXENC8B10BUSE       : in std_ulogic;
TXGEARBOX64B66BUSE  : in std_ulogic;
TXINHIBIT            : in std_ulogic;
TXINTDATAWIDTH      : in std_logic_vector(1 downto 0);
TXPOLARITY           : in std_ulogic;
TXRESET              : in std_ulogic;
TXSCRAM64B66BUSE    : in std_ulogic;
TXUSRCLK             : in std_ulogic;
TXUSRCLK2            : in std_ulogic);

end component;

-- Component Attribute specification for GT10_PCI_EXPRESS_1
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter constraints here

-- Component Instantiation for GT10_PCI_EXPRESS_1 should be placed
-- in architecture after the begin keyword

GT10_PCI_EXPRESS_1_INSTANCE_NAME : GT10_PCI_EXPRESS_1
-- synopsys translate_off
generic map (
    ALIGN_COMMA_WORD      => integer_value,
    CHAN_BOND_LIMIT       => integer_value,
    CHAN_BOND_MODE        => string_value,
    CHAN_BOND_ONE_SHOT    => boolean_value,
    CHAN_BOND_SEQ_1_1     => bit_value,
    CHAN_BOND_SEQ_1_2     => bit_value,
    CHAN_BOND_SEQ_1_3     => bit_value,
    CHAN_BOND_SEQ_1_4     => bit_value,
    CHAN_BOND_SEQ_1_MASK  => bit_value,
    CHAN_BOND_SEQ_2_1     => bit_value,
    CHAN_BOND_SEQ_2_2     => bit_value,
    CHAN_BOND_SEQ_2_3     => bit_value,
    CHAN_BOND_SEQ_2_4     => bit_value,
    CHAN_BOND_SEQ_2_MASK  => bit_value,
    CHAN_BOND_SEQ_2_USE   => boolean_value,
    CHAN_BOND_SEQ_LEN     => integer_value,
    CLK_COR_8B10B_DE      => boolean_value,
    CLK_COR_MAX_LAT       => integer_value,
    CLK_COR_MIN_LAT       => integer_value,

```

```

CLK_COR_SEQ_1_1           => bit_value,
CLK_COR_SEQ_1_2           => bit_value,
CLK_COR_SEQ_1_3           => bit_value,
CLK_COR_SEQ_1_4           => bit_value,
CLK_COR_SEQ_1_MASK       => bit_value,
CLK_COR_SEQ_2_1           => bit_value,
CLK_COR_SEQ_2_2           => bit_value,
CLK_COR_SEQ_2_3           => bit_value,
CLK_COR_SEQ_2_4           => bit_value,
CLK_COR_SEQ_2_MASK       => bit_value,
CLK_COR_SEQ_2_USE        => boolean_value,
CLK_COR_SEQ_DROP         => boolean_value,
CLK_COR_SEQ_LEN          => integer_value,
CLK_CORRECT_USE          => boolean_value,
COMMA_10B_MASK           => bit_value,
DEC_MCOMMA_DETECT        => boolean_value,
DEC_PCOMMA_DETECT        => boolean_value,
DEC_VALID_COMMA_ONLY     => boolean_value,
MCOMMA_10B_VALUE         => bit_value,
MCOMMA_DETECT            => boolean_value,
PCOMMA_10B_VALUE         => bit_value,
PCOMMA_DETECT            => boolean_value,
PMA_PWR_CNTRL            => bit_value,
PMA_SPEED                => string_value,
RX_BUFFER_USE            => boolean_value,
RX_LOS_INVALID_INCR      => integer_value,
RX_LOS_THRESHOLD         => integer_value,
RX_LOSS_OF_SYNC_FSM     => boolean_value,
TX_BUFFER_USE            => boolean_value)

-- synopsys translate_on
port map (
  BREFCLKNOUT             => user_BREFCLKNOUT,
  BREFCLKPOUT             => user_BREFCLKPOUT,
  CHBONDDONE              => user_CHBONDDONE,
  CHBONDO                 => user_CHBONDO,
  PMARXLOCK               => user_PMARXLOCK,
  RXBUFSTATUS             => user_RXBUFSTATUS,
  RXCHARISCOMMA           => user_RXCHARISCOMMA,
  RXCHARISK               => user_RXCHARISK,
  RXCLKCORCNT             => user_RXCLKCORCNT,
  RXCOMMADET              => user_RXCOMMADET,
  RXDATA                  => user_RXDATA,
  RXDISPERR               => user_RXDISPERR,
  RXLOSSOFSYNC            => user_RXLOSSOFSYNC,
  RXNOTINTABLE            => user_RXNOTINTABLE,
  RXREALIGN               => user_RXREALIGN,
  RXRECCLK                => user_RXRECCLK,
  RXRUNDISP               => user_RXRUNDISP,
  TXBUFERR                => user_TXBUFERR,
  TXKERR                  => user_TXKERR,
  TXN                     => user_TXN,
  TXOUTCLK                => user_TXOUTCLK,
  TXP                     => user_TXP,
  TXRUNDISP               => user_TXRUNDISP,
  BREFCLKNIN              => user_BREFCLKNIN,
  BREFCLKPIN              => user_BREFCLKPIN,
  CHBONDI                 => user_CHBONDI,

```

```

ENCHANSYNC                => user_ENCHANSYNC,
ENMCOMMAALIGN             => user_ENMCOMMAALIGN,
ENPCOMMAALIGN             => user_ENPCOMMAALIGN,
LOOPBACK                  => user_LOOPBACK,
PMAINIT                   => user_PMAINIT,
PMAREGADDR                => user_PMAREGADDR,
PMAREGDATAIN              => user_PMAREGDATAIN,
PMAREGRW                  => user_PMAREGRW,
PMAREGSTROBE              => user_PMAREGSTROBE,
PMARXLOCKSEL              => user_PMARXLOCKSEL,
POWERDOWN                 => user_POWERDOWN,
REFCLK                     => user_REFCLK,
REFCLK2                   => user_REFCLK2,
REFCLKBSEL                => user_REFCLKBSEL,
REFCLKSEL                 => user_REFCLKSEL,
RXBLOCKSYNC64B66BUSE     => user_RXBLOCKSYNC64B66BUSE,
RXCOMMADETUSE             => user_RXCOMMADETUSE,
RXDATAWIDTH               => user_RXDATAWIDTH,
RXDEC64B66BUSE            => user_RXDEC64B66BUSE,
RXDEC8B10BUSE             => user_RXDEC8B10BUSE,
RXDESCRAM64B66BUSE       => user_RXDESCRAM64B66BUSE,
RXIGNOREBTF               => user_RXIGNOREBTF,
RXINTDATAWIDTH            => user_RXINTDATAWIDTH,
RXN                       => user_RXN,
RXP                       => user_RXP,
RXPOLARITY                => user_RXPOLARITY,
RXRESET                   => user_RXRESET,
RXSLIDE                   => user_RXSLIDE,
RXUSRCLK                  => user_RXUSRCLK,
RXUSRCLK2                 => user_RXUSRCLK2,
TXBYPASS8B10B            => user_TXBYPASS8B10B,
TXCHARDISPMODE            => user_TXCHARDISPMODE,
TXCHARDISPVAL             => user_TXCHARDISPVAL,
TXCHARISK                 => user_TXCHARISK,
TXDATA                    => user_TXDATA,
TXDATAWIDTH               => user_TXDATAWIDTH,
TXENC64B66BUSE            => user_TXENC64B66BUSE,
TXENC8B10BUSE             => user_TXENC8B10BUSE,
TXGEARBOX64B66BUSE       => user_TXGEARBOX64B66BUSE,
TXINHIBIT                 => user_TXINHIBIT,
TXINTDATAWIDTH            => user_TXINTDATAWIDTH,
TXPOLARITY                => user_TXPOLARITY,
TXRESET                   => user_TXRESET,
TXSCRAM64B66BUSE         => user_TXSCRAM64B66BUSE,
TXUSRCLK                  => user_TXUSRCLK,
TXUSRCLK2                 => user_TXUSRCLK2);

```

## GT10\_PCI\_EXPRESS\_2 Code

```

-- Component Attribute specification for GT10_PCI_EXPRESS_2
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

component GT10_PCI_EXPRESS_2
-- synopsys translate_off
generic (
    ALIGN_COMMA_WORD          : integer := 2;
    CHAN_BOND_LIMIT           : integer := 16;

```

```

CHAN_BOND_MODE                : string := "OFF";
CHAN_BOND_ONE_SHOT            : boolean := FALSE;
CHAN_BOND_SEQ_1_1             : bit_vector := "00110111100";
CHAN_BOND_SEQ_1_2             : bit_vector := "00000000000";
CHAN_BOND_SEQ_1_3             : bit_vector := "00001001010";
CHAN_BOND_SEQ_1_4             : bit_vector := "00001001010";
CHAN_BOND_SEQ_1_MASK          : bit_vector := "0000";
CHAN_BOND_SEQ_2_1             : bit_vector := "00110111100";
CHAN_BOND_SEQ_2_2             : bit_vector := "00000000000";
CHAN_BOND_SEQ_2_3             : bit_vector := "00001000101";
CHAN_BOND_SEQ_2_4             : bit_vector := "00001000101";
CHAN_BOND_SEQ_2_MASK          : bit_vector := "0000";
CHAN_BOND_SEQ_2_USE           : boolean := FALSE;
CHAN_BOND_SEQ_LEN             : integer := 2;
CLK_COR_8B10B_DE              : boolean := FALSE;
CLK_COR_MAX_LAT               : integer := 36;
CLK_COR_MIN_LAT               : integer := 28;
CLK_COR_SEQ_1_1               : bit_vector := "00100011100";
CLK_COR_SEQ_1_2               : bit_vector := "00000000000";
CLK_COR_SEQ_1_3               : bit_vector := "00000000000";
CLK_COR_SEQ_1_4               : bit_vector := "00000000000";
CLK_COR_SEQ_1_MASK            : bit_vector := "0000";
CLK_COR_SEQ_2_1               : bit_vector := "00000000000";
CLK_COR_SEQ_2_2               : bit_vector := "00000000000";
CLK_COR_SEQ_2_3               : bit_vector := "00000000000";
CLK_COR_SEQ_2_4               : bit_vector := "00000000000";
CLK_COR_SEQ_2_MASK            : bit_vector := "0000";
CLK_COR_SEQ_2_USE             : boolean := FALSE;
CLK_COR_SEQ_DROP              : boolean := FALSE;
CLK_COR_SEQ_LEN               : integer := 2;
CLK_CORRECT_USE               : boolean := TRUE;
COMMA_10B_MASK                : bit_vector := "0001111111";
DEC_MCOMMA_DETECT             : boolean := TRUE;
DEC_PCOMMA_DETECT             : boolean := TRUE;
DEC_VALID_COMMA_ONLY          : boolean := TRUE;
MCOMMA_10B_VALUE              : bit_vector := "1010000011";
MCOMMA_DETECT                 : boolean := TRUE;
PCOMMA_10B_VALUE              : bit_vector := "0101111100";
PCOMMA_DETECT                 : boolean := TRUE;
PMA_PWR_CNTRL                 : bit_vector := "11111111";
PMA_SPEED                     : string := "28_20";
RX_BUFFER_USE                  : boolean := TRUE;
RX_LOS_INVALID_INCR           : integer := 1;
RX_LOS_THRESHOLD              : integer := 4;
RX_LOSS_OF_SYNC_FSM           : boolean := TRUE;
TX_BUFFER_USE                  : boolean := TRUE);

-- synopsys translate_on
port (
    BREFCLKNOUT                 : out std_ulogic;
    BREFCLKPOUT                 : out std_ulogic;
    CHBONDDONE                  : out std_ulogic;
    CHBONDO                     : out std_logic_vector(4 downto 0);
    PMARXLOCK                   : out std_ulogic;
    RXBUFSTATUS                 : out std_logic_vector(1 downto 0);
    RXCHARISCOMMA               : out std_logic_vector(1 downto 0);
    RXCHARISK                   : out std_logic_vector(1 downto 0);
    RXCLKCORCNT                 : out std_logic_vector(2 downto 0);

```



```

RXCOMMADET                : out std_ulogic;
RXDATA                    : out std_logic_vector(15 downto 0);
RXDISPERR                 : out std_logic_vector(1 downto 0);
RXLOSSOFSYNC              : out std_logic_vector(1 downto 0);
RXNOTINTABLE              : out std_logic_vector(1 downto 0);
RXREALIGN                 : out std_ulogic;
RXRECCLK                  : out std_ulogic;
RXRUNDISP                 : out std_logic_vector(1 downto 0);
TXBUFERR                  : out std_ulogic;
TXKERR                    : out std_logic_vector(1 downto 0);
TXN                       : out std_ulogic;
TXOUTCLK                  : out std_ulogic;
TXP                       : out std_ulogic;
TXRUNDISP                 : out std_logic_vector(1 downto 0);
BREFCLKNIN                : in std_ulogic;
BREFCLKPIN                : in std_ulogic;
CHBONDI                   : in std_logic_vector(4 downto 0);
ENCHANSYNC                : in std_ulogic;
ENMCOMMAALIGN             : in std_ulogic;
ENPCOMMAALIGN             : in std_ulogic;
LOOPBACK                  : in std_logic_vector(1 downto 0);
PMAINIT                   : in std_ulogic;
PMAREGADDR                : in std_logic_vector(5 downto 0);
PMAREGDATAIN              : in std_logic_vector(7 downto 0);
PMAREGRW                  : in std_ulogic;
PMAREGSTROBE              : in std_ulogic;
PMARXLOCKSEL              : in std_logic_vector(1 downto 0);
POWERDOWN                 : in std_ulogic;
REFCLK                    : in std_ulogic;
REFCLK2                   : in std_ulogic;
REFCLKBSEL                : in std_ulogic;
REFCLKSEL                 : in std_ulogic;
RXBLOCKSYNC64B66BUSE     : in std_ulogic;
RXCOMMADETUSE             : in std_ulogic;
RXDATAWIDTH               : in std_logic_vector(1 downto 0);
RXDEC64B66BUSE           : in std_ulogic;
RXDEC8B10BUSE            : in std_ulogic;
RXDESCRAM64B66BUSE       : in std_ulogic;
RXIGNOREBTF               : in std_ulogic;
RXINTDATAWIDTH           : in std_logic_vector(1 downto 0);
RXN                       : in std_ulogic;
RXP                       : in std_ulogic;
RXPOLARITY                : in std_ulogic;
RXRESET                   : in std_ulogic;
RXSLIDE                   : in std_ulogic;
RXUSRCLK                  : in std_ulogic;
RXUSRCLK2                 : in std_ulogic;
TXBYPASS8B10B            : in std_logic_vector(1 downto 0);
TXCHARDISPMODE            : in std_logic_vector(1 downto 0);
TXCHARDISPVAL             : in std_logic_vector(1 downto 0);
TXCHARISK                 : in std_logic_vector(1 downto 0);
TXDATA                    : in std_logic_vector(15 downto 0);
TXDATAWIDTH               : in std_logic_vector(1 downto 0);
TXENC64B66BUSE           : in std_ulogic;
TXENC8B10BUSE            : in std_ulogic;
TXGEARBOX64B66BUSE       : in std_ulogic;
TXINHIBIT                 : in std_ulogic;
TXINTDATAWIDTH           : in std_logic_vector(1 downto 0);

```

```

TXPOLARITY           : in std_ulogic;
TXRESET              : in std_ulogic;
TXSCRAM64B66BUSE    : in std_ulogic;
TXUSRCLK             : in std_ulogic;
TXUSRCLK2           : in std_ulogic);

port map (
  BREFCLKNOUT        => user_BREFCLKNOUT,
  BREFCLKPOUT        => user_BREFCLKPOUT,
  CHBONDDONE         => user_CHBONDDONE,
  CHBONDO            => user_CHBONDO,
  PMARXLOCK          => user_PMARXLOCK,
  RXBUFSTATUS        => user_RXBUFSTATUS,
  RXCHARISCOMMA      => user_RXCHARISCOMMA,
  RXCHARISK          => user_RXCHARISK,
  RXCLKCORCNT        => user_RXCLKCORCNT,
  RXCOMMADET         => user_RXCOMMADET,
  RXDATA             => user_RXDATA,
  RXDISPERR          => user_RXDISPERR,
  RXLOSSOFSYNC       => user_RXLOSSOFSYNC,
  RXNOTINTABLE       => user_RXNOTINTABLE,
  RXREALIGN          => user_RXREALIGN,
  RXRECCLK           => user_RXRECCLK,
  RXRUNDISP          => user_RXRUNDISP,
  TXBUFERR           => user_TXBUFERR,
  TXKERR             => user_TXKERR,
  TXN                => user_TXN,
  TXOUTCLK           => user_TXOUTCLK,
  TXP                => user_TXP,
  TXRUNDISP          => user_TXRUNDISP,
  BREFCLKNIN         => user_BREFCLKNIN,
  BREFCLKPIN         => user_BREFCLKPIN,
  CHBONDI            => user_CHBONDI,
  ENCHANSYNC         => user_ENCHANSYNC,
  ENMCOMMAALIGN      => user_ENMCOMMAALIGN,
  ENPCOMMAALIGN      => user_ENPCOMMAALIGN,
  LOOPBACK           => user_LOOPBACK,
  PMAINIT            => user_PMAINIT,
  PMAREGADDR         => user_PMAREGADDR,
  PMAREGDATAIN       => user_PMAREGDATAIN,
  PMAREGRW           => user_PMAREGRW,
  PMAREGSTROBE       => user_PMAREGSTROBE,
  PMARXLOCKSEL       => user_PMARXLOCKSEL,
  POWERDOWN          => user_POWERDOWN,
  REFCLK             => user_REFCLK,
  REFCLK2            => user_REFCLK2,
  REFCLKBSEL         => user_REFCLKBSEL,
  REFCLKSEL          => user_REFCLKSEL,
  RXBLOCKSYN64B66BUSE => user_RXBLOCKSYN64B66BUSE,
  RXCOMMADETUSE      => user_RXCOMMADETUSE,
  RXDATAWIDTH        => user_RXDATAWIDTH,
  RXDEC64B66BUSE     => user_RXDEC64B66BUSE,
  RXDEC8B10BUSE      => user_RXDEC8B10BUSE,
  RXDESCRAM64B66BUSE => user_RXDESCRAM64B66BUSE,
  RXIGNOREBTF        => user_RXIGNOREBTF,
  RXINTDATAWIDTH     => user_RXINTDATAWIDTH,
  RXN                => user_RXN,
  RXP                => user_RXP,

```

```

RXPOLARITY           => user_RXPOLARITY,
RXRESET              => user_RXRESET,
RXSLIDE              => user_RXSLIDE,
RXUSRCLK             => user_RXUSRCLK,
RXUSRCLK2            => user_RXUSRCLK2,
TXBYPASS8B10B       => user_TXBYPASS8B10B,
TXCHARDISPMODE       => user_TXCHARDISPMODE,
TXCHARDISPVAL        => user_TXCHARDISPVAL,
TXCHARISK            => user_TXCHARISK,
TXDATA               => user_TXDATA,
TXDATAWIDTH          => user_TXDATAWIDTH,
TXENC64B66BUSE       => user_TXENC64B66BUSE,
TXENC8B10BUSE        => user_TXENC8B10BUSE,
TXGEARBOX64B66BUSE  => user_TXGEARBOX64B66BUSE,
TXINHIBIT            => user_TXINHIBIT,
TXINTDATAWIDTH       => user_TXINTDATAWIDTH,
TXPOLARITY           => user_TXPOLARITY,
TXRESET              => user_TXRESET,
TXSCRAM64B66BUSE    => user_TXSCRAM64B66BUSE,
TXUSRCLK             => user_TXUSRCLK,
TXUSRCLK2            => user_TXUSRCLK2);

```

## GT10\_PCI\_EXPRESS\_4 Code

```

-- Component Attribute specification for GT10_PCI_EXPRESS_4
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

component GT10_PCI_EXPRESS_4
-- synopsys translate_off
generic (
    ALIGN_COMMA_WORD           : integer := 2;
    CHAN_BOND_LIMIT            : integer := 16;
    CHAN_BOND_MODE              : string := "OFF";
    CHAN_BOND_ONE_SHOT         : boolean := FALSE;
    CHAN_BOND_SEQ_1_1          : bit_vector := "00110111100";
    CHAN_BOND_SEQ_1_2          : bit_vector := "00000000000";
    CHAN_BOND_SEQ_1_3          : bit_vector := "00001001010";
    CHAN_BOND_SEQ_1_4          : bit_vector := "00001001010";
    CHAN_BOND_SEQ_1_MASK       : bit_vector := "0000";
    CHAN_BOND_SEQ_2_1          : bit_vector := "00110111100";
    CHAN_BOND_SEQ_2_2          : bit_vector := "00000000000";
    CHAN_BOND_SEQ_2_3          : bit_vector := "00001000101";
    CHAN_BOND_SEQ_2_4          : bit_vector := "00001000101";
    CHAN_BOND_SEQ_2_MASK       : bit_vector := "0000";
    CHAN_BOND_SEQ_2_USE        : boolean := FALSE;
    CHAN_BOND_SEQ_LEN          : integer := 2;
    CLK_COR_8B10B_DE           : boolean := FALSE;
    CLK_COR_MAX_LAT            : integer := 36;
    CLK_COR_MIN_LAT            : integer := 28;
    CLK_COR_SEQ_1_1            : bit_vector := "00100011100";
    CLK_COR_SEQ_1_2            : bit_vector := "00000000000";
    CLK_COR_SEQ_1_3            : bit_vector := "00000000000";
    CLK_COR_SEQ_1_4            : bit_vector := "00000000000";
    CLK_COR_SEQ_1_MASK         : bit_vector := "0000";
    CLK_COR_SEQ_2_1            : bit_vector := "00000000000";
    CLK_COR_SEQ_2_2            : bit_vector := "00000000000";

```

```

CLK_COR_SEQ_2_3           : bit_vector := "000000000000";
CLK_COR_SEQ_2_4           : bit_vector := "000000000000";
CLK_COR_SEQ_2_MASK       : bit_vector := "0000";
CLK_COR_SEQ_2_USE        : boolean := FALSE;
CLK_COR_SEQ_DROP         : boolean := FALSE;
CLK_COR_SEQ_LEN          : integer := 2;
CLK_CORRECT_USE          : boolean := TRUE;
COMMA_10B_MASK           : bit_vector := "0001111111";
DEC_MCOMMA_DETECT        : boolean := TRUE;
DEC_PCOMMA_DETECT        : boolean := TRUE;
DEC_VALID_COMMA_ONLY     : boolean := TRUE;
MCOMMA_10B_VALUE         : bit_vector := "1010000011";
MCOMMA_DETECT            : boolean := TRUE;
PCOMMA_10B_VALUE         : bit_vector := "0101111100";
PCOMMA_DETECT            : boolean := TRUE;
PMA_PWR_CNTRL            : bit_vector := "11111111";
PMA_SPEED                : string := "28_40";
RX_BUFFER_USE            : boolean := TRUE;
RX_LOS_INVALID_INCR     : integer := 1;
RX_LOS_THRESHOLD         : integer := 4;
RX_LOSS_OF_SYNC_FSM     : boolean := TRUE;
TX_BUFFER_USE            : boolean := TRUE);

-- synopsys translate_on
port (
  BREFCLKNOUT             : out std_ulogic;
  BREFCLKPOUT             : out std_ulogic;
  CHBONDDONE              : out std_ulogic;
  CHBONDO                 : out std_logic_vector(4 downto 0);
  PMARXLOCK               : out std_ulogic;
  RXBUFSTATUS             : out std_logic_vector(1 downto 0);
  RXCHARISCOMMA           : out std_logic_vector(3 downto 0);
  RXCHARISK               : out std_logic_vector(3 downto 0);
  RXCLKCORCNT             : out std_logic_vector(2 downto 0);
  RXCOMMADET              : out std_ulogic;
  RXDATA                  : out std_logic_vector(31 downto 0);
  RXDISPERR               : out std_logic_vector(3 downto 0);
  RXLOSSOFSYNC            : out std_logic_vector(1 downto 0);
  RXNOTINTABLE            : out std_logic_vector(3 downto 0);
  RXREALIGN               : out std_ulogic;
  RXRECCLK                : out std_ulogic;
  RXRUNDISP               : out std_logic_vector(3 downto 0);
  TXBUFERR                 : out std_ulogic;
  TXKERR                  : out std_logic_vector(3 downto 0);
  TXN                      : out std_ulogic;
  TXOUTCLK                : out std_ulogic;
  TXP                      : out std_ulogic;
  TXRUNDISP               : out std_logic_vector(3 downto 0);
  BREFCLKNIN              : in std_ulogic;
  BREFCLKPIN              : in std_ulogic;
  CHBONDI                 : in std_logic_vector(4 downto 0);
  ENCHANSYNC              : in std_ulogic;
  ENMCOMMAALIGN           : in std_ulogic;
  ENPCOMMAALIGN           : in std_ulogic;
  LOOPBACK                : in std_logic_vector(1 downto 0);
  PMAINIT                 : in std_ulogic;
  PMAREGADDR              : in std_logic_vector(5 downto 0);
  PMAREGDATAIN            : in std_logic_vector(7 downto 0);

```

```

PMAREGRW                : in std_ulogic;
PMAREGSTROBE            : in std_ulogic;
PMARXLOCKSEL            : in std_logic_vector(1 downto 0);
POWERDOWN               : in std_ulogic;
REFCLK                  : in std_ulogic;
REFCLK2                 : in std_ulogic;
REFCLKBSEL              : in std_ulogic;
REFCLKSEL               : in std_ulogic;
RXBLOCKSYNC64B66BUSE   : in std_ulogic;
RXCOMMADETUSE           : in std_ulogic;
RXDATAWIDTH             : in std_logic_vector(1 downto 0);
RXDEC64B66BUSE         : in std_ulogic;
RXDEC8B10BUSE          : in std_ulogic;
RXDESCRAM64B66BUSE     : in std_ulogic;
RXIGNOREBTF            : in std_ulogic;
RXINTDATAWIDTH         : in std_logic_vector(1 downto 0);
RXN                     : in std_ulogic;
RXP                     : in std_ulogic;
RXPOLARITY             : in std_ulogic;
RXRESET                : in std_ulogic;
RXSLIDE                 : in std_ulogic;
RXUSRCLK               : in std_ulogic;
RXUSRCLK2              : in std_ulogic;
TXBYPASS8B10B         : in std_logic_vector(3 downto 0);
TXCHARDISPMODE         : in std_logic_vector(3 downto 0);
TXCHARDISPVAL         : in std_logic_vector(3 downto 0);
TXCHARISK              : in std_logic_vector(3 downto 0);
TXDATA                 : in std_logic_vector(31 downto 0);
TXDATAWIDTH           : in std_logic_vector(1 downto 0);
TXENC64B66BUSE        : in std_ulogic;
TXENC8B10BUSE         : in std_ulogic;
TXGEARBOX64B66BUSE    : in std_ulogic;
TXINHIBIT              : in std_ulogic;
TXINTDATAWIDTH        : in std_logic_vector(1 downto 0);
TXPOLARITY            : in std_ulogic;
TXRESET               : in std_ulogic;
TXSCRAM64B66BUSE     : in std_ulogic;
TXUSRCLK              : in std_ulogic;
TXUSRCLK2             : in std_ulogic);

```

```
end component;
```

```

-- Component Attribute specification for GT10_PCI_EXPRESS_4
-- should be placed after architecture declaration but
-- before the begin keyword

```

```
-- Enter constraints here
```

```

-- Component Instantiation for GT10_PCI_EXPRESS_4 should be placed
-- in architecture after the begin keyword

```

```
GT10_PCI_EXPRESS_4_INSTANCE_NAME : GT10_PCI_EXPRESS_4
```

```

-- synopsys translate_off
generic map (
    ALIGN_COMMA_WORD      => integer_value,
    CHAN_BOND_LIMIT       => integer_value,

```

```

CHAN_BOND_MODE                => string_value,
CHAN_BOND_ONE_SHOT            => boolean_value,
CHAN_BOND_SEQ_1_1             => bit_value,
CHAN_BOND_SEQ_1_2             => bit_value,
CHAN_BOND_SEQ_1_3             => bit_value,
CHAN_BOND_SEQ_1_4             => bit_value,
CHAN_BOND_SEQ_1_MASK          => bit_value,
CHAN_BOND_SEQ_2_1             => bit_value,
CHAN_BOND_SEQ_2_2             => bit_value,
CHAN_BOND_SEQ_2_3             => bit_value,
CHAN_BOND_SEQ_2_4             => bit_value,
CHAN_BOND_SEQ_2_MASK          => bit_value,
CHAN_BOND_SEQ_2_USE           => boolean_value,
CHAN_BOND_SEQ_LEN             => integer_value,
CLK_COR_8B10B_DE              => boolean_value,
CLK_COR_MAX_LAT               => integer_value,
CLK_COR_MIN_LAT               => integer_value,
CLK_COR_SEQ_1_1               => bit_value,
CLK_COR_SEQ_1_2               => bit_value,
CLK_COR_SEQ_1_3               => bit_value,
CLK_COR_SEQ_1_4               => bit_value,
CLK_COR_SEQ_1_MASK            => bit_value,
CLK_COR_SEQ_2_1               => bit_value,
CLK_COR_SEQ_2_2               => bit_value,
CLK_COR_SEQ_2_3               => bit_value,
CLK_COR_SEQ_2_4               => bit_value,
CLK_COR_SEQ_2_MASK            => bit_value,
CLK_COR_SEQ_2_USE             => boolean_value,
CLK_COR_SEQ_DROP              => boolean_value,
CLK_COR_SEQ_LEN               => integer_value,
CLK_CORRECT_USE               => boolean_value,
COMMA_10B_MASK                => bit_value,
DEC_MCOMMA_DETECT             => boolean_value,
DEC_PCOMMA_DETECT             => boolean_value,
DEC_VALID_COMMA_ONLY          => boolean_value,
MCOMMA_10B_VALUE              => bit_value,
MCOMMA_DETECT                 => boolean_value,
PCOMMA_10B_VALUE              => bit_value,
PCOMMA_DETECT                 => boolean_value,
PMA_PWR_CNTRL                 => bit_value,
PMA_SPEED                     => string_value,
RX_BUFFER_USE                 => boolean_value,
RX_LOS_INVALID_INCR           => integer_value,
RX_LOS_THRESHOLD              => integer_value,
RX_LOSS_OF_SYNC_FSM           => boolean_value,
TX_BUFFER_USE                 => boolean_value)

-- synopsys translate_on
port map (
    BREFCLKNOUT                => user_BREFCLKNOUT,
    BREFCLKPOUT                => user_BREFCLKPOUT,
    CHBONDDONE                 => user_CHBONDDONE,
    CHBONDO                     => user_CHBONDO,
    PMARXLOCK                  => user_PMARXLOCK,
    RXBUFSTATUS                => user_RXBUFSTATUS,
    RXCHARISCOMMA              => user_RXCHARISCOMMA,
    RXCHARISK                  => user_RXCHARISK,
    RXCLKCORCNT                => user_RXCLKCORCNT,

```

RXCOMMADET	=> user_RXCOMMADET,
RXDATA	=> user_RXDATA,
RXDISPERR	=> user_RXDISPERR,
RXLOSSOFSYNC	=> user_RXLOSSOFSYNC,
RXNOTINTABLE	=> user_RXNOTINTABLE,
RXREALIGN	=> user_RXREALIGN,
RXRECCLK	=> user_RXRECCLK,
RXRUNDISP	=> user_RXRUNDISP,
TXBUFERR	=> user_TXBUFERR,
TXKERR	=> user_TXKERR,
TXN	=> user_TXN,
TXOUTCLK	=> user_TXOUTCLK,
TXP	=> user_TXP,
TXRUNDISP	=> user_TXRUNDISP,
BREFCLKNIN	=> user_BREFCLKNIN,
BREFCLKPIN	=> user_BREFCLKPIN,
CHBONDI	=> user_CHBONDI,
ENCHANSYNC	=> user_ENCHANSYNC,
ENMCOMMAALIGN	=> user_ENMCOMMAALIGN,
ENPCOMMAALIGN	=> user_ENPCOMMAALIGN,
LOOPBACK	=> user_LOOPBACK,
PMAINIT	=> user_PMAINIT,
PMAREGADDR	=> user_PMAREGADDR,
PMAREGDATAIN	=> user_PMAREGDATAIN,
PMAREGRW	=> user_PMAREGRW,
PMAREGSTROBE	=> user_PMAREGSTROBE,
PMARXLOCKSEL	=> user_PMARXLOCKSEL,
POWERDOWN	=> user_POWERDOWN,
REFCLK	=> user_REFCLK,
REFCLK2	=> user_REFCLK2,
REFCLKBSEL	=> user_REFCLKBSEL,
REFCLKSEL	=> user_REFCLKSEL,
RXBLOCKSYNC64B66BUSE	=> user_RXBLOCKSYNC64B66BUSE,
RXCOMMADETUSE	=> user_RXCOMMADETUSE,
RXDATAWIDTH	=> user_RXDATAWIDTH,
RXDEC64B66BUSE	=> user_RXDEC64B66BUSE,
RXDEC8B10BUSE	=> user_RXDEC8B10BUSE,
RXDESCRAM64B66BUSE	=> user_RXDESCRAM64B66BUSE,
RXIGNOREBTF	=> user_RXIGNOREBTF,
RXINTDATAWIDTH	=> user_RXINTDATAWIDTH,
RXN	=> user_RXN,
RXP	=> user_RXP,
RXPOLARITY	=> user_RXPOLARITY,
RXRESET	=> user_RXRESET,
RXSLIDE	=> user_RXSLIDE,
RXUSRCLK	=> user_RXUSRCLK,
RXUSRCLK2	=> user_RXUSRCLK2,
TXBYPASS8B10B	=> user_TXBYPASS8B10B,
TXCHARDISPMODE	=> user_TXCHARDISPMODE,
TXCHARDISPVAL	=> user_TXCHARDISPVAL,
TXCHARISK	=> user_TXCHARISK,
TXDATA	=> user_TXDATA,
TXDATAWIDTH	=> user_TXDATAWIDTH,
TXENC64B66BUSE	=> user_TXENC64B66BUSE,
TXENC8B10BUSE	=> user_TXENC8B10BUSE,
TXGEARBOX64B66BUSE	=> user_TXGEARBOX64B66BUSE,
TXINHIBIT	=> user_TXINHIBIT,
TXINTDATAWIDTH	=> user_TXINTDATAWIDTH,

```

TXPOLARITY           => user_TXPOLARITY,
TXRESET              => user_TXRESET,
TXSCRAM64B66BUSE    => user_TXSCRAM64B66BUSE,
TXUSRCLK             => user_TXUSRCLK,
TXUSRCLK2           => user_TXUSRCLK2);
    
```

## Verilog Instantiation Templates

### GT10\_PCI\_EXPRESS\_1 GT10\_PCI\_EXPRESS\_1\_name(

```

.BREFCLKNOUT (user_BREFCLKNOUT),
.BREFCLKPOUT (user_BREFCLKPOUT),
.CHBONDDONE (user_CHBONDDONE),
.CHBONDO (user_CHBONDO),
.PMARXLOCK (user_PMARXLOCK),
.RXBUFSTATUS (user_RXBUFSTATUS),
.RXCHARISCOMMA (user_RXCHARISCOMMA),
.RXCHARISK (user_RXCHARISK),
.RXCLKCORCNT (user_RXCLKCORCNT),
.RXCOMMADET (user_RXCOMMADET),
.RXDATA (user_RXDATA),
.RXDISPERR (user_RXDISPERR),
.RXLOSSOFSYNC (user_RXLOSSOFSYNC),
.RXNOTINTABLE (user_RXNOTINTABLE),
.RXREALIGN (user_RXREALIGN),
.RXRECCLK (user_RXRECCLK),
.RXRUNDISP (user_RXRUNDISP),
.TXBUFERR (user_TXBUFERR),
.TXKERR (user_TXKERR),
.TXN (user_TXN),
.TXOUTCLK (user_TXOUTCLK),
.TXP (user_TXP),
.TXRUNDISP (user_TXRUNDISP),

.BREFCLKNIN (user_BREFCLKNIN),
.BREFCLKPIN (user_BREFCLKPIN),
.CHBONDI (user_CHBONDI),
.ENCHANSYNC (user_ENCHANSYNC),
.ENMCOMMAALIGN (user_ENMCOMMAALIGN),
.ENPCOMMAALIGN (user_ENPCOMMAALIGN),
.LOOPBACK (user_LOOPBACK),
.PMAINIT (user_PMAINIT),
.PMAREGADDR (user_PMAREGADDR),
.PMAREGDATAIN (user_PMAREGDATAIN),
.PMAREGRW (user_PMAREGRW),
.PMAREGSTROBE (user_PMAREGSTROBE),
.PMARXLOCKSEL (user_PMARXLOCKSEL),
.POWERDOWN (user_POWERDOWN),
.REFCLK (user_REFCLK),
.REFCLK2 (user_REFCLK2),
.REFCLKBSEL (user_REFCLKBSEL),
.REFCLKSEL (user_REFCLKSEL),
.RXBLOCKSYNC64B66BUSE (user_RXBLOCKSYNC64B66BUSE),
.RXCOMMADETUSE (user_RXCOMMADETUSE),
.RXDATABWIDTH (user_RXDATABWIDTH),
    
```



```
.RXDEC64B66BUSE (user_RXDEC64B66BUSE),
.RXDEC8B10BUSE (user_RXDEC8B10BUSE),
.RXDESCRAM64B66BUSE (user_RXDESCRAM64B66BUSE),
.RXIGNOREBTF (user_RXIGNOREBTF),
.RXINTDATAWIDTH (user_RXINTDATAWIDTH),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXSLIDE (user_RXSLIDE),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXDATAWIDTH (user_TXDATAWIDTH),
.TXENC64B66BUSE (user_TXENC64B66BUSE),
.TXENC8B10BUSE (user_TXENC8B10BUSE),
.TXGEARBOX64B66BUSE (user_TXGEARBOX64B66BUSE),
.TXINHIBIT (user_TXINHIBIT),
.TXINTDATAWIDTH (user_TXINTDATAWIDTH),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXSCRAM64B66BUSE (user_TXSCRAM64B66BUSE),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));
```

```
defparam user_instance_name.ALIGN_COMMA_WORD = 2;
defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b00110111100;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b00110111100;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 2;
defparam user_instance_name.CLK_COR_8B10B_DE = "FALSE";
defparam user_instance_name.CLK_COR_MAX_LAT = 36;
defparam user_instance_name.CLK_COR_MIN_LAT = 28;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00100011100;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_MASK = 4'b0000;
```

```

defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_DROP = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 2;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b0001111111;
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1010000011;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0101111100;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.PMA_PWR_CNTRL = 8'b11111111;
defparam user_instance_name.PMA_SPEED = "28_10";
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.TX_BUFFER_USE = "TRUE";

```

## GT10\_PCI\_EXPRESS\_2 GT10\_PCI\_EXPRESS\_2\_name(

```

.BREFCLKNOUT (user_BREFCLKNOUT),
.BREFCLKPOUT (user_BREFCLKPOUT),
.CHBONDDONE (user_CHBONDDONE),
.CHBONDO (user_CHBONDO),
.PMARXLOCK (user_PMARXLOCK),
.RXBUFSTATUS (user_RXBUFSTATUS),
.RXCHARISCOMMA (user_RXCHARISCOMMA),
.RXCHARISK (user_RXCHARISK),
.RXCLKCORCNT (user_RXCLKCORCNT),
.RXCOMMADET (user_RXCOMMADET),
.RXDATA (user_RXDATA),
.RXDISPERR (user_RXDISPERR),
.RXLOSSOFSYNC (user_RXLOSSOFSYNC),
.RXNOTINTABLE (user_RXNOTINTABLE),
.RXREALIGN (user_RXREALIGN),
.RXRECCLK (user_RXRECCLK),
.RXRUNDISP (user_RXRUNDISP),
.TXBUFERR (user_TXBUFERR),
.TXKERR (user_TXKERR),
.TXN (user_TXN),
.TXOUTCLK (user_TXOUTCLK),
.TXP (user_TXP),
.TXRUNDISP (user_TXRUNDISP),

.BREFCLKNIN (user_BREFCLKNIN),
.BREFCLKPIN (user_BREFCLKPIN),
.CHBONDI (user_CHBONDI),
.ENCHANSYNC (user_ENCHANSYNC),
.ENMCOMMAALIGN (user_ENMCOMMAALIGN),
.ENPCOMMAALIGN (user_ENPCOMMAALIGN),
.LOOPBACK (user_LOOPBACK),
.PMAINIT (user_PMAINIT),
.PMAREGADDR (user_PMAREGADDR),
.PMAREGDATAIN (user_PMAREGDATAIN),

```

```

.PMAREGRW (user_PMAREGRW),
.PMAREGSTROBE (user_PMAREGSTROBE),
.PMARXLOCKSEL (user_PMARXLOCKSEL),
.POWERDOWN (user_POWERDOWN),
.REFCLK (user_REFCLK),
.REFCLK2 (user_REFCLK2),
.REFCLKBSEL (user_REFCLKBSEL),
.REFCLKSEL (user_REFCLKSEL),
.RXBLOCKSYNC64B66BUSE (user_RXBLOCKSYNC64B66BUSE),
.RXCOMMADETUSE (user_RXCOMMADETUSE),
.RXDATAWIDTH (user_RXDATAWIDTH),
.RXDEC64B66BUSE (user_RXDEC64B66BUSE),
.RXDEC8B10BUSE (user_RXDEC8B10BUSE),
.RXDESCRAM64B66BUSE (user_RXDESCRAM64B66BUSE),
.RXIGNOREBTF (user_RXIGNOREBTF),
.RXINTDATAWIDTH (user_RXINTDATAWIDTH),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXSLIDE (user_RXSLIDE),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXDATAWIDTH (user_TXDATAWIDTH),
.TXENC64B66BUSE (user_TXENC64B66BUSE),
.TXENC8B10BUSE (user_TXENC8B10BUSE),
.TXGEARBOX64B66BUSE (user_TXGEARBOX64B66BUSE),
.TXINHIBIT (user_TXINHIBIT),
.TXINTDATAWIDTH (user_TXINTDATAWIDTH),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXSCRAM64B66BUSE (user_TXSCRAM64B66BUSE),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_WORD = 2;
defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b00110111100;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b00110111100;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b00001000101;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b00001000101;
defparam user_instance_name.CHAN_BOND_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 2;
defparam user_instance_name.CLK_COR_8B10B_DE = "FALSE";
defparam user_instance_name.CLK_COR_MAX_LAT = 36;

```

```

defparam user_instance_name.CLK_COR_MIN_LAT = 28;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00100011100;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_DROP = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 2;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b0001111111;
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1010000011;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0101111100;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.PMA_PWR_CNTRL = 8'b11111111;
defparam user_instance_name.PMA_SPEED = "28_20";
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.TX_BUFFER_USE = "TRUE";

```

#### GT10\_PCI\_EXPRESS\_4 GT10\_PCI\_EXPRESS\_4\_name(

```

.BREFCLKNOUT (user_BREFCLKNOUT),
.BREFCLKPOUT (user_BREFCLKPOUT),
.CHBONDDONE (user_CHBONDDONE),
.CHBONDO (user_CHBONDO),
.PMARXLOCK (user_PMARXLOCK),
.RXBUFSTATUS (user_RXBUFSTATUS),
.RXCHARISCOMMA (user_RXCHARISCOMMA),
.RXCHARISK (user_RXCHARISK),
.RXCLKCORCNT (user_RXCLKCORCNT),
.RXCOMMADET (user_RXCOMMADET),
.RXDATA (user_RXDATA),
.RXDISPERR (user_RXDISPERR),
.RXLOSSOFSYNC (user_RXLOSSOFSYNC),
.RXNOTINTABLE (user_RXNOTINTABLE),
.RXREALIGN (user_RXREALIGN),
.RXRECCLK (user_RXRECCLK),
.RXRUNDISP (user_RXRUNDISP),
.TXBUFERR (user_TXBUFERR),
.TXKERR (user_TXKERR),
.TXN (user_TXN),
.TXOUTCLK (user_TXOUTCLK),
.TXP (user_TXP),

```

```

.TXRUNDISP (user_TXRUNDISP),

.BREFCLKNIN (user_BREFCLKNIN),
.BREFCLKPIN (user_BREFCLKPIN),
.CHBONDI (user_CHBONDI),
.ENCHANSYNC (user_ENCHANSYNC),
.ENMCOMMAALIGN (user_ENMCOMMAALIGN),
.ENPCOMMAALIGN (user_ENPCOMMAALIGN),
.LOOPBACK (user_LOOPBACK),
.PMAINIT (user_PMAINIT),
.PMAREGADDR (user_PMAREGADDR),
.PMAREGDATAIN (user_PMAREGDATAIN),
.PMAREGRW (user_PMAREGRW),
.PMAREGSTROBE (user_PMAREGSTROBE),
.PMARXLOCKSEL (user_PMARXLOCKSEL),
.POWERDOWN (user_POWERDOWN),
.REFCLK (user_REFCLK),
.REFCLK2 (user_REFCLK2),
.REFCLKBSEL (user_REFCLKBSEL),
.REFCLKSEL (user_REFCLKSEL),
.RXBLOCKSYNC64B66BUSE (user_RXBLOCKSYNC64B66BUSE),
.RXCOMMADETUSE (user_RXCOMMADETUSE),
.RXDATAWIDTH (user_RXDATAWIDTH),
.RXDEC64B66BUSE (user_RXDEC64B66BUSE),
.RXDEC8B10BUSE (user_RXDEC8B10BUSE),
.RXDESCRAM64B66BUSE (user_RXDESCRAM64B66BUSE),
.RXIGNOREBTF (user_RXIGNOREBTF),
.RXINTDATAWIDTH (user_RXINTDATAWIDTH),
.RXN (user_RXN),
.RXP (user_RXP),
.RXPOLARITY (user_RXPOLARITY),
.RXRESET (user_RXRESET),
.RXSLIDE (user_RXSLIDE),
.RXUSRCLK (user_RXUSRCLK),
.RXUSRCLK2 (user_RXUSRCLK2),
.TXBYPASS8B10B (user_TXBYPASS8B10B),
.TXCHARDISPMODE (user_TXCHARDISPMODE),
.TXCHARDISPVAL (user_TXCHARDISPVAL),
.TXCHARISK (user_TXCHARISK),
.TXDATA (user_TXDATA),
.TXDATAWIDTH (user_TXDATAWIDTH),
.TXENC64B66BUSE (user_TXENC64B66BUSE),
.TXENC8B10BUSE (user_TXENC8B10BUSE),
.TXGEARBOX64B66BUSE (user_TXGEARBOX64B66BUSE),
.TXINHIBIT (user_TXINHIBIT),
.TXINTDATAWIDTH (user_TXINTDATAWIDTH),
.TXPOLARITY (user_TXPOLARITY),
.TXRESET (user_TXRESET),
.TXSCRAM64B66BUSE (user_TXSCRAM64B66BUSE),
.TXUSRCLK (user_TXUSRCLK),
.TXUSRCLK2 (user_TXUSRCLK2));

defparam user_instance_name.ALIGN_COMMA_WORD = 2;
defparam user_instance_name.CHAN_BOND_LIMIT = 16;
defparam user_instance_name.CHAN_BOND_MODE = "OFF";
defparam user_instance_name.CHAN_BOND_ONE_SHOT = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_1_1 = 11'b00110111100;
defparam user_instance_name.CHAN_BOND_SEQ_1_2 = 11'b00000000000;

```

```
defparam user_instance_name.CHAN_BOND_SEQ_1_3 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_1_4 = 11'b00001001010;
defparam user_instance_name.CHAN_BOND_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_1 = 11'b00110111100;
defparam user_instance_name.CHAN_BOND_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CHAN_BOND_SEQ_2_3 = 11'b00001000101;
defparam user_instance_name.CHAN_BOND_SEQ_2_4 = 11'b00001000101;
defparam user_instance_name.CHAN_BOND_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CHAN_BOND_SEQ_2_USE = "FALSE";
defparam user_instance_name.CHAN_BOND_SEQ_LEN = 2;
defparam user_instance_name.CLK_COR_8B10B_DE = "FALSE";
defparam user_instance_name.CLK_COR_MAX_LAT = 36;
defparam user_instance_name.CLK_COR_MIN_LAT = 28;
defparam user_instance_name.CLK_COR_SEQ_1_1 = 11'b00100011100;
defparam user_instance_name.CLK_COR_SEQ_1_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_1_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_1 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_2 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_3 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_4 = 11'b00000000000;
defparam user_instance_name.CLK_COR_SEQ_2_MASK = 4'b0000;
defparam user_instance_name.CLK_COR_SEQ_2_USE = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_DROP = "FALSE";
defparam user_instance_name.CLK_COR_SEQ_LEN = 2;
defparam user_instance_name.CLK_CORRECT_USE = "TRUE";
defparam user_instance_name.COMMA_10B_MASK = 10'b0001111111;
defparam user_instance_name.DEC_MCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_PCOMMA_DETECT = "TRUE";
defparam user_instance_name.DEC_VALID_COMMA_ONLY = "TRUE";
defparam user_instance_name.MCOMMA_10B_VALUE = 10'b1010000011;
defparam user_instance_name.MCOMMA_DETECT = "TRUE";
defparam user_instance_name.PCOMMA_10B_VALUE = 10'b0101111100;
defparam user_instance_name.PCOMMA_DETECT = "TRUE";
defparam user_instance_name.PMA_PWR_CNTRL = 8'b11111111;
defparam user_instance_name.PMA_SPEED = "28_40";
defparam user_instance_name.RX_BUFFER_USE = "TRUE";
defparam user_instance_name.RX_LOS_INVALID_INCR = 1;
defparam user_instance_name.RX_LOS_THRESHOLD = 4;
defparam user_instance_name.RX_LOSS_OF_SYNC_FSM = "TRUE";
defparam user_instance_name.TX_BUFFER_USE = "TRUE";
```





## Commonly Used Constraints

None

## IBUF, 4, 8, 16


### Single- and Multiple-Input Buffers

IBUF	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No
IBUF4, IBUF8, IBUF16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	No
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No




IBUF, IBUF4, IBUF8, and IBUF16 are single- and multiple-input buffers. An IBUF isolates the internal circuit from the signals coming into a chip. IBUFs are contained in input/output blocks (IOBs). IBUF inputs (I) are connected to an IPAD or an IOPAD. IBUF outputs (O) are connected to the internal circuit.

For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, see “[IBUF\\_selectIO](#)” for information on IBUF variants with selectable I/O interfaces.

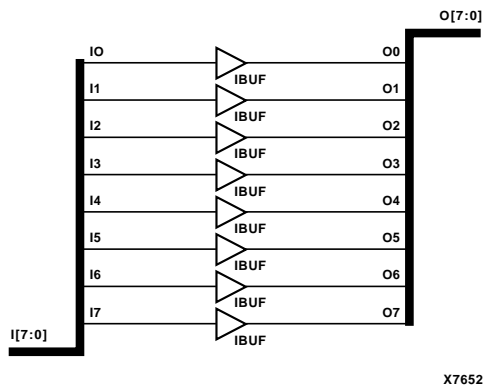

**IBUF8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-II E, Virtex, Virtex-E**

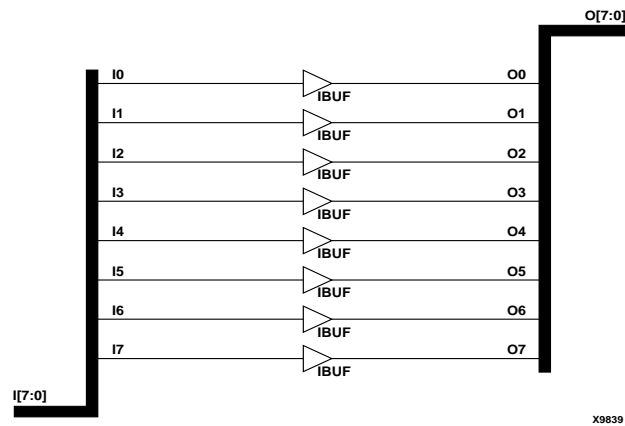

## IBUF8 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

### Usage

IBUFs are typically inferred for all top level input ports, but they can also be instantiated if necessary.

### VHDL Instantiation Template

```
-- Component Declaration for IBUF should be placed
-- after architecture statement but before begin keyword

component IBUF
  port (O : out STD_ULOGIC;
        I : in STD_ULOGIC);
end component;

-- Component Attribute specification for IBUF
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for IBUF should be placed
-- in architecture after the begin keyword

IBUF_INSTANCE_NAME : IBUF
  port map (O => user_O,
           I => user_I);
```

### Verilog Instantiation Template

```
IBUF instance_name (.O (user_O),
                   .I (user_I));
```

### Commonly Used Constraints

BUFG (CPLDs)

IOSTANDARD

IOBDELAY



## IBUF\_selectIO

### Single Input Buffer with Selectable I/O Interface

#### Architectures Supported

IBUF_selectIO	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



For Spartan-II, Spartan-IIE, Virtex, and Virtex-E, IBUF and its selectIO variants (listed in the "Components" column in the following table) are single input buffers whose I/O interface corresponds to a specific I/O standard. The name extensions (LVCMOS2, PCI33\_3, PCI33\_5, etc.) specify the standard. For example, IBUF\_SSTL3\_II is a single input buffer that uses the SSTL3\_II I/O-signaling standard. You can attach an IOSTANDARD attribute to an IBUF instance instead of using an IBUF\_selectIO component. Check marks (√) in the "Spartan-II, Virtex" and "Spartan-IIE, Virtex-E" columns indicate the components and IOSTANDARD attribute values available for those architectures.

An IBUF isolates the internal circuit from the signals coming into a chip. For Spartan-II, Spartan-IIE, Virtex, and Virtex-E, the dedicated GCLKIOB pad is input only. IBUF inputs (I) are connected to an IPAD or IOPAD. IBUF outputs (O) are connected to the internal circuit.

The hardware implementation of the I/O standards requires that you follow a set of usage rules for the SelectIO buffers. See ["SelectIO Usage Rules"](#) below for information on using these components and IOSTANDARD attributes.

#### Spartan-II, Spartan-IIE, Virtex, and Virtex-E IBUF\_selectIO Components and IOSTANDARD Attributes

Component	Spartan-II, Virtex	Spartan-IIE, Virtex-E	IOSTANDARD (Attribute Value)	VREF	Input VCCO
IBUF	√	√	(defaults to LVTTTL)	N/A	3.3
IBUF_AGP	√	√	AGP	1.32	N/A
IBUF_CTT	√	√	CTT	1.50	N/A
IBUF_GTL	√	√	GTL	0.80	N/A
IBUF_GTLP	√	√	GTLP	1.00	N/A
IBUF_HSTL_I	√	√	HSTL_I	0.75	N/A
IBUF_HSTL_III	√	√	HSTL_III	0.90	1.5
IBUF_HSTL_IV	√	√	HSTL_IV	0.90	N/A

**Spartan-II, Spartan-IIE, Virtex, and Virtex-E IBUF\_selectIO Components and IOSTANDARD Attributes**

Component	Spartan-II, Virtex	Spartan-IIE, Virtex-E	IOSTANDARD (Attribute Value)	VREF	Input VCCO
IBUF_LVCMOS2	√	√	LVCMOS2	N/A	2.5
IBUF_LVCMOS18		√	LVCMOS18	N/A	1.8
IBUF_LVDS		√	LVDS	N/A	N/A
IBUF_LVPECL		√	LVPECL	N/A	N/A
IBUF_PCI33_3	√	√	PCI33_3	N/A	3.3
IBUF_PCI33_5	√		PCI33_5	N/A	N/A
IBUF_PCI66_3	√	√	PCI66_3	N/A	3.3
IBUF_PCIX66_3		√	PCIX66_3	N/A	3.3
IBUF_SSTL2_I	√	√	SSTL2_I	1.25	N/A
IBUF_SSTL2_II	√	√	SSTL2_II	1.25	N/A
IBUF_SSTL3_I	√	√	SSTL3_I	1.50	N/A
IBUF_SSTL3_II	√	√	SSTL3_II	1.50	N/A

The Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X library includes some IBUF\_selectIO components for compatibility with older, existing designs and other architectures. For new Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X designs, however, the recommended method for using IBUF SelectIO buffers is to attach an IOSTANDARD attribute to an IBUF component. For example, attach IOSTANDARD=GTLP to an IBUF instead of using the IBUF\_GTLP component for new Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X designs. The IOSTANDARD attributes that can be attached to an IBUF component are listed in the "IOSTANDARD (Attribute Value)" column in the following table. See ["SelectIO Usage Rules"](#) for information on using these IOSTANDARD attributes.

Attach an IOSTANDARD attribute to an IBUF and assign the value indicated in the "IOSTANDARD (Attribute Value)" column to program the input for the I/O standard associated with that value.

**Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X IBUF\_selectIO IOSTANDARD Attributes**

IOSTANDARD	Architectures			Attribute Values		
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Termination Type Input	VREF Input*	Input VCCO
AGP		√		None	1.32	N/A
GTL	√	√	√	None	0.80	N/A
GTL_DCI	√	√	√	Single	0.80	1.2
GTLP	√	√	√	None	1.00	N/A
GTLP_DCI	√	√	√	Single	1.00	1.5
HSTL_I	√	√	√	None	0.75	N/A
HSTL_I_18	√	√	√	None	0.9	N/A
HSTL_I_DCI	√	√	√	Split	0.75	1.5
HSTL_I_DCI_18	√	√	√	Split	0.9	1.8

**Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X IBUF\_selectIO IOSTANDARD Attributes**

IOSTANDARD	Architectures			Attribute Values		
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Termination Type Input	VREF Input*	Input VCCO
HSTL_II	√	√	√	None	0.75	N/A
HSTL_II_18	√	√	√	None	0.9	N/A
HSTL_II_DCI	√	√	√	Split	0.75	1.5
HSTL_II_DCI_18	√	√	√	Split	0.9	1.8
HSTL_III	√	√	√	None	0.90	N/A
HSTL_III_18	√	√	√	None	1.10	N/A
HSTL_III_DCI	√	√	√	Single	0.90	1.5
HSTL_III_DCI_18	√	√	√	Single	1.10	1.8
HSTL_IV		√	√	None	0.90	N/A
HSTL_IV_18		√	√	None	1.10	N/A
HSTL_IV_DCI		√	√	Single	0.90	1.5
HSTL_IV_DCI_18		√	√	Single	1.10	1.8
LVC MOS12	√			None	N/A	1.2
LVC MOS15	√	√	√	None	N/A	1.5
LVC MOS18	√	√	√	None	N/A	1.8
LVC MOS25	√	√	√	None	N/A	2.5
LVC MOS33		√	√	None	N/A	3.3
LVDCI_15	√	√	√	None	N/A	1.5
LVDCI_18	√	√	√	None	N/A	1.8
LVDCI_25	√	√	√	None	N/A	2.5
LVDCI_33		√	√	None	N/A	3.3
LVDCI_DV2_15	√	√	√	None	N/A	1.5
LVDCI_DV2_18	√	√	√	None	N/A	1.8
LVDCI_DV2_25	√	√	√	None	N/A	2.5
LVDCI_DV2_33		√		None	N/A	3.3
LV TTL (default)		√	√	None	N/A	3.3
PCI33_3		√	√	None	N/A	3.3
PCI66_3		√	√	None	N/A	3.3
PCIX		√	√	None	N/A	3.3
SSTL18_I	√	√	√	None	0.9	N/A
SSTL18_I_DCI	√	√	√	Split	0.9	1.8
SSTL18_II	√	√	√	None	0.9	N/A
SSTL18_II_DCI		√	√	Split	0.9	1.8
SSTL2_I	√	√	√	None	1.25	N/A
SSTL2_I_DCI	√	√	√	Split	1.25	2.5
SSTL2_II	√	√	√	None	1.25	N/A
SSTL2_II_DCI	√	√	√	Split	1.25	2.5
SSTL3_I		√		None	1.50	N/A

**Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X IBUF\_selectIO IOSTANDARD Attributes**

IOSTANDARD	Architectures			Attribute Values		
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Termination Type Input	VREF Input*	Input VCCO
SSTL3_I_DCI		√		Split	1.50	3.3
SSTL3_II		√		None	1.50	N/A
SSTL3_II_DCI		√		Split	1.50	3.3

\* VREF requirement when this IOSTANDARD is an input.

## SelectIO Usage Rules

The Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X architectures include a versatile SelectIO interface to multiple voltage and drive standards. To select an I/O standard, you must choose the appropriate component from the library or add an IOSTANDARD attribute to the appropriate buffer component. For example, for an input buffer that uses the GTL standard, you would choose the IBUF\_GTL component or choose the IBUF component and attach the IOSTANDARD=GTL attribute to it.

See the following sections for information on the various input/output buffer components and attributes available to implement the desired standard:

- [“IBUF\\_selectIO”](#)
- [“IBUFG, IBUFG\\_selectIO”](#)
- [“IOBUF, IOBUF\\_selectIO”](#)
- [“OBUF\\_selectIO”](#)
- [“OBUFT\\_selectIO”](#)

The hardware implementation of the various I/O standards requires that certain usage rules be followed. Each I/O standard has voltage source requirements for input reference (VREF), output drive (VCCO), or both. In addition, Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X have terminate type requirements. Each Spartan-II, Spartan-IIE, Virtex, Virtex-E, Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X device has eight banks (two on each edge). Each bank has voltage sources shared by all I/O in the bank. Therefore, in a particular bank, the voltage source (for either input or output) must be of the same type.

- For Spartan-II, Spartan-IIE, Virtex, and Virtex-E, see [“Virtex, Virtex-E, Spartan-II, and Spartan-IIE Banking Rules”](#) below. Virtex-E follows the same banking rules as Virtex with a few additions.
- See [“Additional Banking Rules for Virtex-E and Spartan-IIE”](#) below for the additional Virtex-E rules. Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X have their own set of banking rules.
- See [“Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X Banking Rules”](#) below for Virtex-II, Virtex-II Pro, and Virtex-II Pro X rules.

## Virtex, Virtex-E, Spartan-II, and Spartan-IIE Banking Rules

The hardware implementation of the various I/O standards requires that certain usage rules be followed. As shown in the following table, each I/O standard has voltage source requirements for input reference (VREF), output drive (VCCO), or both. Each Spartan-II, Spartan-IIE, Virtex, and Virtex-E device has eight banks (two on each edge). Each bank has voltage sources shared by all I/O in the bank. Therefore, in a particular bank, the voltage source (for either input or output) must be of the same type. The Input Banking (VREF) Rules section and the Output Banking (VCCO) Rules section below summarize the SelectIO component usage rules based on the hardware implementation.

**I/O Standards Supported in Virtex, Virtex-E, Spartan-II, and Spartan-IIE**

I/O Standard	Application	Description	Output VCCO	Input VCCO	VREF
AGP	Graphics	Advanced graphics port	3.3	N/A	1.32
CTT	Memory	Center tap terminated	3.3	N/A	1.50
LVTTTL	General Purpose	Low voltage transistor-transistor logic	3.3	3.3*	N/A
LVC MOS2	General Purpose	Low voltage complementary metal-oxide semiconductor	2.5	2.5*	N/A
PCI33_3	PCI	Peripheral component interface (33MHz 3.3V)	3.3	3.3*	N/A
PCI33_5	PCI	Peripheral component interface (33MHz 5.0V)  PCI33_5 is not supported for Virtex-E or Spartan-IIE.	3.3	N/A	N/A
PCI66_3	PCI	Peripheral component interface (66MHz 3.3V)	3.3	3.3*	N/A
GTL	Backplane	Gunning transceiver logic interface (to processors or backplane driver)	N/A	N/A	0.80
GTL+ (GTLP)	Backplane	Gunning transceiver logic interface Plus	N/A	N/A	1.00
HSTL_I	Hitachi SRAM	High Speed transceiver logic	1.5	N/A	0.75
HSTL_III	Hitachi SRAM	High Speed transceiver logic	1.5	N/A	0.90
HSTL_IV	Hitachi SRAM	High Speed transceiver logic	1.5	N/A	0.90
SSTL2_I	Synchronous DRAM	Stub-series terminated logic interface for SDRAM	2.5	N/A	1.25
SSTL2_II	Synchronous DRAM	Stub-series terminated logic interface for SDRAM	2.5	N/A	1.25
SSTL3_I	Synchronous DRAM	Stub-series terminated logic interface for SDRAM	3.3	N/A	1.50
SSTL3_II	Synchronous DRAM	Stub-series terminated logic interface for SDRAM	3.3	N/A	1.50

\*Only LVTTTL, LVC MOS, and PCI need Input VCCO in Virtex-E and Spartan-IIE parts.

### Input Banking (VREF) Rules

The low-voltage I/O standards that have a differential amplifier input require a voltage reference input (VREF). The VREF voltage source is provided as an external signal to the chip.

- Any input buffer component that does not require a VREF source (LVTTTL, LVCMOS2, PCI) can be placed in any bank.
- All input buffer components that require a VREF source (GTL\*, HSTL\*, SSTL\*, CTT, AGP) must be of the same I/O standard in a particular bank. For example, IBUF\_SSTL2\_I and IBUFG\_SSTL2\_I are compatible since they are the same I/O standard (SSTL2\_I).
- If the bank contains any input buffer component that requires a VREF source, the following conditions apply.
  - ◆ One or more VREF sources must be connected to the bank via an IOB.
  - ◆ The number of VREF sources is dependent on the device and package.
  - ◆ The locations of the VREF sources are fixed for each device/package.
  - ◆ All VREF sources must be used in that bank.
- If the bank contains no input buffer component that requires a VREF source, the IOBs for VREF sources can be used for general I/O.
- Output buffer components of any type can be placed in the bank.

### Output Banking (VCCO) Rules

Because Virtex, Virtex-E, Spartan-II, and Spartan-IIIE have multiple low-voltage standards, some control is required over the distribution of VCCO, the drive source voltage for output pins. To provide for maximum flexibility, the output pins are banked. In comparison to the VREF sources described above, the VCCO voltage sources are dedicated pins on the device and do not consume valuable IOBs.

- Any output buffer component that does not require a VCCO source (GTL, GTL+) can be placed in any bank.
- To be placed in a particular bank, all output buffer components that require VCCO must have the same supply voltage (VCCO). For example, OBUF\_SSTL3\_I and OBUF\_PCI33\_3 are compatible in the same output bank since VCCO=3.3V for both.
- Input buffer components of any type can be placed in the bank.
- The configuration pins on a Virtex, Virtex-E, Spartan-II, and Spartan-IIIE device are on the right side of the chip. When configuring the device through a serial ProM, the user is required to use a VCCO of 3.3V in the two banks on the right hand side of the chip. If the user is not configuring the device through a serial ProM, the VCCO requirement is dependent upon the configuration source.

### Banking Rules for OBUFT\_selectIO with KEEPER

If a KEEPER symbol is attached to an OBUFT\_selectIO component (3-state output buffer) for an I/O standard that requires a VREF (for example, OBUFT\_GTL, OBUFT\_SSTL3\_I), then the OBUFT\_selectIO component follows the same rules as an IOBUF\_selectIO component for the same standard. It must follow both the input banking and output banking rules. The KEEPER element requires that the VREF be properly driven.

## Additional Banking Rules for Virtex-E and Spartan-IIE

The Virtex-E and Spartan-IIE architectures requires the same banking rules as described in the “Virtex, Virtex-E, Spartan-II, and Spartan-IIE Banking Rules” section.

Additional I/O standards are supported as indicated in the following table.

### Additional I/O Standards Supported in Virtex-E and Spartan-IIE

I/O Standard	Application	Description	Output VCCO	Input VCCO	VREF
<b>Single Ended:</b>					
LVC MOS18	General Purpose	Low voltage complementary metal-oxide semiconductor	1.8	1.8	N/A
<b>Differential Signaling:</b>					
LVDS	Point-to-point or multi-drop backplanes, high noise immunity	Low voltage differential signal	2.5	2.5	N/A
LVPECL	High performance clocking, backplanes, differential 100MHz+ clocking, optical transceiver, high speed networking and mixed-signal interfacing	Low voltage positive emitter couple logic	2.5	2.5	N/A

## Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X Banking Rules

The hardware implementation of the various I/O standards requires that certain usage rules be followed. Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X devices have eight banks (two on each edge), numbered from 0 through 7. Each bank has voltage sources shared by all I/O in the bank.

The following table describes each I/O standard.



**Descriptions of I/O Standards Supported In Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X**

<b>I/O Standard</b>	<b>Application</b>	<b>Description</b>
<b>Single-Ended:</b>		
AGP <sup>c</sup>	Graphics	Advanced graphics port
GTL	Memory	Gunning transceiver logic interface (to processors or backplane driver)
GTL_DCI	Memory	Gunning transceiver logic interface with on-chip Digital Controlled Impedance
GTL+ (GTL <sup>+</sup> )	Memory	Gunning transceiver logic interface Plus
GTL <sup>+</sup> _DCI	Memory	Gunning transceiver logic interface with on-chip Digital Controlled Impedance
HSTL_I	Hitachi SRAM	High Speed transceiver logic
HSTL_I_18	Hitachi SRAM	High Speed transceiver logic
HSTL_I_DCI	Hitachi SRAM	High Speed transceiver logic interface with on-chip Digital Controlled Impedance
HSTL_I_DCI_18	Hitachi SRAM	High Speed transceiver logic interface with on-chip Digital Controlled Impedance
HSTL_II	Hitachi SRAM	High Speed transceiver logic
HSTL_II_18	Hitachi SRAM	High Speed transceiver logic
HSTL_II_DCI	Hitachi SRAM	High Speed transceiver logic interface with on-chip Digital Controlled Impedance
HSTL_II_DCI_18	Hitachi SRAM	High Speed transceiver logic interface with on-chip Digital Controlled Impedance
HSTL_III	Hitachi SRAM	High Speed transceiver logic
HSTL_III_18	Hitachi SRAM	High Speed transceiver logic
HSTL_III_DCI	Hitachi SRAM	High Speed transceiver logic interface with on-chip Digital Controlled Impedance
HSTL_III_DCI_18	Hitachi SRAM	High Speed transceiver logic interface with on-chip Digital Controlled Impedance
HSTL_IV <sup>b</sup>	Hitachi SRAM	High Speed transceiver logic
HSTL_IV_18 <sup>b</sup>	Hitachi SRAM	High Speed transceiver logic
HSTL_IV_DCI <sup>b</sup>	Hitachi SRAM	High Speed transceiver logic interface with on-chip Digital Controlled Impedance
HSTL_IV_DCI_18 <sup>b</sup>	Hitachi SRAM	High Speed transceiver logic interface with on-chip Digital Controlled Impedance
LVC MOS12 <sup>ad</sup>	General Purpose	Low voltage complementary metal-oxide semiconductor
LVC MOS15 <sup>a</sup>	General Purpose	Low voltage complementary metal-oxide semiconductor
LVC MOS18 <sup>a</sup>	General Purpose	Low voltage complementary metal-oxide semiconductor
LVC MOS25 <sup>a</sup>	General Purpose	Low voltage complementary metal-oxide semiconductor
LVC MOS33 <sup>ab</sup>	General Purpose	Low voltage complementary metal-oxide semiconductor
LVDCI_15	General Purpose	Low voltage complementary metal-oxide semiconductor with on-chip Digital Controlled Impedance
LVDCI_18	General Purpose	Low voltage complementary metal-oxide semiconductor with on-chip Digital Controlled Impedance
LVDCI_25	General Purpose	Low voltage complementary metal-oxide semiconductor with on-chip Digital Controlled Impedance

**Descriptions of I/O Standards Supported In Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X**

<b>I/O Standard</b>	<b>Application</b>	<b>Description</b>
LVDCI_33 <sup>b</sup>	General Purpose	Low voltage complementary metal-oxide semiconductor with on-chip Digital Controlled Impedance
LVDCI_DV2_15	General Purpose	Low voltage complementary metal-oxide semiconductor with on-chip Digital Controlled Impedance
LVDCI_DV2_18	General Purpose	Low voltage complementary metal-oxide semiconductor with on-chip Digital Controlled Impedance
LVDCI_DV2_25	General Purpose	Low voltage complementary metal-oxide semiconductor with on-chip Digital Controlled Impedance
LVDCI_DV2_33 <sup>b</sup>	General Purpose	Low voltage complementary metal-oxide semiconductor with on-chip Digital Controlled Impedance
LVTTL <sup>ab</sup>	General Purpose	Low voltage transistor-transistor logic
PCI33_3 <sup>b</sup>	PCI	Peripheral component interface (33MHz 3.3V)
PCI66_3 <sup>b</sup>	PCI	Peripheral component interface (66MHz 3.3V)
PCIX <sup>b</sup>	PCI	Peripheral component interface
SSTL18_I	Synchronous DRAM	Stub-series terminated logic interface for SDRAM
SSTL18_I_DCI	Synchronous DRAM	Stub-series terminated logic interface for SDRAM with on-chip Digital Controlled Impedance
SSTL18_II	Synchronous DRAM	Stub-series terminated logic interface for SDRAM
SSTL18_II_DCI <sup>b</sup>	Synchronous DRAM	Stub-series terminated logic interface for SDRAM with on-chip Digital Controlled Impedance
SSTL2_I	Synchronous DRAM	Stub-series terminated logic interface for SDRAM
SSTL2_I_DCI	Synchronous DRAM	Stub-series terminated logic interface for SDRAM with on-chip Digital Controlled Impedance
SSTL2_II	Synchronous DRAM	Stub-series terminated logic interface for SDRAM
SSTL2_II_DCI	Synchronous DRAM	Stub-series terminated logic interface for SDRAM with on-chip Digital Controlled Impedance
SSTL3_I <sup>b</sup>	Synchronous DRAM	Stub-series terminated logic interface for SDRAM
SSTL3_I_DCI <sup>b</sup>	Synchronous DRAM	Stub-series terminated logic interface for SDRAM with on-chip Digital Controlled Impedance
SSTL3_II <sup>b</sup>	Synchronous DRAM	Stub-series terminated logic interface for SDRAM
SSTL3_II_DCI <sup>b</sup>	Synchronous DRAM	Stub-series terminated logic interface for SDRAM with on-chip Digital Controlled Impedance

**Notes:**

<sup>a</sup> LVTTL, LVCMOS15, LVCMOS18, and LVCMOS25 also require DRIVE and SLEW (FAST or Slow) attributes.

<sup>b</sup> Not supported for Spartan-3

<sup>c</sup> Supported for Virtex-II only

<sup>d</sup> Supported for Spartan-3 only

The following rules apply for using the various IO standards with Spartan-3, Virtex-II, Virtex-II Pro, or Virtex-II Pro X:

- In any particular Spartan-3, Virtex-II, Virtex-II Pro, or Virtex-II Pro X I/O bank, the voltage sources (both input and output) must be compatible. That is, they must have either the same voltage or an undefined (N/A) voltage.
- VREF, VCCO input, and VCCO output must be compatible within an I/O bank.
- In addition, to VREF and VCCO compatibility, the terminate type I/O standards must be compatible within the bank.

For terminate type compatibility, the following rules apply:

- ◆ Only one I/O buffer with terminate type of SINGLE can be in a particular bank.
- ◆ Only one I/O buffer with terminate type of SPLIT can be in a particular bank.
- ◆ Multiple I/O buffers with NONE and DRIVER terminate types can be in a particular bank.
- ◆ SPLIT and SINGLE can co-exist in the same bank.
- ◆ NONE and DRIVER types can co-exist with SPLIT and SINGLE types.
- The bottom edge of a Spartan-3, Virtex-II Pro, or Virtex-II Pro X device is set for 3.3V. Therefore, on the bottom edge of the device, VCCO output and VCCO input must be 3.3V or N/A.
- To place an I/O buffer that requires a VREF in a bank, the reserved VREF sites in that bank must be empty.
- To place an I/O buffer that has a terminate type of SINGLE, SPLIT, or DRIVER in a bank, the reserved VREF sites in that bank must be empty.
- For Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, differential signaling standards apply to IBUFDS, IBUFGDS, IBUFGDS\_DIFF\_OUT, OBUFDS, and OBUFTDS only (not IBUF or OBUF).

The following table summarizes the values that you need to check for compatibility for each combination of I/O buffer programming (input, output, or bidirectional buffer). For example, the table shows that if you configure an output buffer as LVCMOS25, which has an output voltage of 2.5V, and an input buffer as LVCMOS15, which as an input voltage of 1.5V, the Out/In Voltage is checked. Because they have different voltages, this combination would not be allowed in a particular I/O bank.

IOB Programming Combinations		VREF	Output VCCO	Input VCCO	Out/In Voltage
Input	Input	Check		Check	
Input	Output				Check
Input	Bidirectional	Check		Check	Check
Output	Input				Check
Output	Output		Check		
Output	Bidirectional		Check		Check
Bidirectional	Input	Check		Check	Check
Bidirectional	Output		Check		Check
Bidirectional	Bidirectional	Check	Check	Check	Check

## Usage

The recommended usage for IBUF\_selectIO is to allow the IBUFs be inferred and apply the IOSTANDARD constraint to the input in either the UCF or in the HDL code. IBUF\_selectIO can also be instantiated if necessary.

## VHDL Instantiation Template

```
-- Component Declaration for IBUF_selectIO should be placed
-- after architecture statement but before begin keyword

component IBUF_selectIO
  port (O : out STD_ULOGIC;
        I : in STD_ULOGIC);
end component;

-- Component Attribute specification for IBUF_selectIO
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for IBUF_selectIO should be placed
-- in architecture after the begin keyword

IBUF_selectIO_INSTANCE_NAME : IBUF_selectIO
  port map (O => user_O,
           I => user_I);
```

## Verilog Instantiation Template

```
IBUF_selectIO instance_name (.O (user_O),
                             .I (user_I));
```

## Commonly Used Constraints


IOBDELAY, IOSTANDARD

## IBUFDS

### Differential Signaling Input Buffer with Selectable I/O Interface

#### Architectures Supported

IBUFDS	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



X9255

IBUFDS is an input buffer that supports low-voltage, differential signaling. In IBUFDS, a design level interface signal is represented as two distinct ports (I and IB), one deemed the "master" and the other the "slave." The master and the slave are opposite phases of the same logical signal (for example, MYNET and MYNETB).

Inputs		Outputs
I	IB	O
0	0	- *
0	1	0
1	0	1
1	1	- *

\* The dash (-) means No Change.

The IOSTANDARD attribute values listed in the following table can be applied to an IBUFDS component to provide selectIO interface capability.

A separate SelectIO component is not provided. Attach an IOSTANDARD attribute to an IBUFDS and assign the value indicated in the "IOSTANDARD (Attribute Value)" column to program the inputs for the I/O standard associated with that value.

IOSTANDARD	Architectures			Attribute Values		
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Termination Type Input	VREF Input *	Input VCCO
BLVDS_25		√	√	None	N/A	N/A
LDT_25	√	√	√	None	N/A	N/A
LDT_25_DT			√			
LVDS_25 (default)	√	√	√	None	N/A	N/A
LVDS_25_DCI	√	√	√	Split	N/A	2.5

IOSTANDARD	Architectures			Attribute Values		
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Termination Type Input	VREF Input *	Input VCCO
LVDS_33		√		None	N/A	N/A
LVDSEXT_25	√	√	√	None	N/A	N/A
LVDSEXT_25_DCI	√	√	√	Split	N/A	2.5
LVDSEXT_33		√		None	N/A	N/A
LVDS_25_DT		√				
LVDXEST_25_DT			√			
LVPECL_25			√	None	N/A	N/A
LVPECL_33		√		None	N/A	N/A
ULVDS_25		√	√	None	N/A	N/A
ULVDS_25_DT			√			

\* VREF requirement when this IOSTANDARD is an input.

## Usage

For HDL, this design element is supported for instantiation but not for inference.

## VHDL Instantiation Template

```
-- Component Declaration for IBUFDS should be placed
-- after architecture statement but before begin keyword
```

```
component IBUFDS
  port (O : out STD_ULOGIC;
        I : in STD_ULOGIC;
        IB : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for IBUFDS
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for IBUFDS should be placed
-- in architecture after the begin keyword
```

```
IBUFDS_INSTANCE_NAME : IBUFDS
  port map (O => user_O,
            I => user_I,
            IB => user_IB);
```

## Verilog Instantiation Template

```
IBUFDS instance_name (.O (user_O),
                      .I (user_I),
                      .IB (user_IB));
```

## Commonly Used Constraints

IOSTANDARD

IOBDELAY





## IBUFG, IBUFG\_selectIO

### Dedicated Input Buffer with Selectable I/O Interface

#### Architectures Supported

IBUFG, IBUFG_selectIO	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



For Virtex, Virtex-E, Spartan-II, and Spartan-IIE, IBUFG and its selectIO variants (listed in the "Components" column in the table below) are dedicated input buffers for connecting to the clock buffer BUFG or CLKDLL. The name extensions (LVCMOS2, PCI33\_3, PCI33\_5, etc.) specify the standard. For example, IBUFG\_SSTL3\_II is a single input buffer that uses the SSTL3\_II I/O-signaling standard. You can attach an IOSTANDARD attribute to an IBUFG instance instead of using an IBUFG\_selectIO component. Check marks (√) in the "Spartan-II, Virtex" and "Spartan-IIE, Virtex-E" columns indicate the components and IOSTANDARD attribute values available for those architectures.

The Xilinx implementation software converts each BUFG to an appropriate type of global buffer for the target PLD device. The IBUFG input can only be driven by the global clock pins. The IBUFG output can drive CLKIN of a DLL/DCM, BUFG, or user logic. IBUFG can be routed to user logic and does not have to be routed to a DLL. The IBUFG can only be driven by an IPAD.

The hardware implementation of the I/O standards requires that you follow a set of usage rules for the SelectIO buffers. See the ["SelectIO Usage Rules"](#) section included in the IBUFG\_selectIO section for information on using these components and the IOSTANDARD attributes.

#### Spartan-II, Spartan-IIE, Virtex, and Virtex-E IBUFG\_selectIO Components and IOSTANDARD Attributes

Component	Spartan-II, Virtex	Spartan-IIE, Virtex-E	IOSTANDARD (Attribute Value)	VREF	Input VCCO
IBUFG	√	√	(defaults to LVTTTL)	N/A	3.3
IBUFG_AGP	√	√	AGP	1.32	N/A
IBUFG_CTT	√	√	CTT	1.50	N/A
IBUFG_GTL	√	√	GTL	0.80	N/A
IBUFG_GTLP	√	√	GTLP	1.00	N/A
IBUFG_HSTL_I	√	√	HSTL_I	0.75	N/A
IBUFG_HSTL_III	√	√	HSTL_III	0.90	1.5

**Spartan-II, Spartan-II-E, Virtex, and Virtex-E IBUFG\_selectIO Components and IOSTANDARD Attributes**

Component	Spartan-II, Virtex	Spartan-II-E, Virtex-E	IOSTANDARD (Attribute Value)	VREF	Input VCCO
IBUFG_HSTL_IV	√	√	HSTL_IV	0.90	N/A
IBUFG_LVCOS2	√	√	LVCOS2	N/A	2.5
IBUFG_LVCOS18		√	LVCOS18	N/A	1.8
IBUFG_LVDS		√	LVDS	N/A	N/A
IBUFG_LVPECL		√	LVPECL	N/A	N/A
IBUFG_PCI33_3	√	√	PCI33_3	N/A	3.3
IBUFG_PCI33_5	√	√ <sup>α</sup>	PCI33_5	N/A	N/A
IBUFG_PCI66_3	√	√	PCI66_3	N/A	3.3
IBUFG_PCIX66_3		√	PCIX66_3	N/A	3.3
IBUFG_SSTL2_I	√	√	SSTL2_I	1.25	N/A
IBUFG_SSTL2_II	√	√	SSTL2_II	1.25	N/A
IBUFG_SSTL3_I	√	√	SSTL3_I	1.50	N/A
IBUFG_SSTL3_II	√	√	SSTL3_II	1.50	N/A

<sup>α</sup>Not supported for Virtex-E.

The Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X library includes some IBUFG\_selectIO components for compatibility with older, existing designs and other architectures. For new Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X designs, however, the recommended method for using IBUFG SelectIO buffers is to attach an IOSTANDARD attribute to an IBUFG component. For example, attach IOSTANDARD=GTL to an IBUFG instead of using the IBUFG\_GTL component for new Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X designs. The IOSTANDARD attributes that can be attached to an IBUFG component are listed in the "IOSTANDARD (Attribute Value)" column in the following table "[Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X IBUFG\\_selectIO IOSTANDARD Attributes](#)". See the "[SelectIO Usage Rules](#)" section for information on using these IOSTANDARD attributes.

Attach an IOSTANDARD attribute to an IBUFG and assign the value indicated in the "IOSTANDARD (Attribute Value)" column to program the input for the I/O standard associated with that value.

**Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X IBUFG\_selectIO IOSTANDARD Attributes**

IOSTANDARD	Architectures			Attribute Values		
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Termination Type Input	VREF Input *	Input VCCO
AGP		√		None	1.32	N/A
GTL	√	√	√	None	0.80	N/A
GTL_DCI	√	√	√	Single	0.80	1.2
GTL_P	√	√	√	None	1.00	N/A
GTL_P_DCI	√	√	√	Single	1.00	1.5
HSTL_I	√	√	√	None	0.75	N/A

**Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X IBUFG\_selectIO IOSTANDARD Attributes**

IOSTANDARD	Architectures			Attribute Values		
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Termination Type Input	VREF Input *	Input VCCO
HSTL_I_18	√	√	√	None	0.9	N/A
HSTL_I_DCI	√	√	√	Split	0.75	1.5
HSTL_I_DCI_18	√	√	√	Split	0.9	1.8
HSTL_II_18	√	√	√	None	0.9	N/A
HSTL_II_DCI_18	√	√	√	Split	0.9	1.8
HSTL_III	√	√	√	None	0.90	N/A
HSTL_III_18	√	√	√	None	1.10	N/A
HSTL_III_DCI	√	√	√	Single	0.90	1.5
HSTL_III_DCI_18	√	√	√	Single	1.10	1.8
HSTL_IV		√	√	None	0.90	N/A
HSTL_IV_18		√	√	None	1.1	N/A
HSTL_IV_DCI		√	√	Single	0.90	1.5
HSTL_IV_DCI_18		√	√	Single	1.10	1.8
LVC MOS18	√	√	√	None	N/A	1.8
LVC MOS25	√	√	√	None	N/A	2.5
LVC MOS33		√	√	None	N/A	3.3
LVDCI_15	√	√	√	None	N/A	1.5
LVDCI_18	√	√	√	None	N/A	1.8
LVDCI_25	√	√	√	None	N/A	2.5
LVDCI_33		√	√	None	N/A	3.3
LVDCI_DV2_15	√	√	√	None	N/A	1.5
LVDCI_DV2_18	√	√	√	None	N/A	1.8
LVDCI_DV2_25	√	√	√	None	N/A	2.5
LVDCI_DV2_33		√		None	N/A	3.3
LV TTL (default)		√	√	None	N/A	3.3
PCI33_3		√	√	None	N/A	3.3
PCI66_3		√	√	None	N/A	3.3
PCIX		√	√	None	N/A	3.3
SSTL18_I	√	√	√	None	0.9	N/A
SSTL18_I_DCI	√	√	√	Split	0.9	1.8
SSTL18_II	√	√	√	None	0.9	N/A
SSTL18_II_DCI		√	√	Split	0.9	1.8
SSTL2_I	√	√	√	None	1.25	N/A
SSTL2_I_DCI	√	√	√	Split	1.25	2.5
SSTL2_II	√	√	√	None	1.25	N/A
SSTL2_II_DCI	√	√	√	Split	1.25	2.5
SSTL3_I		√		None	1.50	N/A

**Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X IBUFG\_selectIO IOSTANDARD Attributes**

IOSTANDARD	Architectures			Attribute Values		
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Termination Type Input	VREF Input *	Input VCCO
SSTL3_I_DCI		√		Split	1.50	3.3
SSTL3_II		√		None	1.50	N/A
SSTL3_II_DCI		√		Split	1.50	3.3

\* VREF requirement when this IOSTANDARD is an input.

## Usage

This design element is supported for schematic and instantiation. Synthesis tools usually infer a BUFGP on any clock net. If there are more clock nets than BUFGPs, the synthesis tool usually instantiates BUFGPs for the clocks that are most utilized. The BUFGP contains both a BUFG and an IBUFG.

## VHDL Instantiation Template

```
-- Component Declaration for IBUFG should be placed
-- after architecture statement but before begin keyword

component IBUFG
  port (O : out STD_ULOGIC;
        I : in  STD_ULOGIC);
end component;

-- Component Attribute specification for IBUFG
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for IBUFG should be placed
-- in architecture after the begin keyword

IBUFG_INSTANCE_NAME : IBUFG
  port map (O => user_O,
           I => user_I);
```

## Verilog Instantiation Template

```
IBUFG instance_name (.O (user_O),
                    .I (user_I));
```

## Commonly Used Constraints

IOSTANDARD

IOBDELAY




## IBUFGDS

### Dedicated Differential Signaling Input Buffer with Selectable I/O Interface

#### Architectures Supported

IBUFGDS	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



X9255

IBUFGDS is a dedicated differential signaling input buffer for connection to the clock buffer (BUFG) or DCM. In IBUFGDS, a design level interface signal is represented as two distinct ports (I and IB), one deemed the "master" and the other the "slave." The master and the slave are opposite phases of the same logical signal (for example, MYNET and MYNETB).

Inputs		Outputs
I	IB	O
0	0	- *
0	1	0
1	0	1
1	1	- *

\* The dash (-) means No Change.

The IOSTANDARD attribute values listed in the following table can be applied to an IBUFGDS component to provide SelectIO interface capability. See the *Xilinx Constraints Guide* for information about using these attributes.

A separate SelectIO component is not provided. Attach an IOSTANDARD attribute to an IBUFGDS and assign the value indicated in the "IOSTANDARD (Attribute Value)" column to program the inputs for the I/O standard associated with that value.

IOSTANDARD	Architectures			Attribute Values		
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Termination Type Input	VREF Input *	Input VCCO
BLVDS_25		√	√	None	N/A	N/A
LDT_25	√	√	√	None	N/A	N/A
LDT_25_DT			√			
LVDS_25 (default)	√	√	√	None	N/A	N/A

IOSTANDARD	Architectures			Attribute Values		
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Termination Type Input	VREF Input *	Input VCCO
LVDS_25_DCI	√	√	√	Split	N/A	2.5
LVDS_25_DT			√			
LVDS_33		√		None	N/A	N/A
LVDS_25	√	√	√	None	N/A	N/A
LVDS_25_DCI	√	√	√	Split	N/A	2.5
LVDS_33		√		None	N/A	N/A
LVDS_25_DT			√			
LVPECL_25			√	None	N/A	N/A
LVPECL_33		√		None	N/A	N/A
ULVDS_25		√	√	None	N/A	N/A
ULVDS_25_DT			√			

\* VREF requirement when this IOSTANDARD is an input.

## Usage

For HDL, this design element is supported for instantiation but not for inference.

## VHDL Instantiation Template

```
-- Component Declaration for IBUFGDS should be placed
-- after architecture statement but before begin keyword
```

```
component IBUFGDS
  port (O : out STD_ULOGIC;
        I : in STD_ULOGIC;
        IB : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for IBUFGDS
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for IBUFGDS should be placed
-- in architecture after the begin keyword
```

```
IBUFGDS_INSTANCE_NAME : IBUFGDS
  port map (O => user_O,
            I => user_I,
            IB => user_IB);
```

## Verilog Instantiation Template

```
IBUFGDS instance_name (.O (user_O),
                       .I (user_I),
                       .IB (user_IB));
```



## Commonly Used Constraints

IOSTANDARD

IOBDELAY



## IBUFGDS\_DIFF\_OUT

### Differential I/O Input Buffer with Differential Outputs

#### Architectures Supported

IBUFGDS_DIFF_OUT	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

IBUFGDS\_DIFF\_OUT is a differential I/O input buffer with differential outputs. The differential output pair (O & OB) maintains the relation of its differential input pair. Thus, IBUFGDS\_DIFF\_OUT can be used to maintain the duty cycle of a clock input (even at high frequencies). In order to support this behavior, the outputs of IBUFGDS\_DIFF\_OUT need to drive a set of matched resources. Our recommended method for achieving this is to use the IBUFGDS\_DIFF\_OUT primitive driving two BUFPGs which, by construction, will use two legs of the global clock network as the matched routing network. An example application is available at XAPP622 on the Xilinx support website at <http://www.xilinx.com/xapp/xapp622.pdf>.

#### Usage

IBUFGDS\_DIFF\_OUT is instantiated rather than inferred.

#### VHDL Instantiation Template

```
component IBUFGDS_DIFF_OUT
    port (O : out    STD_LOGIC;
          OB : out   STD_LOGIC;
          I : in     STD_LOGIC;
          IB : in    STD_LOGIC);
end component;
```

#### Verilog Instantiation Template

```
module IBUFGDS_DIFF_OUT (O, OB, I, IB);
    output O, OB;
    input  I, IB;
endmodule
```

IOSTANDARD	Architectures			Attribute Values		
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Termination Type Input	VREF Input *	Input VCCO
BLVDS_25		√	√	None	N/A	N/A
LDT_25	√	√	√	None	N/A	N/A

IOSTANDARD	Architectures			Attribute Values		
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Termination Type Input	VREF Input *	Input VCCO
LDT_25_DT			√			
LVDS_25 (default)	√	√	√	None	N/A	N/A
LVDS_25_DCI	√	√	√	Split	N/A	2.5
LVDS_25_DT			√			
LVDS_33		√		None	N/A	N/A
LVDS_33_DCI	√	√	√	None	N/A	N/A
LVDS_33_DT		√		None	N/A	N/A
LVDS_33_DCI_DT	√	√	√	Split	N/A	2.5
LVDS_33_DT		√		None	N/A	N/A
LVDS_33_DCI_DT	√	√	√	Split	N/A	2.5
LVDS_33_DCI_DT		√		None	N/A	N/A
LVDS_33_DCI_DT			√			
LVDS_33_DCI_DT			√	None	N/A	N/A
LVDS_33_DCI_DT		√		None	N/A	N/A
LVDS_33_DCI_DT		√	√	None	N/A	N/A
LVDS_33_DCI_DT			√			

\* VREF requirement when this IOSTANDARD is an input.

### Commonly Used Constraints


Location constraint : Same as **“IBUFGDS”**

## ICAP\_VIRTEX2

### User Interface to Virtex-II, Virtex-II Pro, and Virtex-II Pro X Internal Configuration Access Port

#### Architectures Supported

ICAP_VIRTEX, ICAP_VIRTEX2	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

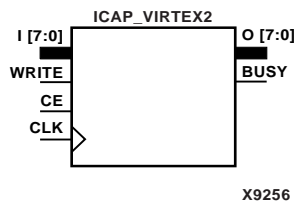

ICAP\_VIRTEX2 provides user access to the Virtex-II, Virtex-II Pro, and Virtex-II Pro X internal configuration access port (ICAP).

#### Usage

For HDL, this design element is instantiated rather than inferred.

#### VHDL Instantiation Template

```
-- Component Declaration for ICAP_VIRTEX2 should be placed
-- after architecture statement but before begin keyword
```

```
component ICAP_VIRTEX2
  port (BUSY : out STD_ULOGIC;
        O    : out STD_LOGIC_VECTOR (7 downto 0);
        CE   : in  STD_ULOGIC;
        CLK  : in  STD_ULOGIC;
        I    : in  STD_LOGIC_VECTOR (7 downto 0);
        WRITE : in  STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for ICAP_VIRTEX2
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for ICAP_VIRTEX2 should be placed
-- in architecture after the begin keyword
```

```
ICAP_VIRTEX2_INSTANCE_NAME : ICAP_VIRTEX2
  port map (BUSY => user_BUSY,
            O    => user_O,
            CE   => user_CE,
```

```
CLK => user_CLK,  
I => user_I,  
WRITE => user_WRITE);
```

## Verilog Instantiation Template

```
ICAP_VIRTEX2 instance_name (.BUSY (user_BUSY),  
                             .O (user_O),  
                             .CE (user_CE),  
                             .CLK (user_CLK),  
                             .I (user_I),  
                             .WRITE (user_WRITE));
```

## Commonly Used Constraints


None

## IFD, 4, 8, 16


### Single- and Multiple-Input D Flip-Flops

#### Architectures Supported

IFD	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No
IFD4, IFD8, IFD16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

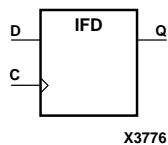


The IFD D-type flip-flop is contained in an input/output block (IOB), except for XC9500/XV/XL, CoolRunner XPLA3. The input (D) of the flip-flop is connected to an IPAD or an IOPAD (without using an IBUF). The D input provides data input for the flip-flop, which synchronizes data entering the chip. The data on input D is loaded into the flip-flop during the Low-to-High clock (C) transition and appears at the output (Q). The clock input can be driven by internal logic or through another external pin.

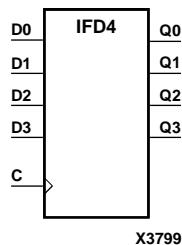


The flip-flops are asynchronously cleared with Low outputs when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

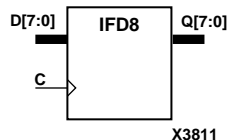

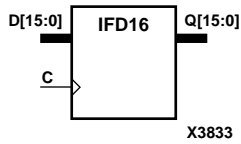


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.


Inputs		Outputs
D	C	Q
0	↑	0
1	↑	1

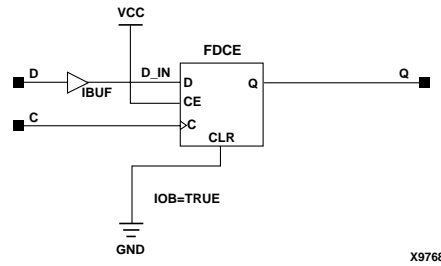

**IFD Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E**

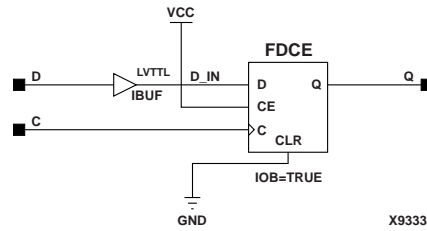


**IFD Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

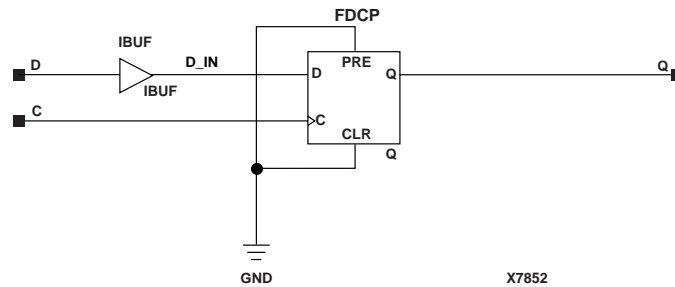

**IFD Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**



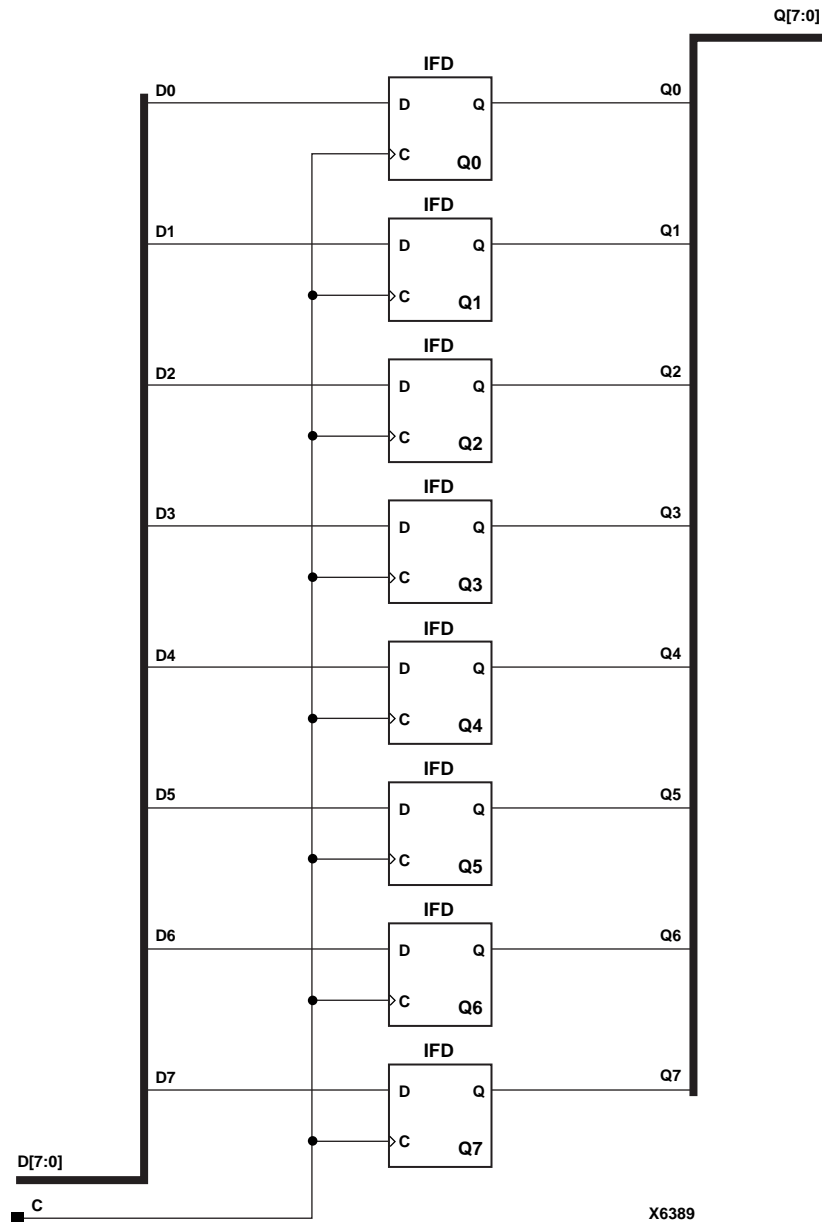

IFD8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X

## Usage

This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an IFD, you would infer an FD and put the IOB = TRUE attribute on the component. Or, you could use the map option `-pr i` to pack all input registers into the IOBs.




## IFD\_1

### Input D Flip-Flop with Inverted Clock

#### Architectures Supported

IFD_1	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

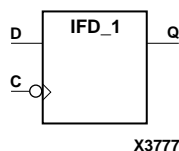


The IFD\_1 D-type flip-flop is contained in an input/output block (IOB). The input (D) of the flip-flop is connected to an IPAD or an IOPAD. The D input also provides data input for the flip-flop, which synchronizes data entering the chip. The D input data is loaded into the flip-flop during the High-to-Low clock (C) transition and appears at the output (Q). The clock input can be driven by internal logic or through another external pin.

The flip-flop is asynchronously cleared with Low output when power is applied.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs		Outputs
D	C	Q
0	↓	0
1	↓	1

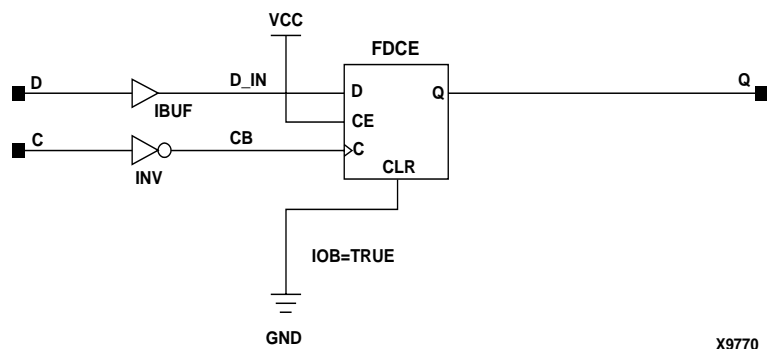

#### IFD\_1 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

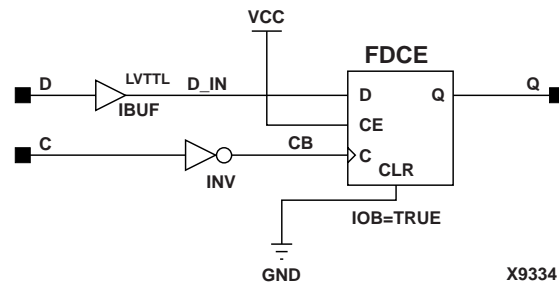

### IFD\_1 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

#### Usage


This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an `IOB=TRUE` attribute on the component in the UCF file or in the code. For instance, to get an IFD\_1, you would infer an FD\_1 and put the `IOB = TRUE` attribute on the component. Or, you could use the map option `-pr i` to pack all input registers into the IOBs.

## IFDDRCPE

### Dual Data Rate Input D Flip-Flop with Clock Enable and Asynchronous Preset and Clear

#### Architectures Supported

IFDDRCPE	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

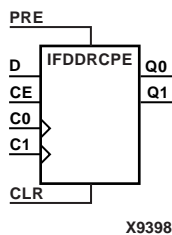


IFDDRCPE is a dual data rate (DDR) input D flip-flop with clock enable (CE) and asynchronous preset (PRE) and clear (CLR). It consists of one input buffer and two identical flip-flops (FDCPE).

When the asynchronous PRE is High and CLR is Low, both the Q0 and Q1 outputs are set High. When CLR is High, both outputs are reset Low. When PRE and CLR are Low and CE is High, data on the D input is loaded into the Q0 output on the Low-to-High C0 clock transition, and into the Q1 output on the Low-to-High C1 clock transition.

The flip-flops are asynchronously cleared with Low outputs when power is applied.

The INIT attribute does not apply to IFDDRCPE components.

Inputs						Outputs	
C0	C1	CE	D	CLR	PRE	Q0	Q1
X	X	X	X	1	0	0	0
X	X	X	X	0	1	1	1
X	X	X	X	1	1	0	0
X	X	0	X	0	0	No Chg	No Chg
↑	X	1	D	0	0	D	No Chg
X	↑	1	D	0	0	No Chg	D

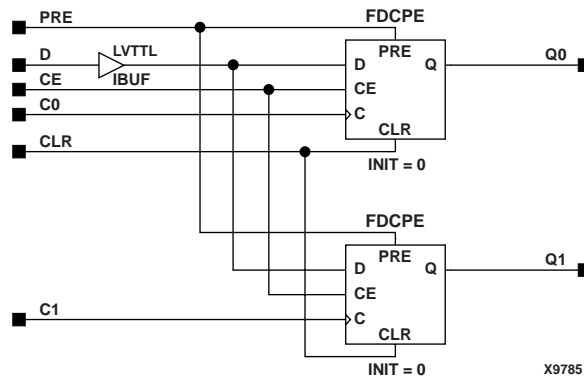

### IFDDRCPE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

#### Usage

This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an IFDDRCPE, you would infer an FDDRCPE and put the IOB = TRUE attribute on the component. Or, you could use the map option `-pr i` to pack all input registers into the IOBs.

#### VHDL Instantiation Template

```
-- Component Declaration for IFDDRCPE should be placed
-- after architecture statement but before begin keyword
```

```
component IFDDRCPE
    -- synthesis translate_on
    port (Q0 : out STD_ULOGIC;
          Q1 : out STD_ULOGIC;
          C0 : in STD_ULOGIC;
          C1 : in STD_ULOGIC;
          CE : in STD_ULOGIC;
          CLR : in STD_ULOGIC;
          D : in STD_ULOGIC;
          PRE : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for IFDDRCPE
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for IFDDRCPE should be placed
-- in architecture after the begin keyword
```

```
IFDDRCPE_INSTANCE_NAME : IFDDRCPE
    port map (Q0 => user_Q0,
              Q1 => user_Q1,
              C0 => user_C0,
```

```
C1 => user_C1  
CE => user_CE,  
CLR => user_CLR,  
D => user_D0,  
PRE => user_PRE);
```

## Verilog Instantiation Template

```
IFDDRCPE IFDDRCPE_instance_name (.Q0 (user_Q0),  
                                  .Q1 (user_Q1),  
                                  .C0 (user_C0),  
                                  .C1 (user_C1),  
                                  .CE (user_CE),  
                                  .CLR (user_CLR),  
                                  .D (user_D),  
                                  .PRE (user_PRE));
```

## Commonly Used Constraints

LOC, RLOC, and INIT






## IFDDRSE

### Dual Data Rate Input D Flip-Flop with Synchronous Reset and Set and Clock Enable

#### Architectures Supported

IFDDRSE	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

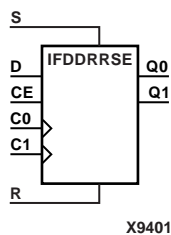


IFDDRSE is a dual data rate (DDR) input D flip-flop with synchronous reset (R), synchronous set (S), and clock enable (CE). It consists of one input buffer and two identical flip-flops (FDRSE).

For the C0 input and Q0 output, reset (R) has precedence. The R input, when High, resets the Q0 output Low during the Low-to-High C0 clock transition. When S is High and R is Low, the Q0 output is set High during the Low-to-High C0 clock transition. For the C1 input and Q1 output, set (S) has precedence. The R input, when High, resets the Q1 output Low during the Low-to-High C1 clock transition. When S is High and R is Low, the Q0 output is set to High during the Low-to-High C1 clock transition.

The flip-flop is asynchronously cleared, output Low, when power is applied.

The INIT attribute does not apply to IFDDRSE components.

Inputs						Outputs	
C0	C1	CE	D	R	S	Q0	Q1
↑	X	X	X	1	0	0	No Chg
↑	X	X	X	0	1	1	No Chg
↑	X	X	X	1	1	0	No Chg
X	↑	X	X	1	0	No Chg	0
X	↑	X	X	0	1	No Chg	1
X	↑	X	X	1	1	No Chg	0
X	X	0	X	0	0	No Chg	No Chg
↑	X	1	D	0	0	D	No Chg
X	↑	1	D	0	0	No Chg	D

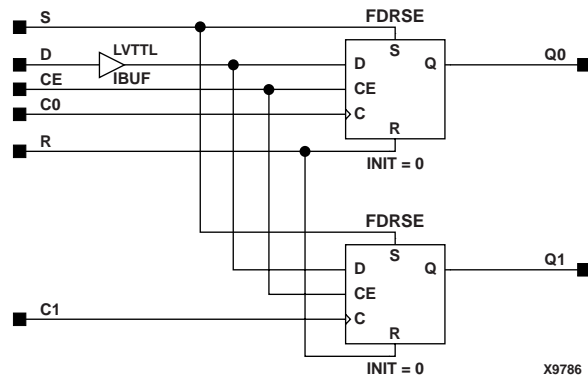

## IFDDRSE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

### Usage

This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an IFDDRSE, you would infer an FDDRSE and put the IOB = TRUE attribute on the component. Or, you could use the map option `-pr i` to pack all input registers into the IOBs.

### VHDL Instantiation Template

```
-- Component Declaration for IFDDRSE should be placed
-- after architecture statement but before begin keyword
```

```
component IFDDRSE
  port (Q0 : out STD_ULOGIC;
        Q1 : out STD_ULOGIC;
        C0 : in  STD_ULOGIC;
        C1 : in  STD_ULOGIC;
        CE : in  STD_ULOGIC;
        D  : in  STD_ULOGIC;
        R  : in  STD_ULOGIC;
        S  : in  STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for IFDDRSE
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for IFDDRSE should be placed
-- in architecture after the begin keyword
```

```
IFDDRSE_INSTANCE_NAME : IFDDRSE
  port map (Q0 => user_Q0,
           Q1 => user_Q1,
           C0 => user_C0,
           C1 => user_C1,
           CE => user_CE,
```

```
D => user_D,  
R => user_R,  
S => user_S);
```

## Verilog Instantiation Template

```
IFDDRSE IFDDRSE_instance_name (.Q0 (user_Q0),  
                                .Q1 (user_Q1),  
                                .C0 (user_C0),  
                                .C1 (user_C1),  
                                .CE (user_CE),  
                                .D (user_D),  
                                .R (user_R),  
                                .S (user_S));
```

## Commonly Used Constraints

LOC

RLOC

INIT




## IFDI

### Input D Flip-Flop (Asynchronous Preset)

#### Architectures Supported

IFDI	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

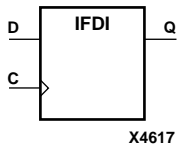


The IFDI D-type flip-flop is contained in an input/output block (IOB). The input (D) of the flip-flop is connected to an IPAD or an IOPAD. The D input provides data input for the flip-flop, which synchronizes data entering the chip. The data on input D is loaded into the flip-flop during the Low-to-High clock (C) transition and appears at the output (Q). The clock input can be driven by internal logic or through another external pin.

The flip-flop is asynchronously preset, output High, when power is applied.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs		Outputs
D	C	Q
0	↑	0
1	↑	1

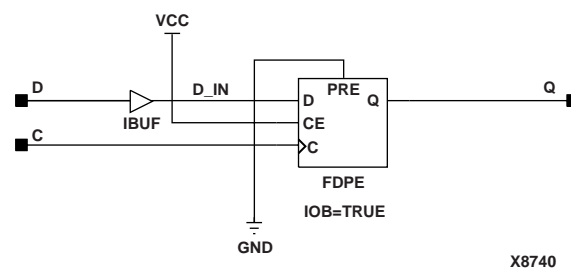

#### IFDI Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

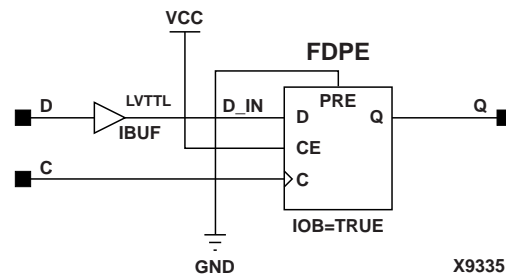

### IFDI Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

#### Usage


This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an `IOB=TRUE` attribute on the component in the UCF file or in the code. For instance, to get an IFDI, you would infer an FDP and put the `IOB = TRUE` attribute on the component. Or, you could use the map option `-pr i` to pack all input registers into the IOBs.

## IFDI\_1

### Input D Flip-Flop with Inverted Clock (Asynchronous Preset)

#### Architectures Supported

IFDI_1	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

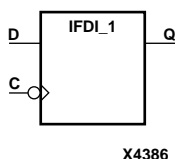


The IFDI\_1 D-type flip-flop is contained in an input/output block (IOB). The input (D) of the flip-flop is connected to an IPAD or an IOPAD. The D input provides data input for the flip-flop, which synchronizes data entering the chip. The data on input D is loaded into the flip-flop during the High-to-Low clock (C) transition and appears at the output (Q). The clock input can be driven by internal logic or through another external pin.

The flip-flop is asynchronously preset, output High, when power is applied.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs		Outputs
D	C	Q
0	↓	0
1	↓	1

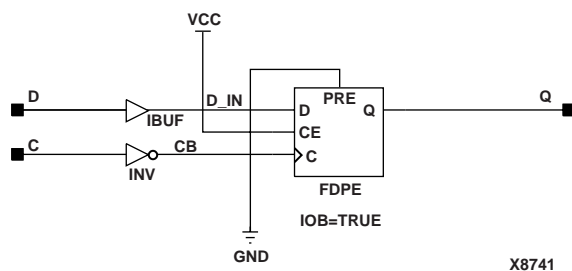

#### IFDI\_1 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

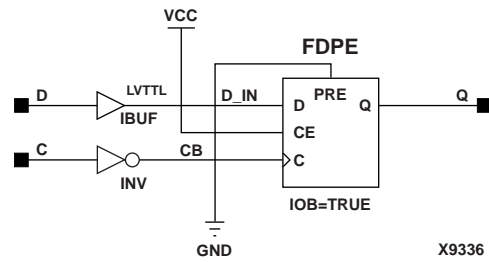

## IFDI\_1 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

### Usage

This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an IFDI\_1, you would infer an FDP\_1 and put the IOB = TRUE attribute on the component. Or, you could use the map option `-pr i` to pack all input registers into the IOBs.






## IFDX, 4, 8, 16

### Single- and Multiple-Input D Flip-Flops with Clock Enable

#### Architectures Supported

IFDX	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
IFDX4, IFDX8, IFDX16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

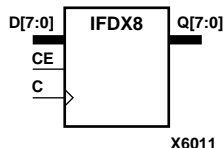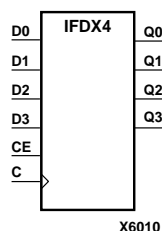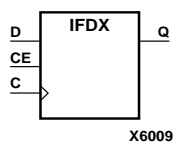



The IFDX D-type flip-flop is contained in an input/output block (IOB). The input (D) of the flip-flop is connected to an IPAD or an IOPAD (without using an IBUF). The D input provides data input for the flip-flop, which synchronizes data entering the chip. When CE is High, the data on input D is loaded into the flip-flop during the Low-to-High clock (C) transition and appears at the output (Q). The clock input can be driven by internal logic or through another external pin. When CE is Low, flip-flop outputs do not change.

The flip-flops are asynchronously cleared with Low outputs when power is applied.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
CE	Dn	C	Qn
1	Dn	↑	Dn
0	X	X	No Chg

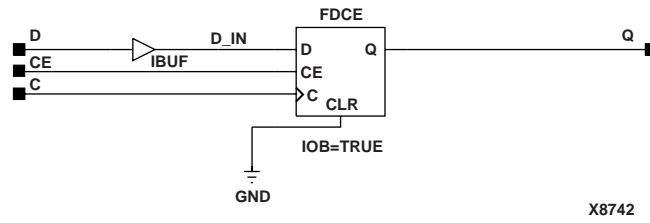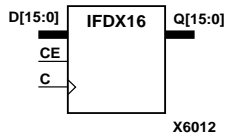

**IFDX Implementation Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

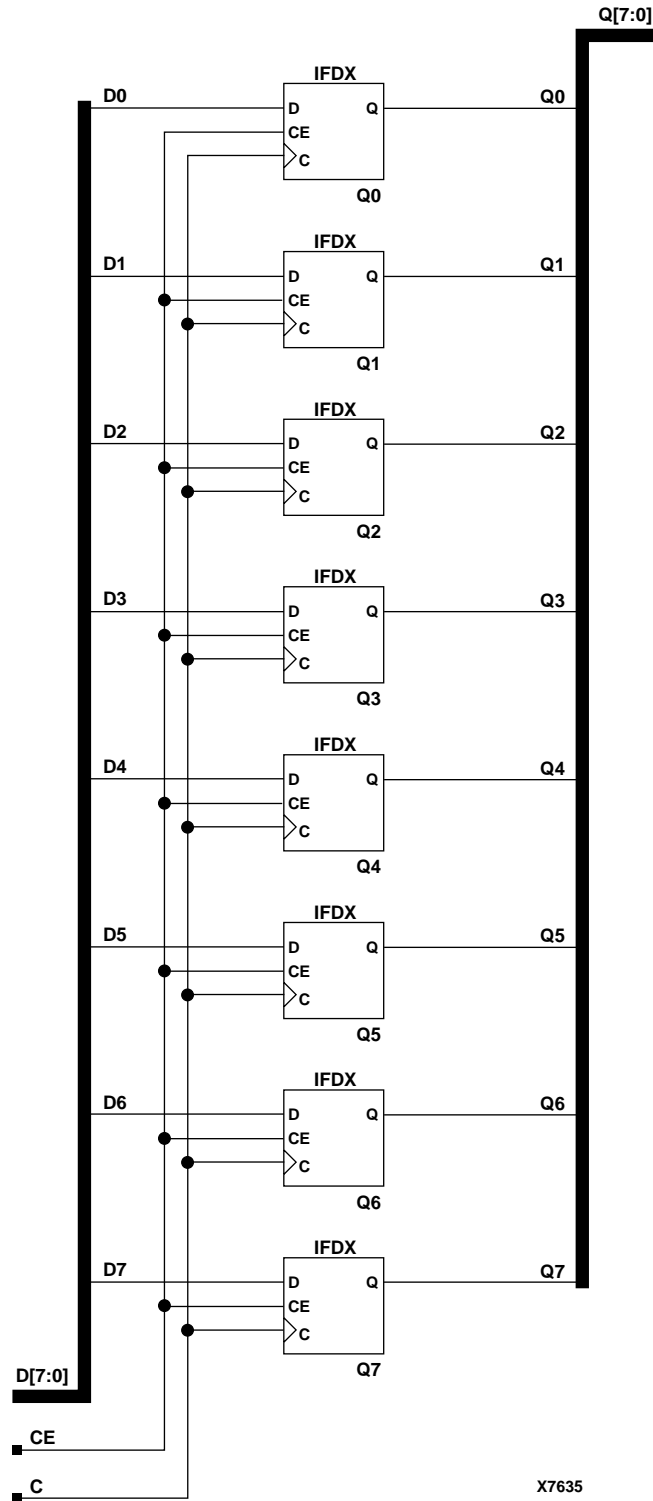

**IFDX8 Implementation Spartan-II, Spartan-IIe, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

## Usage

This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an IFDX, you would infer an FDCE and put the IOB = TRUE attribute on the component. Or, you could use the map option `-pr i` to pack all input registers into the IOBs.

## VHDL Instantiation Template

```
-- Component Declaration for IFDX should be placed
-- after architecture statement but before begin keyword

component IFDX
  port (Q : out STD_ULOGIC;
        C : in STD_ULOGIC;
        CE : in STD_ULOGIC;
        D : in STD_ULOGIC);
end component;

-- Component Attribute specification for IFDX
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for IFDX should be placed
-- in architecture after the begin keyword

IFDX_INSTANCE_NAME : IFDX
  port map (Q => user_Q,
           C => user_C,
           CE => user_CE,
           D => user_D);
```

## Verilog Instantiation Template

```
IFDX IFDX_instance_name (.Q (user_Q),
                        .C (user_C),
                        .CE (user_CE),
                        .D (user_D));
```

## Commonly Used Constraints


IOB

## IFDX\_1

### Input D Flip-Flop with Inverted Clock and Clock Enable

#### Architectures Supported

IFDX_1	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

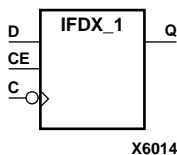

The IFDX\_1 D-type flip-flop is contained in an input/output block (IOB). The input (D) of the flip-flop is connected to an IPAD or an IOPAD. The D input also provides data input for the flip-flop, which synchronizes data entering the chip. When CE is High, the data on input D is loaded into the flip-flop during the High-to-Low clock (C) transition and appears at the output (Q). The clock input can be driven by internal logic or through another external pin. When the CE pin is Low, the output (Q) does not change.


The flip-flop is asynchronously cleared with Low output, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

For more information on IFDX\_1, see “[ILDX, 4, 8, 16](#)”.

Inputs			Outputs
CE	D	C	Q
1	D	↓	D
0	X	X	No Chg

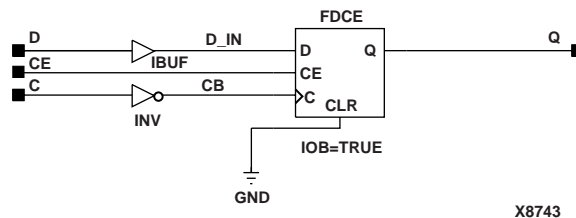

#### IFDX\_1 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

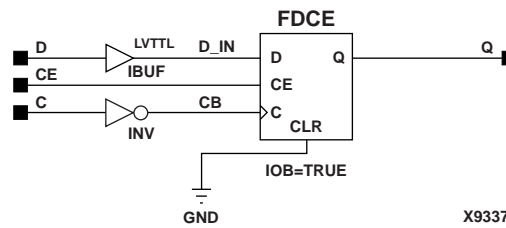

### IFDX\_1 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

#### Usage


This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an `IOB=TRUE` attribute on the component in the UCF file or in the code. For instance, to get an `IFDX_1`, you would infer an `FDCE_1` and put the `IOB = TRUE` attribute on the component. Or, you could use the map option `-pr i` to pack all input registers into the IOBs.

## IFDXI

### Input D Flip-Flop with Clock Enable (Asynchronous Preset)

#### Architectures Supported

IFDXI	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

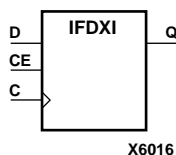

The IFDXI D-type flip-flop is contained in an input/output block (IOB). The input (D) of the flip-flop is connected to an IPAD or an IOPAD. The D input provides data input for the flip-flop, which synchronizes data entering the chip. When CE is High, the data on input D is loaded into the flip-flop during the Low-to-High clock (C) transition and appears at the output (Q). The clock input can be driven by internal logic or through another external pin. When the CE pin is Low, the output (Q) does not change.


The flip-flop is asynchronously preset with High output, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

For information on legal IFDXI, IFDXI\_1, ILDXI, and ILDXI\_1 combinations, see [“ILDXI”](#).

Inputs			Outputs
CE	D	C	Q
1	D	↑	D
0	X	X	No Chg

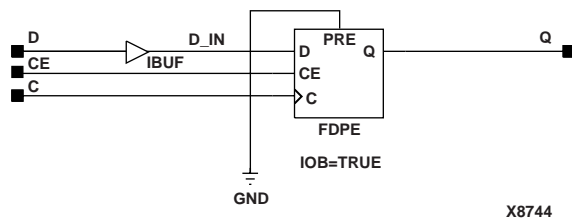

#### IFDXI Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

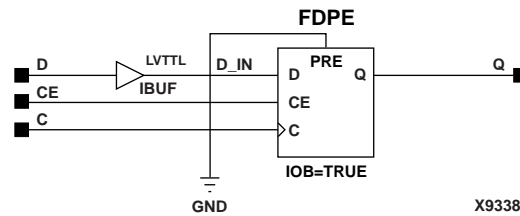

## IFDXI Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

### Usage

This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an IFDXI, you would infer an FDPE and put the IOB = TRUE attribute on the component. Or, you could use the map option `-pr i` to pack all input registers into the IOBs.




## IFDXI\_1

### Input D Flip-Flop with Inverted Clock and Clock Enable (Asynchronous Preset)

#### Architectures Supported

IFDXI_1	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

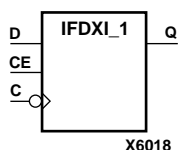

The IFDXI\_1 D-type flip-flop is contained in an input/output block (IOB). The input (D) of the flip-flop is connected to an IPAD or an IOPAD. The D input provides data input for the flip-flop, which synchronizes data entering the chip. When CE is High, the data on input D is loaded into the flip-flop during the High-to-Low clock (C) transition and appears at the output (Q). The clock input can be driven by internal logic or through another external pin. When the CE pin is Low, the output (Q) does not change.


The flip-flop is asynchronously preset with High output when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

For information on legal IFDXI, IFDXI\_1, ILDXI, and ILDXI\_1 combinations, see “ILDXI”.

Inputs			Outputs
CE	D	C	Q
1	D	↓	D
0	X	X	No Chg

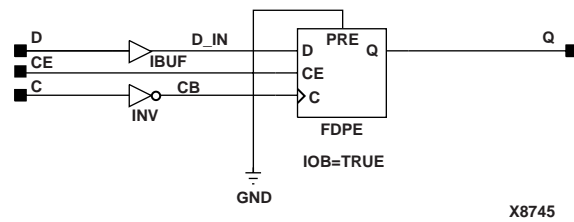

**IFDXI\_1 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E**

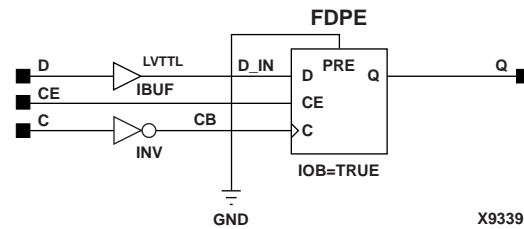

**IFDXI\_1 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

**Usage**


This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an IFDXI\_1, you would infer an FDPE\_1 and put the IOB = TRUE attribute on the component. Or, you could use the map option `-pr i` to pack all input registers into the IOBs.

## ILD, 4, 8, 16


### Transparent Input Data Latches

#### Architectures Supported

ILD	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No
ILD, ILD4, ILD8, ILD16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

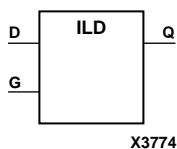



ILD, ILD4, ILD8, and ILD16 are single or multiple transparent data latches, which can be used to hold transient data entering a chip. The ILD latch is contained in an input/output block (IOB), except for XC9500/XV/XL. The latch input (D) is connected to an IPAD or an IOPAD (without using an IBUF). When the gate input (G) is High, data on the inputs (D) appears on the outputs (Q). Data on the D inputs during the High-to-Low G transition is stored in the latch.

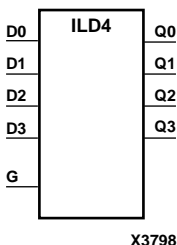

The latch is asynchronously cleared with Low output when power is applied.


For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

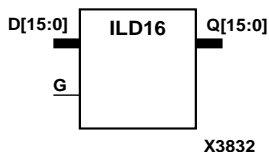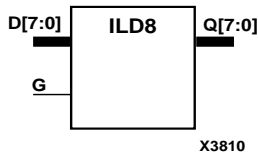


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.


Inputs		Outputs
G	D	Q
1	1	1
1	0	0
0	X	No Chg
↓	D	D

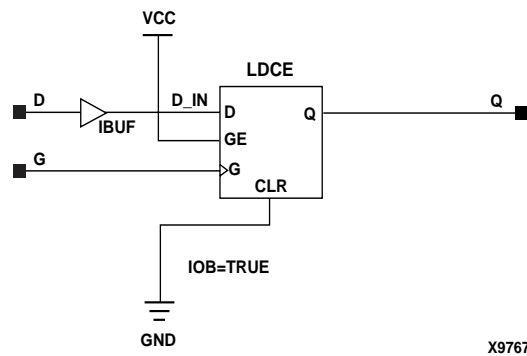


**ILD Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E**

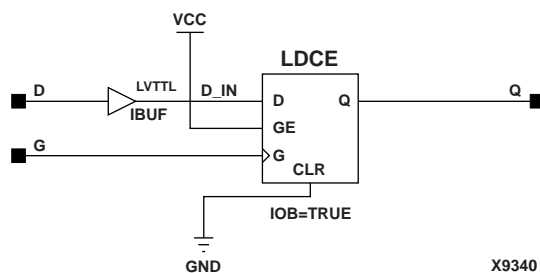

**ILD Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

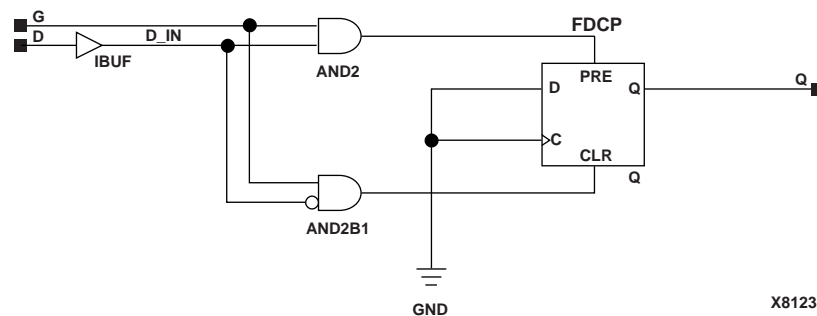

**ILD Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

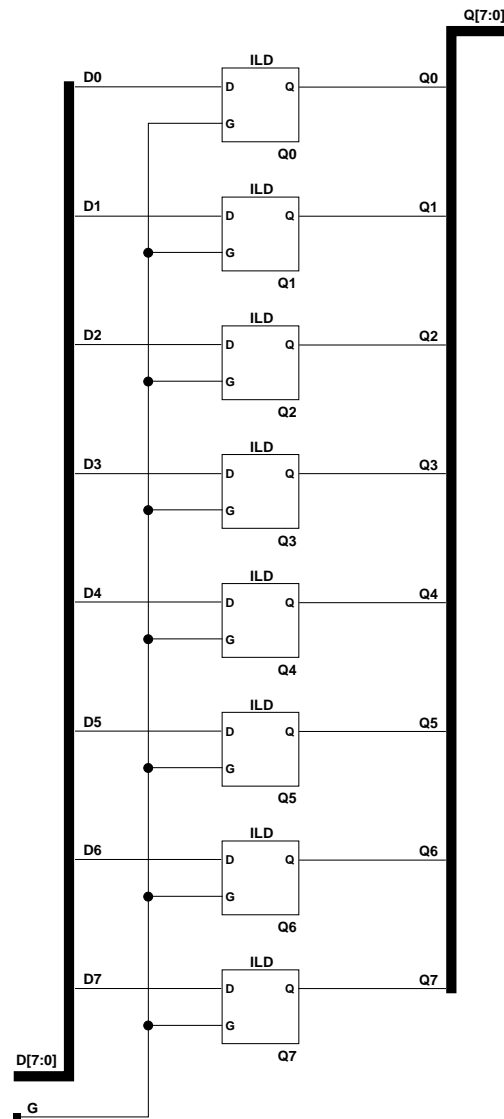

X7853

**ILD8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-II-E, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

## Usage

This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an `IOB=TRUE` attribute on the component in the UCF file or in the code. For instance, to get an ILD, you would infer an LD and put the `IOB = TRUE` attribute on the component. Or, you could use the map option `-pr i` to pack all input registers into the IOBs.

## VHDL Instantiation Template

```
-- Component Declaration for ILD should be placed
-- after architecture statement but before begin keyword

component ILD
  port (Q : out STD_ULOGIC;
        D : in STD_ULOGIC;
        DG : in STD_ULOGIC);
end component;

-- Component Attribute specification for ILD
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for ILD should be placed
-- in architecture after the begin keyword

ILD_INSTANCE_NAME : ILD
  port map (Q => user_Q,
            D => user_D,
            G => user_G);
```

## Verilog Instantiation Template

```
ILD ILD_instance_name (.Q (user_Q),
                       .D (user_D),
                       .G (user_G));
```

## Commonly Used Constraints

INIT








# ILD\_1

## Transparent Input Data Latch with Inverted Gate

### Architectures Supported

ILD_1	
Spartan-II, Spartan-III	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

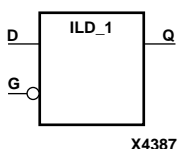


ILD\_1 is a transparent data latch, which can be used to hold transient data entering a chip. When the gate input (G) is Low, data on the data input (D) appears on the data output (Q). Data on D during the Low-to-High G transition is stored in the latch.

The latch is asynchronously cleared with Low output when power is applied.


Spartan-II, Spartan-III, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs		Outputs
G	D	Q
0	1	1
0	0	0
1	X	D
↑	D	D

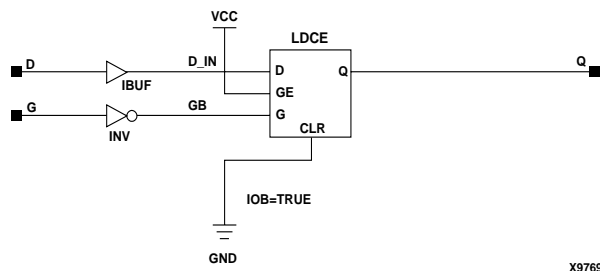

### ILD\_1 Implementation Spartan-II, Spartan-III, Virtex, Virtex-E

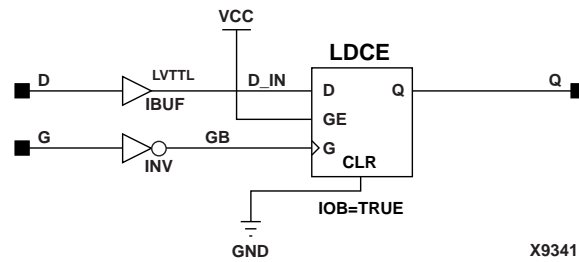

## ILD\_1 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

### Usage

This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an ILD\_1, you would infer an LD\_1 and put the IOB = TRUE attribute on the component. Or, you could use the map option `-pr i` to pack all input registers into the IOBs.

### VHDL Instantiation Template

```
-- Component Declaration for ILD_1 should be placed
-- after architecture statement but before begin keyword

component ILD_1
  port (Q : out STD_ULOGIC;
        D : in STD_ULOGIC;
        G : in STD_ULOGIC);
end component;

-- Component Attribute specification for ILD_1
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for ILD_1 should be placed
-- in architecture after the begin keyword

ILD_1_INSTANCE_NAME : ILD_1
port map (Q => user_Q,
          D => user_D,
          G => user_G);
```

### Verilog Instantiation Template

```
ILD_1 ILD_1_instance_name (.Q (user_Q),
                           .D (user_D),
                           .G (user_G));
```

### Commonly Used Constraints


INIT

# ILDI

## Transparent Input Data Latch (Asynchronous Preset)

### Architectures Supported

ILDI	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

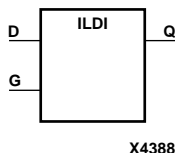

ILDI is a transparent data latch, which can hold transient data entering a chip. When the gate input (G) is High, data on the input (D) appears on the output (Q). Data on the D input during the High-to-Low G transition is stored in the latch.

The latch is asynchronously preset, output High, when power is applied.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.


### ILDIs and IFDIs

The ILDI is actually the input flip-flop master latch. It is possible to access two different outputs from the input flip-flop: one that responds to the level of the clock signal and another that responds to an edge of the clock signal. When using both outputs from the same input flip-flop, a transparent High latch (ILDI) corresponds to a falling edge-triggered flip-flop (IFDI\_1). Similarly, a transparent Low latch (ILDI\_1) corresponds to a rising edge-triggered flip-flop (IFDI).

Inputs		Outputs
G	D	Q
1	1	1
1	0	0
0	X	D
↓	D	D

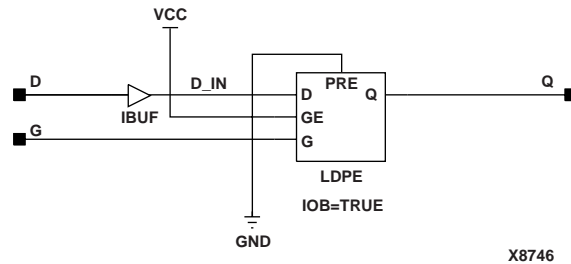

**ILDI Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E**

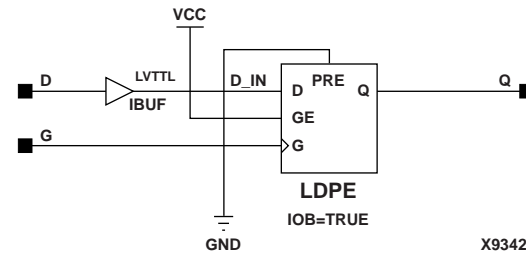

**ILDI Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

**Usage**


This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an ILDI, you would infer an LDP and put the IOB = TRUE attribute on the component. Or, you could use the map option -pr i to pack all input registers into the IOBs.

## ILDI\_1

### Transparent Input Data Latch with Inverted Gate (Asynchronous Preset)

#### Architectures Supported

ILDI_1	
Spartan-II, Spartan-IIE	Macro*
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
* Macros cannot be implemented for Spartan-IIE.	

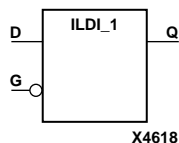

ILDI\_1 is a transparent data latch, which can hold transient data entering a chip. When the gate input (G) is Low, data on the data input (D) appears on the data output (Q). Data on D during the Low-to-High G transition is stored in the latch.


The latch is asynchronously preset, output High, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

For information on ILDI\_1, see [“ILDI”](#).

Inputs		Outputs
G	D	Q
0	1	1
0	0	0
1	X	D
↑	D	D

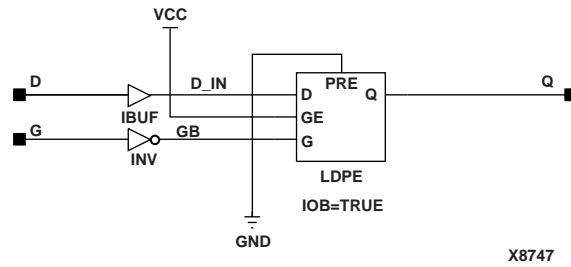

**ILDI\_1 Implementation Spartan-II, Spartan-IIe, Virtex, Virtex-E**

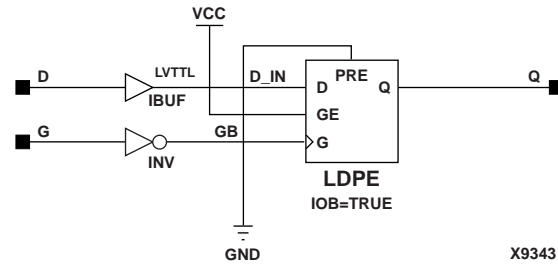

**ILDI\_1 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

**Usage**


This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an ILDI\_1, you would infer an LDP\_1 and put the IOB = TRUE attribute on the component. Or, you could use the map option -pr i to pack all input registers into the IOBs.

# ILDX, 4, 8, 16

## Transparent Input Data Latches


### Architectures Supported

ILDX	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
ILDX4, ILDX8, ILDX16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

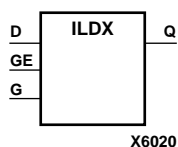

ILDX, ILDX4, ILDX8, and ILDX16 are single or multiple transparent data latches, which can be used to hold transient data entering a chip. The latch input (D) is connected to an IPAD or an IOPAD (without using an IBUF).

The latch is asynchronously cleared, output Low, when power is applied.

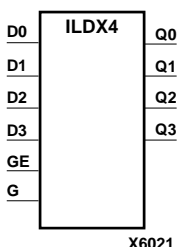



Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.


### ILDXs and IFDXs

The ILDX is actually the input flip-flop master latch. Two different outputs can be accessed from the input flip-flop: one that responds to the level of the clock signal and another that responds to an edge of the clock signal. When using both outputs from the same input flip-flop, a transparent High latch (ILDX) corresponds to a falling edge-triggered flip-flop (IFDX\_1). Similarly, a transparent Low latch (ILDX\_1) corresponds to a rising edge-triggered flip-flop (IFDX).

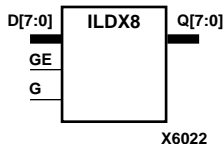


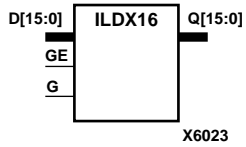

Inputs			Outputs
GE	G	D	Q
0	X	X	No Chg
1	0	X	No Chg
1	1	1	1
1	1	0	0
1	↓	D	D

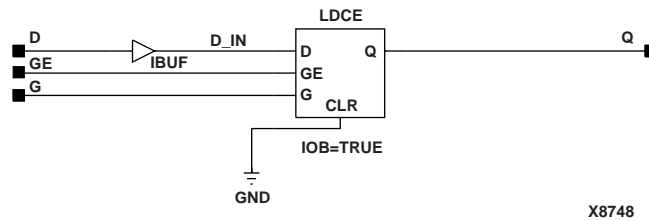


**ILDX Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E**

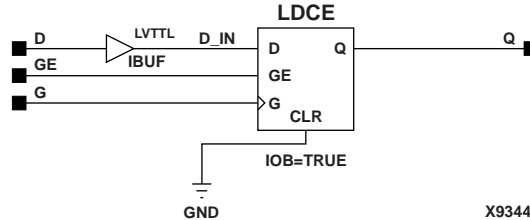

**ILDX Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**



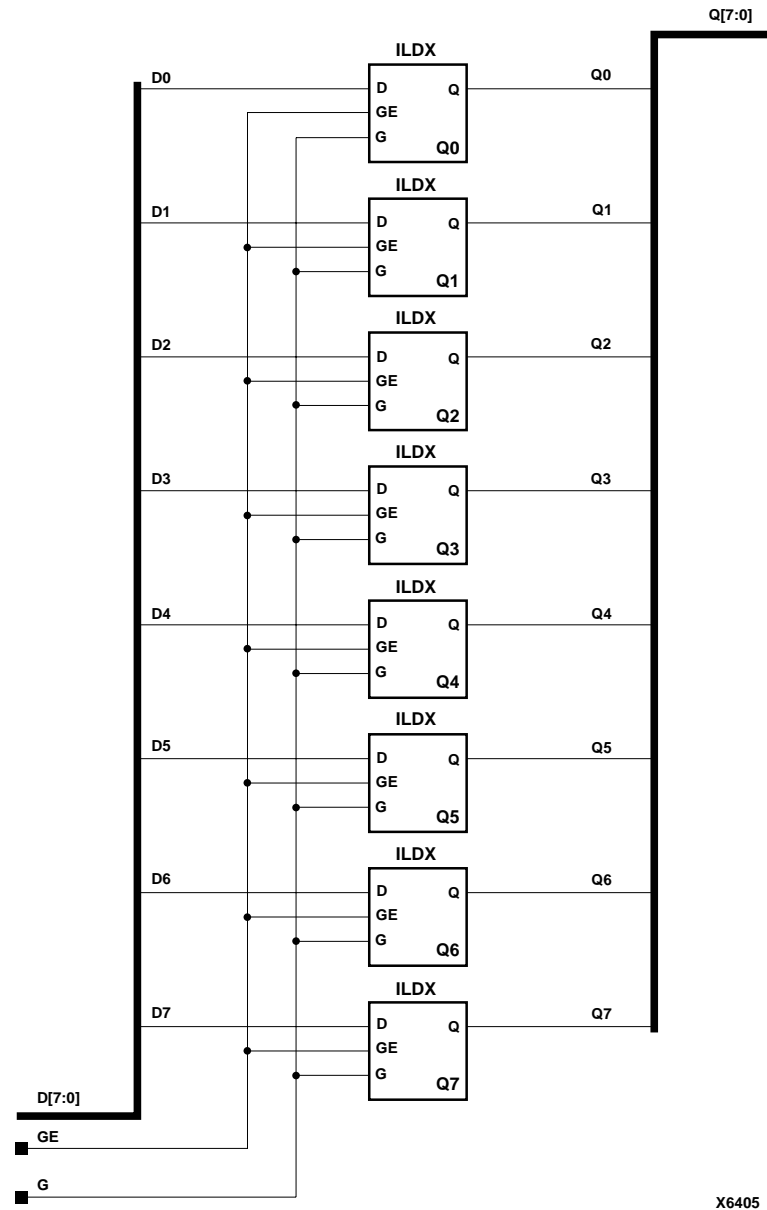

**ILDIX8 Implementation Spartan-II, Spartan-IIe, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

**Usage**

This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an ILDX, you would infer an LDCE and put the IOB = TRUE attribute on the component. Or, you could use the map option -pr i to pack all input registers into the IOBs.




# ILDX\_1

## Transparent Input Data Latch with Inverted Gate

### Architectures Supported

ILDX_1	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

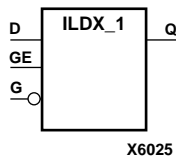

ILDX\_1 is a transparent data latch, which can be used to hold transient data entering a chip. When the gate input (G) is Low, data on the data input (D) appears on the data output (Q). Data on D during the Low-to-High G transition is stored in the latch.


The latch is asynchronously cleared with Low output, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

For more information on ILDX\_1, see “[ILDX, 4, 8, 16](#)”.

Inputs			Outputs
GE	G	D	Q
0	X	X	No Chg
1	1	X	No Chg
1	0	1	1
1	0	0	0
1	↑	D	D

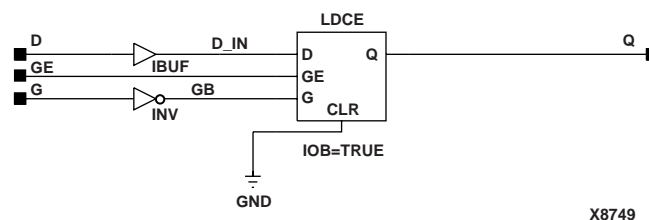

### ILDX\_1 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

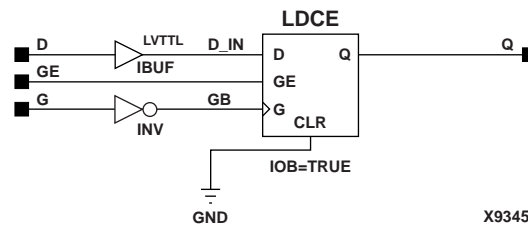

## ILDX\_1 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

### Usage


This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an `IOB=TRUE` attribute on the component in the UCF file or in the code. For instance, to get an `ILDX_1`, you would infer an `LDCE_1` and put the `IOB = TRUE` attribute on the component. Or, you could use the map option `-pr i` to pack all input registers into the IOBs.

# ILD XI

## Transparent Input Data Latch (Asynchronous Preset)

### Architectures Supported

ILD XI	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

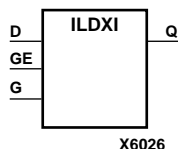

ILD XI is a transparent data latch, which can hold transient data entering a chip. When the gate input (G) is High, data on the input (D) appears on the output (Q). Data on the D input during the High-to-Low G transition is stored in the latch.


The latch is asynchronously preset, output High, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

### ILD XIs and IFDXIs


The ILDXI is actually the input flip-flop master latch. Two different outputs can be accessed from the input flip-flop: one that responds to the level of the clock signal and another that responds to an edge of the clock signal. When using both outputs from the same input flip-flop, a transparent High latch (ILD XI) corresponds to a falling edge-triggered flip-flop (IFDXI\_1). Similarly, a transparent Low latch (ILD XI\_1) corresponds to a rising edge-triggered flip-flop (IFDXI). See the following figure for legal IFDXI, IFDXI\_1, ILDXI, and ILDXI\_1 combinations.

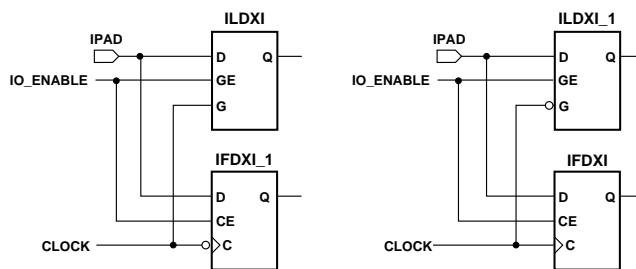


X6027

### Legal Combinations of IFDXI and ILDXI for a Single IOB

Inputs			Outputs
GE	G	D	Q
0	X	X	No Chg
1	0	X	No Chg
1	1	1	1
1	1	0	0
1	↓	D	D

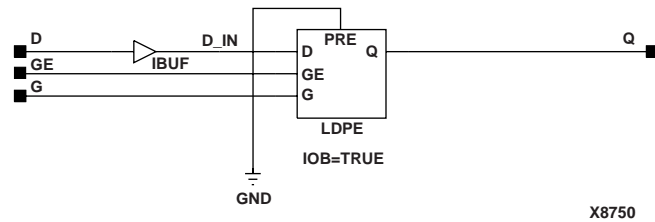

**ILD XI Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E**

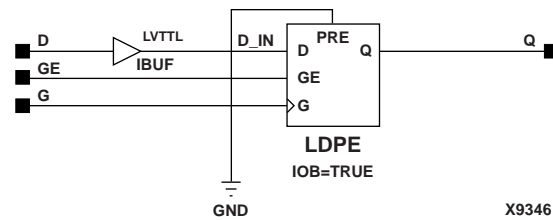

**ILD XI Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

**Usage**

This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an ILDXI, you would infer an LDPE and put the IOB = TRUE attribute on the component. Or, you could use the map option -pr i to pack all input registers into the IOBs.








# ILD XI\_1

## Transparent Input Data Latch with Inverted Gate (Asynchronous Preset)

### Architectures Supported

ILD XI_1	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

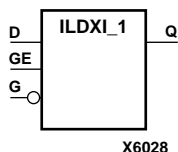


ILD XI\_1 is a transparent data latch, which can hold transient data entering a chip. The latch is asynchronously preset, output High, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

For information on legal IFDXI, IFDXI\_1, ILDXI, and ILDXI\_1 combinations, see “ILD XI”.

Inputs			Outputs
GE	G	D	Q
0	X	X	No Chg
1	1	X	No Chg
1	0	1	1
1	0	0	0
1	↑	D	D

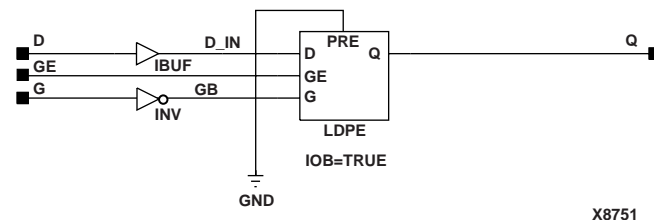

ILD XI\_1 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

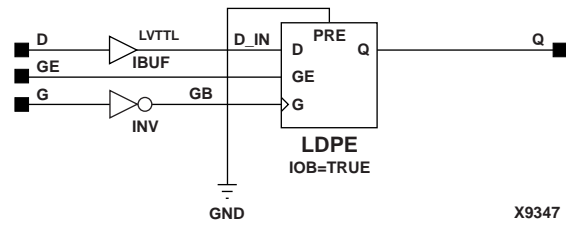

### ILD XI\_1 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

#### Usage


This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an ILDXI\_1, you would infer an LDPE\_1 and put the IOB = TRUE attribute on the component. Or, you could use the map option `-pr i` to pack all input registers into the IOBs.

# INV, 4, 8, 16





## Single and Multiple Inverters

### Architectures Supported

INV	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No
INV4, INV8, INV16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No



INV, INV4, INV8, and INV16 are single and multiple inverters that identify signal inversions in a schematic.

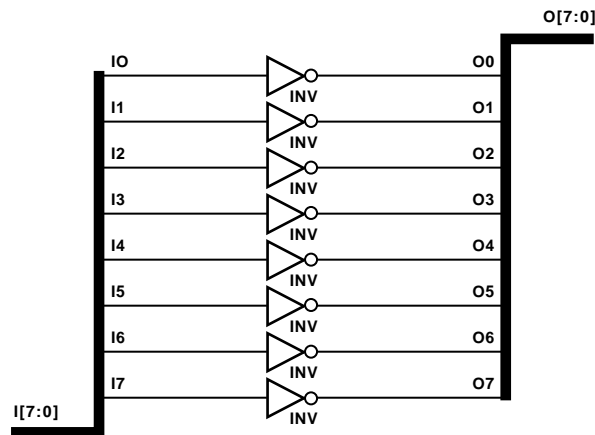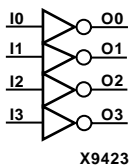

**INV8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

## Usage

For HDL, this design element can be instantiated or inferred.

## VHDL Inference Code

```
architecture Behavioral of inv is
begin
  process (i)
  begin
    o <= not i;
  end process;
end Behavioral
```

## Verilog Inference Code

```
always @(i)
begin
  o = !i;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for INV should be placed
-- after architecture statement but before begin keyword

component INV
  port (O : out STD_ULOGIC;
        I : in STD_ULOGIC);
end component;

-- Component Attribute specification for INV
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for INV should be placed
-- in architecture after the begin keyword

INV_INSTANCE_NAME : INV
  port map (O => user_O,
           I => user_I);
```

## Verilog Instantiation Template

```
INV instance_name (.O (user_O),
                  .I (user_I));
```

## Commonly Used Constraints

None




## IOBUF, IOBUF\_selectIO

### Bi-Directional Buffer with Selectable I/O Interface

#### Architectures Supported

IOBUF, IOBUF_selectIO	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

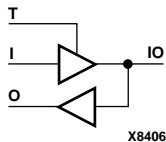

For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, IOBUF and its *selectIO* variants (listed in the "Component" column in the table below) are bi-directional buffers whose I/O interface corresponds to a specific I/O standard. The name extensions (LVCMOS2, PCI33\_3, PCI33\_5, etc.) specify the standard. The S, F, and 2, 4, 6, 8, 12, 16, 24 extensions specify the slew rate (SLOW or FAST) and the drive power (2, 4, 6, 8, 12, 16, 24 mA) for the LVTTTL standard variants. For example, IOBUF\_F\_2 is a bi-directional buffer that uses the LVTTTL I/O-signaling standard with a FAST slew and 2mA of drive power. You can attach an IOSTANDARD attribute to an IOBUF instance instead of using an IOBUF\_selectIO component. Check marks (✓) in the "Spartan-II, Virtex" and "Spartan-IIE, Virtex-E" columns indicate the components and IOSTANDARD attribute values available for each architecture.

IOBUF components that use the LVTTTL, LVCMOS15, LVCMOS18, LVCMOS25, LVCMOS33 signaling standards have selectable drive and slew rates using the DRIVE and FAST or SLOW constraints. The defaults are DRIVE=12 mA and SLOW slew.

IOBUFs are composites of IBUF and OBUFT elements. The O output is X (unknown) when IO (input/output) is Z. IOBUFs can be implemented as interconnections of their component elements.

The hardware implementation of the I/O standards requires that you follow a set of usage rules for the SelectIO buffers. See the ["SelectIO Usage Rules"](#) under the IBUF\_selectIO section for information on using these components and IOSTANDARD attributes.

Inputs		Bidirectional	Outputs
T	I	IO	O
1	X	Z	X
0	1	1	1
0	0	0	0

**Spartan-II, Spartan-IIE, Virtex, and Virtex-E IOBUF\_selectIO Components and IOSTANDARD Attributes**

Component	Spartan-II, Virtex	Spartan-IIE, Virtex-E	IOSTANDARD (Attribute Value)	VREF	Output VCCO	Input VCCO
IOBUF	√	√	defaults to LVTTTL <sup>b</sup>	N/A	3.3	3.3
IOBUF_S_2	√	√	LVTTTL <sup>b</sup>	N/A	3.3	3.3
IOBUF_S_4	√	√	LVTTTL <sup>b</sup>	N/A	3.3	3.3
IOBUF_S_6	√	√	LVTTTL <sup>b</sup>	N/A	3.3	3.3
IOBUF_S_8	√	√	LVTTTL <sup>b</sup>	N/A	3.3	3.3
IOBUF_S_12	√	√	LVTTTL <sup>b</sup>	N/A	3.3	3.3
IOBUF_S_16	√	√	LVTTTL <sup>b</sup>	N/A	3.3	3.3
IOBUF_S_24	√	√	LVTTTL <sup>b</sup>	N/A	3.3	3.3
IOBUF_F_2	√	√	LVTTTL <sup>b</sup>	N/A	3.3	3.3
IOBUF_F_4	√	√	LVTTTL <sup>b</sup>	N/A	3.3	3.3
IOBUF_F_6	√	√	LVTTTL <sup>b</sup>	N/A	3.3	3.3
IOBUF_F_8	√	√	LVTTTL <sup>b</sup>	N/A	3.3	3.3
IOBUF_F_12	√	√	LVTTTL <sup>b</sup>	N/A	3.3	3.3
IOBUF_F_16	√	√	LVTTTL <sup>b</sup>	N/A	3.3	3.3
IOBUF_F_24	√	√	LVTTTL <sup>b</sup>	N/A	3.3	3.3
IOBUF_AGP	√	√	AGP	1.32	3.3	N/A
IOBUF_CTT	√	√	CTT	1.50	3.3	N/A
IOBUF_GTL	√	√	GTL	0.80	N/A	N/A
IOBUF_GTLP	√	√	GTLP	0.80	N/A	N/A
IOBUF_HSTL_I	√	√	HSTL_I	0.75	1.5	N/A
IOBUF_HSTL_III	√	√	HSTL_III	0.90	1.5	1.5
IOBUF_HSTL_IV	√	√	HSTL_IV	0.90	1.5	N/A
IOBUF_LVCMOS2	√	√	LVCMOS2	N/A	2.5	2.5
IOBUF_LVCMOS18		√	LVCMOS18 <sup>b</sup>	N/A	1.8	1.8
IOBUF_LVDS		√	LVDS	N/A	2.5	N/A
IOBUF_LVPECL		√	LVPECL	N/A	3.3	N/A
IOBUF_PCI33_3	√	√	PCI33_3	N/A	3.3	3.3
IOBUF_PCI33_5	√	√ <sup>α</sup>	PCI33_5	N/A	3.3	N/A
IOBUF_PCI66_3	√	√	PCI66_3	N/A	3.3	3.3
IOBUF_PCIX66_3		√	PCIX66_3	N/A	3.3	3.3
IOBUF_SSTL2_I	√	√	SSTL2_I	1.25	2.5	N/A
IOBUF_SSTL2_II	√	√	SSTL2_II	1.25	2.5	N/A
IOBUF_SSTL3_I	√	√	SSTL3_I	1.50	3.3	N/A
IOBUF_SSTL3_II	√	√	SSTL3_II	1.50	3.3	N/A

<sup>a</sup> Not supported for Virtex-E.

<sup>b</sup> The LVCMOS18 attribute also requires a slew value (FAST or SLOW) and DRIVE value. See the FAST, SLOW, and DRIVE attribute descriptions in the *Xilinx Constraints Guide* for valid values for each architecture.



The Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X library includes some IOBUF\_selectIO components for compatibility with older, existing designs and other architectures. For new Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X designs, however, the recommended method for using IOBUF SelectIO buffers is to attach an IOSTANDARD attribute to an IOBUF component. For example, attach IOSTANDARD=GTL to an IOBUF instead of using the IOBUF\_GTL component for new Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X designs. The IOSTANDARD attributes that can be attached to an IOBUF component are listed in the "IOSTANDARD (Attribute Value)" column in the following table "[Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X IOBUF\\_selectIO Components and IOSTANDARD Attributes](#)" table. See "[SelectIO Usage Rules](#)" for information on using these IOSTANDARD attributes.

For Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the IOSTANDARD attribute values listed in the following table can be applied to an IOBUF component to provide SelectIO interface capability for the inputs. The O output uses the LVTTTL standard.

Attach an IOSTANDARD attribute to an IOBUF and assign the value indicated in the "IOSTANDARD (Attribute Value)" column to program the input for the I/O standard associated with that value.

The LVTTTL, LVCMOS15, LVCMOS18, LVCMOS25, LVCMOS33 attributes also require a slew value (FAST or SLOW) and DRIVE value. See the FAST, SLOW, and DRIVE attribute descriptions in the *Xilinx Constraints Guide* for valid values for Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X.

**Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X IOBUF\_selectIO Components and IOSTANDARD Attributes**

IOSTANDARD	Architectures			Attribute Values						
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Drive	Slew	Terminate Type Output	Termination Type Input	VREF Input *	Output VCCO	Input VCCO
AGP		√		N/A	N/A	None	None	1.32	3.3	N/A
GTL	√	√	√	N/A	N/A	None	None	0.80	N/A	N/A
GTL_DCI	√	√	√	N/A	N/A	Single	Single	0.80	1.2	1.2
GTLP	√	√	√	N/A	N/A	None	None	1.00	N/A	N/A
GTLP_DCI	√	√	√	N/A	N/A	Single	Single	1.00	1.5	1.5
HSTL_I	√	√	√	N/A	N/A	None	None	0.75	1.5	N/A
HSTL_I_18	√	√	√	N/A	N/A	None	None	0.9	1.8	N/A
HSTL_II_18	√	√	√	N/A	N/A	None	None	0.9	1.8	N/A
HSTL_II_DCI_18	√	√	√	N/A	N/A	Split	Split	0.9	1.8	1.8
HSTL_III	√	√	√	N/A	N/A	None	None	0.9	1.5	N/A
HSTL_III_18	√	√	√	N/A	N/A	None	None	1.10	1.8	N/A
HSTL_IV		√	√	N/A	N/A	None	None	0.90	1.5	N/A
HSTL_IV_18		√	√	N/A	N/A	None	None	1.10	1.8	N/A
HSTL_IV_DCI		√	√	N/A	N/A	Single	Single	0.90	1.5	1.5
HSTL_IV_DCI_18		√	√	N/A	N/A	Single	Single	1.1	1.8	1.8
LVC MOS12 <sup>a</sup>	√			2, 4, 6	Fast/Slow	None	None	N/A	1.2	1.2
LVC MOS15 <sup>a</sup>	√	√	√	2, 4, 6, 8, 12	Fast/Slow	None	None	N/A	1.5	1.5
LVC MOS18 <sup>a</sup>	√	√	√	2, 4, 6, 8, 12, 16	Fast/Slow	None	None	N/A	1.8	1.8
LVC MOS25 <sup>a</sup>	√	√	√	2, 4, 6, 8, 12, 16, 24	Fast/Slow	None	None	N/A	2.5	2.5
LVC MOS33 <sup>a</sup>		√	√	2, 4, 6, 8, 12, 16, 24	Fast/Slow	None	None	N/A	3.3	3.3
LVDCI_15	√	√	√	N/A	N/A	Driver	None	N/A	1.5	1.5
LVDCI_18	√	√	√	N/A	N/A	Driver	None	N/A	1.8	1.8
LVDCI_25	√	√	√	N/A	N/A	Driver	None	N/A	2.5	2.5
LVDCI_33		√	√	N/A	N/A	Driver	None	N/A	3.3	3.3
LVDCI_DV2_15	√	√	√	N/A	N/A	Driver	None	N/A	1.5	1.5
LVDCI_DV2_18	√	√	√	N/A	N/A	Driver	None	N/A	1.8	1.8
LVDCI_DV2_25	√	√	√	N/A	N/A	Driver	None	N/A	2.5	2.5
LVDCI_DV2_33		√		N/A	N/A	Driver	None	N/A	3.3	3.3
LVTTTL (default) <sup>a</sup>		√	√	2, 4, 6, 8, 12, 16, 24	Fast/Slow	None	None	N/A	3.3	3.3
PCI33_3		√	√	N/A	N/A	None	None	N/A	3.3	3.3
PCI66_3		√	√	N/A	N/A	None	None	N/A	3.3	3.3
PCIX		√	√	N/A	N/A	None	None	N/A	3.3	3.3
SSTL18_I	√	√	√	N/A	N/A	None	None	0.9	1.8	N/A
SSTL18_II	√	√	√	N/A	N/A	None	None	0.9	1.8	N/A
SSTL18_II_DCI		√	√	N/A	N/A	Split	Split	0.9	1.8	1.8
SSTL2_II_DCI	√	√	√	N/A	N/A	Split	Split	1.25	2.5	2.5
SSTL3_II_DCI		√		N/A	N/A	Split	Split	1.5	3.3	3.3
SSTL2_I	√	√	√	N/A	N/A	None	None	1.25	2.5	N/A
SSTL2_II	√	√	√	N/A	N/A	None	None	1.25	2.5	N/A
SSTL3_I		√		N/A	N/A	None	None	1.50	3.3	N/A
SSTL3_II		√		N/A	N/A	None	None	1.50	3.3	N/A

\* VREF requirement when this IOSTANDARD is an input.

## Usage

For HDL, these design elements are instantiated rather than inferred.

## VHDL Instantiation Template for IOBUF

```
-- Component Declaration for IOBUF should be placed
-- after architecture statement but before begin keyword

component IOBUF
  port (O : out STD_ULOGIC;
        IO : inout STD_ULOGIC;
        I : in STD_ULOGIC;
        T : in STD_ULOGIC);
end component;

-- Component Attribute specification for IOBUF
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for IOBUF should be placed
-- in architecture after the begin keyword

IOBUF_INSTANCE_NAME : IOBUF
  port map (O => user_O,
            IO => user_IO,
            I => user_I,
            T => user_T);
```

## Verilog Instantiation Template for IOBUF

```
IOBUF instance_name (.O (user_O),
                    .IO (user_IO),
                    .I (user_I),
                    .T (user_T));
```

## VHDL Instantiation Template for IOBUF\_selectIO

```
-- Component Declaration for IOBUF_selectIO should be placed
-- after architecture statement but before begin keyword

component IOBUF_selectIO
  port (O : out STD_ULOGIC;
        IO : inout STD_ULOGIC;
        I : in STD_ULOGIC;
        T : in STD_ULOGIC);
end component;

-- Component Attribute specification for IOBUF_selectIO
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for IOBUF_selectIO should be
-- placed in architecture after the begin keyword

IOBUF_selectIO_INSTANCE_NAME : IOBUF_selectIO
  port map (O => user_O,
            IO => user_IO,
            I => user_I,
            T => user_T);
```

## Verilog Instantiation Template for IOBUF\_selectIO

```
IOBUF_selectIO instance_name (.O (user_O),
                              .IO (user_IO),
                              .I (user_I),
                              .T (user_T));
```

## Commonly Used Constraints

IOSTANDARD

DRIVE

SLEW






## IOBUFDS

### 3-State Differential Signaling I/O Buffer with Active Low Output Enable

#### Architectures Supported

IOBUFDS	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

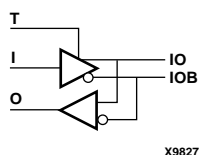

IOBUFDS is a single 3-state, differential signaling input/output buffer with active Low output enable.

Inputs		Bidirectional		Outputs
I	T	IO	IOB	O
X	1	Z	Z	- *
0	0	0	1	0
1	0	1	0	1

\* The dash (-) means No Change.

BLVDS\_25 is supported for IOSTANDARD. Attach an IOSTANDARD attribute to an IOBUFDS and assign the value indicated in the "IOSTANDARD (Attribute Value)" column to program the outputs for the I/O standard associated with that value.

IOSTANDARD	Architectures			Attribute Values			
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Termination Type Input	VREF Input *	Output VCCO	Input VCCO
BLVDS_25		√	√	None	N/A	2.5	N/A

\* VREF requirement when this IOSTANDARD is an input.

#### Usage

For HDL, this design element is instantiated rather than inferred.

## VHDL Instantiation Template

```
-- Component Declaration for IOBUFDS should be placed  
-- after architecture statement but before begin keyword
```

```
component IOBUFDS  
  port (O : out STD_ULOGIC;  
        IO : inout STD_ULOGIC;  
        IOB : inout STD_ULOGIC;  
        I : in STD_ULOGIC;  
        T : in STD_ULOGIC);  
end component;
```

```
-- Component Attribute specification for IOBUFDS  
-- should be placed after architecture declaration but  
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for IOBUFDS should be  
-- placed in architecture after the begin keyword
```

```
IOBUFDS_INSTANCE_NAME : IOBUFDS  
  port map (O => user_O,  
            IO => user_IO,  
            IOB => user_IOB,  
            I => user_I,  
            T => user_T);
```

## Verilog Instantiation Template

```
IOBUFDS instance_name (.O (user_O),  
                      .IO (user_IO),  
                      .IOB (user_IOB),  
                      .I (user_I),  
                      .T (user_T));
```

## Commonly Used Constraints

IOSTANDARD

IOBDELAY




## IOBUFE

### Bi-Directional Buffer

#### Architectures Supported

IOBUFE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No

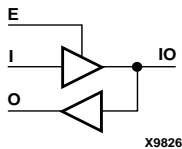

For CPLDs, IOBUFE is a bi-directional buffer that is a composite of the IBUF and OBUFE elements. The O output is X (unknown) when IO (input/output) is Z. IOBUFEs can be implemented as interconnections of their component elements.

Inputs		Bidirectional	Outputs
E	I	IO	O
0	0	Z	X
0	1	Z	X
1	0	0	0
1	1	1	1

#### Usage

For HDL, this design element is instantiated rather than inferred.

#### VHDL Instantiation Template for IOBUFE

```
-- Component Declaration for IOBUFE should be placed
-- after architecture statement but before begin keyword
```

```
component IOBUFE
  port (O : out STD_ULOGIC;
        IO : inout STD_ULOGIC;
        I : in STD_ULOGIC;
        E : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for IOBUFE
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for IOBUFE should be placed  
-- in architecture after the begin keyword
```

```
IOBUFE_INSTANCE_NAME : IOBUFE  
    port map (O => user_O,  
             IO => user_IO,  
             I => user_I,  
             E => user_E);
```




### Verilog Instantiation Template for IOBUFE

```
IOBUFE instance_name (.O (user_O),  
                     .IO (user_IO),  
                     .I (user_I),  
                     .E (user_E));
```

## IOPAD, 4, 8, 16


### Single- and Multiple-Input/Output Pads

IOPAD	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No
IOPAD4, IOPAD8, IOPAD16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

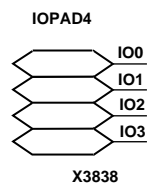

IOPAD, IOPAD4, IOPAD8, and IOPAD16 are single and multiple input/output pads. The IOPAD is a connection point from a device pin, used as a bidirectional signal, to a PLD device. The IOPAD is connected internally to an input/output block (IOB), which is configured by the software as a bidirectional block. Bidirectional blocks can consist of any combination of a 3-state output buffer (such as OBUFT or OFDE) and any available input buffer (such as IBUF or IFD). See the appropriate CAE tool interface user guide for details on assigning pin location and identification.

**Note:** The LOC attribute cannot be used on IOPAD multiples.

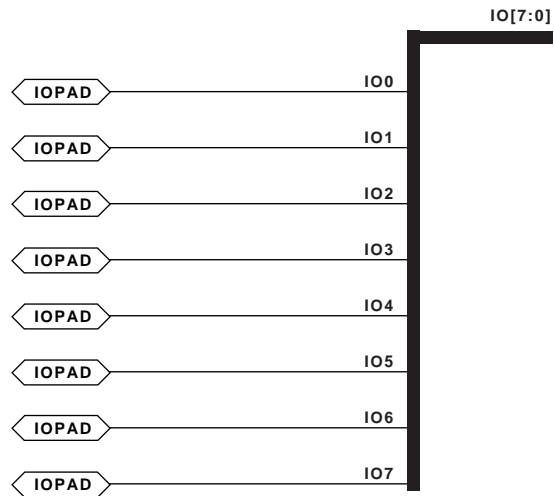

X7854

**IOPAD8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIE, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

## Usage

For HDL, it is not necessary to use these elements in the design. They will be added automatically.

## Commonly Used Constraints





IOBDELAY

PULLDOWN

## IPAD, 4, 8, 16

### Single- and Multiple-Input Pads


IPAD	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No
IPAD4, IPAD8, IPAD16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

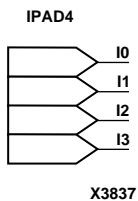

IPAD, IPAD4, IPAD8, and IPAD16 are single and multiple input pads. The IPAD is a connection point from a device pin used for an input signal to the PLD device. It is connected internally to an input/output block (IOB), which is configured by the software as an IBUF, IFD, or ILD. See the appropriate CAE tool interface user guide for details on assigning pin location and identification.

For Spartan-II, Spartan-IIE, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, pads must be used to drive IBUF and IBUFG inputs. An IPAD can be inferred by NGDBUILD if one is missing on an IBUF or IBUFG input.

**Note:** The LOC attribute cannot be used on IPAD multiples.

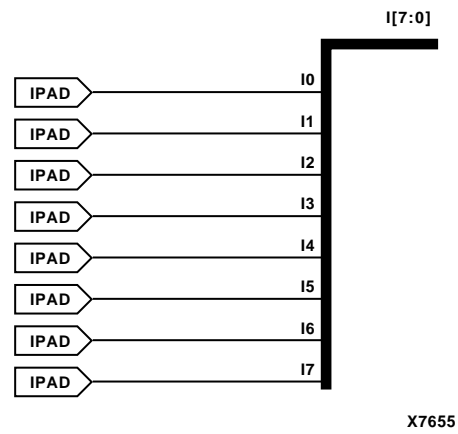

**IPAD8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIE, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

## Usage

For HDL, it is not necessary to use these elements in the design. They will be added automatically.

## Commonly Used Constraints

IOBDELAY

PULLDOWN

## JTAGPPC

### JTAG Primitive for the Power PC

#### Architectures Supported

JTAGPPC	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive*
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
* Not supported for Virtex-II. Supported for Virtex-II Pro and Virtex-II Pro X only.	

The JTAGPPC block allows connection from the JTAG logic in the PPC405 core to the JTAG logic of Virtex-II Pro and Virtex-II Pro X devices. The connections are made through programmable routing and so the connection only exists after configuration. Following is an example instantiation of the JTAGPPC block in Verilog:

```
JTAGPPC IJTAGPPC( .TDOTSPPC(TDO_TS_PPC),
    .TDOPPC(TDO_PPC), .TMS(TMS_PPC),
    .TDIPPC(TDI_PPC), .TCK(TCK_PPC));

PPC405 IPPC405 (
    ...
    .JTGC405TCK (TCK_PPC),
    .JTGC405TDI (TDI_PPC),
    .JTGC405TMS (TMS_PPC),
    .C405JTGTDO (TDO_PPC),
    .C405JTGTDOEN (TDO_TS_PPC),
    ...
)
```

When the block is instantiated in this fashion, the instruction registers of the PPC405 and the Virtex-II Pro and Virtex-II Pro X devices are linked in series.

The following table lists the input and output pins for JTAGPPC.

Inputs	Outputs
TDOPPC	TCK
TDOTSPPC	TDIPPC
	TMS

#### Usage

For HDL, this design element is instantiated rather than inferred.

## VHDL Instantiation Template

```
-- Component Declaration for JTAGPPC should be placed
-- after architecture statement but before begin keyword

component JTAGPPC
  port (TCK : out STD_ULOGIC;
        TDIPPC : out STD_ULOGIC;
        TMS : out STD_ULOGIC;
        TDOPPC : in STD_ULOGIC;
        TDOTSPPC : in STD_ULOGIC);
end component;

-- Component Attribute specification for JTAGPPC
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for JTAGPPC should be placed
-- in architecture after the begin keyword

JTAGPPC_INSTANCE_NAME : JTAGPPC
  port map (TCK => user_TCK,
            TDIPPC => user_TDIPPC,
            TMS => user_TMS,
            TDOPPC => user_TDOPPC,
            TDOTSPPC => user_TDOTSPPC);
```

## Verilog Instantiation Template

```
JTAGPPC JTAGPPC_instance_name (.TCK (user_TCK),
                                .TDIPPC (user_TDIPPC),
                                .TMS (user_TMS),
                                .TDOPPC (user_TDOPPC),
                                .TDOTSPPC (user_TDOTSPPC));
```

## Commonly Used Constraints

None








## KEEPER

### KEEPER Symbol

#### Architectures Supported

KEEPER	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No*
CoolRunner XPLA3	No
CoolRunner-II	Primitive
CoolRunner-IIS	No
* Primitive for XC9500XL/XV.	

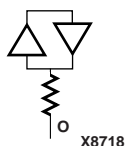

KEEPER is a weak keeper element used to retain the value of the net connected to its bidirectional O pin. For example, if a logic 1 is being driven onto the net, KEEPER drives a weak/resistive 1 onto the net. If the net driver is then 3-stated, KEEPER continues to drive a weak/resistive 1 onto the net.

For additional information on using a KEEPER element with SelectIO components, see the [“SelectIO Usage Rules”](#) in the “IBUF\_selectIO” section

#### Usage

For HDL, this design element is instantiated rather than inferred.

#### VHDL Instantiation Template

```
-- Component Declaration for KEEPER should be placed
-- after architecture statement but before begin keyword

component KEEPER
  port (O : inout STD_ULOGIC);
end component;

-- Component Attribute specification for KEEPER
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for KEEPER should be placed
-- in architecture after the begin keyword

KEEPER_INSTANCE_NAME : KEEPER
  port map (O => user_O);
```

## Verilog Instantiation Template


```
KEEPER KEEPER_instance_name (.O (user_0));
```

## LD

### Transparent Data Latch

#### Architectures Supported

LD	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No

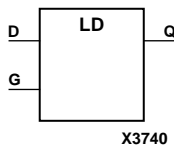

LD is a transparent data latch. The data output (Q) of the latch reflects the data (D) input while the gate enable (G) input is High. The data on the D input during the High-to-Low gate transition is stored in the latch. The data on the Q output remains unchanged as long as G remains Low.


The latch is asynchronously cleared, output Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs		Outputs
G	D	Q
1	0	0
1	1	1
0	X	No Chg
↓	D	D

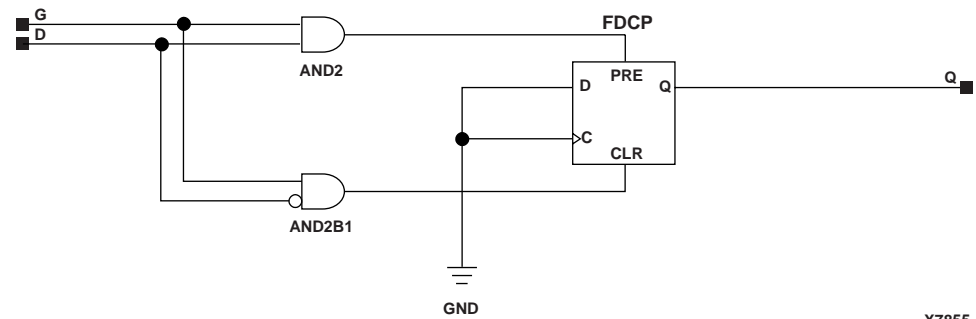

X7855

## LD Implementation XC9500/XV/XL

### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

### VHDL Inference Code

```
architecture Behavioral of ld is
begin
  process (G,D)
  begin
    if (G = '1') then
      Q <= D;
    end if;
  end process;
end Behavioral;
```

### Verilog Inference Code

```
always @ (D or G) begin
  if (G)
    Q <= D;
end
```

### VHDL Instantiation Template

```
-- Component Declaration for LD should be placed
-- after architecture statement but before begin keyword
```

```
component LD
  -- synthesis translate_off
  generic (
    INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        D : in STD_ULOGIC;
        G : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for LD
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
attribute INIT : string;
attribute INIT of LD_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for LD should be placed
-- in architecture after the begin keyword

LD_INSTANCE_NAME : LD
  -- synthesis translate_off
  generic map (
    INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
            D => user_D,
            G => user_G);
```

## Verilog Instantiation Template

```
LD LD_instance_name (.Q (user_Q),
                    .D (user_D),
                    .G (user_G));

defparam LD_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

INIT






## LD4, 8, 16

### Multiple Transparent Data Latches

#### Architectures Supported

LD4, LD8, LD16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

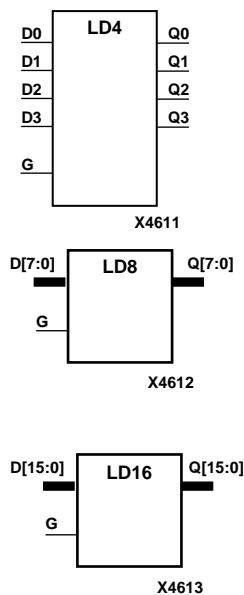

LD4, LD8, and LD16 have, respectively, 4, 8, and 16 transparent data latches with a common gate enable (G). The data output (Q) of the latch reflects the data (D) input while the gate enable (G) input is High. The data on the D input during the High-to-Low gate transition is stored in the latch. The data on the Q output remains unchanged as long as G remains Low.

The latch is asynchronously cleared, output Low, when power is applied, or when global reset is active.


For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

See “LD” for information on single transparent data latches.

Inputs		Outputs
G	D	Q
1	0	0
1	1	1
0	X	No Chg
↓	D	D

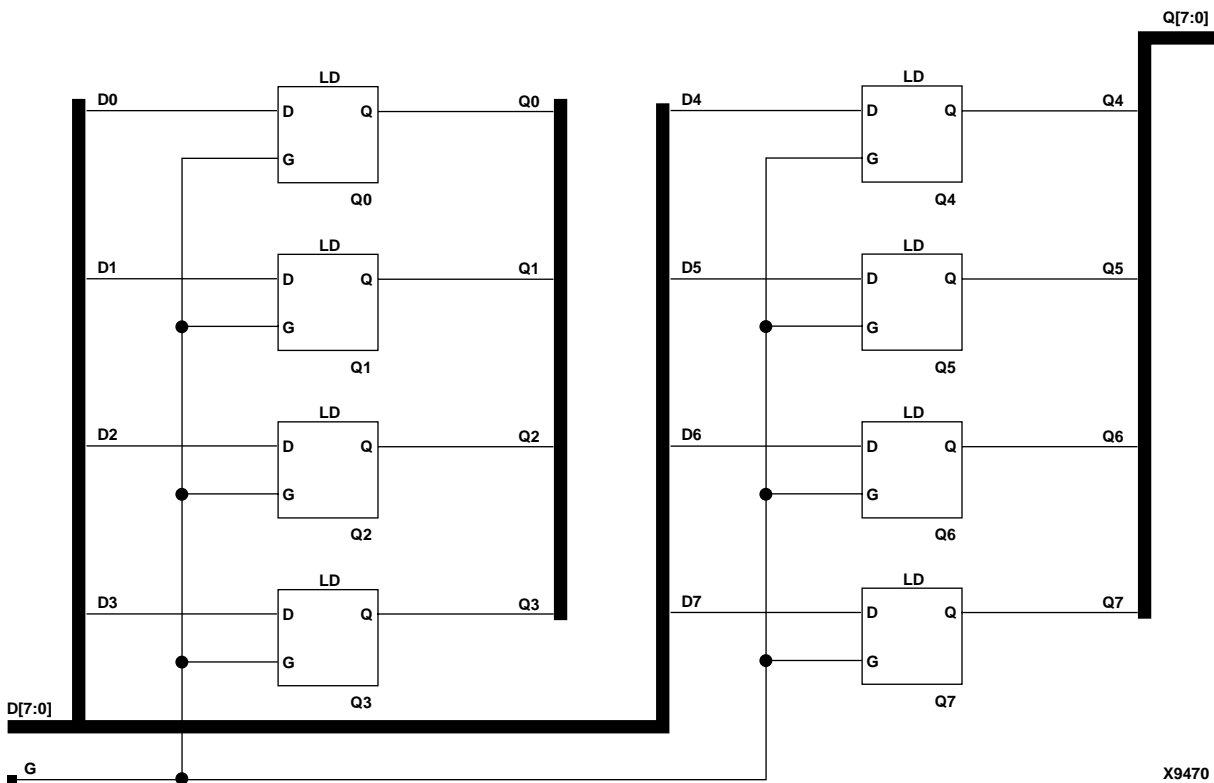

LD8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X

## Usage

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of ld4 is
begin
  process (G,D)
  begin
    if (G = '1') then
      Q <= D;
    end if;
  end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (D or G) begin
  if (G)
    Q <= D;
end
```






## LD\_1

### Transparent Data Latch with Inverted Gate

#### Architectures Supported

LD_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

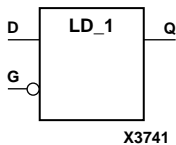

LD\_1 is a transparent data latch with an inverted gate. The data output (Q) of the latch reflects the data (D) input while the gate enable (G) input is Low. The data on the D input during the Low-to-High gate transition is stored in the latch. The data on the Q output remains unchanged as long as G remains High.

The latch is asynchronously cleared with Low output when power is applied, or when global reset is active.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs		Outputs
G	D	Q
0	0	0
0	1	1
1	X	No Chg
↑	D	D

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

#### VHDL Inference Code

```
architecture Behavioral of ld_1 is
begin
process (G, D)
```

```

begin
  if (G='0') then
    Q <= D;
  end if;
end process;

end Behavioral

```

## Verilog Inference Code

```

always @(D or G) begin
  if (!G)
    Q <= D;
end

```

## VHDL Instantiation Template

```

-- Component Declaration for LD_1 should be placed
-- after architecture statement but before begin keyword

```

```

component LD_1
  -- synthesis translate_off
  generic (
    INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        D : in STD_ULOGIC;
        G : in STD_ULOGIC);
end component;

```

```

-- Component Attribute specification for LD_1
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

attribute INIT : string;
attribute INIT of LD_1_instance_name : label is "0";
-- values can be (0 or 1)

```

```

-- Component Instantiation for LD_1 should be placed
-- in architecture after the begin keyword

```

```

LD_1_INSTANCE_NAME : LD_1
  -- synthesis translate_off
  generic map(
    INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
            D => user_D,
            G => user_G);

```

## Verilog Instantiation Template

```

LD_1 LD_1_instance_name (.Q (user_Q),
                        .D (user_D),
                        .G (user_G));

defparam LD_1_instance_name.INIT = bit_value;

```

## Commonly Used Constraints

INIT






## LDC

### Transparent Data Latch with Asynchronous Clear

#### Architectures Supported

LDC	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No

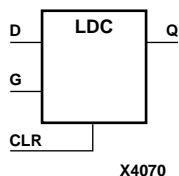

LDC is a transparent data latch with asynchronous clear. When the asynchronous clear input (CLR) is High, it overrides the other inputs and resets the data (Q) output Low. Q reflects the data (D) input while the gate enable (G) input is High and CLR is Low. The data on the D input during the High-to-Low gate transition is stored in the latch. The data on the Q output remains unchanged as long as G remains low.

The latch is asynchronously cleared with Low output when power is applied, or when global reset is active.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
CLR	G	D	Q
1	X	X	0
0	1	0	0
0	1	1	1
0	0	X	No Chg
0	↓	D	D

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

#### VHDL Inference Code

```
architecture Behavioral of ldc is
```

```

begin
  process (CLR, D, G)
  begin
    if (CLR='1') then
      Q <= '0';
    elsif (G='1') then
      Q <= D;
    end if;
  end process;
end Behavioral;

```

## Verilog Inference Code

```

always @ (G or D or CLR) begin
  if (CLR)
    Q <= 0;
  else if (G)
    Q <= D;
end

```

## VHDL Instantiation Template

```

-- Component Declaration for LDC should be placed
-- after architecture statement but before begin keyword

```

```

component LDC
  -- synthesis translate_off
  generic (
    INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        CLR : in STD_ULOGIC;
        D : in STD_ULOGIC;
        G : in STD_ULOGIC);
end component;

```

```

-- Component Attribute specification for LDC
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

attribute INIT : string;
attribute INIT of LDC_instance_name : label is "0";
-- values can be (0 or 1)

```

```

-- Component Instantiation for LDC should be placed
-- in architecture after the begin keyword

```

```

LDC_INSTANCE_NAME : LDC
  -- synthesis translate_off
  generic map (
    INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
            CLR => user_CLR,
            D => user_D,
            G => user_G);

```

## Verilog Instantiation Template

```
LDC LDC_instance_name (.Q (user_Q),  
                       .CLR (user_CLR),  
                       .D (user_D),  
                       .G (user_G));  
  
defparam LDC_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

INIT




## LDC\_1

### Transparent Data Latch with Asynchronous Clear and Inverted Gate

#### Architectures Supported

LDC_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

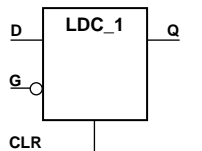

x3752

LDC\_1 is a transparent data latch with asynchronous clear and inverted gate. When the asynchronous clear input (CLR) is High, it overrides the other inputs (D and G) and resets the data (Q) output Low. Q reflects the data (D) input while the gate enable (G) input and CLR are Low. The data on the D input during the Low-to-High gate transition is stored in the latch. The data on the Q output remains unchanged as long as G remains High.

The latch is asynchronously cleared with Low output when power is applied, or when global reset is active.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
CLR	G	D	Q
1	X	X	0
0	0	0	0
0	0	1	1
0	1	X	No Chg
0	↑	D	D

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of ldc_1 is
begin
    process (CLR, D, G)
    begin
        if (CLR='1') then
            Q <= '0';
        elsif (G='0') then
            Q <= D;
        end if;
    end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (G or D or CLR) begin
    if (CLR)
        Q <= 0;
    else if (!G)
        Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for LDC_1 should be placed
-- after architecture statement but before begin keyword
```

```
component LDC_1
-- synthesis translate_off
generic (
    INIT : bit := '1');
-- synthesis translate_on
port (Q : out STD_ULOGIC;
      CLR : in STD_ULOGIC;
      D : in STD_ULOGIC;
      G : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for LDC_1
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
attribute INIT : string;
attribute INIT of LDC_1_instance_name : label is "0";
-- values can be (0 or 1)
```

```
-- Component Instantiation for LDC_1 should be placed
-- in architecture after the begin keyword
```

```
LDC_1_INSTANCE_NAME : LDC_1
-- synthesis translate_off
generic map(
    INIT => bit_value)
-- synthesis translate_on
port map (Q => user_Q,
          CLR => user_CLR,
```

```
D => user_D,  
G => user_G);
```

## Verilog Instantiation Template

```
LDC_1 LDC_1_instance_name (.Q (user_Q),  
                           .CLR (user_CLR),  
                           .D (user_D),  
                           .G (user_G));
```

```
defparam LDC_1_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

INIT






## LDCE

### Transparent Data Latch with Asynchronous Clear and Gate Enable

#### Architectures Supported

LDCE	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

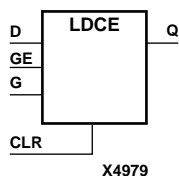

LDCE is a transparent data latch with asynchronous clear and gate enable. When the asynchronous clear input (CLR) is High, it overrides the other inputs and resets the data (Q) output Low. Q reflects the data (D) input while the gate (G) input and gate enable (GE) are High and CLR is Low. If GE is Low, data on D cannot be latched. The data on the D input during the High-to-Low gate transition is stored in the latch. The data on the Q output remains unchanged as long as G or GE remains low.

The latch is asynchronously cleared with Low output when power is applied, or when global reset is active.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs				Outputs
CLR	GE	G	D	Q
1	X	X	X	0
0	0	X	X	No Chg
0	1	1	0	0
0	1	1	1	1
0	1	0	X	No Chg
0	1	↓	D	D

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of ldce is
begin

process (CLR, D, G, GE)
begin
    if (CLR='1') then
        Q <= '0';
    elsif (GE = '1') then
        if (G='1') then
            Q <= D;
        end if;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @(CLR or D or G or GE) begin
    if (CLR)
        Q <= 0;
    else if (G && GE)
        Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for LDCE should be placed
-- after architecture statement but before begin keyword

component LDCE
    -- synthesis translate_off
    generic (
        INIT : bit := '1');
    -- synthesis translate_on
    port (Q : out STD_ULOGIC;
        CLR : in STD_ULOGIC;
        D : in STD_ULOGIC;
        G : in STD_ULOGIC;
        GE : in STD_ULOGIC);
end component;

-- Component Attribute specification for LDCE
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of LDCE_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for LDCE should be placed
-- in architecture after the begin keyword

LDCE_INSTANCE_NAME : LDCE
```

```
-- synthesis translate_off
generic map (
    INIT => bit_value)
-- synthesis translate_on
port map (Q => user_Q,
         CLR => user_CLR,
         D => user_D,
         G => user_G,
         GE => user_GE);
```

## Verilog Instantiation Template

```
LDCE LDCE_instance_name (.Q (user_Q),
                        .CLR (user_CLR),
                        .D (user_D),
                        .G (user_G),
                        .GE (user_GE));

defparam LDCE_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

INIT




## LDCE\_1

### Transparent Data Latch with Asynchronous Clear, Gate Enable, and Inverted Gate

#### Architectures Supported

LDCE_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

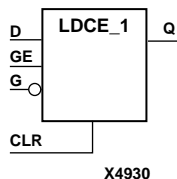

LDCE\_1 is a transparent data latch with asynchronous clear, gate enable, and inverted gate. When the asynchronous clear input (CLR) is High, it overrides the other inputs and resets the data (Q) output Low. Q reflects the data (D) input while the gate (G) input and CLR are Low and gate enable (GE) is High. The data on the D input during the Low-to-High gate transition is stored in the latch. The data on the Q output remains unchanged as long as G remains High or GE remains Low.

The latch is asynchronously cleared with Low output when power is applied, or when global reset is active.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs				Outputs
CLR	GE	G	D	Q
1	X	X	X	0
0	0	X	X	No Chg
0	1	0	0	0
0	1	0	1	1
0	1	1	X	No Chg
0	1	↑	D	D

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of ldce_1 is
begin

process (CLR, D, G, GE)
begin
    if (CLR='1') then
        Q <= '0';
    elsif (GE = '1') then
        if (G='0') then
            Q <= D;
        end if;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @(CLR or D or G or GE) begin
    if (CLR)
        Q <= 0;
    else if (!G && GE)
        Q <= D;
end
```

## VHDL Instantiation Template

-- Component Declaration for LDCE\_1 should be placed  
-- after architecture statement but before begin keyword

```
component LDCE_1
-- synthesis translate_off
generic (
    INIT : bit := '1');
-- synthesis translate_on
port (Q : out STD_ULOGIC;
      CLR : in STD_ULOGIC;
      D : in STD_ULOGIC;
      G : in STD_ULOGIC;
      GE : in STD_ULOGIC);
end component;
```

-- Component Attribute specification for LDCE\_1  
-- should be placed after architecture declaration but  
-- before the begin keyword

```
attribute INIT : string;
attribute INIT of LDCE_1_instance_name : label is "0";
-- values can be (0 or 1)
```

-- Component Instantiation for LDCE\_1 should be placed  
-- in architecture after the begin keyword

```
LDCE_1_INSTANCE_NAME : LDCE_1
```

```
-- synthesis translate_off
generic map (
    INIT => bit_value)
-- synthesis translate_on
port map (Q => user_Q,
    CLR => user_CLR,
    D => user_D,
    G => user_G,
    GE => user_GE);
```

## Verilog Instantiation Template

```
LDCE_1 LDCE_1_instance_name (.Q (user_Q),
    .CLR (user_CLR),
    .D (user_D),
    .G (user_G),
    .GE (user_GE));

defparam LDCE_1_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

INIT






## LD4CE, LD8CE, LD16CE

### Transparent Data Latches with Asynchronous Clear and Gate Enable


#### Architectures Supported

LD4CE, LD8CE, LD16CE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

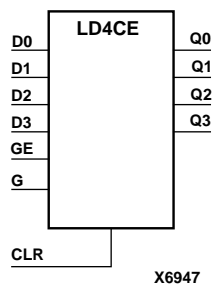


LD4CE, LD8CE, and LD16CE have, respectively, 4, 8, and 16 transparent data latches with asynchronous clear and gate enable. When the asynchronous clear input (CLR) is High, it overrides the other inputs and resets the data (Q) outputs Low. Q reflects the data (D) inputs while the gate (G) and gate enable (GE) are High, and CLR is Low. If GE is Low, data on D cannot be latched. The data on the D input during the High-to-Low gate transition is stored in the latch. The data on the Q output remains unchanged as long as G or GE remains Low.

The latch is asynchronously cleared with Low output when power is applied, or when global reset is active.

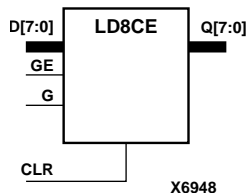

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

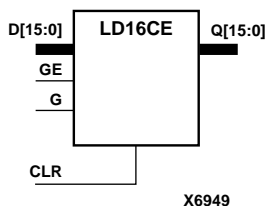

Inputs				Outputs	
CLR	GE	G	Dn	Qn	
1	X	X	X	0	
0	0	X	X	No Chg	
0	1	1	1	1	
0	1	1	0	0	
0	1	0	X	No Chg	
0	1	↓	Dn	Dn	


Dn = referenced input, for example, D0, D1, D2

Qn = referenced output, for example, Q0, Q1, Q2

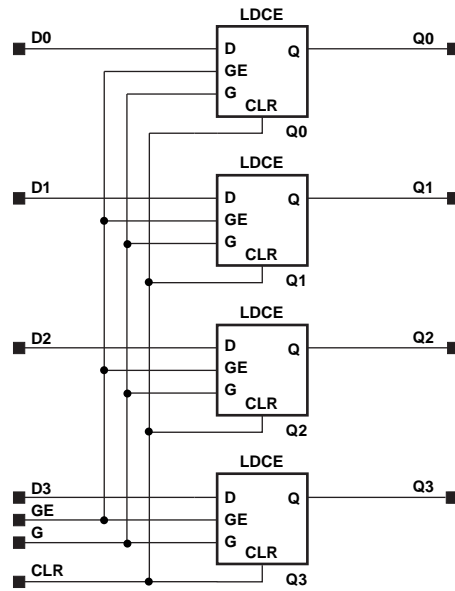

X6538

**LD4CE Implementation Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

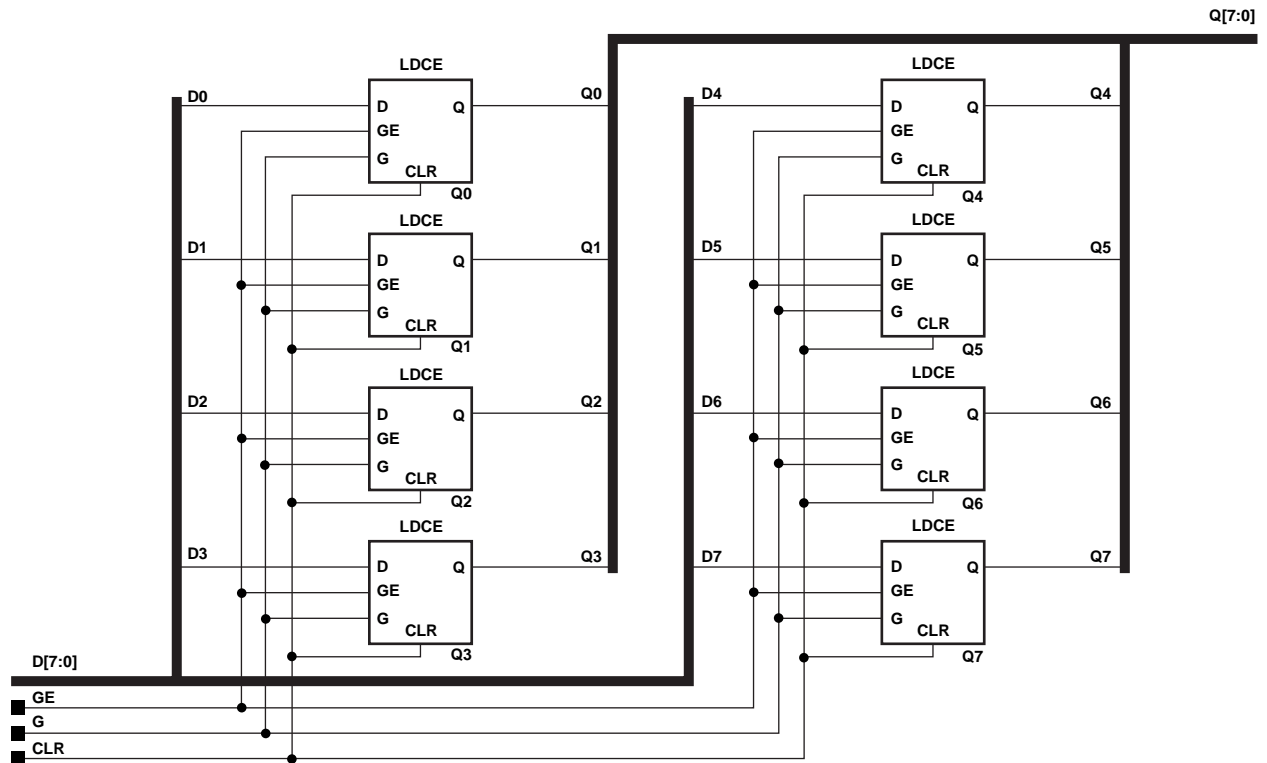

X6385

**LD8CE Implementation Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

## Usage

For HDL, these design elements are supported for inference only.

## VHDL Inference Code

```
architecture Behavioral of ld4ce is

begin

process (CLR, D, G, GE)
begin
    if (CLR='1') then
        Q <= "0000";
    elsif (GE = '1') then
        if (G='1') then
            Q <= D;
        end if;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @(CLR or D or G or GE) begin
    if (CLR)
        Q <= 0;
    else if (G && GE)
        Q <= D;
end
```




## LDCP

### Transparent Data Latch with Asynchronous Clear and Preset

#### Architectures Supported

LDCP	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	

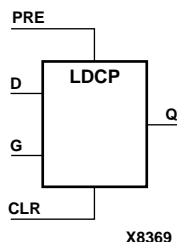

LDCP is a transparent data latch with data (D), asynchronous clear (CLR) and preset (PRE) inputs. When CLR is High, it overrides the other inputs and resets the data (Q) output Low. When PRE is High and CLR is low, it presets the data (Q) output High. Q reflects the data (D) input while the gate (G) input is High and CLR and PRE are Low. The data on the D input during the High-to-Low gate transition is stored in the latch. The data on the Q output remains unchanged as long as G remains Low.

The latch is asynchronously cleared, output Low, when power is applied, or when global reset is active.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs				Outputs
CLR	PRE	G	D	Q
1	X	X	X	0
0	1	X	X	1
0	0	1	1	1
0	0	1	0	0
0	0	0	X	No Chg
0	0	↓	D	D

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of ldcp is
begin

process (CLR, D, G, PRE)
begin
    if (CLR='1') then
        Q <= '0';
    elsif (PRE='1') then
        Q <= '1';
    elsif (G='1') then
        Q <= D;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @ (CLR or PRE or D or G) begin
    if (CLR)
        Q <= 0;
    else if (PRE)
        Q <= 1;
    else if (G)
        Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for LDCP should be placed
-- after architecture statement but before begin keyword

component LDCP
-- synthesis translate_off
generic (
    INIT : bit := '1');
-- synthesis translate_on
port (Q : out STD_ULOGIC;
      CLR : in STD_ULOGIC;
      D : in STD_ULOGIC;
      G : in STD_ULOGIC;
      PRE : in STD_ULOGIC);
end component;

-- Component Attribute specification for LDCP
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of LDCP_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for LDCP should be placed
-- in architecture after the begin keyword
```

```
LDCP_INSTANCE_NAME : LDCP
-- synthesis translate_off
generic map (
    INIT => bit_value)
-- synthesis translate_on
port map (Q => user_Q,
    CLR => user_CLR,
    D => user_D,
    G => user_G,
    PRE => user_PRE);
```

## Verilog Instantiation Template

```
LDCP LDCP_instance_name (.Q (user_Q),
    .CLR (user_CLR),
    .D (user_D),
    .G (user_G),
    .PRE (user_PRE));

defparam LDCP_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

INIT






## LDCP\_1

### Transparent Data Latch with Asynchronous Clear and Preset and Inverted Gate

#### Architectures Supported

LDCP_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

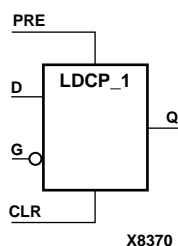

LDCP\_1 is a transparent data latch with data (D), asynchronous clear (CLR), preset (PRE) inputs, and inverted gate (G). When CLR is High, it overrides the other inputs and resets the data (Q) output Low. When PRE is High and CLR is Low, it presets the data (Q) output High. Q reflects the data (D) input while gate (G) input, CLR, and PRE are Low. The data on the D input during the Low-to-High gate transition is stored in the latch. The data on the Q output remains unchanged as long as G remains High.

The latch is asynchronously cleared, output Low, when power is applied, or when global reset is active.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs				Outputs
CLR	PRE	G	D	Q
1	X	X	X	0
0	1	X	X	1
0	0	0	1	1
0	0	0	0	0
0	0	1	X	No Chg
0	0	↑	D	D

## Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of ldcp_1 is
begin

process (CLR, D, G, PRE)
begin
    if (CLR='1') then
        Q <= '0';
    elsif (PRE='1') then
        Q <= '1';
    elsif (G='0') then
        Q <= D;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @ (CLR or PRE or D or G) begin
    if (CLR)
        Q <= 0;
    else if (PRE)
        Q <= 1;
    else if (!G)
        Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for LDCP_1 should be placed
-- after architecture statement but before begin keyword

component LDCP_1
    -- synthesis translate_off
    generic (
        INIT : bit := '1');
    -- synthesis translate_on
    port (Q : out STD_ULOGIC;
        CLR : in STD_ULOGIC;
        D : in STD_ULOGIC;
        G : in STD_ULOGIC;
        PRE : in STD_ULOGIC);
end component;

-- Component Attribute specification for LDCP_1
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of LDCP_1_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for LDCP_1 should be placed
-- in architecture after the begin keyword
```

```
LDCP_1_INSTANCE_NAME : LDCP_1
-- synthesis translate_off
generic map (
    INIT => bit_value)
-- synthesis translate_on
port map (Q => user_Q,
          CLR => user_CLR,
          D => user_D,
          G => user_G,
          PRE => user_PRE);
```

## Verilog Instantiation Template

```
LDCP_1 LDCP_1_instance_name (.Q (user_Q),
                             .CLR (user_CLR),
                             .D (user_D),
                             .G (user_G),
                             .PRE (user_PRE));

defparam LDCP_1_instance_name.INIT = bit_value;
```

## Commonly Used Constraints


INIT

## LDCPE

### Transparent Data Latch with Asynchronous Clear and Preset and Gate Enable

#### Architectures Supported

LDCPE	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

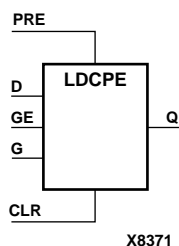

LDCPE is a transparent data latch with data (D), asynchronous clear (CLR), asynchronous preset (PRE), and gate enable (GE). When CLR is High, it overrides the other inputs and resets the data (Q) output Low. When PRE is High and CLR is Low, it presets the data (Q) output High. Q reflects the data (D) input while the gate (G) input and gate enable (GE) are High and CLR and PRE are Low. The data on the D input during the High-to-Low gate transition is stored in the latch. The data on the Q output remains unchanged as long as G or GE remains Low.

The latch is asynchronously cleared, output Low, when power is applied, or when global reset is active.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs					Outputs
CLR	PRE	GE	G	D	Q
1	X	X	X	X	0
0	1	X	X	X	1
0	0	0	X	X	No Chg
0	0	1	1	0	0
0	0	1	1	1	1
0	0	1	0	X	No Chg
0	0	1	↓	D	D

## Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of ldcpe is
begin

process (CLR, D, G, GE, PRE)
begin
    if (CLR='1') then
        Q <= '0';
    elsif (PRE='1') then
        Q <= '1';
    elsif (GE = '1') then
        if (G='1') then
            Q <= D;
        end if;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @ (CLR or PRE or D or G or GE) begin
    if (CLR)
        Q <= 0;
    else if (PRE)
        Q <= 1;
    else if (G && GE)
        Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for LDCPE should be placed
-- after architecture statement but before begin keyword

component LDCPE
-- synthesis translate_off
generic (
    INIT : bit := '1');
-- synthesis translate_on
port (Q : out STD_ULOGIC;
      CLR : in STD_ULOGIC;
      D : in STD_ULOGIC;
      G : in STD_ULOGIC;
      GE : in STD_ULOGIC;
      PRE : in STD_ULOGIC);
end component;

-- Component Attribute specification for LDCPE
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of LDCPE_instance_name : label is "0";
-- values can be (0 or 1)
```

```
-- Component Instantiation for LDCPE should be placed  
-- in architecture after the begin keyword
```

```
LDCPE_INSTANCE_NAME : LDCPE  
  -- synthesis translate_off  
  generic map (  
    INIT => bit_value)  
  -- synthesis translate_on  
  port map (Q => user_Q,  
            CLR => user_CLR,  
            D => user_D,  
            G => user_G,  
            GE => user_GE,  
            PRE => user_PRE);
```

### Verilog Instantiation Template

```
LDCPE LDCPE_instance_name (.Q (user_Q),  
                           .CLR (user_CLR),  
                           .D (user_D),  
                           .G (user_G),  
                           .GE (user_D),  
                           .PRE (user_PRE));
```

```
defparam LDCPE_instance_name.INIT = bit_value;
```

### Commonly Used Constraints

INIT




## LDCPE\_1

### Transparent Data Latch with Asynchronous Clear and Preset, Gate Enable, and Inverted Gate

#### Architectures Supported

LDCPE_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

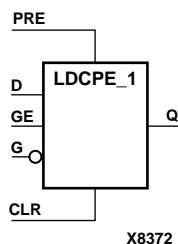

LDCPE\_1 is a transparent data latch with data (D), asynchronous clear (CLR), asynchronous preset (PRE), gate enable (GE), and inverted gate (G). When CLR is High, it overrides the other inputs and resets the data (Q) output Low. When PRE is High and CLR is Low, it presets the data (Q) output High. Q reflects the data (D) input while gate enable (GE) is High and gate (G), CLR, and PRE are Low. The data on the D input during the Low-to-High gate transition is stored in the latch. The data on the Q output remains unchanged as long as G is High or GE is Low.

The latch is asynchronously cleared, output Low, when power is applied, or when global reset is active.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs					Outputs
CLR	PRE	GE	G	D	Q
1	X	X	X	X	0
0	1	X	X	X	1
0	0	0	X	X	No Chg
0	0	1	0	0	0
0	0	1	0	1	1
0	0	1	1	X	No Chg
0	0	1	↑	D	D

## Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of ldcpe_1 is

begin

process (CLR, D, G, GE, PRE)
begin
    if (CLR='1') then
        Q <= '0';
    elsif (PRE='1') then
        Q <= '1';
    elsif (GE = '1') then
        if (G='0') then
            Q <= D;
        end if;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @ (CLR or PRE or D or G or GE) begin
    if (CLR)
        Q <= 0;
    else if (PRE)
        Q <= 1;
    else if (!G && GE)
        Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for LDCPE_1 should be placed
-- after architecture statement but before begin keyword

component LDCPE_1
-- synthesis translate_off
generic (
    INIT : bit := '1');
-- synthesis translate_on
port (Q : out STD_ULOGIC;
      CLR : in STD_ULOGIC;
      D : in STD_ULOGIC;
      G : in STD_ULOGIC;
      GE : in STD_ULOGIC;
      PRE : in STD_ULOGIC);
end component;

-- Component Attribute specification for LDCPE_1
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of LDCPE_1_instance_name : label is "0";
-- values can be (0 or 1)
```

```
-- Component Instantiation for LDCPE_1 should be placed  
-- in architecture after the begin keyword
```

```
LDCPE_1_INSTANCE_NAME : LDCPE_1  
  -- synthesis translate_off  
  generic map (  
    INIT => bit_value)  
  -- synthesis translate_on  
  port map (Q => user_Q,  
            CLR => user_CLR,  
            D => user_D,  
            G => user_G,  
            GE => user_GE,  
            PRE => user_PRE);
```

## Verilog Instantiation Template

```
LDCPE_1 LDCPE_1_instance_name (.Q (user_Q),  
                               .CLR (user_CLR),  
                               .D (user_D),  
                               .G (user_G),  
                               .GE (user_D),  
                               .PRE (user_PRE));  
  
defparam LDCPE_1_instance_name.INIT = bit_value;
```

## Commonly Used Constraints


INIT

## LDE

### Transparent Data Latch with Gate Enable

#### Architectures Supported

LDE	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

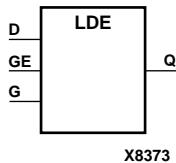

LDE is a transparent data latch with data (D) and gate enable (GE) inputs. Output Q reflects the data (D) while the gate (G) input and gate enable (GE) are High. The data on the D input during the High-to-Low gate transition is stored in the latch. The data on the Q output remains unchanged as long as G or GE remains Low.

The latch is asynchronously cleared, output Low, when power is applied, or when global reset is active.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
GE	G	D	Q
0	X	X	No Chg
1	1	0	0
1	1	1	1
1	0	X	No Chg
1	↓	D	D

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of lde is
begin

process (D, G, GE)
begin
    if (GE = '1' and G = '1') then
        Q <= D;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @(D or G or GE) begin
    if (G && GE)
        Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for LDE should be placed
-- after architecture statement but before begin keyword

component LDE
    -- synthesis translate_off
    generic (
        INIT : bit := '1');
    -- synthesis translate_on
    port (Q : out STD_ULOGIC;
        D : in STD_ULOGIC;
        G : in STD_ULOGIC;
        GE : in STD_ULOGIC);
end component;

-- Component Attribute specification for LDE
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of LDE_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for LDE should be placed
-- in architecture after the begin keyword

LDE_INSTANCE_NAME : LDE
    -- synthesis translate_off
    generic map (
        INIT => bit_value)
    -- synthesis translate_on
    port map (Q => user_Q,
        D => user_D,
        G => user_G,
```

```
GE => user_GE);
```

## Verilog Instantiation Template

```
LDE LDE_instance_name (.Q (user_Q),  
                       .D (user_D),  
                       .G (user_G),  
                       .GE (user_GE));  
  
defparam LDE_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

INIT






## LDE\_1

### Transparent Data Latch with Gate Enable and Inverted Gate

#### Architectures Supported

LDE_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

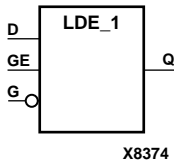

LDE\_1 is a transparent data latch with data (D), gate enable (GE), and inverted gate (G). Output Q reflects the data (D) while the gate (G) input is Low and gate enable (GE) is High. The data on the D input during the Low-to-High gate transition is stored in the latch. The data on the Q output remains unchanged as long as G is High or GE is Low.

The latch is asynchronously cleared, output Low, when power is applied, or when global reset is active.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
GE	G	D	Q
0	X	X	No Chg
1	0	0	0
1	0	1	1
1	1	X	No Chg
1	↑	D	D

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of lde_1 is
begin
process (D, G, GE)
begin
    if (GE = '1' and G = '0') then
        Q <= D;
    end if;
end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (D or G or GE) begin
    if (!G && GE)
        Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for LDE_1 should be placed
-- after architecture statement but before begin keyword

component LDE_1
  -- synthesis translate_off
  generic (
    INIT : bit := '1');
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        D : in STD_ULOGIC;
        G : in STD_ULOGIC;
        GE : in STD_ULOGIC);
end component;

-- Component Attribute specification for LDE_1
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of LDE_1_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for LDE_1 should be placed
-- in architecture after the begin keyword

LDE_1_INSTANCE_NAME : LDE_1
  -- synthesis translate_off
  generic map (
    INIT => bit_value)
  -- synthesis translate_on
  port map (Q => user_Q,
            D => user_D,
            G => user_G,
            GE => user_GE);
```

## Verilog Instantiation Template

```
LDE_1 LDE_1_instance_name (.Q (user_Q),
                          .D (user_D),
                          .G (user_G),
                          .GE (user_GE));

defparam LDE_1_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

INIT




## LDG

### Transparent Datagate Latch

#### Architectures Supported

LDG	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Primitive
CoolRunner-IIS	No

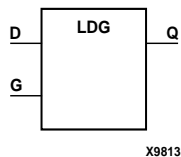

LDG is a transparent DataGate latch used for gating input signals to decrease power dissipation. The data output (Q) of the latch reflects the data (D) input while the gate enable (G) input is Low. The data on the D input during the Low-to-High gate transition is stored in the latch. The data on the Q output remains unchanged as long as G remains High.

The D input(s) of the LDG must be connected to a device input pad(s) and must have no other fan-outs (must not branch). The CPLD fitter maps the G input to the device's DataGate Enable control pin (DGE). There must be no more than one DataGate Enable signal in the design. The DataGate Enable signal may be driven either by a device input pin or any on-chip logic source. The DataGate Enable signal may be reused by other ordinary logic in the design.

The latch is asynchronously cleared, output Low, when power is applied, or when global reset is active. For CPLDs, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net. See [LDG4](#), [8](#), [16](#) for information on multiple transparent datagate latches for the CoolRunner-II series.

Inputs		Outputs
G	D	Q
0	0	0
0	1	1
1	X	No Chg
↑	D	D

#### Usage

For HDL, this design element can be instantiated.

## VHDL Instantiation Template

```
component LDG
    port (Q : out STD_ULOGIC;
          D : in  STD_ULOGIC;
          G : in  STD_ULOGIC);
end component;
...
begin
...
    INSTANCE_NAME : LDG
        port map (Q => user_Q,
                  D => user_D,
                  G => user_G);
```

## Verilog Instantiation Template


```
LDG instance_name (.Q (user_Q),
                    .D (user_D),
                    .G (user_G));
```

## LDG4, 8, 16


### Multiple Transparent Datagate Latches

#### Architectures Supported

LDG4, LDG8, LDG16	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

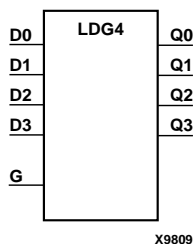


LDG4, LDG8, and LDG16 have, respectively, 4, 8, and 16 transparent DataGate latches with a common gate enable (G). These latches are used to gate input signals in order to decrease power dissipation during periods when activity on the input pins is not of interest to the CPLD. The data output (Q) of the latch reflects the data (D) input while the gate enable (G) input is Low. The data on the D input during the Low-to-High gate transition is stored in the latch. The data on the Q output remains unchanged as long as G remains High.

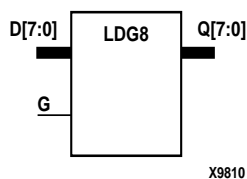


The D input(s) of the LDG must be connected to a device input pad(s) and must have no other fan-outs (must not branch). The CPLD fitter maps the G input to the device's DataGate Enable control pin (DGE). There must be no more than one DataGate Enable signal in the design. The DataGate Enable signal may be driven either by a device input pin or any on-chip logic source. The DataGate Enable signal may be reused by other ordinary logic in the design.

The latch is asynchronously cleared, output Low, when power is applied. See [LDG](#) for information on single transparent data latches.

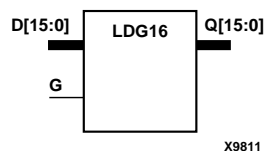

Inputs		Outputs
G	D	Q
0	0	0
0	1	1
1	X	No Chg
↑	D	D

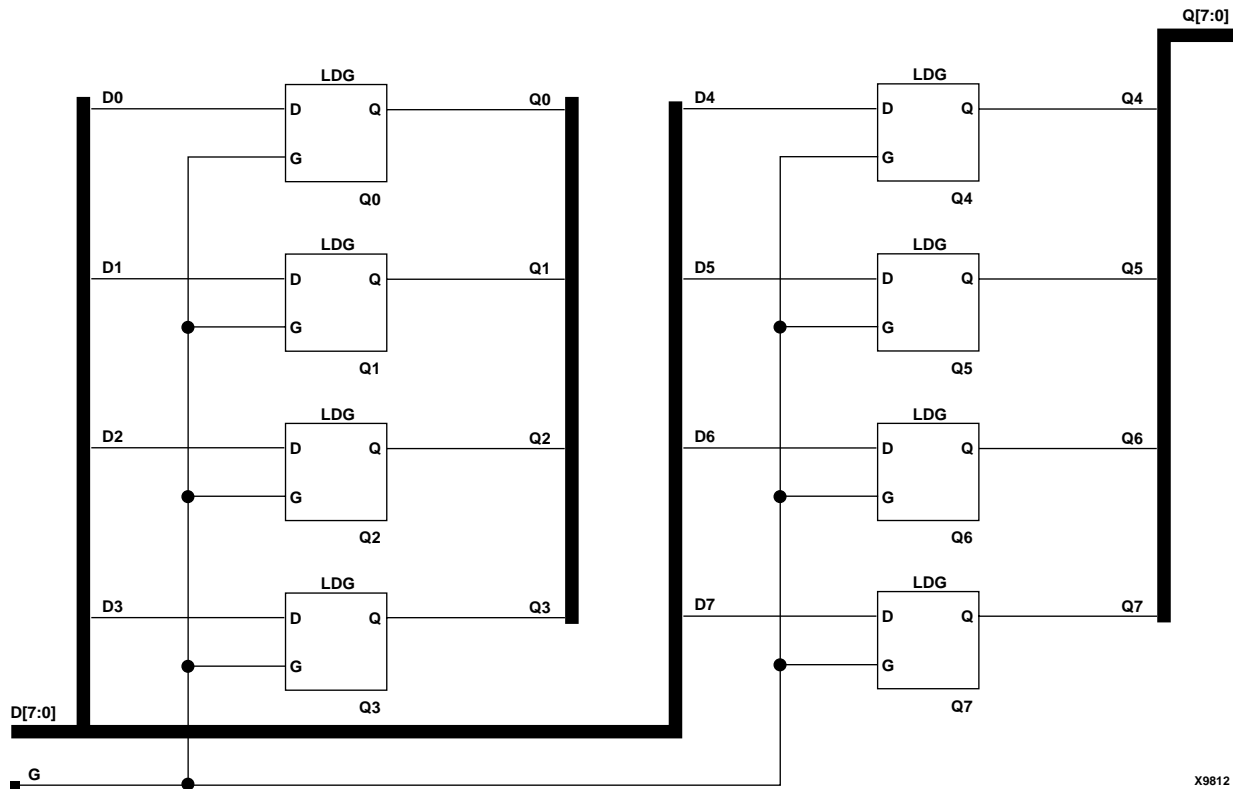

X9812

### LDG8 Implementation




## LDP

### Transparent Data Latch with Asynchronous Preset

#### Architectures Supported

LDP	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No

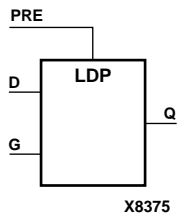

LDP is a transparent data latch with asynchronous preset (PRE). When the PRE input is High, it overrides the other inputs and presets the data (Q) output High. Q reflects the data (D) input while gate (G) input is High and PRE is Low. The data on the D input during the High-to-Low gate transition is stored in the latch. The data on the Q output remains unchanged as long as G remains Low.

The latch is asynchronously preset, output High, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
PRE	G	D	Q
1	X	X	1
0	1	0	0
0	1	1	1
0	0	X	No Chg
0	↓	D	D

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of ldp is
begin
    process (PRE, G)
    begin
        if (PRE='1') then
            Q <= "1";
        elsif (G='1') then
            Q <= D;
        end if;
    end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (PRE or D or G) begin
    if (PRE)
        Q <= 1;
    else if (G)
        Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for LDP should be placed
-- after architecture statement but before begin keyword
```

```
component LDP
    -- synthesis translate_off
    generic (
        INIT : bit := '1');
    -- synthesis translate_on
    port (Q : out STD_ULOGIC;
        D : in STD_ULOGIC;
        G : in STD_ULOGIC;
        PRE : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for LDP
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
attribute INIT : string;
attribute INIT of LDP_instance_name : label is "0";
-- values can be (0 or 1)
```

```
-- Component Instantiation for LDP should be placed
-- in architecture after the begin keyword
```

```
LDP_INSTANCE_NAME : LDP
    -- synthesis translate_off
    generic map (
        INIT => bit_value)
    -- synthesis translate_on
    port map (Q => user_Q,
        D => user_D,
```

```
G => user_G,  
PRE => user_PRE);
```

## Verilog Instantiation Template

```
LDP LDP_instance_name (.Q (user_Q),  
                       .D (user_D),  
                       .G (user_G),  
                       .PRE (user_PRE));
```

```
defparam LDP_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

INIT




## LDP\_1

### Transparent Data Latch with Asynchronous Preset and Inverted Gate

#### Architectures Supported

LDP_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

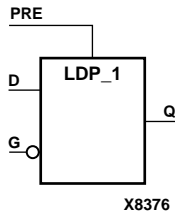

LDP\_1 is a transparent data latch with asynchronous preset (PRE) and inverted gate (G). When the PRE input is High, it overrides the other inputs and presets the data (Q) output High. Q reflects the data (D) input while gate (G) input and PRE are Low. The data on the D input during the Low-to-High gate transition is stored in the latch. The data on the Q output remains unchanged as long as G remains High.

The latch is asynchronously preset, output High, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
PRE	G	D	Q
1	X	X	1
0	0	0	0
0	0	1	1
0	1	X	No Chg
0	↑	D	D

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of ldp_1 is
begin
    process (PRE, G)
    begin
        if (PRE='1') then
            Q <= "1111";
        elsif (G='0') then
            Q <= D;
        end if;
    end process;
end Behavioral;
```

## Verilog Inference Code

```
always @ (PRE or D or G) begin
    if (PRE)
        Q <= 1;
    else if (!G)
        Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for LDP_1 should be placed
-- after architecture statement but before begin keyword
```

```
component LDP_1
-- synthesis translate_off
generic (
    INIT : bit := '1');
-- synthesis translate_on
port (Q : out STD_ULOGIC;
      D : in STD_ULOGIC;
      G : in STD_ULOGIC;
      PRE : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for LDP_1
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
attribute INIT : string;
attribute INIT of LDP_1_instance_name : label is "0";
-- values can be (0 or 1)
```

```
-- Component Instantiation for LDP_1 should be placed
-- in architecture after the begin keyword
```

```
LDP_1_INSTANCE_NAME : LDP_1
-- synthesis translate_off
generic map (
    INIT => bit_value)
-- synthesis translate_on
port map (Q => user_Q,
         D => user_D,
```

```
G => user_G,  
PRE => user_PRE);
```

## Verilog Instantiation Template

```
LDP_1 LDP_1_instance_name (.Q (user_Q),  
                           .D (user_D),  
                           .G (user_G),  
                           .PRE (user_PRE));  
  
defparam LDP_1_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

INIT






## LDPE

### Transparent Data Latch with Asynchronous Preset and Gate Enable

#### Architectures Supported

LDPE	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

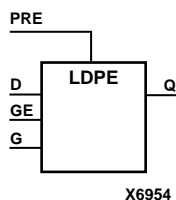

LDPE is a transparent data latch with asynchronous preset and gate enable. When the asynchronous preset (PRE) is High, it overrides the other input and presets the data (Q) output High. Q reflects the data (D) input while the gate (G) input and gate enable (GE) are High. The data on the D input during the High-to-Low gate transition is stored in the latch. The data on the Q output remains unchanged as long as G or GE remains Low.

The latch is asynchronously preset, output High, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs				Outputs
PRE	GE	G	D	Q
1	X	X	X	1
0	0	X	X	No Chg
0	1	1	0	0
0	1	1	1	1
0	1	0	X	No Chg
0	1	↓	D	D

#### Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of ldpe is
begin

process (D, G, GE, PRE)
begin
    if (PRE='1') then
        Q <= '1';
    elsif (GE = '1') then
        if (G='1') then
            Q <= D;
        end if;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @ (PRE or D or G or GE) begin
    if (PRE)
        Q <= 1;
    else if (G && GE)
        Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for LDPE should be placed
-- after architecture statement but before begin keyword

component LDPE
    -- synthesis translate_off
    generic (
        INIT : bit := '1');
    -- synthesis translate_on
    port (Q : out STD_ULOGIC;
        D : in STD_ULOGIC;
        G : in STD_ULOGIC;
        GE : in STD_ULOGIC;
        PRE : in STD_ULOGIC);
end component;

-- Component Attribute specification for LDPE
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of LDPE_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for LDPE should be placed
-- in architecture after the begin keyword

LDPE_INSTANCE_NAME : LDPE
```

```
-- synthesis translate_off
generic map (
    INIT => bit_value)
-- synthesis translate_on
port map (Q => user_Q,
    D => user_D,
    G => user_G,
    GE => user_GE,
    PRE => user_PRE);
```

## Verilog Instantiation Template

```
LDPE LDPE_instance_name (.Q (user_Q),
    .D (user_D),
    .G (user_G),
    .GE (user_GE),
    .PRE (user_PRE));

defparam LDPE_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

INIT




## LDPE\_1

### Transparent Data Latch with Asynchronous Preset, Gate Enable, and Inverted Gate

#### Architectures Supported

LDPE_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

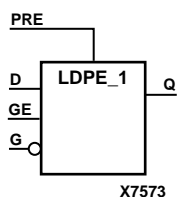

LDPE\_1 is a transparent data latch with asynchronous preset, gate enable, and inverted gate. When the asynchronous preset (PRE) is High, it overrides the other input and presets the data (Q) output High. Q reflects the data (D) input while the gate (G) and PRE are Low and gate enable (GE) is High.

The data on the D input during the Low-to-High gate transition is stored in the latch. The data on the Q output remains unchanged as long as G remains High or GE remains Low.

The latch is asynchronously preset, output High, when power is applied.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs				Outputs
PRE	GE	G	D	Q
1	X	X	X	1
0	0	X	X	No Chg
0	1	0	0	0
0	1	0	1	1
0	1	1	X	No Chg
0	1	↑	D	D

## Usage

This design element typically should be inferred in the design code; however, the element can be instantiated for cases where strict placement control, relative placement control, or initialization attributes need to be applied.

## VHDL Inference Code

```
architecture Behavioral of ldpe_1 is
begin

process (D, G, GE, PRE)
begin
    if (PRE='1') then
        Q <= '1';
    elsif (GE = '1') then
        if (G='0') then
            Q <= D;
        end if;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @ (PRE or D or G or GE) begin
    if (PRE)
        Q <= 1;
    else if (!G && GE)
        Q <= D;
end
```

## VHDL Instantiation Template

```
-- Component Declaration for LDPE_1 should be placed
-- after architecture statement but before begin keyword

component LDPE_1
    -- synthesis translate_off
    generic (
        INIT : bit := '1');
    -- synthesis translate_on
    port (Q : out STD_ULOGIC;
        D : in STD_ULOGIC;
        G : in STD_ULOGIC;
        GE : in STD_ULOGIC;
        PRE : in STD_ULOGIC);
end component;

-- Component Attribute specification for LDPE_1
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of LDPE_1_instance_name : label is "0";
-- values can be (0 or 1)

-- Component Instantiation for LDPE_1 should be placed
-- in architecture after the begin keyword

LDPE_1_INSTANCE_NAME : LDPE_1
```

```
-- synthesis translate_off
generic map (
    INIT => bit_value)
-- synthesis translate_on
port map (Q => user_Q,
          D => user_D,
          G => user_G,
          GE => user_GE,
          PRE => user_PRE);
```

## Verilog Instantiation Template

```
LDPE_1 LDPE_1_instance_name (.Q (user_Q),
                             .D (user_D),
                             .G (user_G),
                             .GE (user_GE),
                             .PRE (user_PRE));

defparam LDPE_1_instance_name.INIT = bit_value;
```

## Commonly Used Constraints

INIT




## LUT1, 2, 3, 4

### 1-, 2-, 3-, 4-Bit Look-Up-Table with General Output

#### Architectures Supported


LUT1, LUT2, LUT3, LUT4	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

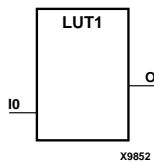


LUT1, LUT2, LUT3, and LUT4 are, respectively, 1-, 2-, 3-, and 4-bit look-up-tables (LUTs) with general output (O).

A mandatory INIT attribute, with an appropriate number of hexadecimal digits for the number of inputs, must be attached to the LUT to specify its function.

LUT1 provides a look-up-table version of a buffer or inverter.

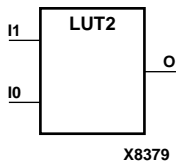


LUTs are the basic Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X, Spartan-II, Spartan-IIE, and Spartan-3 building blocks. Two LUTs are available in each CLB slice; four LUTs are available in each CLB. The variants, “LUT1\_D, LUT2\_D, LUT3\_D, LUT4\_D” and “LUT1\_L, LUT2\_L, LUT3\_L, LUT4\_L” provide additional types of outputs that can be used by different timing models for more accurate pre-layout timing estimation.

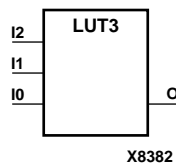

#### LUT3 Function Table

Inputs			Outputs
I2	I1	I0	O
0	0	0	INIT[0]
0	0	1	INIT[1]
0	1	0	INIT[2]
0	1	1	INIT[3]
1	0	0	INIT[4]
1	0	1	INIT[5]
1	1	0	INIT[6]
1	1	1	INIT[7]

INIT = binary equivalent of the hexadecimal number assigned to the INIT attribute

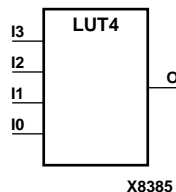

## Usage

LUTs are generally inferred with the logic portions of the HDL code. Xilinx suggests that you instantiate LUTs only if you have a need to implicitly specify the logic mapping, or if you need to manually place or relationally place the logic.

## VHDL Instantiation Template for LUT1

```
-- Component Declaration for LUT1 should be placed
-- after architecture statement but before begin keyword

component LUT1
  -- synthesis translate_off
  generic (
    INIT : bit_vector := X"2");
  -- synthesis translate_on
  port (O : out STD_ULOGIC;
        IO : in STD_ULOGIC);
end component;

-- Component Attribute specification for LUT1
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of LUT1_instance_name : label is "2";
-- values can be 0, 1, 2, or 3

-- Component Instantiation for LUT1 should be placed
-- in architecture after the begin keyword

LUT1_INSTANCE_NAME : LUT1
  -- synthesis translate_off
  generic map (
    INIT => hex_value)
  -- synthesis translate_on
  port map (O => user_O,
            IO => user_IO);
```

## Verilog Instantiation Template For LUT1

```
LUT1 LUT1_instance_name (.O (user_O),
                        .IO (user_IO));

defparam LUT1_instance_name.INIT = hex_value;
```

## VHDL Instantiation Template for LUT2

```
-- Component Declaration for LUT2 should be placed
-- after architecture statement but before begin keyword

component LUT2
  -- synthesis translate_off
  generic (
    INIT : bit_vector := X"4");
  -- synthesis translate_on
  port (O : out STD_ULOGIC;
        IO : in STD_ULOGIC;
        I1 : in STD_ULOGIC);
end component;

-- Component Attribute specification for LUT2
-- should be placed after architecture declaration but
```

```

-- before the begin keyword

attribute INIT : string;
attribute INIT of LUT2_instance_name : label is "4";
-- values can be 0, 1, 2,3, or 4

-- Component Instantiation for LUT2 should be placed
-- in architecture after the begin keyword

LUT2_INSTANCE_NAME : LUT2
  -- synthesis translate_off
  generic map (
    INIT => hex_value)
  -- synthesis translate_on
  port map (O => user_O,
            I0 => user_I0,
            I1 => user_I1);

```

## Verilog Instantiation Template For LUT2

```

LUT2 LUT2_instance_name (.O (user_O),
                        .I0 (user_I0),
                        .I1 (user_I1));

defparam LUT2_instance_name.INIT = hex_value;

```

## VHDL Instantiation Template for LUT3

```

-- Component Declaration for LUT3 should be placed
-- after architecture statement but before begin keyword

component LUT3
  -- synthesis translate_off
  generic (
    INIT : bit_vector := X"8");
  -- synthesis translate_on
  port (O : out STD_ULOGIC;
        IO : in STD_ULOGIC;
        I1 : in STD_ULOGIC;
        I2 : in STD_ULOGIC);
end component;

-- Component Attribute specification for LUT3
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of LUT3_instance_name : label is "8";
-- values can be 0, 1, 2, 3, 4, 5, 6, 7, 8

-- Component Instantiation for LUT3 should be placed
-- in architecture after the begin keyword --

LUT3_INSTANCE_NAME : LUT3
  -- synthesis translate_off
  generic map (

```

```

        INIT => hex_value)
    -- synthesis translate_on
port map (O => user_O,
         I0 => user_I0,
         I1 => user_I1,
         I2 => user_I2);

```

## Verilog Instantiation Template For LUT3

```

LUT3 LUT3_instance_name (.O (user_O),
                        .I0 (user_I0),
                        .I1 (user_I1),
                        .I2 (user_I2));

```

```
defparam LUT4_instance_name.INIT = hex_value;
```

## VHDL Instantiation Template for LUT4

```

-- Component Declaration for LUT4 should be placed
-- after architecture statement but before begin keyword

```

```

component LUT4
    -- synthesis translate_off
    generic (
        INIT : bit_vector := X"16");
    -- synthesis translate_on
port (O : out STD_ULOGIC;
     I0 : in  STD_ULOGIC;
     I1 : in  STD_ULOGIC;
     I2 : in  STD_ULOGIC;
     I3 : in  STD_ULOGIC);
end component;

```

```

-- Component Attribute specification for LUT4
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

attribute INIT : string;
attribute INIT of LUT4_instance_name : label is "16";
-- values can be 0 through 16

```

```

-- Component Instantiation for LUT4 should be placed
-- in architecture after the begin keyword

```

```

LUT4_INSTANCE_NAME : LUT4
    -- synthesis translate_off
    generic map (
        INIT => hex_value)
    -- synthesis translate_on
port map (O => user_O,
         I0 => user_I0,
         I1 => user_I1,
         I2 => user_I2,
         I3 => user_I3);

```

## Verilog Instantiation Template For LUT4

```
LUT4 LUT4_instance_name (.O (user_O),  
                          .I0 (user_I0),  
                          .I1 (user_I1),  
                          .I2 (user_I2),  
                          .I3 (user_I3));
```

```
defparam LUT4_instance_name.INIT = hex_value;
```

## Commonly Used Constraints

BEL

INIT

LOC





U\_SET

## LUT1\_D, LUT2\_D, LUT3\_D, LUT4\_D

### 1-, 2-, 3-, 4-Bit Look-Up-Table with Dual Output

#### Architectures Supported

LUT1_D, LUT2_D, LUT3_D, LUT4_D	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

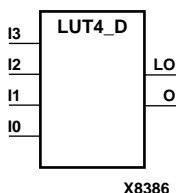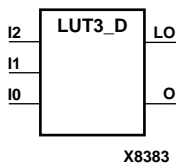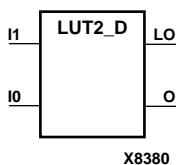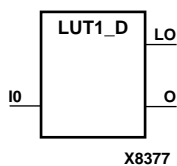

LUT1\_D, LUT2\_D, LUT3\_D, and LUT4\_D are, respectively, 1-, 2-, 3-, and 4-bit look-up-tables (LUTs) with two functionally identical outputs, O and LO. The O output is a general interconnect. The LO output is used to connect to another output within the same CLB slice and to the fast connect buffer.

A mandatory INIT attribute, with an appropriate number of hexadecimal digits for the number of inputs, must be attached to the LUT to specify its function.

LUT1\_D provides a look-up-table version of a buffer or inverter.

See also “LUT1, 2, 3, 4” and “LUT1\_L, LUT2\_L, LUT3\_L, LUT4\_L.”

#### LUT3\_D Function Table

Inputs			Outputs	
I2	I1	I0	O	LO
0	0	0	INIT[0]	INIT[0]
0	0	1	INIT[1]	INIT[1]
0	1	0	INIT[2]	INIT[2]
0	1	1	INIT[3]	INIT[3]
1	0	0	INIT[4]	INIT[4]
1	0	1	INIT[5]	INIT[5]
1	1	0	INIT[6]	INIT[6]
1	1	1	INIT[7]	INIT[7]

INIT = binary equivalent of the hexadecimal number assigned to the INIT attribute

#### Usage

LUTs are generally inferred with the logic portions of the HDL code. Xilinx suggests that you instantiate LUTs only if you have a need to implicitly specify the logic mapping, or if you need to manually place or relationally place the logic.

## VHDL Instantiation Template for LUT1\_D

```
-- Component Declaration for LUT1_D should be placed
-- after architecture statement but before begin keyword

component LUT1_D
  -- synthesis translate_off
  generic (
    INIT : bit_vector := X"2");
  -- synthesis translate_on
  port (LO : out STD_ULOGIC;
        O  : out STD_ULOGIC;
        IO : in  STD_ULOGIC);
end component;

-- Component Attribute specification for LUT1_D
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of LUT1_D_instance_name : label is "2";
-- values can be 0, 1, 2, or 3

-- Component Instantiation for LUT1_D should be placed
-- in architecture after the begin keyword

LUT1_D_INSTANCE_NAME : LUT1_D
  -- synthesis translate_off
  generic map (
    INIT => hex_value)
  -- synthesis translate_on
  port map (LO => user_LO,
            O  => user_O,
            IO => user_IO);
```

## Verilog Instantiation Template For LUT1\_D

```
LUT1_D LUT1_D_instance_name (.LO (user_LO),
                             .O (user_O),
                             .IO (user_IO));

defparam LUT1_D_instance_name.INIT = hex_value;
```



## VHDL Instantiation Template for LUT2\_D

```
-- Component Declaration for LUT2_D should be placed
-- after architecture statement but before begin keyword

component LUT2_D
  -- synthesis translate_off
  generic (
    INIT : bit_vector := X"4");
  -- synthesis translate_on
  port (LO : out STD_ULOGIC;
        O  : out STD_ULOGIC;
        IO : in  STD_ULOGIC;
        I1 : in  STD_ULOGIC);
end component;

-- Component Attribute specification for LUT2_D
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of LUT2_D_instance_name : label is "4";

-- Component Instantiation for LUT2_D should be placed
-- in architecture after the begin keyword

LUT2_D_INSTANCE_NAME : LUT2_D
  -- synthesis translate_off
  generic map (
    INIT => hex_value)
  -- synthesis translate_on
  port map (LO => user_LO,
            O  => user_O,
            IO => user_IO,
            I1 => user_I1);
```

## Verilog Instantiation Template For LUT2\_D

```
LUT2_D LUT2_D_instance_name (.LO (user_O),
                             .O (user_O),
                             .IO (user_IO),
                             .I1 (user_I1));

defparam LUT2_D_instance_name.INIT = hex_value;
```

## VHDL Instantiation Template for LUT3\_D

```
-- Component Declaration for LUT3_D should be placed
-- after architecture statement but before begin keyword

component LUT3_D
  -- synthesis translate_off
  generic (
    INIT : bit_vector := X"8");
  -- synthesis translate_on
  port (LO : out STD_ULOGIC;
        O  : out STD_ULOGIC;
        IO : in  STD_ULOGIC;
        I1 : in  STD_ULOGIC;
        I2 : in  STD_ULOGIC);
end component;

-- Component Attribute specification for LUT3_D
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of LUT3_D_instance_name : label is "8";

-- Component Instantiation for LUT3_D should be placed
-- in architecture after the begin keyword

LUT3_D_INSTANCE_NAME : LUT3_D
  -- synthesis translate_off
  generic map (
    INIT => hex_value)
  -- synthesis translate_on
  port map (LO => user_LO,
            O  => user_O,
            IO => user_IO,
            I1 => user_I1,
            I2 => user_I2);
```

## Verilog Instantiation Template For LUT3\_D

```
LUT3_D LUT3_D_instance_name (.LO (user_LO),
                             .O  (user_O),
                             .IO (user_IO),
                             .I1 (user_I1),
                             .I2 (user_I2));

defparam LUT3_D_instance_name.INIT = hex_value;
```

## VHDL Instantiation Template for LUT4\_D

```
-- Component Declaration for LUT4_D should be placed
-- after architecture statement but before begin keyword

component LUT4_D
  -- synthesis translate_off
  generic (
    INIT : bit_vector := X"16");
  -- synthesis translate_on
  port (LO : out STD_ULOGIC;
        O  : out STD_ULOGIC;
        IO : in  STD_ULOGIC;
        I1 : in  STD_ULOGIC;
        I2 : in  STD_ULOGIC;
        I3 : in  STD_ULOGIC);
end component;

-- Component Attribute specification for LUT4_D
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of LUT4_D_instance_name : label is "16";
-- values can be 0 through 16

-- Component Instantiation for LUT4_D should be placed
-- in architecture after the begin keyword

LUT4_D_INSTANCE_NAME : LUT4_D
  -- synthesis translate_off
  generic map (
    INIT => hex_value)
  -- synthesis translate_on
  port map (LO => user_LO,
            O  => user_O,
            IO => user_IO,
            I1 => user_I1,
            I2 => user_I2,
            I3 => user_I3);
```

## Verilog Instantiation Template For LUT4\_D

```
LUT4_D LUT4_D_instance_name (.LO (user_LO),
                             .O  (user_O),
                             .IO (user_IO),
                             .I1 (user_I1),
                             .I2 (user_I2),
                             .I3 (user_I3));

defparam LUT4_D_instance_name.INIT = hex_value;
```

## Commonly Used Constraints

INIT

LOC

RLOC  
BEL  
U\_SET






## LUT1\_L, LUT2\_L, LUT3\_L, LUT4\_L

### 1-, 2-, 3-, 4-Bit Look-Up-Table with Local Output

#### Architectures Supported

LUT1_L, LUT2_L, LUT3_L, LUT4_L	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



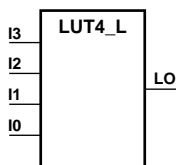


LUT1\_L, LUT2\_L, LUT3\_L, and LUT4\_L are, respectively, 1-, 2-, 3-, and 4-bit look-up-tables (LUTs) with a local output (LO) that is used to connect to another output within the same CLB slice and to the fast connect buffer.

A mandatory INIT attribute, with an appropriate number of hexadecimal digits for the number of inputs, must be attached to the LUT to specify its function.

LUT1\_L provides a look-up-table version of a buffer or inverter.

See also “LUT1, 2, 3, 4” and “LUT1\_D, LUT2\_D, LUT3\_D, LUT4\_D.”

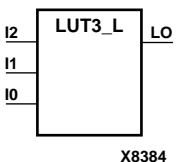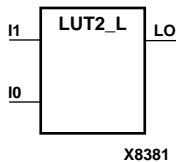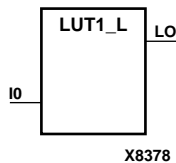

#### LUT3\_L Function Table

Inputs			Outputs
I2	I1	I0	LO
0	0	0	INIT[0]
0	0	1	INIT[1]
0	1	0	INIT[2]
0	1	1	INIT[3]
1	0	0	INIT[4]
1	0	1	INIT[5]
1	1	0	INIT[6]
1	1	1	INIT[7]

INIT = binary equivalent of the hexadecimal number assigned to the INIT attribute

#### Usage

LUTs are generally inferred with the logic portions of the HDL code. Xilinx suggests that you instantiate LUTs only if you have a need to implicitly specify the logic mapping, or if you need to manually place or relationally place the logic.

## VHDL Instantiation Template for LUT1\_L

```
-- Component Declaration for LUT1_L should be placed
-- after architecture statement but before begin keyword

component LUT1_L
  -- synthesis translate_off
  generic (
    INIT : bit_vector := X"2");
  -- synthesis translate_on
  port (LO : out STD_ULOGIC;
        IO : inSTD_ULOGIC);
end component;

-- Component Attribute specification for LUT1_L
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of LUT1_L_instance_name : label is "2";
-- values can be 0, 1, 2, or 3

-- Component Instantiation for LUT1_L should be placed
-- in architecture after the begin keyword

LUT1_L_INSTANCE_NAME : LUT1_L
  -- synthesis translate_off
  generic map (
    INIT => hex_value)
  -- synthesis translate_on
  port map (LO => user_LO,
            IO => user_IO);
```

## Verilog Instantiation Template For LUT1\_L

```
LUT1_L LUT1_L_instance_name (.LO (user_LO),
                             .IO (user_IO));

defparam LUT1_L_instance_name.INIT = hex_value;
```

## VHDL Instantiation Template for LUT2\_L

```
-- Component Declaration for LUT2_L should be placed
-- after architecture statement but before begin keyword

component LUT2_L
  -- synthesis translate_off
  generic (
    INIT : bit_vector := X"4");
  -- synthesis translate_on
  port (LO : out STD_ULOGIC;
        IO : in STD_ULOGIC;
        I1 : in STD_ULOGIC);
end component;

-- Component Attribute specification for LUT2_L
-- should be placed after architecture declaration but
```



```

-- before the begin keyword

attribute INIT : string;
attribute INIT of LUT2_L_instance_name : label is "4";

-- Component Instantiation for LUT2_L should be placed
-- in architecture after the begin keyword

LUT2_L_INSTANCE_NAME : LUT2_L
  -- synthesis translate_off
  generic map (
    INIT => hex_value)
  -- synthesis translate_on
  port map (LO => user_LO,
    IO => user_IO,
    I1 => user_I1);

```

### Verilog Instantiation Template For LUT2\_L

```

LUT2_L LUT2_L_instance_name (.LO (user_O),
                             .IO (user_IO),
                             .I1 (user_I1));

defparam LUT2_L_instance_name.INIT = hex_value;

```

### VHDL Instantiation Template for LUT3\_L

```

-- Component Declaration for LUT3_L should be placed
-- after architecture statement but before begin keyword

component LUT3_L
  -- synthesis translate_off
  generic (
    INIT : bit_vector := X"8");
  -- synthesis translate_on
  port (LO : out STD_ULOGIC;
    IO : in STD_ULOGIC;
    I1 : in STD_ULOGIC;
    I2 : in STD_ULOGIC);
end component;

-- Component Attribute specification for LUT3_L
-- should be placed after architecture declaration but
-- before the begin keyword

attribute INIT : string;
attribute INIT of LUT3_L_instance_name : label is "8";

-- Component Instantiation for LUT3_L should be placed
-- in architecture after the begin keyword --

LUT3_L_INSTANCE_NAME : LUT3_L
  -- synthesis translate_off
  generic map (

```

```

        INIT => hex_value)
    -- synthesis translate_on
    port map (LO => user_LO,
             IO => user_IO,
             I1 => user_I1,
             I2 => user_I2);

```

### Verilog Instantiation Template For LUT3\_L

```

LUT3_L LUT3_L_instance_name (.LO (user_LO),
                             .IO (user_IO),
                             .I1 (user_I1),
                             .I2 (user_I2));

```

```
defparam LUT3_L_instance_name.INIT = hex_value;
```

### VHDL Instantiation Template for LUT4\_L

```

-- Component Declaration for LUT4_L should be placed
-- after architecture statement but before begin keyword --

```

```

component LUT4_L
    -- synthesis translate_off
    generic (
        INIT : bit_vector := X"16");
    -- synthesis translate_on
    port (LO : out STD_ULOGIC;
         IO : in STD_ULOGIC;
         I1 : in STD_ULOGIC;
         I2 : in STD_ULOGIC;
         I3 : in STD_ULOGIC);
end component;

```

```

-- Component Attribute specification for LUT4_L
-- should be placed after architecture declaration but
-- before the begin keyword

```

```

attribute INIT : string;
attribute INIT of LUT4_L_instance_name : label is "16";
-- values can be 0 through 16

```

```

-- Component Instantiation for LUT4_L should be placed
-- in architecture after the begin keyword --

```

```

LUT4_L_INSTANCE_NAME : LUT4_L
    -- synthesis translate_off
    generic map (
        INIT => hex_value)
    -- synthesis translate_on
    port map (LO => user_LO,
             IO => user_IO,
             I1 => user_I1,
             I2 => user_I2,
             I3 => user_I3);

```

## Verilog Instantiation Template For LUT4\_L

```
LUT4_L LUT4_L_instance_name (.LO (user_LO),  
                             .I0 (user_I0),  
                             .I1 (user_I1),  
                             .I2 (user_I2),  
                             .I3 (user_I3));  
  
defparam LUT4_L_instance_name.INIT = hex_value;
```

## Commonly Used Constraints

INIT  
LOC  
RLOC  
BEL  
U\_SET




## M2\_1

### 2-to-1 Multiplexer


#### Architectures Supported

M2_1	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No



The M2\_1 multiplexer chooses one data bit from two sources (D1 or D0) under the control of the select input (S0). The output (O) reflects the state of the selected data input. When Low, S0 selects D0 and when High, S0 selects D1.

Inputs			Outputs
S0	D1	D0	O
1	1	X	1
1	0	X	0
0	X	1	1
0	X	0	0

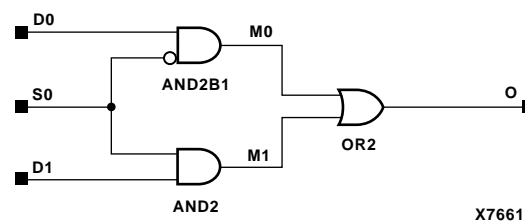

**M2\_1 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-3, Spartan-IIE, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

#### Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of m2_1 is
begin
process (D0,D1,S0)
begin
    case S0 is
        when '0' => O <= D0;
        when '1' => O <= D1;
        when others => NULL;
    end case;
end process;
end Behavioral;
```

## Verilog Inference Code

```
always @(D0 or D1 or S0)
begin
    case (S0)
        0 : O <= D0;
        1 : O <= D1;
    endcase
end
```








## M2\_1B1

### 2-to-1 Multiplexer with D0 Inverted


#### Architectures Supported

M2_1B1	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No



The M2\_1B1 multiplexer chooses one data bit from two sources (D1 or D0) under the control of select input (S0). When S0 is Low, the output (O) reflects the inverted value of D0. When S0 is High, O reflects the state of D1.

Inputs			Outputs
S0	D1	D0	O
1	1	X	1
1	0	X	0
0	X	1	0
0	X	0	1

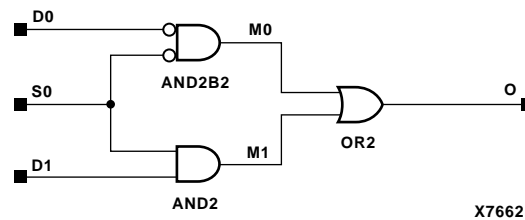

**M2\_1B1 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-3, Spartan-IIE, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

#### Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of m2_1b1 is
begin
process (D0,D1,S0)
begin
    case S0 is
        when '0' => O <= not D0;
        when '1' => O <= D1;
        when others => NULL;
    end case;
end process;
end Behavioral;
```

## Verilog Inference Code

```
always @(D0 or D1 or S0)
begin
    case (S0)
        0 : O <= !D0;
        1 : O <= D1;
    endcase
end
```






## M2\_1B2

### 2-to-1 Multiplexer with D0 and D1 Inverted


#### Architectures Supported

M2_1B2	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No



The M2\_1B2 multiplexer chooses one data bit from two sources (D1 or D0) under the control of select input (S0). When S0 is Low, the output (O) reflects the inverted value of D0. When S0 is High, O reflects the inverted value of D1.

Inputs			Outputs
S0	D1	D0	O
1	1	X	0
1	0	X	1
0	X	1	0
0	X	0	1

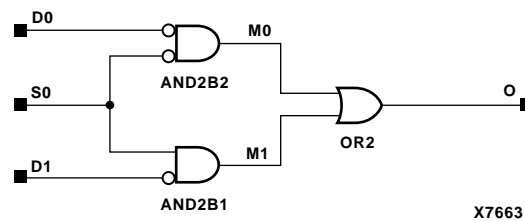

**M2\_1B2 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

#### Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of m2_1b2 is
begin
process (D0,D1,S0)
begin
    case S0 is
        when '0' => O <= not D0;
        when '1' => O <= not D1;
        when others => NULL;
    end case;
end process;
end Behavioral;
```

## Verilog Inference Code

```
always @(D0 or D1 or S0)
begin
    case (S0)
        0 : O <= !D0;
        1 : O <= !D1;
    endcase
end
```








## M2\_1E

### 2-to-1 Multiplexer with Enable


#### Architectures Supported

M2_1E	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No



M2\_1E is a 2-to-1 multiplexer with enable. When the enable input (E) is High, the M2\_1E chooses one data bit from two sources (D1 or D0) under the control of select input (S0). When Low, S0 selects D0 and when High, S0 selects D1. When E is Low, the output is Low.

Inputs				Outputs
E	S0	D1	D0	O
0	X	X	X	0
1	0	X	1	1
1	0	X	0	0
1	1	1	X	1
1	1	0	X	0

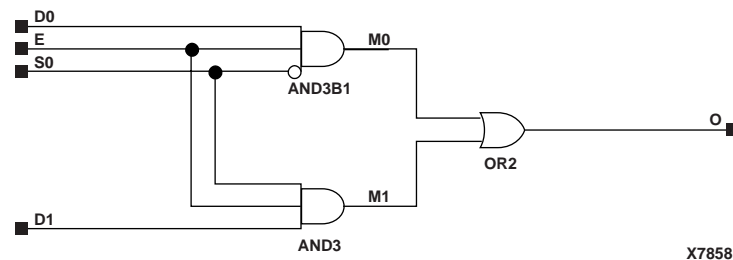

**M2\_1E Implementation** XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X

#### Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of m2_1e is

begin

process (D0,D1,E,S0)
begin
    if (E='0') then
        O <= '0';
    else
        case S0 is
            when '0' => O <= D0;
            when '1' => O <= D1;
            when others => NULL;
        end case;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code

```
begin
    if (!E)
        O <= 0;
    else
        begin
            case (S0)
                0 : O <= D0;
                1 : O <= D1;
            endcase
        end
    end
end
```






## M4\_1E

### 4-to-1 Multiplexer with Enable


#### Architectures Supported

M4_1E	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

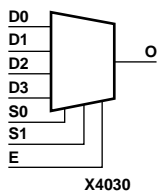


M4\_1E is an 4-to-1 multiplexer with enable. When the enable input (E) is High, the M4\_1E multiplexer chooses one data bit from four sources (D3, D2, D1, or D0) under the control of the select inputs (S1 – S0). The output (O) reflects the state of the selected input as shown in the truth table. When E is Low, the output is Low.

Inputs							Outputs
E	S1	S0	D0	D1	D2	D3	O
0	X	X	X	X	X	X	0
1	0	0	D0	X	X	X	D0
1	0	1	X	D1	X	X	D1
1	1	0	X	X	D2	X	D2
1	1	1	X	X	X	D3	D3

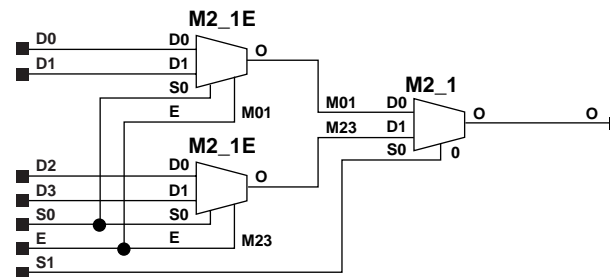

X7859

M4\_1E Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

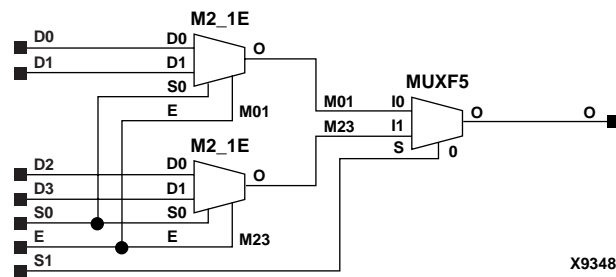

M4\_1E Implementation Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X

### Usage

For HDL, this design element is inferred rather than instantiated.

### VHDL Inference Code

```
architecture Behavioral of m4_1e is
begin
process (D,E,S)
begin
    if (E='0') then
        O <= '0';
    else
        case S is
            when "00" => O <= D(0);
            when "01" => O <= D(1);
            when "10" => O <= D(2);
            when "11" => O <= D(3);
            when others => NULL;
        end case;
    end if;
end process;

end Behavioral;
```

### Verilog Inference Code

```
always @(D or E or S)
begin
    if (!E)
        O <= 0;
    else
        begin
            case (S)
                0 : O <= D[0];
                1 : O <= D[1];
                2 : O <= D[2];
                3 : O <= D[3];
            endcase
        end
end
end
```








## M8\_1E

### 8-to-1 Multiplexer with Enable

#### Architectures Supported


M8_1E	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

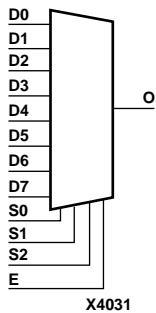

M8\_1E is an 8-to-1 multiplexer with enable. When the enable input (E) is High, the M8\_1E multiplexer chooses one data bit from eight sources (D7 – D0) under the control of the select inputs (S2 – S0). The output (O) reflects the state of the selected input as shown in the truth table. When E is Low, the output is Low.


Inputs					Outputs
E	S2	S1	S0	D7 – D0	O
0	X	X	X	X	0
1	0	0	0	D0	D0
1	0	0	1	D1	D1
1	0	1	0	D2	D2
1	0	1	1	D3	D3
1	1	0	0	D4	D4
1	1	0	1	D5	D5
1	1	1	0	D6	D6
1	1	1	1	D7	D7

Dn represents signal on the Dn input; all other data inputs are don't-cares (X).

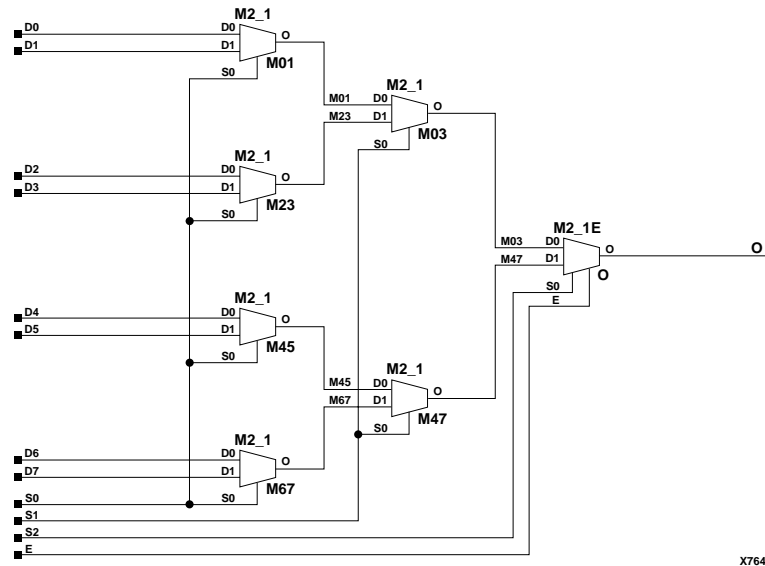

X7640

M8\_1E Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

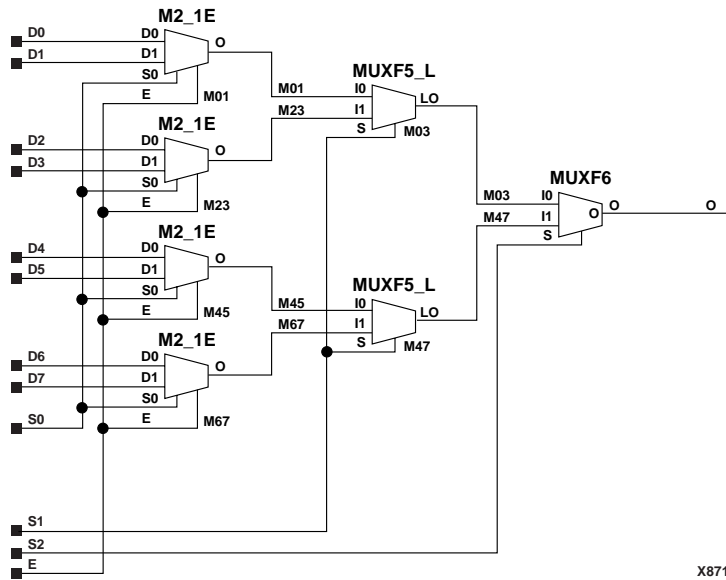

X8716

M8\_1E Implementation Spartan-II, Spartan-II E, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X

### Usage

For HDL, this design element is inferred rather than instantiated.

### VHDL Inference Code

```
architecture Behavioral of m8_1e is
begin
process (D,E,S)
```

```
begin
    if (E='0') then
        O <= '0';
    else
        case S is
            when "000" => O <= D(0);
            when "001" => O <= D(1);
            when "010" => O <= D(2);
            when "011" => O <= D(3);
            when "100" => O <= D(4);
            when "101" => O <= D(5);
            when "110" => O <= D(6);
            when "111" => O <= D(7);
            when others => NULL;
        end case;
    end if;
end process;

end Behavioral;
```

### Verilog Inference Code

```
always @(D or E or S)
begin
    if (!E)
        O <= 0;
    else
        begin
            case (S)
                0 : O <= D[0];
                1 : O <= D[1];
                2 : O <= D[2];
                3 : O <= D[3];
                4 : O <= D[4];
                5 : O <= D[5];
                6 : O <= D[6];
                7 : O <= D[7];
            endcase
        end
    end
end
```




## M16\_1E

### 16-to-1 Multiplexer with Enable

#### Architectures Supported

M16_1E	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

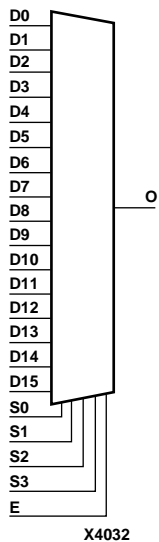

M16\_1E is a 16-to-1 multiplexer with enable. When the enable input (E) is High, the M16\_1E multiplexer chooses one data bit from 16 sources (D15 – D0) under the control of the select inputs (S3 – S0). The output (O) reflects the state of the selected input as shown in the truth table. When E is Low, the output is Low.

Inputs						Outputs
E	S3	S2	S1	S0	D15 – D0	O
0	X	X	X	X	X	0
1	0	0	0	0	D0	D0
1	0	0	0	1	D1	D1
1	0	0	1	0	D2	D2
1	0	0	1	1	D3	D3
.	.	.	.	.	.	.
.	.	.	.	.	.	.
.	.	.	.	.	.	.
1	1	1	0	0	D12	D12
1	1	1	0	1	D13	D13
1	1	1	1	0	D14	D14
1	1	1	1	1	D15	D15

Dn represents signal on the Dn input; all other data inputs are don't-cares (X).

#### Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of m16_1e is
begin
process (D,E,S)
begin
    if (E='0') then
        O <= '0';
    else
        case S is
            when "0000" => O <= D(0);
            when "0001" => O <= D(1);
            when "0010" => O <= D(2);
            when "0011" => O <= D(3);
            when "0100" => O <= D(4);
            when "0101" => O <= D(5);
            when "0110" => O <= D(6);
            when "0111" => O <= D(7);
            when "1000" => O <= D(8);
            when "1001" => O <= D(9);
            when "1010" => O <= D(10);
            when "1011" => O <= D(11);
            when "1100" => O <= D(12);
            when "1101" => O <= D(13);
            when "1110" => O <= D(14);
            when "1111" => O <= D(15);
            when others => NULL;
        end case;
    end if;
end process;
end Behavioral;
```

## Verilog Inference Code

```
always @(D or E or S)
begin
    if (!E)
        O <= 0;
    else
    begin
        case (S)
            0 : O <= D[0];
            1 : O <= D[1];
            2 : O <= D[2];
            3 : O <= D[3];
            4 : O <= D[4];
            5 : O <= D[5];
            6 : O <= D[6];
            7 : O <= D[7];
            8 : O <= D[8];
            9 : O <= D[9];
            10 : O <= D[10];
            11 : O <= D[11];
            12 : O <= D[12];
            13 : O <= D[13];
            14 : O <= D[14];
            15 : O <= D[15];
        endcase
    end
end
```






# MULT\_AND

## Fast Multiplier AND


### Architectures Supported

MULT_AND	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



MULT\_AND is an AND component used exclusively for building fast and smaller multipliers. The I1 and I0 inputs *must* be connected to the I1 and I0 inputs of the associated LUT. The LO output *must* be connected to the DI input of the associated MUXCY, MUXCY\_D, or MUXCY\_L.

Inputs		Output
I1	I0	LO
0	0	0
0	1	0
1	0	0
1	1	1

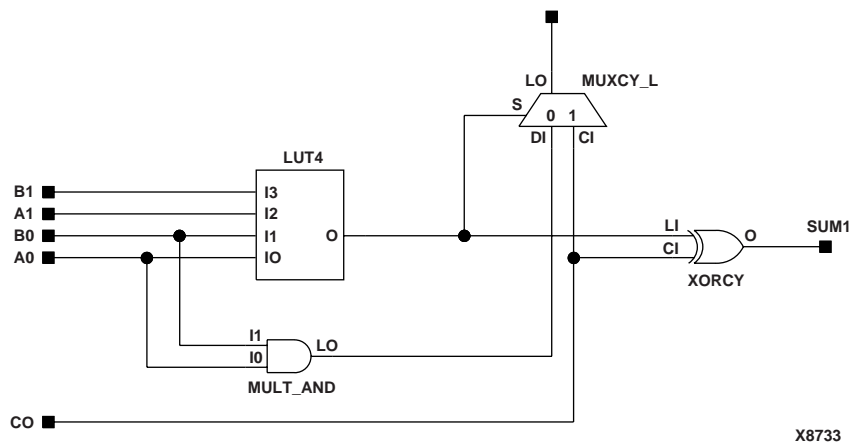

### Example Multiplier Using MULT\_AND

## Usage

For HDL, this design element is instantiated rather than inferred.

## VHDL Instantiation Template

```
-- Component Declaration for MULT_AND should be placed
-- after architecture statement but before begin keyword

component MULT_AND
  port (LO : out STD_ULOGIC;
        IO : in  STD_ULOGIC;
        I1 : in  STD_ULOGIC);
end component;

-- Component Attribute specification for MULT_AND
-- should be placed after architecture declaration but
-- before the begin keyword

-- Attributes should be placed here

-- Component Instantiation for MULT_AND should be placed
-- in architecture after the begin keyword

MULT_AND_INSTANCE_NAME : MULT_AND
  port map (LO => user_LO,
           IO => user_IO,
           I1 => user_I1);
```

## Verilog Instantiation Template

```
MULT_AND MULT_AND_instance_name (.LO (user_LO),
                                  .IO (user_IO),
                                  .I1 (user_I1));
```

## Commonly Used Constraints

U\_SET

MULT\_STYLE




## MULT18X18

### 18 x 18 Signed Multiplier

#### Architectures Supported

MULT18, MULT18X	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

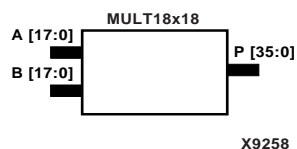

MULT18X18 is a combinational signed 18-bit by 18-bit multiplier. The value represented in the 18-bit input A is multiplied by the value represented in the 18-bit input B. Output P is the 36-bit product of A and B.

A, B, and P are two's complement.

Inputs		Output
A	B	P
A	B	A * B

XST, Synplify, Exemplar and Synopsys all have the ability to infer the MULT18X18.

#### Usage

For HDL, this design element can only be instantiated.

#### VHDL Instantiation Template

```
-- Component Declaration for MULT18X18 should be placed
-- after architecture statement but before begin keyword

component MULT18X18
  port (P : out STD_LOGIC_VECTOR (35 downto 0);
        A : in STD_LOGIC_VECTOR (17 downto 0);
        B : in STD_LOGIC_VECTOR (17 downto 0));
end component;

-- Component Attribute specification for MULT18X18
-- should be placed after architecture declaration but
-- before the begin keyword

-- Attributes should be placed here

-- Component Instantiation for MULT18X18 should be placed
-- in architecture after the begin keyword
```

```
MULT18X18_INSTANCE_NAME : MULT18X18
  port map (P => user_P,
            A => user_A,
            B => user_B);
```

### Verilog Instantiation Template

```
MULT18X18 MULT18X18_instance_name (.P (user_P),
                                   .A (user_A),
                                   .B (user_B));
```

### Commonly Used Constraints

MULT\_STYLE








## MULT18X18S

### 18 x 18 Signed Multiplier -- Registered Version

#### Architectures Supported

MULT18X, MULT18S	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



MULT18X18S is the registered version of the 18 x 18 signed multiplier with output P and inputs A, B, C, CE, and R. The registers are initialized to 0 after the GSR pulse.

The value represented in the 18-bit input A is multiplied by the value represented in the 18-bit input B. Output P is the 36-bit product of A and B.

A, B, and P are two's complement.

Inputs					Output
C	CE	Am	Bn	R	P
↑	X	X	X	1	0
↑	1	Am	Bn	0	A * B
X	0	X	X	0	No Chg

#### Usage

For HDL, this design element is instantiated rather than inferred.

#### VHDL Instantiation Template

```
-- Component Declaration for MULT18X18S should be placed
-- after architecture statement but before begin keyword
```

```
component MULT18X18S
  port (P : out STD_LOGIC_VECTOR (35 downto 0);
        A : in  STD_LOGIC_VECTOR (17 downto 0);
        B : in  STD_LOGIC_VECTOR (17 downto 0);
        C : in  STD_ULOGIC;
        CE : in  STD_ULOGIC;
        R : in  STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for MULT18X18S
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Attributes should be placed here

-- Component Instantiation for MULT18X18S should be placed
-- in architecture after the begin keyword
```

```
MULT18X18S_INSTANCE_NAME : MULT18X18S
  port map (P => user_P,
            A => user_A,
            B => user_B,
            CE => user_CE,
            C => user_C,
            R => user_R);
```

### Verilog Instantiation Template

```
MULT18X18S MULT18X18S_instance_name (.P (user_P),
                                       .A (user_A),
                                       .B (user_B),
                                       .C (user_C),
                                       .CE (user_CE),
                                       .R (user_R));
```

### Commonly Used Constraints


```
HU_SET
MULT_STYLE
```

## MUXCY

### 2-to-1 Multiplexer for Carry Logic with General Output

#### Architectures Supported

MUXCY	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

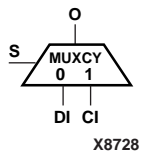

MUXCY is used to implement a 1-bit high-speed carry propagate function. One such function can be implemented per logic cell (LC), for a total of:

- 2-bits per CLB for Virtex, Virtex-E, Spartan-II, and Spartan-IIE
- 4-bits per configurable logic block (CLB) for Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X

The direct input (DI) of an LC is connected to the DI input of the MUXCY. The carry in (CI) input of an LC is connected to the CI input of the MUXCY. The select input (S) of the MUXCY is driven by the output of the lookup table (LUT) and configured as a MUX function. The carry out (O) of the MUXCY reflects the state of the selected input and implements the carry out function of each LC. When Low, S selects DI; when High, S selects CI.

The variants, “MUXCY\_D” and “MUXCY\_L” provide additional types of outputs that can be used by different timing models for more accurate pre-layout timing estimation.

Inputs			Outputs
S	DI	CI	O
0	1	X	1
0	0	X	0
1	X	1	1
1	X	0	0

#### Usage

For HDL, this design element can only be instantiated.

## VHDL Instantiation Template

```
-- Component Declaration for MUXCY should be placed
-- after architecture statement but before begin keyword

component MUXCY
  port (O : out STD_ULOGIC;
        CI : in STD_ULOGIC;
        DI : in STD_ULOGIC;
        S : in STD_ULOGIC);
end component;

-- Component Attribute specification for MUXCY
-- should be placed after architecture declaration but
-- before the begin keyword

-- Attributes should be placed here

-- Component Instantiation for MUXCY should be placed
-- in architecture after the begin keyword

MUXCY_INSTANCE_NAME : MUXCY
  port map (O => user_O,
           CI => user_CI,
           DI => user_DI,
           S => user_S);
```

## Verilog Instantiation Template

```
MUXCY MUXCY_instance_name (.O (user_O),
                           .CI (user_CI),
                           .DI (user_DI),
                           .S (user_S));
```

## Commonly Used Constraints

U\_SET






## MUXCY\_D

### 2-to-1 Multiplexer for Carry Logic with Dual Output

#### Architectures Supported

MUXCY_D	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

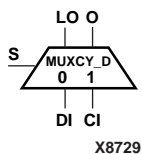

MUXCY\_D is used to implement a 1-bit high-speed carry propagate function. One such function can be implemented per logic cell (LC), for a total of 4-bits per configurable logic block (CLB). The direct input (DI) of an LC is connected to the DI input of the MUXCY\_D. The carry in (CI) input of an LC is connected to the CI input of the MUXCY\_D. The select input (S) of the MUX is driven by the output of the lookup table (LUT) and configured as an XOR function. The carry out (O and LO) of the MUXCY\_D reflects the state of the selected input and implements the carry out function of each LC. When Low, S selects DI; when High, S selects CI.

Outputs O and LO are functionally identical. The O output is a general interconnect.

See also “MUXCY” and “MUXCY\_L”

Inputs			Outputs	
S	DI	CI	O	LO
0	1	X	1	1
0	0	X	0	0
1	X	1	1	1
1	X	0	0	0

#### Usage

For HDL, this design element can only be instantiated.

## VHDL Instantiation Template

```
-- Component Declaration for MUXCY_D should be placed
-- after architecture statement but before begin keyword

component MUXCY_D
  port (LO : out STD_ULOGIC;
        O  : out STD_ULOGIC;
        CI : in  STD_ULOGIC;
        DI : in  STD_ULOGIC;
        S  : in  STD_ULOGIC);
end component;

-- Component Attribute specification for MUXCY_D
-- should be placed after architecture declaration but
-- before the begin keyword

-- Attributes should be placed here

-- Component Instantiation for MUXCY_D should be placed
-- in architecture after the begin keyword

MUXCY_D_INSTANCE_NAME : MUXCY_D
  port map (LO => user_LO,
           O  => user_O,
           CI => user_CI,
           DI => user_DI,
           S  => user_S);
```

## Verilog Instantiation Template

```
MUXCY_D MUXCY_D_instance_name (.LO (user_LO),
                               .O (user_O),
                               .CI (user_CI),
                               .DI (user_DI),
                               .S (user_S));
```

## Commonly Used Constraints

U\_SET








## MUXCY\_L

### 2-to-1 Multiplexer for Carry Logic with Local Output

#### Architectures Supported

MUXCY_L	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

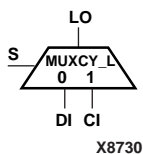

MUXCY\_L is used to implement a 1-bit high-speed carry propagate function. One such function can be implemented per logic cell (LC), for a total of 4-bits per configurable logic block (CLB). The direct input (DI) of an LC is connected to the DI input of the MUXCY\_L. The carry in (CI) input of an LC is connected to the CI input of the MUXCY\_L. The select input (S) of the MUXCY\_L is driven by the output of the lookup table (LUT) and configured as an XOR function. The carry out (LO) of the MUXCY\_L reflects the state of the selected input and implements the carry out function of each LC. When Low, S selects DI; when High, S selects CI.

See also “MUXCY” and “MUXCY\_D”

Inputs			Outputs
S	DI	CI	LO
0	1	X	1
0	0	X	0
1	X	1	1
1	X	0	0

#### Usage

For HDL, this design element can only be instantiated.

## VHDL Instantiation Template

```
-- Component Declaration for MUXCY_L should be placed
-- after architecture statement but before begin keyword

component MUXCY_L
  port (LO : out STD_ULOGIC;
        CI : in  STD_ULOGIC;
        DI : in  STD_ULOGIC;
        S  : in  STD_ULOGIC);
end component;

-- Component Attribute specification for MUXCY_L
-- should be placed after architecture declaration but
-- before the begin keyword

-- Attributes should be placed here

-- Component Instantiation for MUXCY_L should be placed
-- in architecture after the begin keyword

MUXCY_L_INSTANCE_NAME : MUXCY_L
  port map (LO => user_O,
           CI => user_CI,
           DI => user_DI,
           S  => user_S);
```

## Verilog Instantiation Template

```
MUXCY_L MUXCY_L_instance_name (.LO (user_LO),
                               .CI (user_CI),
                               .DI (user_DI),
                               .S (user_S));
```

## Commonly Used Constraints

U\_SET






## MUXF5

### 2-to-1 Lookup Table Multiplexer with General Output

#### Architectures Supported

MUXF5	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



MUXF5 provides a multiplexer function in a CLB slice for creating a function-of-5 lookup table or a 4-to-1 multiplexer in combination with the associated lookup tables. The local outputs (LO) from the two lookup tables are connected to the I0 and I1 inputs of the MUXF5. The S input is driven from any internal net. When Low, S selects I0. When High, S selects I1.

The variants, “MUXF5\_D” and “MUXF5\_L”, provide additional types of outputs that can be used by different timing models for more accurate pre-layout timing estimation.

Inputs			Outputs
S	I0	I1	O
0	1	X	1
0	0	X	0
1	X	1	1
1	X	0	0

#### Usage

For HDL, this design element can only be instantiated.

#### VHDL Instantiation Template

```
-- Component Declaration for MUXF5 should be placed
-- after architecture statement but before begin keyword

component MUXF5
  port (O : out STD_ULOGIC;
        I0 : in STD_ULOGIC;
        I1 : in STD_ULOGIC;
        S : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for MUXF5
-- should be placed after architecture declaration but
-- before the begin keyword

-- Attributes should be placed here

-- Component Instantiation for MUXF5 should be placed
-- in architecture after the begin keyword

MUXF5_INSTANCE_NAME : MUXF5
    port map (O => user_O,
              I0 => user_I0,
              I1 => user_I1,
              S => user_S);
```

### Verilog Instantiation Template

```
MUXF5 MUXF5_instance_name (.O (user_O),
                           .I0 (user_I0),
                           .I1 (user_I1),
                           .S (user_S));
```




## MUXF5\_D

### 2-to-1 Lookup Table Multiplexer with Dual Output

#### Architectures Supported

MUXF5_D	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

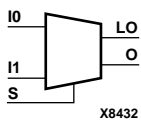

MUXF5\_D provides a multiplexer function in a CLB slice for creating a function-of-5 lookup table or a 4-to-1 multiplexer in combination with the associated lookup tables. The local outputs (LO) from the two lookup tables are connected to the I0 and I1 inputs of the MUXF5. The S input is driven from any internal net. When Low, S selects I0. When High, S selects I1.

Outputs O and LO are functionally identical. The O output is a general interconnect. The LO output is used to connect to other inputs within the same CLB slice.

See also [“MUXF5”](#) and [“MUXF5\\_L”](#)

Inputs			Outputs	
S	I0	I1	O	LO
0	1	X	1	1
0	0	X	0	0
1	X	1	1	1
1	X	0	0	0

#### Usage

For HDL, this design element can only be instantiated.

#### VHDL Instantiation Template

```
-- Component Declaration for MUXF5_D should be placed
-- after architecture statement but before begin keyword
```

```
component MUXF5_D
  port (LO : out STD_ULOGIC;
        O  : out STD_ULOGIC;
        I0 : in  STD_ULOGIC;
        I1 : in  STD_ULOGIC;
        S  : in  STD_ULOGIC);
```

```
end component ;

-- Component Attribute specification for MUXF5_D
-- should be placed after architecture declaration but
-- before the begin keyword

-- Attributes should be placed here

-- Component Instantiation for MUXF5_D should be placed
-- in architecture after the begin keyword

MUXF5_D_INSTANCE_NAME : MUXF5_D
    port map (LO => user_LO,
              O  => user_O,
              IO => user_IO,
              I1 => user_I1,
              S  => user_S);
```

### Verilog Instantiation Template


```
MUXF5_D MUXF5_D_instance_name (.LO (user_LO),
                                .O (user_O),
                                .IO (user_IO),
                                .I1 (user_I1),
                                .S (user_S));
```

## MUXF5\_L

### 2-to-1 Lookup Table Multiplexer with Local Output

#### Architectures Supported

MUXF5_L	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



MUXF5\_L provides a multiplexer function in a CLB slice for creating a function-of-5 lookup table or a 4-to-1 multiplexer in combination with the associated lookup tables. The local outputs (LO) from the two lookup tables are connected to the I0 and I1 inputs of the MUXF5. The S input is driven from any internal net. When Low, S selects I0. When High, S selects I1.

The LO output is used to connect to other inputs within the same CLB slice.

See also “MUXF5” and “MUXF5\_D”.

Inputs			Output
S	I0	I1	LO
0	1	X	1
0	0	X	0
1	X	1	1
1	X	0	0

#### Usage

For HDL, this design element can only be instantiated.

#### VHDL Instantiation Template

```
-- Component Declaration for MUXF5_L should be placed
-- after architecture statement but before begin keyword
```

```
component MUXF5_L
  port (LO : out STD_ULOGIC;
        I0 : in  STD_ULOGIC;
        I1 : in  STD_ULOGIC;
        S  : in  STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for MUXF5_L
-- should be placed after architecture declaration but
-- before the begin keyword

-- Attributes should be placed here

-- Component Instantiation for MUXF5_L should be placed
-- in architecture after the begin keyword

MUXF5_L_INSTANCE_NAME : MUXF5_L
    port map (LO => user_LO,
              I0 => user_I0,
              I1 => user_I1,
              S  => user_S);
```

### Verilog Instantiation Template


```
MUXF5_L MUXF5_L_instance_name (.LO (user_LO),
                               .I0 (user_I0),
                               .I1 (user_I1),
                               .S (user_S));
```

## MUXF6

### 2-to-1 Lookup Table Multiplexer with General Output

#### Architectures Supported

MUXF6	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



MUXF6 provides a multiplexer function in a full Virtex, Virtex-E, Spartan-II, or Spartan-IIE CLB, or one half of a Spartan-3, Virtex-II, Virtex-II Pro, or Virtex-II Pro X CLB (two slices) for creating a function-of-6 lookup table or an 8-to-1 multiplexer in combination with the associated four lookup tables and two MUXF5s. The local outputs (LO) from the two MUXF5s in the CLB are connected to the I0 and I1 inputs of the MUXF6. The S input is driven from any internal net. When Low, S selects I0. When High, S selects I1.

The variants, “MUXF6\_D” and “MUXF6\_L”, provide additional types of outputs that can be used by different timing models for more accurate pre-layout timing estimation.

Inputs			Outputs
S	I0	I1	O
0	1	X	1
0	0	X	0
1	X	1	1
1	X	0	0

#### Usage

For HDL, this design element can only be instantiated.

#### VHDL Instantiation Template

```
-- Component Declaration for MUXF6 should be placed
-- after architecture statement but before begin keyword

component MUXF6
  port (O : out STD_ULOGIC;
        I0 : in STD_ULOGIC;
        I1 : in STD_ULOGIC;
```

```
        S : in STD_ULOGIC);
end component;

-- Component Attribute specification for MUXF6
-- should be placed after architecture declaration but
-- before the begin keyword

-- Attributes should be placed here

-- Component Instantiation for MUXF6 should be placed
-- in architecture after the begin keyword

MUXF6_INSTANCE_NAME : MUXF6
    port map (O => user_O,
              I0 => user_I0,
              I1 => user_I1,
              S => user_S);
```

### Verilog Instantiation Template


```
MUXF6 MUXF6_instance_name (.O (user_O),
                           .I0 (user_I0),
                           .I1 (user_I1),
                           .S (user_S));
```

## MUXF6\_D

### 2-to-1 Lookup Table Multiplexer with Dual Output

#### Architectures Supported

MUXF6_D	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



MUXF6\_D provides a multiplexer function in a full Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X, Spartan-II, Spartan-IIE, or Spartan-3 CLB, or one half of a Spartan-3, Virtex-II, Virtex-II Pro, or Virtex-II Pro X CLB (two slices) for creating a function-of-6 lookup table or an 8-to-1 multiplexer in combination with the associated four lookup tables and two MUXF5s. The local outputs (LO) from the two MUXF5s in the CLB are connected to the I0 and I1 inputs of the MUXF6. The S input is driven from any internal net. When Low, S selects I0. When High, S selects I1.

Outputs O and LO are functionally identical. The O output is a general interconnect. The LO output is used to connect to other inputs within the same CLB slice.

See also “MUXF6” and “MUXF6\_L”

Inputs			Outputs	
S	I0	I1	O	LO
0	1	X	1	1
0	0	X	0	0
1	X	1	1	1
1	X	0	0	0

#### Usage

For HDL, this design element can only be instantiated.

#### VHDL Instantiation Template

```
-- Component Declaration for MUXF6_D should be placed
-- after architecture statement but before begin keyword
```

```
component MUXF6_D
  port (LO : out STD_ULOGIC;
        O : out STD_ULOGIC;
        I0 : in STD_ULOGIC;
```

```
        I1 : in STD_ULOGIC;
        S : in STD_ULOGIC);
end component;

-- Component Attribute specification for MUXF6_D
-- should be placed after architecture declaration but
-- before the begin keyword

-- Attributes should be placed here

-- Component Instantiation for MUXF6_D should be placed
-- in architecture after the begin keyword

MUXF6_D_INSTANCE_NAME : MUXF6_D
    port map (LO => user_LO,
             O => user_O,
             IO => user_IO,
             I1 => user_I1,
             S => user_S);
```

### Verilog Instantiation Template

```
MUXF6_D MUXF6_D_instance_name (.LO (user_LO),
                               .O (user_O),
                               .IO (user_IO),
                               .I1 (user_I1),
                               .S (user_S));
```




## MUXF6\_L

### 2-to-1 Lookup Table Multiplexer with Local Output

#### Architectures Supported

MUXF6_L	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



MUXF6\_L provides a multiplexer function in a full Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X, Spartan-II, Spartan-II E, or Spartan-3 CLB, or one half of a Spartan-3, Virtex-II, Virtex-II Pro, or Virtex-II Pro X CLB (two slices) for creating a function-of-6 lookup table or an 8-to-1 multiplexer in combination with the associated four lookup tables and two MUXF5s. The local outputs (LO) from the two MUXF5s in the CLB are connected to the I0 and I1 inputs of the MUXF6. The S input is driven from any internal net. When Low, S selects I0. When High, S selects I1.

The LO output is used to connect to other inputs within the same CLB slice.

See also “MUXF6” and “MUXF6\_D”.

Inputs			Output
S	I0	I1	LO
0	1	X	1
0	0	X	0
1	X	1	1
1	X	0	0

#### Usage

For HDL, this design element can only be instantiated.

#### VHDL Instantiation Template

```
-- Component Declaration for MUXF6_L should be placed
-- after architecture statement but before begin keyword
```

```
component MUXF6_L
  port (LO : out STD_ULOGIC;
        I0 : in  STD_ULOGIC;
        I1 : in  STD_ULOGIC;
        S  : in  STD_ULOGIC);
```

```
end component ;

-- Component Attribute specification for MUXF6_L
-- should be placed after architecture declaration but
-- before the begin keyword

-- Attributes should be placed here

-- Component Instantiation for MUXF6_L should be placed
-- in architecture after the begin keyword

MUXF6_L_INSTANCE_NAME : MUXF6_L
    port map (LO => user_LO,
              IO => user_IO,
              I1 => user_I1,
              S => user_S);
```

### Verilog Instantiation Template


```
MUXF6_L MUXF6_L_instance_name (.LO (user_LO),
                                .IO (user_IO),
                                .I1 (user_I1),
                                .S (user_S));
```

## MUXF7

### 2-to-1 Lookup Table Multiplexer with General Output

#### Architectures Supported

MUXF7	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



MUXF7 provides a multiplexer function in a full Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X CLB for creating a function-of-7 lookup table or a 16-to-1 multiplexer in combination with the associated lookup tables. Local outputs (LO) of MUXF6 are connected to the I0 and I1 inputs of the MUXF7. The S input is driven from any internal net. When Low, S selects I0. When High, S selects I1.

The variants, “MUXF7\_D” and “MUXF7\_L”, provide additional types of outputs that can be used by different timing models for more accurate pre-layout timing estimation.

Inputs			Outputs
S	I0	I1	O
0	I0	X	I0
1	X	I1	I1
X	0	0	0
X	1	1	1

#### Usage

For HDL, this design element can only be instantiated.

#### VHDL Instantiation Template

```
-- Component Declaration for MUXF7 should be placed
-- after architecture statement but before begin keyword

component MUXF7
  port (O : out STD_ULOGIC;
        I0 : in STD_ULOGIC;
        I1 : in STD_ULOGIC;
        S : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for MUXF7
-- should be placed after architecture declaration but
-- before the begin keyword

-- Attributes should be placed here

-- Component Instantiation for MUXF7 should be placed
-- in architecture after the begin keyword

MUXF7_INSTANCE_NAME : MUXF7
    port map (O => user_O,
              I0 => user_I0,
              I1 => user_I1,
              S => user_S);
```

### Verilog Instantiation Template


```
MUXF7 MUXF7_instance_name (.O (user_O),
                           .I0 (user_I0),
                           .I1 (user_I1),
                           .S (user_S));
```

## MUXF7\_D

### 2-to-1 Lookup Table Multiplexer with Dual Output

#### Architectures Supported

MUXF7_D	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

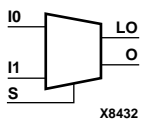

MUXF7\_D provides a multiplexer function in one full Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X CLB for creating a function-of-7 lookup table or a 16-to-1 multiplexer in combination with the associated lookup tables. Local outputs (LO) of MUXF6 are connected to the I0 and I1 inputs of the MUXF7. The S input is driven from any internal net. When Low, S selects I0. When High, S selects I1.

Outputs O and LO are functionally identical. The O output is a general interconnect. The LO output is used to connect to other inputs within the same CLB slice.

See also “MUXF7” and “MUXF7\_L”.

Inputs			Outputs	
S	I0	I1	O	LO
0	I0	X	I0	I0
1	X	I1	I1	I1
X	0	0	0	0
X	1	1	1	1

#### Usage

For HDL, this design element can only be instantiated.

#### VHDL Instantiation Template

```
-- Component Declaration for MUXF7_D should be placed
-- after architecture statement but before begin keyword
```

```
component MUXF7_D
  port (LO : out STD_ULOGIC;
        O : out STD_ULOGIC;
        I0 : in STD_ULOGIC;
        I1 : in STD_ULOGIC;
        S : in STD_ULOGIC);
```

```
end component ;

-- Component Attribute specification for MUXF7_D
-- should be placed after architecture declaration but
-- before the begin keyword

-- Attributes should be placed here

-- Component Instantiation for MUXF7_D should be placed
-- in architecture after the begin keyword

MUXF7_D_INSTANCE_NAME : MUXF7_D
    port map (LO => user_LO,
              O => user_O,
              IO => user_IO,
              I1 => user_I1,
              S => user_S);
```

### Verilog Instantiation Template


```
MUXF7_D MUXF7_D_instance_name (.LO (user_LO),
                                .O (user_O),
                                .IO (user_IO),
                                .I1 (user_I1),
                                .S (user_S));
```

## MUXF7\_L

### 2-to-1 Lookup Table Multiplexer with Local Output

#### Architectures Supported

MUXF7_L	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



MUXF7\_L provides a multiplexer function in a full Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X CLB for creating a function-of-7 lookup table or a 16-to-1 multiplexer in combination with the associated lookup tables. Local outputs (LO) of MUXF6 are connected to the I0 and I1 inputs of the MUXF7. The S input is driven from any internal net. When Low, S selects I0. When High, S selects I1.

The LO output is used to connect to other inputs within the same CLB slice.

See also “MUXF7” and “MUXF7\_D”.

Inputs			Output
S	I0	I1	LO
0	I0	X	I0
1	X	I1	I1
X	0	0	0
X	1	1	1

#### Usage

For HDL, this design element can only be instantiated.

#### VHDL Instantiation Template

```
-- Component Declaration for MUXF7_L should be placed
-- after architecture statement but before begin keyword
```

```
component MUXF7_L
  port (LO : out STD_ULOGIC;
        I0 : in STD_ULOGIC;
        I1 : in STD_ULOGIC;
        S : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for MUXF7_L
-- should be placed after architecture declaration but
-- before the begin keyword

-- Attributes should be placed here

-- Component Instantiation for MUXF7_L should be placed
-- in architecture after the begin keyword

MUXF7_L_INSTANCE_NAME : MUXF7_L
    port map (LO => user_LO,
              I0 => user_I0,
              I1 => user_I1,
              S => user_S);
```

### Verilog Instantiation Template

```
MUXF7_L MUXF7_L_instance_name (.LO (user_LO),
                                .I0 (user_I0),
                                .I1 (user_I1),
                                .S (user_S));
```




## MUXF8

### 2-to-1 Lookup Table Multiplexer with General Output

#### Architectures Supported

MUXF8	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

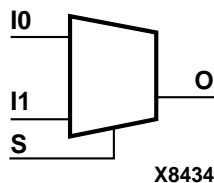

MUXF8 provides a multiplexer function in two full Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X CLBs for creating a function-of-8 lookup table or a 32-to-1 multiplexer in combination with the associated lookup tables, MUXF5s, MUXF6s, and MUXF7s. Local outputs (LO) of MUXF7 are connected to the I0 and I1 inputs of the MUXF8. The S input is driven from any internal net. When Low, S selects I0. When High, S selects I1.

Inputs			Outputs
S	I0	I1	O
0	I0	X	I0
1	X	I1	I1
X	0	0	0
X	1	1	1

#### Usage

For HDL, this design element can only be instantiated.

#### VHDL Instantiation Template

```
-- Component Declaration for MUXF8 should be placed
-- after architecture statement but before begin keyword
```

```
component MUXF8
  port (O : out STD_ULOGIC;
        I0 : in STD_ULOGIC;
        I1 : in STD_ULOGIC;
        S : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for MUXF8
-- should be placed after architecture declaration but
```

```
-- before the begin keyword

-- Attributes should be placed here

-- Component Instantiation for MUXF8 should be placed
-- in architecture after the begin keyword

MUXF8_INSTANCE_NAME : MUXF8
    port map (O => user_O,
              IO => user_IO,
              I1 => user_I1,
              S => user_S);
```

### Verilog Instantiation Template


```
MUXF8 MUXF8_instance_name (.O (user_O),
                           .IO (user_IO),
                           .I1 (user_I1),
                           .S (user_S));
```

## NAND2-9

### 2- to 9-Input NAND Gates with Inverted and Non-Inverted Inputs

#### Architectures Supported

<b>NAND2, NAND2B1, NAND2B2, NAND3, NAND3B1, NAND3B2, NAND3B3, NAND4, NAND4B1, NAND4B2, NAND4B3, NAND4B4</b>	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	Primitive
<b>NAND5, NAND5B1, NAND5B2, NAND5B3, NAND5B4, NAND5B5</b>	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	Primitive
<b>NAND6, NAND7, NAND8, NAND9</b>	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	Primitive

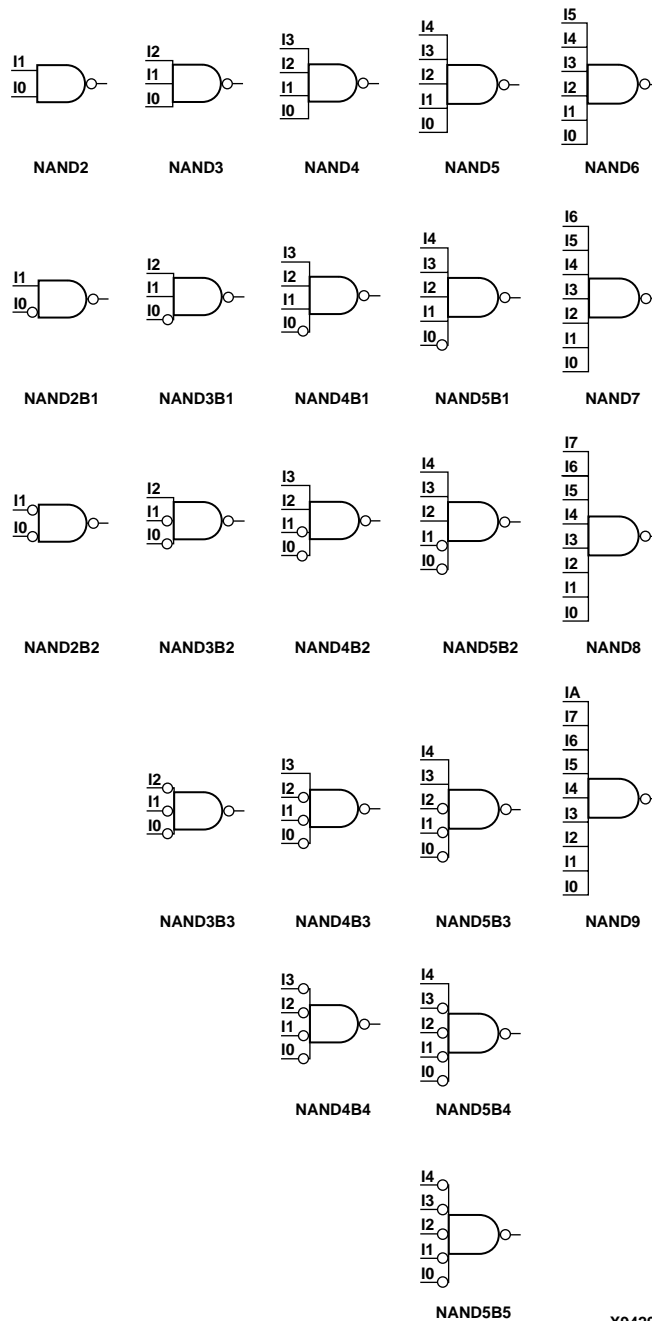


X9429


### NAND Gate Representations

NAND gates of up to five inputs are available in any combination of inverting and non-inverting inputs. NAND gates of six to nine inputs are available with only non-inverting inputs. To invert inputs, use external inverters. Since each input uses a CLB resource, replace gates with unused inputs with gates having the necessary number of inputs.

See “[NAND12, 16](#)” for information on additional NAND functions.

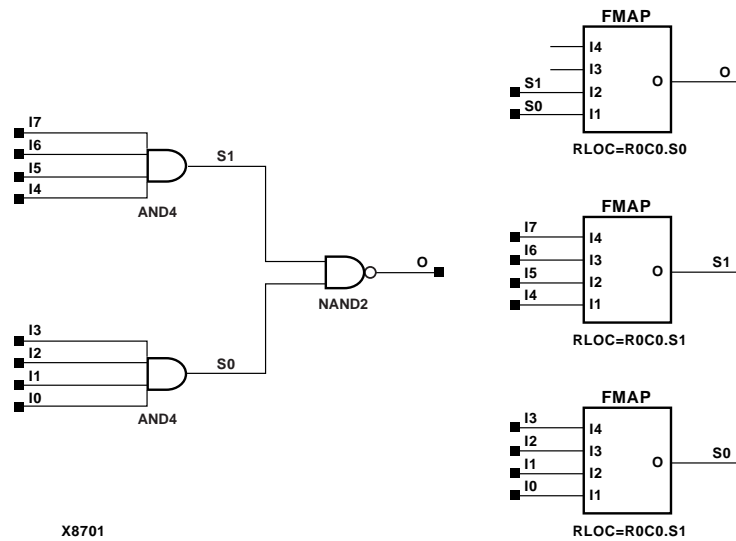

**NAND8 Implementation Spartan-II, Spartan-II E, Virtex, Virtex-E**

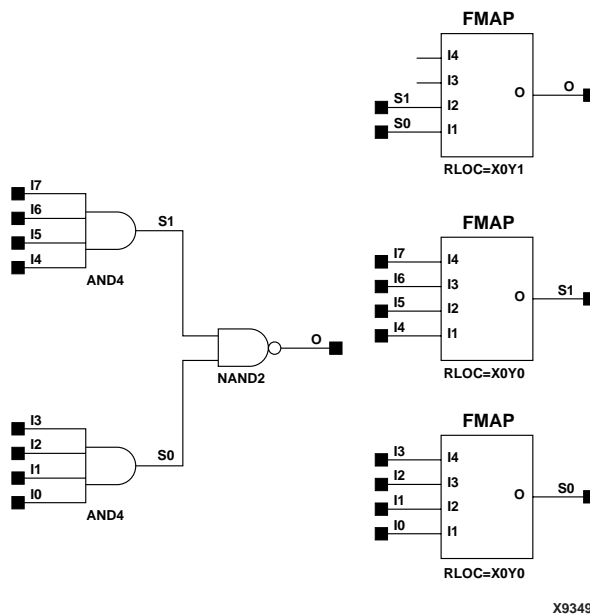

**NAND8 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

**Usage**

NAND2 through NAND5 are primitives that can be inferred or instantiated. NAND6 through NAND9 are macros which can be inferred.

## VHDL Inference Code

```
architecture Behavioral of nand6 is
begin

process (I0, I1, I2, I3, I4, I5)
begin
    O <= not (I0 and I1 and I2 and I3 and I4 and I5);
end process;

end Behavioral;
```

## Verilog Inference Code

Following is a Verilog example of how to infer a NAND6 element:

```
always @(I0 or I1 or I2 or I3 or I4 or I5)
begin
    O <= !(I0 && I1 && I2 && I3 && I4 && I5);
end
```

## VHDL Instantiation Template for NAND5

Following is the VHDL code for NAND5. To instantiate NAND2, remove I2, I3, and I4. To instantiate NAND3, remove I3 and I4, For NAND4, remove I4. NAND2B1, and NAND2B2 have the same code as NAND2. NAND3B1, 3B2, and 3B3 have the same code as NAND3 and so forth.

```
-- Component Declaration for NAND5 should be placed
-- after architecture statement but before begin keyword

component NAND5
port (O : out STD_ULOGIC;
      I0 : in STD_ULOGIC;
      I1 : in STD_ULOGIC;
      I2 : in STD_ULOGIC;
      I3 : in STD_ULOGIC;
      I4 : in STD_ULOGIC);
end component;

-- Component Attribute specification for NAND5
-- should be placed after architecture declaration but
-- before the begin keyword
-- Attributes should be placed here

-- Component Instantiation for NAND5 should be placed
-- in architecture after the begin keyword

NAND5_INSTANCE_NAME : NAND5
port map (O => user_O,
          I0 => user_I0,
          I1 => user_I1,
          I2 => user_I2,
          I3 => user_I3,
          I4 => user_I4);
```

## Verilog Instantiation Template for NAND5

```
NAND5 NAND5_instance_name (.O (user_O),  
                           .I0 (user_I0),  
                           .I1 (user_I1),  
                           .I2 (user_I2),  
                           .I3 (user_I3),  
                           .I4 (user_I4));
```

## Commonly Used Constraints

None





# NAND12, 16


## 12- and 16-Input NAND Gates with Non-Inverted Inputs

### Architectures Supported


NAND12, NAND16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

The NAND function is performed in the Configurable Logic Block (CLB) function generators for Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X. The 12- and 16-input NAND functions are available only with non-inverting inputs. To invert some or all inputs, use external inverters.


See [NAND2-9](#) for more information on NAND functions.







NAND12  
X9430




NAND16  
X9431

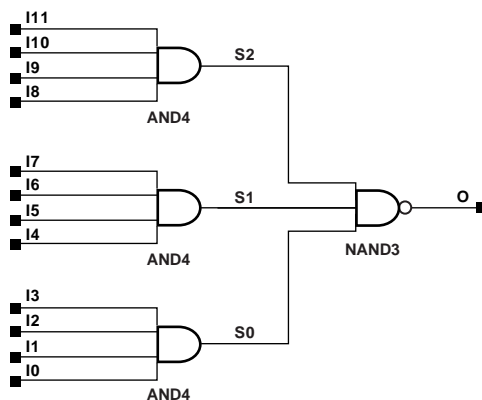


X8704

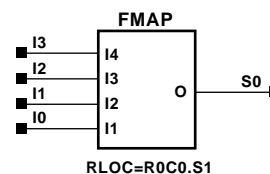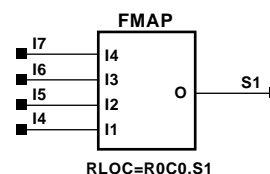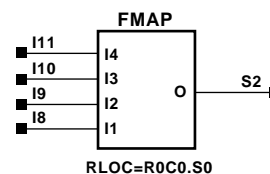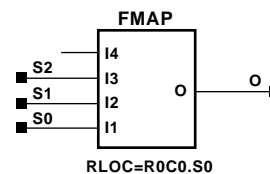


### NAND12 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

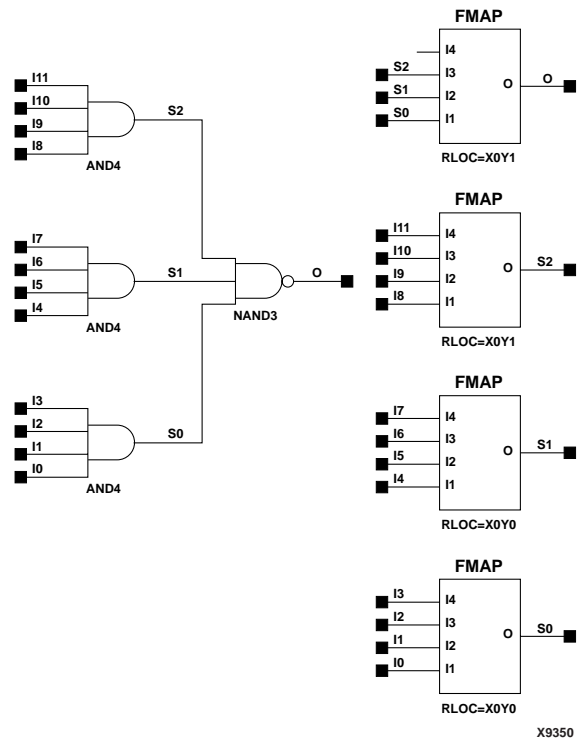

NAND12 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

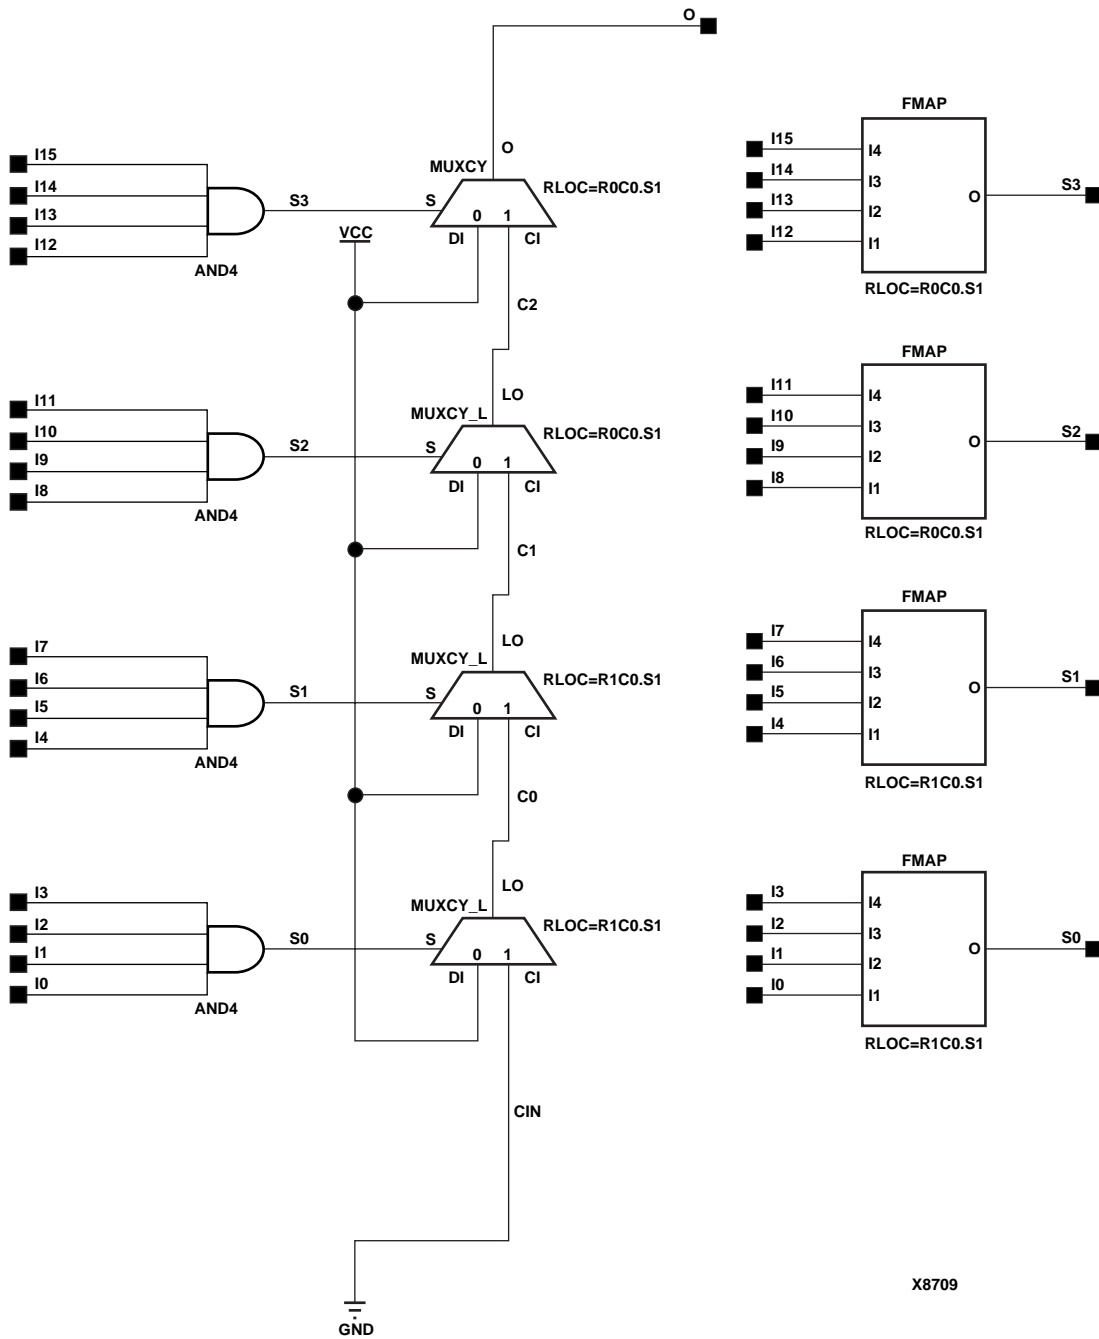

NAND16 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

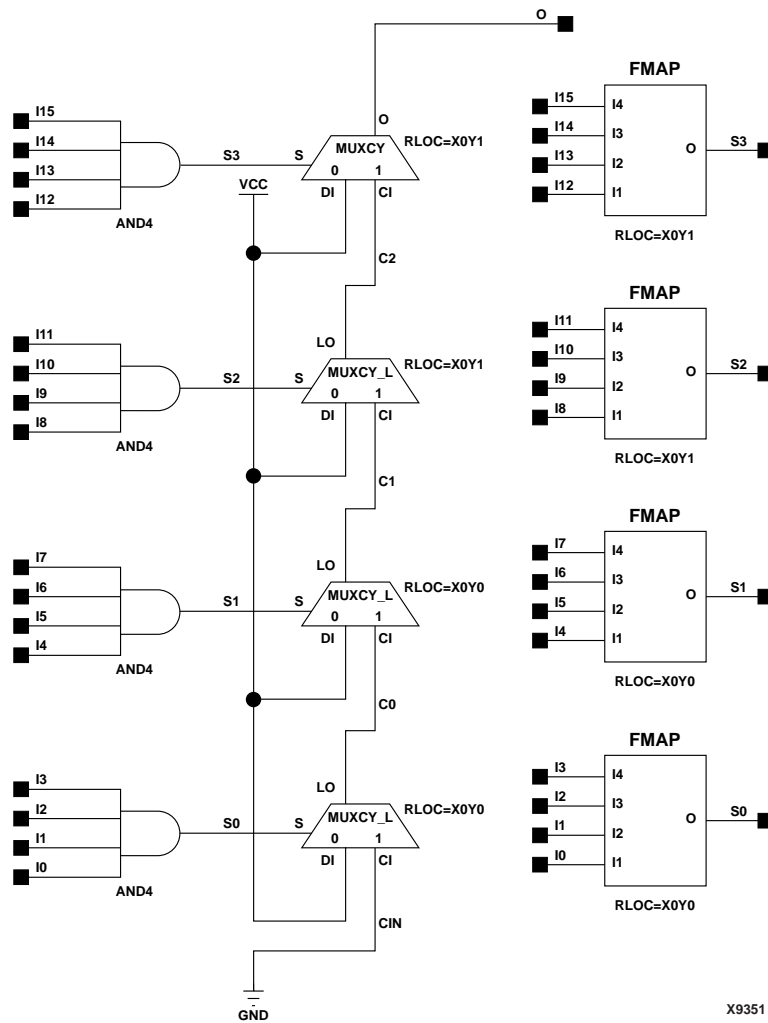

**NAND16 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

**Usage**

For HDL, NAND12 and NAND16 are macros that are inferred. See [NAND2-9](#) for more information about inferring NAND gates.

**Commonly Used Constraints**

None


## NOR2-9

### 2- to 9-Input NOR Gates with Inverted and Non-Inverted Inputs

#### Architectures Supported

<b>NOR2, NOR2B1, NOR2B2, NOR3, NOR3B1, NOR3B2, NOR3B3, NOR4, NOR4B1, NOR4B2, NOR4B3, NOR4B4</b>	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	Primitive
<b>NOR5, NOR5B1, NOR5B2, NOR5B3, NOR5B4, NOR5B5</b>	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	Primitive


<b>NOR6, NOR7, NOR8, NOR9</b>	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	Primitive

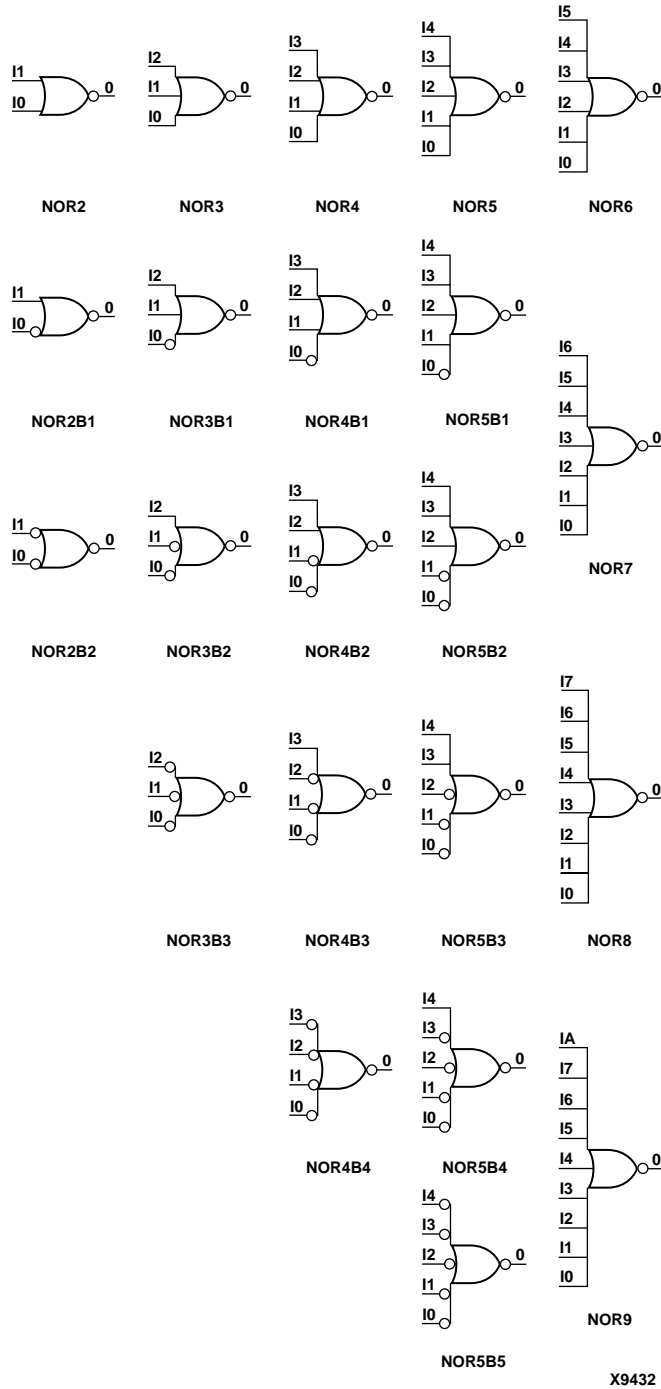


**NOR Gate Representations**

NOR gates of up to five inputs are available in any combination of inverting and non-inverting inputs. NOR gates of six to nine inputs are available with only non-inverting inputs. To invert some or all inputs, use external inverters. Since each input uses a CLB resource, replace gates with unused inputs with gates having the necessary number of inputs.

See “NOR12, 16” for information on additional NOR functions.

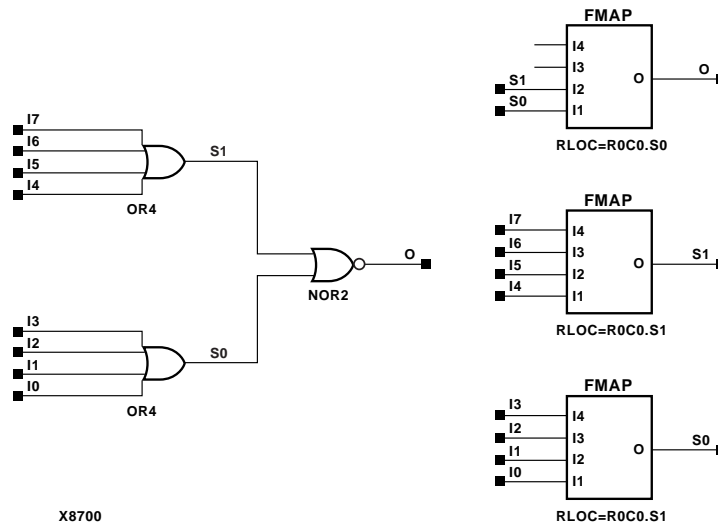

**NOR8 Implementation Spartan-II, Spartan-II E, Virtex, Virtex-E**

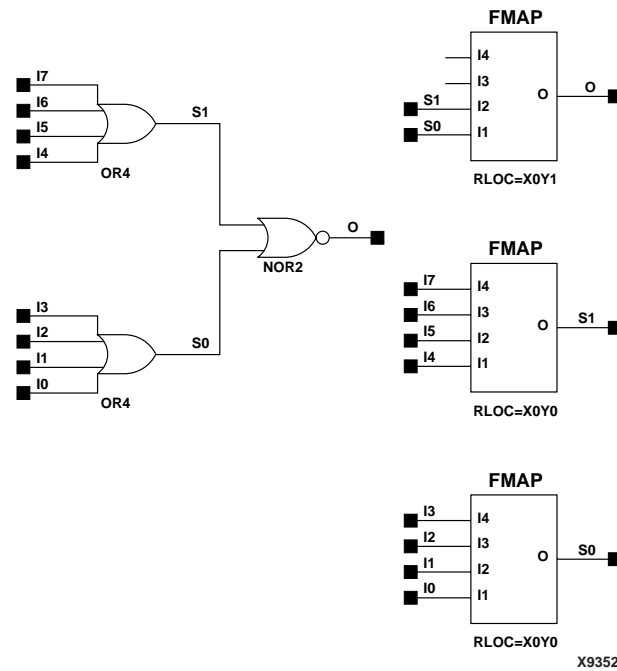

**NOR8 Implementation Spartan-3, Virtex-II, Virtex-II Pro , Virtex-II Pro X**

**Usage**

NOR2 through NOR5 are primitives that can be inferred or instantiated. NOR6 through NOR9 are macros which can be inferred.

## VHDL Inference Code

```
architecture Behavioral of nor6 is
begin

process (I0, I1, I2, I3, I4, I5)
begin
    O <= not (I0 or I1 or I2 or I3 or I4 or I5);
end process;

end Behavioral;
```

## Verilog Inference Code (NOR6)

```
always @(I0 or I1 or I2 or I3 or I4 or I5)
begin
    O <= !(I0 || I1 || I2 || I3 || I4 || I5);
end
```

## VHDL Instantiation Template for NOR5

Following is the VHDL code for NOR5. To instantiate NOR2, remove I2, I3, and I4. To instantiate NOR3, remove I3 and I4. For NOR4, remove I4. NOR2B1, and NOR2B2 have the same code as NOR2. NOR3B1, 3B2, and 3B3 have the same code as NOR3 and so forth.

```
-- Component Declaration for NOR5 should be placed
-- after architecture statement but before begin keyword

component NOR5
    port (O : out STD_ULOGIC;
          I0 : in STD_ULOGIC;
          I1 : in STD_ULOGIC;
          I2 : in STD_ULOGIC;
          I3 : in STD_ULOGIC;
          I4 : in STD_ULOGIC);
end component;

-- Component Attribute specification for NOR5
-- should be placed after architecture declaration but
-- before the begin keyword

-- Attributes should be placed here

-- Component Instantiation for NOR5 should be placed
-- in architecture after the begin keyword

NOR5_INSTANCE_NAME : NOR5
    port map (O => user_O,
              I0 => user_I0,
              I1 => user_I1,
              I2 => user_I2,
              I3 => user_I3,
              I4 => user_I4);
```



## Verilog Instantiation Template for NOR5

```
NOR5 NOR5_instance_name (.O (user_O),  
                          .I0 (user_I0),  
                          .I1 (user_I1),  
                          .I2 (user_I2),  
                          .I3 (user_I3),  
                          .I4 (user_I4));
```

## Commonly Used Constraints

None




## NOR12, 16

### 12- and 16-Input NOR Gates with Non-Inverted Inputs


#### Architectures Supported


NOR12, NOR16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No




The 12- and 16-input NOR functions are available only with non-inverting inputs. To invert some or all inputs, use external inverters.

See “[NOR2-9](#)” for more information on NOR functions.



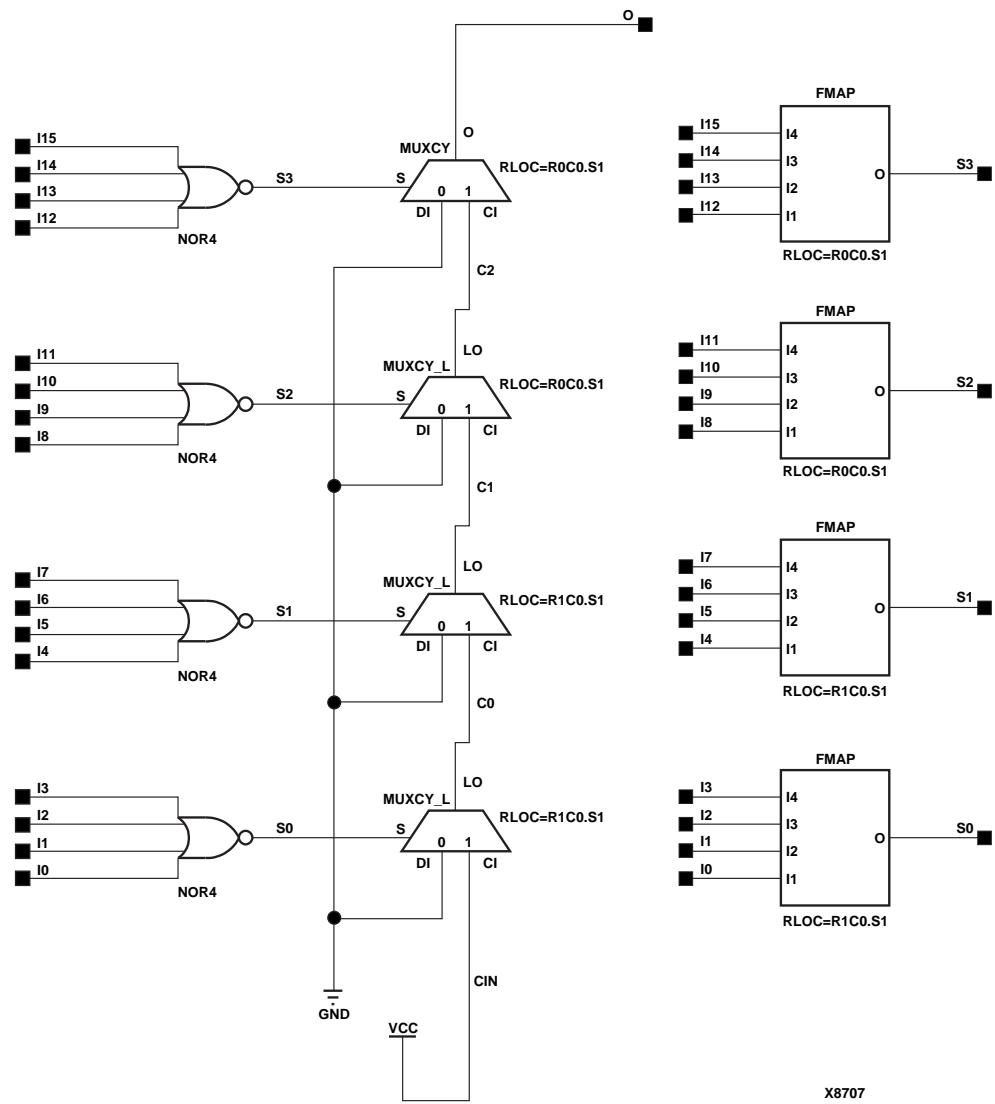

NOR16 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

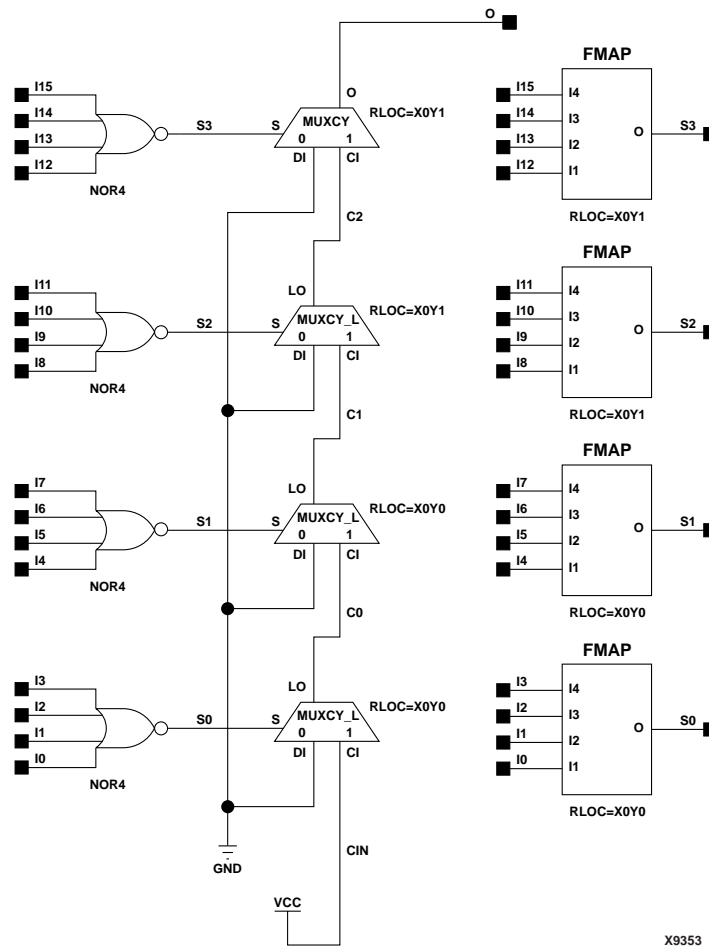

**NOR16 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

**Usage**

For HDL, NOR12 and NOR16 are macros that can be inferred. See “NOR2-9” for more information about inferring NOR gates.




# OBUF, 4, 8, 16


## Single- and Multiple-Output Buffers

### Architectures Supported

OBUF	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	Primitive
OBUF4, OBUF8, OBUF16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	Primitive






OBUF, OBUF4, OBUF8, and OBUF16 are single and multiple output buffers. An OBUF isolates the internal circuit and provides drive current for signals leaving a chip. OBUFs exist in input/output blocks (IOB). The output (O) of an OBUF is connected to an OPAD or an IOPAD.




For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, if a high impedance (Z) signal from an on-chip 3-state buffer (like BUFE) is applied to the input of an OBUF, it is propagated to the CPLD device output pin.

For Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, see “OBUF\_selectIO” for information on OBUF variants with selectable I/O interfaces. The I/O interface standard used by OBUF, 4, 8, and 16 is LVTTTL. Also, Virtex, Virtex-E, Spartan-II, and Spartan-IIE OBUF, 4, 8, and 16 have selectable drive and slew rates using the DRIVE and SLOW or FAST constraints. The defaults are DRIVE=12 mA and SLOW slew.



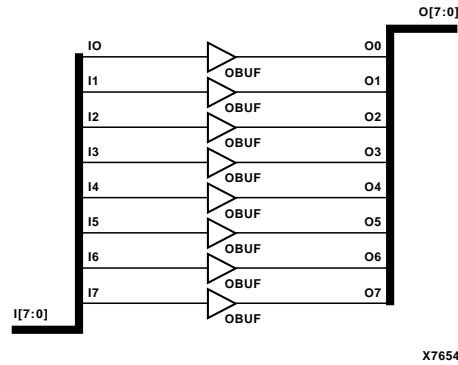

**OBUF8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIE, Virtex, Virtex-E**

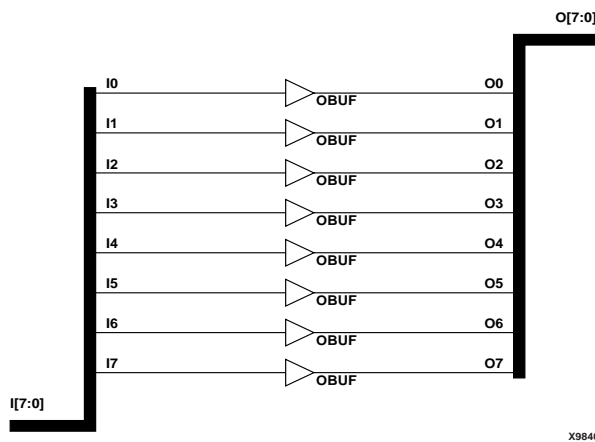

**OBUF8 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

**Usage**

OBUFs are typically inferred for all top level input ports, but they can also be instantiated if necessary.

**VHDL Instantiation Template**

```
-- Component Declaration for OBUF should be placed
-- after architecture statement but before begin keyword

component OBUF
  port (O : out STD_ULOGIC;
        I : in STD_ULOGIC);
end component;

-- Component Attribute specification for OBUF
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for OBUF should be placed
```



```
-- in architecture after the begin keyword
```

```
OBUF_INSTANCE_NAME : OBUF  
    port map (O => user_O,  
             I => user_I);
```

## Verilog Instantiation Template

```
OBUF_instance_name (.O (user_O),  
                    .I (user_I));
```

## Commonly Used Constraints

DRIVE

IOSTANDARD

IOBDELAY

SLEW



## OBUF\_selectIO

### Single Output Buffer with Selectable I/O Interface

OBUF_selectIO	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



For Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X, Spartan-II, and Spartan-IIE, OBUF and its selectIO variants (listed in the "Components" column in the table below) are single output buffers whose I/O interface corresponds to a specific I/O standard. The name extensions (LVCMOS2, PCI33\_3, PCI33\_5, etc.) specify the standard. The S, F, and 2, 4, 6, 8, 12, 16, 24 extensions specify the slew rate (SLOW or FAST) and the drive power (2, 4, 6, 8, 12, 16, 24 mA) for the LVTTTL standard variants. For example, OBUF\_F\_12 is a single output buffer that uses the LVTTTL I/O-signaling standard with a FAST slew and 12mA of drive power. You can attach an IOSTANDARD attribute to an OBUF instance instead of using an OBUF\_selectIO component. Check marks (✓) in the "Spartan-II, Virtex" and "Spartan-IIE, Virtex-E" columns indicate the components and IOSTANDARD attribute values available for those architectures.

For Virtex-II, Virtex-II Pro, and Virtex-II Pro X, an OBUF that uses the LVTTTL, LVCMOS15, LVCMOS18, LVCMOS25, or LVCMOS33 signaling standards has selectable drive and slew rates using the DRIVE and SLOW or FAST constraints. The defaults are DRIVE=12 mA and SLOW slew.

For Virtex, Virtex-E, Spartan-II, and Spartan-IIE, an OBUF that uses the LVTTTL signaling standard has selectable drive and slew rates using the DRIVE and SLOW or FAST constraints. The defaults are DRIVE=12 mA and SLOW slew.

An OBUF isolates the internal circuit and provides drive current for signals leaving a chip. OBUFs exist in input/output blocks (IOB). The output (O) of an OBUF is connected to an OPAD or an IOPAD.

The hardware implementation of the I/O standard requires that you follow a set of usage rules for the SelectIO buffer components. See the "SelectIO Usage Rules" under the IBUF\_selectIO section for information on using these components.

**Spartan-II, Spartan-IIE, Virtex, and Virtex-E OBUF\_selectIO Components and IOSTANDARD Attributes**

Component	Spartan-II, Virtex	Spartan-IIE, Virtex-E	IOSTANDARD (Attribute Value)	Output VCCO
OBUF	√	√	(default is LVTTTL) <sup>b</sup>	3.3
OBUF_S_2	√	√	LVTTTL <sup>b</sup>	3.3
OBUF_S_4	√	√	LVTTTL <sup>b</sup>	3.3
OBUF_S_6	√	√	LVTTTL <sup>b</sup>	3.3
OBUF_S_8	√	√	LVTTTL <sup>b</sup>	3.3
OBUF_S_12	√	√	LVTTTL <sup>b</sup>	3.3
OBUF_S_16	√	√	LVTTTL <sup>b</sup>	3.3
OBUF_S_24	√	√	LVTTTL <sup>b</sup>	3.3
OBUF_F_2	√	√	LVTTTL <sup>b</sup>	3.3
OBUF_F_4	√	√	LVTTTL <sup>b</sup>	3.3
OBUF_F_6	√	√	LVTTTL <sup>b</sup>	3.3
OBUF_F_8	√	√	LVTTTL <sup>b</sup>	3.3
OBUF_F_12	√	√	LVTTTL <sup>b</sup>	3.3
OBUF_F_16	√	√	LVTTTL <sup>b</sup>	3.3
OBUF_F_24	√	√	LVTTTL <sup>b</sup>	3.3
OBUF_AGP	√	√	AGP	3.3
OBUF_CTT	√	√	CTT	3.3
OBUF_GTL	√	√	GTL	N/A
OBUF_GTLP	√	√	GTLP	N/A
OBUF_HSTL_I	√	√	HSTL_I	1.5
OBUF_HSTL_III	√	√	HSTL_III	1.5
OBUF_HSTL_IV	√	√	HSTL_IV	1.5
OBUF_LVCMOS2	√	√	LVCMOS2	2.5
OBUF_LVCMOS18		√	LVCMOS18	1.8
OBUF_LVDS		√	LVDS	2.5
OBUF_LVPECL		√	LVPECL	3.3
OBUF_PCI33_3	√	√	PCI33_3	3.3
OBUF_PCI33_5	√	√ <sup>α</sup>	PCI33_5	3.3
OBUF_PCI66_3	√	√	PCI66_3	3.3
OBUF_PCIX66_3		√	PCIX66_3	3.3
OBUF_SSTL2_I	√	√	SSTL2_I	2.5
OBUF_SSTL2_II	√	√	SSTL2_II	2.5
OBUF_SSTL3_I	√	√	SSTL3_I	3.3
OBUF_SSTL3_II	√	√	SSTL3_II	3.3

<sup>α</sup> Not supported for Virtex-E.

<sup>b</sup> The LVTTTL attribute also requires a slew value (FAST or SLOW) and DRIVE value. See the FAST, SLOW, and DRIVE attribute descriptions in the *Xilinx Constraints Guide* for valid values for each architecture.

The Virtex-II, Virtex-II Pro, and Virtex-II Pro X library includes some OBUF\_selectIO components for compatibility with older, existing designs and other architectures. For new Virtex-II, Virtex-II Pro, and Virtex-II Pro X designs, however, the recommended method for using OBUF SelectIO buffers is to attach an IOSTANDARD attribute to an OBUF component. For example, attach IOSTANDARD=GTL to an OBUF instead of using the OBUF\_GTL component for new Virtex-II, Virtex-II Pro, and Virtex-II Pro X designs. The IOSTANDARD attributes that can be attached to an OBUF component are listed in the "IOSTANDARD (Attribute Value)" column.

Attach an IOSTANDARD attribute to an OBUF and assign the value indicated in the "IOSTANDARD (Attribute Value)" column to program the output for the I/O standard associated with that value.

The LVTTTL, LVCMOS15, LVCMOS18, LVCMOS25, LVCMOS33 attributes also require a slew value (FAST or SLOW) and DRIVE value. See the FAST, SLOW, and DRIVE attribute descriptions in the *Xilinx Constraints Guide*.

**Virtex-II, Virtex-II Pro, Virtex-II Pro X OBUF\_selectIO IOSTANDARD Attributes**

IOSTANDARD	Architectures			Attribute Values				
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Drive	Slew	Termination Type Output	VREF Input *	Output VCCO
AGP		√		N/A	N/A	None	1.32	3.3
GTL	√	√	√	N/A	N/A	None	.8	N/A
GTL_DCI	√	√	√	N/A	N/A	Single	.8	1.2
GTL_P	√	√	√	N/A	N/A	None	1.0	N/A
GTL_P_DCI	√	√	√	N/A	N/A	Single	1.0	1.5
HSTL_I	√	√	√	N/A	N/A	None	.75	1.5
HSTL_I_18	√	√	√	N/A	N/A	None	.90	1.8
HSTL_I_DCI	√	√	√	N/A	N/A	None	.75	1.5
HSTL_I_DCI_18	√	√	√	N/A	N/A	None	.9	1.8
HSTL_II	√	√	√	N/A	N/A	None	.75	1.5
HSTL_II_18	√	√	√	N/A	N/A	None	.9	1.8
HSTL_II_DCI	√	√	√	N/A	N/A	Split	.75	1.5
HSTL_II_DCI_18	√	√	√	N/A	N/A	Split	.9	1.8
HSTL_III	√	√	√	N/A	N/A	None	.9	1.5
HSTL_III_18	√	√	√	N/A	N/A	None	1.1	1.8
HSTL_III_DCI	√	√	√	N/A	N/A	None	.9	1.5
HSTL_III_DCI_18	√	√	√	N/A	N/A	None	1.1	1.8
HSTL_IV		√	√	N/A	N/A	None	.9	1.5
HSTL_IV_18		√	√	N/A	N/A	None	1.1	1.8
HSTL_IV_DCI		√	√	N/A	N/A	Single	.9	1.5
HSTL_IV_DCI_18		√	√	N/A	N/A	Single	1.1	1.8
LVCMOS12 <sup>a</sup>	√			2, 4, 6, 8	Fast/Slow	None	N/A	1.2
LVCMOS15 <sup>a</sup>	√	√	√	2, 4, 6, 8, 12, 16	Fast/Slow	None	N/A	1.5
LVCMOS18 <sup>a</sup>	√	√	√	2, 4, 6, 8, 12, 16	Fast/Slow	None	N/A	1.8
LVCMOS25 <sup>a</sup>	√	√	√	2, 4, 6, 8, 12, 16, 24	Fast/Slow	None	N/A	2.5
LVCMOS33 <sup>a</sup>		√	√	2, 4, 6, 8, 12, 16, 24	Fast/Slow	None	N/A	3.3
LVDCI_15	√	√	√	N/A	N/A	Driver	N/A	1.5
LVDCI_18	√	√	√	N/A	N/A	Driver	N/A	1.8

**Virtex-II, Virtex-II Pro, Virtex-II Pro X OBUF\_selectIO IOSTANDARD Attributes**

IOSTANDARD	Architectures			Attribute Values				
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Drive	Slew	Termination Type Output	VREF Input *	Output VCCO
LVDCI_25	√	√	√	N/A	N/A	Driver	N/A	2.5
LVDCI_33		√	√	N/A	N/A	Driver	N/A	3.3
LVDCI_DV2_15	√	√	√	N/A	N/A	Driver	N/A	1.5
LVDCI_DV2_18	√	√	√	N/A	N/A	Driver	N/A	1.8
LVDCI_DV2_25	√	√	√	N/A	N/A	Driver	N/A	2.5
LVDCI_DV2_33		√		N/A	N/A	Driver	N/A	3.3
LVTTL <sup>a</sup>		√	√	2, 4, 6, 8, 12, 16, 24	Fast/Slow	None	N/A	3.3
PCI33_3		√	√	N/A	N/A	None	N/A	3.3
PCI66_3		√	√	N/A	N/A	None	N/A	3.3
PCIX		√	√	N/A	N/A	None	N/A	3.3
SSTL18_I	√	√	√	N/A	N/A	None	.9	1.8
SSTL18_I_DCI	√	√	√	N/A	N/A	None	.9	1.8
SSTL18_II	√	√	√	N/A	N/A	None	.9	1.8
SSTL18_II_DCI		√	√	N/A	N/A	Split	.9	1.8
SSTL2_I	√	√	√	N/A	N/A	None	1.25	2.5
SSTL2_I_DCI	√	√	√	N/A	N/A	None	1.25	2.5
SSTL2_II	√	√	√	N/A	N/A	None	1.25	2.5
SSTL2_II_DCI	√	√	√	N/A	N/A	Split	1.25	2.5
SSTL3_I		√		N/A	N/A	None	1.5	3.3
SSTL3_I_DCI		√		N/A	N/A	None	1.5	3.3
SSTL3_II		√		N/A	N/A	None	1.5	3.3
SSTL3_II_DCI		√		N/A	N/A	Split	1.5	3.3

\* VREF requirement when this IOSTANDARD is an input.

## Usage

The recommended usage for OBUF\_selectIO is to allow the OBUFs be inferred and apply the IOSTANDARD constraint to the input in either the UCF or in the HDL code. OBUF\_selectIO can also be instantiated if necessary..

## VHDL Instantiation Template

```
-- Component Declaration for OBUF_selectIO should be placed
-- after architecture statement but before begin keyword

component OBUF_selectIO
    port (O : out STD_ULOGIC;
          I : in STD_ULOGIC);
end component;

-- Component Attribute specification for OBUF_selectIO
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for OBUF_selectIO should be placed
```

```
-- in architecture after the begin keyword  
  
OBUF_selectIO_INSTANCE_NAME : OBUF_selectIO  
    port map (O => user_O,  
             I => user_I);
```

## Verilog Instantiation Template

```
OBUF_selectIO instance_name (.O (user_O),  
                             .I (user_I));
```

## Commonly Used Constraints

DRIVE

IOBDELAY

SLEW

IOSTANDARD






# OBUFDS

## Differential Signaling Output Buffer with Selectable I/O Interface

### Architectures Supported

OBUFDS	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



OBUFDS is a single output buffer that supports low-voltage, differential signaling (1.8v CMOS). OBUFDS isolates the internal circuit and provides drive current for signals leaving the chip. Its output is represented as two distinct ports (O and OB), one deemed the "master" and the other the "slave." The master and the slave are opposite phases of the same logical signal (for example, MYNET and MYNETB).

Inputs	Outputs	
	O	OB
0	0	1
1	1	0

The IOSTANDARD attribute values listed in the following table can be applied to an OBUFDS component to provide SelectIO interface capability. See the *Xilinx Constraints Guide* for information using these attributes.

Attach an IOSTANDARD attribute to an OBUFDS and assign the value indicated in the "IOSTANDARD (Attribute Value)" column to program the output for the I/O standard associated with that value.

IOSTANDARD	Architectures			Attribute Values		
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Termination Type Output	VREF Input *	Output VCCO
BLVDS_25		√	√	None	N/A	2.5
LDT_25	√	√	√	None	N/A	2.5
LVDS_25 (default)	√	√	√	None	N/A	2.5
LVDS_33		√		None	N/A	3.3
LVDSEXT_25	√	√	√	None	N/A	2.5
LVDSEXT_33		√		None	N/A	3.3
LVPECL_25			√	None	N/A	2.5
LVPECL_33		√		None	N/A	3.3
ULVDS_25		√	√	None	N/A	2.5

IOSTANDARD	Architectures			Attribute Values		
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Termination Type Output	VREF Input *	Output VCCO
* VREF requirement when this IOSTANDARD is an input.						

## Usage

For HDL, this design element should be instantiated rather than inferred.

## VHDL Instantiation Template

```
-- Component Declaration for OBUFDS should be placed
-- after architecture statement but before begin keyword

component OBUFDS
  port (O : out STD_ULOGIC;
        OB : out STD_ULOGIC;
        I : in STD_ULOGIC);
end component;

-- Component Attribute specification for OBUFDS
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for OBUFDS should be placed
-- in architecture after the begin keyword

OBUFDS_INSTANCE_NAME : OBUFDS
  port map (O => user_O,
           OB => user_OB,
           I => user_I);
```

## Verilog Instantiation Template

```
OBUFDS instance_name (.O (user_O),
                     .OB (user_OB),
                     .I (user_I));
```

## Commonly Used Constraints

IOSTANDARD

IOBDELAY






# OBUFE, 4, 8, 16

## 3-State Output Buffers with Active-High Output Enable


### Architectures Supported

OBUFE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	No
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	Primitive
OBUFE4, OBUFE8, OBUFE16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	No
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	Primitive

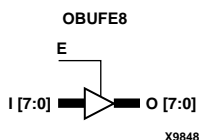



OBUFE, OBUFE4, OBUFE8, and OBUFE16 are 3-state buffers with inputs I, I3 – I0, I7 – I0, and I15-I0, respectively; outputs O, O3 – O0, O7 – O0, and O15-O0, respectively; and active-High output enable (E). When E is High, data on the inputs of the buffers is transferred to the corresponding outputs. When E is Low, the output is High impedance (off or Z state). An OBUFE isolates the internal circuit and provides drive current for signals leaving a chip. An OBUFE output is connected to an OPAD or an IOPAD. An OBUFE input is connected to the internal circuit.


Inputs		Outputs
E	I	O
0	X	Z
1	1	1
1	0	0



### OBUFE Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

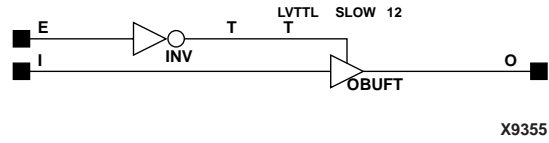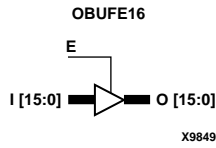

**OBUFE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

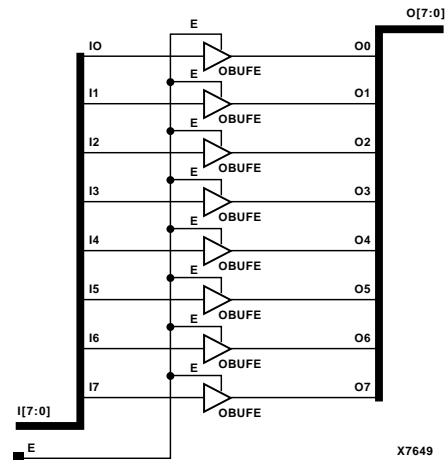

**OBUFE8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIe, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

**Usage**

For HDL, these design elements are instantiated rather than inferred.

**VHDL Instantiation Template**

```
-- Component Declaration for OBUFE should be placed
-- after architecture statement but before begin keyword
```

```
component OBUFE
  port (O : out STD_ULOGIC;
        E : in STD_ULOGIC;
        I : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for OBUFE
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for OBUFE should be placed
-- in architecture after the begin keyword
```

```
OBUFE_INSTANCE_NAME : OBUFE
    port map (O => user_O,
              E => user_E,
              I => user_I);
```

## Verilog Instantiation Template

```
OBUFE_instance_name (.O (user_O),
                     .E (user_E),
                     .I (user_I));
```

## Commonly Used Constraints

IOBDELAY






## OBUFT, 4, 8, 16


### Single and Multiple 3-State Output Buffers with Active-Low Output Enable

#### Architectures Supported


OBUFT	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	Primitive
OBUFT4, OBUFT8, OBUFT16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	Primitive




OBUFT, OBUFT4, OBUFT8, and OBUFT16 are single and multiple 3-state output buffers with inputs I, I3 – I0, I7 – I0, I15 – I0, outputs O, O3 – O0, O7 – O0, O15 – O0, and active-Low output enables (T). When T is Low, data on the inputs of the buffers is transferred to the corresponding outputs. When T is High, the output is high impedance (off or Z state). OBUFTs isolate the internal circuit and provide extra drive current for signals leaving a chip. An OBUFT output is connected to an OPAD or an IOPAD.




For Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X, Spartan-II, Spartan-IIE, and Spartan-3, see “OBUFT\_selectIO” for information on OBUFT variants with selectable I/O interfaces. OBUFT, 4, 8, and 16 use the LVTTTL standard. Also, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X, Spartan-II, Spartan-IIE, and Spartan-3 OBUFT, 4, 8, and 16 have selectable drive and slew rates using the DRIVE and SLOW or FAST constraints. The defaults are DRIVE=12 mA and SLOW slew.

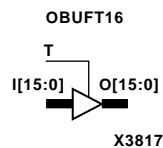

Inputs		Outputs
T	I	O
1	X	Z
0	1	1
0	0	0

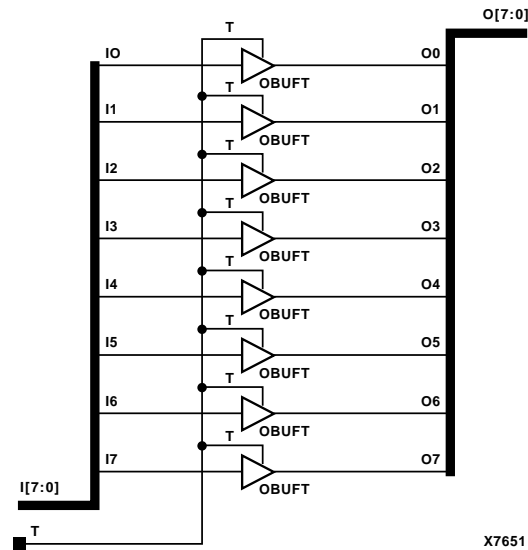

**OBUFT8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-II-E, Virtex, Virtex-E**

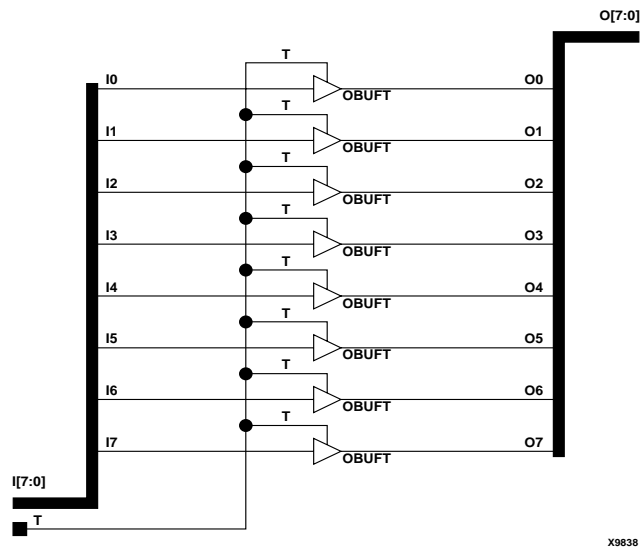

**OBUFT8 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

## Usage

For HDL, OBUFT is instantiated rather than inferred.

## VHDL Instantiation Template

```
-- Component Declaration for OBUFT should be placed
-- after architecture statement but before begin keyword

component OBUFT
  port (O : out STD_ULOGIC;
        I : in  STD_ULOGIC;
        T : in  STD_ULOGIC);
end component;

-- Component Attribute specification for OBUFT
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for OBUFT should be placed
-- in architecture after the begin keyword

OBUFT_INSTANCE_NAME : OBUFT
  port map (O => user_O,
           I => user_I,
           T => user_T);
```

## Verilog Instantiation Template

```
OBUFT instance_name (.O (user_O),
                    .I (user_I),
                    .T (user_T));
```

## Commonly Used Constraints

DRIVE

IOSTANDARD

IOBDELAY


SLEW

## OBUFT\_selectIO

### Single 3-State Output Buffer with Active-Low Output Enable and Selectable I/O Interface

#### Architectures Supported

OBUFT_selectIO	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



For Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X, Spartan-II, Spartan-IIE, and Spartan-3, OBUFT and its selectIO variants (listed in the "Component" column in the table below) are single 3-state output buffers with active-Low output Enable whose I/O interface corresponds to a specific I/O standard. The name extensions (LVCMOS2, PCI33\_3, PCI33\_5, etc.) specify the standard. The S, F, and 2, 4, 6, 8, 12, 16, 24 extensions specify the slew rate (SLOW or FAST) and the drive power (2, 4, 6, 8, 12, 16, 24 mA) for the LVTTTL standard. For example, OBUFT\_S\_4 is a 3-state output buffer with active-Low output enable that uses the LVTTTL I/O signaling standard with a SLOW slew and 4mA of drive power. You can attach an IOSTANDARD attribute to an OBUFT instance instead of using an OBUFT\_selectIO component. Check marks (√) in the "Spartan-II, Virtex," and "Spartan-IIE, Virtex-E" columns indicate the components and IOSTANDARD attribute values available for each architecture.

The hardware implementation of the I/O standards requires that you follow a set of usage rules for the SelectIO buffers. See [“SelectIO Usage Rules”](#) under the IBUF\_selectIO section for information on using these components and IOSTANDARD attributes.

#### Spartan-II, Spartan-IIE, Virtex, and Virtex-E OBUFT\_selectIO Components and IOSTANDARD Attributes

Component	Spartan-II, Virtex	Spartan-IIE, Virtex-E	IOSTANDARD (Attribute Value)	Output VCCO
OBUFT	√	√	defaults to LVTTTL	3.3
OBUFT_S_2	√	√	LVTTTL <i>b</i>	3.3
OBUFT_S_4	√	√	LVTTTL <i>b</i>	3.3
OBUFT_S_6	√	√	LVTTTL <i>b</i>	3.3
OBUFT_S_8	√	√	LVTTTL <i>b</i>	3.3
OBUFT_S_12	√	√	LVTTTL <i>b</i>	3.3

**Spartan-II, Spartan-IIe, Virtex, and Virtex-E OBUFT\_selectIO Components and IOSTANDARD Attributes**

Component	Spartan-II, Virtex	Spartan-IIe, Virtex-E	IOSTANDARD (Attribute Value)	Output VCCO
OBUFT_S_16	√	√	LVTTL <sup>b</sup>	3.3
OBUFT_S_24	√	√	LVTTL <sup>b</sup>	3.3
OBUFT_F_2	√	√	LVTTL <sup>b</sup>	3.3
OBUFT_F_4	√	√	LVTTL <sup>b</sup>	3.3
OBUFT_F_6	√	√	LVTTL <sup>b</sup>	3.3
OBUFT_F_8	√	√	LVTTL <sup>b</sup>	3.3
OBUFT_F_12	√	√	LVTTL <sup>b</sup>	3.3
OBUFT_F_16	√	√	LVTTL <sup>b</sup>	3.3
OBUFT_F_24	√	√	LVTTL <sup>b</sup>	3.3
OBUFT_AGP	√	√	AGP	3.3
OBUFT_CTT	√	√	CTT	3.3
OBUFT_GTL	√	√	GTL	N/A
OBUFT_GTLP	√	√	GTLP	N/A
OBUFT_HSTL_I	√	√	HSTL_I	1.5
OBUFT_HSTL_III	√	√	HSTL_III	1.5
OBUFT_HSTL_IV	√		HSTL_IV	1.5
OBUFT_LVCOS2	√	√	LVCOS2	2.5
OBUFT_LVCOS18		√	LVCOS18 <sup>b</sup>	1.8
OBUFT_LVDS		√	LVDS	2.5
OBUFT_LVPECL		√	LVPECL	3.3
OBUFT_PCI33_3	√	√	PCI33_3	3.3
OBUFT_PCI33_5	√	√ <sup>α</sup>	PCI33_5	3.3
OBUFT_PCI66_3	√	√	PCI66_3	3.3
OBUFT_PCIX66_3		√	PCIX66_3	3.3
OBUFT_SSTL2_I	√	√	SSTL2_I	2.5
OBUFT_SSTL2_II	√	√	SSTL2_II	2.5
OBUFT_SSTL3_I	√	√	SSTL3_I	3.3
OBUFT_SSTL3_II	√	√	SSTL3_II	3.3

<sup>α</sup> Not supported for Virtex-E.

<sup>b</sup> The LVTTL, LVCOS15, LVCOS18, LVCOS25, LVCOS33 attributes also require a slew value (FAST or SLOW) and DRIVE value. See the FAST, SLOW, and DRIVE attribute descriptions in the *Xilinx Constraints Guide* for valid values for each architecture.

The Virtex-II, Virtex-II Pro, and Virtex-II Pro X library includes some OBUFT\_selectIO components for compatibility with older, existing designs and other architectures. For new Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X designs, however, the recommended method for using OBUFT SelectIO buffers is to attach an IOSTANDARD attribute to an OBUFT component. For example, attach IOSTANDARD=GTLP to an OBUFT instead of using the OBUFT\_GTLP component for new Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X designs. The IOSTANDARD attributes that can be attached to an OBUFT component are listed in

the "IOSTANDARD (Attribute Value)" column in the following table. See [“SelectIO Usage Rules”](#) for information on using these IOSTANDARD attributes.

Attach an IOSTANDARD attribute to an OBUFT and assign the value indicated in the "IOSTANDARD (Attribute Value)" column to program the output for the I/O standard associated with that value.

The LVTTTL, LVCMOS15, LVCMOS18, LVCMOS25, LVCMOS33 attributes also require a slew value (FAST or SLOW) and DRIVE value. See the FAST, SLOW, and DRIVE attribute descriptions in the *Xilinx Constraints Guide*.

**Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X OBUFT\_selectIO IOSTANDARD Attributes**

IOSTANDARD	Architectures			Attribute Values				
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Drive	Slew	Termination Type Output	VREF Input *	Output VCCO
AGP		√		N/A	N/A	None	1.32	3.3
GTL	√	√	√	N/A	N/A	None	.8	N/A
GTL_DCI	√	√	√	N/A	N/A	Single	.8	1.2
GTLP	√	√	√	N/A	N/A	None	1.0	N/A
GTLP_DCI	√	√	√	N/A	N/A	Single	1.0	1.5
HSTL_I	√	√	√	N/A	N/A	None	.75	1.5
HSTL_I_18	√	√	√	N/A	N/A	None	.90	1.8
HSTL_I_DCI	√	√	√	N/A	N/A	None	.75	1.5
HSTL_I_DCI_18	√	√	√	N/A	N/A	None	.9	1.8
HSTL_II_18	√	√	√	N/A	N/A	None	.9	1.8
HSTL_II_DCI_18	√	√	√	N/A	N/A	Split	.9	1.8
HSTL_III	√	√	√	N/A	N/A	None	.9	1.5
HSTL_III_18	√	√	√	N/A	N/A	None	1.1	1.8
HSTL_III_DCI	√	√	√	N/A	N/A	None	.9	1.5
HSTL_III_DCI_18	√	√	√	N/A	N/A	None	1.1	1.8
HSTL_IV		√	√	N/A	N/A	None	.9	1.5
HSTL_IV_18		√	√	N/A	N/A	None	1.1	1.8
HSTL_IV_DCI		√	√	N/A	N/A	Single	.9	1.5
HSTL_IV_DCI_18		√	√	N/A	N/A	Single	1.1	1.8
LVCMOS12 <sup>a</sup>	√			2, 4, 6	Fast/Slow	None	N/A	1.2
LVCMOS15 <sup>a</sup>	√	√	√	2, 4, 6, 8, 12	Fast/Slow	None	N/A	1.5
LVCMOS18 <sup>a</sup>	√	√	√	2, 4, 6, 8, 12, 16	Fast/Slow	None	N/A	1.8
LVCMOS25 <sup>a</sup>	√	√	√	2, 4, 6, 8, 12, 16, 24	Fast/Slow	None	N/A	2.5
LVCMOS33 <sup>a</sup>		√	√	2, 4, 6, 8, 12, 16, 24	Fast/Slow	None	N/A	3.3
LVDCI_15	√	√	√	N/A	N/A	Driver	N/A	1.5
LVDCI_18	√	√	√	N/A	N/A	Driver	N/A	1.8
LVDCI_25	√	√	√	N/A	N/A	Driver	N/A	2.5
LVDCI_33		√	√	N/A	N/A	Driver	N/A	3.3
LVDCI_DV2_15	√	√	√	N/A	N/A	Driver	N/A	1.5
LVDCI_DV2_18	√	√	√	N/A	N/A	Driver	N/A	1.8
LVDCI_DV2_25	√	√	√	N/A	N/A	Driver	N/A	2.5
LVDCI_DV2_33		√	√	N/A	N/A	Driver	N/A	3.3
LVTTTL <sup>a</sup>		√	√	2, 4, 6, 8, 12, 16, 24	Fast/Slow	None	N/A	3.3
PCI33_3		√	√	N/A	N/A	None	N/A	3.3

### Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X OBUFT\_selectIO IOSTANDARD Attributes

IOSTANDARD	Architectures			Attribute Values				
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Drive	Slew	Termination Type Output	VREF Input *	Output VCCO
PCI66_3		√	√	N/A	N/A	None	N/A	3.3
PCIX		√	√	N/A	N/A	None	N/A	3.3
SSTL18_I	√	√	√	N/A	N/A	None	.9	1.8
SSTL18_I_DCI	√	√	√	N/A	N/A	None	.9	1.8
SSTL18_II	√	√	√	N/A	N/A	None	.9	1.8
SSTL18_II_DCI		√	√	N/A	N/A	Split	.9	1.8
SSTL2_I	√	√	√	N/A	N/A	None	1.25	2.5
SSTL2_I_DCI	√	√	√	N/A	N/A	None	1.25	2.5
SSTL2_II	√	√	√	N/A	N/A	None	1.25	2.5
SSTL2_II_DCI	√	√	√	N/A	N/A	Split	1.25	2.5
SSTL3_I		√		N/A	N/A	None	1.5	3.3
SSTL3_I_DCI		√		N/A	N/A	None	1.5	3.3
SSTL3_II		√		N/A	N/A	None	1.5	3.3
SSTL3_II_DCI		√		N/A	N/A	Split	1.5	3.3

\* VREF requirement when this IOSTANDARD is an input.

OBUFT and its variants have selectable drive and slew rates using the DRIVE and FAST or SLOW constraints. The defaults are DRIVE=12 mA and SLOW slew.

When T is Low, data on the input of the buffer is transferred to the output. When T is High, the output is high impedance (off or Z state). OBUFTs isolate the internal circuit and provide extra drive current for signals leaving a chip. An OBUFT\_selectIO output is connected to an OPAD or an IOPAD.

### Usage

For HDL, these design elements are instantiated rather than inferred.

### VHDL Instantiation Template

```
-- Component Declaration for OBUFT_selectIO should be placed
-- after architecture statement but before begin keyword
```

```
component OBUFT_selectIO
  port (O : out STD_ULOGIC;
        I : in STD_ULOGIC;
        T : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for OBUFT_selectIO
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```



```
-- Component Instantiation for OBUFT_selectIO should be  
-- placed in architecture after the begin keyword
```

```
OBUFT_selectIO_INSTANCE_NAME : OBUFT_selectIO  
    port map (O => user_O,  
             I => user_I,  
             T => user_T);
```

## Verilog Instantiation Template

```
OBUFT_selectIO instance_name (.O (user_O),  
                             .I (user_I),  
                             .T (user_T));
```

## Commonly Used Constraints

DRIVE

IOBDELAY

SLEW

IOSTANDARD




## OBUFTDS

### 3-State Differential Signaling Output Buffer with Active Low Output Enable and Selectable I/O Interface

#### Architectures Supported

OBUFTDS	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

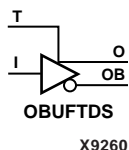

OBUFTDS is a single 3-state, differential signaling output buffer with active Low enable and a Select I/O interface.

When T is Low, data on the input of the buffer is transferred to the output (O) and inverted output (OB). When T is High, both outputs are high impedance (off or Z state).

Inputs		Outputs	
I	T	O	OB
X	1	Z	Z
0	0	0	1
1	0	1	0

The IOSTANDARD attribute values listed in the following table can be applied to an IBUFGDS component to provide selectIO interface capability. See the *Xilinx Constraints Guide* for information using these attributes. The hardware implementation of the I/O standards requires that you follow a set of usage rules for the SelectIO buffer components. See the “[SelectIO Usage Rules](#)” under the IBUF\_selectIO section for information on using these IOSTANDARD attributes.

Attach an IOSTANDARD attribute to an OBUFTDS and assign the value indicated in the "IOSTANDARD (Attribute Value)" column to program the outputs for the I/O standard associated with that value.

IOSTANDARD	Architectures			Attribute Values		
	Spartan-3	Virtex-II	Virtex-II Pro, Virtex-II Pro X	Termination Type Output	VREF Input *	Output VCCO
BLVDS_25		√	√	None	N/A	2.5
LDT_25	√	√	√	None	N/A	2.5
LVDS_25 (default)	√	√	√	None	N/A	2.5
LVDS_33		√		None	N/A	3.3
LVPECL_25			√	None	N/A	2.5
LVPECL_33		√		None	N/A	3.3
LVDS_25	√	√	√	None	N/A	2.5
LVDS_33		√		None	N/A	3.3
ULVDS_25	√	√	√	None	N/A	2.5

\* VREF requirement when this IOSTANDARD is an input.

## Usage

For HDL, these design elements are instantiated rather than inferred.

## VHDL Instantiation Template

```
-- Component Declaration for OBUFTDS should be placed
-- after architecture statement but before begin keyword
```

```
component OBUFTDS
  port (O : out STD_ULOGIC;
        OB : out STD_ULOGIC;
        I : in STD_ULOGIC;
        T : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for OBUFTDS
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for OBUFTDS should be
-- placed in architecture after the begin keyword
```

```
OBUFTDS_INSTANCE_NAME : OBUFTDS
  port map (O => user_O,
            OB => user_OB,
            I => user_I,
            T => user_T);
```

## Verilog Instantiation Template

```
OBUFTDS instance_name (.O (user_O),
```

```
.OB (user_OB),  
.I (user_I),  
.T (user_T);
```

## Commonly Used Constraints

IOSTANDARD

IOBDELAY




# OFD, 4, 8, 16

## Single- and Multiple-Output D Flip-Flops


### Architectures Supported

OFD, OFD4, OFD8, OFD16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

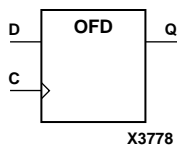

OFD, OFD4, OFD8, and OFD16 are single and multiple output D flip-flops.

The outputs (for example, Q3 – Q0) are connected to OPADs or IOPADs. The data on the D inputs is loaded into the flip-flops during the Low-to-High clock (C) transition and appears on the Q outputs.

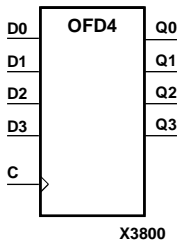


The flip-flops are asynchronously cleared with Low outputs when power is applied, or when global reset is active.


For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

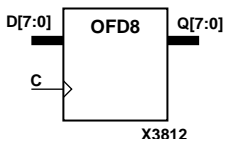


Inputs		Outputs
D	C	Q
0	↑	0
1	↑	1

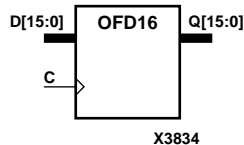


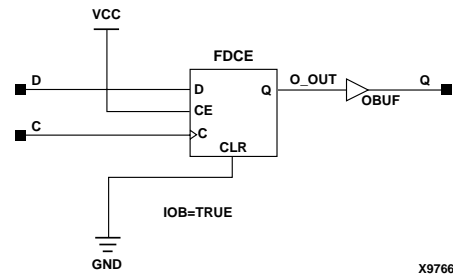

**OFD Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E**

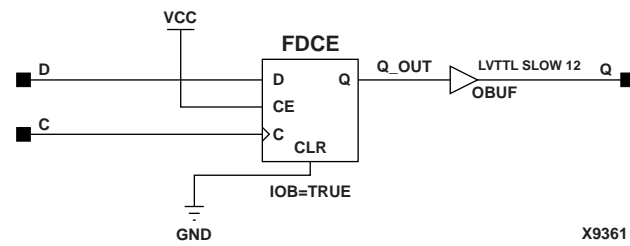


**OFD Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

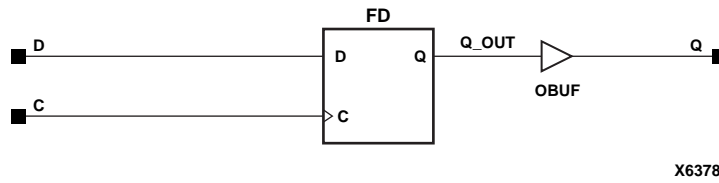


**OFD Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**



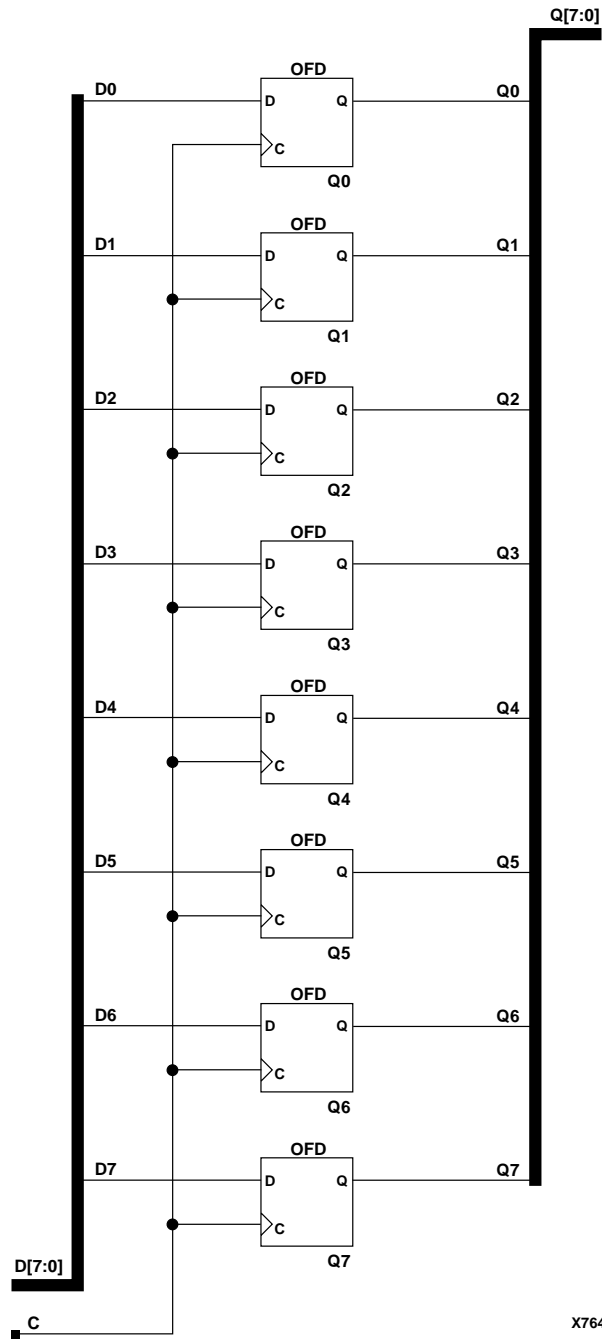

X7644

**OFD8 Implementation Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

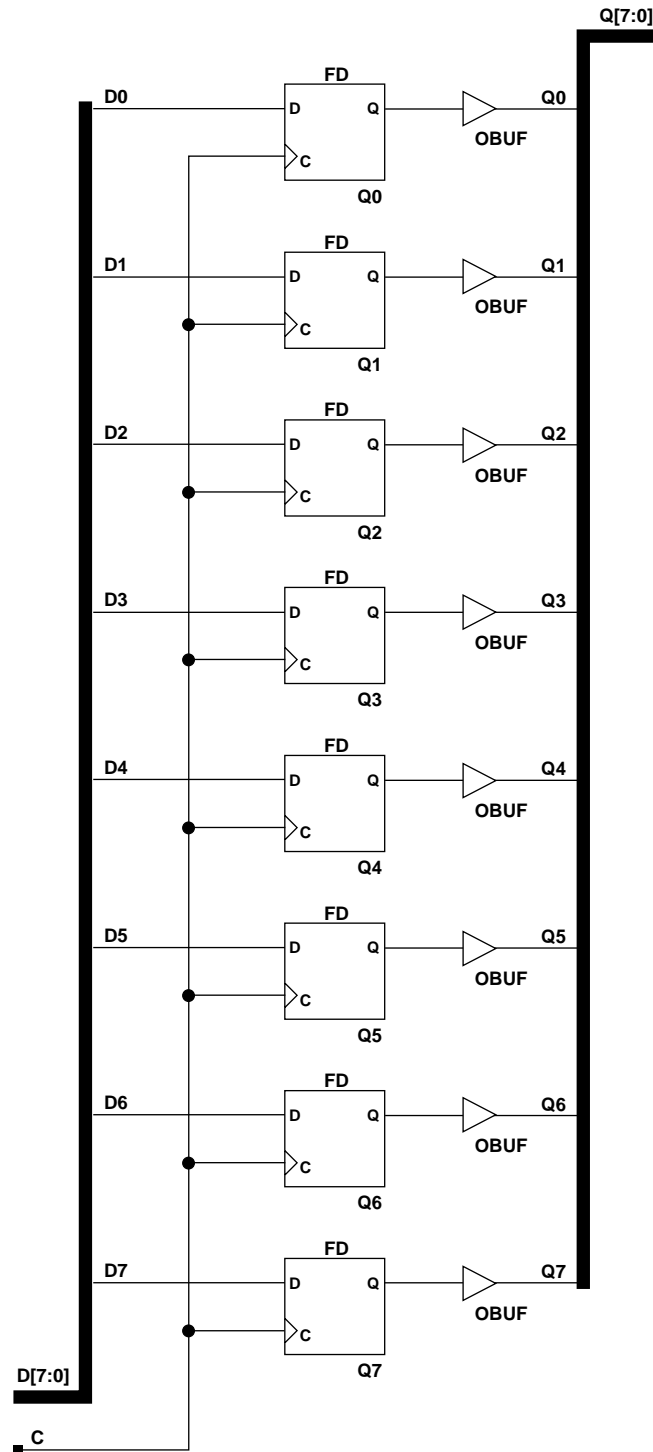

X7648

OFD8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

## Usage


This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an OFD, you would infer an FD and put the IOB = TRUE attribute on the component. Or, you could use the map option `-pr o` to pack all output registers into the IOBs.



## OFD\_1

### Output D Flip-Flop with Inverted Clock

OFD_1	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

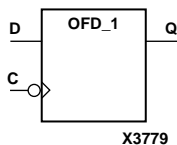


OFD\_1 is located in an input/output block (IOB). The output (Q) of the D flip-flop is connected to an OPAD or an IOPAD. The data on the D input is loaded into the flip-flop during the High-to-Low clock (C) transition and appears on the Q output.

The flip-flop is asynchronously cleared, output Low, when power is applied, or when global reset is active.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs		Outputs
<b>D</b>	<b>C</b>	<b>Q</b>
D	↓	D

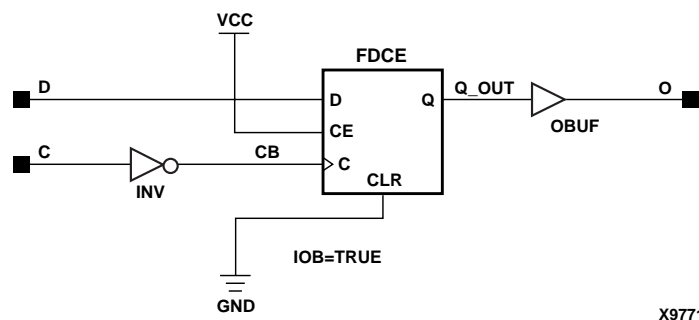

**OFD\_1 Implementation Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

## Usage


This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an OFD\_1, you would infer an FD\_1 and put the IOB = TRUE attribute on the component. Or, you could use the map option `-pr o` to pack all output registers into the IOBs.

## OFDDRCPE

### Dual Data Rate Output D Flip-Flop with Clock Enable and Asynchronous Preset and Clear

#### Architectures Supported

OFDDRCPE	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

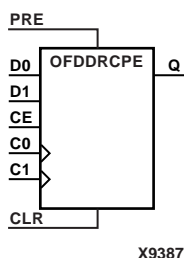


OFDDRCPE is a dual data rate (DDR) output D flip-flop with clock enable (CE) and asynchronous preset (PRE) and clear (CLR). It consists of one output buffer and one dual data rate flip-flop (FDDRCPE).

When the asynchronous PRE is High and CLR is Low, the Q output is preset High. When CLR is High, Q is set Low. Data on the D0 input is loaded into the flip-flop when PRE and CLR are Low and CE is High on the Low-to-High C0 clock transition. Data on the D1 input is loaded into the flip-flop when PRE and CLR are Low and CE is High on the Low-to-High C1 clock transition.

The INIT attribute does not apply to OFDDRCPE components.

The flip-flops are asynchronously cleared with Low outputs when power is applied.

Inputs							Outputs
C0	C1	CE	D0	D1	CLR	PRE	Q
X	X	X	X	X	1	0	0
X	X	X	X	X	0	1	1
X	X	X	X	X	1	1	0
X	X	0	X	X	0	0	No Chg
↑	X	1	D0	X	0	0	D0
X	↑	1	X	D1	0	0	D1

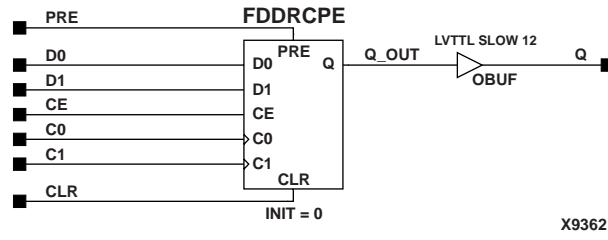

**OFDDRCPE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**



## Usage

For HDL, the OFDDRCPE design element should be instantiated rather than inferred.

## VHDL Instantiation Template

```
-- Component Declaration for OFDDRCPE should be placed
-- after architecture statement but before begin keyword

component OFDDRCPE
  port (Q : out STD_ULOGIC;
        C0 : in STD_ULOGIC;
        C1 : in STD_ULOGIC;
        CE : in STD_ULOGIC;
        CLR : in STD_ULOGIC;
        D0 : in STD_ULOGIC;
        D1 : in STD_ULOGIC;
        PRE : in STD_ULOGIC);
end component;

-- Component Attribute specification for OFDDRCPE
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for OFDDRCPE should be placed
-- in architecture after the begin keyword

OFDDRCPE_INSTANCE_NAME : OFDDRCPE
  port map (Q => user_O,
            C0 => user_C0,
            C1 => user_C1,
            CE => user_CE,
            CLR => user_CLR,
            D0 => user_D0,
            D1 => user_D1,
            PRE => user_PRE);
```

## Verilog Instantiation Template

```
OFDDRCPE instance_name (.Q (user_O),
                        .C0 (user_C0),
                        .C1 (user_C1),
                        .CE (user_CE),
                        .CLR (user_CLR),
                        .D0 (user_D0),
                        .D1 (user_D1),
                        .PRE (user_I));
```




## OFDDRSE

### Dual Data Rate Output D Flip-Flop with Synchronous Reset and Set and Clock Enable

#### Architectures Supported

OFDDRSE	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

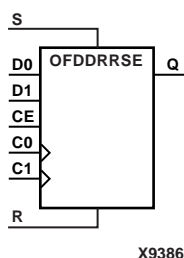


OFDDRSE is a dual data rate (DDR) output D flip-flop with synchronous reset (R) and set (S) and clock enable (CE). It consists of one output buffer and one dual data rate flip-flop (FDDRSE).

On a Low-to-High clock transition (C0 or C1), a High R input resets the Q output Low; a Low R input with a High S input sets Q High. When both R and S are Low and clock enable is High, data on the D0 input is loaded into the flip-flop on a Low-to-High C0 clock transition and data on the D1 input is loaded into the flip-flop on a Low-to-High C1 clock transition.

The flip-flops are asynchronously cleared with Low outputs when power is applied, or when global reset is active.

The INIT attribute does not apply to OFDDRSE components.

Inputs							Outputs
C0	C1	CE	D0	D1	R	S	Q
↑	X	X	X	X	1	0	0
↑	X	X	X	X	0	1	1
↑	X	X	X	X	1	1	0
X	↑	X	X	X	1	0	0
X	↑	X	X	X	0	1	1
X	↑	X	X	X	1	1	0
X	X	0	X	X	0	0	No Chg
↑	X	1	D0	X	0	0	D0
X	↑	1	X	D1	0	0	D1

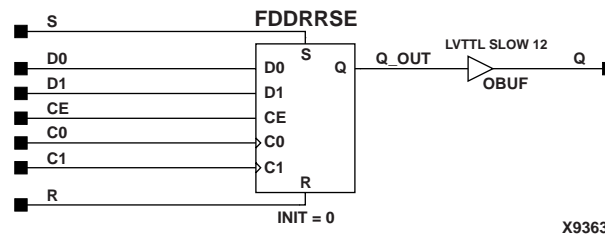

## OFDDRSE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

### Usage

For HDL, the OFDDRSE design element should be instantiated rather than inferred.

### VHDL Instantiation Template

```
-- Component Declaration for OFDDRSE should be placed
-- after architecture statement but before begin keyword
```

```
component OFDDRSE
  port (Q : out STD_ULOGIC;
        C0 : in STD_ULOGIC;
        C1 : in STD_ULOGIC;
        CE : in STD_ULOGIC;
        D0 : in STD_ULOGIC;
        D1 : in STD_ULOGIC;
        R : in STD_ULOGIC;
        S : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for OFDDRSE
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for OFDDRSE should be placed
-- in architecture after the begin keyword
```

```
OFDDRSE_INSTANCE_NAME : OFDDRSE
  port map (Q => user_O,
            C0 => user_C0,
            C1 => user_C1,
            CE => user_CE,
            D0 => user_D0,
            D1 => user_D1,
            R => user_R,
            S => user_S);
```

## Verilog Instantiation Template

```
OFDDRSE instance_name (.Q (user_Q),  
                        .C0 (user_C0),  
                        .C1 (user_C1),  
                        .CE (user_CE),  
                        .D0 (user_D0),  
                        .D1 (user_D1),  
                        .R (user_R),  
                        .S (user_S));
```




## OFDDRTCPE

### Dual Data Rate D Flip-Flop with Active-Low 3-State Output Buffer, Clock Enable, and Asynchronous Preset and Clear

#### Architectures Supported

OFDDRTCPE	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

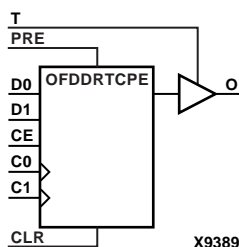

OFDDRTCPE is a dual data rate (DDR) D flip-flop with clock enable (CE) and asynchronous preset and clear whose output is enabled by a 3-state buffer. It consists of a dual data rate flip-flop (FDDRCPE) and a 3-state output buffer (OBUFT). The data output (O) of the flip-flop is connected to the input of the output buffer (OBUFT). The output of the OBUFT is connected to an OPAD or IOPAD.


When the active-Low enable input (T) is Low, output is enabled and the data on the flip-flop's Q output appears on the OBUFT's O output. When the asynchronous PRE is High and CLR is Low, the O output is preset High. When CLR is High, O is set Low. Data on the D0 input is loaded into the flip-flop when PRE and CLR are Low and CE is High on the Low-to-High C0 clock transition. Data on the D1 input is loaded into the flip-flop when PRE and CLR are Low and CE is High on the Low-to-High C1 clock transition.

When T is High, outputs are high impedance (Off). When CE is Low and T is Low, the outputs do not change.

The flip-flops are asynchronously cleared with Low outputs when power is applied.

The INIT attribute does not apply to OFDDRTCPE components.

Inputs								Outputs
C0	C1	CE	D0	D1	CLR	PRE	T	O
X	X	X	X	X	X	X	1	Z
X	X	X	X	X	1	0	0	0
X	X	X	X	X	0	1	0	1
X	X	X	X	X	1	1	0	0
X	X	0	X	X	0	0	0	No Chg
↑	X	1	D0	X	0	0	0	D0
X	↑	1	X	D1	0	0	0	D1

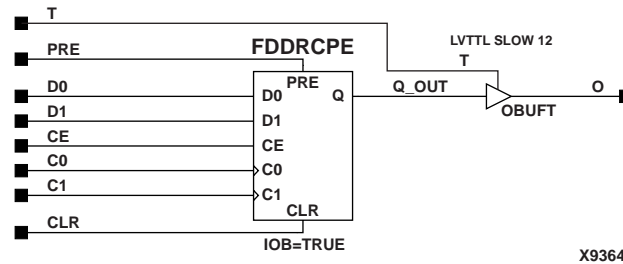

## OFDDRTCPE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

### Usage

For HDL, the OFDDRTCPE design element should be instantiated rather than inferred.

### VHDL Instantiation Template

```
-- Component Declaration for OFDDRTCPE should be placed
-- after architecture statement but before begin keyword
```

```
component OFDDRTCPE
  port (O : out STD_ULOGIC;
        C0 : in STD_ULOGIC;
        C1 : in STD_ULOGIC;
        CE : in STD_ULOGIC;
        CLR : in STD_ULOGIC;
        D0 : in STD_ULOGIC;
        D1 : in STD_ULOGIC;
        PRE : in STD_ULOGIC;
        T : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for OFDDRTCPE
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for OFDDRTCPE should be placed
-- in architecture after the begin keyword
```

```
OFDDRTCPE_INSTANCE_NAME : OFDDRTCPE
  port map (O => user_O,
            C0 => user_C0,
            C1 => user_C1,
            CE => user_CE,
            CLR => user_CLR,
            D0 => user_D0,
            D1 => user_D1,
            PRE => user_PRE,
            T => user_T);
```



## Verilog Instantiation Template

```
OFDDRTCPE instance_name (.O (user_O),  
                          .C0 (user_C0),  
                          .C1 (user_C1),  
                          .CE (user_CE),  
                          .CLR (user_CLR),  
                          .D0 (user_D0),  
                          .D1 (user_D1),  
                          .PRE (user_PRE),  
                          .T (user_T));
```




## OFDDRTRSE

### Dual Data Rate D Flip-Flop with Active-Low 3-State Output Buffer, Synchronous Reset and Set, and Clock Enable

#### Architectures Supported

OFDDRTRSE	
Spartan-II, Spartan-III	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

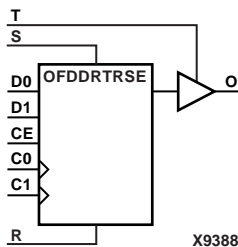

OFDDRTRSE is a dual data rate (DDR) D flip-flop with clock enable (CE) and synchronous reset and set whose output is enabled by a 3-state buffer. It consists of a dual data rate flip-flop (FDDRSE) and a 3-state output buffer (OBUFT). The data output (O) of the flip-flop is connected to the input of the output buffer (OBUFT). The output of the OBUFT is connected to an OPAD or IOPAD.

When the active-Low enable input (T) is Low, output is enabled and the data on the flip-flop's Q output appears on the OBUFT's O output. On a Low-to-High clock transition (C0 or C1), a High R input resets the Q output Low; a Low R input with a High S input sets O High. When both R and S are Low and clock enable is High, data on the D0 input is loaded into the flip-flop on a Low-to-High C0 clock transition and data on the D1 input is loaded into the flip-flop on a Low-to-High C1 clock transition.


When T is High, outputs are high impedance (Off). When CE is Low and T is Low, the outputs do not change.

The flip-flops are asynchronously cleared with Low outputs when power is applied.

The INIT attribute does not apply to OFDDRTRSE components.

Inputs								Outputs
C0	C1	CE	D0	D1	R	S	T	O
X	X	X	X	X	X	X	1	Z
↑	X	X	X	X	1	0	0	0
↑	X	X	X	X	0	1	0	1
↑	X	X	X	X	1	1	0	0
X	↑	X	X	X	1	0	0	0
X	↑	X	X	X	0	1	0	1
X	↑	X	X	X	1	1	0	0
X	X	0	X	X	0	0	0	No Chg

Inputs								Outputs
C0	C1	CE	D0	D1	R	S	T	O
↑	X	1	D0	X	0	0	0	D0
X	↑	1	X	D1	0	0	0	D1

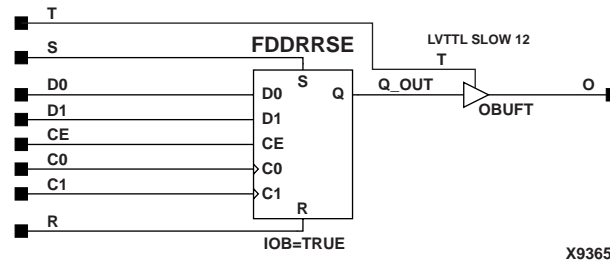

**OFDDRTRSE Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

**Usage**

For HDL, the OFDDRTRSE design element should be instantiated rather than inferred.

**VHDL Instantiation Template**

-- Component Declaration for OFDDRTRSE should be placed  
 -- after architecture statement but before begin keyword

```

component OFDDRTRSE
  port (O : out STD_ULOGIC;
        C0 : in STD_ULOGIC;
        C1 : in STD_ULOGIC;
        CE : in STD_ULOGIC;
        D0 : in STD_ULOGIC;
        D1 : in STD_ULOGIC;
        R : in STD_ULOGIC;
        S : in STD_ULOGIC;
        T : in STD_ULOGIC);
end component;
  
```

-- Component Attribute specification for OFDDRTRSE  
 -- should be placed after architecture declaration but  
 -- before the begin keyword

-- Enter attributes here

-- Component Instantiation for OFDDRTRSE should be placed  
 -- in architecture after the begin keyword

```

OFDDRTRSE_INSTANCE_NAME : OFDDRTRSE
  port map (O => user_O,
            C0 => user_C0,
            C1 => user_C1,
            CE => user_CE,
            D0 => user_D0,
  
```

```
D1 => user_D1,  
R  => user_R,  
S  => user_S,  
T  => user_T);
```

## Verilog Instantiation Template

```
OFDDRTRSE instance_name (.O (user_O),  
                          .C0 (user_C0),  
                          .C1 (user_C1),  
                          .CE (user_CE),  
                          .D0 (user_D0),  
                          .D1 (user_D1),  
                          .R (user_R),  
                          .S (user_S),  
                          .T (user_T));
```







## OFDE, 4, 8, 16

### D Flip-Flops with Active-High Enable Output Buffers

#### Architectures Supported

OFDE, OFDE4, OFDE8, OFDE16	
Spartan-II, Spartan-III	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

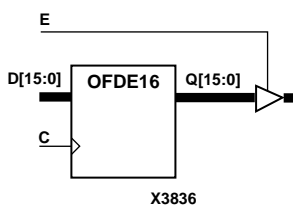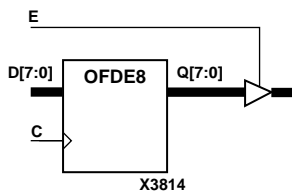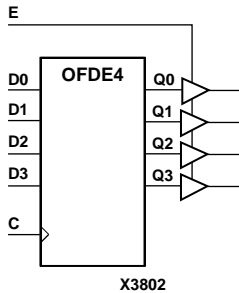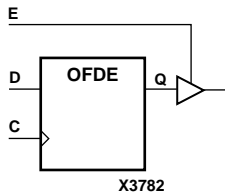

OFDE, OFDE4, OFDE8, and OFDE16 are single or multiple D flip-flops whose outputs are enabled by 3-state buffers. The flip-flop data outputs (Q) are connected to the inputs of output buffers (OBUFE). The OBUFE outputs (O) are connected to OPADs or IOPADs. The data on the data inputs (D) is loaded into the flip-flops during the Low-to-High clock (C) transition. When the active-High enable inputs (E) are High, the data on the flip-flop outputs (Q) appears on the O outputs. When E is Low, outputs are high impedance (Z state or Off).


The flip-flops are asynchronously cleared with Low outputs when power is applied, or when global reset is active.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.


Spartan-II, Spartan-III, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
E	D	C	O
0	X	X	Z
1	1	↑	1
1	0	↑	0

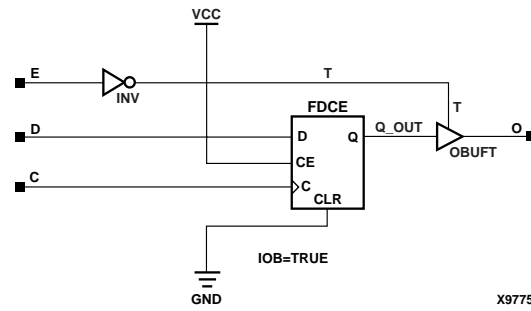


**OFDE Implementation Spartan-II, Spartan-II E, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

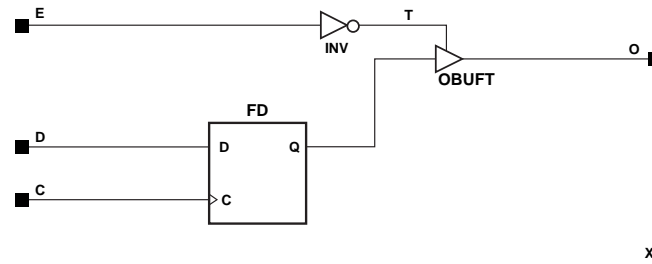

**OFDE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**



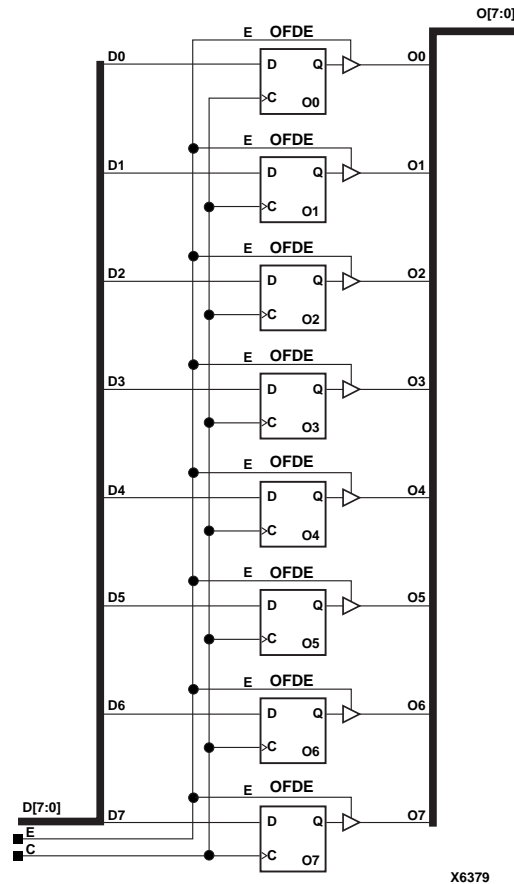

**OFDE8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

### Usage

This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an OFDE, you would infer an FDE and put the IOB = TRUE attribute on the component. Or, you could use the map option `-pr o` to pack all output registers into the IOBs.




## OFDE\_1

### D Flip-Flop with Active-High Enable Output Buffer and Inverted Clock

#### Architectures Supported

OFDE_1	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

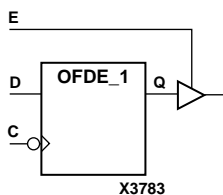


OFDE\_1 and its output buffer are located in an input/output block (IOB). The data output of the flip-flop (Q) is connected to the input of an output buffer or OBUFE. The output of the OBUFE is connected to an OPAD or an IOPAD. The data on the data input (D) is loaded into the flip-flop on the High-to-Low clock (C) transition. When the active-High enable input (E) is High, the data on the flip-flop output (Q) appears on the O output. When E is Low, the output is high impedance (Z state or Off).

The flip-flop is asynchronously cleared with Low output when power is applied, or when global reset is active.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
E	D	C	O
0	X	X	Z
1	1	↓	1
1	0	↓	0

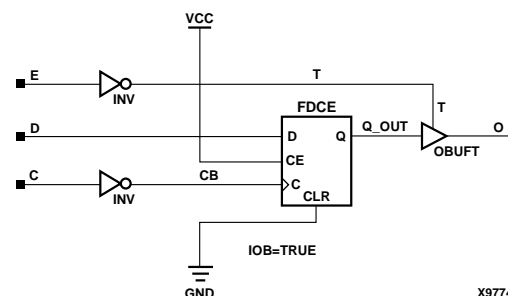

#### OFDE\_1 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

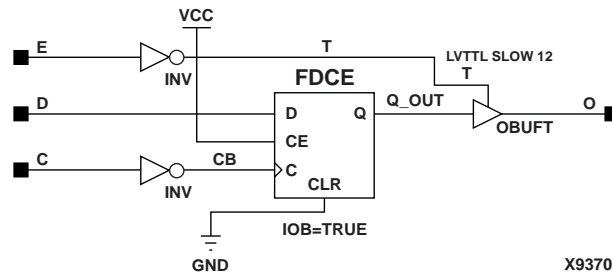

### OFDE\_1 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

#### Usage


This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an OFDE\_1, you would infer an FDE\_1 and put the IOB = TRUE attribute on the component. Or, you could use the map option `-pr o` to pack all output registers into the IOBs.

## OFDI

### Output D Flip-Flop (Asynchronous Preset)

#### Architectures Supported

OFDI	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

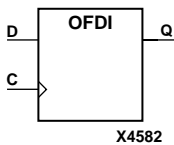


OFDI is contained in an input/output block (IOB). The output (Q) of the D flip-flop is connected to an OPAD or an IOPAD. The data on the D input is loaded into the flip-flop during the Low-to-High clock (C) transition and appears at the output (Q).

The flip-flop is asynchronously preset, output High, when power is applied.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs		Outputs
<b>D</b>	<b>C</b>	<b>Q</b>
D	↑	D

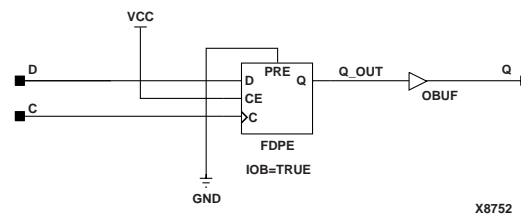

#### OFDI Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

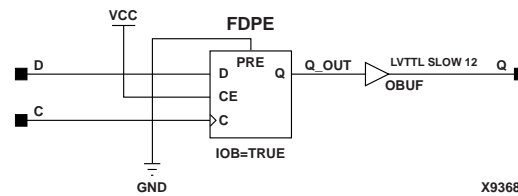

## OFDI Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

### Usage

This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an OFDI, you would infer an FDP and put the IOB = TRUE attribute on the component. Or, you could use the map option `-pr o` to pack all output registers into the IOBs.








## OFDI\_1

### Output D Flip-Flop with Inverted Clock (Asynchronous Preset)

#### Architectures Supported

OFDI_1	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

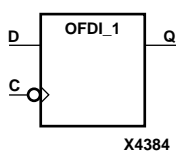


OFDI\_1 exists in an input/output block (IOB). The D flip-flop output (Q) is connected to an OPAD or an IOPAD. The data on the D input is loaded into the flip-flop during the High-to-Low clock (C) transition and appears on the Q output.

The flip-flop is asynchronously preset, output High, when power is applied.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs		Outputs
<b>D</b>	<b>C</b>	<b>Q</b>
D	↓	D

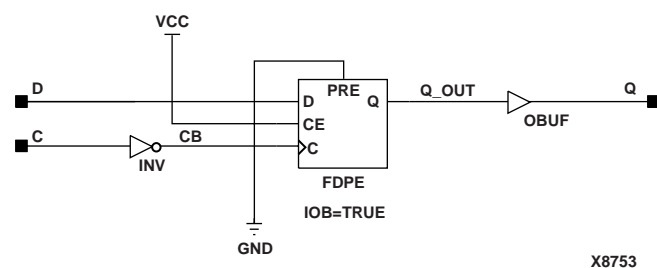

#### OFDI\_1 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

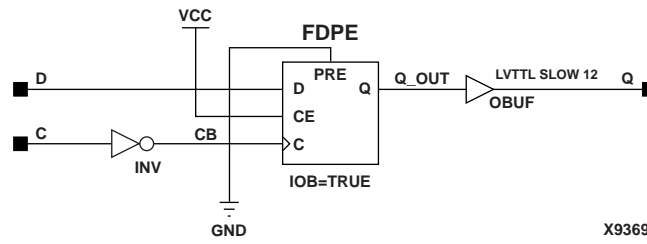

OFDI\_1 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

## Usage


This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an OFDI\_1, you would infer an FDP\_1 and put the IOB = TRUE attribute on the component. Or, you could use the map option `-pr o` to pack all output registers into the IOBs.




## OFDT, 4, 8, 16

### Single and Multiple D Flip-Flops with Active-Low 3-State Output Enable Buffers

OFDT, OFDT4, OFDT8, OFDT16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

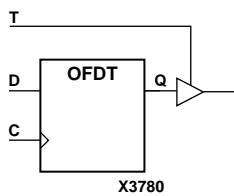

OFDT, OFDT4, OFDT8, and OFDT16 are single or multiple D flip-flops whose outputs are enabled by a 3-state buffers. The data outputs (Q) of the flip-flops are connected to the inputs of output buffers (OBUFT). The outputs of the OBUFTs (O) are connected to OPADs or IOPADs. The data on the data inputs (D) is loaded into the flip-flops during the Low-to-High clock (C) transition. When the active-Low enable inputs (T) are Low, the data on the flip-flop outputs (Q) appears on the O outputs. When T is High, outputs are high impedance (Off).

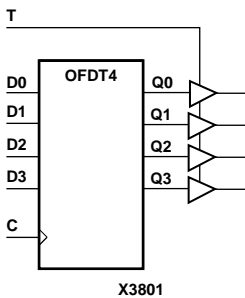


The flip-flops are asynchronously cleared with Low outputs, when power is applied, or when global reset is active.


For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

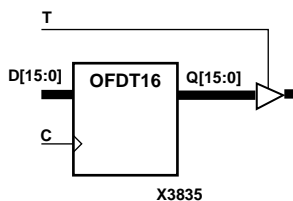


Inputs			Outputs
T	D	C	O
1	X	X	Z
0	D	↑	D

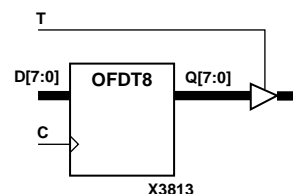


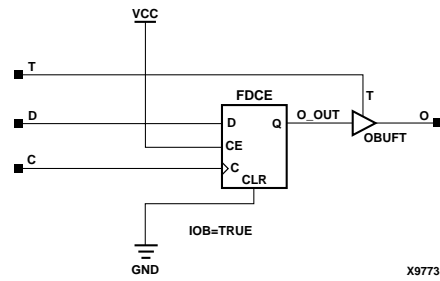


**OFDT Implementation Spartan-II, Spartan-II E, Virtex, Virtex-E**

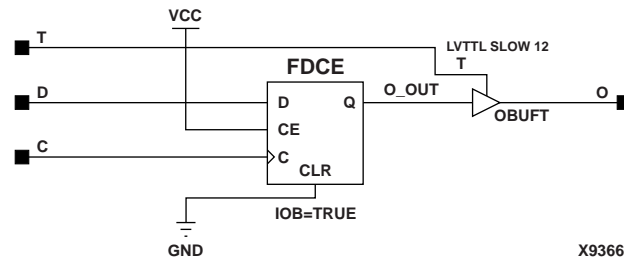

**OFDT Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

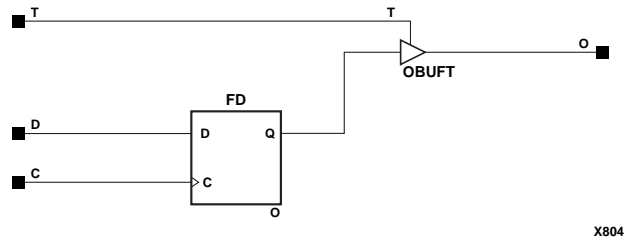

**OFDT Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

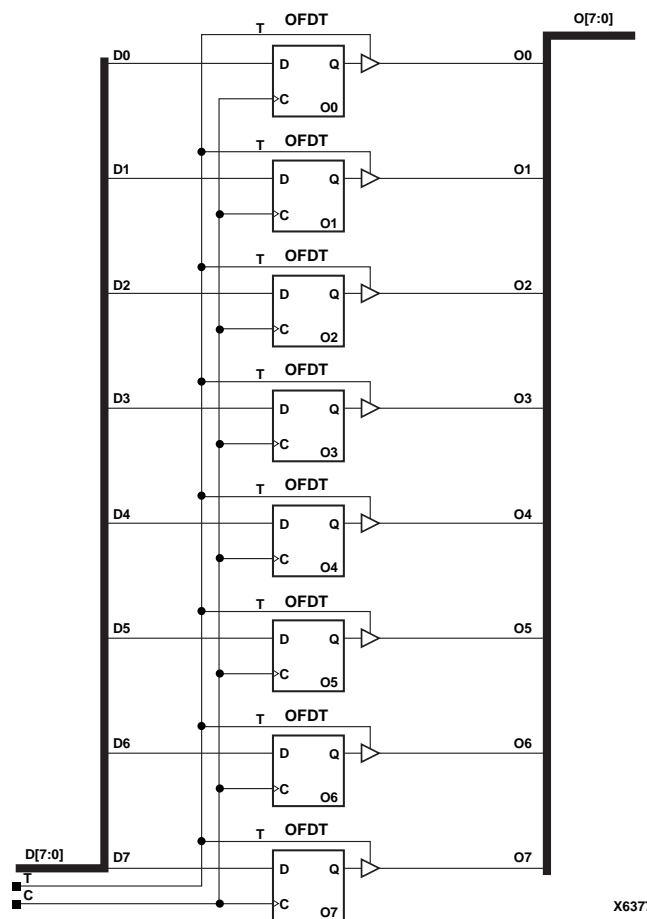

**OFDT8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIe, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

## Usage

This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an `IOB=TRUE` attribute on the component in the UCF file or in the code. For instance, to get an OFDT, you would infer an FDCE and put the `IOB = TRUE` attribute on the component. Or, you could use the map option `-pr o` to pack all output registers into the IOBs.






## OFDT\_1

### D Flip-Flop with Active-Low 3-State Output Buffer and Inverted Clock

#### Architectures Supported

OFDT_1	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

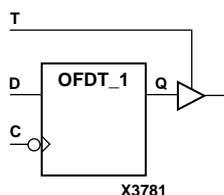


OFDT\_1 and its output buffer are located in an input/output block (IOB). The flip-flop data output (Q) is connected to the input of an output buffer (OBUFT). The OBUFT output is connected to an OPAD or an IOPAD. The data on the data input (D) is loaded into the flip-flop on the High-to-Low clock (C) transition. When the active-Low enable input (T) is Low, the data on the flip-flop output (Q) appears on the O output. When T is High, the output is high impedance (Off).

The flip-flop is asynchronously cleared with Low output when power is applied, or when global reset is active.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
T	D	C	O
1	X	X	Z
0	1	↓	1
0	0	↓	0

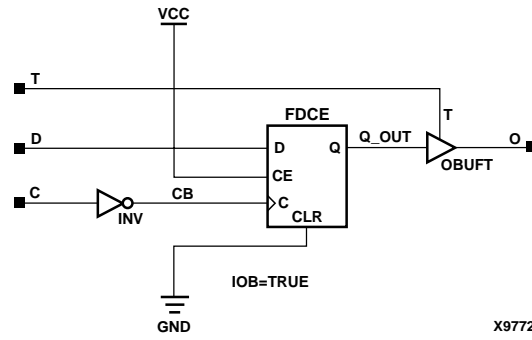

**OFDT\_1 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E**

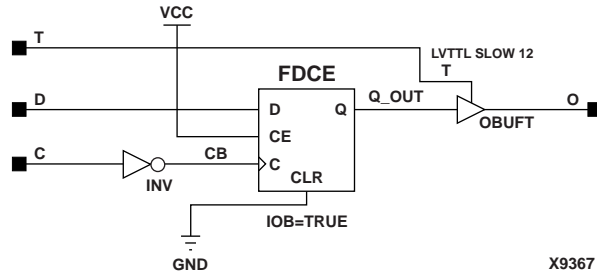

**OFDT\_1 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

### Usage


This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an OFDT\_1, you would infer an FDCE\_1 and put the IOB = TRUE attribute on the component. Or, you could use the map option `-pr o` to pack all output registers into the IOBs.

## OFDX, 4, 8, 16

### Single- and Multiple-Output D Flip-Flops with Clock Enable


#### Architectures Supported

OFDX, OFDX4, OFDX8, OFDX16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

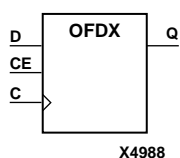

OFDX, OFDX4, OFDX8, and OFDX16 are single and multiple output D flip-flops. The Q outputs are connected to OPADs or IOPADs. The data on the D inputs is loaded into the flip-flops during the Low-to-High clock (C) transition and appears on the Q outputs. When CE is Low, flip-flop outputs do not change.




The flip-flops are asynchronously cleared with Low outputs, when power is applied, or when global reset is active.

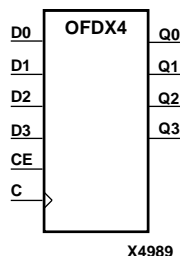


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.


Inputs			Outputs
CE	D	C	Q
1	D <sub>n</sub>	↑	D <sub>n</sub>
0	X	X	No Chg

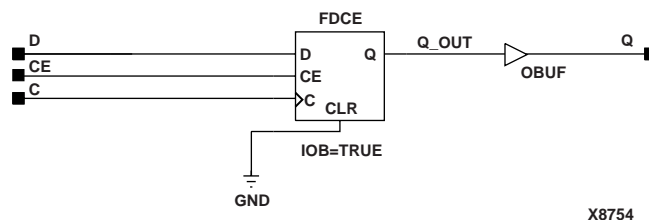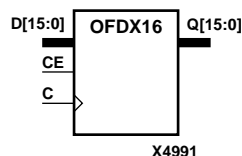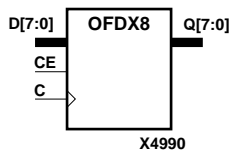

#### OFDX Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

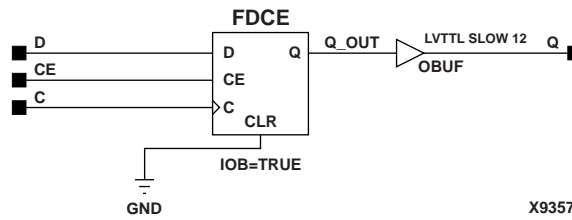

**OFDX Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

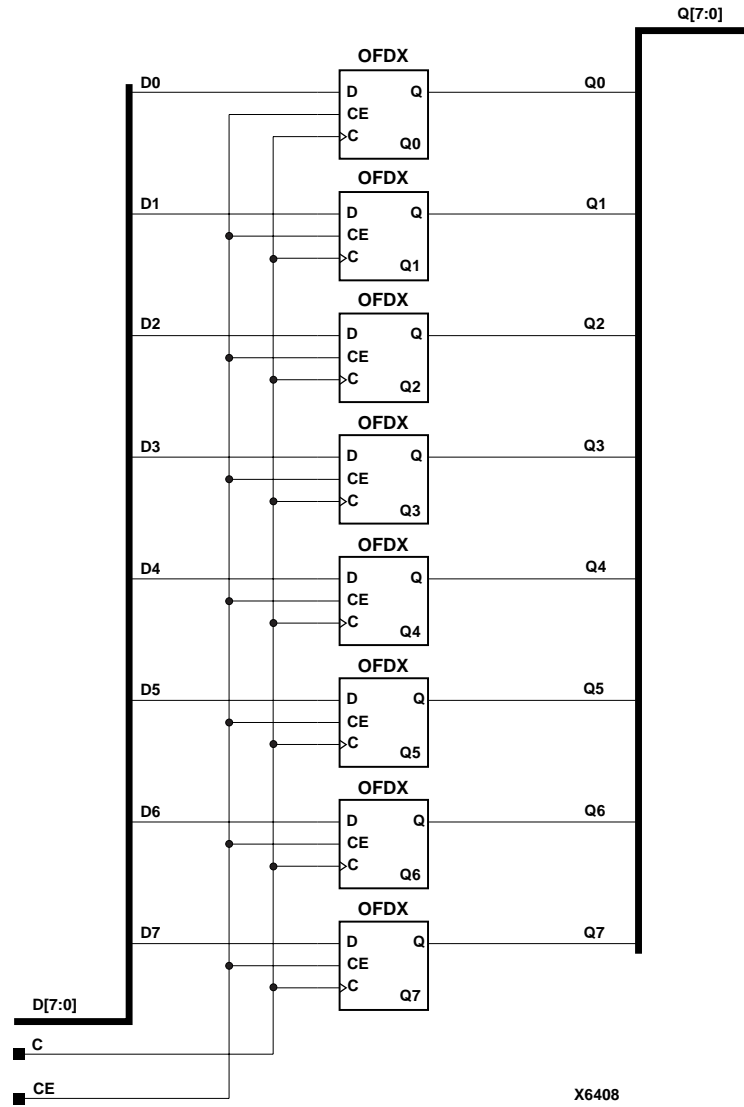

**OFDX8 Implementation Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

## Usage

This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an OFDX, you would infer an FDCE and put the IOB = TRUE attribute on the component. Or, you could use the map option `-pr o` to pack all output registers into the IOBs.




## OFDX\_1

### Output D Flip-Flop with Inverted Clock and Clock Enable

#### Architectures Supported

OFDX_1	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

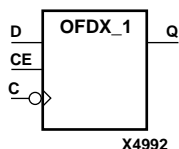


OFDX\_1 is located in an input/output block (IOB). The output (Q) of the D flip-flop is connected to an OPAD or an IOPAD. The data on the D input is loaded into the flip-flop during the High-to-Low clock (C) transition and appears on the Q output. When the CE pin is Low, the output (Q) does not change.

The flip-flop is asynchronously cleared with Low output when power is applied, or when global reset is active.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
CE	D	C	Q
1	D	↓	D
0	X	X	No Chg

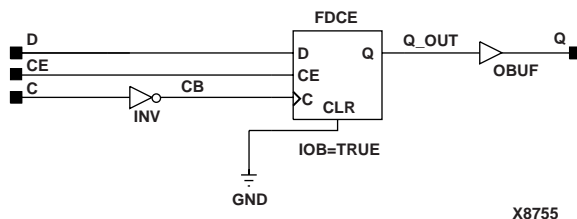

#### OFDX\_1 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

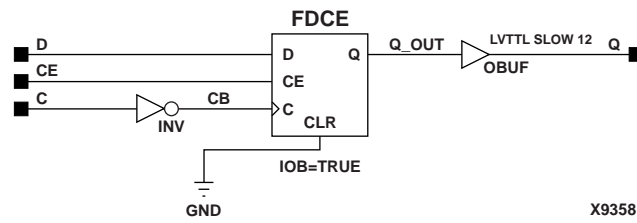

## OFDX\_1 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

### Usage

This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an OFDX\_1, you would infer an FDCE\_1 and put the IOB = TRUE attribute on the component. Or, you could use the map option `-pr o` to pack all output registers into the IOBs.




# OFDXI

## Output D Flip-Flop with Clock Enable (Asynchronous Preset)

### Architectures Supported

OFDXI	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

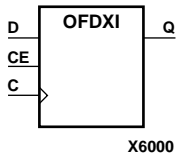


OFDXI is contained in an input/output block (IOB). The output (Q) of the D flip-flop is connected to an OPAD or an IOPAD. The data on the D input is loaded into the flip-flop during the Low-to-High clock (C) transition and appears at the output (Q). When CE is Low, the output does not change.

The flip-flop is asynchronously preset with High output when power is applied, or when global reset is active.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
CE	D	C	Q
1	D	↑	D
0	X	X	No Chg

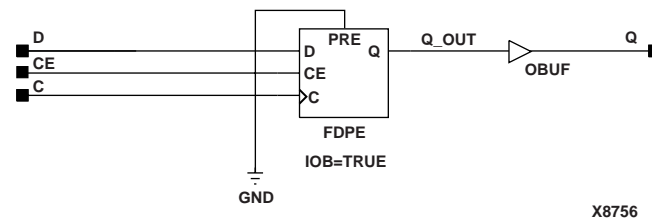

### OFDXI Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

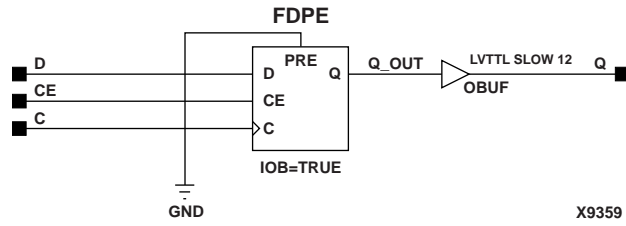

**OFDXI Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

## Usage

This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an IOB=TRUE attribute on the component in the UCF file or in the code. For instance, to get an OFDXI, you would infer an FDPE and put the IOB = TRUE attribute on the component. Or, you could use the map option `-pr o` to pack all output registers into the IOBs.




## OFDXI\_1

### Output D Flip-Flop with Inverted Clock and Clock Enable (Asynchronous Preset)

#### Architectures Supported

OFDXI_1	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

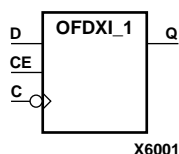


OFDXI\_1 is located in an input/output block (IOB). The D flip-flop output (Q) is connected to an OPAD or an IOPAD. The data on the D input is loaded into the flip-flop during the High-to-Low clock (C) transition and appears on the Q output. When CE is Low, the output (Q) does not change.

The flip-flop is asynchronously preset with High output when power is applied, or when global reset is active.


Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs			Outputs
CE	D	C	Q
1	D	↓	D
0	X	X	No Chg

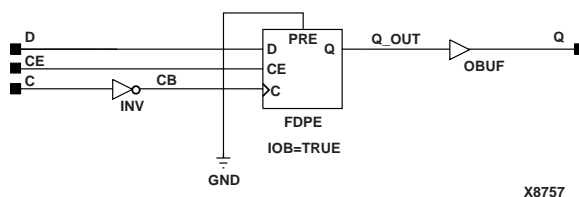

#### OFDXI\_1 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

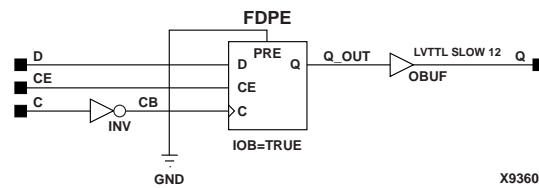

## OFDXI\_1 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

### Usage





This component is inside of the IOB. It cannot be directly inferred. The most common design practice is to infer a regular component and put an `IOB=TRUE` attribute on the component in the UCF file or in the code. For instance, to get an `OFDXI_1`, you would infer an `FDPE_1` and put the `IOB = TRUE` attribute on the component. Or, you could use the map option `-pr o` to pack all output registers into the IOBs.

## OPAD, 4, 8, 16

### Single- and Multiple-Output Pads


#### Architectures Supported

OPAD	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	Primitive
OPAD4, OPAD8, OPAD16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	Primitive

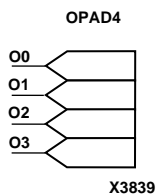

OPAD, OPAD4, OPAD8, and OPAD16 are single and multiple output pads. An OPAD connects a device pin to an output signal of a PLD. It is internally connected to an input/output block (IOB), which is configured by the software as an OBUF, an OBUFT, an OBUFE, an OFD, or an OFDT.

See the appropriate CAE tool interface user guide for details on assigning pin location and identification.

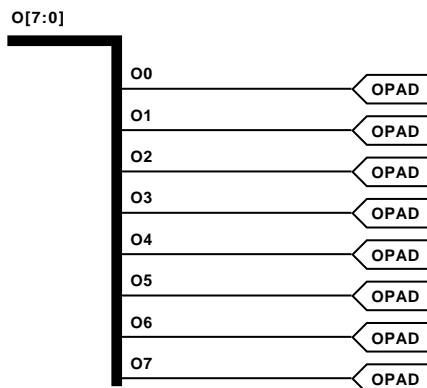

X7656

OPAD8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X

## Usage

For HDL, it is not necessary to use these elements in the design. They will be added automatically.

## Commonly Used Constraints

IOBDELAY

PULLDOWN




## OR2-9

### 2- to 9-Input OR Gates with Inverted and Non-Inverted Inputs

<b>OR2, OR2B1, OR2B2, OR3, OR3B1, OR3B2, OR3B3, OR4, OR4B1, OR4B2, OR4B3, OR4B4</b>	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No
<b>OR5, OR5B1, OR5B2, OR5B3, OR5B4, OR5B5</b>	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II PRO	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No


<b>OR6, OR7, OR8, OR9</b>	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II PRO	Macro
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No

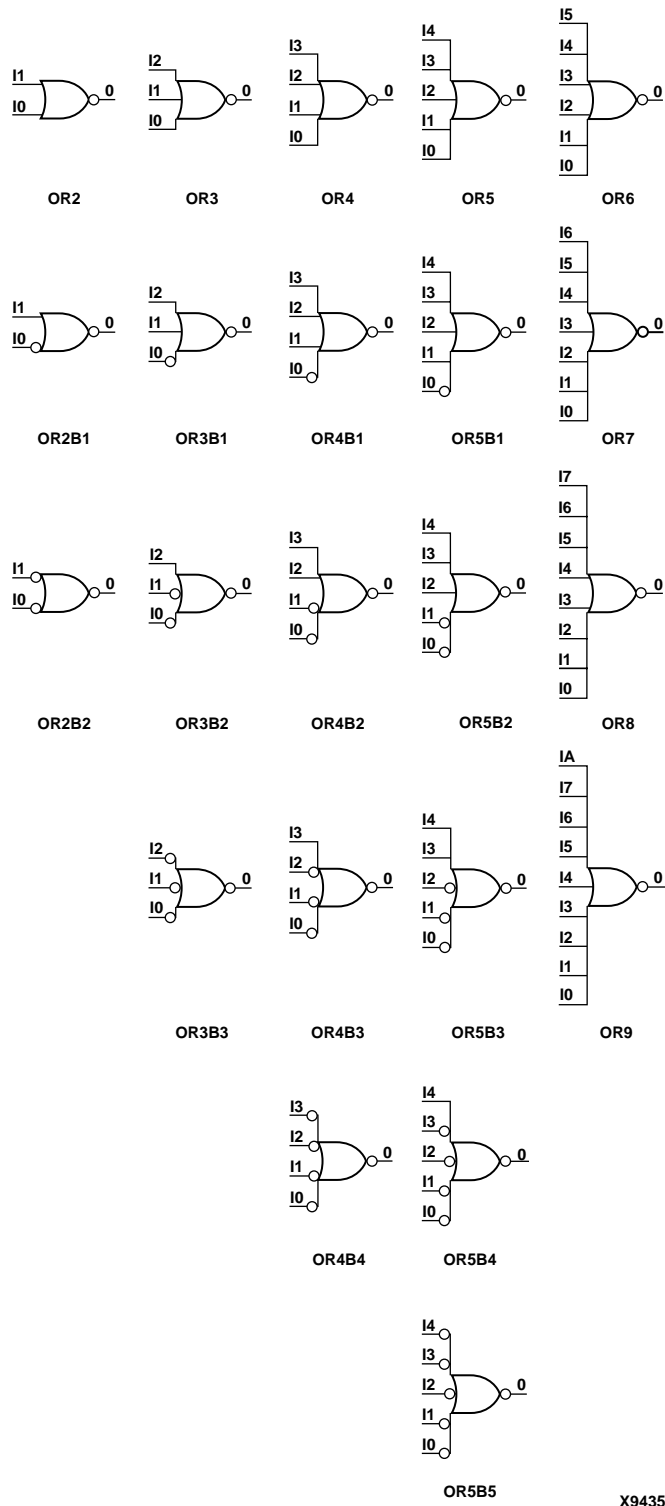


OR Gate Representations

The OR function is performed in the Configurable Logic Block (CLB) function generators for Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II Pro, and Virtex-II Pro X. OR functions of up to five inputs are available in any combination of inverting and non-inverting inputs. OR functions of six to nine inputs are available with only non-inverting inputs. To invert some or all inputs, use external inverters. Since each input uses a CLB resource, replace functions with unused inputs with functions having the necessary number of inputs.

See “OR12, 16” for information on additional OR functions for the Spartan-II, Spartan-IIE, Virtex, and Virtex-E.

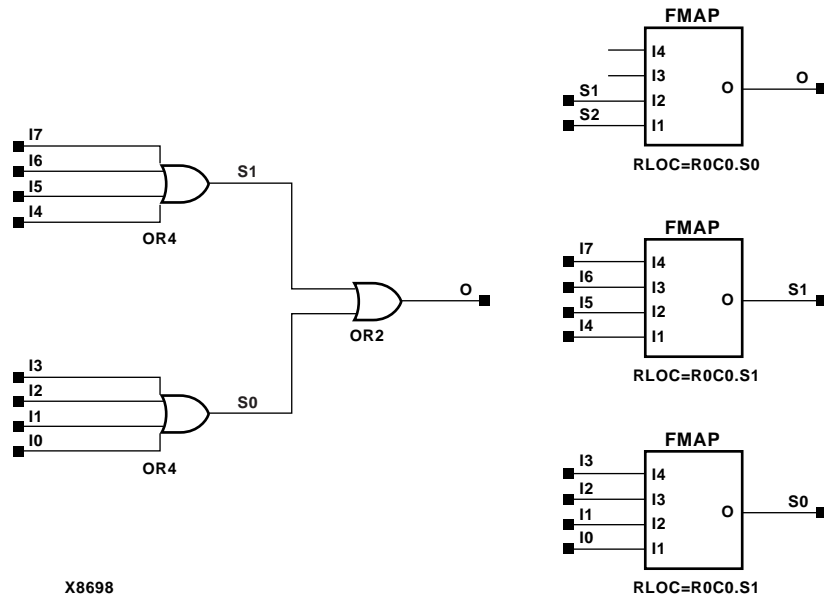

**OR8 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E**

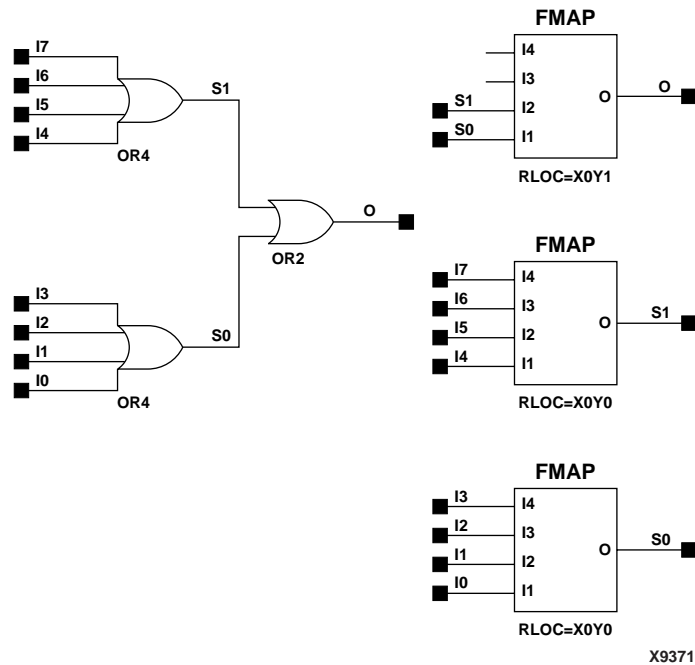

**OR8 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

**Usage**

OR2 through OR5 are primitives that can be inferred or instantiated. OR6 through OR9 are macros which can be inferred.

**VHDL Inference Code**

```
architecture Behavioral of or6 is
begin
process (I0, I1, I2, I3, I4, I5)
begin
O <= (I0 or I1 or I2 or I3 or I4 or I5);
end process;
end Behavioral;
```

**Verilog Inference Code (OR6)**

```
always @(I0 or I1 or I2 or I3 or I4 or I5)
begin
O <= (I0 || I1 || I2 || I3 || I4 || I5);
end
```

## VHDL Instantiation Template for OR5

Following is the VHDL code for OR5. To instantiate OR2, remove I2, I3, and I4. To instantiate OR3, remove I3 and I4. For OR4, remove I4. OR2B1, and OR2B2 have the same code as OR2. OR3B1, 3B2, and 3B3 have the same code as OR3 and so forth.

```
-- Component Declaration for OR5 should be placed
-- after architecture statement but before begin keyword

component OR5
  port (O : out STD_ULOGIC;
        I0 : in STD_ULOGIC;
        I1 : in STD_ULOGIC;
        I2 : in STD_ULOGIC;
        I3 : in STD_ULOGIC;
        I4: in STD_ULOGIC);
end component;

-- Component Attribute specification for OR5
-- should be placed after architecture declaration but
-- before the begin keyword

-- Attributes should be placed here

-- Component Instantiation for OR5 should be placed
-- in architecture after the begin keyword

OR5_INSTANCE_NAME : OR5
  port map (O => user_O,
           I0 => user_I0,
           I1 => user_I1,
           I2 => user_I2,
           I3 => user_I3,
           I4 => user_I4);
```

## Verilog Instantiation Template for OR5

```
OR5 OR5_instance_name (.O (user_O),
                      .I0 (user_I0),
                      .I1 (user_I1),
                      .I2 (user_I2),
                      .I3 (user_I3),
                      .I4 (user_I4));
```

## Commonly Used Constraints

None




## OR12, 16


### 12- and 16-Input OR Gates with Non-Inverted Inputs


#### Architectures Supported

OR12, OR16	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II PRO	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No




See “OR2-9” for information on OR functions.



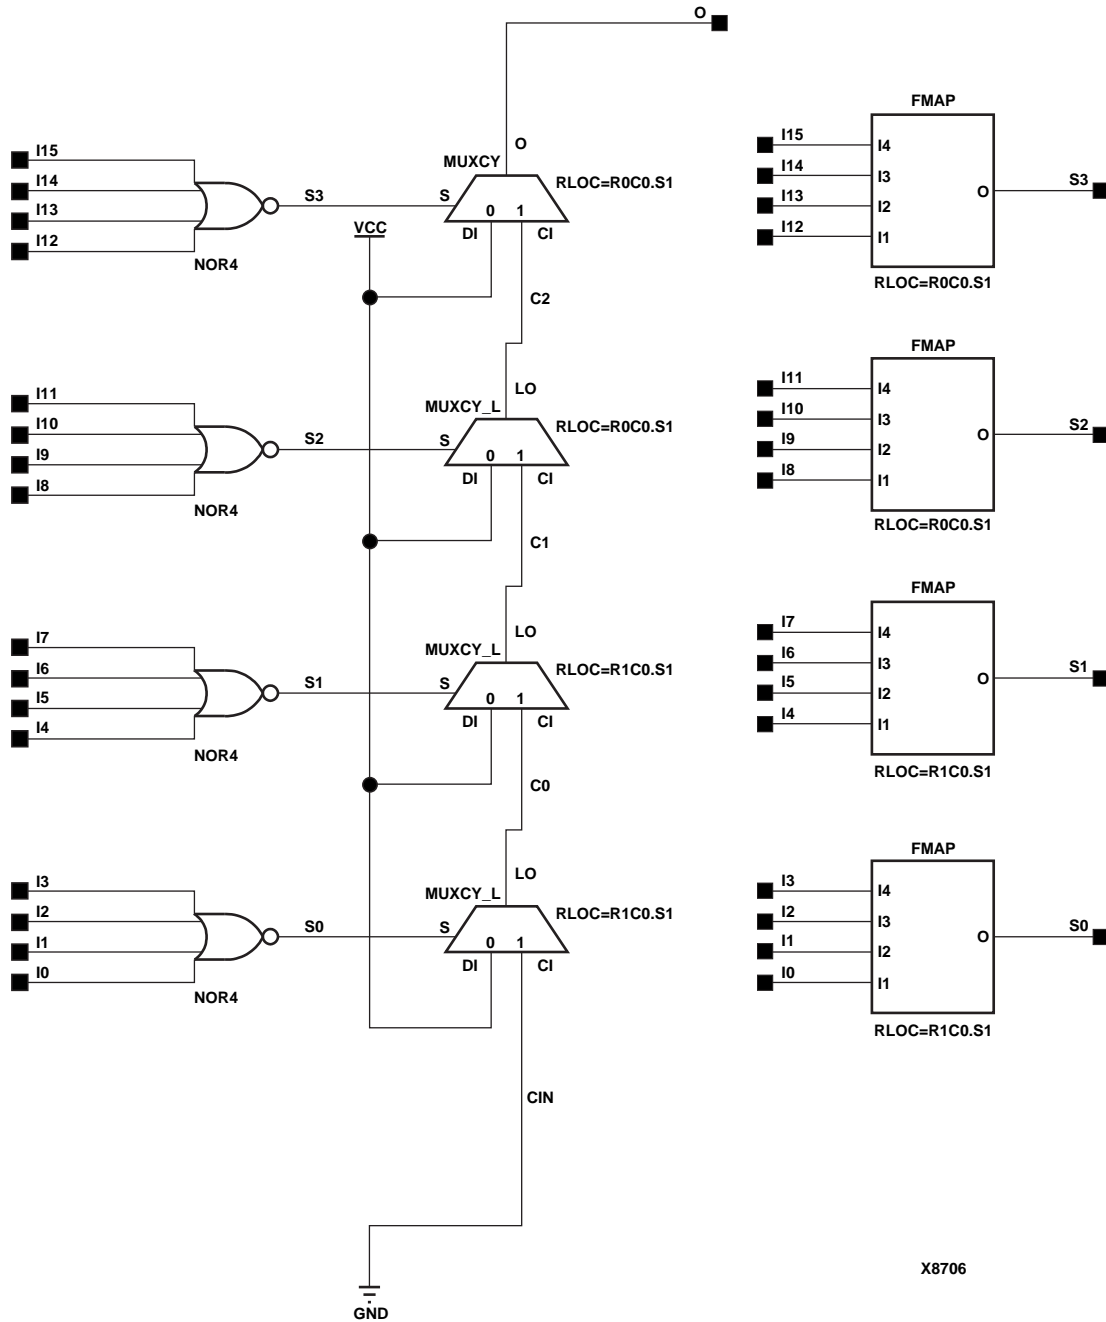

OR16 Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E



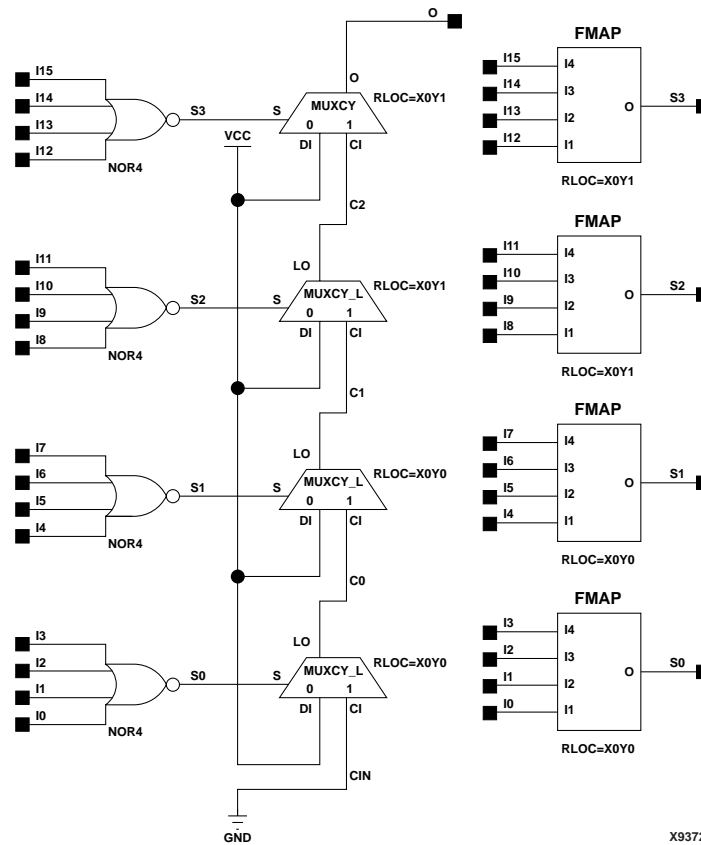

### OR16 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X

#### Usage

For HDL, OR12 and OR16 are macros that are inferred. See “OR2-9” for information about inferring OR gates.




## ORCY

### OR with Carry Logic

#### Architectures Supported

ORCY	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



ORCY is a special OR with general O output used for generating faster and smaller arithmetic functions.

Each Virtex-II, Virtex-II Pro, and Virtex-II Pro X slice contains a dedicated 2-input OR gate that ORs together carry out values for a series of horizontally adjacent carry chains. The OR gate gets one input external to the slice and the other input from the output of the high order carry mux. The OR gate's output drives the next slice's OR gate horizontally across the die.

Only MUXCY outputs can drive the signal on the CI pin. Only ORCY outputs or logic zero can drive the I pin.

#### Usage

For HDL, the ORCY design element should be instantiated rather than inferred.

#### VHDL Instantiation Template

```
-- Component Declaration for ORCY should be placed
-- after architecture statement but before begin keyword

component ORCY
  port (O : out STD_ULOGIC;
        CI : in STD_ULOGIC;
        I : in STD_ULOGIC);
end component;

-- Component Attribute specification for ORCY
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for ORCY should be placed
-- in architecture after the begin keyword
```

```
ORCY_INSTANCE_NAME : ORCY
    port map (O => user_O,
              CI => user_CI,
              I => user_I);
```

### Verilog Instantiation Template

```
ORCY instance_name (.O (user_O),
                    .CI (user_CI),
                    .I (user_I));
```

### Commonly Used Constraints

None

## PPC405

### Primitive for the Power PC Core

#### Architectures Supported

PPC405	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive*
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
* Not supported for Virtex-II. Supported for Virtex-II Pro and Virtex-II Pro X only.	

The PowerPC 405 embedded core is a 32-bit RISC core integrating a PowerPC 405 CPU, separate instruction and data caches, a JTAG port, trace FIFO, multiple timers, and a memory management unit (MMU). Integrated on-chip memory (OCM) controllers provide dedicated interfaces between Block SelectRAM memory and the processor core instruction and data paths for high-speed access. The PowerPC 405 core implements the PowerPC User Instruction Set.

For complete information about the PowerPC 405, see the following documents:


- *Virtex-II Pro Datasheet*
- *Virtex-II Pro Handbook*
- *The PowerPC 405 Core Processor Block Manual*
- *The PowerPC 405 User Guide*

The following table lists the inputs and outputs of the primitive. For detailed information about the pinouts, see the *DS083 Virtex-II Pro Data Sheet*.

Inputs	Outputs
BRAMDSOCMCLK	C405CPMCORESLEEPREQ
BRAMDSOCMRDDBUS [0:31]	C405CPMMSRCE
BRAMISOCMCLK	C405CPMMSREE
BRAMISOCMRDDBUS [0:63]	C405CPMTIMERIRQ
CPMC405CLOCK	C405CPMTIMERRESETRREQ
CPMC405CORECLKINACTIVE	C405DBGMSRWE
CPMC405CPUCLKEN	C405DBGSTOPACK
CPMC405JTAGCLKEN	C405DBGWBCOMPLETE
CPMC405TIMERCLKEN	C405DBGWBFULL

Inputs	Outputs
CPMC405TIMERTICK	C405DBGWBIAR[0:29]
DBGC405DEBUGHALT	C405DCRABUS [0:9]
DBGC405EXTBUSHOLDACK	C405DCRDBUSOUT [0:31]
DBGC405UNCONDDEBUGEVENT	C405DCRREAD
DCRC405ACK	C405DCRWRITE
DCRC405DBUSIN [0:31]	C405JTGCAPTUREDR
DSARCVLUE [0:7]	C405JTGEXTST
DSCNTLVALUE [0:7]	C405JTGPGMOUT
EICC405CRITINPUTIRQ	C405JTGSHIFTDR
EICC405EXTINPUTIRQ	C405JTGTD0
ISARCVLUE [0:7]	C405JTGTD0EN
ISCNTLVALUE [0:7]	C405JTGUPDATER
JTGC405BNDSCANTDO	C405PLBDCUABORT
JTGC405TCK	C405PLBDCUABUS [0:31]
JTGC405TDI	C405PLBDCUBE [0:7]
JTGC405TMS	C405PLBDCUCACHEABLE
JTGC405TRSTNEG	C405PLBDCUGUARDED
MCBCPUCLKEN	C405PLBDCUPRIORITY [0:1]
MCBJTAGEN	C405PLBDCUREQUEST
MCBTIMEREN	C405PLBDCURNW
MCPPCRST	C405PLBDCUSIZE2
PLBC405DCUADDRACK	C405PLBDCUU0ATTR
PLBC405DCUBUSY	C405PLBDCUWRDBUS [0:63]
PLBC405DCUERR	C405PLBDCUWRITETHRU
PLBC405DCURDDACK	C405PLBICUABORT
PLBC405DCURDDBUS [0:63]	C405PLBICUABUS [0:29]
PLBC405DCURDWDADDR [1:3]	C405PLBICUCACHEABLE
PLBC405DCUSSIZE1	C405PLBICUPRIORITY [0:1]
PLBC405DCUWRDACK	C405PLBICUREQUEST
PLBC405ICUADDRACK	C405PLBICUSIZE [2:3]
PLBC405ICUBUSY	C405PLBICUU0ATTR
PLBC405ICUERR	C405RSTCHIPRESETREQ
PLBC405ICURDDACK	C405RSTCORERESETREQ
PLBC405ICURDDBUS [0:63]	C405RSTSYSRESETREQ
PLBC405ICURDWDADDR [1:3]	C405TRCCYCLE
PLBC405ICUSSIZE1	C405TRCEVENEXECUTIONSTATUS [0:1]
PLBCLK	C405TRCODDEXECUTIONSTATUS [0:1]
RSTC405RESETCHIP	C405TRCTRACESTATUS [0:3]
RSTC405RESETCORE	C405TRCTRIGGEREVENTOUT
RSTC405RESETSYS	C405TRCTRIGGEREVENTTYPE [0:10]
TIEC405DETERMINISTICMULT	C405XXXMACHINECHECK

Inputs	Outputs
TIEC405DISOPERANDFWD	DSOCMBRAMABUS [8:29]
TIEC405MMUEN	DSOCMBRAMBYTEWRITE [0:3]
TIEDSOCMDCRADDR [0:7]	DSOCMBRAMEN
TIEISOCMDCRADDR [0:7]	DSOCMBRAMWRDBUS [0:31]
TRCC405TRACEDISABLE	DSOCMBUSY
TRCC405TRIGGEREVENTIN	ISOCMBRAMEN
	ISOCMBRAMEVENWRITEEN
	ISOCMBRAMODDWRITEEN
	ISOCMBRAMRDABUS [8:28]
	ISOCMBRAMWRABUS [8:28]
	ISOCMBRAMWRDBUS [0:31]

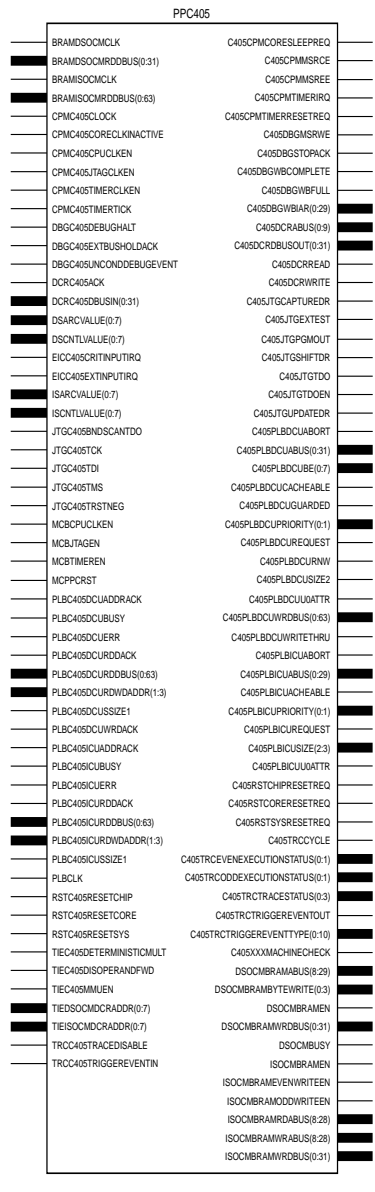

## Usage

For HDL, the PPC405 design element is instantiated rather than inferred.

## VHDL Instantiation Template

- Component Declaration for PPC405 should be placed
- after architecture statement but before begin keyword

component PPC405



```

port (C405CPMCORESLEEPREQ   : out STD_ULOGIC;
      C405CPMMSRCE          : out STD_ULOGIC;
      C405CPMMSREE          : out STD_ULOGIC;
      C405CPMTIMERIRQ       : out STD_ULOGIC;
      C405CPMTIMERRESETREQ  : out STD_ULOGIC;
      C405DBGMSRWE          : out STD_ULOGIC;
      C405DBGSTOPACK        : out STD_ULOGIC;
      C405DBGWBCOMPLETE     : out STD_ULOGIC;
      C405DBGWBFULL         : out STD_ULOGIC;
      C405DBGWBIAR          : out STD_LOGIC_VECTOR (29 downto 0);
      C405DCRABUS           : out STD_LOGIC_VECTOR (9 downto 0);
      C405DCRDBUSOUT        : out STD_LOGIC_VECTOR (31 downto 0);
      C405DCRREAD           : out STD_ULOGIC;
      C405DCRWRITE          : out STD_ULOGIC;
      C405JTGCAPTUREDR      : out STD_ULOGIC;
      C405JTGEXTEST         : out STD_ULOGIC;
      C405JTGPGMOUT         : out STD_ULOGIC;
      C405JTGSHIFTDR        : out STD_ULOGIC;
      C405JTGTD0            : out STD_ULOGIC;
      C405JTGTD0EN         : out STD_ULOGIC;
      C405JTGUPDATEDR       : out STD_ULOGIC;
      C405PLBDCUABORT        : out STD_ULOGIC;
      C405PLBDCUABUS        : out STD_LOGIC_VECTOR (31 downto 0);
      C405PLBDCUBE          : out STD_LOGIC_VECTOR (7 downto 0);
      C405PLBDCUCACHEABLE   : out STD_ULOGIC;
      C405PLBDCUGUARDED     : out STD_ULOGIC;
      C405PLBDCUPRIORITY    : out STD_LOGIC_VECTOR (1 downto 0);
      C405PLBDCUREQUEST     : out STD_ULOGIC;
      C405PLBDCURNW         : out STD_ULOGIC;
      C405PLBDCUSIZE2       : out STD_ULOGIC;
      C405PLBDCUU0ATTR      : out STD_ULOGIC;
      C405PLBDCUWRDBUS      : out STD_LOGIC_VECTOR (63 downto 0);
      C405PLBDCUWRITETHRU   : out STD_ULOGIC;
      C405PLBICUABORT       : out STD_ULOGIC;
      C405PLBICUABUS        : out STD_LOGIC_VECTOR (29 downto 0);

```

C405PLBICUCACHEABLE : out STD\_ULOGIC;  
C405PLBICUPRIORITY : out STD\_LOGIC\_VECTOR (1 downto 0);  
C405PLBICUREQUEST : out STD\_ULOGIC;  
C405PLBICUSIZE : out STD\_LOGIC\_VECTOR (3 downto 2);  
C405PLBICUU0ATTR : out STD\_ULOGIC;  
C405RSTCHIPRESETREQ : out STD\_ULOGIC;  
C405RSTCORERESETREQ : out STD\_ULOGIC;  
C405RSTSYSRESETREQ : out STD\_ULOGIC;  
C405TRCCYCLE : out STD\_ULOGIC;  
C405TRCEVENEXECUTIONSTATUS: out STD\_LOGIC\_VECTOR (1 downto 0);  
C405TRCODDEXECUTIONSTATUS : out STD\_LOGIC\_VECTOR (1 downto 0);  
C405TRCTRACESTATUS : out STD\_LOGIC\_VECTOR (3 downto 0);  
C405TRCTRIGGEREVENTOUT : out STD\_ULOGIC;  
C405TRCTRIGGEREVENTTYPE : out STD\_LOGIC\_VECTOR (10 downto 0);  
C405XXXMACHINECHECK : out STD\_ULOGIC;  
DSOCMBRAMABUS : out STD\_LOGIC\_VECTOR (29 downto 8);  
DSOCMBRAMBYTEWRITE : out STD\_LOGIC\_VECTOR (3 downto 0);  
DSOCMBRAMEN : out STD\_ULOGIC;  
DSOCMBRAMWRDBUS : out STD\_LOGIC\_VECTOR (31 downto 0);  
DSOCMBUSY : out STD\_ULOGIC;  
ISOCMBRAMEN : out STD\_ULOGIC;  
ISOCMBRAMEVENWRITEEN : out STD\_ULOGIC;  
ISOCMBRAMODDWRITEEN : out STD\_ULOGIC;  
ISOCMBRAMRDABUS : out STD\_LOGIC\_VECTOR (28 downto 8);  
ISOCMBRAMWRABUS : out STD\_LOGIC\_VECTOR (28 downto 8);  
ISOCMBRAMWRDBUS : out STD\_LOGIC\_VECTOR (31 downto 0);  
BRAMDSOCMCLK : in STD\_ULOGIC;  
BRAMDSOCMRDDBUS : in STD\_LOGIC\_VECTOR (31 downto 0);  
BRAMISOCMCLK : in STD\_ULOGIC;  
BRAMISOCMRDDBUS : in STD\_LOGIC\_VECTOR (63 downto 0);  
CPMC405CLOCK : in STD\_ULOGIC;  
CPMC405CORECLKINACTIVE : in STD\_ULOGIC;  
CPMC405CPUCLKEN : in STD\_ULOGIC;  
CPMC405JTAGCLKEN : in STD\_ULOGIC;  
CPMC405TIMERCLKEN : in STD\_ULOGIC;

```

CPMC405TIMERTICK      : in STD_ULOGIC;
DBGC405DEBUGHALT     : in STD_ULOGIC;
DBGC405EXTBUSHOLDACK  : in STD_ULOGIC;
DBGC405UNCONDDEBUGEVENT : in STD_ULOGIC;
DCRC405ACK           : in STD_ULOGIC;
DCRC405DBUSIN       : in STD_LOGIC_VECTOR (31 downto 0);
DSARCVALUE          : in STD_LOGIC_VECTOR (7 downto 0);
DSCNTLVALUE         : in STD_LOGIC_VECTOR (7 downto 0);
EICC405CRITINPUTIRQ  : in STD_ULOGIC;
EICC405EXTINPUTIRQ   : in STD_ULOGIC;
ISARCVALUE          : in STD_LOGIC_VECTOR (7 downto 0);
ISCNTLVALUE         : in STD_LOGIC_VECTOR (7 downto 0);
JTGC405BNDSCANTDO    : in STD_ULOGIC;
JTGC405TCK           : in STD_ULOGIC;
JTGC405TDI           : in STD_ULOGIC;
JTGC405TMS           : in STD_ULOGIC;
JTGC405TRSTNEG       : in STD_ULOGIC;
MCBCPUCLKEN         : in STD_ULOGIC;
MCBJTAGEN           : in STD_ULOGIC;
MCBTIMEREN          : in STD_ULOGIC;
MCPPCRST            : in STD_ULOGIC;
PLBC405DCUADDRACK    : in STD_ULOGIC;
PLBC405DCUBUSY       : in STD_ULOGIC;
PLBC405DCUERR        : in STD_ULOGIC;
PLBC405DCURDDACK     : in STD_ULOGIC;
PLBC405DCURDDBUS     : in STD_LOGIC_VECTOR (63 downto 0);

PLBC405DCURDWDADDR   : in STD_LOGIC_VECTOR (3 downto 1);
PLBC405DCUSSIZE1     : in STD_ULOGIC;
PLBC405DCUWRDACK     : in STD_ULOGIC;
PLBC405ICUADDRACK    : in STD_ULOGIC;
PLBC405ICUBUSY       : in STD_ULOGIC;
PLBC405ICUERR        : in STD_ULOGIC;
PLBC405ICURDDACK     : in STD_ULOGIC;
PLBC405ICURDDBUS     : in STD_LOGIC_VECTOR (63 downto 0);

```

```
PLBC405ICURDWDADDR    : in STD_LOGIC_VECTOR (3 downto 1);
PLBC405ICUFSIZE1      : in STD_ULOGIC;
PLBCLK                 : in STD_ULOGIC;
RSTC405RESETCHIP      : in STD_ULOGIC;
RSTC405RESETCORE      : in STD_ULOGIC;
RSTC405RESETSYS       : in STD_ULOGIC;
TIEC405DETERMINISTICMULT : in STD_ULOGIC;
TIEC405DISOPERANDFWD  : in STD_ULOGIC;
TIEC405MMUEN          : in STD_ULOGIC;
TIEDSOCMDCRADDR       : in STD_LOGIC_VECTOR (7 downto 0);
TIEISOCMDCRADDR       : in STD_LOGIC_VECTOR (7 downto 0);
TRCC405TRACEDISABLE   : in STD_ULOGIC;
TRCC405TRIGGEREVENTINE : in STD_ULOGIC);
```

end component;

```
-- Component Attribute specification for PPC405
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for PPC405 should be placed
-- in architecture after the begin keyword
```

```
PPC405_INSTANCE_NAME : PPC405
```

```
port map (C405CPMCORESLEEPREQ => user_C405CPMCORESLEEPREQ,
          C405CPMMSRCE         => user_C405CPMMSRCE,
          C405CPMMSREE         => user_C405CPMMSREE,
          C405CPMTIMERIRQ      => user_C405CPMTIMERIRQ,
          C405CPMTIMERRESETRREQ => user_C405CPMTIMERRESETRREQ,
          C405DBGMSRWE         => user_C405DBGMSRWE,
          C405DBGSTOPACK       => user_C405DBGSTOPACK,
          C405DBGWBCOMPLETE    => user_C405DBGWBCOMPLETE,
          C405DBGWBFULL        => user_C405DBGWBFULL,
```

C405DBGWBIAR => user\_C405DBGWBIAR,  
 C405DCRABUS => user\_C405DCRABUS,  
 C405DCRDBUSOUT => user\_C405DCRDBUSOUT,  
 C405DCRREAD => user\_C405DCRREAD,  
 C405DCRWRITE => user\_C405DCRWRITE,  
 C405JTGCAPTUREDR => user\_C405JTGCAPTUREDR,  
 C405JTGEXTEST => user\_C405JTGEXTEST,  
 C405JTGPGMOUT => user\_C405JTGPGMOUT,  
 C405JTGSHIFTDR => user\_C405JTGSHIFTDR,  
 C405JTGTDO => user\_C405JTGTDO,  
  
 C405JTGTDOEN => user\_C405JTGTDOEN,  
 C405JTGUPDATEDR => user\_C405JTGUPDATEDR,  
 C405PLBDCUABORT => user\_C405PLBDCUABORT,  
 C405PLBDCUABUS => user\_C405PLBDCUABUS,  
 C405PLBDCUBE => user\_C405PLBDCUBE,  
 C405PLBDCUCACHEABLE => user\_C405PLBDCUCACHEABLE,  
 C405PLBDCUGUARDED => user\_C405PLBDCUGUARDED,  
 C405PLBDCUPRIORITY => user\_C405PLBDCUPRIORITY,  
 C405PLBDCUREQUEST => user\_C405PLBDCUREQUEST,  
 C405PLBDCURNW => user\_C405PLBDCURNW,  
 C405PLBDCUSIZE2 => user\_C405PLBDCUSIZE2,  
 C405PLBDCUU0ATTR => user\_C405PLBDCUU0ATTR,  
 C405PLBDCUWRDBUS => user\_C405PLBDCUWRDBUS,  
 C405PLBDCUWRITETHRU => user\_C405PLBDCUWRITETHRU,  
 C405PLBICUABORT => user\_C405PLBICUABORT,  
 C405PLBICUABUS => user\_C405PLBICUABUS,  
 C405PLBICUCACHEABLE => user\_C405PLBICUCACHEABLE,  
 C405PLBICUPRIORITY => user\_C405PLBICUPRIORITY,  
 C405PLBICUREQUEST => user\_C405PLBICUREQUEST,  
 C405PLBICUSIZE => user\_C405PLBICUSIZE,  
 C405PLBICUU0ATTR => user\_C405PLBICUU0ATTR,  
 C405RSTCHIPRESETREQ => user\_C405RSTCHIPRESETREQ,  
 C405RSTCORERESETREQ => user\_C405RSTCORERESETREQ,  
 C405RSTSYSRESETREQ => user\_C405RSTSYSRESETREQ,

C405TRCCYCLE => user\_C405TRCCYCLE,  
C405TRCEVENEXECUTIONSTATUS =>  
user\_C405TRCEVENEXECUTIONSTATUS,  
C405TRCODDEXECUTIONSTATUS =>  
user\_C405TRCODDEXECUTIONSTATUS,  
C405TRCTRACESTATUS => user\_C405TRCTRACESTATUS,  
C405TRCTRIGGEREVENTOUT => user\_C405TRCTRIGGEREVENTOUT,  
C405TRCTRIGGEREVENTTYPE => user\_C405TRCTRIGGEREVENTTYPE,  
C405XXXMACHINECHECK => user\_C405XXXMACHINECHECK,  
DSOCMBRAMABUS => user\_DSOCMBRAMABUS,  
DSOCMBRAMBYTEWRITE => user\_DSOCMBRAMBYTEWRITE,  
DSOCMBRAMEN => user\_DSOCMBRAMEN,  
DSOCMBRAMWRDBUS => user\_DSOCMBRAMWRDBUS,  
DSOCMBUSY => user\_DSOCMBUSY,  
ISOCMBRAMEN => user\_ISOCMBRAMEN,  
ISOCMBRAMEVENWRITEEN => user\_ISOCMBRAMEVENWRITEEN,  
ISOCMBRAMODDWRITEEN => user\_ISOCMBRAMODDWRITEEN,  
ISOCMBRAMRDABUS => user\_ISOCMBRAMRDABUS,  
ISOCMBRAMWRABUS => user\_ISOCMBRAMWRABUS,  
ISOCMBRAMWRDBUS => user\_ISOCMBRAMWRDBUS,  
BRAMDSOCMCLK => user\_BRAMDSOCMCLK,  
BRAMDSOCMRDDBUS => user\_BRAMDSOCMRDDBUS,  
BRAMISOCMCLK => user\_BRAMISOCMCLK,  
BRAMISOCMRDDBUS => user\_BRAMISOCMRDDBUS,  
CPMC405CLOCK => user\_CPMC405CLOCK,  
CPMC405CORECLKINACTIVE => user\_CPMC405CORECLKINACTIVE,  
CPMC405CPUCLKEN => user\_CPMC405CPUCLKEN,  
CPMC405JTAGCLKEN => user\_CPMC405JTAGCLKEN,  
CPMC405TIMERCLKEN => user\_CPMC405TIMERCLKEN,  
CPMC405TIMERTICK => user\_CPMC405TIMERTICK,  
DBGC405DEBUGHALT => user\_DBGC405DEBUGHALT,  
  
DBGC405EXTBUSHOLDACK => user\_DBGC405EXTBUSHOLDACK,  
DBGC405UNCONDDEBUGEVENT =>  
user\_DBGC405UNCONDDEBUGEVENT,  
DCRC405ACK => user\_DCRC405ACK,

DCRC405DBUSIN => user\_DCRC405DBUSIN,  
 DSARCVALUE => user\_DSARCVALUE,  
 DSCNTLVALUE => user\_DSCNTLVALUE,  
 EICC405CRITINPUTIRQ => user\_EICC405CRITINPUTIRQ,  
 EICC405EXTINPUTIRQ => user\_EICC405EXTINPUTIRQ,  
 ISARCVALUE => user\_ISARCVALUE,  
 ISCNTLVALUE => user\_ISCNTLVALUE,  
 JTGC405BNDSCANTDO => user\_JTGC405BNDSCANTDO,  
 JTGC405TCK => user\_JTGC405TCK,  
 JTGC405TDI => user\_JTGC405TDI,  
 JTGC405TMS => user\_JTGC405TMS,  
 JTGC405TRSTNEG => user\_JTGC405TRSTNEG,  
 MCBCPUCLKEN => user\_MCBCPUCLKEN,  
 MCBJTAGEN => user\_MCBJTAGEN,  
 MCBTIMEREN => user\_MCBTIMEREN,  
 MCPPCRST => user\_MCPPCRST,  
 PLBC405DCUADDRACK => user\_PLBC405DCUADDRACK,  
 PLBC405DCUBUSY => user\_PLBC405DCUBUSY,  
 PLBC405DCUERR => user\_PLBC405DCUERR,  
 PLBC405DCURDDACK => user\_PLBC405DCURDDACK,  
 PLBC405DCURDDBUS => user\_PLBC405DCURDDBUS,  
 PLBC405DCURDWDADDR => user\_PLBC405DCURDWDADDR,  
 PLBC405DCUSSIZE1 => user\_PLBC405DCUSSIZE1,  
 PLBC405DCUWRDACK => user\_PLBC405DCUWRDACK,  
 PLBC405ICUADDRACK => user\_PLBC405ICUADDRACK,  
 PLBC405ICUBUSY => user\_PLBC405ICUBUSY,  
 PLBC405ICUERR => user\_PLBC405ICUERR,  
 PLBC405ICURDDACK => user\_PLBC405ICURDDACK,  
 PLBC405ICURDDBUS => user\_PLBC405ICURDDBUS,  
 PLBC405ICURDWDADDR => user\_PLBC405ICURDWDADDR,  
 PLBC405ICUSSIZE1 => user\_PLBC405ICUSSIZE1,  
 PLBCLK => user\_PLBCLK,  
 RSTC405RESETCORE => user\_RSTC405RESETCORE,  
 RSTC405RESETCORE => user\_RSTC405RESETCORE,  
 RSTC405RESETSYS => user\_RSTC405RESETSYS,

```

TIEC405DETERMINISTICMULT => user_TIEC405DETERMINISTICMULT,
TIEC405DISOPERANDFWD    => user_TIEC405DISOPERANDFWD,
TIEC405MMUEN            => user_TIEC405MMUEN,
TIEDSOCMDCRADDR         => user_TIEDSOCMDCRADDR,
TIEISOCMDCRADDR         => user_TIEISOCMDCRADDR,
TRCC405TRACEDISABLE     => user_TRCC405TRACEDISABLE,
TRCC405TRIGGEREVENTINE  => user_TRCC405TRIGGEREVENTINE);

```

## Verilog Instantiation Template

```

PPC405 instance_name (.C405CPMCORESLEEPREQ
(user_C405CPMCORESLEEPREQ),
    .C405CPMMSRCE (user_C405CPMMSRCE),
    .C405CPMMSREE (user_C405CPMMSREE),
    .C405CPMTIMERIRQ (user_C405CPMTIMERIRQ),
    .C405CPMTIMERRESETRREQ (user_C405CPMTIMERRESETRREQ),
    .C405DBGMSRWE (user_C405DBGMSRWE),
    .C405DBGSTOPACK (user_C405DBGSTOPACK),
    .C405DBGWBCOMPLETE (user_C405DBGWBCOMPLETE),
    .C405DBGWBFULL (user_C405DBGWBFULL),
    .C405DBGWBIAR (user_C405DBGWBIAR),
    .C405DCRABUS (user_C405DCRABUS),
    .C405DCRDBUSOUT (user_C405DCRDBUSOUT),
    .C405DCRREAD (user_C405DCRREAD),
    .C405DCRWRITE (user_C405DCRWRITE),
    .C405JTGCAPTUREDR (user_C405JTGCAPTUREDR),
    .C405JTGEXTEST (user_C405JTGEXTEST),
    .C405JTGPGMOUT (user_C405JTGPGMOUT),
    .C405JTGSHIFTDR (user_C405JTGSHIFTDR),
    .C405JTGTDO (user_C405JTGTDO),
    .C405JTGTDOEN (user_C405JTGTDOEN),
    .C405JTGUPDATEDR (user_C405JTGUPDATEDR),
    .C405PLBDCUABORT (user_C405PLBDCUABORT),
    .C405PLBDCUABUS (user_C405PLBDCUABUS),
    .C405PLBDCUBE (user_C405PLBDCUBE),
    .C405PLBDCUCACHEABLE (user_C405PLBDCUCACHEABLE),
    .C405PLBDCUGUARDED (user_C405PLBDCUGUARDED),

```



.C405PLBDCUPRIORITY (*user\_C405PLBDCUPRIORITY*),  
.C405PLBDCUREQUEST (*user\_C405PLBDCUREQUEST*),  
.C405PLBDCURNW (*user\_C405PLBDCURNW*),  
.C405PLBDCUSIZE2 (*user\_C405PLBDCUSIZE2*),  
.C405PLBDCUU0ATTR (*user\_C405PLBDCUU0ATTR*),  
.C405PLBDCUWRDBUS (*user\_C405PLBDCUWRDBUS*),  
.C405PLBDCUWRITETHRU (*user\_C405PLBDCUWRITETHRU*),  
.C405PLBICUABORT (*user\_C405PLBICUABORT*),  
.C405PLBICUABUS (*user\_C405PLBICUABUS*),  
.C405PLBICUCACHEABLE (*user\_C405PLBICUCACHEABLE*),  
.C405PLBICUPRIORITY (*user\_C405PLBICUPRIORITY*),  
.C405PLBICUREQUEST (*user\_C405PLBICUREQUEST*),  
.C405PLBICUSIZE (*user\_C405PLBICUSIZE*),  
.C405PLBICUU0ATTR (*user\_C405PLBICUU0ATTR*),  
.C405RSTCHIPRESETREQ (*user\_C405RSTCHIPRESETREQ*),  
.C405RSTCORERESETREQ (*user\_C405RSTCORERESETREQ*),  
.C405RSTSYSRESETREQ (*user\_C405RSTSYSRESETREQ*),  
.C405TRCCYCLE (*user\_C405TRCCYCLE*),  
.C405TRCEVENEXECUTIONSTATUS(*user\_C405TRCEVENEXECUTIONSTATUS*),  
.C405TRCODDEXECUTIONSTATUS  
(*user\_C405TRCODDEXECUTIONSTATUS*),  
.C405TRCTRACESTATUS (*user\_C405TRCTRACESTATUS*),  
.C405TRCTRIGGEREVENTOUT (*user\_C405TRCTRIGGEREVENTOUT*),  
.C405TRCTRIGGEREVENTTYPE  
(*user\_C405TRCTRIGGEREVENTTYPE*),  
.C405XXXMACHINECHECK (*user\_C405XXXMACHINECHECK*),  
.DSOCMBRAMABUS (*user\_DSOCMBRAMABUS*),  
.DSOCMBRAMBYTEWRITE (*user\_DSOCMBRAMBYTEWRITE*),  
.DSOCMBRAMEN (*user\_DSOCMBRAMEN*),  
.DSOCMBRAMWRDBUS(*user\_DSOCMBRAMWRDBUS*),  
.DSOCMBUSY (*user\_DSOCMBUSY*),  
.ISOCMBRAMEN (*user\_ISOCMBRAMEN*),  
.ISOCMBRAMEVENWRITEEN (*user\_ISOCMBRAMEVENWRITEEN*),  
.ISOCMBRAMODDWRITEEN (*user\_ISOCMBRAMODDWRITEEN*),  
.ISOCMBRAMRDABUS (*user\_ISOCMBRAMRDABUS*),

.ISOCMBRAMWRABUS (*user\_ISOCMBRAMWRABUS*),  
.ISOCMBRAMWRDBUS (*user\_ISOCMBRAMWRDBUS*),  
.BRAMDSOCMCLK (*user\_BRAMDSOCMCLK*),  
.BRAMDSOCMRDDBUS (*user\_BRAMDSOCMRDDBUS*),  
.BRAMISOCMCLK (*user\_BRAMISOCMCLK*),  
.BRAMISOCMRDDBUS (*user\_BRAMISOCMRDDBUS*),  
.CPMC405CLOCK (*user\_CPMC405CLOCK*),  
.CPMC405CORECLKINACTIVE (*user\_CPMC405CORECLKINACTIVE*),  
.CPMC405CPUCLKEN (*user\_CPMC405CPUCLKEN*),  
.CPMC405JTAGCLKEN (*user\_CPMC405JTAGCLKEN*),  
.CPMC405TIMERCLKEN (*user\_CPMC405TIMERCLKEN*),  
.CPMC405TIMERTICK (*user\_CPMC405TIMERTICK*),  
.DBGC405DEBUGHALT (*user\_DBGC405DEBUGHALT*),  
.DBGC405EXTBUSHOLDACK (*user\_DBGC405EXTBUSHOLDACK*),  
.DBGC405UNCONDDEBUGEVENT  
(*user\_DBGC405UNCONDDEBUGEVENT*),  
.DCRC405ACK (*user\_DCRC405ACK*),  
.DCRC405DBUSIN (*user\_DSARCVALUE*),  
.DSCNTLVALUE (*user\_DSCNTLVALUE*),  
.EICC405CRITINPUTIRQ (*user\_EICC405CRITINPUTIRQ*),  
.EICC405EXTINPUTIRQ (*user\_EICC405EXTINPUTIRQ*),  
.ISARCVALUE (*user\_ISARCVALUE*),  
.ISCNTLVALUE (*user\_ISCNTLVALUE*),  
.JTGC405BNDSCANTDO (*user\_JTGC405BNDSCANTDO*),  
.JTGC405TCK (*user\_JTGC405TCK*),  
.JTGC405TDI (*user\_JTGC405TDI*),  
.JTGC405TMS (*user\_JTGC405TMS*),  
.JTGC405TRSTNEG (*user\_JTGC405TRSTNEG*),  
.MCBCPUCLKEN (*user\_MCBCPUCLKEN*),  
.MCBJTAGEN (*user\_MCBJTAGEN*),  
.MCBTIMEREN (*user\_MCBTIMEREN*),  
.MCPPCRST (*user\_MCPPCRST*),  
.PLBC405DCUADDRACK (*user\_PLBC405DCUADDRACK*),  
.PLBC405DCUBUSY (*user\_PLBC405DCUBUSY*),  
.PLBC405DCUERR (*user\_PLBC405DCUERR*),  
.PLBC405DCURDDACK (*user\_PLBC405DCURDDACK*),

.PLBC405DCURDDBUS (*user\_PLBC405DCURDDBUS*),  
.PLBC405DCURDWDADDR (*user\_PLBC405DCURDWDADDR*),  
.PLBC405DCUFSIZE1 (*user\_PLBC405DCUFSIZE1*),  
.PLBC405DCUWRDACK (*user\_PLBC405DCUWRDACK*),  
.PLBC405ICUADDRACK (*user\_PLBC405ICUADDRACK*),  
.PLBC405ICUBUSY (*user\_PLBC405ICUBUSY*),  
.PLBC405ICUERR (*user\_PLBC405ICUERR*),  
.PLBC405ICURDDACK (*user\_PLBC405ICURDDACK*),  
.PLBC405ICURDDBUS (*user\_PLBC405ICURDDBUS*),  
.PLBC405ICURDWDADDR (*user\_PLBC405ICURDWDADDR*),  
.PLBC405ICUFSIZE1 (*user\_PLBC405ICUFSIZE1*),  
.PLBCLK (*user\_PLBCLK*),  
.RSTC405RESETCCHIP (*user\_RSTC405RESETCCHIP*),  
.RSTC405RESETCORE (*user\_RSTC405RESETCORE*),  
.RSTC405RESETSYS (*user\_RSTC405RESETSYS*),  
.TIEC405DETERMINISTICMULT  
(*user\_TIEC405DETERMINISTICMULT*),  
.TIEC405DISOPERANDFWD (*user\_TIEC405DISOPERANDFWD*),  
.TIEC405MMUEN (*user\_TIEC405MMUEN*),  
.TIEDSOCMDCRADDR (*user\_TIEDSOCMDCRADDR*),  
.TIEISOCMDCRADDR (*user\_TIEISOCMDCRADDR*),  
.TRCC405TRACEDISABLE (*user\_TRCC405TRACEDISABLE*),  
.TRCC405TRIGGEREVENTINE (*user\_TRCC405TRIGGEREVENTINE*));




## PULLDOWN

### Resistor to GND for Input Pads

#### Architectures Supported

PULLDOWN	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	Primitive



PULLDOWN resistor elements are connected to input, output, or bidirectional pads to guarantee a logic Low level for nodes that might float.

#### Usage

For HDL, the PULLDOWN design element is instantiated rather than inferred.

#### VHDL Instantiation Template

```
-- Component Declaration for PULLDOWN should be placed
-- after architecture statement but before begin keyword
```

```
component PULLDOWN
  port (O : out STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for PULLDOWN
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for PULLDOWN should be placed
-- in architecture after the begin keyword
```

```
PULLDOWN_INSTANCE_NAME : PULLDOWN
  port map (O => user_O);
```

#### Verilog Instantiation Template

```
PULLDOWN instance_name (.O (user_O));
```

#### Commonly Used Constraints

None



## PULLUP

### Resistor to VCC for Input PADs, Open-Drain, and 3-State Outputs

#### Architectures Supported

PULLUP	
Spartan-II, Spartan-III	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	Primitive*
CoolRunner-II	Primitive
CoolRunner-IIS	No
* Supported only on input-only pins for CoolRunner XPLA3.	



**X3861**

The pull-up elements establish a High logic level for open-drain elements and macros (DECODE, WAND, WORAND) or 3-state nodes (TBUF) when all the drivers are off.

The buffer outputs are connected together as a wired-AND to form the output (O). When all the inputs are High, the output is off. To establish an output High level, a PULLUP resistor(s) is tied to output (O). One PULLUP resistor uses the least power, two pull-up resistors achieve the fastest Low-to-High speed.

To indicate two PULLUP resistors, append a DOUBLE parameter to the pull-up symbol attached to the output (O) node. See the appropriate CAE tool interface user guide for details.

#### Usage

For HDL, the PULLUP design element is instantiated rather than inferred.

#### VHDL Instantiation Template

```
-- Component Declaration for PULLUP should be placed
-- after architecture statement but before begin keyword

component PULLUP
  port (O : out STD_ULOGIC);
end component;

-- Component Attribute specification for PULLUP
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for PULLUP should be placed
-- in architecture after the begin keyword
```

```
PULLUP_INSTANCE_NAME : PULLUP  
    port map (0 => user_0);
```

## Verilog Instantiation Template

```
PULLUP instance_name (.O (user_0));
```

## Commonly Used Constraints

DOUBLE

HBLKNM




## RAM16X1D

### 16-Deep by 1-Wide Static Dual Port Synchronous RAM

#### Architectures Supported

RAM16X1D	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

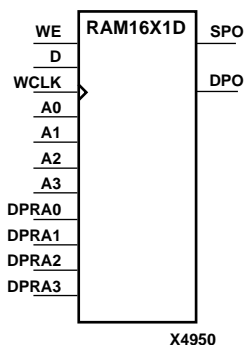

RAM16X1D is a 16-word by 1-bit static dual port random access memory with synchronous write capability. The device has two separate address ports: the read address (DPRA3 – DPRA0) and the write address (A3 – A0). These two address ports are completely asynchronous. The read address controls the location of the data driven out of the output pin (DPO), and the write address controls the destination of a valid write transaction.

When the write enable (WE) is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any positive transition on WCLK loads the data on the data input (D) into the word selected by the 4-bit write address. For predictable performance, write address and data inputs must be stable before a Low-to-High WCLK transition. This RAM block assumes an active-High WCLK. WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

Mode selection is shown in the following truth table.

Inputs			Outputs	
WE (mode)	WCLK	D	SPO	DPO
0 (read)	X	X	data_a	data_d
1 (read)	0	X	data_a	data_d
1 (read)	1	X	data_a	data_d
1 (write)	↑	D	D	data_d
1 (read)	↓	X	data_a	data_d

data\_a = word addressed by bits A3-A0

data\_d = word addressed by bits DPRA3-DPRA0

The SPO output reflects the data in the memory cell addressed by A3 – A0. The DPO output reflects the data in the memory cell addressed by DPRA3 – DPRA0.

**Note:** The write process is not affected by the address on the read address port.

## Specifying Initial Contents of a RAM

You can use the INIT attribute to specify an initial value directly on the symbol if the RAM is 1 bit wide and 16, 32, 64, or 128 bits deep. The value must be a hexadecimal number, for example, INIT=ABAC. If the INIT attribute is not specified, the RAM is initialized with zero.

For Virtex, Virtex-E, Spartan-II, and Spartan-IIe, lower INIT values get mapped to the G function generator and upper INIT values get mapped to the F function generator.

See the "INIT" section of the *Constraints Guide* for more information on the INIT attribute.

For Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, wide RAMs (2, 4, and 8-bit wide single port synchronous RAMs with a WCLK) can also be initialized. These RAMs, however, require INIT\_xx attributes. See "[Specifying Initial Contents of a Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X Wide RAM](#)" in the RAM16X2S section for more information on initializing Virtex-II wide RAM.

## Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template

```
-- Component Declaration for RAM16X1D should be placed
-- after architecture statement but before begin keyword
```

```
component RAM16X1D
  -- synthesis translate_off
  generic (INIT : bit_vector := X"16");
  -- synthesis translate_on
  port (DPO : out STD_ULOGIC;
        SPO : out STD_ULOGIC;
        A0  : in  STD_ULOGIC;
        A1  : in  STD_ULOGIC;
        A2  : in  STD_ULOGIC;
        A3  : in  STD_ULOGIC;
        D   : in  STD_ULOGIC;
        DPRA0 : in STD_ULOGIC;
        DPRA1 : in STD_ULOGIC;
        DPRA2 : in STD_ULOGIC;
        DPRA3 : in STD_ULOGIC;
        WCLK : in  STD_ULOGIC;
        WE   : in  STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for RAM16X1D
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for RAM16X1D should be placed
-- in architecture after the begin keyword
```

```

RAM16X1D_INSTANCE_NAME : RAM16X1D
-- synthesis translate_off
generic map (INIT => hex_value)
-- synthesis translate_on
port map (DPO => user_DPO,
          SPO => user_SPO,
          A0 => user_A0,
          A1 => user_A1,
          A2 => user_A2,
          A3 => user_A3,
          D => user_D,
          DPRA0 => user_DPRA0,
          DPRA1 => user_DPRA1,
          DPRA2 => user_DPRA2,
          DPRA3 => user_DPRA3,
          WCLK => user_WCLK,
          WE => user_WE);

```

## Verilog Instantiation Template

```

RAM16X1D instance_name (.DPO (user_DPO),
                       .SPO (user_SPO),
                       .A0 (user_A0),
                       .A1 (user_A1),
                       .A2 (user_A2),
                       .A3 (user_A3),
                       .D (user_D),
                       .DPRA0 (user_DPRA0),
                       .DPRA1 (user_DPRA1),
                       .DPRA2 (user_DPRA2),
                       .DPRA3 (user_DPRA3),
                       .WCLK (user_WCLK),
                       .WE (user_WE));

defparam RAM16X1D_instance_name.INIT = hex_value;

```

## Commonly Used Constraints

BLKNM  
 HBLKNM  
 HU\_SET  
 INIT  
 LOC  
 RLOC  
 U\_SET  
 XBLKNM




## RAM16X1D\_1

### 16-Deep by 1-Wide Static Dual Port Synchronous RAM with Negative-Edge Clock

#### Architectures Supported

RAM16X1D_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

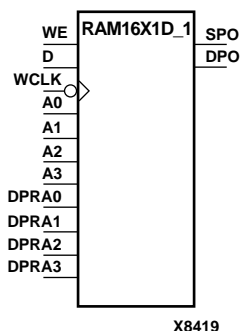

RAM16X1D\_1 is a 16-word by 1-bit static dual port random access memory with synchronous write capability and negative-edge clock. The device has two separate address ports: the read address (DPRA3 – DPRA0) and the write address (A3 – A0). These two address ports are completely asynchronous. The read address controls the location of the data driven out of the output pin (DPO), and the write address controls the destination of a valid write transaction.

When the write enable (WE) is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any negative transition on WCLK loads the data on the data input (D) into the word selected by the 4-bit write address. For predictable performance, write address and data inputs must be stable before a High-to-Low WCLK transition. This RAM block assumes an active-High WCLK. WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

You can initialize RAM16X1D\_1 during configuration using the INIT attribute. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

Mode selection is shown in the following truth table.

Inputs			Outputs	
WE (mode)	WCLK	D	SPO	DPO
0 (read)	X	X	data_a	data_d
1 (read)	0	X	data_a	data_d
1 (read)	1	X	data_a	data_d
1 (write)	↓	D	D	data_d
1 (read)	↑	X	data_a	data_d

data\_a = word addressed by bits A3-A0

data\_d = word addressed by bits DPRA3-DPRA0

The SPO output reflects the data in the memory cell addressed by A3 – A0. The DPO output reflects the data in the memory cell addressed by DPRA3 – DPRA0.

**Note:** The write process is not affected by the address on the read address port.

## Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template

```
-- Component Declaration for RAM16X1D_1 should be placed --
-- after architecture statement but before begin keyword
```

```
component RAM16X1D_1
  -- synthesis translate_off
  generic (INIT: bit_vector := X"16");
  -- synthesis translate_on
  port (DPO : out STD_ULOGIC;
        SPO : out STD_ULOGIC;
        A0  : in  STD_ULOGIC;
        A1  : in  STD_ULOGIC;
        A2  : in  STD_ULOGIC;
        A3  : in  STD_ULOGIC;
        D   : in  STD_ULOGIC;
        DPRA0 : in  STD_ULOGIC;
        DPRA1 : in  STD_ULOGIC;
        DPRA2 : in  STD_ULOGIC;
        DPRA3 : in  STD_ULOGIC;
        WCLK : in  STD_ULOGIC;
        WE   : in  STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for RAM16X1D_1
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for RAM16X1D_1 should be placed
-- in architecture after the begin keyword
```

```
RAM16X1D_1_INSTANCE_NAME : RAM16X1D_1
  -- synthesis translate_off
  generic map (INIT => hex_value)
  -- synthesis translate_on
  port map (DPO => user_DPO,
           SPO => user_SPO,
           A0 => user_A0,
           A1 => user_A1,
           A2 => user_A2,
           A3 => user_A3,
           D => user_D,
           DPRA0 => user_DPRA0,
           DPRA1 => user_DPRA1,
           DPRA2 => user_DPRA2,
           DPRA3 => user_DPRA3,
           WCLK => user_WCLK,
           WE => user_WE);
```

## Verilog Instantiation Template

```
RAM16X1D_1 instance_name (.DPO (user_DPO),
                          .SPO (user_SPO),
                          .A0 (user_A0),
                          .A1 (user_A1),
                          .A2 (user_A2),
                          .A3 (user_A3),
                          .D (user_D),
                          .DPRA0 (user_DPRA0),
                          .DPRA1 (user_DPRA1),
                          .DPRA2 (user_DPRA2),
                          .DPRA3 (user_DPRA3),
                          .WCLK (user_WCLK),
                          .WE (user_WE));

defparam user_instance_name.INIT = hex_value;
```

## Commonly Used Constraints

BLKNM  
HBLKNM  
HU\_SET  
INIT  
LOC  
RLOC  
U\_SET  
XBLKNM






## RAM16X1S

### 16-Deep by 1-Wide Static Synchronous RAM

#### Architectures Supported

RAM16X1S	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

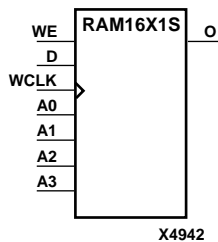

RAM16X1S is a 16-word by 1-bit static random access memory with synchronous write capability. When the write enable (WE) is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any positive transition on WCLK loads the data on the data input (D) into the word selected by the 4-bit address (A3 – A0). For predictable performance, address and data inputs must be stable before a Low-to-High WCLK transition. This RAM block assumes an active-High WCLK. However, WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

The signal output on the data output pin (O) is the data that is stored in the RAM at the location defined by the values on the address pins.

You can initialize RAM16X1S during configuration using the INIT attribute. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

Mode selection is shown in the following truth table.

Inputs			Outputs
WE(mode)	WCLK	D	O
0 (read)	X	X	Data
1 (read)	0	X	Data
1 (read)	1	X	Data
1 (write)	↑	D	D
1 (read)	↓	X	Data

Data = word addressed by bits A3 – A0

#### Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template

```
-- Component Declaration for RAM16X1S should be placed
-- after architecture statement but before begin keyword

component RAM16X1S
  -- synthesis translate_off
  generic (INIT: bit_vector := X"16");
  -- synthesis translate_on
  port (O : out STD_ULOGIC;
        A0 : in STD_ULOGIC;
        A1 : in STD_ULOGIC;
        A2 : in STD_ULOGIC;
        A3 : in STD_ULOGIC;
        D  : in STD_ULOGIC;
        WCLK : in STD_ULOGIC;
        WE  : in STD_ULOGIC);
end component;

-- Component Attribute specification for RAM16X1S
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for RAM16X1S should be placed
-- in architecture after the begin keyword

RAM16X1S_INSTANCE_NAME : RAM16X1S
  -- synthesis translate_off
  generic map (INIT => hex_value)
  -- synthesis translate_on
  port map (O => user_O,
            A0 => user_A0,
            A1 => user_A1,
            A2 => user_A2,
            A3 => user_A3,
            D => user_D,
            WCLK => user_WCLK,
            WE => user_WE);
```

## Verilog Instantiation Template

```
RAM16X1S instance_name (.O (user_O),
                       .A0 (user_A0),
                       .A1 (user_A1),
                       .A2 (user_A2),
                       .A3 (user_A3),
                       .D (user_D),
                       .WCLK (user_WCLK),
                       .WE (user_WE));

defparam user_instance_name.INIT = hex_value;
```

## Commonly Used Constraints


BEL, BLKNM, HBLKNM, HU\_SET, INIT, LOC, RLOC, U\_SET, and XBLKNM

## RAM16X1S\_1

### 16-Deep by 1-Wide Static Synchronous RAM with Negative-Edge Clock

#### Architectures Supported

RAM16X1S_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

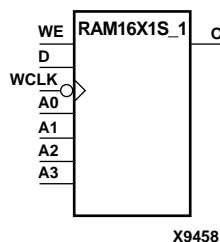

RAM16X1S\_1 is a 16-word by 1-bit static random access memory with synchronous write capability and negative-edge clock. When the write enable (WE) is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any negative transition on WCLK loads the data on the data input (D) into the word selected by the 4-bit address (A3 – A0). For predictable performance, address and data inputs must be stable before a High-to-Low WCLK transition. This RAM block assumes an active-Low WCLK. However, WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

The signal output on the data output pin (O) is the data that is stored in the RAM at the location defined by the values on the address pins.

You can initialize RAM16X1S\_1 during configuration using the INIT attribute. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

Mode selection is shown in the following truth table.

Inputs			Outputs
WE(mode)	WCLK	D	O
0 (read)	X	X	Data
1 (read)	0	X	Data
1 (read)	1	X	Data
1 (write)	↓	D	D
1 (read)	↑	X	Data

Data = word addressed by bits A3 – A0

#### Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template

```
-- Component Declaration for RAM16X1S_1 should be placed
-- after architecture statement but before begin keyword

component RAM16X1S_1
  -- synthesis translate_off
  generic (INIT : bit_vector := X"16");
  -- synthesis translate_on
  port (O : out STD_ULOGIC;
        A0 : in STD_ULOGIC;
        A1 : in STD_ULOGIC;
        A2 : in STD_ULOGIC;
        A3 : in STD_ULOGIC;
        D  : in STD_ULOGIC;
        WCLK : in STD_ULOGIC;
        WE  : in STD_ULOGIC);
end component;

-- Component Attribute specification for RAM16X1S_1
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for RAM16X1S_1 should be placed
-- in architecture after the begin keyword

RAM16X1S_1_INSTANCE_NAME : RAM16X1S_1
  -- synthesis translate_off
  generic map (INIT => hex_value)
  -- synthesis translate_on
  port map (O => user_O,
            A0 => user_A0,
            A1 => user_A1,
            A2 => user_A2,
            A3 => user_A3,
            D  => user_D,
            WCLK => user_WCLK,
            WE => user_WE);
```

## Verilog Instantiation Template

```
RAM16X1S_1 instance_name (.O (user_O),
                          .A0 (user_A0),
                          .A1 (user_A1),
                          .A2 (user_A2),
                          .A3 (user_A3),
                          .D (user_D),
                          .WCLK (user_WCLK),
                          .WE (user_WE));

defparam user_instance_name.INIT = hex_value;
```

## Commonly Used Constraints

BEL

BLKNM  
HBLKNM  
HU\_SET  
INIT  
LOC  
RLOC  
U\_SET  
XBLKNM




## RAM16X2D

### 16-Deep by 2-Wide Static Dual Port Synchronous RAM

#### Architectures Supported

RAM16X2D	
Spartan-II, Spartan-IIE	Macro
Spartan-3	No
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

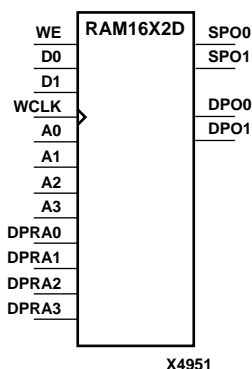

RAM16X2D is a 16-word by 2-bit static dual port random access memory with synchronous write capability. The device has two separate address ports: the read address (DPRA3 – DPRA0) and the write address (A3 – A0). These two address ports are completely asynchronous. The read address controls the location of data driven out of the output pin (DPO1 – DPO0), and the write address controls the destination of a valid write transaction.

When the write enable (WE) is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any positive transition on WCLK loads the data on the data input (D1 – D0) into the word selected by the 4-bit write address. For predictable performance, write address and data inputs must be stable before a Low-to-High WCLK transition. This RAM block assumes an active-High WCLK. However, WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

The initial contents of RAM16X2D cannot be specified directly. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

Mode selection is shown in the following truth table.

Inputs			Outputs	
WE (mode)	WCLK	D1-D0	SPO1-SPO0	DPO1-DPO0
0 (read)	X	X	data_a	data_d
1 (read)	0	X	data_a	data_d
1 (read)	1	X	data_a	data_d
1 (write)	↑	D1-D0	D1-D0	data_d
1 (read)	↓	X	data_a	data_d

data\_a = word addressed by bits A3-A0

data\_d = word addressed by bits DPRA3-DPRA0

The SPO output reflects the data in the memory cell addressed by A3 – A0. The DPO output reflects the data in the memory cell addressed by DPRA3 – DPRA0.

**Note:** The write process is not affected by the address on the read address port.

## User

For HDL, this design element is inferred. See the *XST User Guide* for details.




## RAM16X2S

### 16-Deep by 2-Wide Static Synchronous RAM

#### Architectures Supported

RAM16X2S	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Primitive
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

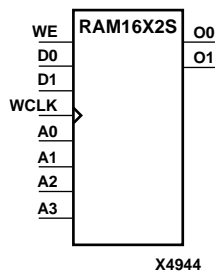

RAM16X2S is a 16-word by 2-bit static random access memory with synchronous write capability. When the write enable (WE) is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any positive transition on WCLK loads the data on the data input (D1 – D0) into the word selected by the 4-bit address (A3 – A0). For predictable performance, address and data inputs must be stable before a Low-to-High WCLK transition. This RAM block assumes an active-High WCLK. However, WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

The signal output on the data output pins (O1 – O0) is the data that is stored in the RAM at the location defined by the values on the address pins.

Except for Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the initial contents of RAM16X2S cannot be specified directly. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

For Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, you can use the INIT\_00 and INIT\_01 properties to specify the initial contents of RAM16X2S as described in [“Specifying Initial Contents of a Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X Wide RAM”](#) in this section.

Mode selection is shown in the following truth table.

Inputs			Outputs
WE (mode)	WCLK	D1-D0	O1-O0
0 (read)	X	X	Data
1 (read)	0	X	Data
1 (read)	1	X	Data
1 (write)	↑	D1-D0	D1-D0
1 (read)	↓	X	Data

Data = word addressed by bits A3 – A0

## Specifying Initial Contents of a Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X Wide RAM

You can use the INIT\_xx properties to specify the initial contents of a Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X wide RAM. INIT\_00 initializes the RAM cells corresponding to the O0 output, INIT\_01 initializes the cells corresponding to the O1 output, etc. For example, a RAM16X2S instance is initialized by INIT\_00 and INIT\_01 containing 4 hex characters each. A RAM16X8S instance is initialized by eight properties INIT\_00 through INIT\_07 containing 4 hex characters each. A RAM64x2S instance is completely initialized by two properties INIT\_00 and INIT\_01 containing 16 hex characters each. See the INIT\_xx section of the *Constraints Guide* for more information on the INIT\_xx attribute.

### Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

### VHDL Instantiation Template

```
-- Component Declaration for RAM16X2S should be placed
-- after architecture statement but before begin keyword

component RAM16X2S
-- synthesis translate_off
  generic (INIT_00 : bit_vector := X"16";
          INIT_01: bit_vector := X"16");
  -- synthesis translate_on
  port (O0   : out STD_ULOGIC;
        O1   : out STD_ULOGIC;
        A0   : in  STD_ULOGIC;
        A1   : in  STD_ULOGIC;
        A2   : in  STD_ULOGIC;
        A3   : in  STD_ULOGIC;
        D0   : in  STD_ULOGIC;
        D1   : in  STD_ULOGIC;
        WCLK : in  STD_ULOGIC;
        WE   : in  STD_ULOGIC);
end component;

-- Component Attribute specification for RAM16X2S
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for RAM16X2S should be placed
-- in architecture after the begin keyword

RAM16X2S_INSTANCE_NAME : RAM16X2S
  -- synthesis translate_off
  generic map (INIT_00 => hex_value,
              INIT_01 => hex_value)
  -- synthesis translate_on
  port map (O0 => user_00,
```

```
O1 => user_O1,  
A0 => user_A0,  
A1 => user_A1,  
A2 => user_A2,  
A3 => user_A3,  
D0 => user_D0,  
D1 => user_D1,  
WCLK => user_WCLK,  
WE => user_WE);
```

## Verilog Instantiation Template

```
RAM16X2S instance_name (.O0 (user_O0),  
                        .O1 (user_O1),  
                        .A0 (user_A0),  
                        .A1 (user_A1),  
                        .A2 (user_A2),  
                        .A3 (user_A3),  
                        .D0 (user_D0),  
                        .D1 (user_D1),  
                        .WCLK (user_WCLK),  
                        .WE (user_WE));
```

```
defparam user_instance_name.INIT_00 = hex_value;  
defparam user_instance_name.INIT_01 = hex_value;
```

## Commonly Used Constraints

BEL

INIT\_xx

BLKNM

HBLKNM

HU\_SET

INIT

LOC

RLOC

U\_SET

XBLKNM




## RAM16X4D

### 16-Deep by 4-Wide Static Dual Port Synchronous RAM

#### Architectures Supported

RAM16X4D	
Spartan-II, Spartan-IIE	Macro
Spartan-3	No
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

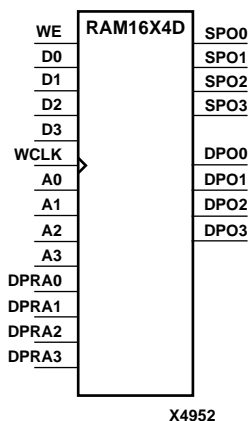

RAM16X4D is a 16-word by 4-bit static dual port random access memory with synchronous write capability. The device has two separate address ports: the read address (DPRA3 – DPRA0) and the write address (A3 – A0). These two address ports are completely asynchronous. The read address controls the location of data driven out of the output pin (DPO3 – DPO0), and the write address controls the destination of a valid write transaction.

When the write enable (WE) is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any positive transition on WCLK loads the data on the data input (D3 – D0) into the word selected by the 4-bit write address. For predictable performance, write address and data inputs must be stable before a Low-to-High WCLK transition. This RAM block assumes an active-High WCLK. However, WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

The initial contents of RAM16X4D cannot be specified directly. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

Mode selection is shown in the following truth table.

Inputs			Outputs	
WE (mode)	WCLK	D3-D0	SPO3-SPO0	DPO3-DPO0
0 (read)	X	X	data_a	data_d
1 (read)	0	X	data_a	data_d
1 (read)	1	X	data_a	data_d
1 (write)	↑	D3-D0	D3-D0	data_d
1 (read)	↓	X	data_a	data_d

data\_a = word addressed by bits A3-A0

data\_d = word addressed by bits DPRA3-DPRA0

The SPO output reflects the data in the memory cell addressed by A3 – A0. The DPO output reflects the data in the memory cell addressed by DPRA3 – DPRA0.

**Note:** The write process is not affected by the address on the read address port.

## Usage

For HDL, this design element must be inferred. For information on how to infer RAM, see the *XST User Guide*.








## RAM16X4S

### 16-Deep by 4-Wide Static Synchronous RAM

#### Architectures Supported

RAM16X4S	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Primitive
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

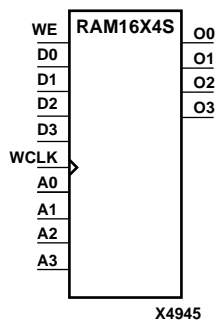

RAM16X4S is a 16-word by 4-bit static random access memory with synchronous write capability. When the write enable (WE) is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any positive transition on WCLK loads the data on the data input (D3 – D0) into the word selected by the 4-bit address (A3 – A0). For predictable performance, address and data inputs must be stable before a Low-to-High WCLK transition. This RAM block assumes an active-High WCLK. However, WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

The signal output on the data output pins (O3 – O0) is the data that is stored in the RAM at the location defined by the values on the address pins.

Except for Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the initial contents of RAM16X4S cannot be specified directly. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

For Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, you can use INIT\_00 through INIT\_03 to specify the initial contents of RAM16X4S as described in the [“Specifying Initial Contents of a Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X Wide RAM”](#) section in the RAM16X2S section.

Mode selection is shown in the following truth table.

Inputs			Outputs
WE (mode)	WCLK	D3 – D0	O3 – O0
0 (read)	X	X	Data
1 (read)	0	X	Data
1 (read)	1	X	Data
1 (write)	↑	D3-D0	D3-D0
1 (read)	↓	X	Data

Data = word addressed by bits A3 – A0

## Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template

```
-- Component Declaration for RAM16X4S should be placed
-- after architecture statement but before begin keyword
```

```
component RAM16X4S
  -- synthesis translate_off
  generic (INIT_00 : bit_vector := X"16";
          INIT_01 : bit_vector := X"16";
          INIT_02 : bit_vector := X"16";
          INIT_03 : bit_vector := X"16");
  -- synthesis translate_on
  port (O0   : out STD_ULOGIC;
        O1   : out STD_ULOGIC;
        O2   : out STD_ULOGIC;
        O3   : out STD_ULOGIC;
        A0   : in  STD_ULOGIC;
        A1   : in  STD_ULOGIC;
        A2   : in  STD_ULOGIC;
        A3   : in  STD_ULOGIC;
        D0   : in  STD_ULOGIC;
        D1   : in  STD_ULOGIC;
        D2   : in  STD_ULOGIC;
        D3   : in  STD_ULOGIC;
        WCLK : in  STD_ULOGIC;
        WE   : in  STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for RAM16X4S
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for RAM16X4S should be placed
-- in architecture after the begin keyword
```

```
RAM16X4S_INSTANCE_NAME : RAM16X4S
  -- synthesis translate_off
  generic map (INIT_00 => hex_value,
              INIT_01 => hex_value,
              INIT_02 => hex_value,
              INIT_03 => hex_value)
  -- synthesis translate_on
  port map (O0 => user_O0,
           O1 => user_O1,
           O2 => user_O2,
           O3 => user_O3,
           A0 => user_A0,
           A1 => user_A1,
           A2 => user_A2,
           A3 => user_A3,
```

```
D0 => user_D0,  
D1 => user_D1,  
D2 => user_D2,  
D3 => user_D3,  
WCLK => user_WCLK,  
WE => user_WE);
```

## Verilog Instantiation Template

```
RAM16X4S instance_name (.O0 (user_O0),  
                        .O1 (user_O1),  
                        .O2 (user_O2),  
                        .O3 (user_O3),  
                        .A0 (user_A0),  
                        .A1 (user_A1),  
                        .A2 (user_A2),  
                        .A3 (user_A3),  
                        .D0 (user_D0),  
                        .D1 (user_D1),  
                        .D2 (user_D2),  
                        .D3 (user_D3),  
                        .WCLK (user_WCLK),  
                        .WE (user_WE));
```

```
defparam user_instance_name.INIT_00 = hex_value;  
defparam user_instance_name.INIT_01 = hex_value;  
defparam user_instance_name.INIT_02 = hex_value;  
defparam user_instance_name.INIT_03 = hex_value;
```

## Commonly Used Constraints

BEL

INIT\_xx

BLKNM

HBLKNM

HU\_SET

INIT

LOC

RLOC

U\_SET

XBLKNM




## RAM16X8D

### 16-Deep by 8-Wide Static Dual Port Synchronous RAM

#### Architectures Supported

RAM16X8D	
Spartan-II, Spartan-IIE	Macro
Spartan-3	No
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

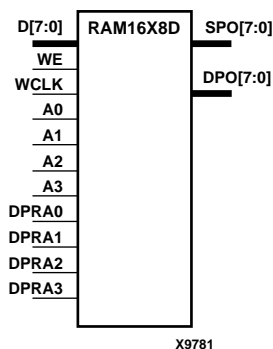

RAM16X8D is a 16-word by 8-bit static dual port random access memory with synchronous write capability. The device has two separate address ports: the read address (DPRA3 – DPRA0) and the write address (A3 – A0). These two address ports are completely asynchronous. The read address controls the location of data driven out of the output pin (DPO7 – DPO0), and the write address controls the destination of a valid write transaction.

When the write enable (WE) is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any positive transition on WCLK loads the data on the data input (D7 – D0) into the word selected by the 4-bit write address (A3 – A0). For predictable performance, write address and data inputs must be stable before a Low-to-High WCLK transition. This RAM block assumes an active-High WCLK. However, WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

The initial contents of RAM16X8D cannot be specified directly. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

Mode selection is shown in the following truth table.

Inputs			Outputs	
WE (mode)	WCLK	D7-D0	SP7-SPO0	DPO7-DPO0
0 (read)	X	X	data_a	data_d
1 (read)	0	X	data_a	data_d
1 (read)	1	X	data_a	data_d
1 (write)	↑	D7-D0	D7-D0	data_d
1 (read)	↓	X	data_a	data_d

data\_a = word addressed by bits A3-A0

data\_d = word addressed by bits DPRA3-DPRA0

The SPO output reflects the data in the memory cell addressed by A3 – A0. The DPO output reflects the data in the memory cell addressed by DPRA3 – DPRA0.

The write process is not affected by the address on the read address port.

## Usage

For HDL, this design element must be inferred. For information on how to infer RAM, see the *XST User Guide*.








## RAM16X8S

### 16-Deep by 8-Wide Static Synchronous RAM

#### Architectures Supported

RAM16X8S	
Spartan-II, Spartan-IIE	Macro
Spartan-3	No
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

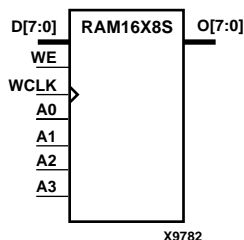

RAM16X8S is a 16-word by 8-bit static random access memory with synchronous write capability. When the write enable (WE) is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any positive transition on WCLK loads the data on data inputs (D7 – D0) into the word selected by the 4-bit address (A3 – A0). For predictable performance, address and data inputs must be stable before a Low-to-High WCLK transition. This RAM block assumes an active-High WCLK. However, WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

The signal output on the data output pins (O7 – O0) is the data that is stored in the RAM at the location defined by the values on the address pins.

Except for Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the initial contents of RAM16X8S cannot be specified directly. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

For Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, you can use INIT\_00 through INIT\_07 to specify the initial contents of RAM16X8S as described in the [“Specifying Initial Contents of a Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X Wide RAM”](#) section in the RAM16X2S section.

Mode selection is shown in the following truth table.

Inputs			Outputs
WE (mode)	WCLK	D7-D0	O7-O0
0 (read)	X	X	Data
1 (read)	0	X	Data
1 (read)	1	X	Data
1 (write)	↑	D7-D0	D7-D0
1 (read)	↓	X	Data

Data = word addressed by bits A3 – A0

## Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template

```
-- Component Declaration for RAM16X8S should be placed
-- after architecture statement but before begin keyword
```

```
component RAM16X8S
  -- synthesis translate_off
  generic (INIT_00 : bit_vector := X"16";
          INIT_01 : bit_vector := X"16";
          INIT_02 : bit_vector := X"16";
          INIT_03 : bit_vector := X"16";
          INIT_04 : bit_vector := X"16";
          INIT_05 : bit_vector := X"16";
          INIT_06 : bit_vector := X"16";
          INIT_07 : bit_vector := X"16");
  -- synthesis translate_on
  port (O0   : out STD_ULOGIC;
        A0   : in  STD_ULOGIC;
        A1   : in  STD_ULOGIC;
        A2   : in  STD_ULOGIC;
        A3   : in  STD_ULOGIC;
        D    : in  STD_ULOGIC;
        WCLK : in  STD_ULOGIC;
        WE   : in  STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for RAM16X8S
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for RAM16X8S should be placed
-- in architecture after the begin keyword
```

```
RAM16X8S_INSTANCE_NAME : RAM16X8S
  -- synthesis translate_off
  generic map (INIT_00 => hex_value,
              INIT_01 => hex_value,
              INIT_02 => hex_value,
              INIT_03 => hex_value,
              INIT_04 => hex_value,
              INIT_05 => hex_value,
              INIT_06 => hex_value,
              INIT_07 => hex_value)
  -- synthesis translate_on
  port map (O0 => user_O0,
           A0 => user_A0,
           A1 => user_A1,
           A2 => user_A2,
           A3 => user_A3,
           D  => user_D,
           WCLK => user_WCLK,
           WE => user_WE);
```

## Verilog Instantiation Template

```
RAM16X8S instance_name (.O0 (user_O0),
                        .A0 (user_A0),
                        .A1 (user_A1),
                        .A2 (user_A2),
                        .A3 (user_A3),
                        .D (user_D),
                        .WCLK (user_WCLK),
                        .WE (user_WE));

defparam user_instance_name.INIT_00 = hex_value;
defparam user_instance_name.INIT_01 = hex_value;
defparam user_instance_name.INIT_02 = hex_value;
defparam user_instance_name.INIT_03 = hex_value;
defparam user_instance_name.INIT_04 = hex_value;
defparam user_instance_name.INIT_05 = hex_value;
defparam user_instance_name.INIT_06 = hex_value;
defparam user_instance_name.INIT_07 = hex_value;
```

## Commonly Used Constraints

BEL

INIT\_xx

BLKNM

HBLKNM

HU\_SET

INIT

LOC

RLOC

U\_SET


XBLKNM

## RAM32X1D

### 32-Deep by 1-Wide Static Dual Static Port Synchronous RAM

#### Architectures Supported

RAM32X1D	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

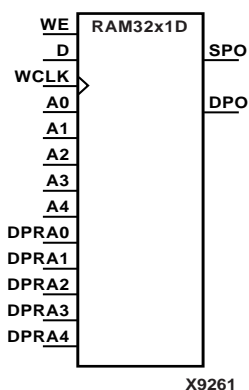

RAM32X1D is a 32-word by 1-bit static dual port random access memory with synchronous write capability. The device has two separate address ports: the read address (DPRA4 – DPRA0) and the write address (A4 – A0). These two address ports are completely asynchronous. The read address controls the location of the data driven out of the output pin (DPO), and the write address controls the destination of a valid write transaction.

When the write enable (WE) is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any positive transition on WCLK loads the data on the data input (D) into the word selected by the 5-bit write address. For predictable performance, write address and data inputs must be stable before a Low-to-High WCLK transition. This RAM block assumes an active-High WCLK. WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

You can initialize RAM32X1D during configuration using the INIT attribute. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

Mode selection is shown in the following truth table.

Inputs			Outputs	
WE (mode)	WCLK	D	SPO	DPO
0 (read)	X	X	data_a	data_d
1 (read)	0	X	data_a	data_d
1 (read)	1	X	data_a	data_d
1 (write)	↑	D	D	data_d
1 (read)	↓	X	data_a	data_d

data\_a = word addressed by bits A4-A0

data\_d = word addressed by bits DPRA4-DPRA0

The SPO output reflects the data in the memory cell addressed by A4 – A0. The DPO output reflects the data in the memory cell addressed by DPRA4 – DPRA0.

**Note:** The write process is not affected by the address on the read address port.

## Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template

```
-- Component Declaration for RAM32X1D should be placed
-- after architecture statement but before begin keyword
```

```
component RAM32X1D
-- synthesis translate_off
  generic (INIT : bit_vector := X"32");
-- synthesis translate_on
  port (DPO   : out STD_ULOGIC;
        SPO   : out STD_ULOGIC;
        A0    : in  STD_ULOGIC;
        A1    : in  STD_ULOGIC;
        A2    : in  STD_ULOGIC;
        A3    : in  STD_ULOGIC;
        A4    : in  STD_ULOGIC;
        D     : in  STD_ULOGIC;
        DPRA0 : in  STD_ULOGIC;
        DPRA1 : in  STD_ULOGIC;
        DPRA2 : in  STD_ULOGIC;
        DPRA3 : in  STD_ULOGIC;
        DPRA4 : in  STD_ULOGIC;
        WCLK  : in  STD_ULOGIC;
        WE    : in  STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for RAM32X1D
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for RAM32X1D should be placed
-- in architecture after the begin keyword
```

```
RAM32X1D_INSTANCE_NAME : RAM32X1D
-- synthesis translate_off
  generic map (INIT => hex_value)
-- synthesis translate_on
  port map (DPO => user_DPO,
           SPO => user_SPO,
           A0  => user_A0,
           A1  => user_A1,
           A2  => user_A2,
           A3  => user_A3,
           A4  => user_A4,
           D   => user_D,
           DPRA0 => user_DPRA0,
           DPRA1 => user_DPRA1,
           DPRA2 => user_DPRA2,
           DPRA3 => user_DPRA3,
           DPRA4 => user_DPRA4,
```

```
WCLK => user_WCLK,  
WE => user_WE);
```

## Verilog Instantiation Template

```
RAM32X1D instance_name (.DPO (user_DPO),  
                        .SPO (user_SPO),  
                        .A0 (user_A0),  
                        .A1 (user_A1),  
                        .A2 (user_A2),  
                        .A3 (user_A3),  
                        .A4 (user_A4),  
                        .D (user_D),  
                        .DPRA0 (user_DPRA0),  
                        .DPRA1 (user_DPRA1),  
                        .DPRA2 (user_DPRA2),  
                        .DPRA3 (user_DPRA3),  
                        .DPRA4 (user_DPRA4),  
                        .WCLK (user_WCLK),  
                        .WE (user_WE));  
  
defparam RAM32X1D_instance_name.INIT = hex_value;
```

## Commonly Used Constraints

BLKNM  
HBLKNM  
HU\_SET  
INIT  
LOC  
RLOC  
U\_SET  
XBLKNM






## RAM32X1D\_1

### 32-Deep by 1-Wide Static Dual Port Synchronous RAM with Negative-Edge Clock

#### Architectures Supported

RAM32X1D_1	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

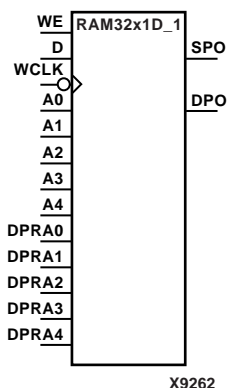

RAM32X1D\_1 is a 32-word by 1-bit static dual port random access memory with synchronous write capability and a negative-edge clock. The device has two separate address ports: the read address (DPRA4 – DPRA0) and the write address (A4 – A0). These two address ports are completely asynchronous. The read address controls the location of the data driven out of the output pin (DPO), and the write address controls the destination of a valid write transaction.

When the write enable (WE) is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any negative transition on WCLK loads the data on the data input (D) into the word selected by the 5-bit write address. For predictable performance, write address and data inputs must be stable before a High-to-Low WCLK transition. This RAM block assumes an active-Low WCLK. WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

You can initialize RAM32X1D\_1 during configuration using the INIT attribute. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

Mode selection is shown in the following truth table.

Inputs			Outputs	
WE (mode)	WCLK	D	SPO	DPO
0 (read)	X	X	data_a	data_d
1 (read)	0	X	data_a	data_d
1 (read)	1	X	data_a	data_d
1 (write)	↓	D	D	data_d
1 (read)	↑	X	data_a	data_d

data\_a = word addressed by bits A4-A0

data\_d = word addressed by bits DPRA4-DPRA0

The SPO output reflects the data in the memory cell addressed by A4 – A0. The DPO output reflects the data in the memory cell addressed by DPRA4 – DPRA0.

**Note:** The write process is not affected by the address on the read address port.

## Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template

```
-- Component Declaration for RAM32X1D_1 should be placed
-- after architecture statement but before begin keyword

component RAM32X1D_1
  -- synthesis translate_off
  generic (INIT : bit_vector := X"32");
  -- synthesis translate_on
  port (DPO : out STD_ULOGIC;
        SPO : out STD_ULOGIC;
        A0  : in STD_ULOGIC;
        A1  : in STD_ULOGIC;
        A2  : in STD_ULOGIC;
        A3  : in STD_ULOGIC;
        A4  : in STD_ULOGIC;
        D   : in STD_ULOGIC;
        DPRA0 : in STD_ULOGIC;
        DPRA1 : in STD_ULOGIC;
        DPRA2 : in STD_ULOGIC;
        DPRA3 : in STD_ULOGIC;
        DPRA4 : in STD_ULOGIC;
        WCLK : in STD_ULOGIC;
        WE   : in STD_ULOGIC);
end component;

-- Component Attribute specification for RAM32X1D_1
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for RAM32X1D_1 should be placed
-- in architecture after the begin keyword

RAM32X1D_1_INSTANCE_NAME : RAM32X1D_1
  -- synthesis translate_off
  generic map (INIT => hex_value)
  -- synthesis translate_on
  port map (DPO => user_DPO,
           SPO => user_SPO,
           A0 => user_A0,
           A1 => user_A1,
           A2 => user_A2,
           A3 => user_A3,
           A4 => user_A4,
           D => user_D,
           DPRA0 => user_DPRA0,
           DPRA1 => user_DPRA1,
           DPRA2 => user_DPRA2,
```

```
DPRA3 => user_DPRA3,  
DPRA4 => user_DPRA4,  
WCLK => user_WCLK,  
WE => user_WE);
```

## Verilog Instantiation Template

```
RAM32X1D_1 instance_name (.DPO (user_DPO),  
                          .SPO (user_SPO),  
                          .A0 (user_A0),  
                          .A1 (user_A1),  
                          .A2 (user_A2),  
                          .A3 (user_A3),  
                          .A4 (user_A4),  
                          .D (user_D),  
                          .DPRA0 (user_DPRA0),  
                          .DPRA1 (user_DPRA1),  
                          .DPRA2 (user_DPRA2),  
                          .DPRA3 (user_DPRA3),  
                          .DPRA4 (user_DPRA4),  
                          .WCLK (user_WCLK),  
                          .WE (user_WE));  
  
defparam RAM32X1D_1_instance_name.INIT = hex_value;
```

## Commonly Used Constraints

BLKNM, HBLKNM, HU\_SET, INIT, LOC, RLOC, U\_SET, and XBLKNM




## RAM32X1S

### 32-Deep by 1-Wide Static Synchronous RAM

#### Architectures Supported

RAM32X1S	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

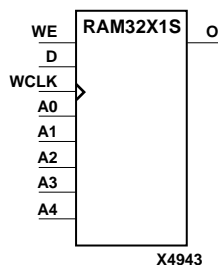

RAM32X1S is a 32-word by 1-bit static random access memory with synchronous write capability. When the write enable is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any positive transition on WCLK loads the data on the data input (D) into the word selected by the 5-bit address (A4 – A0). For predictable performance, address and data inputs must be stable before a Low-to-High WCLK transition. This RAM block assumes an active-High WCLK. However, WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

The signal output on the data output pin (O) is the data that is stored in the RAM at the location defined by the values on the address pins.

You can initialize RAM32X1S during configuration using the INIT attribute. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

Mode selection is shown in the following truth table.

Inputs			Outputs
WE (mode)	WCLK	D	O
0 (read)	X	X	Data
1 (read)	0	X	Data
1 (read)	1	X	Data
1 (write)	↑	D	D
1 (read)	↓	X	Data

Data = word addressed by bits A4 – A0

#### Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template

```
-- Component Declaration for RAM32X1S should be placed
-- after architecture statement but before begin keyword
```

```
component RAM32X1S
  -- synthesis translate_off
  generic (INIT : bit_vector := X"32");
  -- synthesis translate_on
  port (O : out STD_ULOGIC;
        A0 : in STD_ULOGIC;
        A1 : in STD_ULOGIC;
        A2 : in STD_ULOGIC;
        A4 : in STD_ULOGIC;
        D : in STD_ULOGIC;
        WCLK : in STD_ULOGIC;
        WE : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for RAM32X1S
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for RAM32X1S should be placed
-- in architecture after the begin keyword
```

```
RAM32X1S_INSTANCE_NAME : RAM32X1S
  -- synthesis translate_off
  generic map (INIT => hex_value)
  -- synthesis translate_on
  port map (O => user_O,
            A0 => user_A0,
            A1 => user_A1,
            A2 => user_A2,
            A3 => user_A3,
            A4 => user_A4,
            D => user_D,
            WCLK => user_WCLK,
            WE => user_WE);
```

## Verilog Instantiation Template

```
RAM32X1S instance_name (.O (user_O),
                        .A0 (user_A0),
                        .A1 (user_A1),
                        .A2 (user_A2),
                        .A3 (user_A3),
                        .A4 (user_A4),
                        .D (user_D),
                        .WCLK (user_WCLK),
                        .WE (user_WE));
defparam user_instance_name.INIT = hex_value;
```

## Commonly Used Constraints


BLKNM, HBLKNM, HU\_SET, INIT, LOC, RLOC, U\_SET, and XBLKNM

## RAM32X1S\_1

### 32-Deep by 1-Wide Static Synchronous RAM with Negative-Edge Clock

#### Architectures Supported

RAM32X1S_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

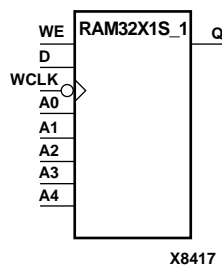

RAM32X1S\_1 is a 32-word by 1-bit static random access memory with synchronous write capability. When the write enable is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any negative transition on WCLK loads the data on the data input (D) into the word selected by the 5-bit address (A4 – A0). For predictable performance, address and data inputs must be stable before a High-to-Low WCLK transition. This RAM block assumes an active-Low WCLK. However, WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

The signal output on the data output pin (O) is the data that is stored in the RAM at the location defined by the values on the address pins.

You can initialize RAM32X1S\_1 during configuration using the INIT attribute. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

Mode selection is shown in the following truth table.

Inputs			Outputs
WE (mode)	WCLK	D	O
0 (read)	X	X	Data
1 (read)	0	X	Data
1 (read)	1	X	Data
1 (write)	↓	D	D
1 (read)	↑	X	Data

Data = word addressed by bits A4 – A0

#### Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template

```
-- Component Declaration for RAM32X1S_1 should be placed
-- after architecture statement but before begin keyword

component RAM32X1S_1
  -- synthesis translate_off
  generic (INIT : bit_vector := X"32");
  -- synthesis translate_on
  port (O : out STD_ULOGIC;
        A0 : in STD_ULOGIC;
        A1 : in STD_ULOGIC;
        A2 : in STD_ULOGIC;
        A4 : in STD_ULOGIC;
        D  : in STD_ULOGIC;
        WCLK : in STD_ULOGIC;
        WE  : in STD_ULOGIC);
end component;

-- Component Attribute specification for RAM32X1S_1
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for RAM32X1S_1 should be placed
-- in architecture after the begin keyword

RAM32X1S_1_INSTANCE_NAME : RAM32X1S_1
  -- synthesis translate_off
  generic map (INIT => hex_value)
  -- synthesis translate_on
  port map (O => user_O,
            A0 => user_A0,
            A1 => user_A1,
            A2 => user_A2,
            A3 => user_A3,
            A4 => user_A4,
            D => user_D,
            WCLK => user_WCLK,
            WE => user_WE);
```



## Verilog Instantiation Template

```
RAM32X1S_1 instance_name (.O (user_O),
                          .A0 (user_A0),
                          .A1 (user_A1),
                          .A2 (user_A2),
                          .A3 (user_A3),
                          .A4 (user_A4),
                          .D (user_D),
                          .WCLK (user_WCLK),
                          .WE (user_WE));

defparam user_instance_name.INIT = hex_value;
```

## Commonly Used Constraints

BLKNM  
HBLKNM  
HU\_SET  
INIT  
LOC  
RLOC  
U\_SET  
XBLKNM




## RAM32X2S

### 32-Deep by 2-Wide Static Synchronous RAM

#### Architectures Supported

RAM32X2S	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Primitive
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

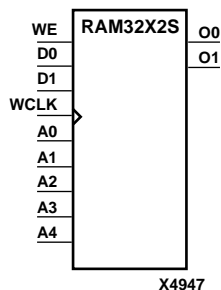

RAM32X2S is a 32-word by 2-bit static random access memory with synchronous write capability. When the write enable (WE) is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any positive transition on WCLK loads the data on the data input (D1 – D0) into the word selected by the 5-bit address (A4 – A0). For predictable performance, address and data inputs must be stable before a Low-to-High WCLK transition. This RAM block assumes an active-High WCLK. However, WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

The signal output on the data output pins (O1 – O0) is the data that is stored in the RAM at the location defined by the values on the address pins.

Except for Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the initial contents of RAM32X2S cannot be specified directly. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

For Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, you can use the INIT\_00 and INIT\_01 properties to specify the initial contents of RAM32X2S as described in [“Specifying Initial Contents of a Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X Wide RAM”](#) in the RAM16X2S section.

Mode selection is shown in the following truth table.

Inputs			Outputs
WE (mode)	WCLK	D0-D1	O0-O1
0 (read)	X	X	Data
1 (read)	0	X	Data
1 (read)	1	X	Data
1 (write)	↑	D1-D0	D1-D0
1 (read)	↓	X	Data

Data = word addressed by bits A4 – A0

## Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template

```

-- Component Declaration for RAM32X2S should be placed
-- after architecture statement but before begin keyword

component RAM32X2S
  -- synthesis translate_off
  generic (INIT_00 : bit_vector := X"32";
          INIT_01 : bit_vector := X"32");
  -- synthesis translate_on
  port (O0   : out STD_ULOGIC;
        O1   : out STD_ULOGIC;
        A0   : in  STD_ULOGIC;
        A1   : in  STD_ULOGIC;
        A2   : in  STD_ULOGIC;
        A3   : in  STD_ULOGIC;
        A4   : in  STD_ULOGIC;
        D0   : in  STD_ULOGIC;
        D1   : in  STD_ULOGIC;
        WCLK : in  STD_ULOGIC;
        WE   : in  STD_ULOGIC);
end component;

-- Component Attribute specification for RAM32X2S
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for RAM32X2S should be placed
-- in architecture after the begin keyword

RAM32X2S_INSTANCE_NAME : RAM32X2S
  -- synthesis translate_off
  generic map (INIT_00 => hex_value,
              INIT_01 => hex_value)
  -- synthesis translate_on
  port map (O0 => user_O0,
            O1 => user_O1,
            A0 => user_A0,
            A1 => user_A1,
            A2 => user_A2,
            A3 => user_A3,
            A4 => user_A4,
            D0 => user_D0,
            D1 => user_D1,
            WCLK => user_WCLK,
            WE => user_WE);

```

## Verilog Instantiation Template

```
RAM32X2S instance_name (.O0 (user_O0),
                        .O1 (user_O1),
                        .A0 (user_A0),
                        .A1 (user_A1),
                        .A2 (user_A2),
                        .A3 (user_A3),
                        .A4 (user_A4),
                        .D0 (user_D0),
                        .D1 (user_D1),
                        .WCLK (user_WCLK),
                        .WE (user_WE));

defparam user_instance_name.INIT_00 = hex_value;
defparam user_instance_name.INIT_01 = hex_value;
```

## Commonly Used Constraints


INIT\_xx  
BLKNM  
HBLKNM  
HU\_SET  
INIT  
LOC  
RLOC  
U\_SET  
XBLKNM

## RAM32X4S

### 32-Deep by 4-Wide Static Synchronous RAM

#### Architectures Supported

RAM32X4S	
Spartan-II, Spartan-IIE	Macro
Spartan-3	No
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

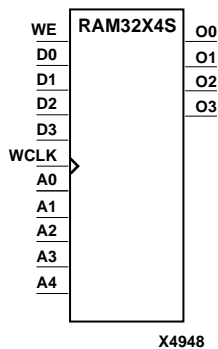

RAM32X4S is a 32-word by 4-bit static random access memory with synchronous write capability. When the write enable (WE) is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any positive transition on WCLK loads the data on the data inputs (D3 – D0) into the word selected by the 5-bit address (A4 – A0). For predictable performance, address and data inputs must be stable before a Low-to-High WCLK transition. This RAM block assumes an active-High WCLK. However, WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

The signal output on the data output pins (O3 – O0) is the data that is stored in the RAM at the location defined by the values on the address pins.

Except for Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the initial contents of RAM32X4S cannot be specified directly. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

For Virtex-II, Virtex-II Pro, and Virtex-II Pro X, you can use the INIT\_00 through INIT\_03 properties to specify the initial contents of RAM32X4S as described in [“Specifying Initial Contents of a Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X Wide RAM”](#) in the RAM16X2S section.

Mode selection is shown in the following truth table.

Inputs			Outputs
WE	WCLK	D3-D0	O3-O0
0 (read)	X	X	Data
1 (read)	0	X	Data
1 (read)	1	X	Data
1 (write)	↑	D3-D0	D3-D0
1 (read)	↓	X	Data

Data = word addressed by bits A4 – A0

## Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.



## VHDL Instantiation Template

```
-- Component Declaration for RAM32X4S should be placed
-- after architecture statement but before begin keyword
```

```
component RAM32X4S
  -- synthesis translate_off
  generic (INIT_00 : bit_vector := X"32";
          INIT_01 : bit_vector := X"32";
          INIT_02 : bit_vector := X"32";
          INIT_03 : bit_vector := X"32");
  -- synthesis translate_on
  port (O0 : out STD_ULOGIC;
        O1 : out STD_ULOGIC;
        O2 : out STD_ULOGIC;
        O3 : out STD_ULOGIC;
        A0 : in  STD_ULOGIC;
        A1 : in  STD_ULOGIC;
        A2 : in  STD_ULOGIC;
        A3 : in  STD_ULOGIC;
        A4 : in  STD_ULOGIC;
        D0 : in  STD_ULOGIC;
        D1 : in  STD_ULOGIC;
        D2 : in  STD_ULOGIC;
        D3 : in  STD_ULOGIC;
        WCLK : in STD_ULOGIC;
        WE  : in  STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for RAM32X4S
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for RAM32X4S should be placed
-- in architecture after the begin keyword
```

```
RAM32X4S_INSTANCE_NAME : RAM32X4S
  -- synthesis translate_off
  generic map (INIT_00 => hex_value,
              INIT_01 => hex_value,
              INIT_02 => hex_value,
              INIT_03 => hex_value)
  -- synthesis translate_on
  port map (O0 => user_O0,
            O1 => user_O1,
            O2 => user_O2,
            O3 => user_O3,
            A0 => user_A0,
            A1 => user_A1,
            A2 => user_A2,
            A3 => user_A3,
            A4 => user_A4,
            D0 => user_D0,
            D1 => user_D1,
            D2 => user_D2,
```

```
D3 => user_D3,  
WCLK => user_WCLK,  
WE => user_WE);
```

## Verilog Instantiation Template

```
RAM32X4S instance_name (.00 (user_00),  
                        .01 (user_01),  
                        .02 (user_02),  
                        .03 (user_03),  
                        .A0 (user_A0),  
                        .A1 (user_A1),  
                        .A2 (user_A2),  
                        .A3 (user_A3),  
                        .A4 (user_A4),  
                        .D0 (user_D0),  
                        .D1 (user_D1),  
                        .D2 (user_D2),  
                        .D3 (user_D3),  
                        .WCLK (user_WCLK),  
                        .WE (user_WE));  
  
defparam user_instance_name.INIT_00 = hex_value;  
defparam user_instance_name.INIT_01 = hex_value;  
defparam user_instance_name.INIT_02 = hex_value;  
defparam user_instance_name.INIT_03 = hex_value;
```

## Commonly Used Constraints


```
INIT_xx  
BLKNM  
HBLKNM  
HU_SET  
INIT  
LOC  
RLOC  
U_SET  
XBLKNM
```

## RAM32X8S

### 32-Deep by 8-Wide Static Synchronous RAM

#### Architectures Supported

RAM32X8S	
Spartan-II, Spartan-IIE	Macro
Spartan-3	No
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

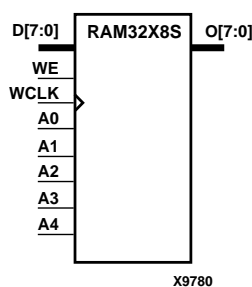

RAM32X8S is a 32-word by 8-bit static random access memory with synchronous write capability. When the write enable (WE) is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any positive transition on WCLK loads the data on the data inputs (D7 – D0) into the word selected by the 5-bit address (A4 – A0). For predictable performance, address and data inputs must be stable before a Low-to-High WCLK transition. This RAM block assumes an active-High WCLK. However, WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

The signal output on the data output pins (O7 – O0) is the data that is stored in the RAM at the location defined by the values on the address pins.


Except for Virtex-II, Virtex-II Pro, and Virtex-II Pro X, the initial contents of RAM32X8S cannot be specified directly. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

For Virtex-II, Virtex-II Pro, and Virtex-II Pro X, you can use the INIT\_00 through INIT\_07 properties to specify the initial contents of RAM32X8S as described in [“Specifying Initial Contents of a Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X Wide RAM”](#) in the RAM16X2S section.

Mode selection is shown in the following truth table.

Inputs			Outputs
WE (mode)	WCLK	D7-D0	O7-O0
0 (read)	X	X	Data
1 (read)	0	X	Data
1 (read)	1	X	Data
1 (write)	↑	D7-D0	D7-D0
1 (read)	↓	X	Data

Data = word addressed by bits A4 – A0

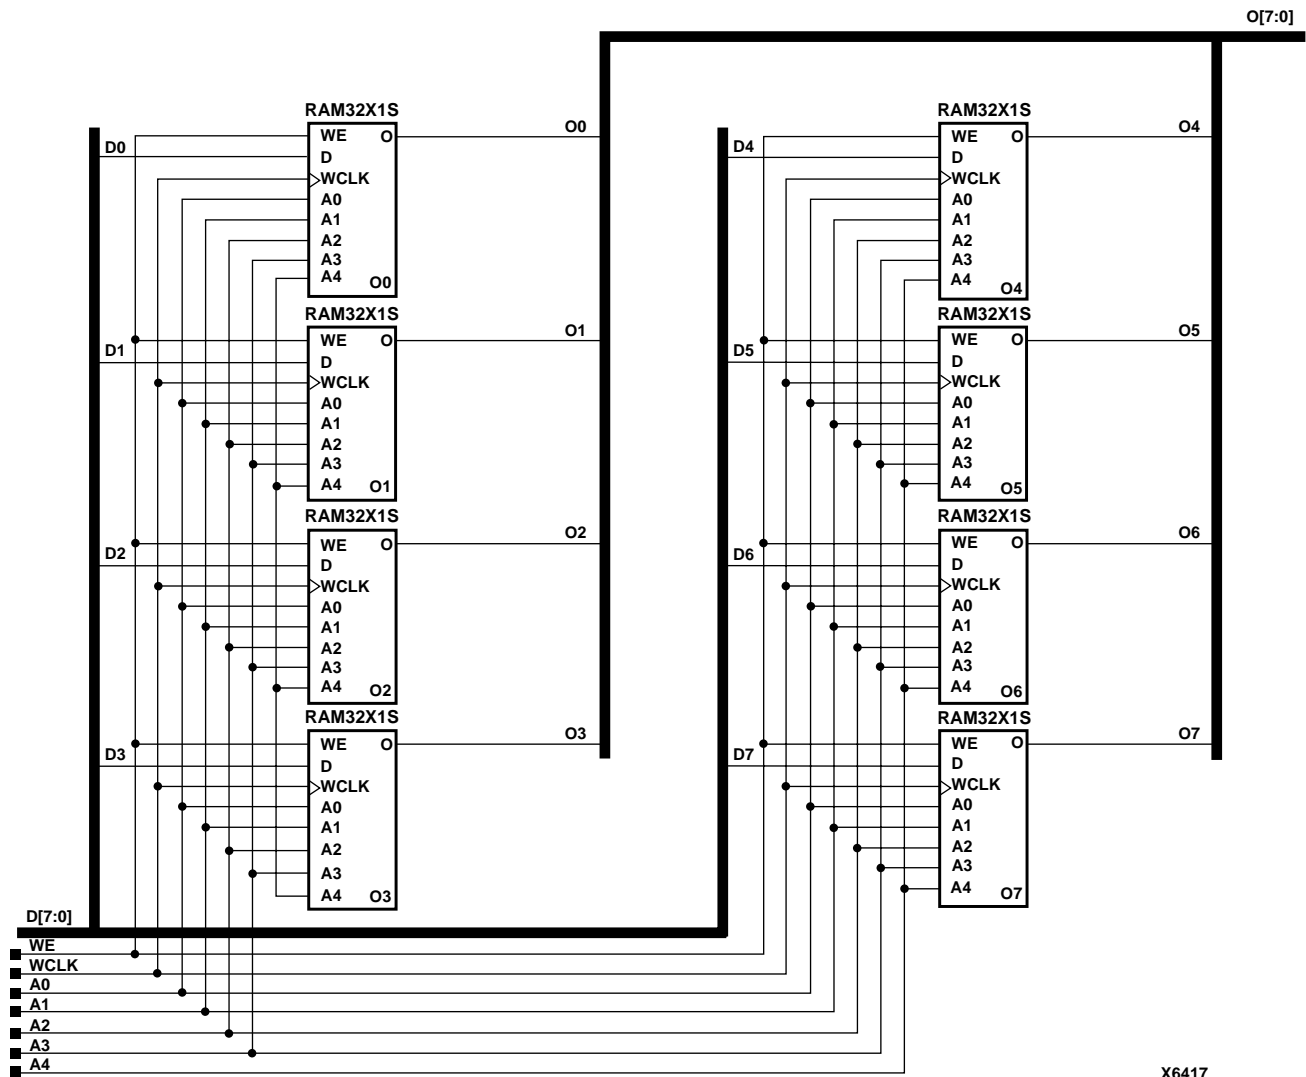

X6417

### RAM32X8S Implementation Spartan-II, Spartan-IIE, Virtex, Virtex-E

#### Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template

```
-- Component Declaration for RAM32X8S should be placed
-- after architecture statement but before begin keyword
```

```
component RAM32X8S
  -- synthesis translate_off
  generic (INIT_00 : bit_vector := X"32";
          INIT_01 : bit_vector := X"32";
          INIT_02 : bit_vector := X"32";
          INIT_03 : bit_vector := X"32";
          INIT_04 : bit_vector := X"32";
          INIT_05 : bit_vector := X"32";
          INIT_06 : bit_vector := X"32";
          INIT_07 : bit_vector := X"32");
  -- synthesis translate_on
  port (O0 : out STD_ULOGIC;
        A0 : in  STD_ULOGIC;
        A1 : in  STD_ULOGIC;
        A2 : in  STD_ULOGIC;
        A3 : in  STD_ULOGIC;
        A4 : in  STD_ULOGIC;
        D  : in  STD_ULOGIC;
        WCLK : in STD_ULOGIC;
        WE  : in  STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for RAM32X8S
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for RAM32X8S should be placed
-- in architecture after the begin keyword
```

```
RAM32X8S_INSTANCE_NAME : RAM32X8S
  -- synthesis translate_off
  generic map (INIT_00 => hex_value,
              INIT_01 => hex_value,
              INIT_02 => hex_value,
              INIT_03 => hex_value,
              INIT_04 => hex_value,
              INIT_05 => hex_value,
              INIT_06 => hex_value,
              INIT_07 => hex_value)
  -- synthesis translate_on
  port map (O0 => user_O0,
            A0 => user_A0,
            A1 => user_A1,
            A2 => user_A2,
            A3 => user_A3,
            A4 => user_A4,
            D  => user_D,
            WCLK => user_WCLK,
            WE  => user_WE);
```

## Verilog Instantiation Template

```
RAM32X8S instance_name (.O0 (user_O0),
                        .A0 (user_A0),
                        .A1 (user_A1),
                        .A2 (user_A2),
                        .A3 (user_A3),
                        .A4 (user_A4),
                        .D (user_D),
                        .WCLK (user_WCLK),
                        .WE (user_WE));

defparam user_instance_name.INIT_00 = hex_value;
defparam user_instance_name.INIT_01 = hex_value;
defparam user_instance_name.INIT_02 = hex_value;
defparam user_instance_name.INIT_03 = hex_value;
defparam user_instance_name.INIT_04 = hex_value;
defparam user_instance_name.INIT_05 = hex_value;
defparam user_instance_name.INIT_06 = hex_value;
defparam user_instance_name.INIT_07 = hex_value;
```

## Commonly Used Constraints

BLKNM  
HBLKNM  
HU\_SET  
INIT  
INIT\_xx  
LOC  
RLOC  
U\_SET  
XBLKNM








## RAM64X1D

### 64-Deep by 1-Wide Dual Port Static Synchronous RAM

#### Architectures Supported

RAM64X1D	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

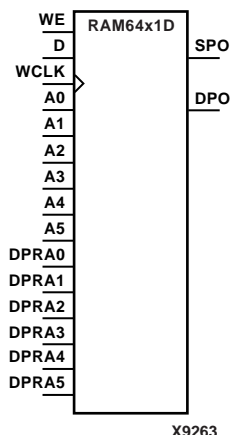

RAM64X1D is a 64-word by 1-bit static dual port random access memory with synchronous write capability. The device has two separate address ports: the read address (DPRA5 – DPRA0) and the write address (A5 – A0). These two address ports are completely asynchronous. The read address controls the location of the data driven out of the output pin (DPO), and the write address controls the destination of a valid write transaction.

When the write enable (WE) is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any positive transition on WCLK loads the data on the data input (D) into the word selected by the 6-bit (A0 - A5) write address. For predictable performance, write address and data inputs must be stable before a Low-to-High WCLK transition. This RAM block assumes an active-High WCLK. WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

You can initialize RAM64X1D during configuration using the INIT attribute. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

Mode selection is shown in the following truth table.

Inputs			Outputs	
WE (mode)	WCLK	D	SPO	DPO
0 (read)	X	X	data_a	data_d
1 (read)	0	X	data_a	data_d
1 (read)	1	X	data_a	data_d
1 (write)	↑	D	D	data_d
1 (read)	↓	X	data_a	data_d

data\_a = word addressed by bits A5-A0

data\_d = word addressed by bits DPRA5-DPRA0

The SPO output reflects the data in the memory cell addressed by A5 – A0. The DPO output reflects the data in the memory cell addressed by DPRA5 – DPRA0.

**Note:** The write process is not affected by the address on the read address port.

## Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template

```
-- Component Declaration for RAM64X1D should be placed
-- after architecture statement but before begin keyword
```

```
component RAM64X1D
  -- synthesis translate_off
  generic (INIT : bit_vector    := X"64");
  -- synthesis translate_on
  port (DPO   : out STD_ULOGIC;
        SPO   : out STD_ULOGIC;
        A0    : in  STD_ULOGIC;
        A1    : in  STD_ULOGIC;
        A2    : in  STD_ULOGIC;
        A3    : in  STD_ULOGIC;
        A4    : in  STD_ULOGIC;
        A5    : in  STD_ULOGIC;
        D     : in  STD_ULOGIC;
        DPRA0 : in  STD_ULOGIC;
        DPRA1 : in  STD_ULOGIC;
        DPRA2 : in  STD_ULOGIC;
        DPRA3 : in  STD_ULOGIC;
        DPRA4 : in  STD_ULOGIC;
        DPRA5 : in  STD_ULOGIC;
        WCLK  : in  STD_ULOGIC;
        WE    : in  STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for RAM64X1D
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for RAM64X1D should be placed
-- in architecture after the begin keyword
```

```
RAM64X1D_INSTANCE_NAME : RAM64X1D
  -- synthesis translate_off
  generic map(INIT => hex_value)
  -- synthesis translate_on
  port map (DPO => user_DPO,
            SPO => user_SPO,
            A0  => user_A0,
            A1  => user_A1,
            A2  => user_A2,
            A3  => user_A3,
            A4  => user_A4,
            A5  => user_A5,
            D   => user_D,
            DPRA0 => user_DPRA0,
            DPRA1 => user_DPRA1,
```

```
DPRA2 => user_DPRA2,  
DPRA3 => user_DPRA3,  
DPRA4 => user_DPRA4,  
DPRA5 => user_DPRA5,  
WCLK  => user_WCLK,  
WE    => user_WE);
```

## Verilog Instantiation Template

```
RAM64X1D instance_name (.DPO (user_DPO),  
                        .SPO (user_SPO),  
                        .A0 (user_A0),  
                        .A1 (user_A1),  
                        .A2 (user_A2),  
                        .A3 (user_A3),  
                        .A4 (user_A4),  
                        .A5 (user_A5),  
                        .D (user_D),  
                        .DPRA0 (user_DPRA0),  
                        .DPRA1 (user_DPRA1),  
                        .DPRA2 (user_DPRA2),  
                        .DPRA3 (user_DPRA3),  
                        .DPRA4 (user_DPRA4),  
                        .DPRA5 (user_DPRA5),  
                        .WCLK (user_WCLK),  
                        .WE (user_WE));  
  
defparam RAM64X1D_instance_name.INIT = hex_value;
```

## Commonly Used Constraints

BLKNM  
HBLKNM  
HU\_SET  
INIT  
LOC  
RLOC  
U\_SET  
XBLKNM




## RAM64X1D\_1

### 64-Deep by 1-Wide Dual Port Static Synchronous RAM with Negative-Edge Clock

#### Architectures Supported

RAM64X1D_1	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

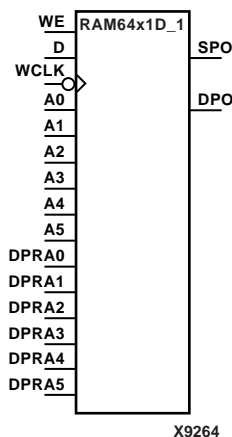

RAM64X1D\_1 is a 64-word by 1-bit static dual port random access memory with synchronous write capability and a negative-edge clock. The device has two separate address ports: the read address (DPRA5 – DPRA0) and the write address (A5 – A0). These two address ports are completely asynchronous. The read address controls the location of the data driven out of the output pin (DPO), and the write address controls the destination of a valid write transaction.

When the write enable (WE) is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any negative transition on WCLK loads the data on the data input (D) into the word selected by the 6-bit (A0 - A5) write address. For predictable performance, write address and data inputs must be stable before a High-to-Low WCLK transition. This RAM block assumes an active-Low WCLK. WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

You can initialize RAM64X1D\_1 during configuration using the INIT attribute. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

Mode selection is shown in the following truth table.

Inputs			Outputs	
WE (mode)	WCLK	D	SPO	DPO
0 (read)	X	X	data_a	data_d
1 (read)	0	X	data_a	data_d
1 (read)	1	X	data_a	data_d
1 (write)	↓	D	D	data_d
1 (read)	↑	X	data_a	data_d

data\_a = word addressed by bits A5-A0

data\_d = word addressed by bits DPRA5-DPRA0

The SPO output reflects the data in the memory cell addressed by A5 – A0. The DPO output reflects the data in the memory cell addressed by DPRA5 – DPRA0.

**Note:** The write process is not affected by the address on the read address port.

## Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template

```
-- Component Declaration for RAM64X1D_1 should be placed
-- after architecture statement but before begin keyword

component RAM64X1D_1
  -- synthesis translate_off
  generic (INIT : bit_vector := X"64");
  -- synthesis translate_on
  port (DPO : out STD_ULOGIC;
        SPO : out STD_ULOGIC;
        A0  : in STD_ULOGIC;
        A1  : in STD_ULOGIC;
        A2  : in STD_ULOGIC;
        A3  : in STD_ULOGIC;
        A4  : in STD_ULOGIC;
        A5  : in STD_ULOGIC;
        D   : in STD_ULOGIC;
        DPRA0 : in STD_ULOGIC;
        DPRA1 : in STD_ULOGIC;
        DPRA2 : in STD_ULOGIC;
        DPRA3 : in STD_ULOGIC;
        DPRA4 : in STD_ULOGIC;
        DPRA5 : in STD_ULOGIC;
        WCLK : in STD_ULOGIC;
        WE   : in STD_ULOGIC);
end component;

-- Component Attribute specification for RAM64X1D_1
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for RAM64X1D_1 should be placed
-- in architecture after the begin keyword

RAM64X1D_1_INSTANCE_NAME : RAM64X1D_1
  -- synthesis translate_off
  generic map (INIT => hex_value)
  -- synthesis translate_on
  port map (DPO => user_DPO,
           SPO => user_SPO,
           A0 => user_A0,
           A1 => user_A1,
           A2 => user_A2,
           A3 => user_A3,
           A4 => user_A4,
           A5 => user_A5,
           D => user_D,
```

```
DPRA0 => user_DPRA0,  
DPRA1 => user_DPRA1,  
DPRA2 => user_DPRA2,  
DPRA3 => user_DPRA3,  
DPRA4 => user_DPRA4,  
DPRA5 => user_DPRA5,  
WCLK => user_WCLK,  
WE => user_WE);
```

## Verilog Instantiation Template

```
RAM64X1D_1 instance_name (.DPO (user_DPO),  
                          .SPO (user_SPO),  
                          .A0 (user_A0),  
                          .A1 (user_A1),  
                          .A2 (user_A2),  
                          .A3 (user_A3),  
                          .A4 (user_A4),  
                          .A5 (user_A5),  
                          .D (user_D),  
                          .DPRA0 (user_DPRA0),  
                          .DPRA1 (user_DPRA1),  
                          .DPRA2 (user_DPRA2),  
                          .DPRA3 (user_DPRA3),  
                          .DPRA4 (user_DPRA4),  
                          .DPRA5 (user_DPRA5),  
                          .WCLK (user_WCLK),  
                          .WE (user_WE));  
  
defparam RAM64X1D_1_instance_name.INIT = hex_value;
```

## Commonly Used Constraints

BLKNM  
HBLKNM  
HU\_SET  
INIT  
LOC  
RLOC  
U\_SET  
XBLKNM






## RAM64X1S

### 64-Deep by 1-Wide Static Synchronous RAM

#### Architectures Supported

RAM64X1S	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

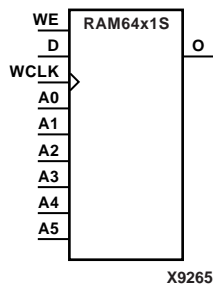

RAM64X1S is a 64-word by 1-bit static random access memory with synchronous write capability. When the write enable is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any positive transition on WCLK loads the data on the data input (D) into the word selected by the 6-bit address (A5 – A0). For predictable performance, address and data inputs must be stable before a Low-to-High WCLK transition. This RAM block assumes an active-High WCLK. However, WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

The signal output on the data output pin (O) is the data that is stored in the RAM at the location defined by the values on the address pins.

You can initialize RAM64X1S during configuration using the INIT attribute. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

Mode selection is shown in the following truth table.

Inputs			Outputs
WE (mode)	WCLK	D	O
0 (read)	X	X	Data
1 (read)	0	X	Data
1 (read)	1	X	Data
1 (write)	↑	D	D
1 (read)	↓	X	Data

Data = word addressed by bits A5 – A0

#### Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template

```
-- Component Declaration for RAM64X1S should be placed  
-- after architecture statement but before begin keyword
```

```
component RAM64X1S  
  -- synthesis translate_off  
  generic (INIT : bit_vector := X"64");  
  -- synthesis translate_on  
  port (O : out STD_ULOGIC;  
        A0 : in STD_ULOGIC;  
        A1 : in STD_ULOGIC;  
        A2 : in STD_ULOGIC;  
        A4 : in STD_ULOGIC;  
        A5 : in STD_ULOGIC;  
        D  : in STD_ULOGIC;  
        WCLK : in STD_ULOGIC;  
        WE  : in STD_ULOGIC);  
end component;
```

```
-- Component Attribute specification for RAM64X1S  
-- should be placed after architecture declaration but  
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for RAM64X1S should be placed  
-- in architecture after the begin keyword
```

```
RAM64X1S_INSTANCE_NAME : RAM64X1S  
  -- synthesis translate_off  
  generic map (INIT => hex_value)  
  -- synthesis translate_on  
  port map (O => user_O,  
            A0 => user_A0,  
            A1 => user_A1,  
            A2 => user_A2,  
            A3 => user_A3,  
            A4 => user_A4,  
            A5 => user_A5,  
            D  => user_D,  
            WCLK => user_WCLK,  
            WE => user_WE);
```

## Verilog Instantiation Template

```
RAM64X1S instance_name (.O (user_O),
                        .A0 (user_A0),
                        .A1 (user_A1),
                        .A2 (user_A2),
                        .A3 (user_A3),
                        .A4 (user_A4),
                        .A5 (user_A5),
                        .D (user_D),
                        .WCLK (user_WCLK),
                        .WE (user_WE));

defparam user_instance_name.INIT = hex_value;
```

## Commonly Used Constraints

BLKNM  
HBLKNM  
HU\_SET  
INIT  
LOC  
RLOC  
U\_SET  
XBLKNM




## RAM64X1S\_1

### 64-Deep by 1-Wide Static Synchronous RAM with Negative-Edge Clock

#### Architectures Supported

RAM64X1S_1	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

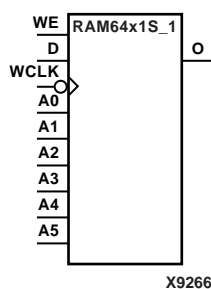

RAM64X1S\_1 is a 64-word by 1-bit static random access memory with synchronous write capability. When the write enable is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any negative transition on WCLK loads the data on the data input (D) into the word selected by the 6-bit address (A5 – A0). For predictable performance, address and data inputs must be stable before a High-to-Low WCLK transition. This RAM block assumes an active-Low WCLK. However, WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

The signal output on the data output pin (O) is the data that is stored in the RAM at the location defined by the values on the address pins.

You can initialize RAM32X1S\_1 during configuration using the INIT attribute. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

Mode selection is shown in the following truth table.

Inputs			Outputs
WE (mode)	WCLK	D	O
0 (read)	X	X	Data
1 (read)	0	X	Data
1 (read)	1	X	Data
1 (write)	↓	D	D
1 (read)	↑	X	Data

Data = word addressed by bits A5 – A0

#### Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template

```
-- Component Declaration for RAM64X1S_1 should be placed
-- after architecture statement but before begin keyword

component RAM64X1S_1
  -- synthesis translate_off
  generic (INIT : bit_vector := X"64");
  -- synthesis translate_on
  port (O : out STD_ULOGIC;
        A0 : in STD_ULOGIC;
        A1 : in STD_ULOGIC;
        A2 : in STD_ULOGIC;
        A4 : in STD_ULOGIC;
        A5 : in STD_ULOGIC;
        D : in STD_ULOGIC;
        WCLK : in STD_ULOGIC;
        WE : in STD_ULOGIC);
end component;

-- Component Attribute specification for RAM64X1S_1
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for RAM64X1S_1 should be placed
-- in architecture after the begin keyword

RAM64X1S_1_INSTANCE_NAME : RAM64X1S_1
  -- synthesis translate_off
  generic map (INIT => hex_value)
  -- synthesis translate_on
  port map (O => user_O,
            A0 => user_A0,
            A1 => user_A1,
            A2 => user_A2,
            A3 => user_A3,
            A4 => user_A4,
            A5 => user_A5,
            D => user_D,
            WCLK => user_WCLK,
            WE => user_WE);
```

## Verilog Instantiation Template

```
RAM64X1S_1 instance_name (.O (user_O),  
                          .A0 (user_A0),  
                          .A1 (user_A1),  
                          .A2 (user_A2),  
                          .A3 (user_A3),  
                          .A4 (user_A4),  
                          .A5 (user_A5),  
                          .D (user_D),  
                          .WCLK (user_WCLK),  
                          .WE (user_WE));
```

```
defparam user_instance_name.INIT = hex_value;
```

## Commonly Used Constraints

BLKNM  
HBLKNM  
HU\_SET  
INIT  
LOC  
RLOC  
U\_SET  
XBLKNM






## RAM64X2S

### 64-Deep by 2-Wide Static Synchronous RAM

#### Architectures Supported

RAM64X2S	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

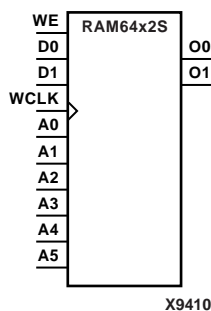

RAM64X2S is a 64-word by 2-bit static random access memory with synchronous write capability. When the write enable (WE) is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any positive transition on WCLK loads the data on the data input (D1 – D0) into the word selected by the 6-bit address (A5 – A0). For predictable performance, address and data inputs must be stable before a Low-to-High WCLK transition. This RAM block assumes an active-High WCLK. However, WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

The signal output on the data output pins (O1 – O0) is the data that is stored in the RAM at the location defined by the values on the address pins.

You can use the INIT\_00 and INIT\_01 properties to specify the initial contents of RAM64X2S as described in “[Specifying Initial Contents of a Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X Wide RAM](#)” in the RAM16X2S section.

Mode selection is shown in the following truth table.

Inputs			Outputs
WE (mode)	WCLK	D0-D1	O0-O1
0 (read)	X	X	Data
1 (read)	0	X	Data
1 (read)	1	X	Data
1 (write)	↑	D1-D0	D1-D0
1 (read)	↓	X	Data

Data = word addressed by bits A5 – A0

#### Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template

```
-- Component Declaration for RAM64X2S should be placed  
-- after architecture statement but before begin keyword
```

```
component RAM64X2S  
  -- synthesis translate_off  
  generic (INIT_00 : bit_vector := X"64";  
          INIT_01 : bit_vector := X"64");  
  -- synthesis translate_on  
  port (O0 : out STD_ULOGIC;  
        O1 : out STD_ULOGIC;  
        A0 : in  STD_ULOGIC;  
        A1 : in  STD_ULOGIC;  
        A2 : in  STD_ULOGIC;  
        A3 : in  STD_ULOGIC;  
        A4 : in  STD_ULOGIC;  
        A5 : in  STD_ULOGIC;  
        D0 : in  STD_ULOGIC;  
        D1 : in  STD_ULOGIC;  
        WCLK : in STD_ULOGIC;  
        WE  : in  STD_ULOGIC);  
end component;
```

```
-- Component Attribute specification for RAM64X2S  
-- should be placed after architecture declaration but  
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for RAM64X2S should be placed  
-- in architecture after the begin keyword
```

```
RAM64X2S_INSTANCE_NAME : RAM64X2S  
  -- synthesis translate_off  
  generic map (INIT_00 => hex_value,  
              INIT_01 => hex_value)  
  -- synthesis translate_on  
  port map (O0 => user_O0,  
            O1 => user_O1,  
            A0 => user_A0,  
            A1 => user_A1,  
            A2 => user_A2,  
            A3 => user_A3,  
            A4 => user_A4,  
            A5 => user_A5,  
            D0 => user_D0,  
            D1 => user_D1,  
            WCLK => user_WCLK,  
            WE  => user_WE);
```

## Verilog Instantiation Template

```
RAM64X2S instance_name (.O0 (user_O0),
                        .O1 (user_O1),
                        .A0 (user_A0),
                        .A1 (user_A1),
                        .A2 (user_A2),
                        .A3 (user_A3),
                        .A4 (user_A4),
                        .A5 (user_A5),
                        .D0 (user_D0),
                        .D1 (user_D1),
                        .WCLK (user_WCLK),
                        .WE (user_WE));

defparam user_instance_name.INIT_00 = hex_value;
defparam user_instance_name.INIT_01 = hex_value;
```

## Commonly Used Constraints

BLKNM  
HBLKNM  
HU\_SET  
INIT  
LOC  
RLOC  
U\_SET  
XBLKNM




## RAM128X1S

### 128-Deep by 1-Wide Static Synchronous RAM

#### Architectures Supported

RAM128X1S	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

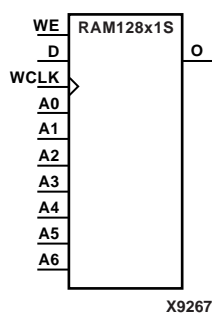

RAM128X1S is a 128-word by 1-bit static random access memory with synchronous write capability. When the write enable is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any positive transition on WCLK loads the data on the data input (D) into the word selected by the 7-bit address (A6 – A0). For predictable performance, address and data inputs must be stable before a Low-to-High WCLK transition. This RAM block assumes an active-High WCLK. However, WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

The signal output on the data output pin (O) is the data that is stored in the RAM at the location defined by the values on the address pins.

You can initialize RAM128X1S during configuration using the INIT attribute. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

Mode selection is shown in the following truth table.

Inputs			Outputs
WE (mode)	WCLK	D	O
0 (read)	X	X	Data
1 (read)	0	X	Data
1 (read)	1	X	Data
1 (write)	↑	D	D
1 (read)	↓	X	Data

Data = word addressed by bits A6 – A0

#### Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template

```
-- Component Declaration for RAM128X1S should be placed
-- after architecture statement but before begin keyword

component RAM128X1S
  -- synthesis translate_off
  generic (INIT : bit_vector := X"128");
  -- synthesis translate_on
  port (O : out STD_ULOGIC;
        A0 : in STD_ULOGIC;
        A1 : in STD_ULOGIC;
        A2 : in STD_ULOGIC;
        A4 : in STD_ULOGIC;
        A5 : in STD_ULOGIC;
        A6 : in STD_ULOGIC;
        D : in STD_ULOGIC;
        WCLK : in STD_ULOGIC;
        WE : in STD_ULOGIC);
end component;

-- Component Attribute specification for RAM128X1S
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for RAM128X1S should be placed
-- in architecture after the begin keyword

RAM128X1S_INSTANCE_NAME : RAM128X1S
  -- synthesis translate_off
  generic map (INIT => hex_value)
  -- synthesis translate_on
  port map (O => user_O,
            A0 => user_A0,
            A1 => user_A1,
            A2 => user_A2,
            A3 => user_A3,
            A4 => user_A4,
            A5 => user_A5,
            A6 => user_A6,
            D => user_D,
            WCLK => user_WCLK,
            WE => user_WE);
```

## Verilog Instantiation Template

```
RAM128X1S instance_name (.O (user_O),
                        .A0 (user_A0),
                        .A1 (user_A1),
                        .A2 (user_A2),
                        .A3 (user_A3),
                        .A4 (user_A4),
                        .A5 (user_A5),
                        .A6 (user_A6),
                        .D (user_D),
                        .WCLK (user_WCLK),
                        .WE (user_WE));

defparam user_instance_name.INIT = hex_value;
```

## Commonly Used Constraints

BLKNM  
HBLKNM  
HU\_SET  
INIT  
LOC  
RLOC  
U\_SET  
XBLKNM






## RAM128X1S\_1

### 128-Deep by 1-Wide Static Synchronous RAM with Negative-Edge Clock

#### Architectures Supported

RAM128X1S_1	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

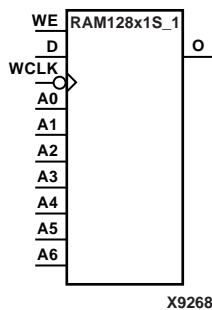

RAM128X1S\_1 is a 128-word by 1-bit static random access memory with synchronous write capability. When the write enable is Low, transitions on the write clock (WCLK) are ignored and data stored in the RAM is not affected. When WE is High, any negative transition on WCLK loads the data on the data input (D) into the word selected by the 7-bit address (A6 – A0). For predictable performance, address and data inputs must be stable before a High-to-Low WCLK transition. This RAM block assumes an active-Low WCLK. However, WCLK can be active-High or active-Low. Any inverter placed on the WCLK input net is absorbed into the block.

The signal output on the data output pin (O) is the data that is stored in the RAM at the location defined by the values on the address pins.

You can initialize RAM128X1S\_1 during configuration using the INIT attribute. See [“Specifying Initial Contents of a RAM”](#) in the RAM16X1D section.

Mode selection is shown in the following truth table.

Inputs			Outputs
WE (mode)	WCLK	D	O
0 (read)	X	X	Data
1 (read)	0	X	Data
1 (read)	1	X	Data
1 (write)	↓	D	D
1 (read)	↑	X	Data

Data = word addressed by bits A6 – A0

#### Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template

```
-- Component Declaration for RAM128X1S_1 should be placed
-- after architecture statement but before begin keyword

component RAM128X1S_1
  -- synthesis translate_off
  generic (INIT : bit_vector := X"128");
  -- synthesis translate_on
  port (O : out STD_ULOGIC;
        A0 : in STD_ULOGIC;
        A1 : in STD_ULOGIC;
        A2 : in STD_ULOGIC;
        A4 : in STD_ULOGIC;
        A5 : in STD_ULOGIC;
        A6 : in STD_ULOGIC;
        D : in STD_ULOGIC;
        WCLK : in STD_ULOGIC;
        WE : in STD_ULOGIC);
end component;

-- Component Attribute specification for RAM128X1S_1
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for RAM128X1S_1 should be placed
-- in architecture after the begin keyword

RAM128X1S_1_INSTANCE_NAME : RAM128X1S_1
  -- synthesis translate_off
  generic map (INIT => hex_value)
  -- synthesis translate_on
  port map (O => user_O,
            A0 => user_A0,
            A1 => user_A1,
            A2 => user_A2,
            A3 => user_A3,
            A4 => user_A4,
            A5 => user_A5,
            A6 => user_A6,
            D => user_D,
            WCLK => user_WCLK,
            WE => user_WE);
```

## Verilog Instantiation Template

```
RAM128X1S_1 instance_name (.O (user_O),
                           .A0 (user_A0),
                           .A1 (user_A1),
                           .A2 (user_A2),
                           .A3 (user_A3),
                           .A4 (user_A4),
                           .A5 (user_A5),
                           .A6 (user_A6),
                           .D (user_D),
                           .WCLK (user_WCLK),
                           .WE (user_WE));

defparam user_instance_name.INIT = hex_value;
```

## Commonly Used Constraints


BLKNM  
HBLKNM  
HU\_SET  
INIT  
LOC  
RLOC  
U\_SET  
XBLKNM




## RAMB4\_Sn

### 4096-Bit Single-Port Synchronous Block RAM with Port Width (n) Configured to 1, 2, 4, 8, or 16 Bits


RAMB4_Sn	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	No
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

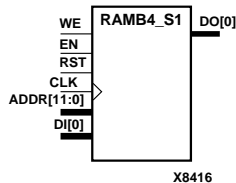

RAMB4\_S1, RAMB4\_S2, RAMB4\_S4, RAMB4\_S8, and RAMB4\_S16 are dedicated random access memory blocks with synchronous write capability. They provide the capability for fast, discrete, large blocks of RAM in each Virtex, Virtex-E, Spartan-II, and Spartan-IIE device. The RAMB4\_Sn cell configurations are listed in the following table.

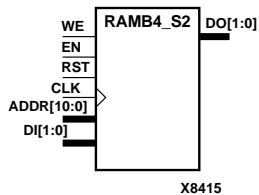

Component	Depth	Width	Address Bus	Data Bus
RAMB4_S1	4096	1	(11:0)	(0:0)
RAMB4_S2	2048	2	(10:0)	(1:0)
RAMB4_S4	1024	4	(9:0)	(3:0)
RAMB4_S8	512	8	(8:0)	(7:0)
RAMB4_S16	256	16	(7:0)	(15:0)

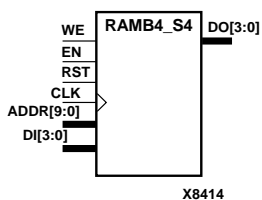



The enable (EN) pin controls read, write, and reset. When EN is Low, no data is written and the output (DO) retains the last state. When EN is High and reset (RST) is High, DO is cleared during the Low-to-High clock (CLK) transition; if write enable (WE) is High, the memory contents reflect the data at DI. When EN is High and WE is Low, the data stored in the RAM address (ADDR) is read during the Low-to-High clock transition. When EN and WE are High, the data on the data input (DI) is loaded into the word selected by the write address (ADDR) during the Low-to-High clock transition and the data output (DO) reflects the selected (addressed) word.

The above description assumes an active High EN, WE, RST, and CLK. However, the active level can be changed by placing an inverter on the port. Any inverter placed on a RAMB4 port is absorbed into the block and does not use a CLB resource.

RAMB4\_Sn 's may be initialized during configuration. See [“Specifying Initial Contents of a Block RAM”](#) below.

Block RAM output registers are asynchronously cleared, output Low, when power is applied. The initial contents of the block RAM are not altered.

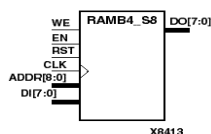

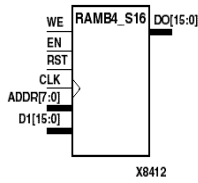

Virtex, Virtex-E, Spartan-II, and Spartan-IIE simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Mode selection is shown in the following truth table.

Inputs						Outputs	
EN	RST	WE	CLK	ADDR	DI	DO	RAM Contents
0	X	X	X	X	X	No Chg	No Chg
1	1	0	↑	X	X	0	No Chg
1	1	1	↑	addr	data	0	RAM(addr) =>data
1	0	0	↑	addr	X	RAM(addr)	No Chg
1	0	1	↑	addr	data	data	RAM(addr) =>data

addr=RAM address

RAM(addr)=RAM contents at address ADDR

data=RAM input data

### Specifying Initial Contents of a Block RAM

You can use the INIT\_xx attributes to specify an initial value during device configuration. The initialization of each RAMB4\_Sn is set by 16 initialization attributes (INIT\_00 through INIT\_0F) of 64 hex values for a total of 4096 bits. See the INIT\_xx section of the *Constraints Guide* for more information on these attributes.

If any INIT\_0x attribute is not specified, it is configured as zeros. Partial initialization strings are padded with zeros to the left.

### Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

### VHDL Instantiation Template for RAMB4\_Sn

```
-- Component Declaration for RAMB4_Sn
-- Should be placed after architecture statement but before begin keyword
component RAMB4_Sn
  -- synthesis translate_off
  generic (
    INIT_00 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_01 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_02 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_03 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_04 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_05 : bit_vector :=
```

```

X"0000000000000000000000000000000000000000000000000000000000000000";
  INIT_06 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
  INIT_07 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
  INIT_08 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
  INIT_09 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
  INIT_0A : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
  INIT_0B : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
  INIT_0C : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
  INIT_0D : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
  INIT_0E : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
  INIT_0F : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
);
  -- synthesis translate_on
  port (DO : out STD_LOGIC_VECTOR (0 downto 0);
        ADDR : in STD_LOGIC_VECTOR (11 downto 0);
        CLK : in STD_ULOGIC;
        DI : in STD_LOGIC_VECTOR (0 downto 0);
        EN : in STD_ULOGIC;
        RST : in STD_ULOGIC;
        WE : in STD_ULOGIC);

end component;

-- Component Attribute Specification for RAMB4_Sn
-- Should be placed after architecture declaration but before the begin keyword

-- Put attributes, if necessary

-- Component Instantiation for RAMB4_Sn
-- Should be placed in architecture after the begin keyword

RAMB4_Sn_INSTANCE_NAME : RAMB4_Sn
  -- synthesis translate_off
  generic map (
    INIT_00 => hex_value,
    INIT_01 => hex_value,
    INIT_02 => hex_value,
    INIT_03 => hex_value,
    INIT_04 => hex_value,
    INIT_05 => hex_value,
    INIT_06 => hex_value,
    INIT_07 => hex_value,
    INIT_08 => hex_value,
    INIT_09 => hex_value,
    INIT_0A => hex_value,
    INIT_0B => hex_value,
    INIT_0C => hex_value,

```

```

    INIT_0D => hex_value,
    INIT_0E => hex_value,
    INIT_0F => hex_value)
-- synopsys translate_on
port map (DO => user_DO,
         ADDR => user_ADDR,
         CLK => user_CLK,
         DI => user_DI,
         EN => user_EN,
         RST => user_RST,
         WE => user_WE);

```

## Verilog Instantiation Template for RAMB4\_Sn

```

RAMB4_Sn user_instance_name (.DO (user_DO),
                             .ADDR (user_ADDR),
                             .CLK (user_CLK),
                             .DI (user_DI),
                             .EN (user_EN),
                             .RST (user_RST),
                             .WE (user_WE));

defparam user_instance_name.INIT_00 = 256_bit_hex_value;
defparam user_instance_name.INIT_01 = 256_bit_hex_value;
defparam user_instance_name.INIT_02 = 256_bit_hex_value;
defparam user_instance_name.INIT_03 = 256_bit_hex_value;
defparam user_instance_name.INIT_04 = 256_bit_hex_value;
defparam user_instance_name.INIT_05 = 256_bit_hex_value;
defparam user_instance_name.INIT_06 = 256_bit_hex_value;
defparam user_instance_name.INIT_07 = 256_bit_hex_value;
defparam user_instance_name.INIT_08 = 256_bit_hex_value;
defparam user_instance_name.INIT_09 = 256_bit_hex_value;
defparam user_instance_name.INIT_0A = 256_bit_hex_value;
defparam user_instance_name.INIT_0B = 256_bit_hex_value;
defparam user_instance_name.INIT_0C = 256_bit_hex_value;
defparam user_instance_name.INIT_0D = 256_bit_hex_value;
defparam user_instance_name.INIT_0E = 256_bit_hex_value;
defparam user_instance_name.INIT_0F = 256_bit_hex_value;

```

## Commonly Used Constraints

INIT\_xx




## RAMB4\_Sm\_Sn

4096-Bit Dual-Port Synchronous Block RAM with Port Width (m or n)  
Configured to 1, 2, 4, 8, or 16 Bits

### Architectures Supported

RAMB4_Sm_Sn	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	No
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

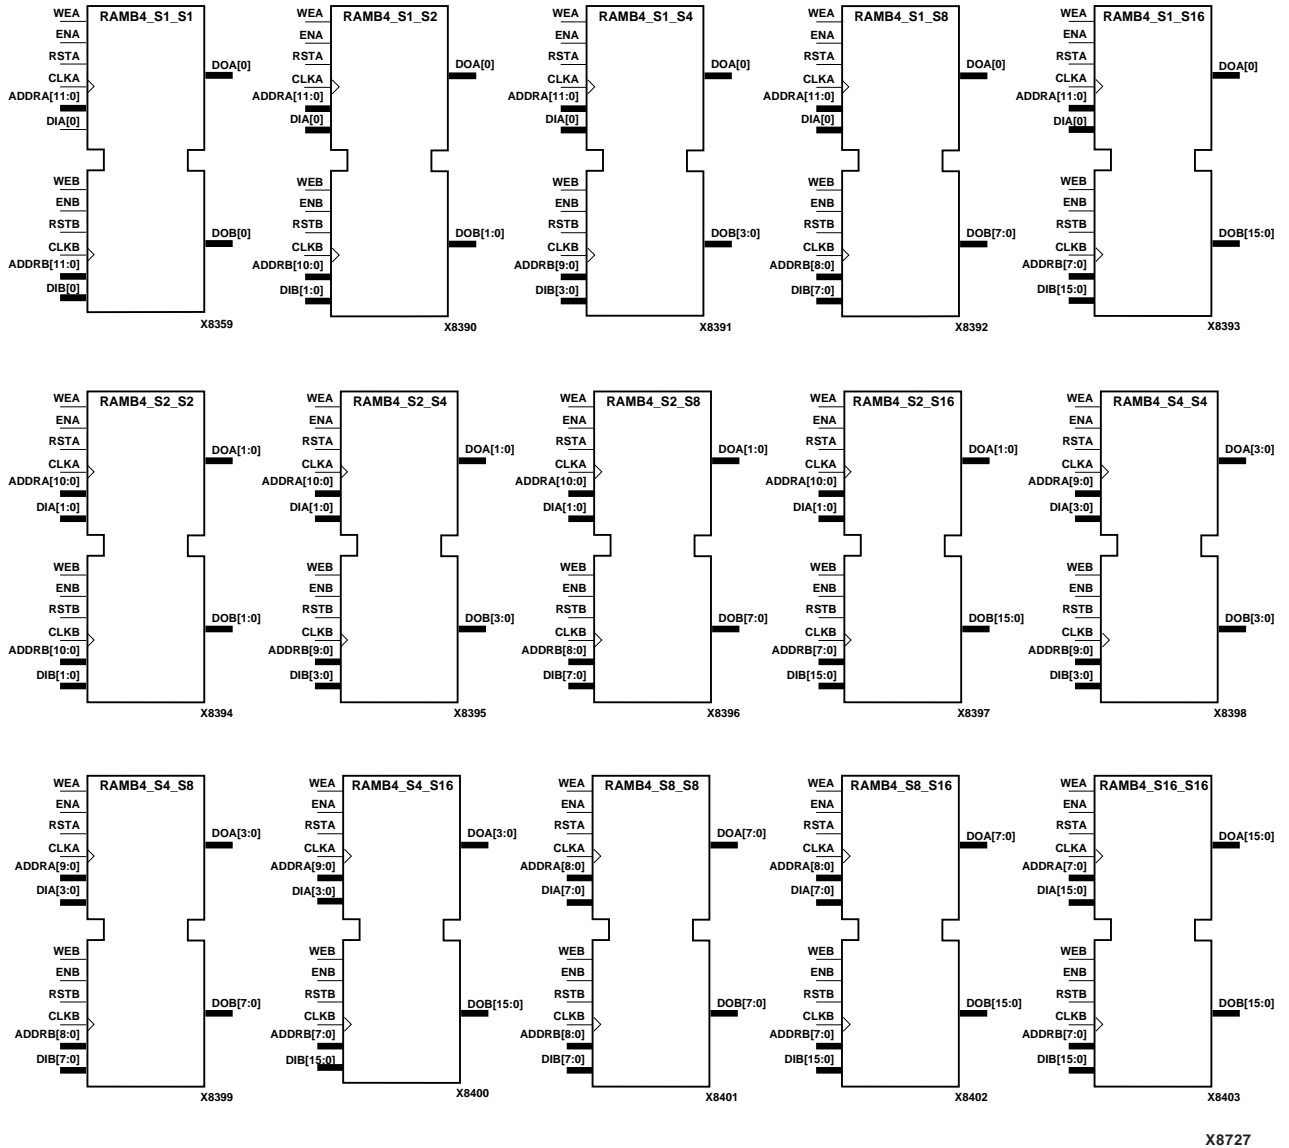

RAMB4\_Sm\_Sn Representations

The RAMB4\_Sm\_Sn components listed in the following table are 4096-bit dual-ported dedicated random access memory blocks with synchronous write capability. Each port is independent of the other while accessing the same set of 4096 memory cells. Each port is independently configured to a specific data width.

Component	Port A Depth	Port A Width	Port A ADDR	Port A DI	Port B Depth	Port B Width	Port B ADDR	Port B DI
RAMB4_S1_S1	4096	1	(11:0)	(0:0)	4096	1	(11:0)	(0:0)
RAMB4_S1_S2	4096	1	(11:0)	(0:0)	2048	2	(10:0)	(1:0)
RAMB4_S1_S4	4096	1	(11:0)	(0:0)	1024	4	(9:0)	(3:0)
RAMB4_S1_S8	4096	1	(11:0)	(0:0)	512	8	(8:0)	(7:0)
RAMB4_S1_S16	4096	1	(11:0)	(0:0)	256	16	(7:0)	(15:0)
RAMB4_S2_S2	2048	2	(10:0)	(1:0)	2048	2	(10:0)	(1:0)
RAMB4_S2_S4	2048	2	(10:0)	(1:0)	1024	4	(9:0)	(3:0)
RAMB4_S2_S8	2048	2	(10:0)	(1:0)	512	8	(8:0)	(7:0)
RAMB4_S2_S16	2048	2	(10:0)	(1:0)	256	16	(7:0)	(15:0)
RAMB4_S4_S4	1024	4	(9:0)	(3:0)	1024	4	(9:0)	(3:0)
RAMB4_S4_S8	1024	4	(9:0)	(3:0)	512	8	(8:0)	(7:0)
RAMB4_S4_S16	1024	4	(9:0)	(3:0)	256	16	(7:0)	(15:0)
RAMB4_S8_S8	512	8	(8:0)	(7:0)	512	8	(8:0)	(7:0)
RAMB4_S8_S16	512	8	(8:0)	(7:0)	256	16	(7:0)	(15:0)
RAMB4_S16_S16	256	16	(7:0)	(15:0)	256	16	(7:0)	(15:0)

ADDR=address bus for the port

DI=data input bus for the port

Each port is fully synchronous with independent clock pins. All port A input pins have setup time referenced to the CLKA pin and its data output bus DOA has a clock-to-out time referenced to the CLKA. All port B input pins have setup time referenced to the CLKB pin and its data output bus DOB has a clock-to-out time referenced to the CLKB.

The enable ENA pin controls read, write, and reset for port A. When ENA is Low, no data is written and the output (DOA) retains the last state. When ENA is High and reset (RSTA) is High, DOA is cleared during the Low-to-High clock (CLKA) transition; if write enable (WEA) is High, the memory contents reflect the data at DIA. When ENA is High and WEA is Low, the data stored in the RAM address (ADDRA) is read during the Low-to-High clock transition. When ENA and WEA are High, the data on the data input (DIA) is loaded into the word selected by the write address (ADDRA) during the Low-to-High clock transition and the data output (DOA) reflects the selected (addressed) word.

The enable ENB pin controls read, write, and reset for port B. When ENB is Low, no data is written and the output (DOB) retains the last state. When ENB is High and reset (RSTB) is High, DOB is cleared during the Low-to-High clock (CLKB) transition; if write enable (WEB) is High, the memory contents reflect the data at DIB. When ENB is High and WEB is Low, the data stored in the RAM address (ADDRB) is read during the Low-to-High clock transition. When ENB and WEB are High, the data on the data input (DIB) is loaded into the word selected by the write address (ADDRB) during the

Low-to-High clock transition and the data output (DOB) reflects the selected (addressed) word.

The above descriptions assume active High control pins (ENA, WEA, RSTA, CLKA, ENB, WEB, RSTB, and CLKB). However, the active level can be changed by placing an inverter on the port. Any inverter placed on a RAMB4 port is absorbed into the block and does not use a CLB resource.

RAMB\_Sm\_Sn's may be initialized during configuration. See the following truth table.

Block RAM output registers are asynchronously cleared, output Low, when power is applied. The initial contents of the block RAM are not altered.

Virtex, Virtex-E, Spartan-II, and Spartan-IIE simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Mode selection is shown in the following truth table.

Inputs						Outputs	
EN(A/B)	RST(A/B)	WE(A/B)	CLK(A/B)	ADDR(A/B)	DI(A/B)	DO(A/B)	RAM Contents
0	X	X	X	X	X	No Chg	No Chg
1	1	0	↑	X	X	0	No Chg
1	1	1	↑	addr	data	0	RAM(addr) =>data
1	0	0	↑	addr	X	RAM(addr)	No Chg
1	0	1	↑	addr	data	data	RAM(addr) =>data

addr=RAM address of port A/B

RAM(addr)=RAM contents at address ADDRA/ADDRB

data=RAM input data at pins DIA/DIB

### Address Mapping

Each port accesses the same set of 4096 memory cells using an addressing scheme that is dependent on the width of the port. The physical RAM location that is addressed for a particular width is determined from the following formula.

$$\text{Start} = ((\text{ADDR}_{\text{port}} + 1) * (\text{Width}_{\text{port}})) - 1$$

$$\text{End} = (\text{ADDR}_{\text{port}}) * (\text{Width}_{\text{port}})$$

The following table shows address mapping for each port width.

### Port Address Mapping

Port Width	Port Addresses																	
	4096	<-----	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
1	4096	<-----																
2	2048	<-----		07		06		05		04		03		02		01		00
4	1024	<-----			03			02				01						00
8	512	<-----					01											00
16	256	<-----										00						

## Port A and Port B Conflict Resolution

A `RAMB4_Sm_Sn` component is a true dual-ported RAM in that it allows simultaneous reads of the same memory cell. When one port is performing a write to a given memory cell, the other port should not address that memory cell (for a write or a read) within the clock-to-clock setup window.

If both ports write to the same memory cell simultaneously, violating the clock-to-setup requirement, the data stored will be invalid.

If one port attempts to read from the same memory cell that the other is simultaneously writing to, violating the clock setup requirement, the write will be successful but the data read will be invalid.

## Specifying Initial Contents of a Block RAM

You can use the `INIT_0x` attributes to specify an initial value during device configuration. The initialization of each `RAMB4_Sm_Sn` is set by 16 initialization attributes (`INIT_00` through `INIT_0F`) of 64 hex values for a total of 4096 bits. See the `INIT_xx` section of the *Constraints Guide* for more information on these attributes.

If any `INIT_0x` attribute is not specified, it is configured as zeros. Partial initialization strings are padded with zeros to the left.

## Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template for `RAMB4_Sm_Sn`

```
-- Component Declaration for RAMB4_Sm_Sn
-- Should be placed after architecture statement but before begin keyword
component RAMB4_Sm_Sn
  -- synthesis translate_off
  generic (
    INIT_00 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_01 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_02 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_03 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_04 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_05 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_06 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_07 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_08 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_09 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0A : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
```

```

        INIT_0B : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INIT_0C : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INIT_0D : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INIT_0E : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INIT_0F : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    );
-- synthesis translate_on
    port (DOA : out STD_LOGIC_VECTOR (0 downto 0);
          DOB : out STD_LOGIC_VECTOR (0 downto 0);
          ADDRA : in STD_LOGIC_VECTOR (11 downto 0);
          ADDRb : in STD_LOGIC_VECTOR (11 downto 0);
          CLKA : in STD_ULOGIC;
          CLKB : in STD_ULOGIC;
          DIA : in STD_LOGIC_VECTOR (0 downto 0);
          DIB : in STD_LOGIC_VECTOR (0 downto 0);
          ENA : in STD_ULOGIC;
          ENB : in STD_ULOGIC;
          RSTA : in STD_ULOGIC;
          RSTB : in STD_ULOGIC;
          WEA : in STD_ULOGIC;
          WEB : in STD_ULOGIC);

end component;

-- Component Attribute Specification for RAMB4_Sm_Sn
-- Should be placed after architecture declaration but before the begin keyword

-- Put attributes, if necessary

-- Component Instantiation for RAMB4_Sm_Sn
-- Should be placed in architecture after the begin keyword

RAMB4_Sm_Sn_INSTANCE_NAME : RAMB4_Sm_Sn
-- synthesis translate_off
generic map (
    INIT_00 => vector_value,
    INIT_01 => vector_value,
    INIT_02 => vector_value,
    INIT_03 => vector_value,
    INIT_04 => vector_value,
    INIT_05 => vector_value,
    INIT_06 => vector_value,
    INIT_07 => vector_value,
    INIT_08 => vector_value,
    INIT_09 => vector_value,
    INIT_0A => vector_value,
    INIT_0B => vector_value,
    INIT_0C => vector_value,
    INIT_0D => vector_value,
    INIT_0E => vector_value,
    INIT_0F => vector_value)
-- synopsys translate_on

```

```

port map (DOA => user_DOA,
          DOB => user_DOB,
          ADDRA => user_ADDRA,
          ADDR8 => user_ADDR8,
          CLKA => user_CLKA,
          CLKB => user_CLKB,
          DIA => user_DIA,
          DIB => user_DIB,
          ENA => user_ENA,
          ENB => user_ENB,
          RSTA => user_RSTA,
          RSTB => user_RSTB,
          WEA => user_WEA,
          WEB => user_WEB);

```

### Verilog Instantiation Template for RAMB16\_S1, S2, and S4

```

RAMB4_Sm_Sn user_instance_name (.DOA (user_DOA),
                                .DOB (user_DOB),
                                .ADDRA (user_ADDRA),
                                .ADDR8 (user_ADDR8),
                                .CLKA (user_CLKA),
                                .CLKB (user_CLKB),
                                .DIA (user_DIA),
                                .DIB (user_DIB),
                                .ENA (user_ENA),
                                .ENB (user_ENB),
                                .RSTA (user_RSTA),
                                .RSTB (user_RSTB),
                                .WEA (user_WEA),
                                .WEB (user_WEB));

defparam user_instance_name.INIT_00 = 256_bit_hex_value;
defparam user_instance_name.INIT_01 = 256_bit_hex_value;
defparam user_instance_name.INIT_02 = 256_bit_hex_value;
defparam user_instance_name.INIT_03 = 256_bit_hex_value;
defparam user_instance_name.INIT_04 = 256_bit_hex_value;
defparam user_instance_name.INIT_05 = 256_bit_hex_value;
defparam user_instance_name.INIT_06 = 256_bit_hex_value;
defparam user_instance_name.INIT_07 = 256_bit_hex_value;
defparam user_instance_name.INIT_08 = 256_bit_hex_value;
defparam user_instance_name.INIT_09 = 256_bit_hex_value;
defparam user_instance_name.INIT_0A = 256_bit_hex_value;
defparam user_instance_name.INIT_0B = 256_bit_hex_value;
defparam user_instance_name.INIT_0C = 256_bit_hex_value;
defparam user_instance_name.INIT_0D = 256_bit_hex_value;
defparam user_instance_name.INIT_0E = 256_bit_hex_value;
defparam user_instance_name.INIT_0F = 256_bit_hex_value;

```

### Commonly Used Constraints

INIT\_xx






## RAMB16\_Sn

16384-Bit Data Memory and 2048-Bit Parity Memory, Single-Port Synchronous Block RAM with Port Width (n) Configured to 1, 2, 4, 9, 18, or 36 Bits

### Architectures Supported

RAMB16_Sn	
Spartan-II, Spartan-III	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

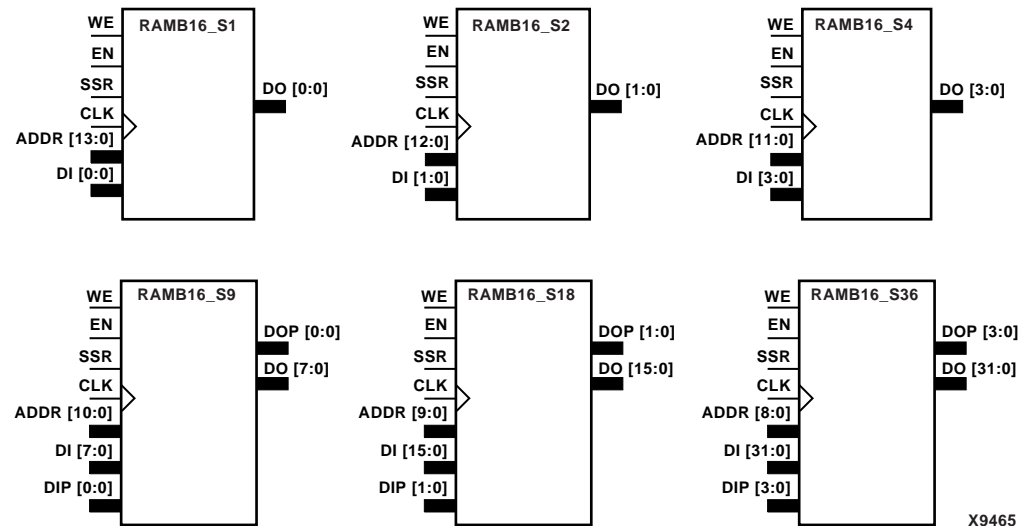

### RAMB16\_S1 through RAMB16\_S36 Representations

RAMB16\_S1, RAMB16\_S2, RAMB16\_S4, RAMB16\_S9, RAMB16\_S18, and RAMB16\_S36 are dedicated random access memory blocks with synchronous write capability. The block RAM port has 16384 bits of data memory. RAMB16\_S9, RAMB16\_S18, and RAMB16\_S36 have an additional 2048 bits of parity memory. The RAMB16\_Sn cell configurations are listed in the following table.

Component	Data Cells		Parity Cells		Address Bus	Data Bus	Parity Bus
	Depth	Width	Depth	Width			
RAMB16_S1	16384	1	-	-	(13:0)	(0:0)	-
RAMB16_S2	8192	2	-	-	(12:0)	(1:0)	-
RAMB16_S4	4096	4	-	-	(11:0)	(3:0)	-
RAMB16_S9	2048	8	2048	1	(10:0)	(7:0)	(0:0)
RAMB16_S18	1024	16	1024	2	(9:0)	(15:0)	(1:0)
RAMB16_S36	512	32	512	4	(8:0)	(31:0)	(3:0)

The enable (EN) pin controls read, write, and reset. When EN is Low, no data is written and the outputs (DO and DOP) retain the last state. When EN is High and reset (SSR) is High, DO and DOP are set to SRVAL during the Low-to-High clock (CLK) transition; if write enable (WE) is High, the memory contents reflect the data at DI and DIP. When SSR is Low, EN is High, and WE is Low, the data stored in the RAM address (ADDR) is read during the Low-to-High clock transition. The output value depends on the mode. By default WRITE\_MODE=WRITE\_FIRST, when EN and WE are High and SSR is Low, the data on the data inputs (DI and DIP) is loaded into the word selected by the write address (ADDR) during the Low-to-High clock transition. See “[Write Mode Selection](#)” for information on setting the WRITE\_MODE.

The above description assumes an active High EN, WE, SSR, and CLK. However, the active level can be changed by placing an inverter on the port. Any inverter placed on a RAMB16 port is absorbed into the block and does not use a CLB resource.

Inputs								Outputs			
GSR	EN	SSR	WE	CLK	ADDR	DI	DIP	DO	DOP	RAM Contents	
										Data RAM	Parity RAM
1	X	X	X	X	X	X	X	INIT	INIT	No Chg	No Chg
0	0	X	X	X	X	X	X	No Chg	No Chg	No Chg	No Chg
0	1	1	0	↑	X	X	X	SRVAL	SRVAL	No Chg	No Chg
0	1	1	1	↑	addr	data	pdata	SRVAL	SRVAL	RAM(addr) =>data	RAM(addr) =>pdata
0	1	0	0	↑	addr	X	X	RAM(addr)	RAM(addr)	No Chg	No Chg
0	1	0	1	↑	addr	data	pdata	No Chg <sup>a</sup> RAM (addr) <sup>b</sup> data <sup>c</sup>	No Chg <sup>a</sup> RAM(addr) <sup>b</sup> pdata <sup>c</sup>	RAM(addr) =>data	RAM(addr) =>pdata

GSR=Global Set Reset signal

INIT=Value specified by the INIT attribute for data memory. Default is all zeros.

SRVAL=Value after assertion of SSR as specified by the SRVAL attribute.

addr=RAM address

RAM(addr)=RAM contents at address ADDR

data=RAM input data

pdata=RAM parity data

<sup>a</sup>WRITE\_MODE=NO\_CHANGE

<sup>b</sup>WRITE\_MODE=READ\_FIRST

<sup>c</sup>WRITE\_MODE=WRITE\_FIRST

## Initializing Memory Contents of a Single-Port RAMB16

You can use the `INIT_xx` attributes to specify an initialization value for the memory contents of a RAMB16 during device configuration. The initialization of each `RAMB16_Sn` is set by 64 initialization attributes (`INIT_00` through `INIT_3F`) of 64 hex values for a total of 16384 bits.

You can use the `INITP_xx` attributes to specify an initial value for the parity memory during device configuration or assertion. The initialization of the parity memory for ports configured for 9, 18, or 36 bits is set by 8 initialization attributes (`INITP_00` through `INITP_07`) of 64 hex values for a total of 2048 bits.

If any `INIT_xx` or `INITP_xx` attribute is not specified, it is configured as zeros. Partial strings are padded with zeros to the left.

See the *Constraints Guide* for more information on these attributes.

## Initializing the Output Register of a Single-Port RAMB16

In Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, each bit in the output register can be initialized at power on to either a 0 or 1. In addition, the initial state specified for power on can be different than the state that results from assertion of a set/reset. Two types of properties control initialization of the output register for a single-port RAMB16: `INIT` and `SRVAL`. The `INIT` attribute specifies the output register value at power on. You can use the `SRVAL` attribute to define the state resulting from assertion of the SSR (set/reset) input.

The `INIT` and `SRVAL` attributes specify the initialization value as a hexadecimal string. The value is dependent upon the port width. For example, for a `RAMB16_S1` with port width equal to 1, the output register contains 1 bit. Therefore, the `INIT` or `SRVAL` value can only be specified as a 1 or 0. For `RAMB16_S4` with port width equal to 4, the output register contains 4 bits. In this case, you can specify a hexadecimal value from 0 through F to initialize the 4 bits of the output register.

For those ports that include parity bits, the parity portion of the output register is specified in the high order bit position of the `INIT` or `SRVAL` value.

The `INIT` and `SRVAL` attributes default to zero if they are not set by the user.

See the *Constraints Guide* for more information on these attributes.

## Write Mode Selection

The `WRITE_MODE` attribute controls RAMB16 memory and output contents. By default, the `WRITE_MODE` is set to `WRITE_FIRST`. This means that input is read, written to memory, and then passed to output. You can set the `WRITE_MODE` to `READ_FIRST` to read the memory contents, pass the memory contents to the outputs, and then write the input to memory. Or, you can set the `WRITE_MODE` to `NO_CHANGE` to have the input written to memory without changing the output.

## Usage

For HDL, this design element can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

## VHDL Instantiation Template for RAMB16\_S1, S2, and S4

```

-- Component Declaration for RAMB16_{S1 | S2 | S4}
-- Should be placed after architecture statement but before begin keyword
component RAMB16_{S1 | S2 | S4}
  -- synthesis translate_off
  generic (
    INIT : bit_vector := X"0";
    INIT_00 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_01 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_02 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_03 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_04 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_05 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_06 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_07 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_08 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_09 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0A : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0B : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0C : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0D : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0E : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0F : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_10 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_11 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_12 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_13 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_14 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_15 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_16 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_17 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_18 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";

```



```

INIT_36      :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INIT_37      :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INIT_38      :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INIT_39      :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INIT_3A      :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INIT_3B      :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INIT_3C      :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INIT_3D      :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INIT_3E      :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INIT_3F      :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
  SRVAL : bit_vector := X"0";
  WRITE_MODE : string := "WRITE_FIRST");

-- synthesis translate_on
port (DO : out STD_LOGIC_VECTOR (0 downto 0)
      ADDR : in STD_LOGIC_VECTOR (13 downto 0);
      CLK : in STD_ULONGIC;
      DI : in STD_LOGIC_VECTOR (0 downto 0);
      EN : in STD_ULONGIC;
      SSR : in STD_ULONGIC;
      WE : in STD_ULONGIC);

end component;

-- Component Attribute Specification for RAMB16_{S1 | S2 | S4}
-- Should be placed after architecture declaration but before the begin keyword

-- Put attributes, if necessary

-- Component Instantiation for RAMB16_{S1 | S2 | S4}
-- Should be placed in architecture after the begin keyword

```

```
RAMB16_{S1 | S2 | S4}_INSTANCE_NAME : RAMB16_S1
-- synthesis translate_off
generic map (
    INIT => bit_value,
    INIT_00 => vector_value,
    INIT_01 => vector_value,
    INIT_02 => vector_value,
    INIT_03 => vector_value,
    INIT_04 => vector_value,
    INIT_05 => vector_value,
    INIT_06 => vector_value,
    INIT_07 => vector_value,
    INIT_08 => vector_value,
    INIT_09 => vector_value,
    INIT_0A => vector_value,
    INIT_0B => vector_value,
    INIT_0C => vector_value,
    INIT_0D => vector_value,
    INIT_0E => vector_value,
    INIT_0F => vector_value,
    INIT_10 => vector_value,
    INIT_11 => vector_value,
    INIT_12 => vector_value,
    INIT_13 => vector_value,
    INIT_14 => vector_value,
    INIT_15 => vector_value,
    INIT_16 => vector_value,
    INIT_17 => vector_value,
    INIT_18 => vector_value,
    INIT_19 => vector_value,
    INIT_1A => vector_value,
    INIT_1B => vector_value,
    INIT_1C => vector_value,
    INIT_1D => vector_value,
    INIT_1E => vector_value,
    INIT_1F => vector_value,
    INIT_20 => vector_value,
    INIT_21 => vector_value,
    INIT_22 => vector_value,
    INIT_23 => vector_value,
    INIT_24 => vector_value,
    INIT_25 => vector_value,
    INIT_26 => vector_value,
    INIT_27 => vector_value,
    INIT_28 => vector_value,
    INIT_29 => vector_value,
    INIT_2A => vector_value,
    INIT_2B => vector_value,
    INIT_2C => vector_value,
    INIT_2D => vector_value,
    INIT_2E => vector_value,
    INIT_2F => vector_value,
    INIT_30 => vector_value,
    INIT_31 => vector_value,
    INIT_32 => vector_value,
    INIT_33 => vector_value,
    INIT_34 => vector_value,
    INIT_35 => vector_value,
```



```

INIT_36 => vector_value,
INIT_37 => vector_value,
INIT_38 => vector_value,
INIT_39 => vector_value,
INIT_3A => vector_value,
INIT_3B => vector_value,
INIT_3C => vector_value,
INIT_3D => vector_value,
INIT_3E => vector_value,
INIT_3F => vector_value,
SRVAL=> bit_value,
WRITE_MODE => user_WRITE_MODE)
-- synopsis translate_on
port map (DO => user_DO,
         ADDR => user_ADDR,
         CLK => user_CLK,
         DI => user_DI,
         EN => user_EN,
         SSR => user_SSR,
         WE => user_WE);

```

### Verilog Instantiation Template for RAMB16\_S1, S2, and S4

```

RAMB16_{S1 | S2 | S4} user_instance_name (.DO(user_DO),
                                         .ADDR (user_ADDR),
                                         .CLK (user_CLK),
                                         .DI (user_DI),
                                         .EN (user_EN),
                                         .SSR (user_SSR),
                                         .WE (user_WE));

defparam user_instance_name.INIT = bit_value;
defparam user_instance_name.INIT_00 = 256_bit_hex_value;
defparam user_instance_name.INIT_01 = 256_bit_hex_value;
defparam user_instance_name.INIT_02 = 256_bit_hex_value;
defparam user_instance_name.INIT_03 = 256_bit_hex_value;
defparam user_instance_name.INIT_04 = 256_bit_hex_value;
defparam user_instance_name.INIT_05 = 256_bit_hex_value;
defparam user_instance_name.INIT_06 = 256_bit_hex_value;
defparam user_instance_name.INIT_07 = 256_bit_hex_value;
defparam user_instance_name.INIT_08 = 256_bit_hex_value;
defparam user_instance_name.INIT_09 = 256_bit_hex_value;
defparam user_instance_name.INIT_0A = 256_bit_hex_value;
defparam user_instance_name.INIT_0B = 256_bit_hex_value;
defparam user_instance_name.INIT_0C = 256_bit_hex_value;
defparam user_instance_name.INIT_0D = 256_bit_hex_value;
defparam user_instance_name.INIT_0E = 256_bit_hex_value;
defparam user_instance_name.INIT_0F = 256_bit_hex_value;
defparam user_instance_name.INIT_10 = 256_bit_hex_value;
defparam user_instance_name.INIT_11 = 256_bit_hex_value;
defparam user_instance_name.INIT_12 = 256_bit_hex_value;
defparam user_instance_name.INIT_13 = 256_bit_hex_value;
defparam user_instance_name.INIT_14 = 256_bit_hex_value;
defparam user_instance_name.INIT_15 = 256_bit_hex_value;
defparam user_instance_name.INIT_16 = 256_bit_hex_value;
defparam user_instance_name.INIT_17 = 256_bit_hex_value;
defparam user_instance_name.INIT_18 = 256_bit_hex_value;
defparam user_instance_name.INIT_19 = 256_bit_hex_value;

```

```
defparam user_instance_name.INIT_1A = 256_bit_hex_value;
defparam user_instance_name.INIT_1B = 256_bit_hex_value;
defparam user_instance_name.INIT_1C = 256_bit_hex_value;
defparam user_instance_name.INIT_1D = 256_bit_hex_value;
defparam user_instance_name.INIT_1E = 256_bit_hex_value;
defparam user_instance_name.INIT_1F = 256_bit_hex_value;
defparam user_instance_name.INIT_20 = 256_bit_hex_value;
defparam user_instance_name.INIT_21 = 256_bit_hex_value;
defparam user_instance_name.INIT_22 = 256_bit_hex_value;
defparam user_instance_name.INIT_23 = 256_bit_hex_value;
defparam user_instance_name.INIT_24 = 256_bit_hex_value;
defparam user_instance_name.INIT_25 = 256_bit_hex_value;
defparam user_instance_name.INIT_26 = 256_bit_hex_value;
defparam user_instance_name.INIT_27 = 256_bit_hex_value;
defparam user_instance_name.INIT_28 = 256_bit_hex_value;
defparam user_instance_name.INIT_29 = 256_bit_hex_value;
defparam user_instance_name.INIT_2A = 256_bit_hex_value;
defparam user_instance_name.INIT_2B = 256_bit_hex_value;
defparam user_instance_name.INIT_2C = 256_bit_hex_value;
defparam user_instance_name.INIT_2D = 256_bit_hex_value;
defparam user_instance_name.INIT_2E = 256_bit_hex_value;
defparam user_instance_name.INIT_2F = 256_bit_hex_value;
defparam user_instance_name.INIT_30 = 256_bit_hex_value;
defparam user_instance_name.INIT_31 = 256_bit_hex_value;
defparam user_instance_name.INIT_32 = 256_bit_hex_value;
defparam user_instance_name.INIT_33 = 256_bit_hex_value;
defparam user_instance_name.INIT_34 = 256_bit_hex_value;
defparam user_instance_name.INIT_35 = 256_bit_hex_value;
defparam user_instance_name.INIT_36 = 256_bit_hex_value;
defparam user_instance_name.INIT_37 = 256_bit_hex_value;
defparam user_instance_name.INIT_38 = 256_bit_hex_value;
defparam user_instance_name.INIT_39 = 256_bit_hex_value;
defparam user_instance_name.INIT_3A = 256_bit_hex_value;
defparam user_instance_name.INIT_3B = 256_bit_hex_value;
defparam user_instance_name.INIT_3C = 256_bit_hex_value;
defparam user_instance_name.INIT_3D = 256_bit_hex_value;
defparam user_instance_name.INIT_3E = 256_bit_hex_value;
defparam user_instance_name.INIT_3F = 256_bit_hex_value;
defparam user_instance_name.SRVAL = bit_value;
defparam user_instance_name.WRITE_MODE = write_mode;
```

## VHDL Instantiation Template for RAMB16\_S9, S18 and S36

```

-- Component Declaration for RAMB16_{S9 | S18 | S36}
-- Should be placed after architecture statement but before begin keyword
component RAMB16_{S9 | S18 | S36}
  -- synthesis translate_off
  generic (
    INIT : bit_vector := X"0";
    INIT_00 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_01 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_02 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_03 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_04 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_05 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_06 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_07 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_08 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_09 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0A : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0B : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0C : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0D : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0E : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0F : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_10 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_11 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_12 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_13 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_14 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_15 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_16 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_17 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_18 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
  );

```



```

INIT_36      :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INIT_37      :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INIT_38      :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INIT_39      :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INIT_3A      :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INIT_3B      :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INIT_3C      :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INIT_3D      :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INIT_3E      :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INIT_3F      :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INITP_00     :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INITP_01     :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INITP_02     :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INITP_03     :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INITP_04     :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INITP_05     :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INITP_06     :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
INITP_07     :      bit_vector      :=
X"0000000000000000000000000000000000000000000000000000000000000000";
SRVAL : bit_vector := X"0";
WRITE_MODE : string := "WRITE_FIRST";
);
-- synthesis translate_on

port (DO : out STD_LOGIC_VECTOR (0 downto 0);
      DOP : out STD_LOGIC_VECTOR (1 downto 0);
      ADDR : in STD_LOGIC_VECTOR (13 downto 0);
      CLK : in STD_ULONGIC;
      DI : in STD_LOGIC_VECTOR (0 downto 0);
      DIP : in STD_LOGIC_VECTOR (0 downto 0);
      EN : in STD_ULONGIC;
      SSR : in STD_ULONGIC;
      WE : in STD_ULONGIC);

end component;

-- Component Attribute Specification for RAMB16_{S9 | S18 | S36}
-- Should be placed after architecture declaration but before the begin keyword

-- Put attributes, if necessary

```

```
-- Component Instantiation for RAMB16_{S9 | S18 | S36}
-- Should be placed in architecture after the begin keyword
```

```
RAMB16_{S9 | S18 | S36}_INSTANCE_NAME : RAMB16_S1
```

```
-- synthesis translate_off
```

```
generic map (
```

```
    INIT => bit_value,
    INIT_00 => vector_value,
    INIT_01 => vector_value,
    INIT_02 => vector_value,
    INIT_03 => vector_value,
    INIT_04 => vector_value,
    INIT_05 => vector_value,
    INIT_06 => vector_value,
    INIT_07 => vector_value,
    INIT_08 => vector_value,
    INIT_09 => vector_value,
    INIT_0A => vector_value,
    INIT_0B => vector_value,
    INIT_0C => vector_value,
    INIT_0D => vector_value,
    INIT_0E => vector_value,
    INIT_0F => vector_value,
    INIT_10 => vector_value,
    INIT_11 => vector_value,
    INIT_12 => vector_value,
    INIT_13 => vector_value,
    INIT_14 => vector_value,
    INIT_15 => vector_value,
    INIT_16 => vector_value,
    INIT_17 => vector_value,
    INIT_18 => vector_value,
    INIT_19 => vector_value,
    INIT_1A => vector_value,
    INIT_1B => vector_value,
    INIT_1C => vector_value,
    INIT_1D => vector_value,
    INIT_1E => vector_value,
    INIT_1F => vector_value,
    INIT_20 => vector_value,
    INIT_21 => vector_value,
    INIT_22 => vector_value,
    INIT_23 => vector_value,
    INIT_24 => vector_value,
    INIT_25 => vector_value,
    INIT_26 => vector_value,
    INIT_27 => vector_value,
    INIT_28 => vector_value,
    INIT_29 => vector_value,
    INIT_2A => vector_value,
    INIT_2B => vector_value,
    INIT_2C => vector_value,
    INIT_2D => vector_value,
    INIT_2E => vector_value,
    INIT_2F => vector_value,
    INIT_30 => vector_value,
    INIT_31 => vector_value,
```

```
INIT_32 => vector_value,  
INIT_33 => vector_value,  
INIT_34 => vector_value,  
INIT_35 => vector_value,  
INIT_36 => vector_value,  
INIT_37 => vector_value,  
INIT_38 => vector_value,  
INIT_39 => vector_value,  
INIT_3A => vector_value,  
INIT_3B => vector_value,  
INIT_3C => vector_value,  
INIT_3D => vector_value,  
INIT_3E => vector_value,  
INIT_3F => vector_value,  
INITP_00 => vector_value,  
INITP_01 => vector_value,  
INITP_02 => vector_value,  
INITP_03 => vector_value,  
INITP_04 => vector_value,  
INITP_05 => vector_value,  
INITP_06 => vector_value,  
INITP_07 => vector_value  
SRVAL => bit_value,  
WRITE_MODE => user_WRITE_MODE)  
-- synopsys translate_on  
port map (DO => user_DO,  
          DOP => user_DOP,  
          ADDR => user_ADDR,  
          CLK => user_CLK,  
          DI => user_DI,  
          DIP => user_DIP,  
          EN => user_EN,  
          SSR => user_SSR,  
          WE => user_WE);
```

## Verilog Instantiation Template for RAMB16\_S18 and S36

```
RAMB16_{S9 | S18 | S36} user_instance_name (.DO(user_DO),
                                           .DOP (user_DOP),
                                           .ADDR (user_ADDR),
                                           .CLK (user_CLK),
                                           .DI (user_DI),
                                           .DIP (user_DIP),
                                           .EN (user_EN),
                                           .SSR (user_SSR),
                                           .WE (user_WE));

defparam user_instance_name.INIT = bit_value;
defparam user_instance_name.INIT_00 = 256_bit_hex_value;
defparam user_instance_name.INIT_01 = 256_bit_hex_value;
defparam user_instance_name.INIT_02 = 256_bit_hex_value;
defparam user_instance_name.INIT_03 = 256_bit_hex_value;
defparam user_instance_name.INIT_04 = 256_bit_hex_value;
defparam user_instance_name.INIT_05 = 256_bit_hex_value;
defparam user_instance_name.INIT_06 = 256_bit_hex_value;
defparam user_instance_name.INIT_07 = 256_bit_hex_value;
defparam user_instance_name.INIT_08 = 256_bit_hex_value;
defparam user_instance_name.INIT_09 = 256_bit_hex_value;
defparam user_instance_name.INIT_0A = 256_bit_hex_value;
defparam user_instance_name.INIT_0B = 256_bit_hex_value;
defparam user_instance_name.INIT_0C = 256_bit_hex_value;
defparam user_instance_name.INIT_0D = 256_bit_hex_value;
defparam user_instance_name.INIT_0E = 256_bit_hex_value;
defparam user_instance_name.INIT_0F = 256_bit_hex_value;
defparam user_instance_name.INIT_10 = 256_bit_hex_value;
defparam user_instance_name.INIT_11 = 256_bit_hex_value;
defparam user_instance_name.INIT_12 = 256_bit_hex_value;
defparam user_instance_name.INIT_13 = 256_bit_hex_value;
defparam user_instance_name.INIT_14 = 256_bit_hex_value;
defparam user_instance_name.INIT_15 = 256_bit_hex_value;
defparam user_instance_name.INIT_16 = 256_bit_hex_value;
defparam user_instance_name.INIT_17 = 256_bit_hex_value;
defparam user_instance_name.INIT_18 = 256_bit_hex_value;
defparam user_instance_name.INIT_19 = 256_bit_hex_value;
defparam user_instance_name.INIT_1A = 256_bit_hex_value;
defparam user_instance_name.INIT_1B = 256_bit_hex_value;
defparam user_instance_name.INIT_1C = 256_bit_hex_value;
defparam user_instance_name.INIT_1D = 256_bit_hex_value;
defparam user_instance_name.INIT_1E = 256_bit_hex_value;
defparam user_instance_name.INIT_1F = 256_bit_hex_value;
defparam user_instance_name.INIT_20 = 256_bit_hex_value;
defparam user_instance_name.INIT_21 = 256_bit_hex_value;
defparam user_instance_name.INIT_22 = 256_bit_hex_value;
defparam user_instance_name.INIT_23 = 256_bit_hex_value;
defparam user_instance_name.INIT_24 = 256_bit_hex_value;
defparam user_instance_name.INIT_25 = 256_bit_hex_value;
defparam user_instance_name.INIT_26 = 256_bit_hex_value;
defparam user_instance_name.INIT_27 = 256_bit_hex_value;
defparam user_instance_name.INIT_28 = 256_bit_hex_value;
defparam user_instance_name.INIT_29 = 256_bit_hex_value;
defparam user_instance_name.INIT_2A = 256_bit_hex_value;
defparam user_instance_name.INIT_2B = 256_bit_hex_value;
defparam user_instance_name.INIT_2C = 256_bit_hex_value;
```



```
defparam user_instance_name.INIT_2D = 256_bit_hex_value;
defparam user_instance_name.INIT_2E = 256_bit_hex_value;
defparam user_instance_name.INIT_2F = 256_bit_hex_value;
defparam user_instance_name.INIT_30 = 256_bit_hex_value;
defparam user_instance_name.INIT_31 = 256_bit_hex_value;
defparam user_instance_name.INIT_32 = 256_bit_hex_value;
defparam user_instance_name.INIT_33 = 256_bit_hex_value;
defparam user_instance_name.INIT_34 = 256_bit_hex_value;
defparam user_instance_name.INIT_35 = 256_bit_hex_value;
defparam user_instance_name.INIT_36 = 256_bit_hex_value;
defparam user_instance_name.INIT_37 = 256_bit_hex_value;
defparam user_instance_name.INIT_38 = 256_bit_hex_value;
defparam user_instance_name.INIT_39 = 256_bit_hex_value;
defparam user_instance_name.INIT_3A = 256_bit_hex_value;
defparam user_instance_name.INIT_3B = 256_bit_hex_value;
defparam user_instance_name.INIT_3C = 256_bit_hex_value;
defparam user_instance_name.INIT_3D = 256_bit_hex_value;
defparam user_instance_name.INIT_3E = 256_bit_hex_value;
defparam user_instance_name.INIT_3F = 256_bit_hex_value;
defparam user_instance_name.INITP_00 = 256_bit_hex_value;
defparam user_instance_name.INITP_01 = 256_bit_hex_value;
defparam user_instance_name.INITP_02 = 256_bit_hex_value;
defparam user_instance_name.INITP_03 = 256_bit_hex_value;
defparam user_instance_name.INITP_04 = 256_bit_hex_value;
defparam user_instance_name.INITP_05 = 256_bit_hex_value;
defparam user_instance_name.INITP_06 = 256_bit_hex_value;
defparam user_instance_name.INITP_07 = 256_bit_hex_value;
defparam user_instance_name.SRVAL = bit_value;
defparam user_instance_name.WRITE_MODE = write_mode;
```

## Commonly Used Constraints

INIT

INIT\_xx

SRVAL

WRITE\_MODE

HU\_SET

INITP\_xx

SRVAL

WRITE\_MODE




## RAMB16\_Sm\_Sn


16384-Bit Data Memory and 2048-Bit Parity Memory, Dual-Port Synchronous Block RAM with Port Width (m or n) Configured to 1, 2, 4, 9, 18, or 36 Bits

### Architectures Supported

RAMB16_Sm_Sn	
Spartan-II, Spartan-III	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

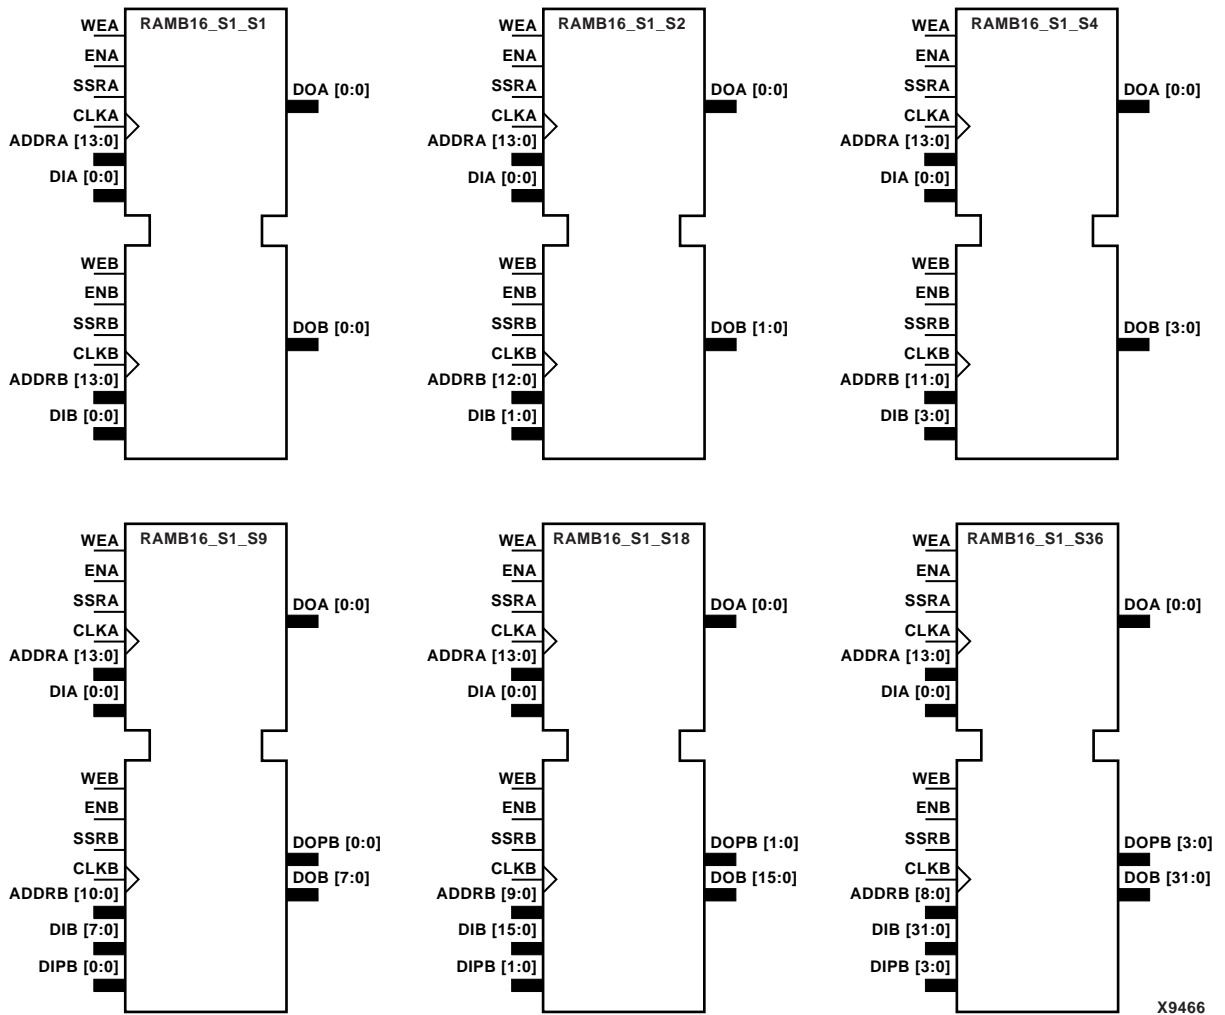


RAMB16\_S1\_S1 through RAMB16\_S1\_S36 Representations

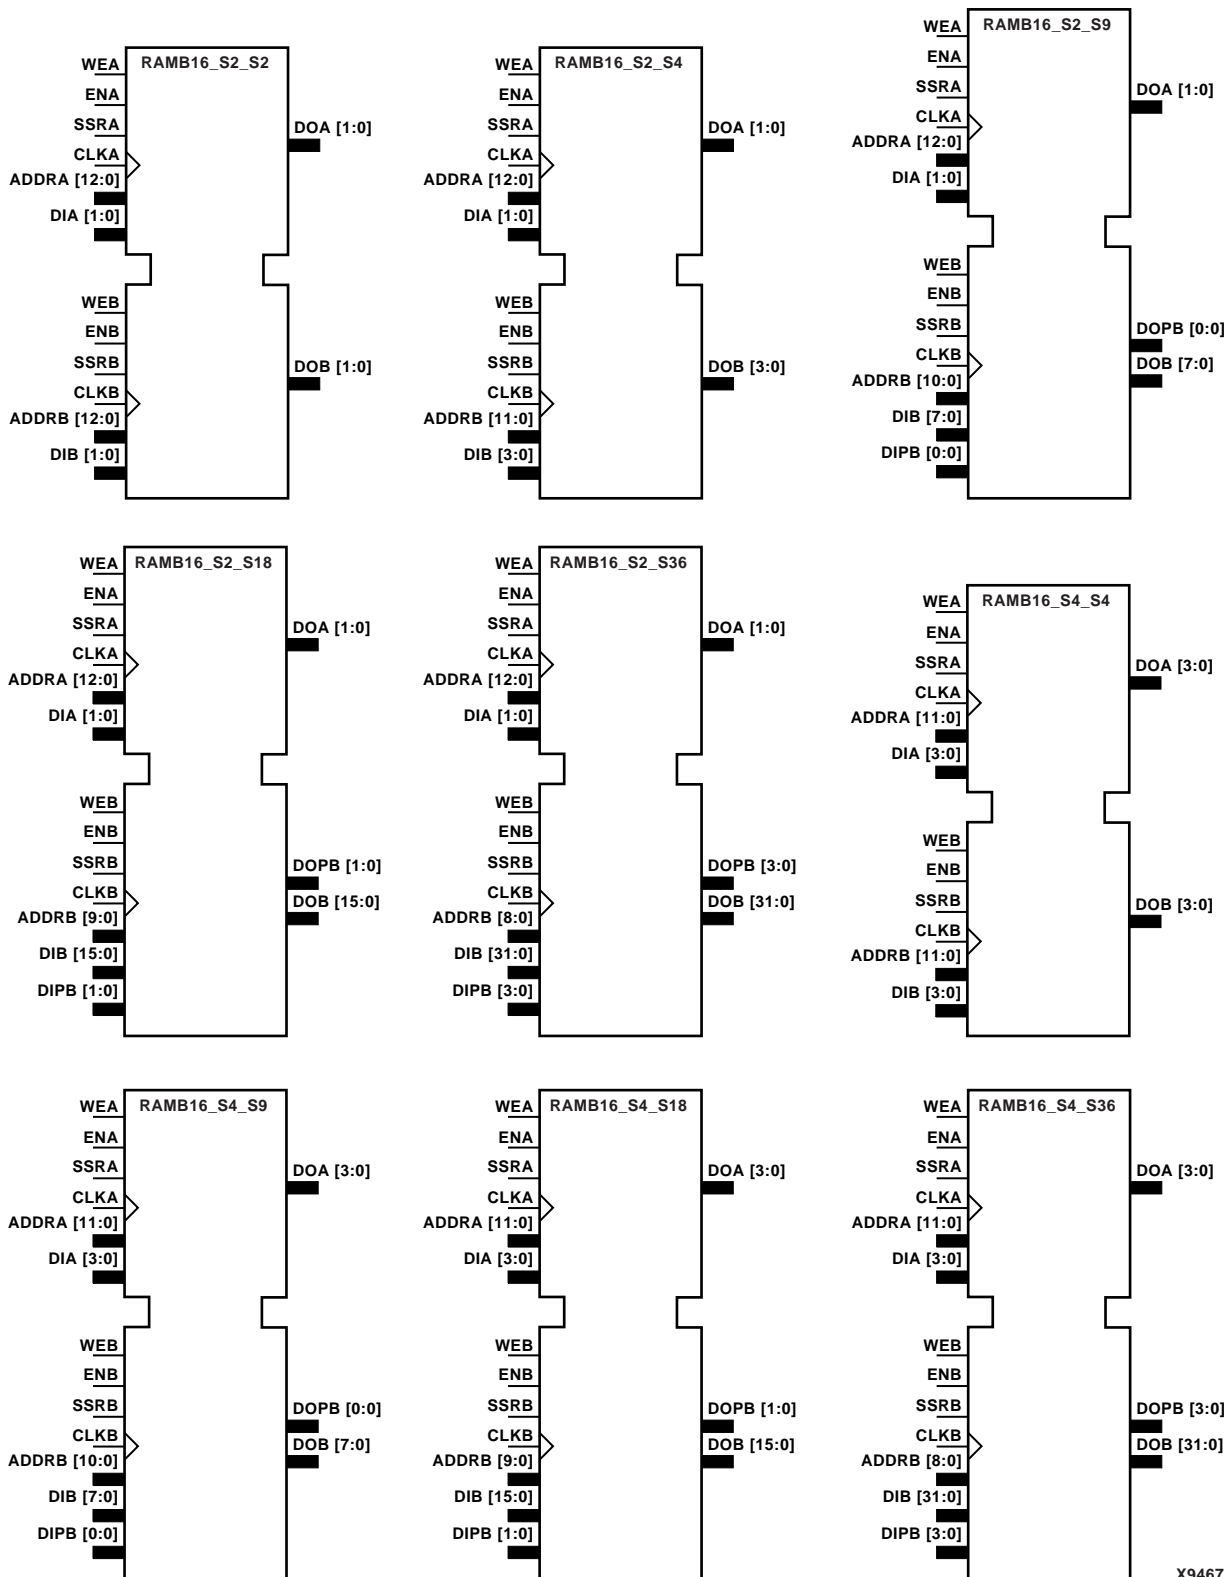

X9467

RAMB16\_S2\_S2 through RAMB16\_S4\_S36 Representations

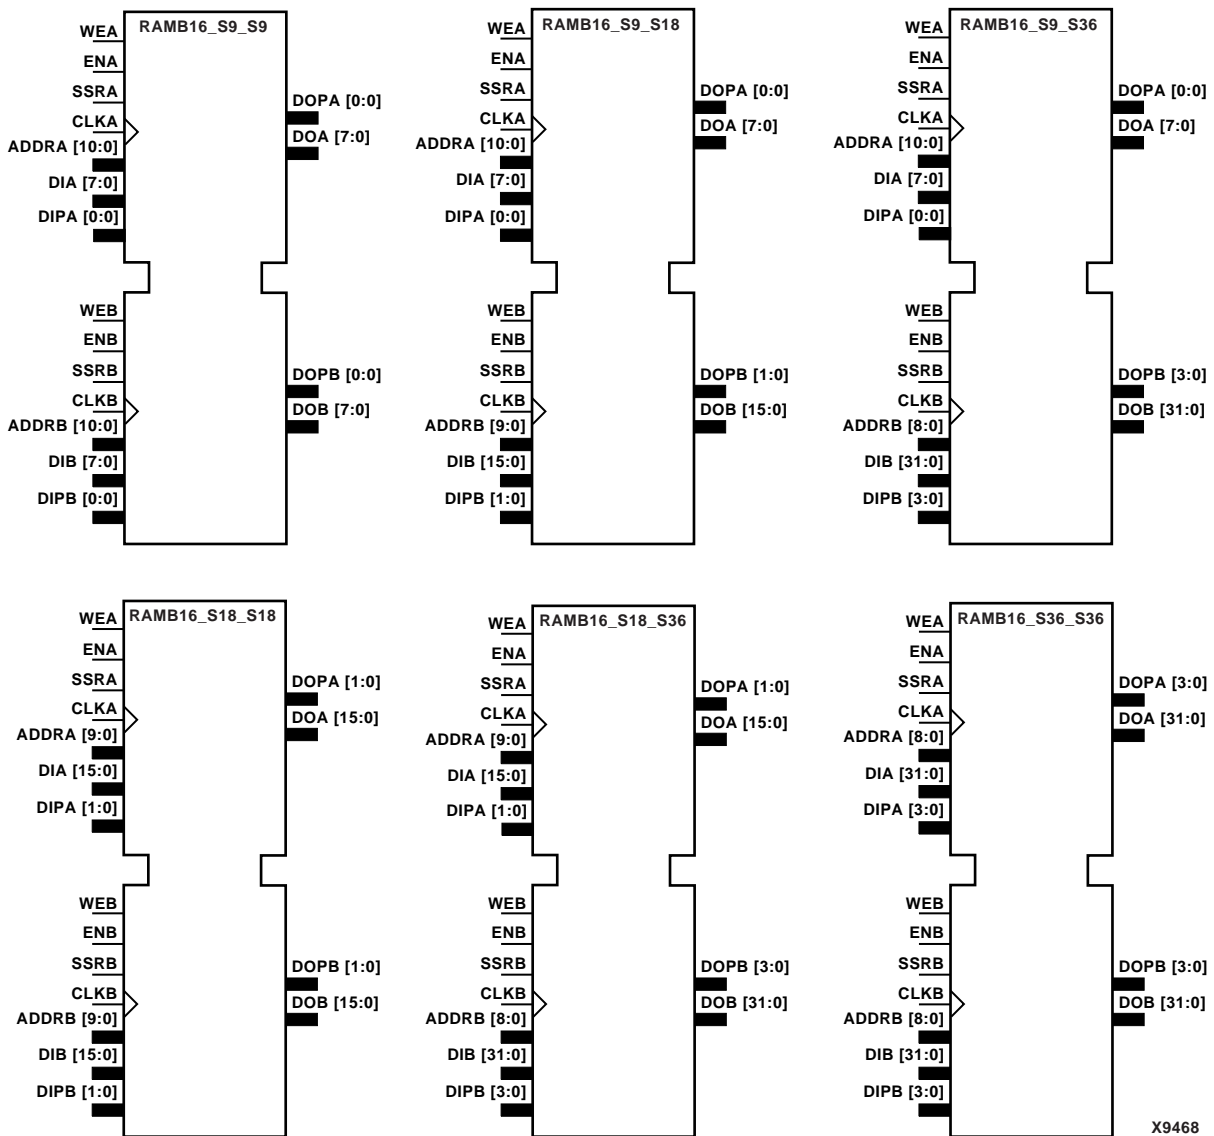

X9468

### RAMB16\_S9\_S9 through RAMB16\_S36\_S36 Representations

The RAMB16\_Sm\_Sn components listed in the following table are dual-ported dedicated random access memory blocks with synchronous write capability. Each block RAM port has 16384 bits of data memory. Ports configured as 9, 18, or 36-bits wide have an additional 2048 bits of parity memory. Each port is independent of the other while accessing the same set of 16384 data memory cells. Each port is independently configured to a specific data width. The possible port and cell configurations are listed in the following table.

Component	Port A					Port B				
	Data Cells <sup>a</sup>	Parity Cells <sup>a</sup>	Address Bus	Data Bus	Parity Bus	Data Cells <sup>a</sup>	Parity Cells <sup>a</sup>	Address Bus	Data Bus	Parity Bus
RAMB16_S1_S1	16384 x 1	-	(13:0)	(0:0)	-	16384 x 1	-	(13:0)	(0:0)	-
RAMB16_S1_S2	16384 x 1	-	(13:0)	(0:0)	-	8192 x 2	-	(12:0)	(1:0)	-
RAMB16_S1_S4	16384 x 1	-	(13:0)	(0:0)	-	4096 x 4	-	(11:0)	(3:0)	-
RAMB16_S1_S9	16384 x 1	-	(13:0)	(0:0)	-	2048 x 8	2048 x 1	(10:0)	(7:0)	(0:0)
RAMB16_S1_S18	16384 x 1	-	(13:0)	(0:0)	-	1024 x 16	1024 x 2	(9:0)	(15:0)	(1:0)
RAMB16_S1_S36	16384 x 1	-	(13:0)	(0:0)	-	512 x 32	512 x 4	(8:0)	(31:0)	(3:0)
RAMB16_S2_S2	8192 x 2	-	(12:0)	(1:0)	-	8192 x 2	-	(12:0)	(1:0)	-
RAMB16_S2_S4	8192 x 2	-	(12:0)	(1:0)	-	4096 x 4	-	(11:0)	(3:0)	-
RAMB16_S2_S9	8192 x 2	-	(12:0)	(1:0)	-	2048 x 8	2048 x 1	(10:0)	(7:0)	(0:0)
RAMB16_S2_S18	8192 x 2	-	(12:0)	(1:0)	-	1024 x 16	1024 x 2	(9:0)	(15:0)	(1:0)
RAMB16_S2_S36	8192 x 2	-	(12:0)	(1:0)	-	512 x 32	512 x 4	(8:0)	(31:0)	(3:0)
RAMB16_S4_S4	4096 x 4	-	(11:0)	(3:0)	-	4096 x 4	-	(11:0)	(3:0)	-
RAMB16_S4_S9	4096 x 4	-	(11:0)	(3:0)	-	2048 x 8	2048 x 1	(10:0)	(7:0)	(0:0)
RAMB16_S4_S18	4096 x 4	-	(11:0)	(3:0)	-	1024 x 16	1024 x 2	(9:0)	(15:0)	(1:0)
RAMB16_S4_S36	4096 x 4	-	(11:0)	(3:0)	-	512 x 32	512 x 4	(8:0)	(31:0)	(3:0)
RAMB16_S9_S9	2048 x 8	2048 x 1	(10:0)	(7:0)	(0:0)	2048 x 8	2048 x 1	(10:0)	(7:0)	(0:0)
RAMB16_S9_S18	2048 x 8	2048 x 1	(10:0)	(7:0)	(0:0)	1024 x 16	1024 x 2	(9:0)	(15:0)	(1:0)
RAMB16_S9_S36	2048 x 8	2048 x 1	(10:0)	(7:0)	(0:0)	512 x 32	512 x 4	(8:0)	(31:0)	(3:0)
RAMB16_S18_S18	1024 x 16	1024 x 2	(9:0)	(15:0)	(1:0)	1024 x 16	1024 x 2	(9:0)	(15:0)	(1:0)
RAMB16_S18_S36	1024 x 16	1024 x 2	(9:0)	(15:0)	(1:0)	512 x 32	512 x 4	(8:0)	(31:0)	(3:0)
RAMB16_S36_S36	512 x 32	512 x 4	(8:0)	(31:0)	(3:0)	512 x 32	512 x 4	(8:0)	(31:0)	(3:0)

<sup>a</sup>Depth x Width

Each port is fully synchronous with independent clock pins. All port A input pins have setup time referenced to the CLKA pin and its data output bus DOA has a clock-to-out time referenced to the CLKA. All port B input pins have setup time referenced to the CLKB pin and its data output bus DOB has a clock-to-out time referenced to the CLKB.

The enable ENA pin controls read, write, and reset for port A. When ENA is Low, no data is written and the outputs (DOA and DOPA) retain the last state. When ENA is High and reset (SSRA) is High, DOA and DOPA are set to SRVAL\_A during the Low-to-High clock (CLKA) transition; if write enable (WEA) is High, the memory contents reflect the data at DIA and DIPA. When ENA is High and WEA is Low, the data stored in the RAM address (ADDRA) is read during the Low-to-High clock transition. By default, WRITE\_MODE\_A=WRITE\_FIRST, when ENA and WEA are High, the data on the data inputs (DIA and DIPA) is loaded into the word selected by the write address (ADDRA) during the Low-to-High clock transition and the data outputs (DOA and DOPA) reflect the selected (addressed) word.

The enable ENB pin controls read, write, and reset for port B. When ENB is Low, no data is written and the outputs (DOB and DOPB) retain the last state. When ENB is High and reset (SSRB) is High, DOB and DOPB are set to SRVAL\_B during the Low-to-High clock (CLKB) transition; if write enable (WEB) is High, the memory contents reflect the data at DIB and DIPB. When ENB is High and WEB is Low, the data stored in the RAM address (ADDRB) is read during the Low-to-High clock transition. By default, WRITE\_MODE\_B=WRITE\_FIRST, when ENB and WEB are High, the data on the data inputs (DIB and DIPB) are loaded into the word selected by the write address (ADDRB) during the Low-to-High clock transition and the data outputs (DOB and DOPB) reflect the selected (addressed) word.

The above descriptions assume active High control pins (ENA, WEA, SSRA, CLKA, ENB, WEB, SSRB, and CLKB). However, the active level can be changed by placing an inverter on the port. Any inverter placed on a RAMB16 port is absorbed into the block and does not use a CLB resource.

Port A Truth Table

Inputs								Outputs			
GSR	ENA	SSRA	WEA	CLKA	ADDRA	DIA	DIPA	DOA	DOPA	RAM Contents	
										Data RAM	Parity RAM
1	X	X	X	X	X	X	X	INIT_A	INIT_A	No Chg	No Chg
0	0	X	X	X	X	X	X	No Chg	No Chg	No Chg	No Chg
0	1	1	0	↑	X	X	X	SRVAL_A	SRVAL_A	No Chg	No Chg
0	1	1	1	↑	addr	data	pdata	SRVAL_A	SRVAL_A	RAM(addr) =>data	RAM(addr) =>pdata
0	1	0	0	↑	addr	X	X	RAM(addr)	RAM(addr)	No Chg	No Chg



Port A Truth Table

Inputs								Outputs			
GS R	ENA	SSR A	WE A	CLK A	ADD RA	DIA	DIPA	DOA	DOPA	RAM Contents	
0	1	0	1	↑	addr	data	pdata	No Chg <sup>1</sup> RAM (addr) <sup>2</sup> data <sup>3</sup>	No Chg <sup>1</sup> RAM(addr) <sup>2</sup> pdata <sup>3</sup>	RAM(addr) =>data	RAM(addr) =>pdata

GSR=Global Set Reset

INIT\_A=Value specified by the INIT\_A attribute for output register. Default is all zeros.

SRVAL\_A=register value

addr=RAM address

RAM(addr)=RAM contents at address ADDR

data=RAM input data

pdata=RAM parity data

<sup>1</sup>WRITE\_MODE\_A=NO\_CHANGE<sup>2</sup>WRITE\_MODE\_A=READ\_FIRST<sup>3</sup>WRITE\_MODE\_A=WRITE\_FIRST

Port B Truth Table

Inputs								Outputs			
GS R	ENB	SSR B	WE B	CLK B	ADD RB	DIB	DIPB	DOB	DOPB	RAM Contents	
										Data RAM	Parity RAM
1	X	X	X	X	X	X	X	INIT_B	INIT_B	No Chg	No Chg
0	0	X	X	X	X	X	X	No Chg	No Chg	No Chg	No Chg
0	1	1	0	↑	X	X	X	SRVAL_B	SRVAL_B	No Chg	No Chg
0	1	1	1	↑	addr	data	pdata	SRVAL_B	SRVAL_B	RAM(addr) =>data	RAM(addr) =>pdata
0	1	0	0	↑	addr	X	X	RAM(addr)	RAM(addr)	No Chg	No Chg
0	1	0	1	↑	addr	data	pdata	No Chg <sup>1</sup> RAM (addr) <sup>2</sup> data <sup>3</sup>	No Chg <sup>1</sup> RAM(addr) <sup>2</sup> pdata <sup>3</sup>	RAM(addr) =>data	RAM(addr) =>pdata

GSR=Global Set Reset

INIT\_B=Value specified by the INIT\_B attribute for output registers. Default is all zeros.

SRVAL\_B=register value

addr=RAM address

RAM(addr)=RAM contents at address ADDR

data=RAM input data

pdata=RAM parity data

<sup>1</sup>WRITE\_MODE\_B=NO\_CHANGE<sup>2</sup>WRITE\_MODE\_B=READ\_FIRST<sup>3</sup>WRITE\_MODE\_B=WRITE\_FIRST

### Address Mapping

Each port accesses the same set of 18432 memory cells using an addressing scheme that is dependent on the width of the port. For all port widths, 16384 memory cells are available for data as shown in the “Port Address Mapping for Data” table. For 9-, 18-, and 36-bit wide ports, 2408 parity memory cells are also available as shown in “Port Address Mapping for Parity” table. The physical RAM location that is addressed for a particular width is determined from the following formula.

$$\text{Start} = (\text{ADDR}_{\text{port}} + 1) * (\text{Width}_{\text{port}}) - 1$$

$$\text{End} = \text{ADDR}_{\text{port}} * (\text{Width}_{\text{port}})$$

The following tables shows address mapping for each port width.

**Port Address Mapping for Data**

Data Width	Port Data Addresses																																	
1	16384	<--	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
2	8192	<--	15		14		13		12		11		10		09		08		07		06		05		04		03		02		01		00	
4	4096	<--	07				06				05				04				03				02				01				00			
8	2048	<--	03								02								01								00							
16	1024	<--	01																00															
32	512	<--	00																															

**Port Address Mapping for Parity**

Parity Width	Port Parity Addresses									
1	2048	<-----	03		02		01		00	
2	1024	<-----	01				00			
4	512	<-----	00							

### Initializing Memory Contents of a Dual-Port RAMB16

You can use the INIT\_xx attributes to specify an initialization value for the memory contents of a RAMB16 during device configuration. The initialization of each RAMB16\_Sm\_Sn is set by 64 initialization attributes (INIT\_00 through INIT\_3F) of 64 hex values for a total of 16384 bits.

You can use the INITP\_xx attributes to specify an initial value for the parity memory during device configuration or assertion. The initialization of the parity memory for ports configured for 9, 18, or 36 bits is set by 8 initialization attributes (INITP\_00 through INITP\_07) of 64 hex values for a total of 2048 bits.

If any INIT\_xx or INITP\_xx attribute is not specified, it is configured as zeros. Partial strings are padded with zeros to the left.

See the *Constraints Guide* for more information on these attributes.

## Initializing the Output Register of a Dual-Port RAMB16

In Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X, each bit in an output register can be initialized at power on (when GSR is high) to either a 0 or 1. In addition, the initial state specified for power on can be different than the state that results from assertion of a set/reset. Four properties control initialization of the output register for a dual-port RAMB16: INIT\_A, INIT\_B, SRVAL\_A, and SRVAL\_B. The INIT\_A attribute specifies the output register value at power on for port A and the INIT\_B attribute specifies the value for port B. You can use the SRVAL\_A attribute to define the state resulting from assertion of the SSR (set/reset) input on port A. You can use the SRVAL\_B attribute to define the state resulting from assertion of the SSR input on port B.

The INIT\_A, INIT\_B, SRVAL\_A, and SRVAL\_B attributes specify the initialization value as a hexadecimal string. The value is dependent upon the port width. For example, for a RAMB16\_S1\_S4 with port A width equal to 1 and port B width equal to 4, the port A output register contains 1 bit and the port B output register contains 4 bits. Therefore, the INIT\_A or SRVAL\_A value can only be specified as a 1 or 0. For port B, the output register contains 4 bits. In this case, you can use INIT\_B or SRVAL\_B to specify a hexadecimal value from 0 through F to initialize the 4 bits of the output register.

For those ports that include parity bits, the parity portion of the output register is specified in the high order bit position of the INIT\_A, INIT\_B, SRVAL\_A, or SRVAL\_B value.

The INIT and SRVAL attributes default to zero if they are not set by the user.

See the *Constraints Guide* for more information on these attributes.

## Write Mode Selection

The WRITE\_MODE\_A attribute controls the memory and output contents of port A for a dual-port RAMB16. The WRITE\_MODE\_B attribute does the same for port B. By default, both WRITE\_MODE\_A and WRITE\_MODE\_B are set to WRITE\_FIRST. This means that input is read, written to memory, and then passed to output. You can set the write mode for port A and/or port B to READ\_FIRST to read the memory contents, pass the memory contents to the outputs, and then write the input to memory. Or, you can set the write mode to NO\_CHANGE to have the input written to memory without changing the output. The “Port A and Port B Conflict Resolution” section describes how read/write conflicts are resolved when both port A and port B are attempting to read/write to the same memory cells.

## Port A and Port B Conflict Resolution

Spartan-3, Virtex-II, Virtex-II Pro, and Virtex-II Pro X block SelectRAM is True Dual-Port RAM that allows both ports to simultaneously access the same memory cell. When one port writes to a given memory cell, the other port must not address that memory cell (for a write or a read) within the clock-to-clock setup window. For a list of specifics of conflict resolution for port and memory cell write operations that have either a clock common to both ports or synchronous clocks on each port, see *Virtex-II Handbook, Chapter 2, Design Considerations, Using BlockSelectRAM Memory, Conflict Resolution*.

The following tables summarize the collision detection behavior of the dual-port RAMB16 based on the WRITE\_MODE\_A and WRITE\_MODE\_B settings.

**WRITE\_MODE\_A=NO\_CHANGE and WRITE\_MODE\_B=NO\_CHANGE**

WEA	WEB	CLKA	CLKB	DIA	DIB	DIPA	DIPB	DOA	DOB	DOPA	DOPB	Data RAM	Parity Ram
0	0	↑	↑	DIA	DIB	DIPA	DIPB	RAM	RAM	RAM	RAM	No Chg	No Chg
1	0	↑	↑	DIA	DIB	DIPA	DIPB	No Chg	X	No Chg	X	DIA	DIPA
0	1	↑	↑	DIA	DIB	DIPA	DIPB	X	No Chg	X	No Chg	DIB	DIPB
1	1	↑	↑	DIA	DIB	DIPA	DIPB	No Chg	No Chg	No Chg	No Chg	X	X

**WRITE\_MODE\_A=READ\_FIRST and WRITE\_MODE\_B=READ\_FIRST**

WEA	WEB	CLKA	CLKB	DIA	DIB	DIPA	DIPB	DOA	DOB	DOPA	DOPB	Data RAM	Parity Ram
0	0	↑	↑	DIA	DIB	DIPA	DIPB	RAM	RAM	RAM	RAM	No Chg	No Chg
1	0	↑	↑	DIA	DIB	DIPA	DIPB	RAM	RAM	RAM	RAM	DIA	DIPA
0	1	↑	↑	DIA	DIB	DIPA	DIPB	RAM	RAM	RAM	RAM	DIB	DIPB
1	1	↑	↑	DIA	DIB	DIPA	DIPB	RAM	RAM	RAM	RAM	X	X

**WRITE\_MODE\_A= WRITE\_FIRST and WRITE\_MODE\_B=WRITE\_FIRST**

WEA	WEB	CLKA	CLKB	DIA	DIB	DIPA	DIPB	DOA	DOB	DOPA	DOPB	Data RAM	Parity Ram
0	0	↑	↑	DIA	DIB	DIPA	DIPB	RAM	RAM	RAM	RAM	No Chg	No Chg
1	0	↑	↑	DIA	DIB	DIPA	DIPB	DIA	X	DIPA	X	DIA	DIPA
0	1	↑	↑	DIA	DIB	DIPA	DIPB	X	DIB	X	DIPB	DIB	DIPB
1	1	↑	↑	DIA	DIB	DIPA	DIPB	X	X	X	X	X	X

**WRITE\_MODE\_A=NO\_CHANGE and WRITE\_MODE\_B=READ\_FIRST**

WEA	WEB	CLKA	CLKB	DIA	DIB	DIPA	DIPB	DOA	DOB	DOPA	DOPB	Data RAM	Parity Ram
0	0	↑	↑	DIA	DIB	DIPA	DIPB	RAM	RAM	RAM	RAM	No Chg	No Chg
1	0	↑	↑	DIA	DIB	DIPA	DIPB	No Chg	X	No Chg	X	DIA	DIPA
0	1	↑	↑	DIA	DIB	DIPA	DIPB	RAM	RAM	RAM	RAM	DIB	DIPB
1	1	↑	↑	DIA	DIB	DIPA	DIPB	No Chg	X	No Chg	X	DIB	DIPB

**WRITE\_MODE\_A=NO\_CHANGE and WRITE\_MODE\_B=WRITE\_FIRST**

WEA	WEB	CLKA	CLKB	DIA	DIB	DIPA	DIPB	DOA	DOB	DOPA	DOPB	Data RAM	Parity Ram
0	0	↑	↑	DIA	DIB	DIPA	DIPB	RAM	RAM	RAM	RAM	No Chg	No Chg
1	0	↑	↑	DIA	DIB	DIPA	DIPB	No Chg	X	No Chg	X	DIA	DIPA

**WRITE\_MODE\_A=NO\_CHANGE and WRITE\_MODE\_B=WRITE\_FIRST**

WEA	WEB	CLKA	CLKB	DIA	DIB	DIPA	DIPB	DOA	DOB	DOPA	DOPB	Data RAM	Parity Ram
0	1	↑	↑	DIA	DIB	DIPA	DIPB	X	DIB	X	DIPB	DIB	DIPB
1	1	↑	↑	DIA	DIB	DIPA	DIPB	No Chg	X	No Chg	X	X	X

**WRITE\_MODE\_A=READ\_FIRST and WRITE\_MODE\_B=WRITE\_FIRST**

WEA	WEB	CLKA	CLKB	DIA	DIB	DIPA	DIPB	DOA	DOB	DOPA	DOPB	Data RAM	Parity Ram
0	0	↑	↑	DIA	DIB	DIPA	DIPB	RAM	RAM	RAM	RAM	No Chg	No Chg
1	0	↑	↑	DIA	DIB	DIPA	DIPB	RAM	RAM	RAM	RAM	DIA	DIPA
0	1	↑	↑	DIA	DIB	DIPA	DIPB	X	DIB	X	DIPB	DIB	DIPB
1	1	↑	↑	DIA	DIB	DIPA	DIPB	X	DIB	X	DIPB	DIA	DIPA

### Usage

For HDL, these design elements can be inferred or instantiated. The instantiation code is shown below. For information on how to infer RAM, see the *XST User Guide*.

### VHDL Instantiation Template for RAMB16\_S1\_S1, RAMB16\_S1\_S2, RAMB16\_S1\_S4, RAMB16\_S2\_S2, RAMB16\_S2\_S4, and RAMB16\_S4\_S4

```
-- Component Declaration for RAMB16_S1_{S1 | S2 | S4}, RAMB16_S2_{S2 | S4}, and
-- RAMB16_S4_S4 should be placed after architecture statement but before begin keyword
```

```
-- For the following component declaration, enter RAMB16_S1_{S1 | S2 | S4},
-- RAMB16_S2_{S2 | S4}, or RAMB16_S4_S4
```

```
component RAMB16_Sm_Sn
  -- synthesis translate_off
  generic (
    INIT_00 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_01 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_02 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_03 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_04 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_05 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_06 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_07 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_08 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_09 : bit_vector :=
```





```

X"0000000000000000000000000000000000000000000000000000000000000000";
  INITP_03 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
  INITP_04 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
  INITP_05 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
  INITP_06 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
  INITP_07 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
  SRVAL_A : bit_vector := X"0";
  SRVAL_B : bit_vector := X"0";
  WRITE_MODE_A : string := "WRITE_FIRST";
  WRITE_MODE_B : string := "WRITE_FIRST";

);
-- synthesis translate_on

port (DOA : out STD_LOGIC_VECTOR (n downto 0);
      DOB : out STD_LOGIC_VECTOR (n downto 0);
      ADDRA : in STD_LOGIC_VECTOR (n downto 0);
      ADDR_B : in STD_LOGIC_VECTOR (n downto 0);
      CLKA : in STD_ULOGIC;
      CLK_B : in STD_ULOGIC;
      DIA : in STD_LOGIC_VECTOR (n downto 0);
      DIB : in STD_LOGIC_VECTOR (n downto 0);
      ENA : in STD_ULOGIC;
      ENB : in STD_ULOGIC;
      SSRA : in STD_ULOGIC;
      SSR_B : in STD_ULOGIC;
      WEA : in STD_ULOGIC;
      WEB : in STD_ULOGIC);

end component;

-- Component Attribute Specification for design element
-- should be placed after architecture declaration
-- but before the begin keyword

-- Put attributes, if necessary

-- Component Instantiation for design element
-- Should be placed in architecture after the begin keyword

RAMB16_Sm_Sn INSTANCE_NAME : RAMB16_Sm_Sn
  -- synthesis translate_off
  generic map (
    INIT_00 => vector_value,
    INIT_01 => vector_value,
    INIT_02 => vector_value,
    INIT_03 => vector_value,
    INIT_04 => vector_value,
    INIT_05 => vector_value,
    INIT_06 => vector_value,
    INIT_07 => vector_value,
    INIT_08 => vector_value,

```



```
INIT_09 => vector_value,  
INIT_0A => vector_value,  
INIT_0B => vector_value,  
INIT_0C => vector_value,  
INIT_0D => vector_value,  
INIT_0E => vector_value,  
INIT_0F => vector_value,  
INIT_10 => vector_value,  
INIT_11 => vector_value,  
INIT_12 => vector_value,  
INIT_13 => vector_value,  
INIT_14 => vector_value,  
INIT_15 => vector_value,  
INIT_16 => vector_value,  
INIT_17 => vector_value,  
INIT_18 => vector_value,  
INIT_19 => vector_value,  
INIT_1A => vector_value,  
INIT_1B => vector_value,  
INIT_1C => vector_value,  
INIT_1D => vector_value,  
INIT_1E => vector_value,  
INIT_1F => vector_value,  
INIT_20 => vector_value,  
INIT_21 => vector_value,  
INIT_22 => vector_value,  
INIT_23 => vector_value,  
INIT_24 => vector_value,  
INIT_25 => vector_value,  
INIT_26 => vector_value,  
INIT_27 => vector_value,  
INIT_28 => vector_value,  
INIT_29 => vector_value,  
INIT_2A => vector_value,  
INIT_2B => vector_value,  
INIT_2C => vector_value,  
INIT_2D => vector_value,  
INIT_2E => vector_value,  
INIT_2F => vector_value,  
INIT_30 => vector_value,  
INIT_31 => vector_value,  
INIT_32 => vector_value,  
INIT_33 => vector_value,  
INIT_34 => vector_value,  
INIT_35 => vector_value,  
INIT_36 => vector_value,  
INIT_37 => vector_value,  
INIT_38 => vector_value,  
INIT_39 => vector_value,  
INIT_3A => vector_value,  
INIT_3B => vector_value,  
INIT_3C => vector_value,  
INIT_3D => vector_value,  
INIT_3E => vector_value,  
INIT_3F => vector_value,  
INIT_A => bit_value,  
INIT_B => bit_value,  
INITP_00 => vector_value,
```

```

INITP_01 => vector_value,
INITP_02 => vector_value,
INITP_03 => vector_value,
INITP_04 => vector_value,
INITP_05 => vector_value,
INITP_06 => vector_value,
INITP_07 => vector_value,
SRVAL_A => bit_value,
SRVAL_B => bit_value,
WRITE_MODE_A => string_value,
WRITE_MODE_B => string_value)
-- synopsys translate_on
port map (DOA => user_DOA,
          DOB => user_DOB,
          ADDRA => user_ADDRA,
          ADDR1 => user_ADDR1,
          ADDR2 => user_ADDR2,
          CLKA => user_CLKA,
          CLKB => user_CLKB,
          DIA => user_DIA,
          DIB => user_DIB,
          ENA => user_ENA,
          ENB => user_ENB,
          SSRA => user_SSRA,
          SSRB => user_SSRB,
          WEA => user_WEA,
          WEB => user_WEB);

```

### Verilog Instantiation Template for RAMB16\_S1\_S1, RAMB16\_S1\_S2, RAMB16\_S1\_S4, RAMB16\_S2\_S2, RAMB16\_S2\_S4, and RAMB16\_S4\_S4

```

RAMB16_Sm_Sn user_instance_name ( .DOA (user_DOA),
                                  .DOB (user_DOB),
                                  .ADDRA (user_ADDRA),
                                  .ADDR1 (user_ADDR1),
                                  .ADDR2 (user_ADDR2),
                                  .CLKA (user_CLKA),
                                  .CLKB (user_CLKB),
                                  .DIA (user_DIA),
                                  .DIB (user_DIB),
                                  .ENA (user_ENA),
                                  .ENB (user_ENB),
                                  .SSRA (user_SSRA),
                                  .SSRB (user_SSRB),
                                  .WEA (user_WEA),
                                  .WEB (user_WEB));

defparam user_instance_name.INIT_00 = 256_bit_hex_value;
defparam user_instance_name.INIT_01 = 256_bit_hex_value;
defparam user_instance_name.INIT_02 = 256_bit_hex_value;
defparam user_instance_name.INIT_03 = 256_bit_hex_value;
defparam user_instance_name.INIT_04 = 256_bit_hex_value;
defparam user_instance_name.INIT_05 = 256_bit_hex_value;
defparam user_instance_name.INIT_06 = 256_bit_hex_value;
defparam user_instance_name.INIT_07 = 256_bit_hex_value;
defparam user_instance_name.INIT_08 = 256_bit_hex_value;
defparam user_instance_name.INIT_09 = 256_bit_hex_value;
defparam user_instance_name.INIT_0A = 256_bit_hex_value;

```



```

defparam user_instance_name.INITP_03 = 256_bit_hex_value;
defparam user_instance_name.INITP_04 = 256_bit_hex_value;
defparam user_instance_name.INITP_05 = 256_bit_hex_value;
defparam user_instance_name.INITP_06 = 256_bit_hex_value;
defparam user_instance_name.INITP_07 = 256_bit_hex_value;
defparam user_instance_name.SRVAL_A = bit_value;
defparam user_instance_name.SRVAL_B = bit_value;
defparam user_instance_name.WRITE_MODE_A = string_value;
defparam user_instance_name.WRITE_MODE_B = string_value;

```

### VHDL Instantiation Template for RAMB16\_S1\_S9, RAMB16\_S1\_S18, RAMB16\_S1\_S36, RAMB16\_S2\_S9, RAMB16\_S2\_S18, RAMB16\_S2\_S36, RAMB16\_S4\_S9, RAMB16\_S4\_S18, and RAMB16\_S4\_S36

```

-- Component Declaration for these design elements
-- should be placed after architecture statement but before begin keyword

-- For the following component declaration, enter RAMB16_S1_{S9 | S18 | S36},
-- RAMB16_S2_{S9 | S18 | S36}, or RAMB16_S4_{S9 | S18 | S36}

component RAMB16_Sm_Sn
  -- synthesis translate_off
  generic (
    INIT_00 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_01 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_02 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_03 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_04 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_05 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_06 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_07 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_08 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_09 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0A : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0B : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0C : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0D : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0E : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0F : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_10 : bit_vector :=

```



```

X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_2E : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_2F : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_30 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_31 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_32 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_33 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_34 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_35 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_36 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_37 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_38 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_39 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_3A : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_3B : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_3C : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_3D : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_3E : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_3F : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_A : bit_vector := X"0";
    INIT_B : bit_vector := X"0";
    INITP_00 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INITP_01 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INITP_02 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INITP_03 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INITP_04 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INITP_05 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INITP_06 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INITP_07 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    SRVAL_A : bit_vector := X"0";
    SRVAL_B : bit_vector := X"0";
    WRITE_MODE_A : string := "WRITE_FIRST";
    
```

```

        WRITE_MODE_B : string := "WRITE_FIRST";
    );
    -- synthesis translate_on

    port (DOA : out STD_LOGIC_VECTOR (n downto 0);
          DOB : out STD_LOGIC_VECTOR (n downto 0);
          DOPB : out STD_LOGIC_VECTOR (n downto 0);
          ADDRA : in STD_LOGIC_VECTOR (n downto 0);
          ADDR8 : in STD_LOGIC_VECTOR (n downto 0);
          CLKA : in STD_ULONGIC;
          CLKB : in STD_ULONGIC;
          DIA : in STD_LOGIC_VECTOR (n downto 0);
          DIB : in STD_LOGIC_VECTOR (n downto 0);
          DIPB : in STD_LOGIC_VECTOR (n downto 0);
          ENA : in STD_ULONGIC;
          ENB : in STD_ULONGIC;
          SSRA : in STD_ULONGIC;
          SSRB : in STD_ULONGIC;
          WEA : in STD_ULONGIC;
          WEB : in STD_ULONGIC);

end component;

-- Component Attribute Specification for design element
-- should be placed after architecture declaration
-- but before the begin keyword

-- Put attributes, if necessary

-- Component Instantiation for design element
-- Should be placed in architecture after the begin keyword

RAMB16_Sm_Sn INSTANCE_NAME : RAMB16_Sm_Sn
-- synthesis translate_off
generic map (
    INIT_00 => vector_value,
    INIT_01 => vector_value,
    INIT_02 => vector_value,
    INIT_03 => vector_value,
    INIT_04 => vector_value,
    INIT_05 => vector_value,
    INIT_06 => vector_value,
    INIT_07 => vector_value,
    INIT_08 => vector_value,
    INIT_09 => vector_value,
    INIT_0A => vector_value,
    INIT_0B => vector_value,
    INIT_0C => vector_value,
    INIT_0D => vector_value,
    INIT_0E => vector_value,
    INIT_0F => vector_value,
    INIT_10 => vector_value,
    INIT_11 => vector_value,
    INIT_12 => vector_value,
    INIT_13 => vector_value,
    INIT_14 => vector_value,
    INIT_15 => vector_value,

```

```
INIT_16 => vector_value,  
INIT_17 => vector_value,  
INIT_18 => vector_value,  
INIT_19 => vector_value,  
INIT_1A => vector_value,  
INIT_1B => vector_value,  
INIT_1C => vector_value,  
INIT_1D => vector_value,  
INIT_1E => vector_value,  
INIT_1F => vector_value,  
INIT_20 => vector_value,  
INIT_21 => vector_value,  
INIT_22 => vector_value,  
INIT_23 => vector_value,  
INIT_24 => vector_value,  
INIT_25 => vector_value,  
INIT_26 => vector_value,  
INIT_27 => vector_value,  
INIT_28 => vector_value,  
INIT_29 => vector_value,  
INIT_2A => vector_value,  
INIT_2B => vector_value,  
INIT_2C => vector_value,  
INIT_2D => vector_value,  
INIT_2E => vector_value,  
INIT_2F => vector_value,  
INIT_30 => vector_value,  
INIT_31 => vector_value,  
INIT_32 => vector_value,  
INIT_33 => vector_value,  
INIT_34 => vector_value,  
INIT_35 => vector_value,  
INIT_36 => vector_value,  
INIT_37 => vector_value,  
INIT_38 => vector_value,  
INIT_39 => vector_value,  
INIT_3A => vector_value,  
INIT_3B => vector_value,  
INIT_3C => vector_value,  
INIT_3D => vector_value,  
INIT_3E => vector_value,  
INIT_3F => vector_value,  
INIT_A => bit_value,  
INIT_B => bit_value,  
INITP_00 => vector_value,  
INITP_01 => vector_value,  
INITP_02 => vector_value,  
INITP_03 => vector_value,  
INITP_04 => vector_value,  
INITP_05 => vector_value,  
INITP_06 => vector_value,  
INITP_07 => vector_value,  
SRVAL_A => bit_value,  
SRVAL_B => bit_value,  
WRITE_MODE_A => string_value,  
WRITE_MODE_B => string_value)  
-- synopsys translate_on  
port map (DOA => user_DOA,
```



```

DOB => user_DOB,
DOPB => user_DOPB,
ADDRA => user_ADDRA,
ADDRB => user_ADDRB,
CLKA => user_CLKA,
CLKB => user_CLKB,
DIA => user_DIA,
DIB => user_DIB,
DIPB => user_DIPB,
ENA => user_ENA,
ENB => user_ENB,
SSRA => user_SSRA,
SSRB => user_SSRB,
WEA => user_WEA,
WEB => user_WEB);

```

### Verilog Instantiation Template for RAMB16\_S1\_S9, RAMB16\_S1\_S18, RAMB16\_S1\_S36, RAMB16\_S2\_S9, RAMB16\_S2\_S18, RAMB16\_S2\_S36, RAMB16\_S4\_S9, RAMB16\_S4\_S18, and RAMB16\_S4\_S36

```

RAMB16_Sm_Sn user_instance_name (.DOA (user_DOA),
                                .DOB (user_DOB),
                                .DOPB (user_DOPB),
                                .ADDRA (user_ADDRA),
                                .ADDRB (user_ADDRB),
                                .CLKA (user_CLKA),
                                .CLKB (user_CLKB),
                                .DIA (user_DIA),
                                .DIB (user_DIB),
                                .DIPB (user_DIPB),
                                .ENA (user_ENA),
                                .ENB (user_ENB),
                                .SSRA (user_SSRA),
                                .SSRB (user_SSRB),
                                .WEA (user_WEA),
                                .WEB (user_WEB));

defparam user_instance_name.INIT_00 = 256_bit_hex_value;
defparam user_instance_name.INIT_01 = 256_bit_hex_value;
defparam user_instance_name.INIT_02 = 256_bit_hex_value;
defparam user_instance_name.INIT_03 = 256_bit_hex_value;
defparam user_instance_name.INIT_04 = 256_bit_hex_value;
defparam user_instance_name.INIT_05 = 256_bit_hex_value;
defparam user_instance_name.INIT_06 = 256_bit_hex_value;
defparam user_instance_name.INIT_07 = 256_bit_hex_value;
defparam user_instance_name.INIT_08 = 256_bit_hex_value;
defparam user_instance_name.INIT_09 = 256_bit_hex_value;
defparam user_instance_name.INIT_0A = 256_bit_hex_value;
defparam user_instance_name.INIT_0B = 256_bit_hex_value;
defparam user_instance_name.INIT_0C = 256_bit_hex_value;
defparam user_instance_name.INIT_0D = 256_bit_hex_value;
defparam user_instance_name.INIT_0E = 256_bit_hex_value;
defparam user_instance_name.INIT_0F = 256_bit_hex_value;
defparam user_instance_name.INIT_10 = 256_bit_hex_value;
defparam user_instance_name.INIT_11 = 256_bit_hex_value;
defparam user_instance_name.INIT_12 = 256_bit_hex_value;

```

```
defparam user_instance_name.INIT_13 = 256_bit_hex_value;
defparam user_instance_name.INIT_14 = 256_bit_hex_value;
defparam user_instance_name.INIT_15 = 256_bit_hex_value;
defparam user_instance_name.INIT_16 = 256_bit_hex_value;
defparam user_instance_name.INIT_17 = 256_bit_hex_value;
defparam user_instance_name.INIT_18 = 256_bit_hex_value;
defparam user_instance_name.INIT_19 = 256_bit_hex_value;
defparam user_instance_name.INIT_1A = 256_bit_hex_value;
defparam user_instance_name.INIT_1B = 256_bit_hex_value;
defparam user_instance_name.INIT_1C = 256_bit_hex_value;
defparam user_instance_name.INIT_1D = 256_bit_hex_value;
defparam user_instance_name.INIT_1E = 256_bit_hex_value;
defparam user_instance_name.INIT_1F = 256_bit_hex_value;
defparam user_instance_name.INIT_20 = 256_bit_hex_value;
defparam user_instance_name.INIT_21 = 256_bit_hex_value;
defparam user_instance_name.INIT_22 = 256_bit_hex_value;
defparam user_instance_name.INIT_23 = 256_bit_hex_value;
defparam user_instance_name.INIT_24 = 256_bit_hex_value;
defparam user_instance_name.INIT_25 = 256_bit_hex_value;
defparam user_instance_name.INIT_26 = 256_bit_hex_value;
defparam user_instance_name.INIT_27 = 256_bit_hex_value;
defparam user_instance_name.INIT_28 = 256_bit_hex_value;
defparam user_instance_name.INIT_29 = 256_bit_hex_value;
defparam user_instance_name.INIT_2A = 256_bit_hex_value;
defparam user_instance_name.INIT_2B = 256_bit_hex_value;
defparam user_instance_name.INIT_2C = 256_bit_hex_value;
defparam user_instance_name.INIT_2D = 256_bit_hex_value;
defparam user_instance_name.INIT_2E = 256_bit_hex_value;
defparam user_instance_name.INIT_2F = 256_bit_hex_value;
defparam user_instance_name.INIT_30 = 256_bit_hex_value;
defparam user_instance_name.INIT_31 = 256_bit_hex_value;
defparam user_instance_name.INIT_32 = 256_bit_hex_value;
defparam user_instance_name.INIT_33 = 256_bit_hex_value;
defparam user_instance_name.INIT_34 = 256_bit_hex_value;
defparam user_instance_name.INIT_35 = 256_bit_hex_value;
defparam user_instance_name.INIT_36 = 256_bit_hex_value;
defparam user_instance_name.INIT_37 = 256_bit_hex_value;
defparam user_instance_name.INIT_38 = 256_bit_hex_value;
defparam user_instance_name.INIT_39 = 256_bit_hex_value;
defparam user_instance_name.INIT_3A = 256_bit_hex_value;
defparam user_instance_name.INIT_3B = 256_bit_hex_value;
defparam user_instance_name.INIT_3C = 256_bit_hex_value;
defparam user_instance_name.INIT_3D = 256_bit_hex_value;
defparam user_instance_name.INIT_3E = 256_bit_hex_value;
defparam user_instance_name.INIT_3F = 256_bit_hex_value;
defparam user_instance_name.INIT_A = bit_value;
defparam user_instance_name.INIT_B = bit_value;
defparam user_instance_name.INITP_00 = 256_bit_hex_value;
defparam user_instance_name.INITP_01 = 256_bit_hex_value;
defparam user_instance_name.INITP_02 = 256_bit_hex_value;
defparam user_instance_name.INITP_03 = 256_bit_hex_value;
defparam user_instance_name.INITP_04 = 256_bit_hex_value;
defparam user_instance_name.INITP_05 = 256_bit_hex_value;
defparam user_instance_name.INITP_06 = 256_bit_hex_value;
defparam user_instance_name.INITP_07 = 256_bit_hex_value;
defparam user_instance_name.SRVAL_A = bit_value;
defparam user_instance_name.SRVAL_B = bit_value;
defparam user_instance_name.WRITE_MODE_A = string_value;
```

```
defparam user_instance_name.WRITE_MODE_B = string_value;
```

## VHDL Instantiation Template RAMB16\_S9\_S9, RAMB16\_S9\_S18, RAMB16\_S9\_S36, RAMB16\_S18\_S18, RAMB16\_S18\_S36, and RAMB16\_S36\_S36

```
-- Component Declaration for these design elements
-- should be placed after architecture statement but before begin keyword

-- For the following component declaration, enter RAMB16_S9_{S9 | S18 | S36},
-- RAMB16_S18_{S18 | S36}, or RAMB16_S36_S36

component RAMB16_Sm_Sn
  -- synthesis translate_off
  generic (
    INIT_00 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_01 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_02 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_03 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_04 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_05 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_06 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_07 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_08 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_09 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0A : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0B : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0C : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0D : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0E : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_0F : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_10 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_11 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_12 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_13 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
    INIT_14 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
```



```

        INIT_32 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INIT_33 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INIT_34 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INIT_35 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INIT_36 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INIT_37 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INIT_38 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INIT_39 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INIT_3A : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INIT_3B : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INIT_3C : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INIT_3D : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INIT_3E : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INIT_3F : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INIT_A : bit_vector := X"0";
        INIT_B : bit_vector := X"0";
        INITP_00 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INITP_01 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INITP_02 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INITP_03 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INITP_04 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INITP_05 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INITP_06 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        INITP_07 : bit_vector :=
X"0000000000000000000000000000000000000000000000000000000000000000";
        SRVAL_A : bit_vector := X"0";
        SRVAL_B : bit_vector := X"0";
        WRITE_MODE_A : string := "WRITE_FIRST";
        WRITE_MODE_B : string := "WRITE_FIRST";
);
-- synthesis translate_on

port (DOA : out STD_LOGIC_VECTOR (n downto 0);
      DOB : out STD_LOGIC_VECTOR (n downto 0);
      DOPA : out STD_LOGIC_VECTOR (n downto 0);
      DOPB : out STD_LOGIC_VECTOR (n downto 0);
      ADDRA : in STD_LOGIC_VECTOR (n downto 0);

```

```
ADDRB : in STD_LOGIC_VECTOR (n downto 0);
CLKA : in STD_ULONGIC;
CLKB : in STD_ULONGIC;
DIA : in STD_LOGIC_VECTOR (n downto 0);
DIB : in STD_LOGIC_VECTOR (n downto 0);
DIPA : in STD_LOGIC_VECTOR (n downto 0);
DIPB : in STD_LOGIC_VECTOR (n downto 0);
ENA: in STD_ULONGIC;
ENB : in STD_ULONGIC;
SSRA : in STD_ULONGIC;
SSRB : in STD_ULONGIC;
WEA : in STD_ULONGIC;
WEB : in STD_ULONGIC);
```

```
end component;
```

```
-- Component Attribute Specification for design element
-- should be placed after architecture declaration
-- but before the begin keyword
```

```
-- Put attributes, if necessary
```

```
-- Component Instantiation for design element
-- Should be placed in architecture after the begin keyword
```

```
RAMB16_Sm_Sn INSTANCE_NAME : RAMB16_Sm_Sn
```

```
-- synthesis translate_off
```

```
generic map (
```

```
    INIT_00 => vector_value,
    INIT_01 => vector_value,
    INIT_02 => vector_value,
    INIT_03 => vector_value,
    INIT_04 => vector_value,
    INIT_05 => vector_value,
    INIT_06 => vector_value,
    INIT_07 => vector_value,
    INIT_08 => vector_value,
    INIT_09 => vector_value,
    INIT_0A => vector_value,
    INIT_0B => vector_value,
    INIT_0C => vector_value,
    INIT_0D => vector_value,
    INIT_0E => vector_value,
    INIT_0F => vector_value,
    INIT_10 => vector_value,
    INIT_11 => vector_value,
    INIT_12 => vector_value,
    INIT_13 => vector_value,
    INIT_14 => vector_value,
    INIT_15 => vector_value,
    INIT_16 => vector_value,
    INIT_17 => vector_value,
    INIT_18 => vector_value,
    INIT_19 => vector_value,
    INIT_1A => vector_value,
    INIT_1B => vector_value,
    INIT_1C => vector_value,
```

```

INIT_1D => vector_value,
INIT_1E => vector_value,
INIT_1F => vector_value,
INIT_20 => vector_value,
INIT_21 => vector_value,
INIT_22 => vector_value,
INIT_23 => vector_value,
INIT_24 => vector_value,
INIT_25 => vector_value,
INIT_26 => vector_value,
INIT_27 => vector_value,
INIT_28 => vector_value,
INIT_29 => vector_value,
INIT_2A => vector_value,
INIT_2B => vector_value,
INIT_2C => vector_value,
INIT_2D => vector_value,
INIT_2E => vector_value,
INIT_2F => vector_value,
INIT_30 => vector_value,
INIT_31 => vector_value,
INIT_32 => vector_value,
INIT_33 => vector_value,
INIT_34 => vector_value,
INIT_35 => vector_value,
INIT_36 => vector_value,
INIT_37 => vector_value,
INIT_38 => vector_value,
INIT_39 => vector_value,
INIT_3A => vector_value,
INIT_3B => vector_value,
INIT_3C => vector_value,
INIT_3D => vector_value,
INIT_3E => vector_value,
INIT_3F => vector_value,
INIT_A => bit_value,
INIT_B => bit_value,
INITP_00 => vector_value,
INITP_01 => vector_value,
INITP_02 => vector_value,
INITP_03 => vector_value,
INITP_04 => vector_value,
INITP_05 => vector_value,
INITP_06 => vector_value,
INITP_07 => vector_value,
SRVAL_A => bit_value,
SRVAL_B => bit_value,
WRITE_MODE_A => string_value,
WRITE_MODE_B => string_value)
-- synopsis translate_on
port map (DOA => user_DOA,
          DOB => user_DOB,
          DOPA => user_DOPA,
          DOPB => user_DOPB,
          ADDRA => user_ADDRA,
          ADDR_B => user_ADDRB,
          CLKA => user_CLKA,
          CLKB => user_CLKB,

```

```

DIA => user_DIA,
DIB => user_DIB,
DIPA => user_DIPA,
DIPB => user_DIPB,
ENA => user_ENA,
ENB => user_ENB,
SSRA => user_SSRA,
SSRB => user_SSRB,
WEA => user_WEA,
WEB => user_WEB);

```

### Verilog Instantiation Template for RAMB16\_S9\_S9, RAMB16\_S9\_S18, RAMB16\_S9\_S36, RAMB16\_S18\_S18, RAMB16\_S18\_S36, and RAMB16\_S36\_S36

```

RAMB16_Sm_Sn user_instance_name (.DOA (user_DOA),
                                .DOB (user_DOB),
                                .DOPA (user_DOPA),
                                .DOPB (user_DOPB),
                                .ADDRA (user_ADDRA),
                                .ADDRB (user_ADDRB),
                                .CLKA (user_CLKA),
                                .CLKB (user_CLKB),
                                .DIA (user_DIA),
                                .DIB (user_DIB),
                                .DIPA (user_DIPA),
                                .DIPB (user_DIPB),
                                .ENA (user_ENA),
                                .ENB (user_ENB),
                                .SSRA (user_SSRA),
                                .SSRB (user_SSRB),
                                .WEA (user_WEA),
                                .WEB (user_WEB));

defparam user_instance_name.INIT_00 = 256_bit_hex_value;
defparam user_instance_name.INIT_01 = 256_bit_hex_value;
defparam user_instance_name.INIT_02 = 256_bit_hex_value;
defparam user_instance_name.INIT_03 = 256_bit_hex_value;
defparam user_instance_name.INIT_04 = 256_bit_hex_value;
defparam user_instance_name.INIT_05 = 256_bit_hex_value;
defparam user_instance_name.INIT_06 = 256_bit_hex_value;
defparam user_instance_name.INIT_07 = 256_bit_hex_value;
defparam user_instance_name.INIT_08 = 256_bit_hex_value;
defparam user_instance_name.INIT_09 = 256_bit_hex_value;
defparam user_instance_name.INIT_0A = 256_bit_hex_value;
defparam user_instance_name.INIT_0B = 256_bit_hex_value;
defparam user_instance_name.INIT_0C = 256_bit_hex_value;
defparam user_instance_name.INIT_0D = 256_bit_hex_value;
defparam user_instance_name.INIT_0E = 256_bit_hex_value;
defparam user_instance_name.INIT_0F = 256_bit_hex_value;
defparam user_instance_name.INIT_10 = 256_bit_hex_value;
defparam user_instance_name.INIT_11 = 256_bit_hex_value;
defparam user_instance_name.INIT_12 = 256_bit_hex_value;
defparam user_instance_name.INIT_13 = 256_bit_hex_value;
defparam user_instance_name.INIT_14 = 256_bit_hex_value;
defparam user_instance_name.INIT_15 = 256_bit_hex_value;
defparam user_instance_name.INIT_16 = 256_bit_hex_value;

```



```
defparam user_instance_name.INIT_17 = 256_bit_hex_value;
defparam user_instance_name.INIT_18 = 256_bit_hex_value;
defparam user_instance_name.INIT_19 = 256_bit_hex_value;
defparam user_instance_name.INIT_1A = 256_bit_hex_value;
defparam user_instance_name.INIT_1B = 256_bit_hex_value;
defparam user_instance_name.INIT_1C = 256_bit_hex_value;
defparam user_instance_name.INIT_1D = 256_bit_hex_value;
defparam user_instance_name.INIT_1E = 256_bit_hex_value;
defparam user_instance_name.INIT_1F = 256_bit_hex_value;
defparam user_instance_name.INIT_20 = 256_bit_hex_value;
defparam user_instance_name.INIT_21 = 256_bit_hex_value;
defparam user_instance_name.INIT_22 = 256_bit_hex_value;
defparam user_instance_name.INIT_23 = 256_bit_hex_value;
defparam user_instance_name.INIT_24 = 256_bit_hex_value;
defparam user_instance_name.INIT_25 = 256_bit_hex_value;
defparam user_instance_name.INIT_26 = 256_bit_hex_value;
defparam user_instance_name.INIT_27 = 256_bit_hex_value;
defparam user_instance_name.INIT_28 = 256_bit_hex_value;
defparam user_instance_name.INIT_29 = 256_bit_hex_value;
defparam user_instance_name.INIT_2A = 256_bit_hex_value;
defparam user_instance_name.INIT_2B = 256_bit_hex_value;
defparam user_instance_name.INIT_2C = 256_bit_hex_value;
defparam user_instance_name.INIT_2D = 256_bit_hex_value;
defparam user_instance_name.INIT_2E = 256_bit_hex_value;
defparam user_instance_name.INIT_2F = 256_bit_hex_value;
defparam user_instance_name.INIT_30 = 256_bit_hex_value;
defparam user_instance_name.INIT_31 = 256_bit_hex_value;
defparam user_instance_name.INIT_32 = 256_bit_hex_value;
defparam user_instance_name.INIT_33 = 256_bit_hex_value;
defparam user_instance_name.INIT_34 = 256_bit_hex_value;
defparam user_instance_name.INIT_35 = 256_bit_hex_value;
defparam user_instance_name.INIT_36 = 256_bit_hex_value;
defparam user_instance_name.INIT_37 = 256_bit_hex_value;
defparam user_instance_name.INIT_38 = 256_bit_hex_value;
defparam user_instance_name.INIT_39 = 256_bit_hex_value;
defparam user_instance_name.INIT_3A = 256_bit_hex_value;
defparam user_instance_name.INIT_3B = 256_bit_hex_value;
defparam user_instance_name.INIT_3C = 256_bit_hex_value;
defparam user_instance_name.INIT_3D = 256_bit_hex_value;
defparam user_instance_name.INIT_3E = 256_bit_hex_value;
defparam user_instance_name.INIT_3F = 256_bit_hex_value;
defparam user_instance_name.INIT_A = bit_value;
defparam user_instance_name.INIT_B = bit_value;
defparam user_instance_name.INITP_00 = 256_bit_hex_value;
defparam user_instance_name.INITP_01 = 256_bit_hex_value;
defparam user_instance_name.INITP_02 = 256_bit_hex_value;
defparam user_instance_name.INITP_03 = 256_bit_hex_value;
defparam user_instance_name.INITP_04 = 256_bit_hex_value;
defparam user_instance_name.INITP_05 = 256_bit_hex_value;
defparam user_instance_name.INITP_06 = 256_bit_hex_value;
defparam user_instance_name.INITP_07 = 256_bit_hex_value;
defparam user_instance_name.SRVAL_A = bit_value;
defparam user_instance_name.SRVAL_B = bit_value;
defparam user_instance_name.WRITE_MODE_A = string_value;
defparam user_instance_name.WRITE_MODE_B = string_value;
```

## Commonly Used Constraints

INIT

INIT\_xx

INIT\_A

INIT\_B

INTP\_xx

SRVAL\_A

SRVAL\_B

WRITE\_MODE\_A

WRITE\_MODE\_B

## ROC

### Reset On Configuration

#### Architectures Supported

ROC	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

The ROC is a component used for VHDL simulation of FPGA designs. This component should not be used for Verilog or schematic entry. The ROC's function is to mimic the function of the internal reset signal during the FPGA configuration process. In order to use ROC, it must be connected to the reset/preset signal for all inferred and instantiated registers in the design. During synthesis and implementation, this reset signal will use the dedicated global set/reset network and will not use local routing resources. During simulation, ROC will emit a one-shot pulse for the amount of time specified by the WIDTH generic (default is 100 ns). This one-shot pulse is intended to reset all registers so that at the beginning of operation, all registers are at a known value as would happen in the real silicon during configuration of the device.

For more information, see the *Xilinx Synthesis and Verification Design Guide*.

Port O will be high at simulation time 0 for the amount of time specified by the WIDTH generic attribute. After that time, it will be 0. This will not affect implementation in any way.

#### VHDL Instantiation Code

```
component ROC
-- synthesis translate_off
  generic (WIDTH : Time := 100 ns);
-- synthesis translate_on
  port (O : out std_ulogic := '1');
end component;
```

#### Commonly Used Constraints

For simulation, the WIDTH generic can be modified to change the amount of time the one-shot pulse is applied for.

There are no supported constraints for this component for implementation.



## ROCBUF

### Reset On Configuration Buffer

#### Architectures Supported

ROCBUF	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

The ROCBUF is a component used for VHDL simulation of FPGA designs that is similar to the ROC component except that it contains an input for controlling the global set/reset function rather than a one-shot. This component should not be used for Verilog or schematic entry. The ROCBUF's function allows user control of the function of the global set/reset signal as done during the FPGA configuration process. In order to use the ROCBUF, the input should be connected to a top-level port in the design and the output must be connected to the reset/preset signal for all inferred and instantiated registers in the design.

During simulation, the input to the ROCBUF can be toggled by the testbench in order to activate the global set/reset signal in the design. This should be done at the beginning of the simulation as is done in the real silicon after configuration to get the design in a known state. The signal may also be pulsed during simulation to simulate a reconfiguration (ProG pin high) of the device. During synthesis and implementation, this reset signal will use the dedicated global set/reset network and will not use local routing resources. The port connected to this component will be optimized out of the design and not use any pin resources.

If you want to have the port implemented in the design, a `STARTBUF_architecture` should be used. In order to replace this port during back-end simulation the `-gp` switch should be used when invoking the netgen. If using the ISE GUI, use the "Bring Out Global Set/Reset Net as a Port" option in the Simulation Model Properties window.

For more information, see the *Xilinx Synthesis and Verification Design Guide*.

The value at port O will always be the value at port I (it is a buffer).

#### VHDL Instantiation Code

```
component ROCBUF
  port( I : in  std_ulogic;
        O : out std_ulogic);
end component;
```

## Commonly Used Constraints


None

## ROM16X1

### 16-Deep by 1-Wide ROM

#### Architectures Supported

ROM16X1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

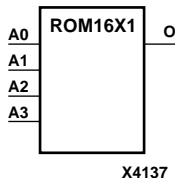

ROM16X1 is a 16-word by 1-bit read-only memory. The data output (O) reflects the word selected by the 4-bit address (A3 – A0). The ROM is initialized to a known value during configuration with the `INIT=value` parameter. The value consists of four hexadecimal digits that are written into the ROM from the most-significant digit A=FH to the least-significant digit A=0H. For example, the `INIT=10A7` parameter produces the data stream:

```
0001 0000 1010 0111
```

An error occurs if the `INIT=value` is not specified. See the appropriate CAE tool interface user guide for details.

#### Usage

For HDL, the ROM16X1 design element should be instantiated rather than inferred.

#### VHDL Instantiation Template

```
-- Component Declaration for ROM16X1 should be placed
-- after architecture statement but before begin keyword
```

```
component ROM16X1
  -- synthesis translate_off
  generic (INIT : bit_vector := X"16");
  -- synthesis translate_on
  port (O : out STD_ULOGIC;
        A0 : in STD_ULOGIC;
        A1 : in STD_ULOGIC;
        A2 : in STD_ULOGIC;
        A3 : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for ROM16X1
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for ROM16X1 should be placed  
-- in architecture after the begin keyword
```



```
ROM16X1_INSTANCE_NAME : ROM16X1
-- synthesis translate_off
generic map (INIT => hex_value)
-- synthesis translate_on
port map (O => user_O,
          A0 => user_A0,
          A1 => user_A1,
          A2 => user_A2,
          A3 => user_A3);
```

## Verilog Instantiation Template

```
ROM16X1 instance_name (.O (user_O),
                      .A0 (user_A0),
                      .A1 (user_A1),
                      .A2 (user_A2),
                      .A3 (user_A3));

defparam user_instance_name.INIT = hex_value;
```

## Commonly Used Constraints

BLKNM  
HBLKNM  
HU\_SET  
INIT  
LOC  
RLOC  
ROM\_EXTRACT  
U\_SET  
XBLKNM




## ROM32X1

### 32-Deep by 1-Wide ROM

#### Architectures Supported

ROM32X1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

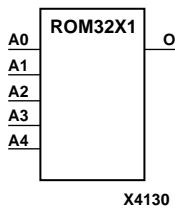

ROM32X1 is a 32-word by 1-bit read-only memory. The data output (O) reflects the word selected by the 5-bit address (A4 – A0). The ROM is initialized to a known value during configuration with the `INIT=value` parameter. The value consists of eight hexadecimal digits that are written into the ROM from the most-significant digit `A=1FH` to the least-significant digit `A=00H`. For example, the `INIT=10A78F39` parameter produces the data stream:

```
0001 0000 1010 0111 1000 1111 0011 1001
```

An error occurs if the `INIT=value` is not specified. See the appropriate CAE tool interface user guide for details.

#### Usage

For HDL, the ROM32X1 design element should be instantiated rather than inferred.

#### VHDL Instantiation Template

```
-- Component Declaration for ROM32X1 should be placed
-- after architecture statement but before begin keyword
```

```
component ROM32X1
-- synthesis translate_off
generic (INIT : bit_vector := X"32");
-- synthesis translate_on
port (O : out STD_ULOGIC;
      A0 : in STD_ULOGIC;
      A1 : in STD_ULOGIC;
      A2 : in STD_ULOGIC;
      A3 : in STD_ULOGIC;
      A4 : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for ROM32X1
-- should be placed after architecture declaration but
-- before the begin keyword
```

-- Enter attributes here

-- Component Instantiation for ROM32X1 should be placed  
-- in architecture after the begin keyword

```
ROM32X1_INSTANCE_NAME : ROM32X1
-- synthesis translate_off
generic map (INIT => hex_value)
-- synthesis translate_on
port map (O => user_O,
          A0 => user_A0,
          A1 => user_A1,
          A2 => user_A2,
          A3 => user_A3,
          A4 => user_A4);
```

## Verilog Instantiation Template

```
ROM32X1 instance_name (.O (user_O),
                       .A0 (user_A0),
                       .A1 (user_A1),
                       .A2 (user_A2),
                       .A3 (user_A3),
                       .A4 (user_A4));

defparam user_instance_name.INIT = hex_value;
```

## Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

INIT

LOC

RLOC

ROM\_EXTRACT

U\_SET

XBLKNM




## ROM64X1

### 64-Deep by 1-Wide ROM

#### Architectures Supported

ROM64X1	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

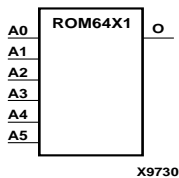

ROM64X1 is a 64-word by 1-bit read-only memory. The data output (O) reflects the word selected by the 6-bit address (A5 – A0). The ROM is initialized to a known value during configuration with the `INIT=value` parameter. The value consists of 16 hexadecimal digits that are written into the ROM from the most-significant digit A=FH to the least-significant digit A=0H.

An error occurs if the `INIT=value` is not specified. See the appropriate CAE tool interface user guide for details.

#### Usage

For HDL, the ROM64X1 design element should be instantiated rather than inferred.

#### VHDL Instantiation Template

```
-- Component Declaration for ROM64X1 should be placed
-- after architecture statement but before begin keyword
```

```
component ROM64X1
  -- synthesis translate_off
  generic (INIT : bit_vector := X"64");
  -- synthesis translate_on
  port (O : out STD_ULOGIC;
        A0 : in STD_ULOGIC;
        A1 : in STD_ULOGIC;
        A2 : in STD_ULOGIC;
        A3 : in STD_ULOGIC;
        A4 : in STD_ULOGIC;
        A5 : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for ROM64X1
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here
```

```
-- Component Instantiation for ROM64X1 should be placed
-- in architecture after the begin keyword
```

```
ROM64X1_INSTANCE_NAME : ROM64X1
  -- synthesis translate_off
  generic map (INIT => hex_value)
  -- synthesis translate_on
  port map (O => user_O,
            A0 => user_A0,
            A1 => user_A1,
            A2 => user_A2,
            A3 => user_A3,
            A4 => user_A4,
            A5 => user_A5);
```

### Verilog Instantiation Template

```
ROM64X1 instance_name (.O (user_O),
                      .A0 (user_A0),
                      .A1 (user_A1),
                      .A2 (user_A2),
                      .A3 (user_A3),
                      .A4 (user_A4),
                      .A5 (user_A5));
```

```
defparam user_instance_name.INIT = hex_value;
```

### Commonly Used Constraints

BLKNM

HBLKNM

HU\_SET

INIT

LOC

RLOC

ROM\_EXTRACT

U\_SET

XBLKNM








## ROM128X1

### 128-Deep by 1-Wide ROM

#### Architectures Supported

ROM128X1	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

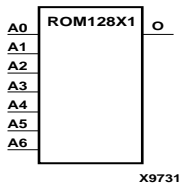

ROM128X1 is a 128-word by 1-bit read-only memory. The data output (O) reflects the word selected by the 7-bit address (A6 – A0). The ROM is initialized to a known value during configuration with the `INIT=value` parameter. The value consists of 32 hexadecimal digits that are written into the ROM from the most-significant digit A=FH to the least-significant digit A=0H.

An error occurs if the `INIT=value` is not specified. See the appropriate CAE tool interface user guide for details.

#### Usage

For HDL, the ROM128X1 design element should be instantiated rather than inferred.

#### VHDL Instantiation Template

```
-- Component Declaration for ROM128X1 should be placed
-- after architecture statement but before begin keyword
```

```
component ROM128X1
  -- synthesis translate_off
  generic (INIT : bit_vector := X"128");
  -- synthesis translate_on
  port (O : out STD_ULOGIC;
        A0 : in STD_ULOGIC;
        A1 : in STD_ULOGIC;
        A2 : in STD_ULOGIC;
        A3 : in STD_ULOGIC;
        A4 : in STD_ULOGIC;
        A5 : in STD_ULOGIC;
        A6 : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for ROM128X1
-- should be placed after architecture declaration but
-- before the begin keyword
```

-- Enter attributes here

-- Component Instantiation for ROM128X1 should be placed  
-- in architecture after the begin keyword

```
ROM128X1_INSTANCE_NAME : ROM128X1
-- synthesis translate_off
generic map (INIT => hex_value)
-- synthesis translate_on
port map (O => user_O,
          A0 => user_A0,
          A1 => user_A1,
          A2 => user_A2,
          A3 => user_A3,
          A4 => user_A4,
          A5 => user_A5,
          A6 => user_A6);
```

## Verilog Instantiation Template

```
ROM128X1 instance_name (.O (user_O),
                       .A0 (user_A0),
                       .A1 (user_A1),
                       .A2 (user_A2),
                       .A3 (user_A3),
                       .A4 (user_A4),
                       .A5 (user_A5),
                       .A6 (user_A6));

defparam user_instance_name.INIT = hex_value;
```

## Commonly Used Constraints

BLKNM  
HBLKNM  
HU\_SET  
INIT  
LOC  
RLOC  
ROM\_EXTRACT  
U\_SET  
XBLKNM




## ROM256X1

### 256-Deep by 1-Wide ROM

#### Architectures Supported

ROM256X1	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

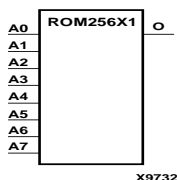

ROM256X1 is a 256-word by 1-bit read-only memory. The data output (O) reflects the word selected by the 8-bit address (A7– A0). The ROM is initialized to a known value during configuration with the `INIT=value` parameter. The value consists of 64 hexadecimal digits that are written into the ROM from the most-significant digit A=FH to the least-significant digit A=0H.

An error occurs if the `INIT=value` is not specified. See the appropriate CAE tool interface user guide for details.

#### Usage

For HDL, the ROM256X1 design element should be instantiated rather than inferred.

#### VHDL Instantiation Template

```
-- Component Declaration for ROM256X1 should be placed
-- after architecture statement but before begin keyword
```

```
component ROM256X1
    -- synthesis translate_off
    generic (INIT : bit_vector := X"256");
    -- synthesis translate_on
port (O : out STD_ULOGIC;
      A0 : in STD_ULOGIC;
      A1 : in STD_ULOGIC;
      A2 : in STD_ULOGIC;
      A3 : in STD_ULOGIC;
      A4 : in STD_ULOGIC;
      A5 : in STD_ULOGIC;
      A6 : in STD_ULOGIC;
      A7 : in STD_ULOGIC);
end component;
```

```
-- Component Attribute specification for ROM256X1
-- should be placed after architecture declaration but
-- before the begin keyword
```

```
-- Enter attributes here

-- Component Instantiation for ROM256X1 should be placed
-- in architecture after the begin keyword

ROM256X1_INSTANCE_NAME : ROM256X1
  -- synthesis translate_off
  generic map (INIT => hex_value)
  -- synthesis translate_on
  port map (O=> user_O,
            A0 => user_A0,
            A1 => user_A1,
            A2 => user_A2,
            A3 => user_A3,
            A4 => user_A4,
            A5 => user_A5,
            A6 => user_A6,
            A7 => user_A7);
```

## Verilog Instantiation Template

```
ROM256X1 instance_name (.O (user_O),
                        .A0 (user_A0),
                        .A1 (user_A1),
                        .A2 (user_A2),
                        .A3 (user_A3),
                        .A4 (user_A4),
                        .A5 (user_A5),
                        .A6 (user_A6),
                        .A7 (user_A7));

defparam user_instance_name.INIT = hex_value;
```

## Commonly Used Constraints

BLKNM  
HBLKNM  
HU\_SET  
INIT  
LOC  
RLOC  
ROM\_EXTRACT  
U\_SET  
XBLKNM








## SOP3-4

### Sum of Products

#### Architectures Supported


SOP3, SOP3B1A, SOP3B1B, SOP3B2A, SOP3B2B, SOP3B3 SOP4, SOP4B1, SOP4B2A, SOP4B2B, SOP4B3, SOP4B4	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

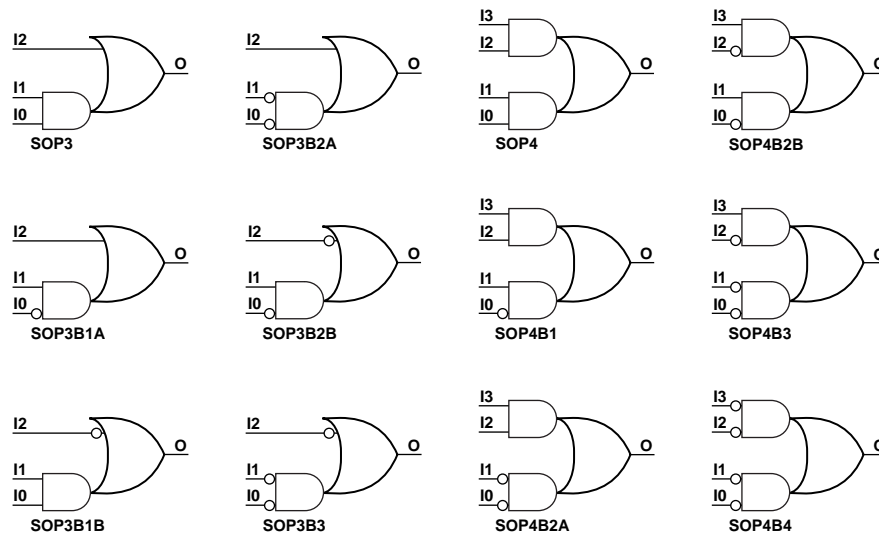

X9421


#### SOP Gate Representations

Sum Of Products (SOP) macros provide common logic functions by OR gating the outputs of two AND functions or the output of one AND function with one direct input. Variations of inverting and non-inverting inputs are available.




X8111

SOP3 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X

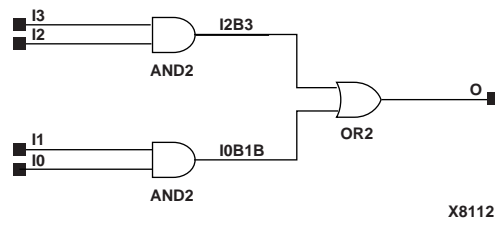

**SOP4 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIE, Virtex, Virtex-E**

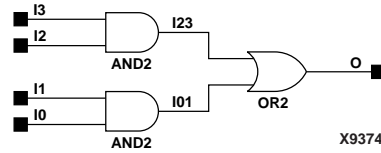




**SOP4 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

## SR4CE, SR8CE, SR16CE

### 4-, 8-, 16-Bit Serial-In Parallel-Out Shift Registers with Clock Enable and Asynchronous Clear

#### Architectures Supported

SR4CE, SR8CE, SR16CE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

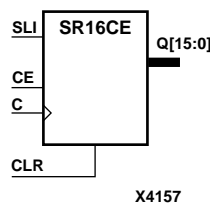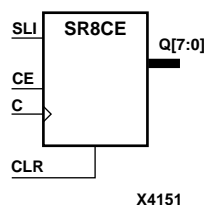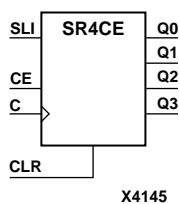

SR4CE, SR8CE, and SR16CE are 4-, 8-, and 16-bit shift registers, respectively, with a shift-left serial input (SLI), parallel outputs (Q), and clock enable (CE) and asynchronous clear (CLR) inputs. The CLR input, when High, overrides all other inputs and resets the data outputs (Q) Low. When CE is High and CLR is Low, the data on the SLI input is loaded into the first bit of the shift register during the Low-to-High clock (C) transition and appears on the Q0 output. During subsequent Low-to-High clock transitions, when CE is High and CLR is Low, data is shifted to the next highest bit position as new data is loaded into Q0 (SLI→Q0, Q0→Q1, Q1→Q2, and so forth). The register ignores clock transitions when CE is Low.

Registers can be cascaded by connecting the last Q output (Q3 for SR4CE, Q7 for SR8CE, or Q15 for SR16CE) of one stage to the SLI input of the next stage and connecting clock, CE, and CLR in parallel.

The register is asynchronously cleared, outputs Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs				Outputs	
CLR	CE	SLI	C	Q0	Qz – Q1
1	X	X	X	0	0
0	0	X	X	No Chg	No Chg
0	1	1	↑	1	qn-1

Inputs				Outputs	
CLR	CE	SLI	C	Q0	Qz – Q1
0	1	0	↑	0	qn-1

z = 3 for SR4CE; z = 7 for SR8CE; z = 15 for SR16CE

qn-1 = state of referenced output one setup time prior to active clock transition

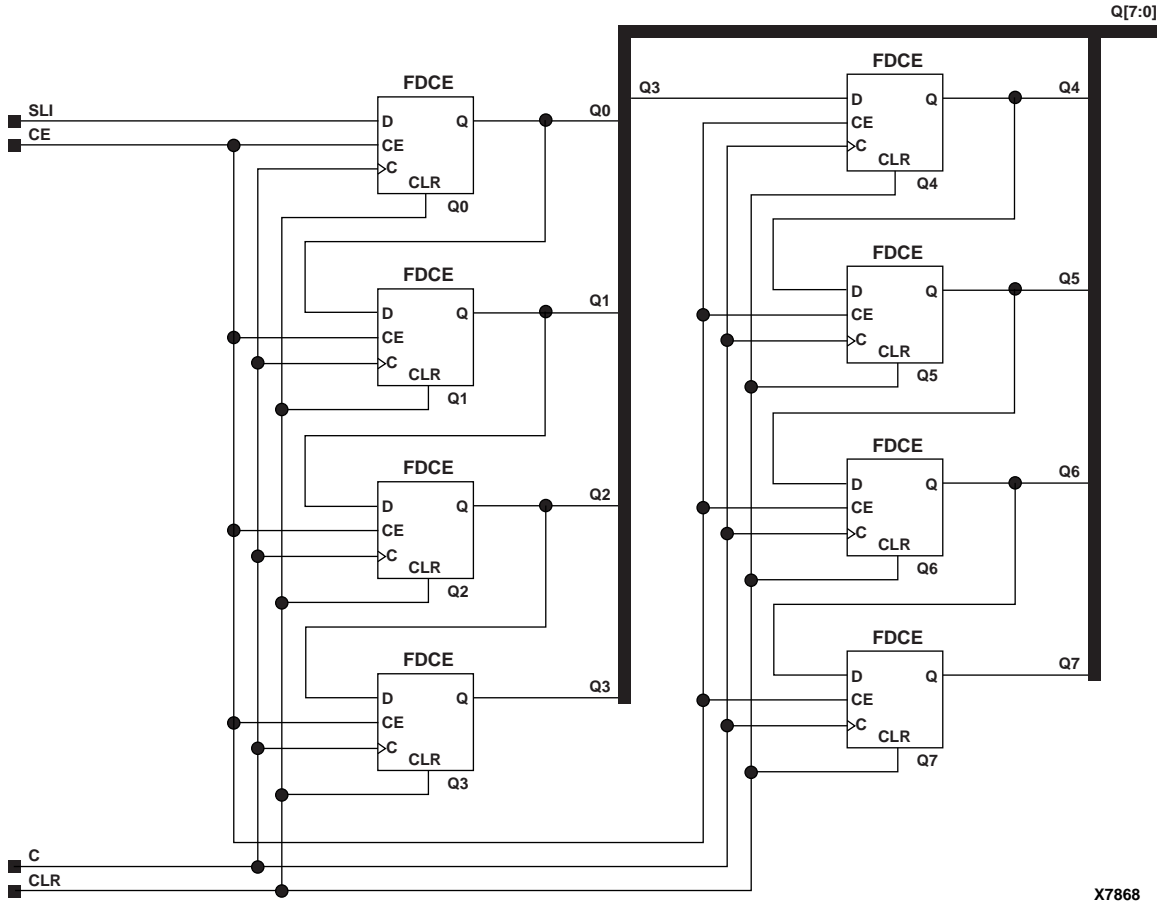

X7868

SR8CE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIe, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X

### Usage

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of sr4ce is
signal Q_INT: std_logic_vector(WIDTH-1 downto 0);
begin

process(C, CLR)
begin
  if (CLR='1') then
    Q_INT <= (others => '0');
  elsif (C'event and C='1') then
    if (CE='1') then
      Q_INT <= Q_INT(WIDTH-2 downto 0) & SLI;
    end if;
  end if;
end process;

Q <= Q_INT;

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or posedge CLR)
begin
  if (CLR)
    Q <= 0;
  else if (CE)
    Q <= {Q[WIDTH-2:0],SLI};
end
```






## SR4CLE, SR8CLE, SR16CLE


### 4-, 8-, 16-Bit Loadable Serial/Parallel-In Parallel-Out Shift Registers with Clock Enable and Asynchronous Clear

#### Architectures Supported

SR4CLE, SR8CLE, SR16CLE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

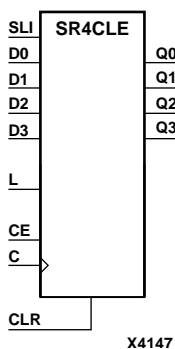

SR4CLE, SR8CLE, and SR16CLE are 4-, 8-, and 16-bit shift registers, respectively, with a shift-left serial input (SLI), parallel inputs (D), parallel outputs (Q), and three control inputs: clock enable (CE), load enable (L), and asynchronous clear (CLR). The register ignores clock transitions when L and CE are Low. The asynchronous CLR, when High, overrides all other inputs and resets the data outputs (Q) Low. When L is High and CLR is Low, data on the D<sub>n</sub> – D<sub>0</sub> inputs is loaded into the corresponding Q<sub>n</sub> – Q<sub>0</sub> bits of the register. When CE is High and L and CLR are Low, data on the SLI input is loaded into the first bit of the shift register during the Low-to-High clock (C) transition and appears on the Q<sub>0</sub> output. During subsequent clock transitions, when CE is High and L and CLR are Low, the data is shifted to the next highest bit position as new data is loaded into Q<sub>0</sub> (SLI→Q<sub>0</sub>, Q<sub>0</sub>→Q<sub>1</sub>, Q<sub>1</sub>→Q<sub>2</sub>, and so forth).

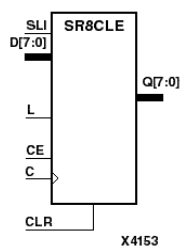


Registers can be cascaded by connecting the last Q output (Q<sub>3</sub> for SR4CLE, Q<sub>7</sub> for SR8CLE, or Q<sub>15</sub> for SR16CLE) of one stage to the SLI input of the next stage and connecting clock, CE, L, and CLR inputs in parallel.

The register is asynchronously cleared, outputs Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

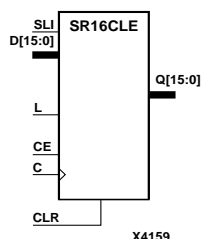


Inputs						Outputs	
CLR	L	CE	SLI	D <sub>n</sub> – D <sub>0</sub>	C	Q <sub>0</sub>	Q <sub>z</sub> – Q <sub>1</sub>
1	X	X	X	X	X	0	0
0	1	X	X	D <sub>n</sub> – D <sub>0</sub>	↑	D <sub>0</sub>	D <sub>n</sub>
0	0	1	SLI	X	↑	SLI	qn-1

Inputs						Outputs	
CLR	L	CE	SLI	Dn – D0	C	Q0	Qz – Q1
0	0	0	X	X	X	No Chg	No Chg

z = 3 for SR4CLE; z = 7 for SR8CLE; z = 15 for SR16CLE

qn-1 = state of referenced output one setup time prior to active clock transition

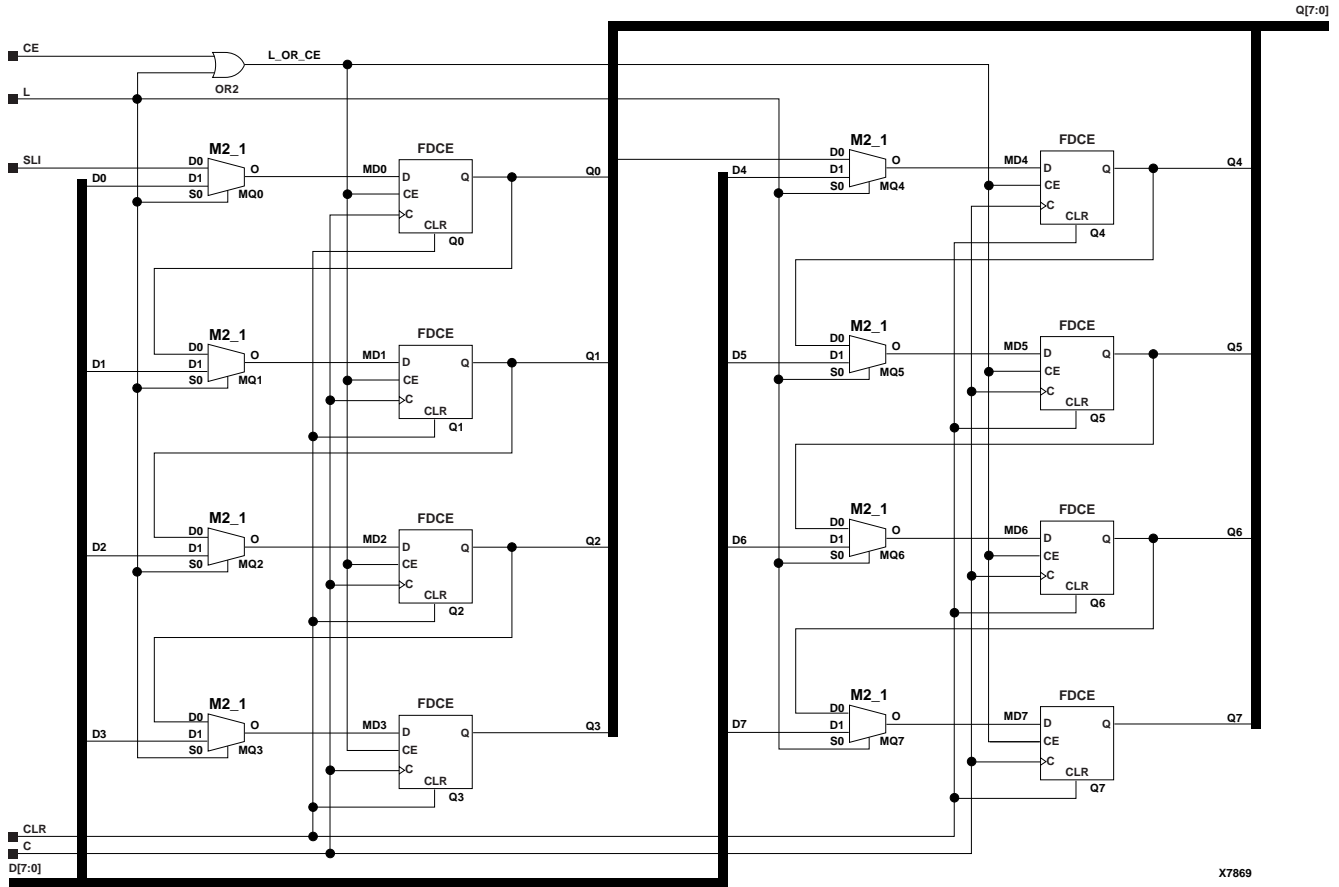

SR8CLE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIe, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X

### Usage

For HDL, this design element is inferred rather than instantiated.

### VHDL Inference Code

```

architecture Behavioral of sr4cle is
    signal Q_INT: std_logic_vector(WIDTH-1 downto 0);
begin

    process(C, CLR)
    begin
        if (CLR='1') then
            Q_INT <= (others => '0');
        elsif (C'event and C='1') then
    
```

```
    if (CE='1') then
    if (L='1') then
        Q_INT <= D;
    else
        Q_INT <= Q_INT(WIDTH-2 downto 0) & SLI;
    end if;
    end if;
    end if;
end process;

Q <= Q_INT;

end Behavioral;
```

### Verilog Inference Code

```
always @ (posedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else if (CE)
        if (L)
            Q <= D;
        else
            Q <= {Q[WIDTH-2:0],SLI};
    end
end
```






## SR4CLED, SR8CLED, SR16CLED

### 4-, 8-, 16-Bit Shift Registers with Clock Enable and Asynchronous Clear

#### Architectures Supported

SR4CLED, SR8CLED, SR16CLED	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

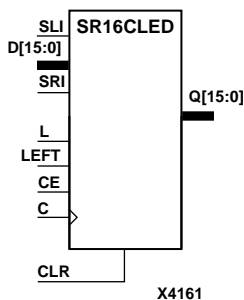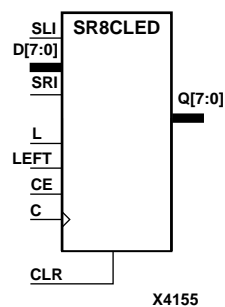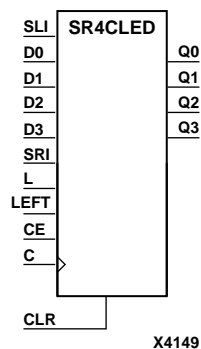

SR4CLED, SR8CLED, and SR16CLED are 4-, 8-, and 16-bit shift registers, respectively, with shift-left (SLI) and shift-right (SRI) serial inputs, parallel inputs (D), parallel outputs (Q), and four control inputs: clock enable (CE), load enable (L), shift left/right (LEFT), and asynchronous clear (CLR). The register ignores clock transitions when CE and L are Low. The asynchronous clear, when High, overrides all other inputs and resets the data outputs (Qn) Low. When L is High and CLR is Low, the data on the D inputs is loaded into the corresponding Q bits of the register. When CE is High and L and CLR are Low, data is shifted right or left, depending on the state of the LEFT input. If LEFT is High, data on the SLI is loaded into Q0 during the Low-to-High clock transition and shifted left (to Q1, Q2, and so forth) during subsequent clock transitions. If LEFT is Low, data on the SRI is loaded into the last Q output (Q3 for SR4CLED, Q7 for SR8CLED, or Q15 for SR16CLED) during the Low-to-High clock transition and shifted right (to Q2, Q1,... for SR4CLED; to Q6, Q5,... for SR8CLED; and to Q14, Q13,... for SR16CLED) during subsequent clock transitions. The truth tables for SR4CLED, SR8CLED, and SR16CLED indicate the state of the Q outputs under all input conditions for SR4CLED, SR8CLED, and SR16CLED.

The register is asynchronously cleared, outputs Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

#### SR4CLED Truth Table

Inputs								Outputs		
CLR	L	CE	LEFT	SLI	SRI	D3 – D0	C	Q0	Q3	Q2 – Q1
1	X	X	X	X	X	X	X	0	0	0
0	1	X	X	X	X	D3– D0	↑	D0	D3	Dn

**SR4CLED Truth Table**

Inputs								Outputs		
CLR	L	CE	LEFT	SLI	SRI	D3 – D0	C	Q0	Q3	Q2 – Q1
0	0	0	X	X	X	X	X	No Chg	No Chg	No Chg
0	0	1	1	SLI	X	X	↑	SLI	q2	qn-1
0	0	1	0	X	SRI	X	↑	q1	SRI	qn+1

qn-1 and qn+1 = state of referenced output one setup time prior to active clock transition

**SR8CLED Truth Table**


Inputs								Outputs		
CLR	L	CE	LEFT	SLI	SRI	D7 – D0	C	Q0	Q7	Q6 – Q1
1	X	X	X	X	X	X	X	0	0	0
0	1	X	X	X	X	D7 – D0	↑	D0	D7	Dn
0	0	0	X	X	X	X	X	No Chg	No Chg	No Chg
0	0	1	1	SLI	X	X	↑	SLI	q6	qn-1
0	0	1	0	X	SRI	X	↑	q1	SRI	qn+1

qn-1 or qn+1 = state of referenced output one setup time prior to active clock transition

**SR16CLED Truth Table**


Inputs								Outputs		
CLR	L	CE	LEFT	SLI	SRI	D15 – D0	C	Q0	Q15	Q14 – Q1
1	X	X	X	X	X	X	X	0	0	0
0	1	X	X	X	X	D15 – D0	↑	D0	D15	Dn
0	0	0	X	X	X	X	X	No Chg	No Chg	No Chg
0	0	1	1	SLI	X	X	↑	SLI	q14	qn-1
0	0	1	0	X	SRI	X	↑	q1	SRI	qn+1

qn-1 or qn+1 = state of referenced output one setup time prior to active clock transition

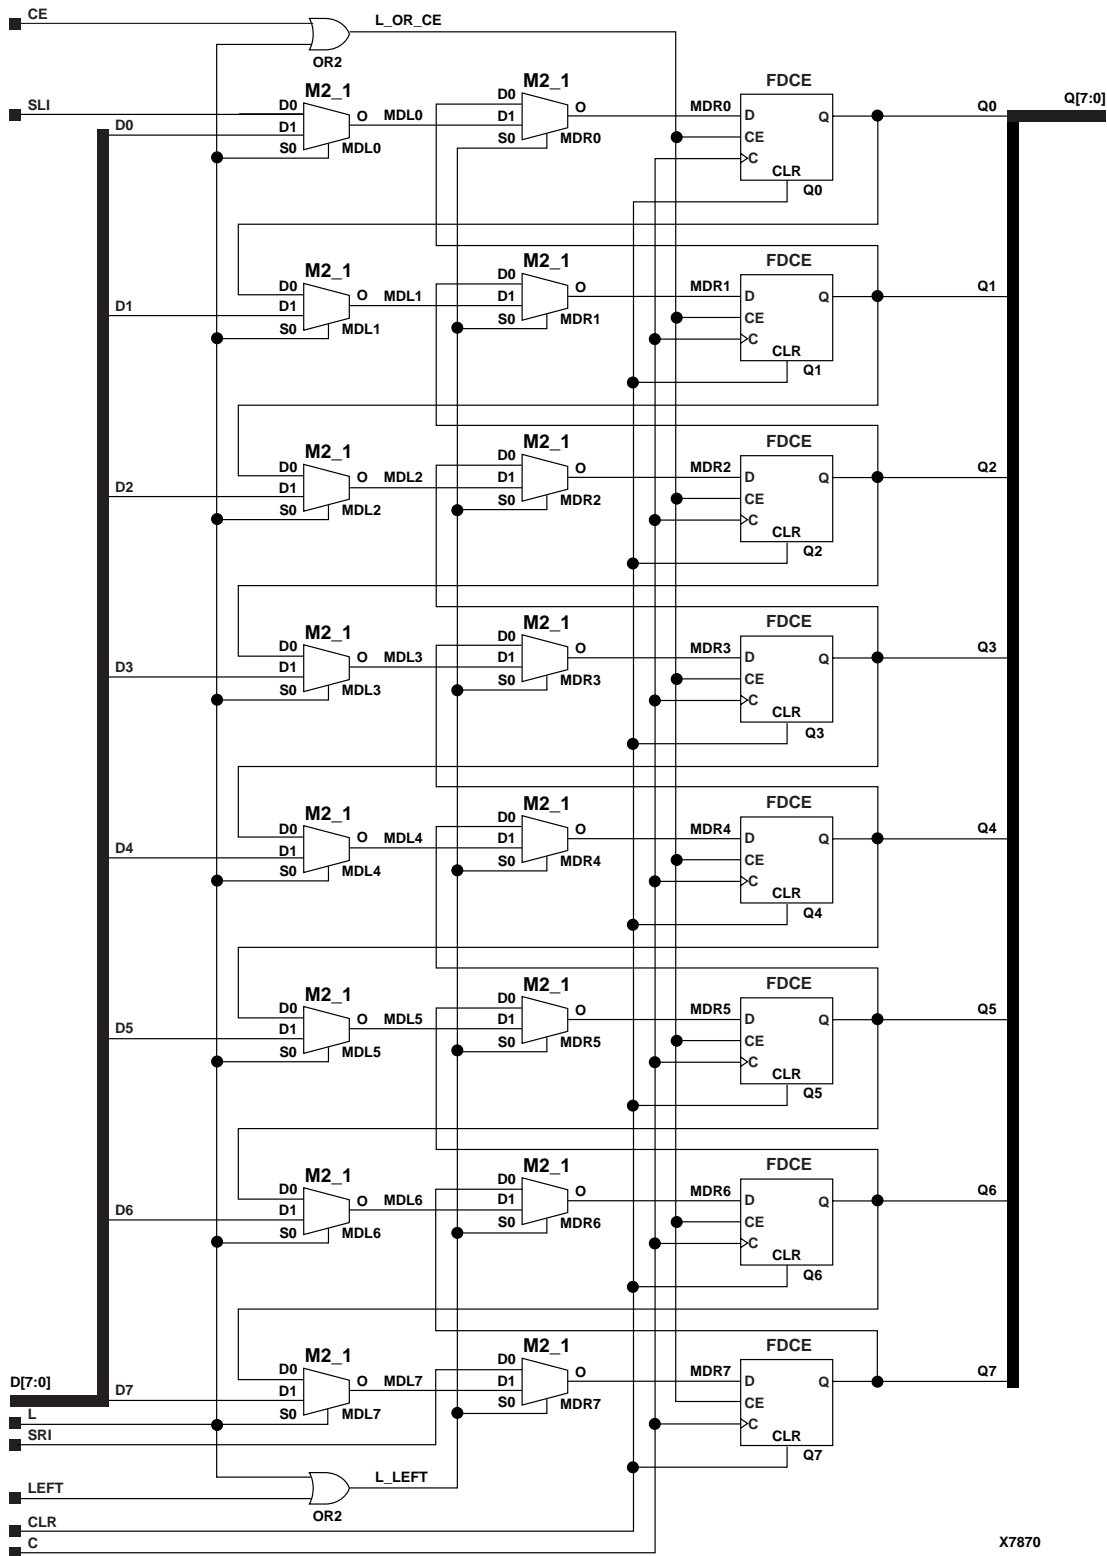

SR8CLED Implementation Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E,

Virtex-II, Virtex-II Pro, Virtex-II Pro X

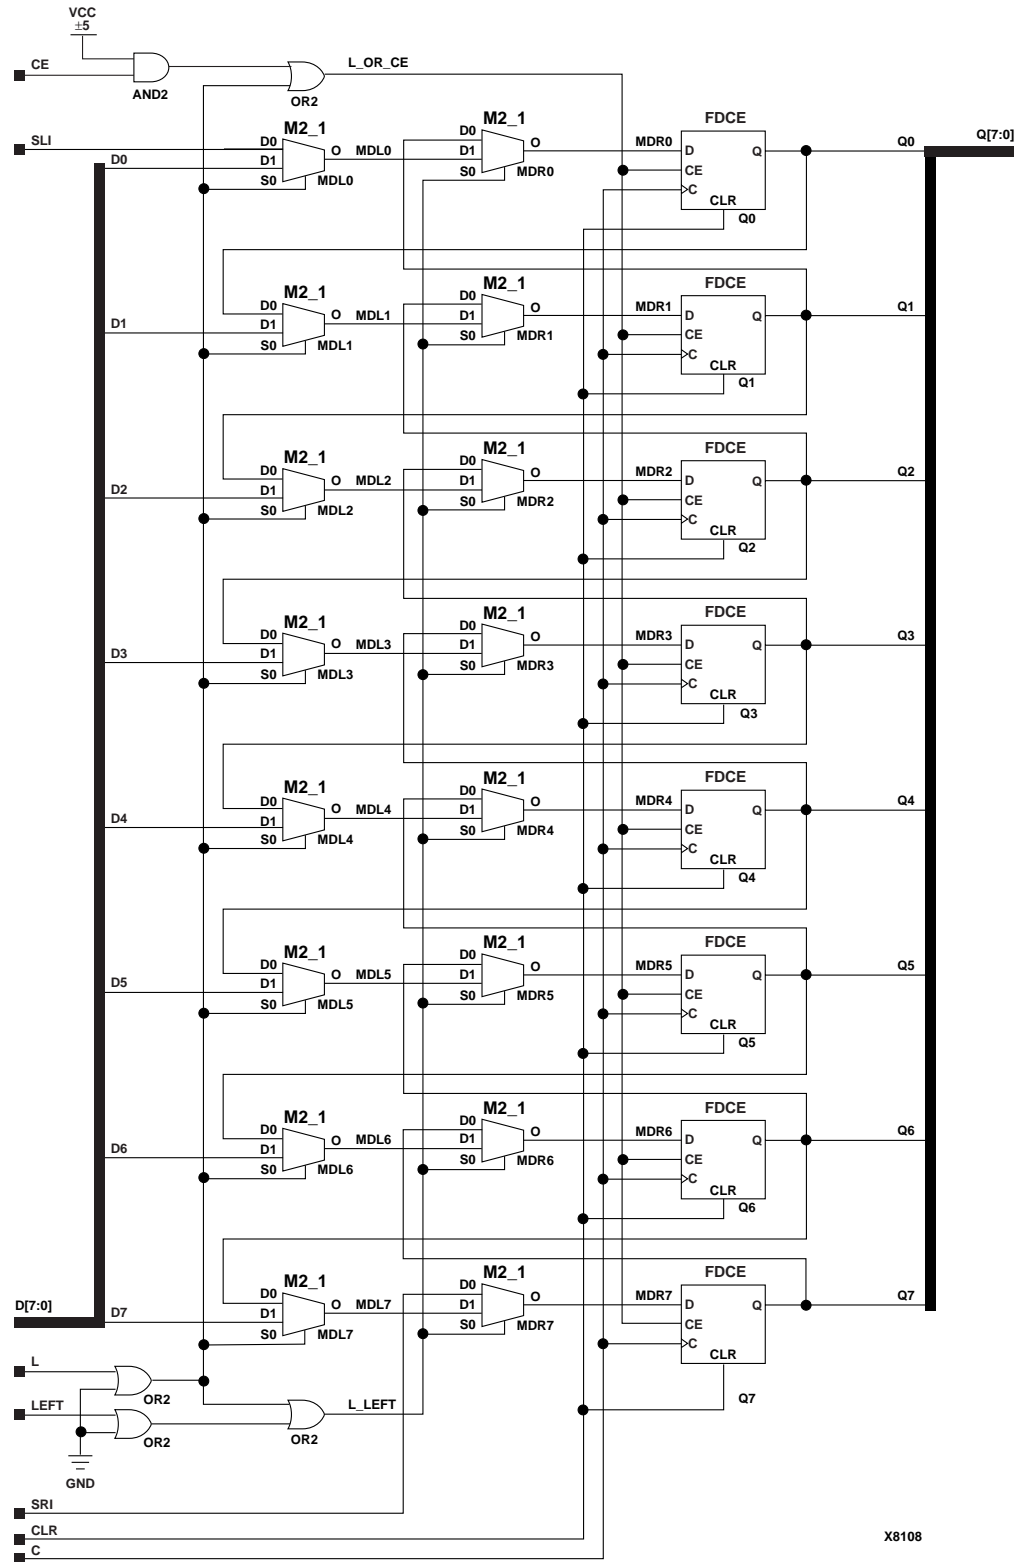

SR8CLED Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II



## Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of sr4cled is
signal Q_INT: std_logic_vector(WIDTH-1 downto 0);
begin

process(C, CLR)
begin
  if (CLR='1') then
    Q_INT <= (others => '0');
  elsif (C'event and C='1') then
    if (CE='1') then
      if (L='1') then
        Q_INT <= D;
      else
        if (LEFT='1') then
          Q_INT <= Q_INT(WIDTH-2 downto 0) & SLI;
        else
          Q_INT <= SRI & Q_INT(WIDTH-1 downto 1);
        end if;
      end if;
    end if;
  end if;
end process;

Q <= Q_INT;

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or posedge CLR)
begin
  if (CLR)
    Q <= 0;
  else if (CE)
    if (L)
      Q <= D;
    else if (LEFT)
      Q <= {Q[WIDTH-2:0],SLI};
    else
      Q <= {SRI, Q[WIDTH-1:1]};
  end
```






## SR4RE, SR8RE, SR16RE

### 4-, 8-, 16-Bit Serial-In Parallel-Out Shift Registers with Clock Enable and Synchronous Reset

#### Architectures Supported

SR4RE, SR8RE, SR16RE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

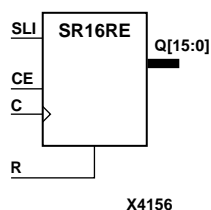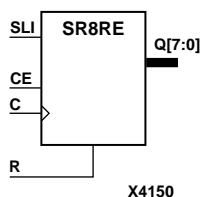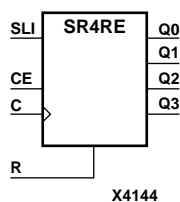

SR4RE, SR8RE, and SR16RE are 4-, 8-, and 16-bit shift registers, respectively, with shift-left serial input (SLI), parallel outputs (Q<sub>n</sub>), clock enable (CE), and synchronous reset (R) inputs. The R input, when High, overrides all other inputs during the Low-to-High clock (C) transition and resets the data outputs (Q) Low. When CE is High and R is Low, the data on the SLI is loaded into the first bit of the shift register during the Low-to-High clock (C) transition and appears on the Q<sub>0</sub> output. During subsequent Low-to-High clock transitions, when CE is High and R is Low, data is shifted to the next highest bit position as new data is loaded into Q<sub>0</sub> (SLI→Q<sub>0</sub>, Q<sub>0</sub>→Q<sub>1</sub>, Q<sub>1</sub>→Q<sub>2</sub>, and so forth). The register ignores clock transitions when CE is Low.

Registers can be cascaded by connecting the last Q output (Q<sub>3</sub> for SR4RE, Q<sub>7</sub> for SR8RE, or Q<sub>15</sub> for SR16RE) of one stage to the SLI input of the next stage and connecting clock, CE, and R in parallel.

The register is asynchronously cleared, outputs Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.


GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

Inputs				Outputs	
R	CE	SLI	C	Q0	Qz – Q1
1	X	X	↑	0	0
0	0	X	X	No Chg	No Chg
0	1	1	↑	1	qn-1

Inputs				Outputs	
R	CE	SLI	C	Q0	Qz – Q1
0	1	0	↑	0	qn-1

z = 3 for SR4RE; z = 7 for SR8RE; z = 15 for SR16RE

qn-1 = state of referenced output one setup time prior to active clock transition

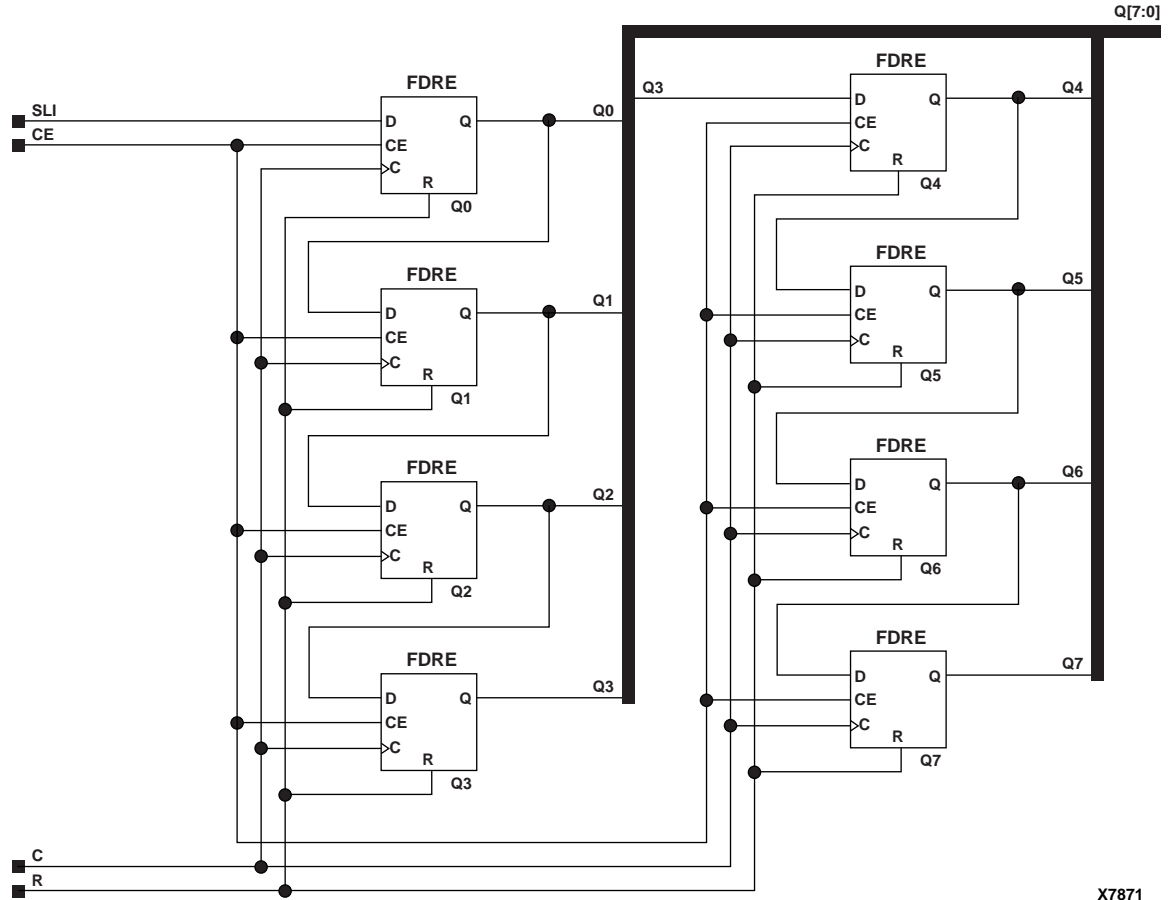

SR8RE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X

### Usage

For HDL, this design element is inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of sr4re is
signal Q_INT: std_logic_vector(WIDTH-1 downto 0);
begin

process(C)
begin
  if C'event and C='1' then
    if (R='1') then
      Q_INT <= (others => '0');
    elsif (CE='1') then
      Q_INT <= Q_INT(WIDTH-2 downto 0) & SLI;
    end if;
  end if;
end process;

Q <= Q_INT;

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C)
begin
  if (R)
    Q <= 0;
  else if (CE)
    Q <= {Q[WIDTH-2:0],SLI};
end
```




## SR4RLE, SR8RLE, SR16RLE


### 4-, 8-, 16-Bit Loadable Serial/Parallel-In Parallel-Out Shift Registers with Clock Enable and Synchronous Reset

#### Architectures Supported

SR4RLE, SR8RLE, SR16RLE	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

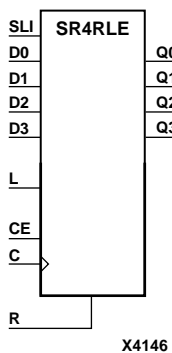

SR4RLE, SR8RLE, and SR16RLE are 4-, 8-, and 16-bit shift registers, respectively, with shift-left serial input (SLI), parallel inputs (D), parallel outputs (Q), and three control inputs: clock enable (CE), load enable (L), and synchronous reset (R). The register ignores clock transitions when L and CE are Low. The synchronous R, when High, overrides all other inputs during the Low-to-High clock (C) transition and resets the data outputs (Q) Low. When L is High and R is Low during the Low-to-High clock transition, data on the D inputs is loaded into the corresponding Q bits of the register. When CE is High and L and R are Low, data on the SLI input is loaded into the first bit of the shift register during the Low-to-High clock (C) transition and appears on the Q0 output. During subsequent clock transitions, when CE is High and L and R are Low, the data is shifted to the next highest bit position as new data is loaded into Q0 (SLI→Q0, Q0→Q1, Q1→Q2, and so forth).

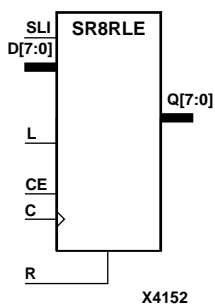


Registers can be cascaded by connecting the last Q output (Q3 for SR4RLE, Q7 for SR8RLE, or 15 for SR16RLE) of one stage to the SLI input of the next stage and connecting clock, CE, L, and R inputs in parallel.

The register is asynchronously cleared, outputs Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

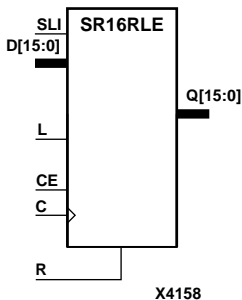


Inputs						Outputs	
R	L	CE	SLI	Dz – D0	C	Q0	Qz – Q1
1	X	X	X	X	↑	0	0
0	1	X	X	Dz – D0	↑	D0	Dn

Inputs						Outputs	
R	L	CE	SLI	Dz – D0	C	Q0	Qz – Q1
0	0	1	SLI	X	↑	SLI	qn-1
0	0	0	X	X	X	No Chg	No Chg

z = 3 for SR4RLE; z = 7 for SR8RLE; z = 15 for SR16RLE

qn-1 = state of referenced output one setup time prior to active clock transition

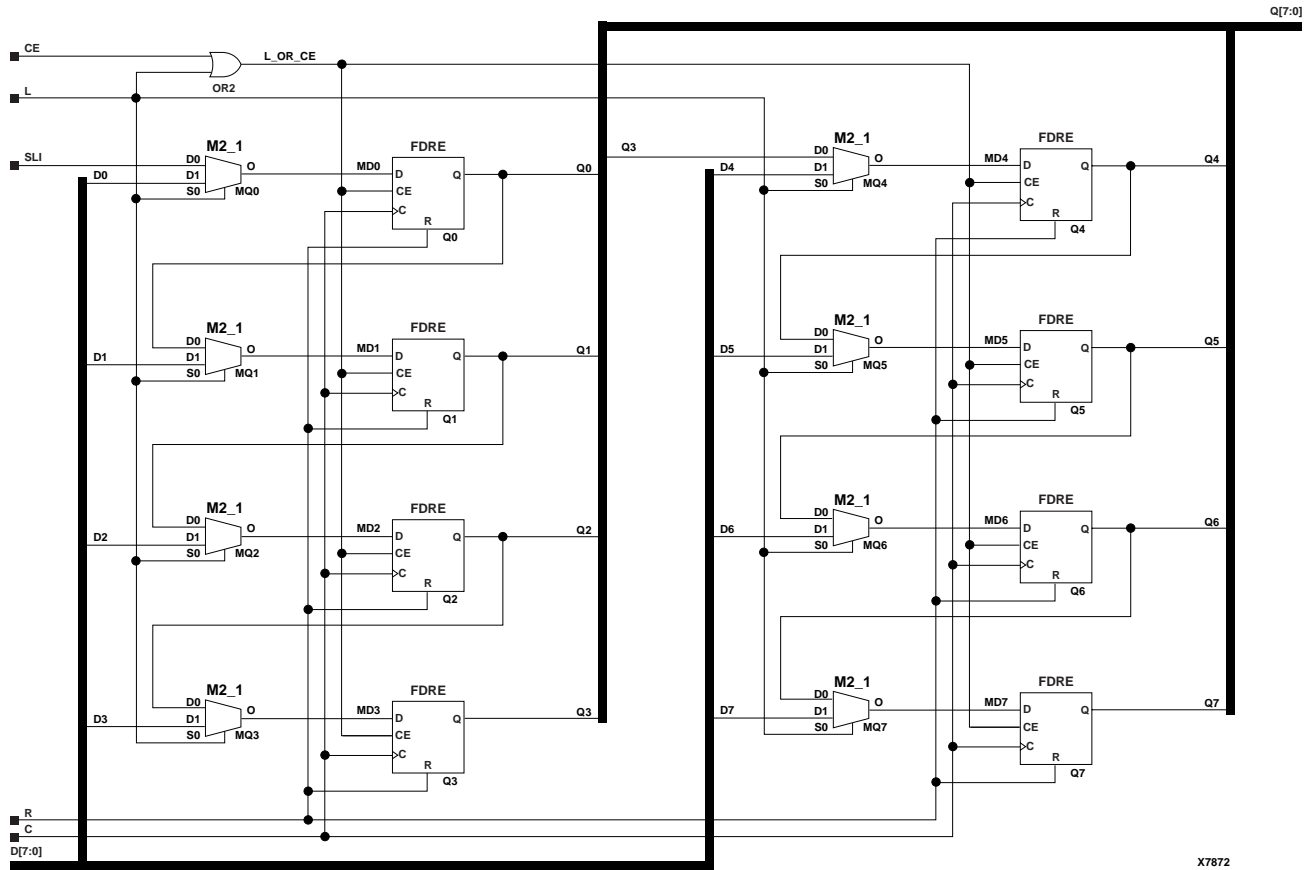

SR8RLE Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIe, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X

### Usage

For HDL, these design elements are inferred rather than instantiated.

### VHDL Inference Code

```
architecture Behavioral of sr4rle is
    signal Q_INT: std_logic_vector(WIDTH-1 downto 0);
begin

    process(C)
    begin
        if C'event and C='1' then
```



```
if (R='1') then
  Q_INT <= (others => '0');
elseif (L='1') then
  Q_INT <= D;
elseif (CE='1') then
  Q_INT <= Q_INT(WIDTH-2 downto 0) & SLI;
end if;
end if;
end if;
end if;
end process;

Q <= Q_INT;

end Behavioral;
```

### Verilog Inference Code

```
always @ (posedge C)
begin
  if (R)
    Q <= 0;
  else if (L)
    Q <= D;
  else if (CE)
    Q <= {Q[WIDTH-2:0],SLI};
end
```




## SR4RLED, SR8RLED, SR16RLED


### 4-, 8-, 16-Bit Shift Registers with Clock Enable and Synchronous Reset

#### Architectures Supported

SR4RLED, SR8RLED, SR16RLED	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

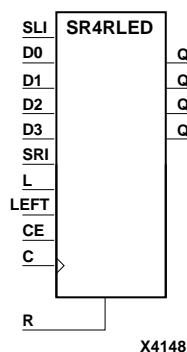

SR4RLED, SR8RLED, and SR16RLED are 4-, 8-, and 16-bit shift registers, respectively, with shift-left (SLI) and shift-right (SRI) serial inputs, parallel inputs (D), parallel outputs (Q) and four control inputs — clock enable (CE), load enable (L), shift left/right (LEFT), and synchronous reset (R). The register ignores clock transitions when CE and L are Low. The synchronous R, when High, overrides all other inputs during the Low-to-High clock (C) transition and resets the data outputs (Q) Low. When L is High and R is Low during the Low-to-High clock transition, the data on the D inputs is loaded into the corresponding Q bits of the register. When CE is High and L and R are Low, data is shifted right or left, depending on the state of the LEFT input. If LEFT is High, data on SLI is loaded into Q0 during the Low-to-High clock transition and shifted left (to Q1, Q2, and so forth) during subsequent clock transitions. If LEFT is Low, data on the SRI is loaded into the last Q output (Q3 for SR4RLED, Q7 for SR8RLED, or Q15 for SR16RLED) during the Low-to-High clock transition and shifted right (to Q2, Q1,... for SR4RLED; to Q6, Q5,... for SR8RLED; or to Q14, Q13,... for SR16RLED) during subsequent clock transitions. The truth table indicates the state of the Q outputs under all input conditions.

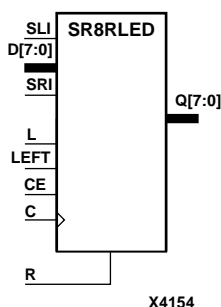

The register is asynchronously cleared, outputs Low, when power is applied.

For XC9500/XV/XL, CoolRunner XPLA3, and CoolRunner-II, the power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Spartan-II, Spartan-IIE, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, and Virtex-II Pro X simulate power-on when global set/reset (GSR) is active.

GSR defaults to active-High but can be inverted by adding an inverter in front of the GSR input of the STARTUP\_SPARTAN2, STARTUP\_SPARTAN3, STARTUP\_VIRTEX, or STARTUP\_VIRTEX2 symbol.

#### SR4RLED Truth Table

Inputs								Outputs		
R	L	CE	LEFT	SLI	SRI	D3 – D0	C	Q0	Q3	Q2 – Q1
1	X	X	X	X	X	X	↑	0	0	0
0	1	X	X	X	X	D3 – D0	↑	D0	D3	Dn

**SR4RLED Truth Table**

Inputs								Outputs		
R	L	CE	LEFT	SLI	SRI	D3 – D0	C	Q0	Q3	Q2 – Q1
0	0	0	X	X	X	X	X	No Chg	No Chg	No Chg
0	0	1	1	SLI	X	X	↑	SLI	q2	qn-1
0	0	1	0	X	SRI	X	↑	q1	SRI	qn+1

qn-1 or qn+1 = state of referenced output one setup time prior to active clock transition

**SR8RLED Truth Table**


Inputs								Outputs		
R	L	CE	LEFT	SLI	SRI	D7 – D0	C	Q0	Q7	Q6 – Q1
1	X	X	X	X	X	X	↑	0	0	0
0	1	X	X	X	X	D7 – D0	↑	D0	D7	Dn
0	0	0	X	X	X	X	X	No Chg	No Chg	No Chg
0	0	1	1	SLI	X	X	↑	SLI	q6	qn-1
0	0	1	0	X	SRI	X	↑	q1	SRI	qn+1

qn-1 or qn+1 = state of referenced output one setup time prior to active clock transition

**SR16RLED Truth Table**

Inputs								Outputs		
R	L	CE	LEFT	SLI	SRI	D15 – D0	C	Q0	Q15	Q14 – Q1
1	X	X	X	X	X	X	↑	0	0	0
0	1	X	X	X	X	D15 – D0	↑	D0	D15	Dn
0	0	0	X	X	X	X	X	No Chg	No Chg	No Chg
0	0	1	1	SLI	X	X	↑	SLI	q14	qn-1
0	0	1	0	X	SRI	X	↑	q1	SRI	qn+1

qn-1 or qn+1 = state of referenced output one setup time prior to active clock transition

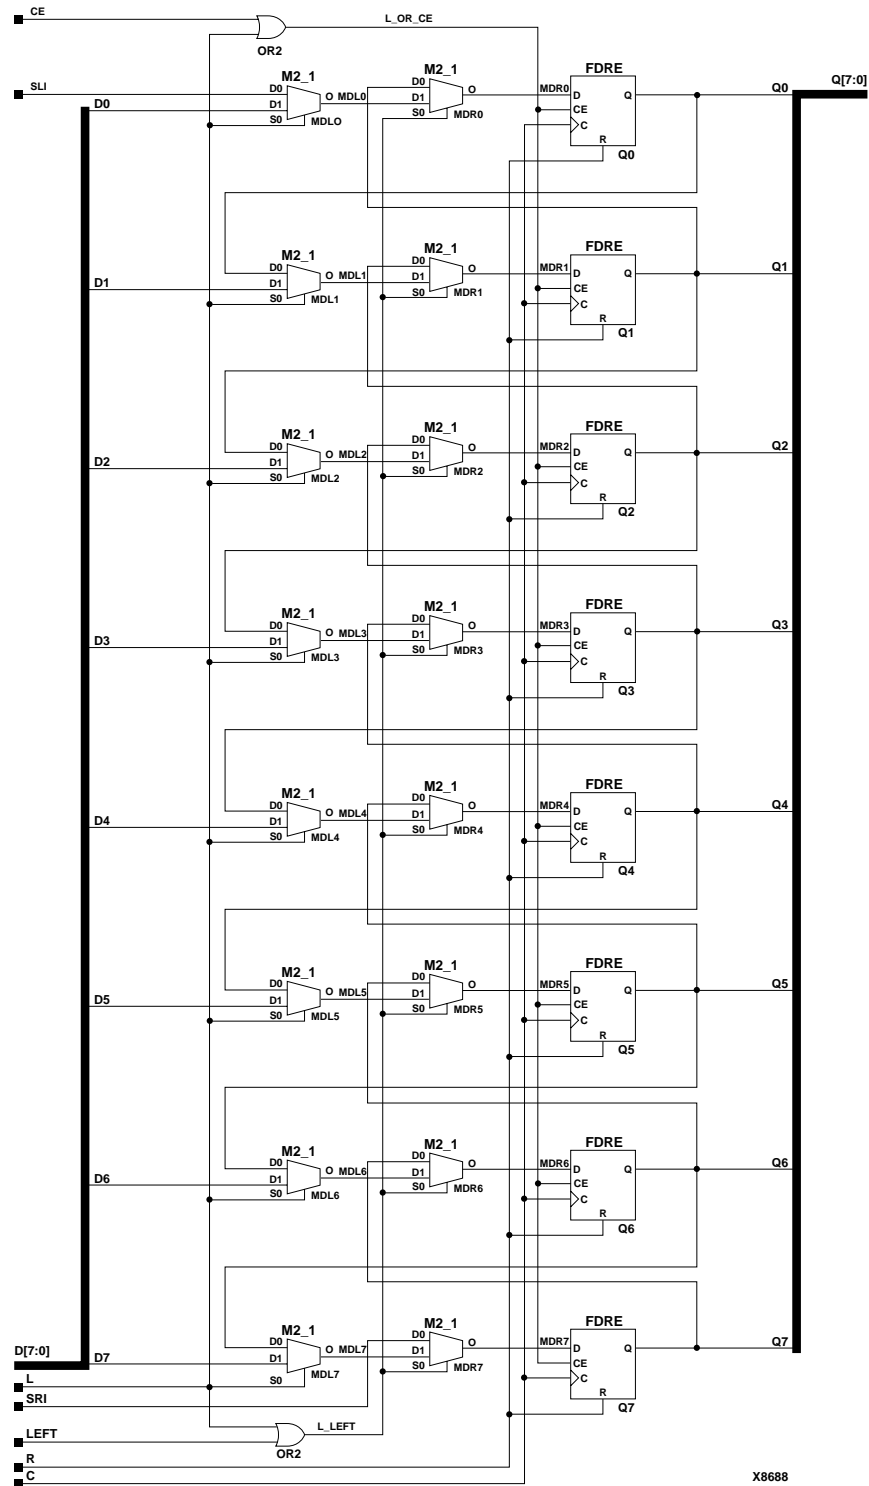

SR8RLED Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II, Spartan-II, Spartan-IIe, Spartan-3, Virtex, Virtex-E, Virtex-II, Virtex-II Pro, Virtex-II Pro X

## Usage

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of sr4rled is

begin

process(C)
begin
    if (C'event and C='1') then
        if (R='1') then
            Q <= (others => '0');
        elsif (CE='1') then
            if (L='1') then
                Q <= D;
            else
                if (LEFT='1') then
                    Q <= Q(WIDTH-2 downto 0) & SLI;
                else
                    Q <= SRI & Q(WIDTH-1 downto 1) ;
                end if;
            end if;
        end if;
    end if;
end process;

end Behavioral;
```

## Verilog Inference Code


```
always @ (posedge C)
begin
    if (R)
        Q <= 0;
    else if (CE)
        if (L)
            Q <= D;
        else if (LEFT)
            Q <= {Q[WIDTH-2:0], SLI};
        else
            Q <= {SRI, Q[WIDTH-1:1]};
    end
end
```

## SRD4CE, SRD8CE, SRD16CE


### 4-, 8-, 16-Bit Serial-In Parallel-Out Dual Edge Triggered Shift Registers with Clock Enable and Asynchronous Clear

#### Architectures Supported


SRD4CE, SRD8CE, SRD16CE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

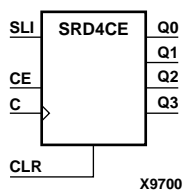

SRD4CE, SRD8CE, and SRD16CE are 4-, 8-, and 16-bit dual edge triggered shift registers, respectively, with a shift-left serial input (SLI), parallel outputs (Q), clock enable (CE) and asynchronous clear (CLR) inputs. The CLR input, when High, overrides all other inputs and resets the data outputs (Q) Low. When CE is High and CLR is Low, the data on the SLI input is loaded into the first bit of the shift register during the Low-to-High (or High-to-Low) clock (C) transition and appears on the Q0 output. During subsequent clock transitions, when CE is High and CLR is Low, data is shifted to the next highest bit position as new data is loaded into Q0 (SLI→Q0, Q0→Q1, Q1→Q2, and so forth). The register ignores clock transitions when CE is Low.

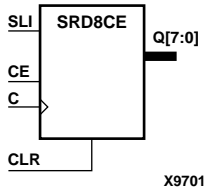

Registers can be cascaded by connecting the last Q output (Q3 for SRD4CE, Q7 for SRD8CE, or Q15 for SRD16CE) of one stage to the SLI input of the next stage and connecting clock, CE, and CLR in parallel.

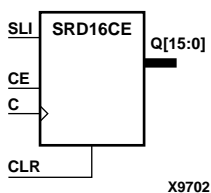


The register is asynchronously cleared, outputs Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs				Outputs	
CLR	CE	SLI	C	Q0	Qz – Q1
1	X	X	X	0	0
0	0	X	X	No Chg	No Chg
0	1	1	↑	1	qn-1
0	1	1	↓	1	qn-1
0	1	0	↑	0	qn-1
0	1	0	↓	0	qn-1

z = 3 for SRD4CE; z = 7 for SRD8CE; z = 15 for SRD16CE

qn-1 = state of referenced output one setup time prior to active clock transition

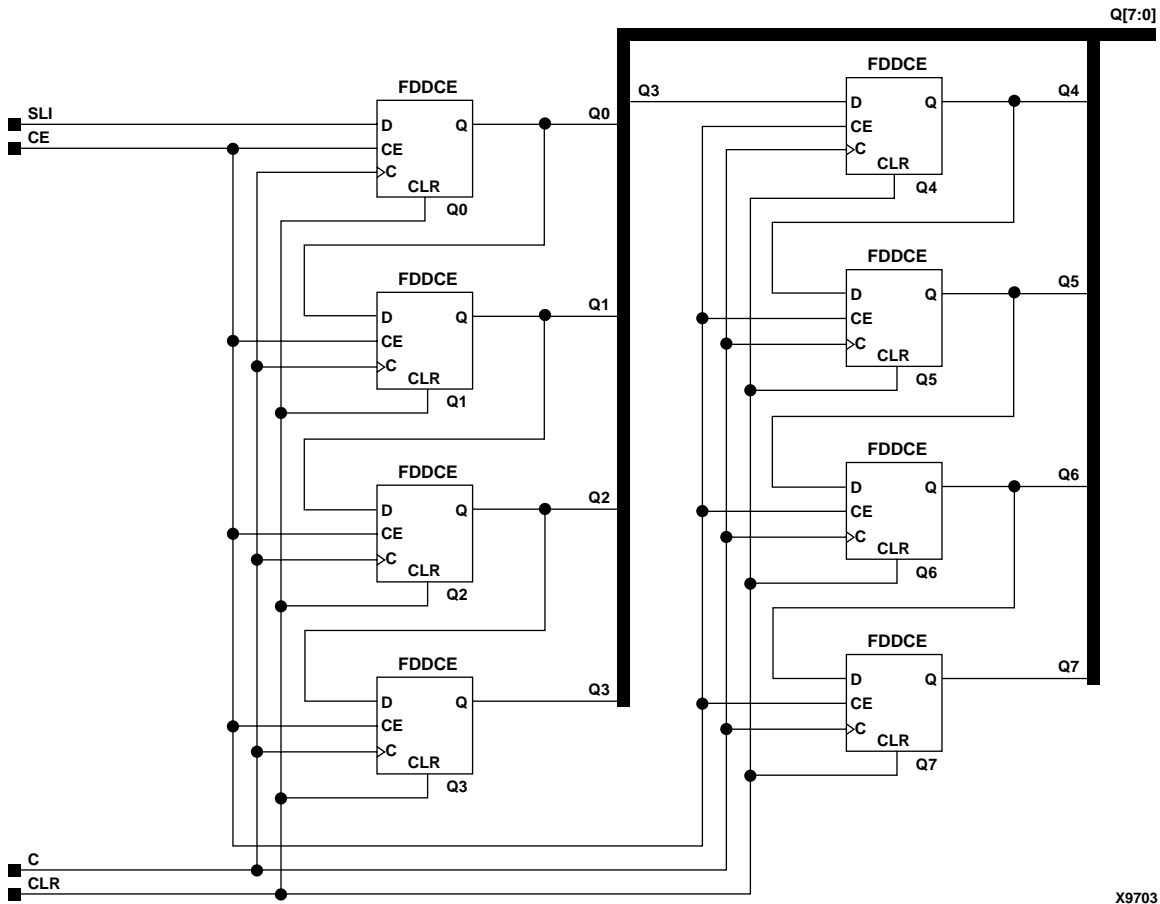

X9703

### SRD8CE Implementation CoolRunner-II

#### Usage

For HDL, these design elements are inferred rather than instantiated.



## VHDL Inference Code

```
architecture Behavioral of srd4ce is
signal Q_INT: std_logic_vector(WIDTH-1 downto 0);
begin

process(C, CLR)
begin
  if (CLR='1') then
    Q_INT <= (others => '0');
  elsif (C'event) then
    if (CE='1') then
      Q_INT <= Q_INT(WIDTH-2 downto 0) & SLI;
    end if;
  end if;
end process;

Q <= Q_INT;

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or negedge C or posedge CLR)
begin
  if (CLR)
    Q <= 0;
  else if (CE)
    Q <= {Q[WIDTH-2:0],SLI};
end
```




## SRD4CLE, SRD8CLE, SRD16CLE


### 4-, 8-, 16-Bit Loadable Serial/Parallel-In Parallel-Out Dual Edge Triggered Shift Registers with Clock Enable and Asynchronous Clear

#### Architectures Supported

SRD4CLE, SRD8CLE, SRD16CLE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

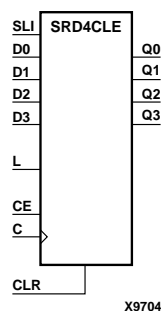


SRD4CLE, SRD8CLE, and SRD16CLE are 4-, 8-, and 16-bit dual edge triggered shift registers, respectively, with a shift-left serial input (SLI), parallel inputs (D), parallel outputs (Q), and three control inputs: clock enable (CE), load enable (L), and asynchronous clear (CLR). The register ignores clock transitions when L and CE are Low. The asynchronous CLR, when High, overrides all other inputs and resets the data outputs (Q) Low. When L is High and CLR is Low, data on the D<sub>n</sub> – D<sub>0</sub> inputs is loaded into the corresponding Q<sub>n</sub> – Q<sub>0</sub> bits of the register. When CE is High and L and CLR are Low, data on the SLI input is loaded into the first bit of the shift register during the Low-to-High (or High-to-Low) clock (C) transition and appears on the Q<sub>0</sub> output. During subsequent clock transitions, when CE is High and L and CLR are Low, the data is shifted to the next highest bit position as new data is loaded into Q<sub>0</sub> (SLI→Q<sub>0</sub>, Q<sub>0</sub>→Q<sub>1</sub>, Q<sub>1</sub>→Q<sub>2</sub>, and so forth).

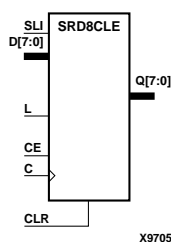

Registers can be cascaded by connecting the last Q output (Q<sub>3</sub> for SRD4CLE, Q<sub>7</sub> for SRD8CLE, or Q<sub>15</sub> for SRD16CLE) of one stage to the SLI input of the next stage and connecting clock, CE, L, and CLR inputs in parallel.

The register is asynchronously cleared, outputs Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

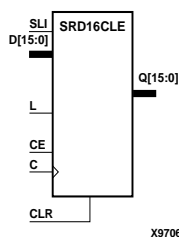


Inputs						Outputs	
CLR	L	CE	SLI	D <sub>n</sub> – D <sub>0</sub>	C	Q <sub>0</sub>	Q <sub>z</sub> – Q <sub>1</sub>
1	X	X	X	X	X	0	0
0	1	X	X	D <sub>n</sub> – D <sub>0</sub>	↑	D <sub>0</sub>	D <sub>n</sub>
0	1	X	X	D <sub>n</sub> – D <sub>0</sub>	↓	D <sub>0</sub>	D <sub>n</sub>
0	0	1	SLI	X	↑	SLI	qn-1
0	0	1	SLI	X	↓	SLI	qn-1

Inputs						Outputs	
CLR	L	CE	SLI	Dn – D0	C	Q0	Qz – Q1
0	0	0	X	X	X	No Chg	No Chg

z = 3 for SRD4CLE; z = 7 for SRD8CLE; z = 15 for SRD16CLE

qn-1 = state of referenced output one setup time prior to active clock transition

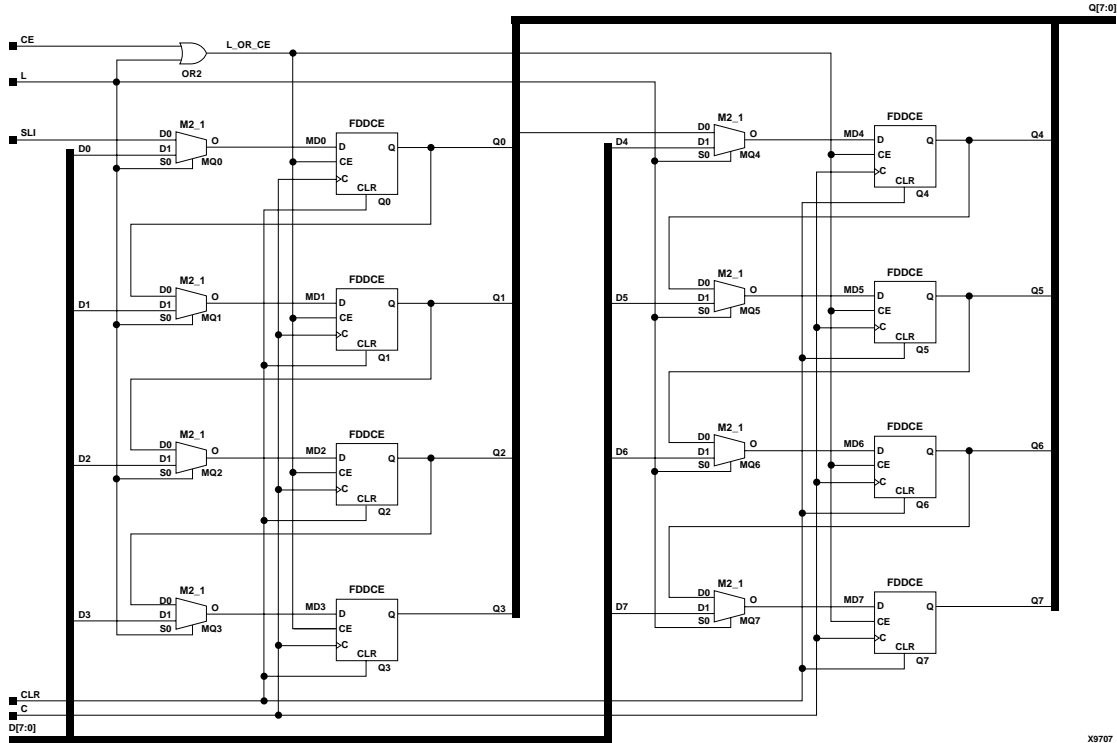

### SRD8CLE Implementation CoolRunner-II

#### Usage

For HDL, these design elements are inferred rather than instantiated.

#### VHDL Inference Code

```

architecture Behavioral of srd4cle is
    signal Q_INT: std_logic_vector(WIDTH-1 downto 0);
begin

    process(C, CLR)
    begin
        if (CLR='1') then
            Q_INT <= (others => '0');
        elsif (C'event) then
            if (CE='1') then
                if (L='1') then
                    Q_INT <= D;
                else
                    Q_INT <= Q_INT(WIDTH-2 downto 0) & SLI;
                end if;
            end if;
        end if;
    end process;
end architecture Behavioral;

```

```
        end if;
    end if;
end if;
end process;

Q <= Q_INT;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or negedge C or posedge CLR)
begin
    if (CLR)
        Q <= 0;
    else if (CE)
        if (L)
            Q <= D;
        else
            Q <= {Q[WIDTH-2:0],SLI};
    end
end
```




## SRD4CLED, SRD8CLED, SRD16CLED


### 4-, 8-, 16-Bit Dual Edge Triggered Shift Registers with Clock Enable and Asynchronous Clear

#### Architectures Supported

SRD4CLED, SRD8CLED, SRD16CLED	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

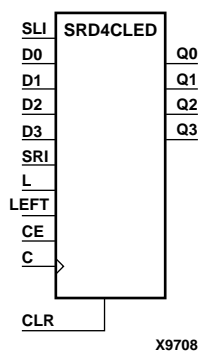


SRD4CLED, SRD8CLED, and SRD16CLED are 4-, 8-, and 16-bit dual edge triggered shift registers, respectively, with shift-left (SLI) and shift-right (SRI) serial inputs, parallel inputs (D), parallel outputs (Q), and four control inputs: clock enable (CE), load enable (L), shift left/right (LEFT), and asynchronous clear (CLR). The register ignores clock transitions when CE and L are Low. The asynchronous clear, when High, overrides all other inputs and resets the data outputs (Q<sub>n</sub>) Low. When L is High and CLR is Low, the data on the D inputs is loaded into the corresponding Q bits of the register. When CE is High and L and CLR are Low, data is shifted right or left, depending on the state of the LEFT input. If LEFT is High, data on the SLI is loaded into Q<sub>0</sub> during the Low-to-High or High-to-Low clock transition and shifted left (to Q<sub>1</sub>, Q<sub>2</sub>, and so forth) during subsequent clock transitions. If LEFT is Low, data on the SRI is loaded into the last Q output (Q<sub>3</sub> for SRD4CLED, Q<sub>7</sub> for SRD8CLED, or Q<sub>15</sub> for SRD16CLED) during the Low-to-High or High-to-Low clock transition and shifted right (to Q<sub>2</sub>, Q<sub>1</sub>,... for SRD4CLED; to Q<sub>6</sub>, Q<sub>5</sub>,... for SRD8CLED; and to Q<sub>14</sub>, Q<sub>13</sub>,... for SRD16CLED) during subsequent clock transitions. The truth tables for SRD4CLED, SRD8CLED, and SRD16CLED indicate the state of the Q outputs under all input conditions for SRD4CLED, SRD8CLED, and SRD16CLED.

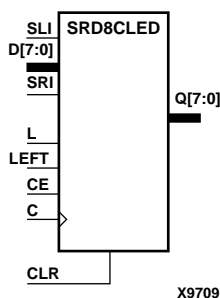

The register is asynchronously cleared, outputs Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

#### SRD4CLED Truth Table

Inputs								Outputs		
CLR	L	CE	LEFT	SLI	SRI	D3 – D0	C	Q0	Q3	Q2 – Q1
1	X	X	X	X	X	X	X	0	0	0
0	1	X	X	X	X	D3– D0	↑	D0	D3	Dn
0	1	X	X	X	X	D3– D0	↓	D0	D3	Dn
0	0	0	X	X	X	X	X	No Chg	No Chg	No Chg
0	0	1	1	SLI	X	X	↑	SLI	q2	qn-1

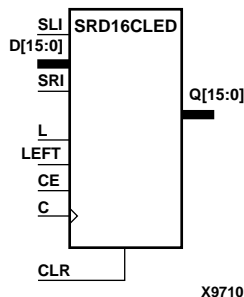

**SRD4CLED Truth Table**

Inputs								Outputs		
CLR	L	CE	LEFT	SLI	SRI	D3 – D0	C	Q0	Q3	Q2 – Q1
0	0	1	1	SLI	X	X	↓	SLI	q2	qn-1
0	0	1	0	X	SRI	X	↑	q1	SRI	qn+1
0	0	1	0	X	SRI	X	↓	q1	SRI	qn+1

qn-1 and qn+1 = state of referenced output one setup time prior to active clock transition

**SRD8CLED Truth Table**

Inputs								Outputs		
CLR	L	CE	LEFT	SLI	SRI	D7 – D0	C	Q0	Q7	Q6 – Q1
1	X	X	X	X	X	X	X	0	0	0
0	1	X	X	X	X	D7 – D0	↑	D0	D7	Dn
0	1	X	X	X	X	D7 – D0	↓	D0	D7	Dn
0	0	0	X	X	X	X	X	No Chg	No Chg	No Chg
0	0	1	1	SLI	X	X	↑	SLI	q6	qn-1
0	0	1	1	SLI	X	X	↓	SLI	q6	qn-1
0	0	1	0	X	SRI	X	↑	q1	SRI	qn+1
0	0	1	0	X	SRI	X	↓	q1	SRI	qn+1


qn-1 or qn+1 = state of referenced output one setup time prior to active clock transition

**SRD16CLED Truth Table**

Inputs								Outputs		
CLR	L	CE	LEFT	SLI	SRI	D15 – D0	C	Q0	Q15	Q14 – Q1
1	X	X	X	X	X	X	X	0	0	0
0	1	X	X	X	X	D15 – D0	↑	D0	D15	Dn
0	1	X	X	X	X	D15 – D0	↓	D0	D15	Dn
0	0	0	X	X	X	X	X	No Chg	No Chg	No Chg
0	0	1	1	SLI	X	X	↑	SLI	q14	qn-1
0	0	1	1	SLI	X	X	↓	SLI	q14	qn-1
0	0	1	0	X	SRI	X	↑	q1	SRI	qn+1
0	0	1	0	X	SRI	X	↓	q1	SRI	qn+1

qn-1 or qn+1 = state of referenced output one setup time prior to active clock transition



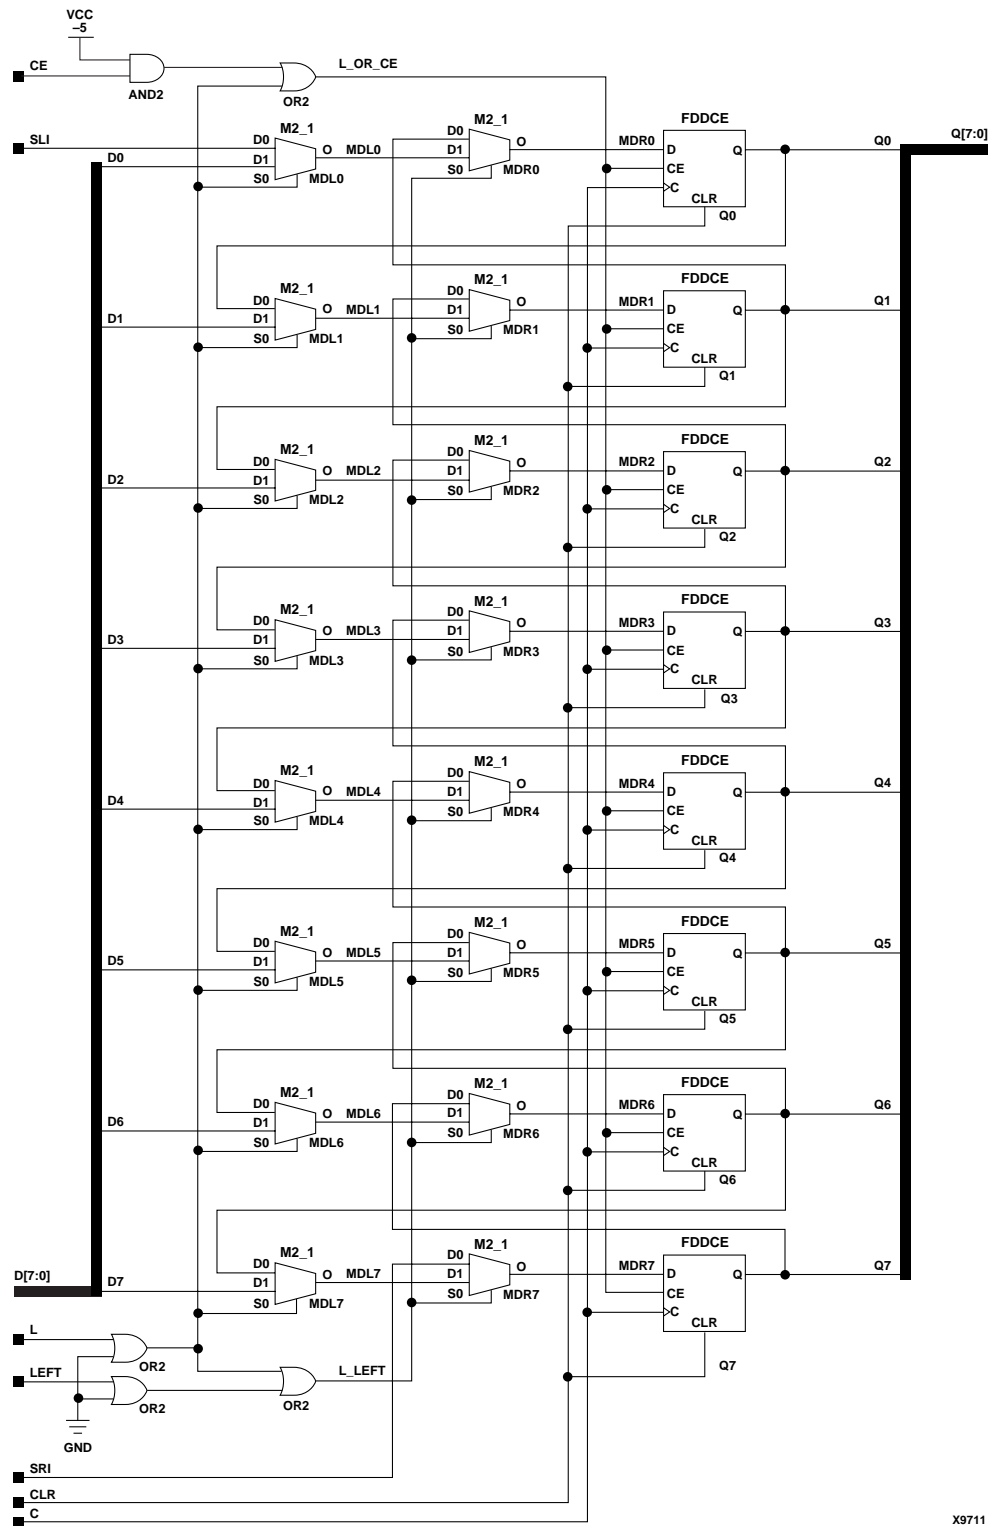

X9711

SRD8CLED Implementation CoolRunner-II

## Usage

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of srd4cled is
signal Q_INT: std_logic_vector(WIDTH-1 downto 0);
begin

process(C, CLR)
begin
  if (CLR='1') then
    Q_INT <= (others => '0');
  elsif (C'event) then
    if (CE='1') then
      if (L='1') then
        Q_INT <= D;
      else
        if (LEFT='1') then
          Q_INT <= Q_INT(WIDTH-2 downto 0) & SLI;
        else
          Q_INT <= SRI & Q_INT(WIDTH-1 downto 1);
        end if;
      end if;
    end if;
  end process;

Q <= Q_INT;

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or negedge C or posedge CLR)
begin
  if (CLR)
    Q <= 0;
  else if (CE)
    if (L)
      Q <= D;
    else if (LEFT)
      Q <= {Q[WIDTH-2:0],SLI};
    else
      Q <= {SRI, Q[WIDTH-1:1]};
  end
end
```








## SRD4RE, SRD8RE, SRD16RE

### 4-, 8-, 16-Bit Serial-In Parallel-Out Dual Edge Triggered Shift Registers with Clock Enable and Synchronous Reset

#### Architectures Supported

SRD4RE, SRD8RE, SRD16RE	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

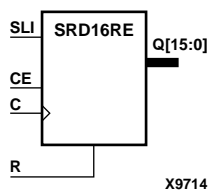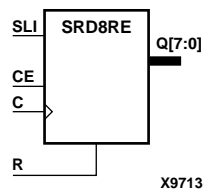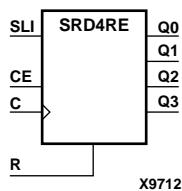

SRD4RE, SRD8RE, and SRD16RE are 4-, 8-, and 16-bit dual edge triggered shift registers, respectively, with shift-left serial input (SLI), parallel outputs (Qn), clock enable (CE), and synchronous reset (R) inputs. The R input, when High, overrides all other inputs during the Low-to-High or High-to-Low clock (C) transition and resets the data outputs (Q) Low. When CE is High and R is Low, the data on the SLI is loaded into the first bit of the shift register during the Low-to-High clock or High-to-Low (C) transition and appears on the Q0 output. During subsequent clock transitions, when CE is High and R is Low, data is shifted to the next highest bit position as new data is loaded into Q0 (SLI→Q0, Q0→Q1, Q1→Q2, and so forth). The register ignores clock transitions when CE is Low.

Registers can be cascaded by connecting the last Q output (Q3 for SRD4RE, Q7 for SRD8RE, or Q15 for SRD16RE) of one stage to the SLI input of the next stage and connecting clock, CE, and R in parallel.


The register is asynchronously cleared, outputs Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

Inputs				Outputs	
R	CE	SLI	C	Q0	Qz – Q1
1	X	X	↑	0	0
1	X	X	↓	0	0
0	0	X	X	No Chg	No Chg
0	1	1	↑	1	qn-1
0	1	1	↓	1	qn-1
0	1	0	↑	0	qn-1

Inputs				Outputs	
R	CE	SLI	C	Q0	Qz – Q1
0	1	0	↓	0	qn-1

z = 3 for SRD4RE; z = 7 for SRD8RE; z = 15 for SRD16RE

qn-1 = state of referenced output one setup time prior to active clock transition

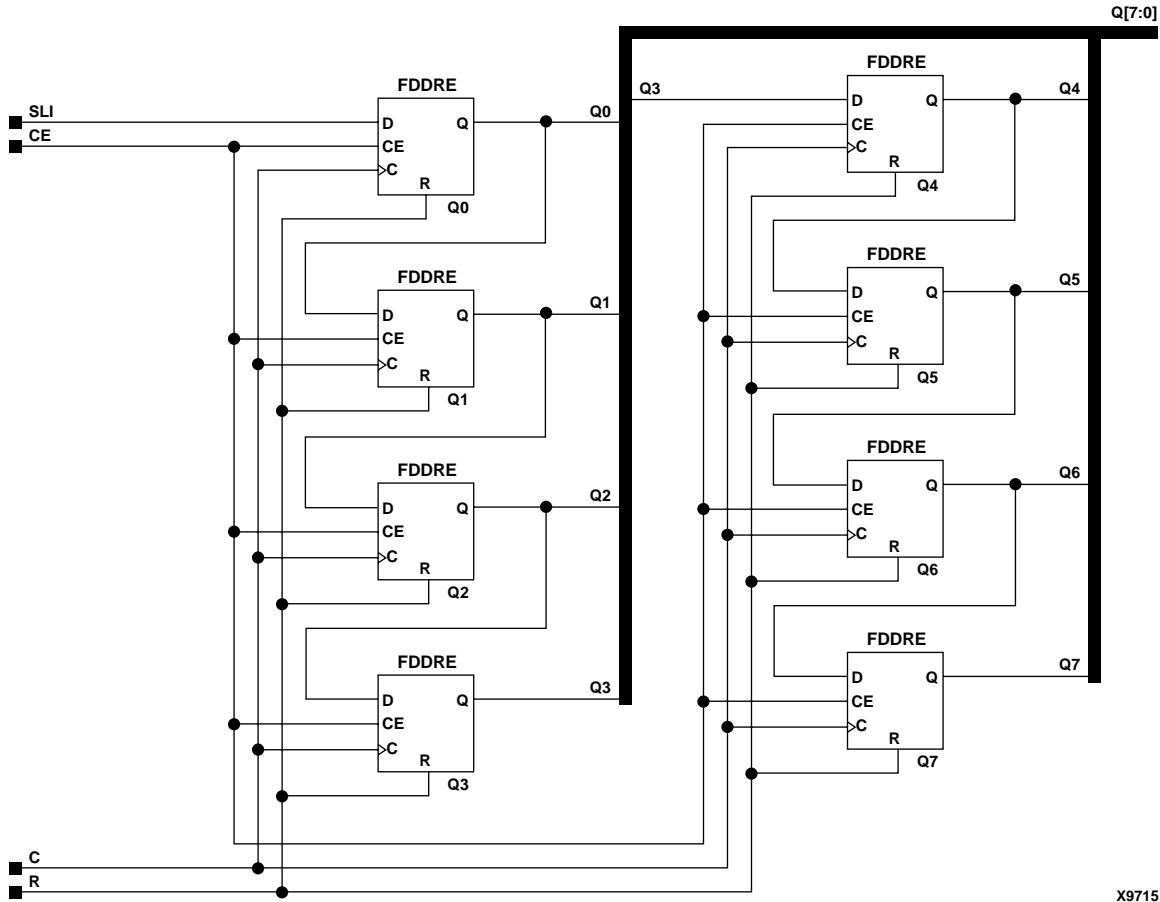

X9715

### SRD8RE Implementation CoolRunner-II

#### Usage

For HDL, these design elements are inferred rather than instantiated.

#### VHDL Inference Code

```
architecture Behavioral of srd4re is
signal Q_INT: std_logic_vector(WIDTH-1 downto 0);
begin

process(C)
begin
if C'event then
if (R='1') then
Q_INT <= (others => '0');
elseif (CE='1') then
```

```
        Q_INT <= Q_INT(WIDTH-2 downto 0) & SLI;
    end if;
end if;
end process;

Q <= Q_INT;
end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or negedge C)
begin
    if (R)
        Q <= 0;
    else if (CE)
        Q <= {Q[WIDTH-2:0],SLI};
    end
end
```






## SRD4RLE, SRD8RLE, SRD16RLE


### 4-, 8-, 16-Bit Loadable Serial/Parallel-In Parallel-Out Dual Edge Triggered Shift Registers with Clock Enable and Synchronous Reset

#### Architectures Supported

SRD4RLE, SRD8RLE, SRD16RLE	
Spartan-II, Spartan-III	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

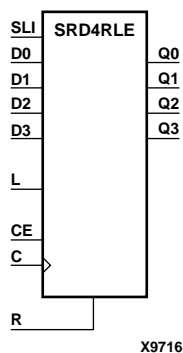


SRD4RLE, SRD8RLE, and SRD16RLE are 4-, 8-, and 16-bit dual edge triggered shift registers, respectively, with shift-left serial input (SLI), parallel inputs (D), parallel outputs (Q), and three control inputs: clock enable (CE), load enable (L), and synchronous reset (R). The register ignores clock transitions when L and CE are Low. The synchronous R, when High, overrides all other inputs during the Low-to-High or High-to-Low clock (C) transition and resets the data outputs (Q) Low. When L is High and R is Low, data on the D inputs is loaded into the corresponding Q bits of the register. When CE is High and L and R are Low, data on the SLI input is loaded into the first bit of the shift register during the Low-to-High or High-to-Low clock (C) transition and appears on the Q0 output. During subsequent clock transitions, when CE is High and L and R are Low, the data is shifted to the next highest bit position as new data is loaded into Q0 (SLI→Q0, Q0→Q1, Q1→Q2, and so forth).

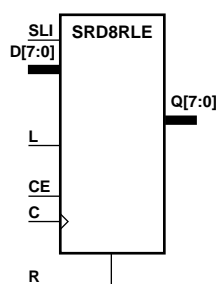

Registers can be cascaded by connecting the last Q output (Q3 for SRD4RLE, Q7 for SRD8RLE, or 15 for SRD16RLE) of one stage to the SLI input of the next stage and connecting clock, CE, L, and R inputs in parallel.

The register is asynchronously cleared, outputs Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

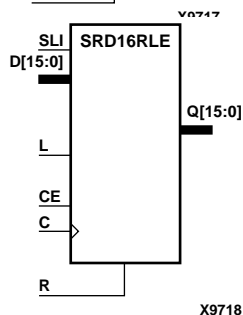


Inputs						Outputs	
R	L	CE	SLI	Dz - D0	C	Q0	Qz - Q1
1	X	X	X	X	↑	0	0
1	X	X	X	X	↓	0	0
0	1	X	X	Dz - D0	↑	D0	Dn
0	1	X	X	Dz - D0	↓	D0	Dn
0	0	1	SLI	X	↑	SLI	qn-1
0	0	1	SLI	X	↓	SLI	qn-1

Inputs						Outputs	
R	L	CE	SLI	Dz – D0	C	Q0	Qz – Q1
0	0	0	X	X	X	No Chg	No Chg

z = 3 for SRD4RLE; z = 7 for SRD8RLE; z = 15 for SRD16RLE

qn-1 = state of referenced output one setup time prior to active clock transition

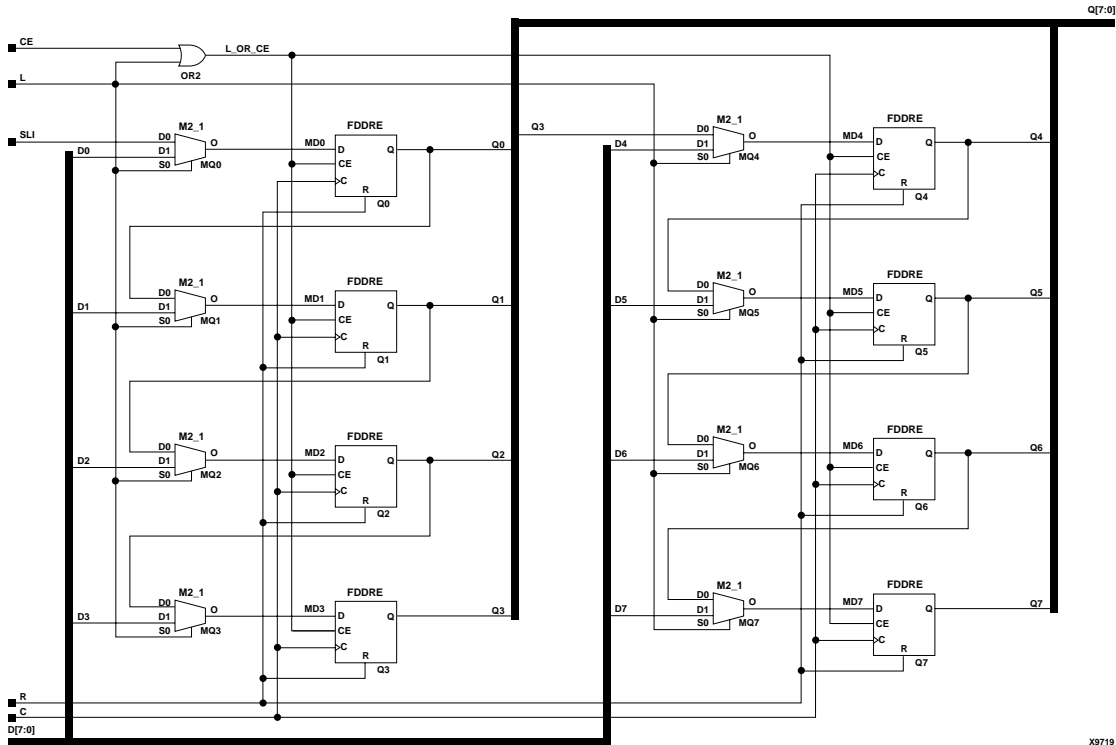

### SRD8RLE Implementation CoolRunner-II

#### Usage

For HDL, these design elements are inferred rather than instantiated.

## VHDL Inference Code

```
architecture Behavioral of srd4rle is
signal Q_INT: std_logic_vector(WIDTH-1 downto 0);
begin

process(C)
begin
  if (C'event) then
    if (R='1') then
      Q_INT <= (others => '0');
      if (CE='1') then
        if (L='1') then
          Q_INT <= D;
        else
          Q_INT <= Q_INT(WIDTH-2 downto 0) & SLI;
        end if;
      end if;
    end if;
  end if;
end process;

Q <= Q_INT;

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C or negedge C)
begin
  if (R)
    Q <= 0;
  else if (CE)
    if (L)
      Q <= D;
    else
      Q <= {Q[WIDTH-2:0],SLI};
    end
end
```




## SRD4RLED, SRD8RLED, SRD16RLED


### 4-, 8-, 16-Bit Dual Edge Triggered Shift Registers with Clock Enable and Synchronous Reset

#### Architectures Supported


SRD4RLED, SRD8RLED, SRD16RLED	
Spartan-II, Spartan-III	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	Macro
CoolRunner-IIS	No

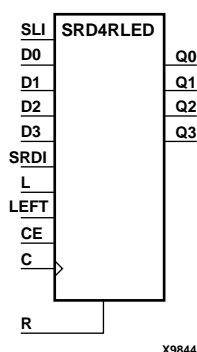

SRD4RLED, SRD8RLED, and SRD16RLED are 4-, 8-, and 16-bit dual edge triggered shift registers, respectively, with shift-left (SLI) and shift-right (SRDI) serial inputs, parallel inputs (D), parallel outputs (Q), and four control inputs — clock enable (CE), load enable (L), shift left/right (LEFT), and synchronous reset (R). The register ignores clock transitions when CE and L are Low. The synchronous R, when High, overrides all other inputs during the Low-to-High or High-to-Low clock (C) transition and resets the data outputs (Q) Low. When L is High and R is Low, the data on the D inputs is loaded into the corresponding Q bits of the register. When CE is High and L and R are Low, data is shifted right or left, depending on the state of the LEFT input. If LEFT is High, data on SLI is loaded into Q0 during the Low-to-High or High-to-Low clock transition and shifted left (to Q1, Q2, and so forth) during subsequent clock transitions. If LEFT is Low, data on the SRDI is loaded into the last Q output (Q3 for SRD4RLED, Q7 for SRD8RLED, or Q15 for SRD16RLED) during the Low-to-High or High-to-Low clock transition and shifted right (to Q2, Q1,... for SRD4RLED; to Q6, Q5,... for SRD8RLED; or to Q14, Q13,... for SRD16RLED) during subsequent clock transitions. The truth table indicates the state of the Q outputs under all input conditions.

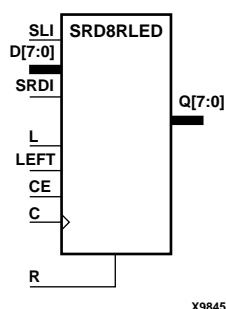

The register is asynchronously cleared, outputs Low, when power is applied. The power-on condition can be simulated by applying a High-level pulse on the PRLD global net.

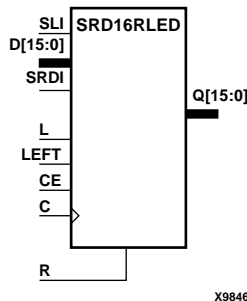

#### SRD4RLED Truth Table

Inputs								Outputs		
R	L	CE	LEFT	SLI	SRDI	D3 – D0	C	Q0	Q3	Q2 – Q1
1	X	X	X	X	X	X	↑	0	0	0
1	X	X	X	X	X	X	↓	0	0	0
0	1	X	X	X	X	D3 – D0	↑	D0	D3	Dn
0	1	X	X	X	X	D3 – D0	↓	D0	D3	Dn

**SRD4RLED Truth Table**

Inputs								Outputs		
R	L	CE	LEFT	SLI	SRDI	D3 – D0	C	Q0	Q3	Q2 – Q1
0	0	0	X	X	X	X	X	No Chg	No Chg	No Chg
0	0	1	1	SLI	X	X	↑	SLI	q2	qn-1
0	0	1	1	SLI	X	X	↓	SLI	q2	qn-1
0	0	1	0	X	SRDI	X	↑	q1	SRDI	qn+1
0	0	1	0	X	SRDI	X	↓	q1	SRDI	qn+1

qn-1 or qn+1 = state of referenced output one setup time prior to active clock transition

**SRD8RLED Truth Table**


Inputs								Outputs		
R	L	CE	LEFT	SLI	SRDI	D7 – D0	C	Q0	Q7	Q6 – Q1
1	X	X	X	X	X	X	↑	0	0	0
1	X	X	X	X	X	X	↓	0	0	0
0	1	X	X	X	X	D7 – D0	↑	D0	D7	Dn
0	1	X	X	X	X	D7 – D0	↓	D0	D7	Dn
0	0	0	X	X	X	X	X	No Chg	No Chg	No Chg
0	0	1	1	SLI	X	X	↑	SLI	q6	qn-1
0	0	1	1	SLI	X	X	↓	SLI	q6	qn-1
0	0	1	0	X	SRDI	X	↑	q1	SRDI	qn+1
0	0	1	0	X	SRDI	X	↓	q1	SRDI	qn+1

qn-1 or qn+1 = state of referenced output one setup time prior to active clock transition

**SRD16RLED Truth Table**

Inputs								Outputs		
R	L	CE	LEFT	SLI	SRDI	D15 – D0	C	Q0	Q15	Q14 – Q1
1	X	X	X	X	X	X	↑	0	0	0
1	X	X	X	X	X	X	↓	0	0	0
0	1	X	X	X	X	D15 – D0	↑	D0	D15	Dn
0	1	X	X	X	X	D15 – D0	↓	D0	D15	Dn
0	0	0	X	X	X	X	X	No Chg	No Chg	No Chg
0	0	1	1	SLI	X	X	↑	SLI	q14	qn-1
0	0	1	1	SLI	X	X	↓	SLI	q14	qn-1
0	0	1	0	X	SRDI	X	↑	q1	SRDI	qn+1
0	0	1	0	X	SRDI	X	↓	q1	SRDI	qn+1

qn-1 or qn+1 = state of referenced output one setup time prior to active clock transition

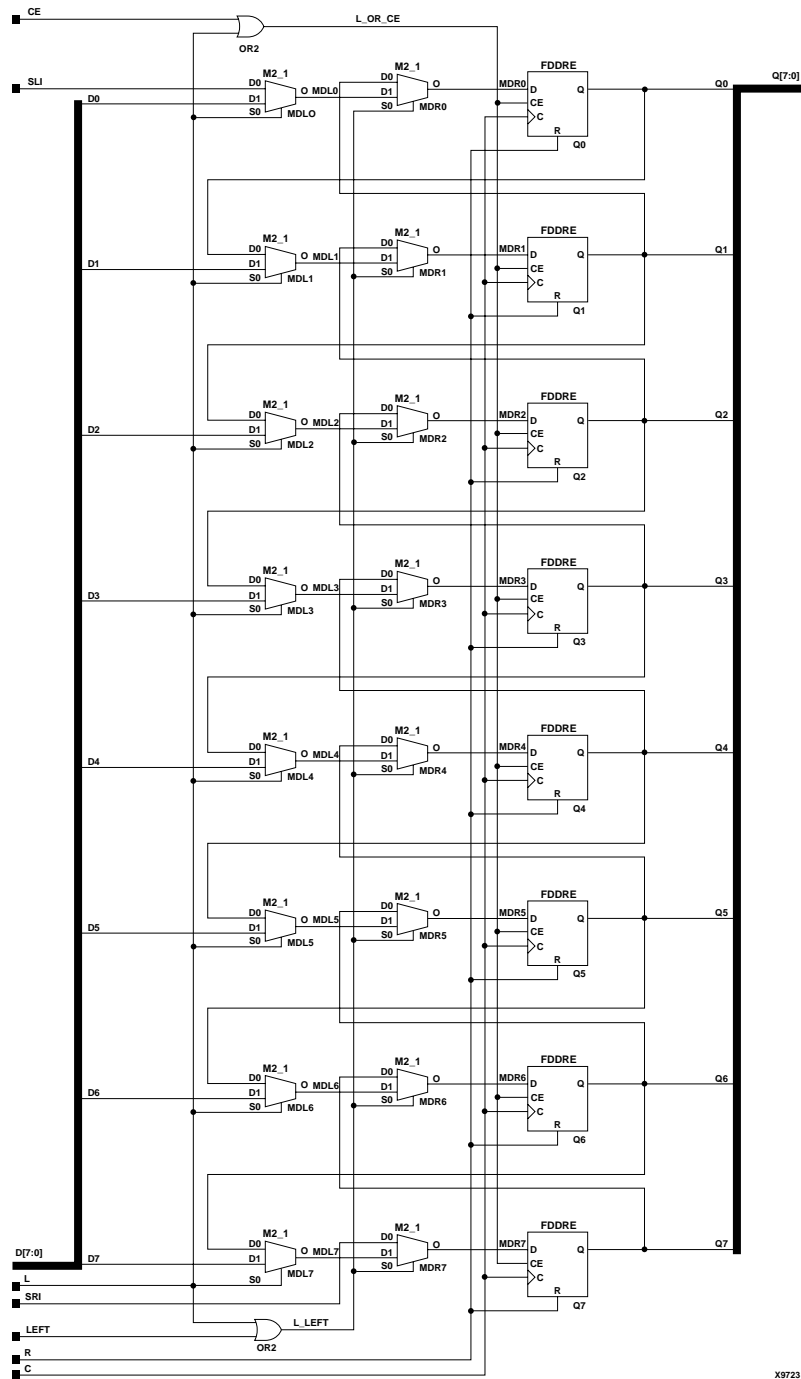

SRD8RLED Implementation CoolRunner-II






## SRL16

### 16-Bit Shift Register Look-Up-Table (LUT)

#### Architectures Supported

SRL16	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

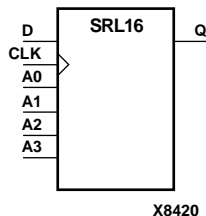

SRL16 is a shift register look up table (LUT). The inputs A3, A2, A1, and A0 select the output length of the shift register. The shift register may be of a fixed, static length or it may be dynamically adjusted.

The shift register LUT contents are initialized by assigning a four-digit hexadecimal number to an INIT attribute. The first, or the left-most, hexadecimal digit is the most significant bit. If an INIT value is not specified, it defaults to a value of four zeros (0000) so that the shift register LUT is cleared during configuration.

The data (D) is loaded into the first bit of the shift register during the Low-to-High clock (CLK) transition. During subsequent Low-to-High clock transitions data is shifted to the next highest bit position as new data is loaded. The data appears on the Q output when the shift register length determined by the address inputs is reached.

#### Static Length Mode

To get a fixed length shift register, drive the A3 through A0 inputs with static values. The length of the shift register can vary from 1 bit to 16 bits as determined from the following formula:

$$\text{Length} = (8 * A3) + (4 * A2) + (2 * A1) + A0 + 1$$

If A3, A2, A1, and A0 are all zeros (0000), the shift register is one bit long. If they are all ones (1111), it is 16 bits long.

#### Dynamic Length Mode

The length of the shift register can be changed dynamically by changing the values driving the A3 through A0 inputs. For example, if A2, A1, and A0 are all ones (111) and A3 toggles between a one (1) and a zero (0), the length of the shift register changes from 16 bits to 8 bits.

Internally, the length of the shift register is always 16 bits and the input lines A3 through A0 select which of the 16 bits reach the output.

Inputs			Output
Am	CLK	D	Q
Am	X	X	Q(Am)
Am	↑	D	Q(Am-1)

m= 0, 1, 2, 3

## Usage

For HDL, this design element can be inferred or instantiated.

## VHDL Inference Code

```
architecture Behavioral of srl16 is
    signal Q_INT: std_logic_vector(WIDTH-1 downto 0);
begin
    process(C)
    begin
        if (C'event and C='1') then
            Q_INT <= Q_INT(WIDTH-2 downto 0) & D;
        end if;
    end process;

    Q <= Q_INT(WIDTH-1);

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C)
begin
    Q_INT <= {Q_INT[WIDTH-2:0],D};
end

always @(Q_INT)
begin
    Q <= Q_INT[WIDTH-1];
end
```

## VHDL Instantiation Template

```
-- Component Declaration for SRL16 should be placed
-- after architecture statement but before begin keyword

component SRL16
    -- synthesis translate_off
    generic (
        INIT: bit_value:= X"0001");
    -- synthesis translate_on
    port (Q : out STD_ULOGIC;
```

```

        A0 : in STD_ULOGIC;
        A1 : in STD_ULOGIC;
        A2 : in STD_ULOGIC;
        A3 : in STD_ULOGIC;
        CLK : in STD_ULOGIC;
        D : in STD_ULOGIC);
end component;

-- Component Attribute specification for SRL16
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes in this section

-- Component Instantiation for SRL16 should be placed
-- in architecture after the begin keyword

SRL16_INSTANCE_NAME : SRL16
  -- synthesis translate_off
  generic map(
    INIT => hex_value)
  -- synthesis translate_on
  port map (Q => user_Q,
    A0 => user_A0,
    A1 => user_A1,
    A2 => user_A2,
    A3 => user_A3,
    CLK => user_CLK,
    D => user_D);

```

## Verilog Instantiation Template

```

SRL16 SRL16_instance_name (.Q (user_Q),
    .A0 (user_A0),
    .A1 (user_A1),
    .A2 (user_A2),
    .A3 (user_A3),
    .CLK (user_CLK),
    .D (user_D));

defparam SRL16_instance_name.INIT = hex_value;

```

## Commonly Used Constraints

BEL

U\_SET

INIT




## SRL16\_1

### 16-Bit Shift Register Look-Up-Table (LUT) with Negative-Edge Clock

#### Architectures Supported

SRL16_1	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

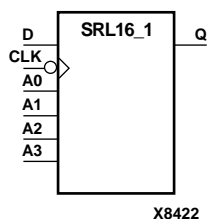

SRL16\_1 is a shift register look up table (LUT). The inputs A3, A2, A1, and A0 select the output length of the shift register. The shift register may be of a fixed, static length or it may be dynamically adjusted. See “[Static Length Mode](#)” and “[Dynamic Length Mode](#)” in “[SRL16](#)”.

The shift register LUT contents are initialized by assigning a four-digit hexadecimal number to an INIT attribute. The first, or the left-most, hexadecimal digit is the most significant bit. If an INIT value is not specified, it defaults to a value of four zeros (0000) so that the shift register LUT is cleared during configuration.

The data (D) is loaded into the first bit of the shift register during the High-to-Low clock (CLK) transition. During subsequent High-to-Low clock transitions data is shifted to the next highest bit position as new data is loaded. The data appears on the Q output when the shift register length determined by the address inputs is reached.

Inputs			Output
Am	CLK	D	Q
Am	X	X	Q(Am)
Am	↓	D	Q(Am-1)

m= 0, 1, 2, 3

#### Usage

For HDL, this design element can be inferred or instantiated.

#### VHDL Inference Code

```
architecture Behavioral of srl16_1 is
    signal Q_INT: std_logic_vector(WIDTH-1 downto 0);
begin
```

```

process(C)
begin
  if (C'event and C='0') then
    Q_INT <= Q_INT(WIDTH-2 downto 0) & D;
  end if;
end process;

Q <= Q_INT(WIDTH-1);

end Behavioral;

```

## Verilog Inference Code

```

always @ (negedge C)
begin
  Q_INT <= {Q_INT[WIDTH-2:0],D};
end

always @ (Q_INT)
begin
  Q <= Q_INT[WIDTH-1];
end

```

## VHDL Instantiation Template

```

-- Component Declaration for SRL16_1 should be placed
-- after architecture statement but before begin keyword

component SRL16_1
  -- synthesis translate_off
  generic (
    INIT: bit_value:= X"0001");
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        A0 : in STD_ULOGIC;
        A1 : in STD_ULOGIC;
        A2 : in STD_ULOGIC;
        A3 : in STD_ULOGIC;
        CLK : in STD_ULOGIC;
        D : in STD_ULOGIC);
end component;

-- Component Attribute specification for SRL16_1
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes in this section

-- Component Instantiation for SRL16_1 should be placed
-- in architecture after the begin keyword

SRL16_1_INSTANCE_NAME : SRL16_1
  -- synthesis translate_off
  generic map (INIT => hex_value)
  -- synthesis translate_on
  port map (Q => user_Q,

```

```
A0 => user_A0,  
A1 => user_A1,  
A2 => user_A2,  
A3 => user_A3,  
CLK => user_CLK,  
D => user_D);
```

## Verilog Instantiation Template

```
SRL16_1 SRL16_1_instance_name (.Q (user_Q),  
                               .A0 (user_A0),  
                               .A1 (user_A1),  
                               .A2 (user_A2),  
                               .A3 (user_A3),  
                               .CLK (user_CLK),  
                               .D (user_D));  
  
defparam SRL16_1_instance_name.INIT = hex_value;
```

## Commonly Used Constraints

BEL

U\_SET

INIT






## SRL16E

### 16-Bit Shift Register Look-Up-Table (LUT) with Clock Enable

#### Architectures Supported

SRL16E	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

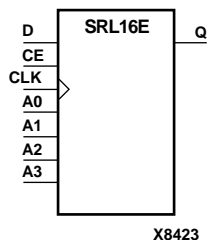

SRL16E is a shift register look up table (LUT). The inputs A3, A2, A1, and A0 select the output length of the shift register. The shift register may be of a fixed, static length or dynamically adjusted. See “[Static Length Mode](#)” and “[Dynamic Length Mode](#)” in “[SRL16](#)”.

The shift register LUT contents are initialized by assigning a four-digit hexadecimal number to an INIT attribute. The first, or the left-most, hexadecimal digit is the most significant bit. If an INIT value is not specified, it defaults to a value of four zeros (0000) so that the shift register LUT is cleared during configuration.

When CE is High, the data (D) is loaded into the first bit of the shift register during the Low-to-High clock (CLK) transition. During subsequent Low-to-High clock transitions, when CE is High, data is shifted to the next highest bit position as new data is loaded. The data appears on the Q output when the shift register length determined by the address inputs is reached.

When CE is Low, the register ignores clock transitions.

Inputs				Output
A <sub>m</sub>	CE	CLK	D	Q
A <sub>m</sub>	0	X	X	Q(A <sub>m</sub> )
A <sub>m</sub>	1	↑	D	Q(A <sub>m</sub> -1)

m= 0, 1, 2, 3

#### Usage

For HDL, this design element can be inferred or instantiated.

#### VHDL Inference Code

```
architecture Behavioral of srl16e is
```

```
signal Q_INT: std_logic_vector(WIDTH-1 downto 0);
```

```

begin

process(C)
begin
  if (C'event and C='1') then
    if (CE='1') then
      Q_INT <= Q_INT(WIDTH-2 downto 0) & D;
    end if;
  end if;
end process;

Q <= Q_INT(WIDTH-1);

end Behavioral;

```

## Verilog Inference Code

```

always @ (posedge C)
begin
  if (CE)
    Q_INT <= {Q_INT[WIDTH-2:0],D};
end

always @(Q_INT)
begin
  Q <= Q_INT[WIDTH-1];
end

```

## VHDL Instantiation Template

```

-- Component Declaration for SRL16E should be placed
-- after architecture statement but before begin keyword

component SRL16E
  -- synthesis translate_off
  generic (INIT: bit_value:= X"0001");
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        A0 : in STD_ULOGIC;
        A1 : in STD_ULOGIC;
        A2 : in STD_ULOGIC;
        A3 : in STD_ULOGIC;
        CE : in STD_ULOGIC;
        CLK : in STD_ULOGIC;
        D : in STD_ULOGIC);
end component;

-- Component Attribute specification for SRL16E
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes in this section

-- Component Instantiation for SRL16E should be placed
-- in architecture after the begin keyword

```

```
SRL16E_INSTANCE_NAME : SRL16E
-- synthesis translate_off
    generic map (INIT => hex_value)
-- synthesis translate_on
port map (Q => user_Q,
          A0 => user_A0,
          A1 => user_A1,
          A2 => user_A2,
          A3 => user_A3,
          CE => user_CE,
          CLK => user_CLK,
          D => user_D);
```

## Verilog Instantiation Template

```
SRL16E SRL16E_instance_name (.Q (user_Q),
                              .A0 (user_A0),
                              .A1 (user_A1),
                              .A2 (user_A2),
                              .A3 (user_A3),
                              .CE (user_CE),
                              .CLK (user_CLK),
                              .D (user_D));

defparam SRL16E_instance_name.INIT = hex_value;
```

## Commonly Used Constraints

BEL

U\_SET

INIT




## SRL16E\_1

### 16-Bit Shift Register Look-Up-Table (LUT) with Negative-Edge Clock and Clock Enable

#### Architectures Supported

SRLC16E_1	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

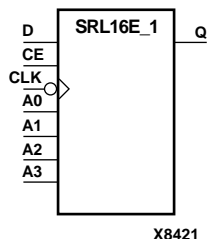

SRL16E\_1 is a shift register look up table (LUT) with clock enable (CE). The inputs A3, A2, A1, and A0 select the output length of the shift register. The shift register may be of a fixed, static length or dynamically adjusted. See “[Static Length Mode](#)” and “[Dynamic Length Mode](#)” in the “[SRL16](#)”.

The shift register LUT contents are initialized by assigning a four-digit hexadecimal number to an INIT attribute. The first, or the left-most, hexadecimal digit is the most significant bit. If an INIT value is not specified, it defaults to a value of four zeros (0000) so that the shift register LUT is cleared during configuration.

When CE is High, the data (D) is loaded into the first bit of the shift register during the High-to-Low clock (CLK) transition. During subsequent High-to-Low clock transitions, when CE is High, data is shifted to the next highest bit position as new data is loaded. The data appears on the Q output when the shift register length determined by the address inputs is reached.

When CE is Low, the register ignores clock transitions.

Inputs				Output
Am	CE	CLK	D	Q
Am	0	X	X	Q(Am)
Am	1	↓	D	Q(Am-1)

m= 0, 1, 2, 3

#### Usage

For HDL, this design element can be inferred or instantiated.

#### VHDL Inference Code

```
architecture Behavioral of srl16e_1 is
```

```

signal Q_INT: std_logic_vector(WIDTH-1 downto 0);

begin

process(C)
begin
  if (C'event and C='0') then
    if (CE='1') then
      Q_INT <= Q_INT(WIDTH-2 downto 0) & D;
    end if;
  end if;
end process;

Q <= Q_INT(WIDTH-1);

end Behavioral;

```

## Verilog Inference Code

```

always @ (negedge C)
begin
  if (CE)
    Q_INT <= {Q_INT[WIDTH-2:0],D};
end

always @(Q_INT)
begin
  Q <= Q_INT[WIDTH-1];
end

```

## VHDL Instantiation Template

```

-- Component Declaration for SRL16E_1 should be placed
-- after architecture statement but before begin keyword

component SRL16E_1
  -- synthesis translate_off
  generic (INIT : bit_value := X"0001");
  -- synthesis translate_on
  port (Q : out STD_ULOGIC;
        A0 : in STD_ULOGIC;
        A1 : in STD_ULOGIC;
        A2 : in STD_ULOGIC;
        A3 : in STD_ULOGIC;
        CE : in STD_ULOGIC;
        CLK : in STD_ULOGIC;
        D : in STD_ULOGIC);
end component;

-- Component Attribute specification for SRL16E_1
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes in this section

-- Component Instantiation for SRL16E_1 should be placed

```

```
-- in architecture after the begin keyword

SRL16E_1_INSTANCE_NAME : SRL16E_1
  -- synthesis translate_off
  generic map (INIT => hex_value)
  -- synthesis translate_on
  port map (Q => user_Q,
           A0 => user_A0,
           A1 => user_A1,
           A2 => user_A2,
           A3 => user_A3,
           CE => user_CE,
           CLK => user_CLK,
           D => user_D);
```

## Verilog Instantiation Template

```
SRL16E_1 SRL16E_1_instance_name (.Q (user_Q),
                                 .A0 (user_A0),
                                 .A1 (user_A1),
                                 .A2 (user_A2),
                                 .A3 (user_A3),
                                 .CE (user_CE),
                                 .CLK (user_CLK),
                                 .D (user_D));

defparam SRL16E_1_instance_name.INIT = hex_value;
```

## Commonly Used Constraints

BEL

U\_SET

INIT






## SRLC16

### 16-Bit Shift Register Look-Up-Table (LUT) with Carry

#### Architectures Supported

SRLC16	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

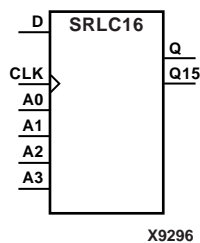

SRLC16 is a shift register look up table (LUT) with Carry. The inputs A3, A2, A1, and A0 select the output length of the shift register. The shift register may be of a fixed, static length, or it may be dynamically adjusted.

The shift register LUT contents are initialized by assigning a four-digit hexadecimal number to an INIT attribute. The first, or the left-most, hexadecimal digit is the most significant bit. If an INIT value is not specified, it defaults to a value of four zeros (0000) so that the shift register LUT is cleared during configuration.

The data (D) is loaded into the first bit of the shift register during the Low-to-High clock (CLK) transition. During subsequent Low-to-High clock transitions data is shifted to the next highest bit position as new data is loaded. The data appears on the Q output when the shift register length determined by the address inputs is reached.

The Q15 output is available for the user to cascade multiple shift register LUTs to create larger shift registers.

For information about the static length mode, see [“Static Length Mode”](#) in [“SRL16”](#).

For information about the dynamic length mode, see [“Dynamic Length Mode”](#) in [“SRL16”](#).

Inputs			Output
Am	CLK	D	Q
Am	X	X	Q(Am)
Am	↑	D	Q(Am-1)

m= 0, 1, 2, 3

#### Usage

For HDL, this design element can be inferred or instantiated.

## VHDL Inference Code

```
architecture Behavioral of srlc16 is
    signal Q_INT: std_logic_vector(WIDTH-1 downto 0);

begin

    process(C)
    begin
        if (C'event and C='1') then
            Q_INT <= Q_INT(WIDTH-2 downto 0) & D;
        end if;
    end process;

    Q <= Q_INT(WIDTH-1);

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C)
begin
    Q_INT <= {Q_INT[WIDTH-2:0],D};
end

always @(Q_INT)
begin
    Q <= Q_INT[WIDTH-1];
end
```

## VHDL Instantiation Template

```
-- Component Declaration for SRLC16 should be placed
-- after architecture statement but before begin keyword

component SRLC16
    -- synthesis translate_off
    generic (INIT : bit_value := X"0001");
    -- synthesis translate_on
    port (Q : out STD_ULOGIC;
          Q15 : out STD_ULOGIC;
          A0 : in STD_ULOGIC;
          A1 : in STD_ULOGIC;
          A2 : in STD_ULOGIC;
          A3 : in STD_ULOGIC;
          CLK : in STD_ULOGIC;
          D : in STD_ULOGIC);
end component;

-- Component Attribute specification for SRLC16
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes in this section
```

```
-- Component Instantiation for SRLC16 should be placed  
-- in architecture after the begin keyword
```

```
SRLC16_INSTANCE_NAME : SRLC16  
  -- synthesis translate_off  
  generic map (INIT => hex_value)  
  -- synthesis translate_on  
  port map (Q => user_Q,  
            Q15 => user_Q15,  
            A0 => user_A0,  
            A1 => user_A1,  
            A2 => user_A2,  
            A3 => user_A3,  
            CLK => user_CLK,  
            D => user_D);
```

### Verilog Instantiation Template

```
SRLC16 SRLC16_instance_name (.Q (user_Q),  
                             .Q15 (user_Q15),  
                             .A0 (user_A0),  
                             .A1 (user_A1),  
                             .A2 (user_A2),  
                             .A3 (user_A3),  
                             .CLK (user_CLK),  
                             .D (user_D));  
  
defparam SRLC16_instance_name.INIT = hex_value;
```

### Commonly Used Constraints

INIT




## SRLC16\_1

### 16-Bit Shift Register Look-Up-Table (LUT) with Carry and Negative-Edge Clock

#### Architectures Supported

SRLC16_1	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

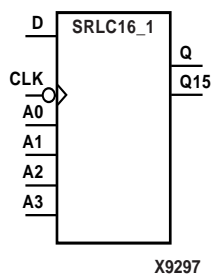

SRLC16\_1 is a shift register look up table (LUT) with carry and a negative-edge clock. The inputs A3, A2, A1, and A0 select the output length of the shift register. The shift register may be of a fixed, static length or it may be dynamically adjusted. See “[Static Length Mode](#)” and “[Dynamic Length Mode](#)” in “SRL16”.

The shift register LUT contents are initialized by assigning a four-digit hexadecimal number to an INIT attribute. The first, or the left-most, hexadecimal digit is the most significant bit. If an INIT value is not specified, it defaults to a value of four zeros (0000) so that the shift register LUT is cleared during configuration.

The data (D) is loaded into the first bit of the shift register during the High-to-Low clock (CLK) transition. During subsequent High-to-Low clock transitions data is shifted to the next highest bit position as new data is loaded. The data appears on the Q output when the shift register length determined by the address inputs is reached.

The Q15 output is available for the user to cascade multiple shift register LUTs to create larger shift registers.

Inputs			Output	
Am	CLK	D	Q	Q15
Am	X	X	Q(Am)	No Chg
Am	↓	D	Q(Am-1)	Q14

m= 0, 1, 2, 3

#### Usage

For HDL, this design element can be inferred.

#### VHDL Inference Code

```
architecture Behavioral of srlc16_1 is
    signal Q_INT: std_logic_vector(WIDTH-1 downto 0);
```

```
begin

process(C)
begin
  if (C'event and C='0') then
    Q_INT <= Q_INT(WIDTH-2 downto 0) & D;
  end if;
end process;

Q <= Q_INT(WIDTH-1);

end Behavioral;
```

### Verilog Inference Code

```
always @ (negedge C)
begin
  Q_INT <= {Q_INT[WIDTH-2:0],D};
end


always @(Q_INT)
begin
  Q <= Q_INT[WIDTH-1];
end
```

## SRLC16E

### 16-Bit Shift Register Look-Up-Table (LUT) with Carry and Clock Enable

#### Architectures Supported

SRLC16E	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

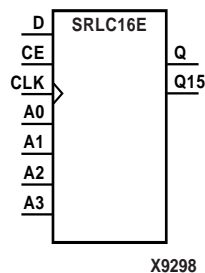

SRLC16E is a shift register look up table (LUT) with carry and clock enable. The inputs A3, A2, A1, and A0 select the output length of the shift register. The shift register may be of a fixed, static length or it may be dynamically adjusted.

The shift register LUT contents are initialized by assigning a four-digit hexadecimal number to an INIT attribute. The first, or the left-most, hexadecimal digit is the most significant bit. If an INIT value is not specified, it defaults to a value of four zeros (0000) so that the shift register LUT is cleared during configuration.

The data (D) is loaded into the first bit of the shift register during the Low-to-High clock (CLK) transition. When CE is High, during subsequent Low-to-High clock transitions, data is shifted to the next highest bit position as new data is loaded. The data appears on the Q output when the shift register length determined by the address inputs is reached.

The Q15 output is available for the user to cascade multiple shift register LUTs to create larger shift registers.

For information about the static length mode, see [“Static Length Mode”](#) in [“SRL16”](#).

For information about the dynamic length mode, see [“Dynamic Length Mode”](#) in [“SRL16”](#).

Inputs				Output	
Am	CLK	CE	D	Q	Q15
Am	X	0	X	Q(Am)	Q(15)
Am	X	1	X	Q(Am)	Q(15)
Am	↑	1	D	Q(Am-1)	Q15

m= 0, 1, 2, 3

#### Usage

For HDL, this design element can be inferred or instantiated.

## VHDL Inference Code

```
architecture Behavioral of srlc16e is
    signal Q_INT: std_logic_vector(WIDTH-1 downto 0);

begin

    process(C)
    begin
        if (C'event and C='1') then
            if (CE='1') then
                Q_INT <= Q_INT(WIDTH-2 downto 0) & D;
            end if;
        end if;
    end process;

    Q <= Q_INT(WIDTH-1);

end Behavioral;
```

## Verilog Inference Code

```
always @ (posedge C)
begin
    if (CE)
        Q_INT <= {Q_INT[WIDTH-2:0],D};
    end

always @ (Q_INT)
begin
    Q <= Q_INT[WIDTH-1];
end
```

## VHDL Instantiation Template

```
-- Component Declaration for SRLC16E should be placed
-- after architecture statement but before begin keyword

component SRLC16E
    -- synthesis translate_off
    generic (INIT : bit_value := X"0001");
    -- synthesis translate_on
    port (Q : out STD_ULOGIC;
          Q15 : out STD_ULOGIC;
          A0 : in STD_ULOGIC;
          A1 : in STD_ULOGIC;
          A2 : in STD_ULOGIC;
          A3 : in STD_ULOGIC;
          CE : in STD_ULOGIC;
          CLK : in STD_ULOGIC;
          D : in STD_ULOGIC);
end component;

-- Component Attribute specification for SRLC16E
-- should be placed after architecture declaration but
-- before the begin keyword
```



```

-- Enter attributes in this section

-- Component Instantiation for SRLC16E should be placed
-- in architecture after the begin keyword

SRLC16E_INSTANCE_NAME : SRLC16E
  -- synthesis translate_off
  generic map (INIT => hex_value)
  -- synthesis translate_on
  port map (Q => user_Q,
            Q15 => user_Q15,
            A0 => user_A0,
            A1 => user_A1,
            A2 => user_A2,
            A3 => user_A3,
            CE => user_CE,
            CLK => user_CLK,
            D => user_D);

```

## Verilog Instantiation Template

```

SRLC16E SRLC16E_instance_name (.Q (user_Q),
                               .Q15 (user_Q15),
                               .A0 (user_A0),
                               .A1 (user_A1),
                               .A2 (user_A2),
                               .A3 (user_A3),
                               .CE (user_CE),
                               .CLK (user_CLK),
                               .D (user_D));

defparam SRLC16E_instance_name.INIT = hex_value;

```

## Commonly Used Constraints

INIT




## SRLC16E\_1

### 16-Bit Shift Register Look-Up-Table (LUT) with Carry, Negative-Edge Clock, and Clock Enable

#### Architectures Supported

SRLC16E_1	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

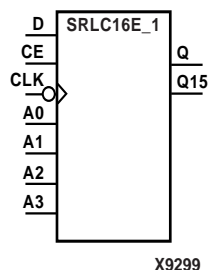

SRLC16E\_1 is a shift register look up table (LUT) with carry, clock enable, and negative-edge clock. The inputs A3, A2, A1, and A0 select the output length of the shift register. The shift register may be of a fixed, static length or it may be dynamically adjusted. See “SRLC16” and “Dynamic Length Mode” in “SRL16”.

The shift register LUT contents are initialized by assigning a four-digit hexadecimal number to an INIT attribute. The first, or the left-most, hexadecimal digit is the most significant bit. If an INIT value is not specified, it defaults to a value of four zeros (0000) so that the shift register LUT is cleared during configuration.

When CE is High, the data (D) is loaded into the first bit of the shift register during the High-to-Low clock (CLK) transition. During subsequent High-to-Low clock transitions data is shifted to the next highest bit position as new data is loaded when CE is High. The data appears on the Q output when the shift register length determined by the address inputs is reached.

The Q15 output is available for the user to cascade multiple shift register LUTs to create larger shift registers.

Inputs				Output	
Am	CE	CLK	D	Q	Q15
Am	0	X	X	Q(Am)	No Chg
Am	1	X	X	Q(Am)	No Chg
Am	1	↓	D	Q(Am-1)	Q14

m= 0, 1, 2, 3

#### Usage

For HDL, this design element can be inferred or instantiated.

## VHDL Inference Code

```
architecture Behavioral of srlc16e_1 is
    signal Q_INT: std_logic_vector(WIDTH-1 downto 0);

begin

    process(C)
    begin
        if (C'event and C='0') then
            if (CE='1') then
                Q_INT <= Q_INT(WIDTH-2 downto 0) & D;
            end if;
        end if;
    end process;

    Q <= Q_INT(WIDTH-1);

end Behavioral;
```

## Verilog Inference Code

```
always @ (negedge C)
begin
    if (CE)
        Q_INT <= {Q_INT[WIDTH-2:0],D};
    end

always @(Q_INT)
begin
    Q <= Q_INT[WIDTH-1];
end
```

## VHDL Instantiation Template

```
-- Component Declaration for SRLC16E_1 should be placed
-- after architecture statement but before begin keyword

component SRLC16E_1
    -- synthesis translate_off
    generic (INIT : bit_value := X"0001");
    -- synthesis translate_on
    port (Q : out STD_ULOGIC;
          Q15 : out STD_ULOGIC;
          A0 : in STD_ULOGIC;
          A1 : in STD_ULOGIC;
          A2 : in STD_ULOGIC;
          A3 : in STD_ULOGIC;
          CE : in STD_ULOGIC;
          CLK : in STD_ULOGIC;
          D : in STD_ULOGIC);
end component;

-- Component Attribute specification for SRLC16E_1
-- should be placed after architecture declaration but
-- before the begin keyword
```

```

-- Enter attributes in this section

-- Component Instantiation for SRLC16E_1 should be placed
-- in architecture after the begin keyword

SRLC16E_1_INSTANCE_NAME : SRLC16E_1
  -- synthesis translate_off
  generic map (INIT => hex_value)
  -- synthesis translate_on
  port map (Q => user_Q,
            Q15 => user_Q15,
            A0 => user_A0,
            A1 => user_A1,
            A2 => user_A2,
            A3 => user_A3,
            CE => user_CE,
            CLK => user_CLK,
            D => user_D);

```

## Verilog Instantiation Template

```

SRLC16E_1 SRLC16E_1_instance_name (.Q (user_Q),
                                   .Q15 (user_Q15),
                                   .A0 (user_A0),
                                   .A1 (user_A1),
                                   .A2 (user_A2),
                                   .A3 (user_A3),
                                   .CE (user_CE),
                                   .CLK (user_CLK),
                                   .D (user_D));

defparam SRLC16E_1_instance_name.INIT = hex_value;

```

## Commonly Used Constraints

INIT



## STARTBUF\_architecture

### VHDL Simulation of FPGA Designs

#### Architectures Supported

STARTBUF_architecture	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

STARTBUF\_architecture is used for VHDL simulation of FPGA designs that require the use of the STARTUP block. The difference between the STARTBUF\_architecture and the STARTUP block is that the STARTBUF\_architecture contains output ports which may be connected to all register set/resets in the design (GSROUT) or to all I/O three-state controls (GTSOUT) so that these functions may be functionally simulated. This design element should not be used for Verilog or schematic entry. In order to use the STARTBUF\_architecture, the desired input(s) should be connected to a top-level port in the design and the corresponding output(s) must be connected to either the three-state control signal for all inferred and instantiated output buffers in the design (GTSOUT) or all inferred or instantiated register set/resets in the design.

During simulation, the inputs to the STARTBUF\_architecture can be toggled by the testbench in order to activate the global three-state or global set/reset signal in the design. This should be done at the beginning of the simulation to simulate the behavior of the registers and I/O during configuration. It may also be applied during simulation to simulate a reconfiguration (ProG pin high) of the device. During synthesis and implementation, this component will be treated as a STARTUP block. The connected input ports to this component should remain in the design and be connected to the correct corresponding global resource.

For more information, see the *Xilinx Synthesis and Verification Design Guide*.

The value at port GSROUT will be always the be value at port GSRIN. The value at port GTSOUT will always be the value at port GTSIN. CLKIN has no effect on simulation.

#### VHDL Instantiation Code

Following are three examples:

```
component STARTBUF_SPARTAN2
  port (GSROUT      : out std_ulogic;
        GTSOUT      : out std_ulogic;
        CLKIN       : in  std_ulogic;
        GSRIN       : in  std_ulogic;
        GTSIN       : in  std_ulogic);
```

```
end component ;

component STARTBUF_VIRTEX
  port (GTSOUT      : out std_ulogic;
        GSROUT     : out std_ulogic;
        CLKIN      : in  std_ulogic;
        GSRIN      : in  std_ulogic;
        GTSIN      : in  std_ulogic);
end component ;

component STARTBUF_VIRTEX2
  port (GSROUT     : out std_ulogic;
        GTSOUT     : out std_ulogic;
        CLKIN      : in  std_ulogic;
        GSRIN      : in  std_ulogic;
        GTSIN      : in  std_ulogic);
end component ;
```

## Commonly Used Constraints

None




## STARTUP\_SPARTAN2

### Spartan-II User Interface to Global Clock, Reset, and 3-State Controls

#### Architectures Supported

STARTUP_SPARTAN2	
Spartan-II, Spartan-IIE	Primitive*
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No
* Supported for Spartan-II but not for Spartan-IIE, which is supported by STARTUP_VIRTEX.	

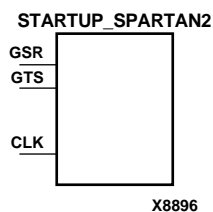

The STARTUP\_SPARTAN2 primitive is used for Global Set/Reset, global 3-state control, and the user configuration clock. The Global Set/Reset (GSR) input, when High, sets or resets all flip-flops, all latches, and every block RAM (RAMB4) output register in the device, depending on the initialization state (S or R) of the component.


**Note:** Block RAMB4 content, LUT RAMs, delay locked loop elements (CLKDLL, CLKDLLHF, BUFGDLL), and shift register LUTs (SRL16, SRL16\_1, SRL16E, SRL16E\_1) are not set/reset.

Following configuration, the global 3-state control (GTS), when High—and BSCAN is not enabled and executing an EXTEST instruction—forces all the IOB outputs into high impedance mode, which isolates the device outputs from the circuit but leaves the inputs active.


**Note:** GTS= Global 3-State

Including the STARTUP\_SPARTAN2 symbol in a design is optional. You must include the symbol under the following conditions.


- To exert external control over global set/reset, connect the GSR pin to a top level port and an IBUF, as shown here.

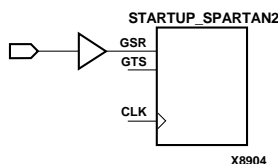

- To exert external control over global 3-state, connect the GTS pin to a top level port and IBUF, as shown here.

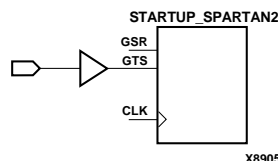

- To synchronize startup to a user clock, connect the user clock signal to the CLK input, as shown here. Furthermore, “user clock” must be selected in the BitGen program.

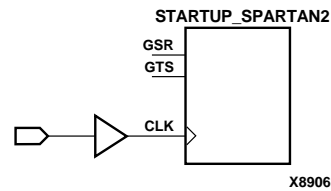

You can use location constraints to specify the pin from which GSR or GTS (or both) is accessed.

## Usage

For HDL, this design element typically is instantiated rather than inferred.

## VHDL Instantiation Template

```
-- Component Declaration for STARTUP_SPARTAN2 should be placed
-- after architecture statement but before begin keyword

component STARTUP_SPARTAN2
  port (CLK : in STD_ULOGIC;
        GSR : in STD_ULOGIC;
        GTS : in STD_ULOGIC);
end component;

-- Component Attribute specification for STARTUP_SPARTAN2
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes in this section

-- Component Instantiation for STARTUP_SPARTAN2 should be placed
-- in architecture after the begin keyword

STARTUP_SPARTAN2_INSTANCE_NAME : STARTUP_SPARTAN2
  port map (CLK => user_CLK,
           GSR => user_GSR,
           GTS => user_GTS);
```

## Verilog Instantiation Template

```
STARTUP_SPARTAN2 STARTUP_SPARTAN2_instance_name (.CLK (user_CLK),
                                                  .GSR (user_GSR),
                                                  .GTS (user_GTS));
```

## Commonly Used Constraints

None






## STARTUP\_SPARTAN3

### Spartan-3 User Interface to Global Clock, Reset, and 3-State Controls

#### Architectures Supported

STARTUP_SPARTAN3	
Spartan-II, Spartan-IIE	No
Spartan-3	Primitive
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

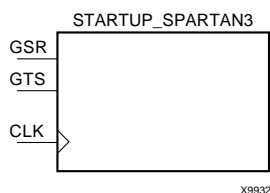

The STARTUP\_SPARTAN3 primitive is used for Global Set/Reset, global 3-state control, and the user configuration clock. The Global Set/Reset (GSR) input, when High, sets or resets all flip-flops, all latches, and every block RAMB16 output register in the device, depending on the initialization state (INIT=1 or 0) of the component.


**Note:** Block RAM content, LUT RAMs, the Digital Clock Manager (DCM), and shift register LUTs (SRL16, SRL16\_1, SRL16E, SRL16E\_1, SRLC16, SRLC16\_1, SRLC16E, and SRLC16E\_1) are not set/reset.

Following configuration, the global 3-state control (GTS), when High—and BSCAN is not enabled and executing an EXTEST instruction—forces all the IOB outputs into high impedance mode, which isolates the device outputs from the circuit but leaves the inputs active.


**Note:** GTS= Global 3-State

Including the STARTUP\_SPARTAN3 symbol in a design is optional. You must include the symbol under the following conditions.


- To exert external control over global set/reset, connect the GSR pin to a top level port and an IBUF, as shown here.

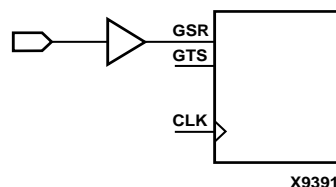

- To exert external control over global 3-state, connect the GTS pin to a top level port and IBUF, as shown here.

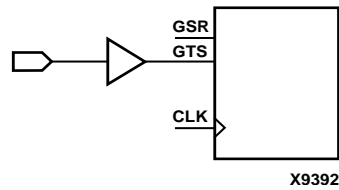

- To synchronize startup to a user clock, connect the user clock signal to the CLK input, as shown here. Furthermore, “user clock” must be selected in the BitGen program.

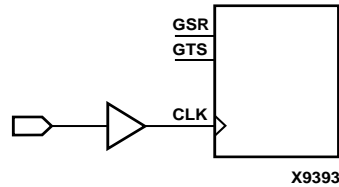

You can use location constraints to specify the pin from which GSR or GTS (or both) is accessed.

## Usage

For HDL, this design element typically is instantiated rather than inferred.

## VHDL Instantiation Template

```
-- Component Declaration for STARTUP_SPARTAN3 should be placed
-- after architecture statement but before begin keyword

component STARTUP_SPARTAN3
  port (CLK : in STD_ULOGIC;
        GSR : in STD_ULOGIC;
        GTS : in STD_ULOGIC);
end component;

-- Component Attribute specification for STARTUP_SPARTAN3
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes in this section

-- Component Instantiation for STARTUP_SPARTAN3 should be placed
-- in architecture after the begin keyword

STARTUP_SPARTAN3_INSTANCE_NAME : STARTUP_SPARTAN3
  port map (CLK => user_CLK,
           GSR => user_GSR,
           GTS => user_GTS);
```

## Verilog Instantiation Template

```
STARTUP_SPARTAN3 STARTUP_SPARTAN3_instance_name (.CLK (user_CLK),  
                                                    GSR (user_GSR),  
                                                    GTS (user_GTS));
```

## Commonly Used Constraints

None.






## STARTUP\_VIRTEX

### Virtex and Virtex-E User Interface to Global Clock, Reset, and 3-State Controls

#### Architectures Supported

STARTUP_VIRTEX	
Spartan-II, Spartan-IIE	Primitive*
Spartan-3	No
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	No
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

\* Supported for Spartan-IIE but not for Spartan-II which is supported by STARTUP\_SPARTAN2..

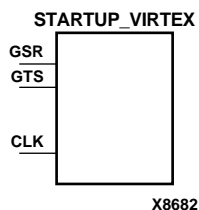

The STARTUP\_VIRTEX primitive is used for Global Set/Reset, global 3-state control, and the user configuration clock. The Global Set/Reset (GSR) input, when High, sets or resets all flip-flops, all latches, and every block RAM (RAMB4) output register in the device, depending on the initialization state (S or R) of the component. For Virtex-II, Virtex-II Pro, and Virtex-II Pro X, see “STARTUP\_VIRTEX2”.


**Note:** Block RAMB4 content, LUT RAMs, delay locked loop elements (CLKDLL, CLKDLLHF, BUFGDLL), and shift register LUTs (SRL16, SRL16\_1, SRL16E, SRL16E\_1) are not set/reset.

Following configuration, the global 3-state control (GTS), when High—and BSCAN is not enabled and executing an EXTEST instruction—forces all the IOB outputs into high impedance mode, which isolates the device outputs from the circuit but leaves the inputs active.


**Note:** GTS= Global 3-State

Including the STARTUP\_VIRTEX symbol in a design is optional. You must include the symbol under the following conditions.


- To exert external control over global set/reset, connect the GSR pin to a top level port and an IBUF, as shown here.

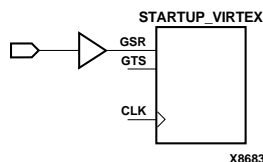

- To exert external control over global 3-state, connect the GTS pin to a top level port and IBUF, as shown here.

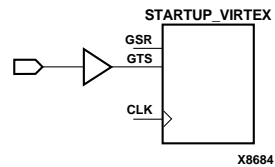

- To synchronize startup to a user clock, connect the user clock signal to the CLK input, as shown here. Furthermore, “user clock” must be selected in the BitGen program.

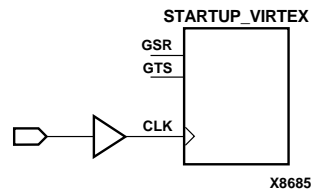

You can use location constraints to specify the pin from which GSR or GTS (or both) is accessed.

## Usage

For HDL, this design element typically is instantiated rather than inferred.

## VHDL Instantiation Template

```
-- Component Declaration for STARTUP_VIRTEX should be placed
-- after architecture statement but before begin keyword

component STARTUP_VIRTEX
  port (CLK : in STD_ULOGIC;
        GSR : in STD_ULOGIC;
        GTS : in STD_ULOGIC);
end component;

-- Component Attribute specification for STARTUP_VIRTEX
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes in this section

-- Component Instantiation for STARTUP_VIRTEX should be placed
-- in architecture after the begin keyword

STARTUP_VIRTEX_INSTANCE_NAME : STARTUP_VIRTEX
  port map (CLK => user_CLK,
           GSR => user_GSR,
           GTS => user_GTS);
```

## Verilog Instantiation Template

```
STARTUP_VIRTEX STARTUP_VIRTEX_instance_name (.CLK (user_CLK),
                                              .GSR (user_GSR),
                                              .GTS (user_GTS));
```

## Commonly Used Constraints

None




## STARTUP\_VIRTEX2

### Virtex-II, Virtex-II Pro, and Virtex-II Pro X User Interface to Global Clock, Reset, and 3-State Controls

#### Architectures Supported

STARTUP_VIRTEX2	
Spartan-II, Spartan-IIE	No
Spartan-3	No
Virtex, Virtex-E	No
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

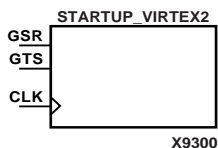

The STARTUP\_VIRTEX2 primitive is used for Global Set/Reset, global 3-state control, and the user configuration clock. The Global Set/Reset (GSR) input, when High, sets or resets all flip-flops, all latches, and every block RAMB16 output register in the device, depending on the initialization state (INIT=1 or 0) of the component. For Virtex and Virtex-E, see “STARTUP\_VIRTEX”.


**Note:** Block RAM content, LUT RAMs, the Digital Clock Manager (DCM), and shift register LUTs (SRL16, SRL16\_1, SRL16E, SRL16E\_1, SRLC16, SRLC16\_1, SRLC16E, and SRLC16E\_1) are not set/reset.

Following configuration, the global 3-state control (GTS), when High—and BSCAN is not enabled and executing an EXTEST instruction—forces all the IOB outputs into high impedance mode, which isolates the device outputs from the circuit but leaves the inputs active.


**Note:** GTS= Global 3-State

Including the STARTUP\_VIRTEX2 symbol in a design is optional. You must include the symbol under the following conditions.

- To exert external control over global set/reset, connect the GSR pin to a top level port and an IBUF, as shown here.

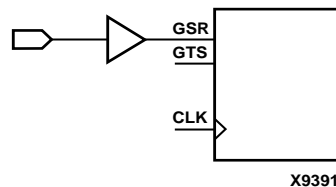


- To exert external control over global 3-state, connect the GTS pin to a top level port and IBUF, as shown here.

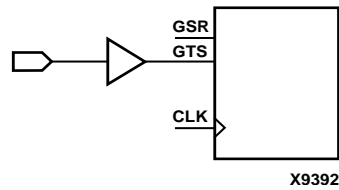

X9392

- To synchronize startup to a user clock, connect the user clock signal to the CLK input, as shown here. Furthermore, “user clock” must be selected in the BitGen program.

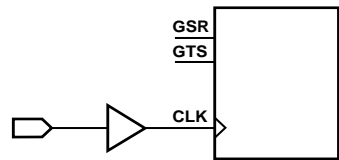

X9393

You can use location constraints to specify the pin from which GSR or GTS (or both) is accessed.

## Usage

For HDL, this design element typically is instantiated rather than inferred.

## VHDL Instantiation Template

```
-- Component Declaration for STARTUP_VIRTEX2 should be placed
-- after architecture statement but before begin keyword

component STARTUP_VIRTEX2
  port (CLK : in STD_ULOGIC;
        GSR : in STD_ULOGIC;
        GTS : in STD_ULOGIC);
end component;

-- Component Attribute specification for STARTUP_VIRTEX2
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes in this section

-- Component Instantiation for STARTUP_VIRTEX2 should be placed
-- in architecture after the begin keyword

STARTUP_VIRTEX2_INSTANCE_NAME : STARTUP_VIRTEX2
  port map (CLK => user_CLK,
           GSR => user_GSR,
           GTS => user_GTS);
```

## Verilog Instantiation Template

```
STARTUP_VIRTEX2 STARTUP_VIRTEX2_instance_name (.CLK (user_CLK),  
                                                GSR (user_GSR),  
                                                GTS (user_GTS));
```

## Commonly Used Constraints

None





## TOC

### Three-State On Configuration

#### Architectures Supported

TOC	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

The TOC is a component used for VHDL simulation of FPGA designs. This component should not be used for Verilog or schematic entry. The TOC's function is to mimic the function of the internal three-state signal during the FPGA configuration process. In order to use TOC, it must be connected to the three-state signal for all inferred and instantiated output buffers in the design. During synthesis and implementation, this three-state signal will use the dedicated global three-state network and will not use local routing resources. During simulation, TOC will emit a one-shot pulse for the amount of time specified by the WIDTH generic (default is 100 ns). This one-shot pulse is intended to three-state all outputs so that at the beginning of operation, all outputs are not being driven as would happen in the real silicon during configuration of the device.

For more information, see the *Xilinx Synthesis and Verification Design Guide*.

Port O will be high at simulation time 0 for the amount of time specified by the WIDTH generic attribute. After that time, it will be 0. This will not affect implementation in any way.

#### VHDL Instantiation Code

```
component TOC
-- synthesis translate_off
  generic (WIDTH : Time := 100 ns);
-- synthesis translate_on
  port (O : out std_ulogic := '0');
end component;
```

#### Commonly Used Constraints

For simulation, the WIDTH generic can be modified to change the amount of time the one-shot pulse is applied for.

There are no supported constraints for this component for implementation.



## TOCBUF

### Three-State On Configuration Buffer

#### Architectures Supported

TOCBUF	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No

The TOCBUF is a component used for VHDL simulation of FPGA designs. It is similar to the TOC component except that it contains an input for controlling the global I/O three-state function rather than a one-shot. This component should not be used for Verilog or schematic entry. The TOCBUF's function allows user control of the function of the global I/O three-state signal as done during the FPGA configuration process. In order to use the TOCBUF, the input should be connected to a top-level port in the design and the output must be connected to the three-state control signal for all inferred and instantiated output buffers in the design.

During simulation, the input to the TOCBUF can be toggled by the testbench in order to activate the global three-state signal in the design. This should be done at the beginning of the simulation to simulate the behavior of the I/O during configuration. It may also be applied during simulation to simulate a reconfiguration (ProG pin high) of the device. During synthesis and implementation, this three-state signal uses the dedicated global three-state network and does not use local routing resources. The port connected to this component is optimized out of the design and does not use any pin resources. If you want to have the port implemented in the design, a `STARTBUF_architecture` should be used. In order to replace this port during back-end simulation, the `-tp` switch should be used when invoking the `NGD2VER` or `NGD2VHDL` netlister. If using the ISE GUI, use the Bring Out Global Three-state Net as a Port option in the Simulation Model Properties window.

For more information, see the *Xilinx Synthesis and Verification Design Guide*.

The value at port O will be always be the value at port I (it is a buffer).

#### VHDL Instantiation Code

```
component TOCBUF
  port (I : in std_ulogic;
        O : out std_ulogic);
end component;
```

#### Commonly Used Constraints

None



## VCC

### VCC-Connection Signal Tag

#### Architectures Supported

VCC	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No

VCC  
  
 X8721

The VCC signal tag or parameter forces a net or input function to a logic High level. A net tied to VCC cannot have any other source.

When the placement and routing software encounters a net or input function tied to VCC, it removes any logic that is disabled by the VCC signal. The VCC signal is only implemented when the disabled logic cannot be removed.

#### Usage

For HDL, this design element can be instantiated or inferred.

#### VHDL Inference Code

```
vcc_signal <= '1';
```

#### Verilog Inference Code

```
assign vcc_signal = 1;
```

#### VHDL Instantiation Template

```
-- Component Declaration for VCC should be placed
-- after architecture statement but before begin keyword

component VCC
  port (P : out STD_ULOGIC);
end component;

-- Component Attribute specification for VCC
-- should be placed after architecture declaration but
-- before the begin keyword

-- Enter attributes here

-- Component Instantiation for VCC should be placed
-- in architecture after the begin keyword
```

```
VCC_INSTANCE_NAME : VCC  
    port map (P => user_P);
```

### Verilog Instantiation Template

```
VCC instance_name (.P (user_P));
```

### Commonly Used Constraints


None

## UPAD

Connects the I/O Node of an IOB to the Internal PLD Circuit

### Architectures Supported

UPAD	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



A UPAD allows the use of any unbonded IOBs in a device. It is used the same way as an IOPAD except that the signal output is not visible on any external device pins.






## XNOR2-9

### 2- to 9-Input XNOR Gates with Non-Inverted Inputs


#### Architectures Supported

<b>XNOR2, XNOR3, XNOR4</b>	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No
<b>XNOR5</b>	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No
<b>XNOR6, XNOR7, XNOR8, XNOR9</b>	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

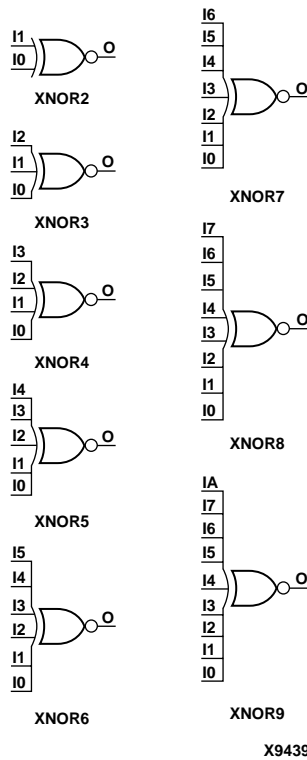


**XNOR Gate Representations**


XNOR functions of up to nine inputs are available. All inputs are non-inverting. Because each input uses a CLB resource, replace functions with unused inputs with functions having the necessary number of inputs.

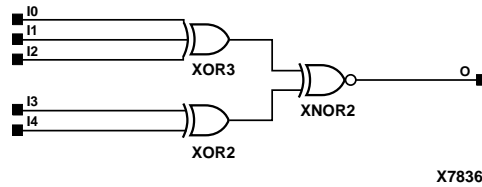


**XNOR5 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

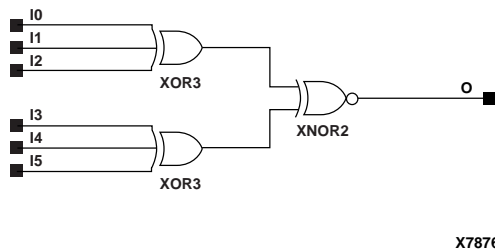


**XNOR6 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

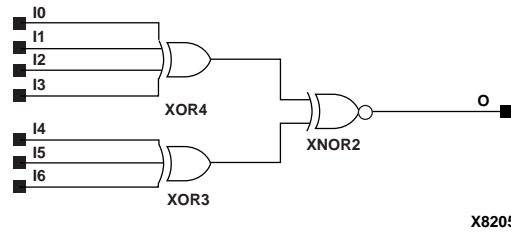


**XNOR7 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

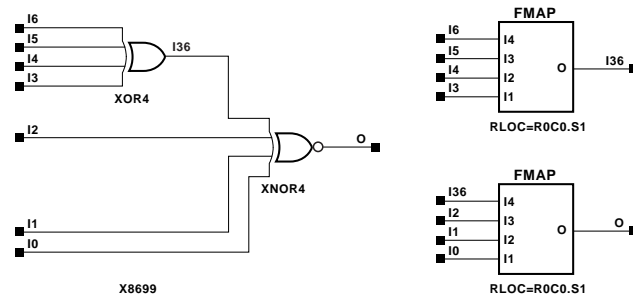


**XNOR7 Implementation Spartan-II, Spartan-II E, Virtex, Virtex-E**

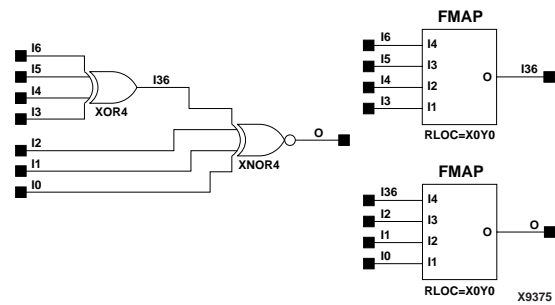


**XNOR7 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

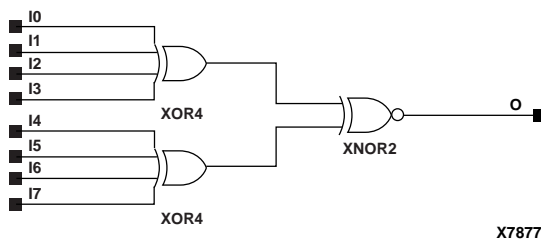


**XNOR8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

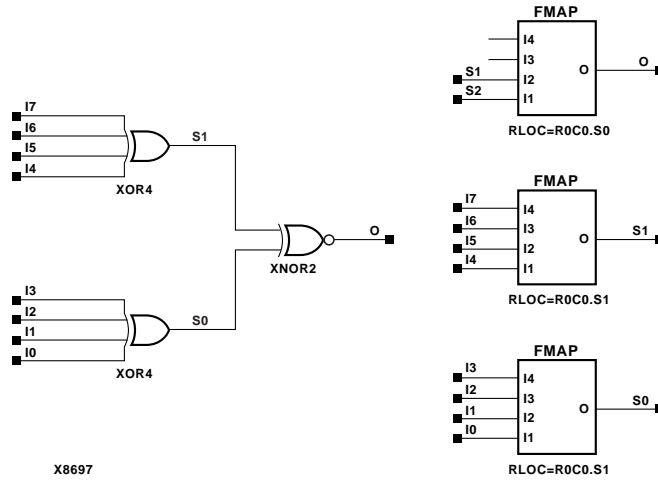


**XNOR8 Implementation Spartan-II, Spartan-IIe, Virtex, Virtex-E**

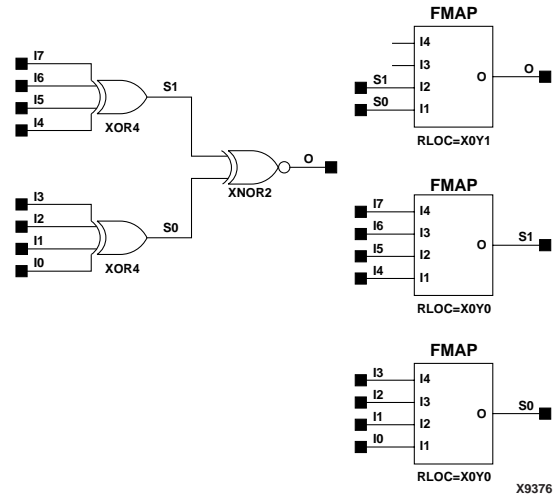


**XNOR8 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

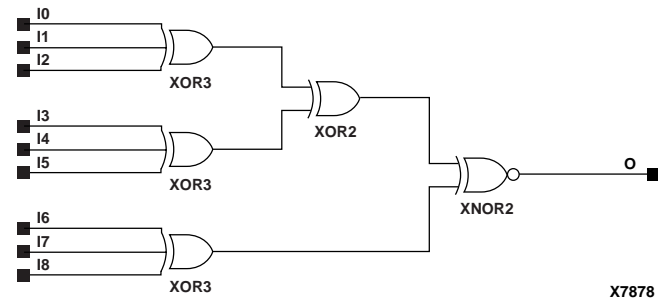

**XNOR9 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

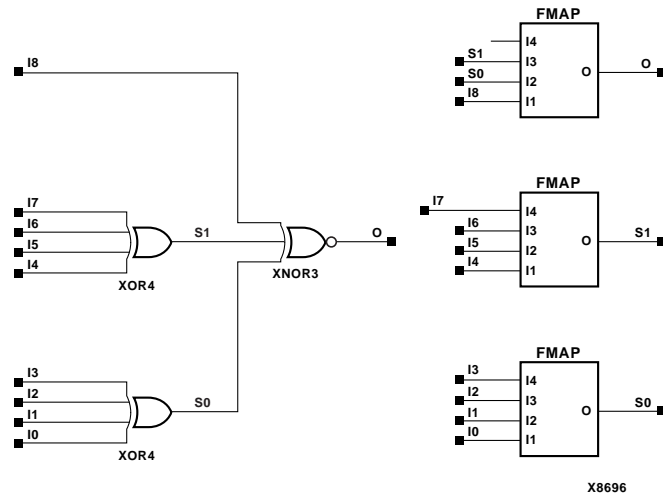

**XNOR9 Implementation Spartan-II, Spartan-II E, Virtex, Virtex-E**

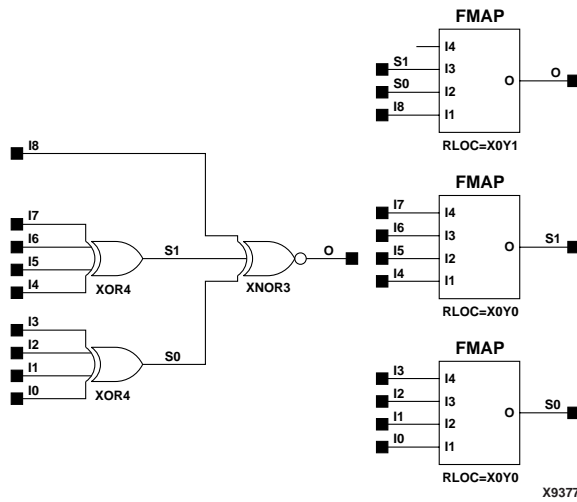

**XNOR9 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

### Usage

For HDL, these design elements can be inferred or instantiated.

## VHDL Inference Code

```
architecture Behavioral of xnor2 is

begin

process (I0, I1)
begin
    O <= I0 xnor I1;
end process;

end Behavioral;
```

## Verilog Inference Code

```
always @ (I0 or I1)
begin
    O <= I0~^I1;
end
```

## VHDL Instantiation Template for XNOR5

Following is the VHDL code for XNOR5. To instantiate XNOR2, remove I2, I3, and I4. To instantiate XNOR3, remove I3 and I4, For XNOR4, remove I4. XNOR2B1, and XNOR2B2 have the same code as XNOR2. XNOR3B1, 3B2, and 3B3 have the same code as XNOR3 and so forth.

```
-- Component Declaration for XNOR5 should be placed
-- after architecture statement but before begin keyword

component XNOR5
    port (O : out STD_ULOGIC;
          I0 : in STD_ULOGIC;
          I1 : in STD_ULOGIC;
          I2 : in STD_ULOGIC;
          I3 : in STD_ULOGIC;
          I4 : in STD_ULOGIC);
end component;

-- Component Attribute specification for XNOR5
-- should be placed after architecture declaration but
-- before the begin keyword

-- Attributes should be placed here

-- Component Instantiation for XNOR5 should be placed
-- in architecture after the begin keyword

XNOR5_INSTANCE_NAME : XNOR5
    port map (O => user_O,
              I0 => user_I0,
              I1 => user_I1,
              I2 => user_I2,
              I3 => user_I3,
              I4 => user_I4);
```

## Verilog Instantiation Template for XNOR5

```
XNOR5 XNOR5_instance_name (.O (user_O),  
                           .I0 (user_I0),  
                           .I1 (user_I1),  
                           .I2 (user_I2),  
                           .I3 (user_I3),  
                           .I4 (user_I4));
```

## Commonly Used Constraints

None






## XOR2-9

### 2- to 9-Input XOR Gates with Non-Inverted Inputs


#### Architectures Supported

<b>XOR2, XOR3, XOR4</b>	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Primitive
CoolRunner XPLA3	Primitive
CoolRunner-II	Primitive
CoolRunner-IIS	No
<b>XOR5</b>	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No
<b>XOR6, XOR7, XOR8, XOR9</b>	
Spartan-II, Spartan-IIE	Macro
Spartan-3	Macro
Virtex, Virtex-E	Macro
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Macro
XC9500, XC9500XV, XC9500XL	Macro
CoolRunner XPLA3	Macro
CoolRunner-II	Macro
CoolRunner-IIS	No

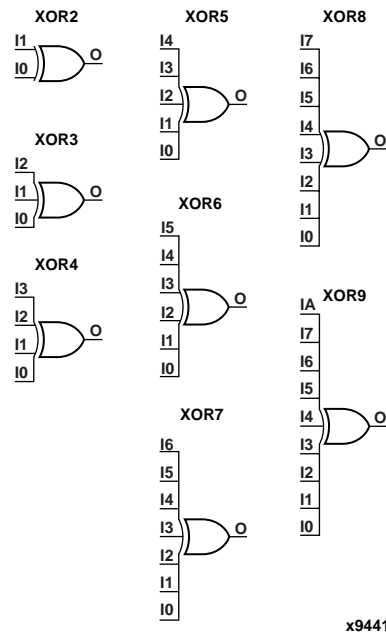


### XOR Gate Representations


XOR functions of up to nine inputs are available. All inputs are non-inverting. Because each input uses a CLB resource, replace functions with unused inputs with functions having the necessary number of inputs.

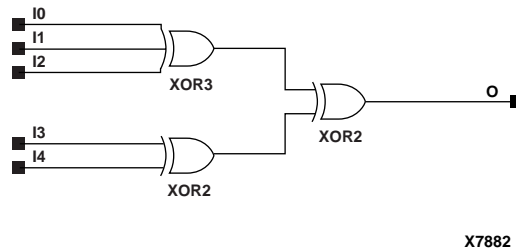


### XOR5 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

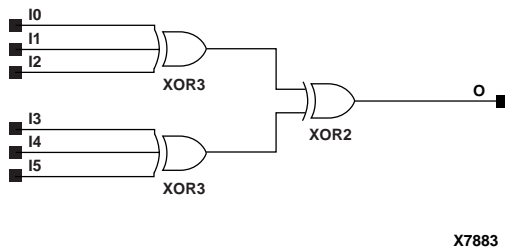


### XOR6 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II

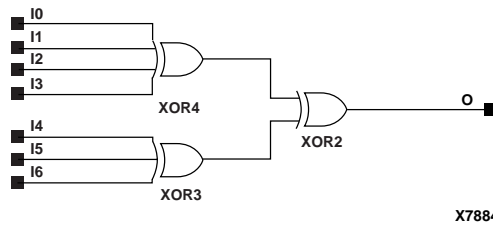


**XOR7 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

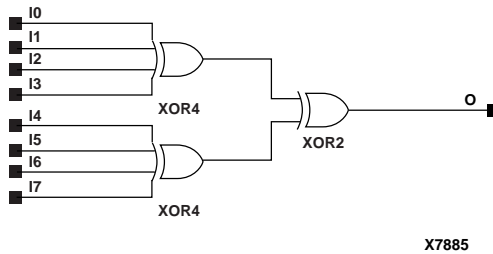


**XOR8 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

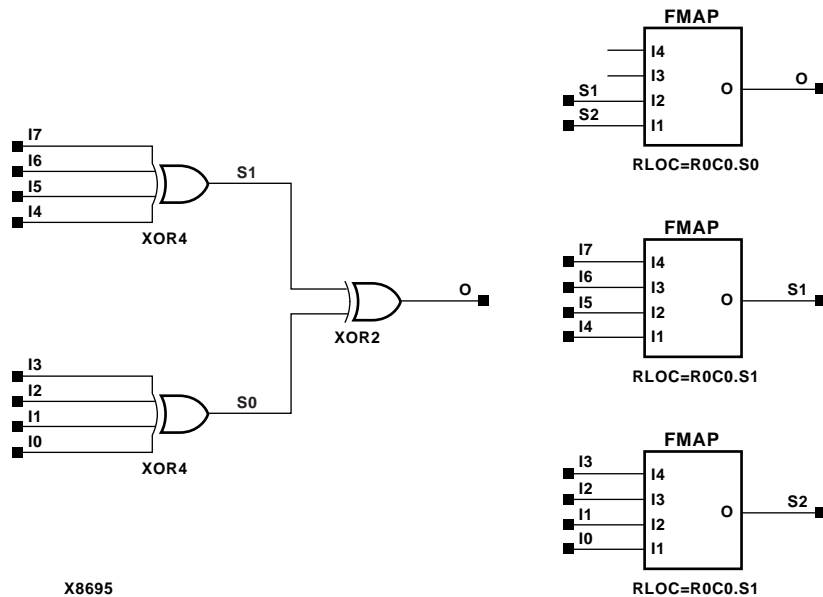

**XOR8 Implementation Spartan-II, Spartan-IIe, Virtex, Virtex-E**

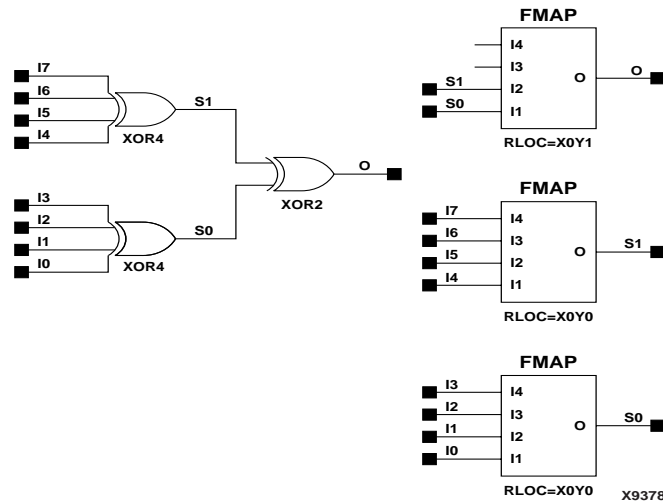

**XOR8 Implementation Spartan-3, Virtex-II, Virtex-II Pro, Virtex-II Pro X**

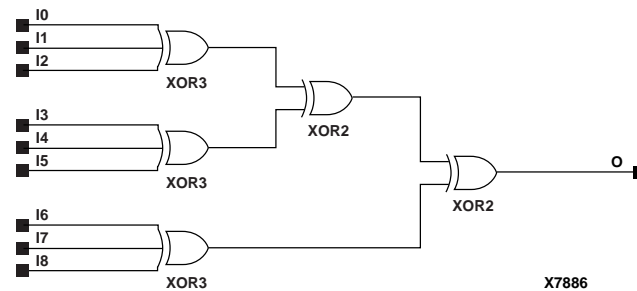

**XOR9 Implementation XC9500/XV/XL, CoolRunner XPLA3, CoolRunner-II**

**Usage**

For HDL, these design elements can be inferred or instantiated.

**VHDL Inference Code**

architecture Behavioral of xor2 is

```
begin

process (I0, I1)
begin
  O <= I0 xor I1;
end process;

end Behavioral;
```

**Verilog Inference Code**

```
always @ (I0 or I1)
begin
  O <= I0^I1;
end
```

## VHDL Instantiation Template for XOR5

Following is the VHDL code for XOR5. To instantiate XOR2, remove I2, I3, and I4. To instantiate XOR3, remove I3 and I4. For XOR4, remove I4. XOR2B1, and XOR2B2 have the same code as XOR2. XOR3B1, 3B2, and 3B3 have the same code as XOR3 and so forth.

```
-- Component Declaration for XOR5 should be placed
-- after architecture statement but before begin keyword

component XOR5
  port (O : out STD_ULOGIC;
        I0 : in STD_ULOGIC;
        I1 : in STD_ULOGIC;
        I2 : in STD_ULOGIC;
        I3 : in STD_ULOGIC;
        I4 : in STD_ULOGIC);
end component;

-- Component Attribute specification for XOR5
-- should be placed after architecture declaration but
-- before the begin keyword

-- Attributes should be placed here

-- Component Instantiation for XOR5 should be placed
-- in architecture after the begin keyword

XOR5_INSTANCE_NAME : XOR5
  port map (O => user_O,
            I0 => user_I0,
            I1 => user_I1,
            I2 => user_I2,
            I3 => user_I3,
            I4 => user_I4);
```

## Verilog Instantiation Template for XOR5

```
XOR5 XOR5_instance_name (.O (user_O),
                          .I0 (user_I0),
                          .I1 (user_I1),
                          .I2 (user_I2),
                          .I3 (user_I3),
                          .I4 (user_I4));
```

## Commonly Used Constraints

None




## XORCY

### XOR for Carry Logic with General Output

#### Architectures Supported

XORCY	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



XORCY is a special XOR with general O output used for generating faster and smaller arithmetic functions.

Its O output is a general interconnect. See also [“XORCY\\_D”](#) and [“XORCY\\_L”](#).

#### Commonly Used Constraints

BEL






## XORCY\_D

### XOR for Carry Logic with Dual Output

#### Architectures Supported

XORCY_D	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



XORCY\_D is a special XOR used for generating faster and smaller arithmetic functions.

XORCY\_D has two functionally identical outputs, O and LO. The O output is a general interconnect. The LO output is used to connect to another output within the same CLB slice.

See also “[XORCY](#)” and “[XORCY\\_L](#).”

#### Commonly Used Constraints

BEL




## XORCY\_L

### XOR for Carry Logic with Local Output

#### Architectures Supported

XORCY_L	
Spartan-II, Spartan-IIE	Primitive
Spartan-3	Primitive
Virtex, Virtex-E	Primitive
Virtex-II, Virtex-II Pro, Virtex-II Pro X	Primitive
XC9500, XC9500XV, XC9500XL	No
CoolRunner XPLA3	No
CoolRunner-II	No
CoolRunner-IIS	No



XORCY\_L is a special XOR with local LO output used for generating faster and smaller arithmetic functions. The LO output is used to connect to another output within the same CLB slice.

See also [“XORCY”](#) and [“XORCY\\_D.”](#)

#### Commonly Used Constraints

BEL

